

TechInfo Sheet

fax: 01344 853689

Audio Visual

email:av.technical@mail.panasonic.co.uk

Product Group: Hi-Fi Audio

Model: CR20 (CD Changer mechanism)

Date: 17/01/00

Revision No: 1.0

Document No: 01


Subject: Disc spacer comes off

Symptom: The Disc spacer coming off affects other mechanical operations.

The following symptoms will appear.

- * CD Changer operation does not work.
- * CD does not play.
- * CD tray does not open.

Cause: This mechanism controls the switching of Disc Up/Down and Tray Open/Close operation using the Change gear. (Refer to following diagrams)
If the Change gear does not drop down due to tight engaging between the Change gear and Drive gear when switching to Tray open/close operation, the disc spacer will come off.

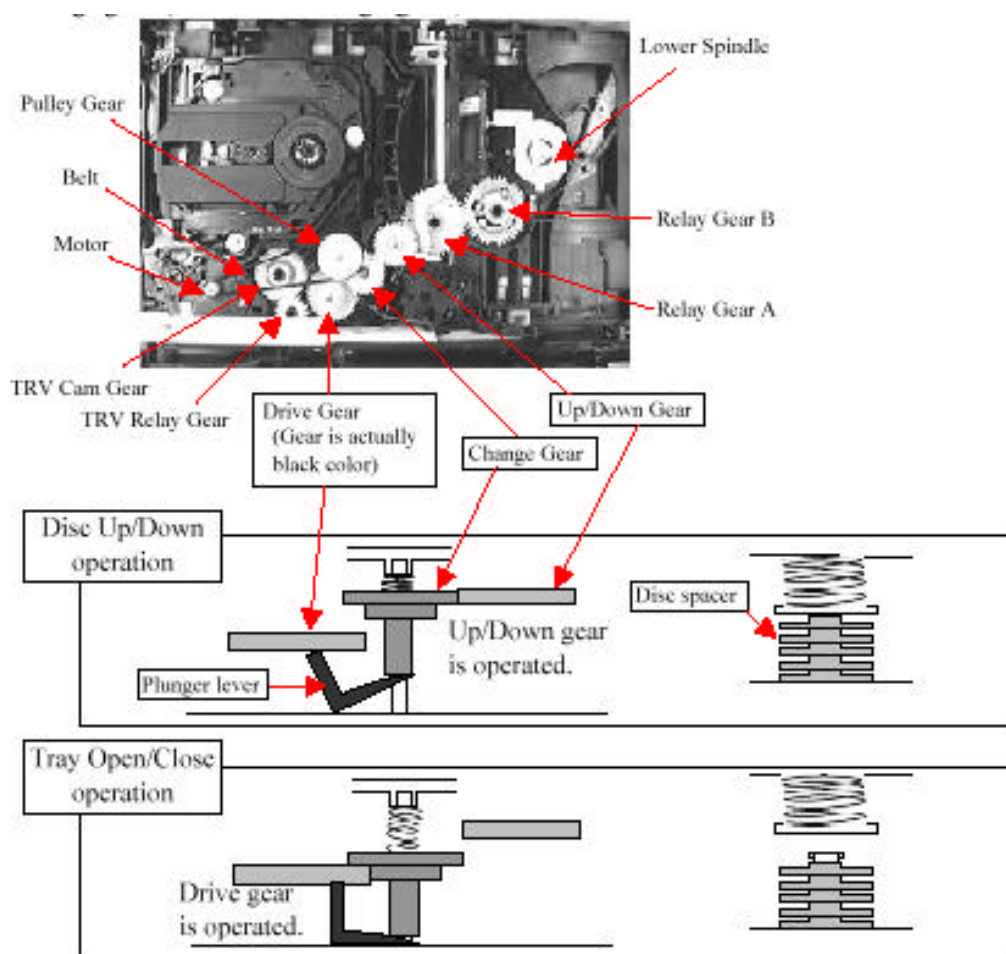


TechInfo Sheet

fax: 01344 853689

Audio Visual

email:av.technical@mail.panasonic.co.uk

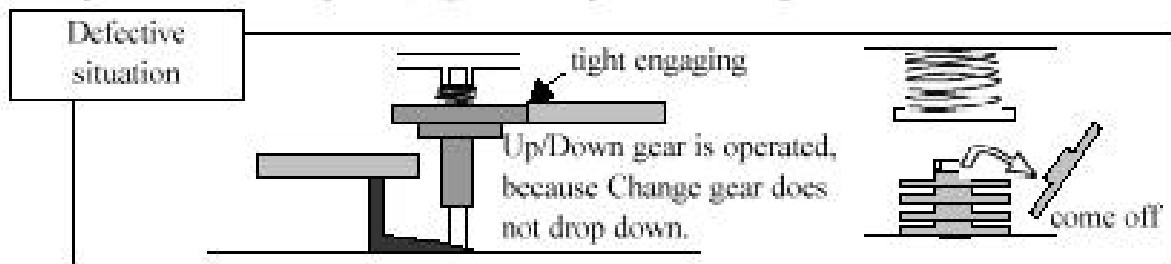

Remedy: Replace the Change gear spring to a stronger one.

Original	New
RMB0549	RMB0549-1

Action on production: From October 1999 onwards