

— : +B SIGNAL LINE    - - - : -B SIGNAL LINE

**M** MAIN CIRCUIT

TO **E** DSP CIRCUIT (CN804) ON SCHEMATIC DIAGRAM-19

TO **E** DSP CIRCUIT (CN802) ON SCHEMATIC DIAGRAM-19


TO **E** DSP CIRCUIT (CN801) ON SCHEMATIC DIAGRAM-19

TO **J** PANEL CIRCUIT (CN601) ON SCHEMATIC DIAGRAM-24

TO **L** HEADPHONE/ MIC CIRCUIT (CN604) ON SCHEMATIC DIAGRAM-23

TO **F** DVDREG CIRCUIT (CN703 /CP704) ON SCHEMATIC DIAGRAM-20


TO **F** DVDREG CIRCUIT (CN701) ON SCHEMATIC DIAGRAM-22

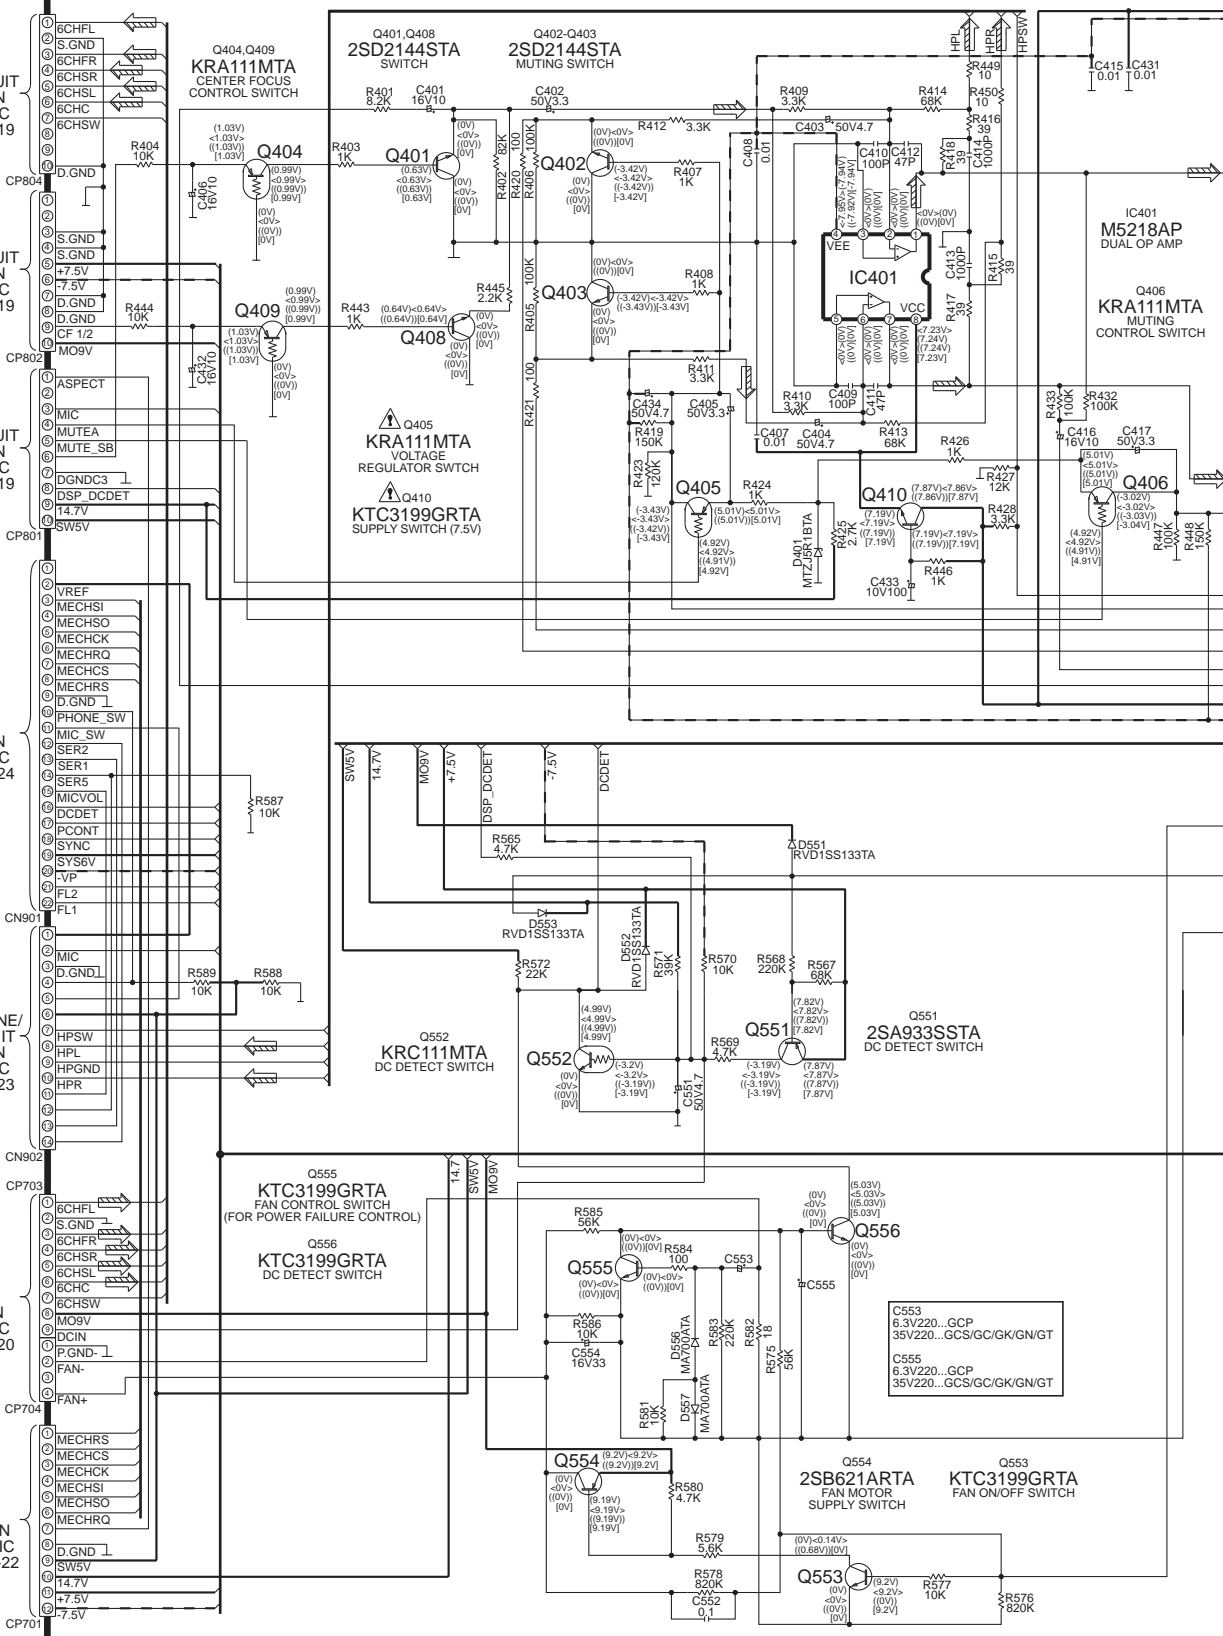

# SCHEMATIC DIAGRAM - 26

— : +B SIGNAL LINE    - - - : -B SIGNAL LINE    ⇨ : MAIN SIGNAL LINE

## M MAIN CIRCUIT

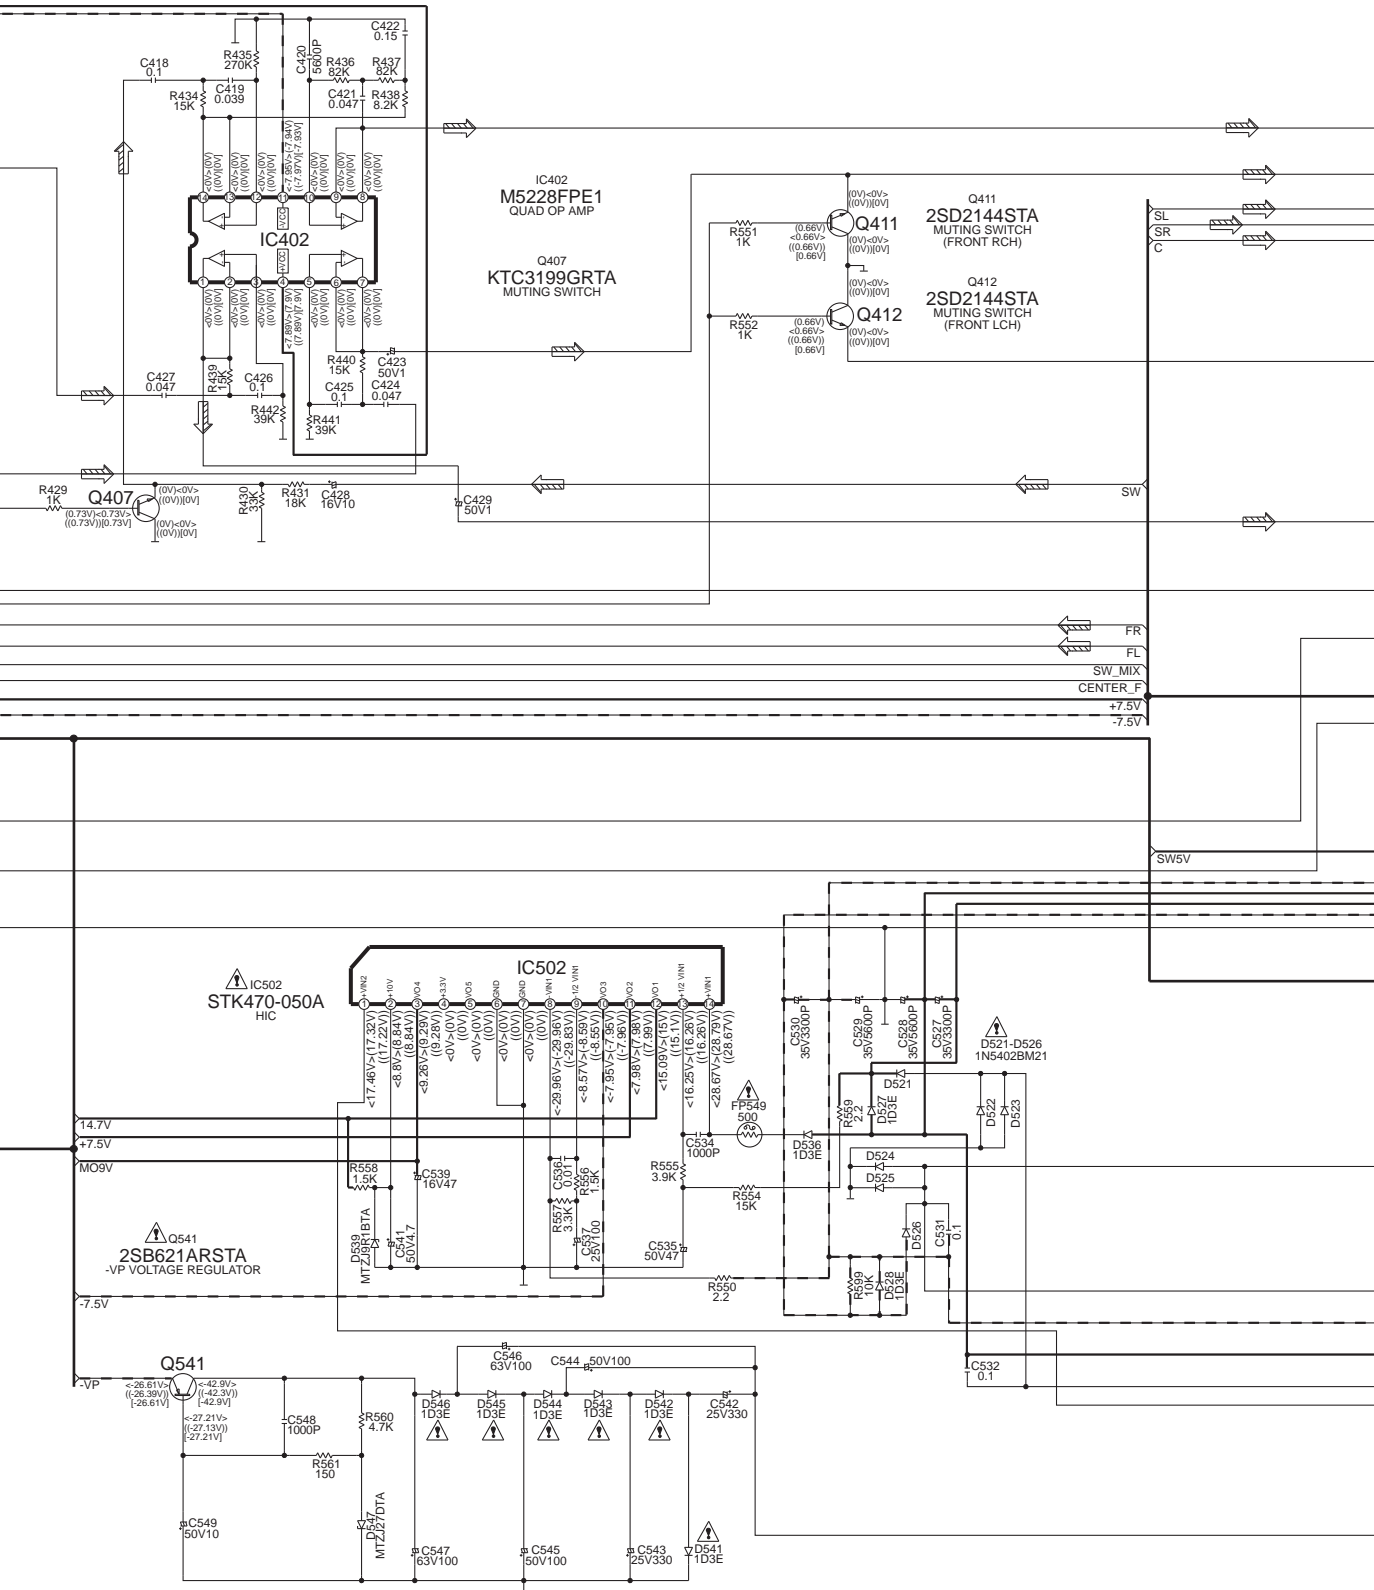

# SCHEMATIC DIAGRAM - 27

— : +B SIGNAL LINE    - - - : -B SIGNAL LINE    ⇨ : MAIN SIGNAL LINE

## M MAIN CIRCUIT

