

<b>Error No.</b>	<b>Error Description</b>
<b>U11</b>	Card Error
<b>U12</b>	Card Error
<b>U13</b>	Card Error
<b>U14</b>	Card/Camcorder Dialogue Error
<b>U15</b>	Card Access Error
<b>U16</b>	Card Access Error
<b>U30</b>	Error other than above