



**Disassembly Notes:**

1. Work carefully so as not to damage the Band of Tension Arm Unit when removing.

**Reassembly Notes:**

**1. Installation of Tension Arm Unit**

- 1) Before installing the Tension Arm Unit, place the Mechanism in STOP Position by rotating the Mode Switch, and then hook the Spring of Tension Arm Unit to Hooking Portion A and Hooking Portion B.
- 2) Install the Tension Arm Unit while hooking the Band of Tension Unit to groove of S Reel Table.
- 3) Confirm that Band of Tension Arm Unit and Projection on Sensor F.P.C. are in the correct position, and that Cam follower Pin is set into Slot of Tension Arm Unit.
- 4) After installing the Tension Arm Unit, unhook the Spring from Portion A, and then confirm that the Spring is in the lower position than Sensor F.P.C.