



**Disassembly Notes:**

1. When removing the T Brake Unit, remove a Screw and the Plate. Then, remove the T Brake Unit while releasing the Locking Tab (L-5).
2. Use extreme care when removing the T Brake Unit.  
If Locking Tab (L-5) is broken, install a new T Brake Unit.

**Reassembly Notes:**

1. When installing the T Brake Unit, DO NOT apply pressure to T Brake Unit Plate.