


See Reassembly Notes.

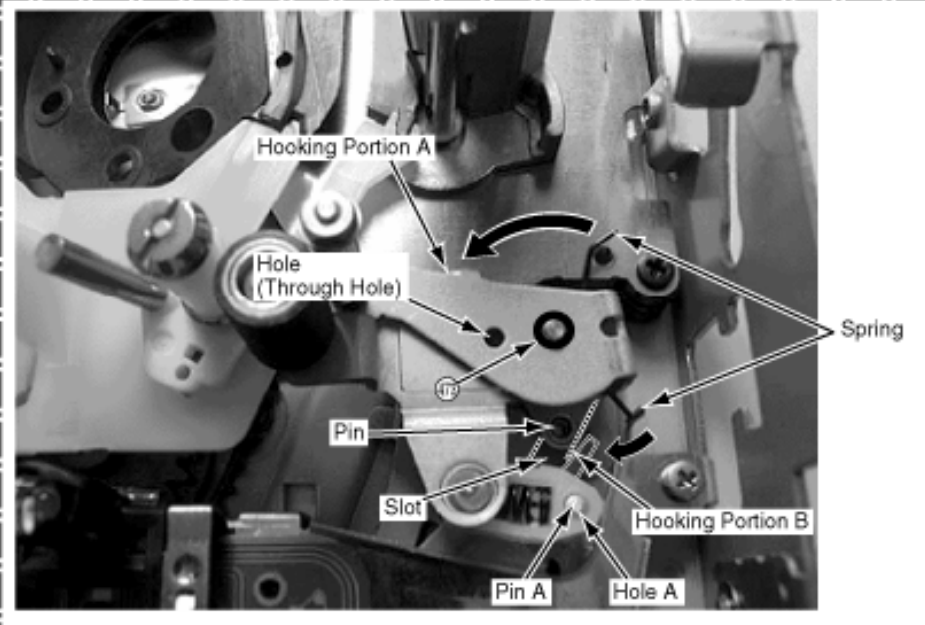

Reassembly Notes:

1. Installation of Pinch Arm Unit

- 1) Before installing, place the Mechanism in STOP Position by rotating the Mode Switch counterclockwise fully.
- 2) Install the Pinch Arm Unit so that Pin of Pinch Arm Unit is in Slot and that Pin A is inserted to Hole A on Pinch Arm Unit. (The holes on Pinch Arm Unit are Through Hole.)
- 3) Hook the Spring to Hooking Portion A, and then to Hooking Portion B of T4 Drive Arm.