



Disassembly Notes:

1. When removing the Sensor F.P.C., slide it as indicated by the arrow.
2. Work carefully so as not to damage the F.P.C. when removing it.

Reassembly Notes:

1. Installation of Sensor F.P.C.

- 1) Install the Sensor F.P.C. so that the Pins on chassis are in the holes on the Sensor F.P.C.
- 2) Slide the Sensor F.P.C., and then tighten 2 Screws (43).
- 3) Put the F.P.C. through the Chassis hole, and confirm that there is no contact between the Timing Belt and the F.P.C.