



Disassembly Notes:

1. Before removing the Garage Unit, eject the Garage Unit by sliding the Lock Lever to the direction of the arrow.
2. When removing the Garage Unit, pull 2 Pin A from 2 Hole A, and then pull 2 Pin B from 2 Slot B.

Reassembly Notes:

1. Installation of Garage Unit

- 1) Install the Garage Unit so that 2 Pin B of Garage Unit are inserted to 2 Slot B on chassis.
- 2) Insert the 2 Pin A to 2 Hole A on chassis.

CAUTION:

When making the Garage Unit in the down position, be sure to push the shaft of Garage Unit as shown. Otherwise, the Garage Unit may be damaged.