


See Reassembly Notes.

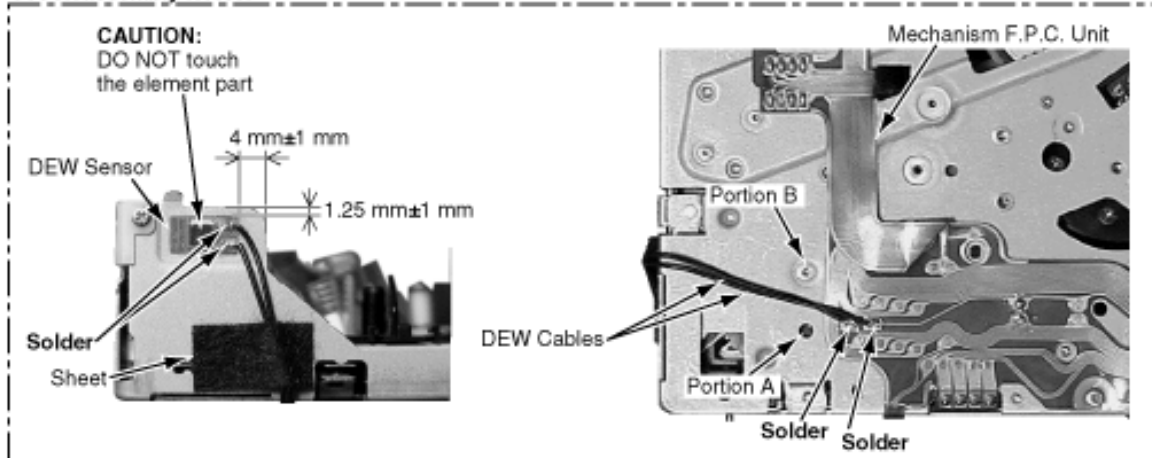

Disassembly Notes:

1. When removing the DEW Sensor, remove it using a screwdriver etc. as shown.

Reassembly Notes:

1. Installation of DEW Sensor, DEW Cables

The DEW Sensor or the DEW Cables is supplied separately as replacement parts. When replacing the DEW Sensor in **early products**, be sure to replace both the DEW Sensor and the DEW Cables. DO NOT touch the element part on DEW Sensor when installing it.

- 1) Put the DEW Sensor on chassis with adhesive securely, and solder the DEW Cables on the DEW Sensor as shown.
- 2) Shape the DEW Cables between Portion A and Portion B on the bottom of Mechanism. Then, solder it on the Mechanism F.P.C. Unit no more than 320 °C for less than 3 seconds as shown.