

www.orphancameras.com

This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library


This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

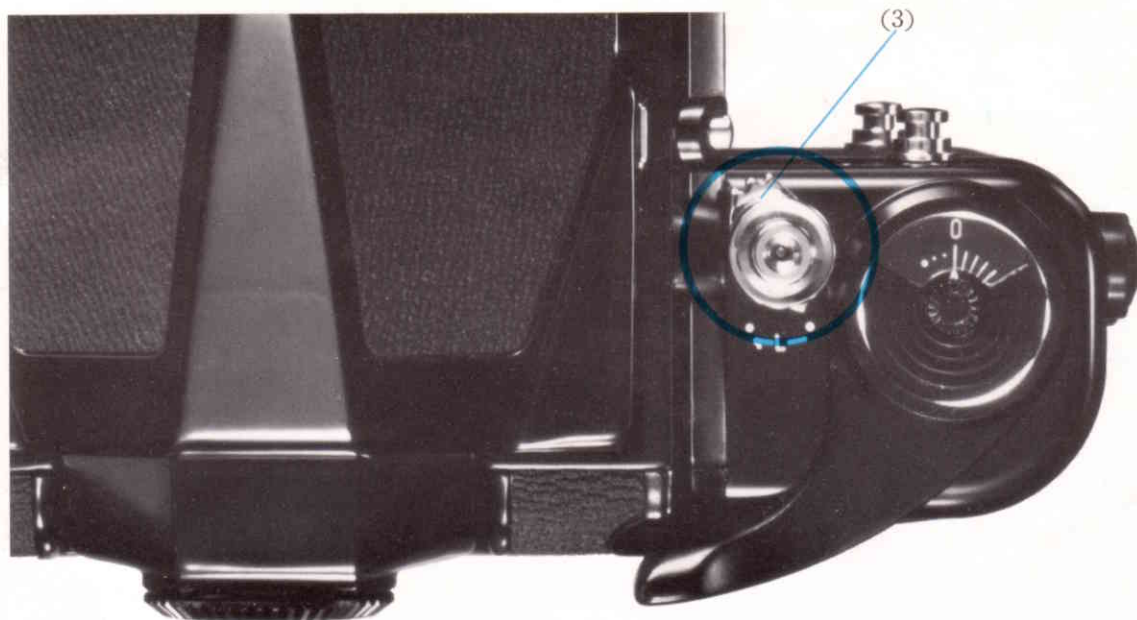


the shutter release button, move the shutter release lock (3) to the orange dot.

Time Exposure

By setting the shutter speed dial anywhere in the space between X and 1/1000 sec., you can take Time exposures. To close the shutter, turn the shutter speed dial to X or 1/1000.

Double exposures cannot be made with this camera.

Battery check & replacement

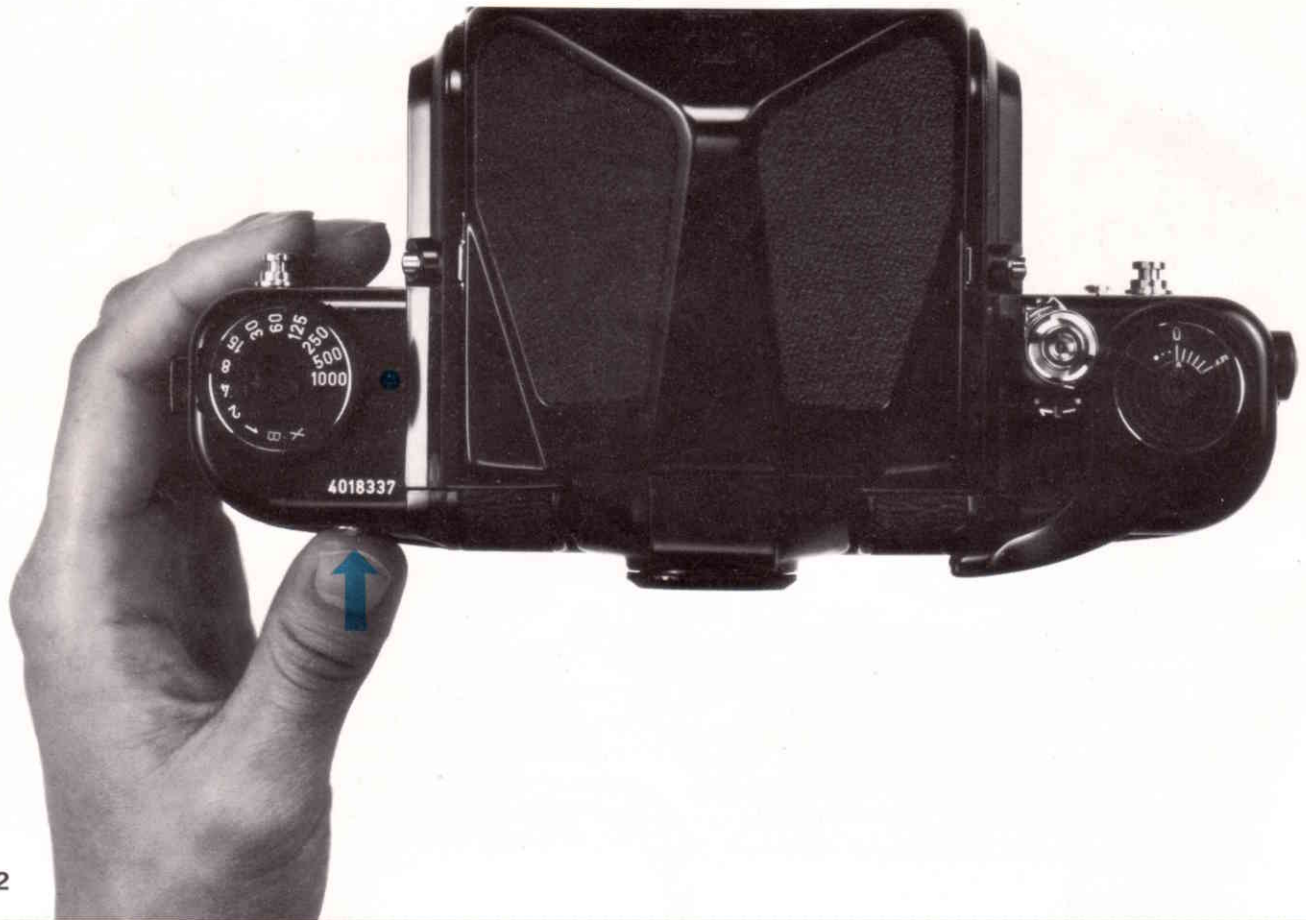



The silver oxide battery used in your camera will last for about 8,000 ~ 10,000 exposures. To check the battery condition, depress the battery check button (21); the red battery check lamp (14) will glow if the battery is still in good condition.

If the red check lamp does not glow, replace the battery immediately. The shutter will not operate when the battery is exhausted, or its voltage too low, or when there is no battery in the camera. At such a time, the reflex mirror will stop halfway up when you depress

the shutter release button, completely locking the shutter mechanism.


When this happens, insert a fresh battery, and depress the shutter/mirror reset button (6). The mirror will then complete its cycle, simultaneously releasing the shutter, resulting in the loss of one frame.

You can easily remove the battery by unfolding the crank of the battery chamber cover (23) and turning it to the left. When loading a fresh battery, be sure to properly align the poles.

Intercahanging lenses



To remove a lens, depress the lens release (11) and turn the lens to the left. When mounting a lens, first match the red dots (J) and then turn the lens to the right until it securely locks to the bayonet mount. Use the inner bayonet for lenses from 35mm to 300mm; outer bayonet for lenses from 400mm to 1000mm.

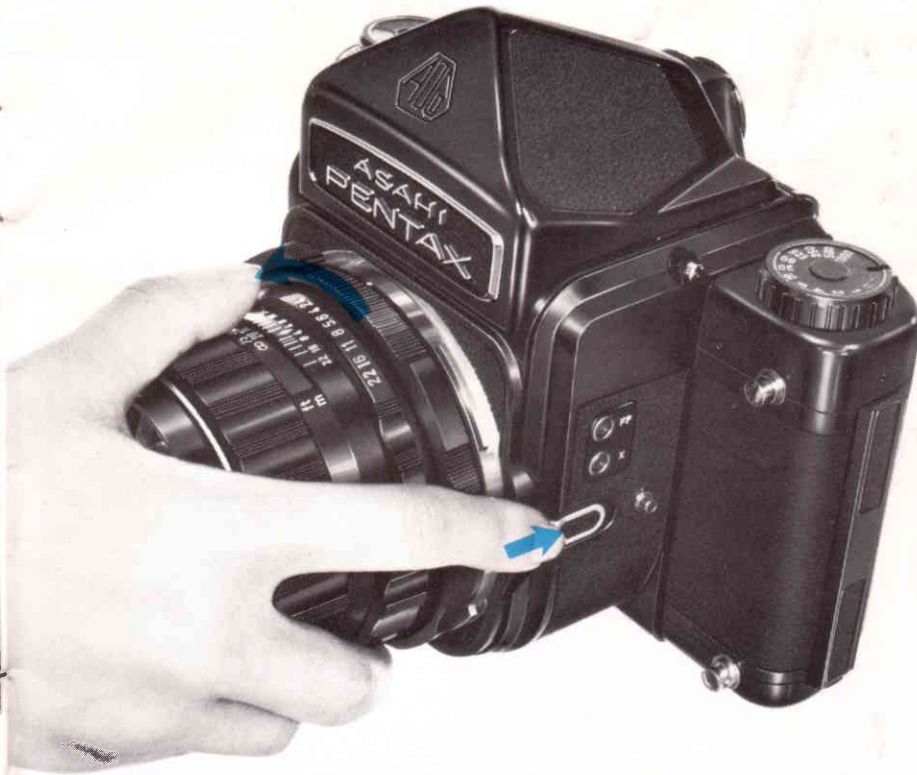

Flash synchronization

The table below shows which sync terminal, which shutter speed and which type of flash may be combined for maximum efficiency.



SHUTTER SPEED FLASH TERMINAL	$\frac{1}{1000}$	$\frac{1}{500}$	$\frac{1}{250}$	$\frac{1}{125}$	$\frac{1}{60}$	$\frac{1}{30}$	$\frac{1}{15}$	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{2}$	1	X
FP	FP Class											
X						Electronic Flash						
							M Class • MF Class • FP Class					

When using an electronic flash unit, plug the cord into the X sync terminal. Use shutter speeds of X ($\frac{1}{30}$ sec.) or slower.

When using a flash gun, plug the cord into the FP terminal. Use shutter speeds of $\frac{1}{125}$ sec. or faster.

When using an FP class flashbulb at shutter speeds of $\frac{1}{15}$ sec. or slower, plug the cord into the X terminal. In this case, M class and MF class bulbs for lens-shutter cameras may also be used.

With an FP class flashbulb, the amount of light decreases by 50% as a higher shutter speed is used. So you must adjust the diaphragm. Check the instructions supplied with the flashbulbs.

Mirror lock provision

When desiring to lock the mirror in the up position, first cock the shutter and advance the film, and then push up on the mirror lock lever (7) which is located on the right-hand side of the outside wall of the mirror chamber. Finally, to keep vibrations to an absolute minimum, release the shutter with a cable release. Because the mirror lock provision is powered by the battery in the camera, the mirror is automatically returned to its normal position after the exposure to conserve battery consumption.

Caution: To avoid depleting the battery in an unnecessarily short period of time, avoid using the mirror lock provision for unduly long exposures, and avoid using it more than necessary.



Depth-of-field preview lever



The spring-loaded preview lever (8) can be pushed down and locked for depth-of-field preview. When it is in preview position, the upper end of the lever is slightly raised; a slight touch on the raised end will return the lever to its automatic (open aperture) position.

Viewfinder and focusing screen



To remove the viewfinder, depress the viewfinder release buttons (14) and lift the viewfinder. When reinstalling the viewfinder, be sure that the release buttons are securely engaged with the viewfinder. (Try to lift off the viewfinder to make sure that it is locked.)

