

This camera manual library is for reference and historical purposes, all rights reserved.

This page is copyright by mike@butkus.org M. Butkus, N.J.

**This page may not be sold or distributed without the expressed
permission of the producer**

I have no connection with any camera company

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your E-mail address too so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy. These donations allow me to continue to buy new manuals and maintain these pages. It'll make you feel better, won't it?

If you use Pay Pal, use the link below. Use the above address for a check, M.O. or cash. Use the E-mail of butkusmi@ptd.net for PayPal.



[back to my "Orphancameras" manuals /flash and light meter site](#)

Only one "donation" needed per manual, not per multiple section of a manual !

The large manuals are split only for easy download size.

FOR SAFE USE



Although we have carefully designed this product for safe operation, please be sure to follow precautions given on this page.

⚠ WARNING This mark indicates that violating this item could cause serious personal injuries.

⚠ CAUTION This mark indicates precautions that, if not followed, could result in minor or medium injuries to the user or damage to the equipment.

⚠ WARNING


- Do not disassemble or modify the battery grip. High voltage areas are present inside the equipment, with the risk of electric shock.
- If the battery grip interior is exposed due to dropping or otherwise damaging the battery grip, never touch the exposed portion. There is the risk of electric shock.

⚠ CAUTION

- Never try to disassemble or short the batteries. Also do not dispose of the batteries in fire, as they may explode.
- Misuse of the batteries can cause hazards such as leakage, overheating, explosion, etc. The batteries should be inserted with “+” and “-” side facing correctly.
- Remove the batteries from the grip immediately if it becomes hot or begins to smoke. Be careful not to burn yourself during removal.


Please read “PRECAUTIONS FOR BATTERY USAGE” on page 2 of the camera operating manual and use the batteries carefully.

NAMES OF WORKING PARTS

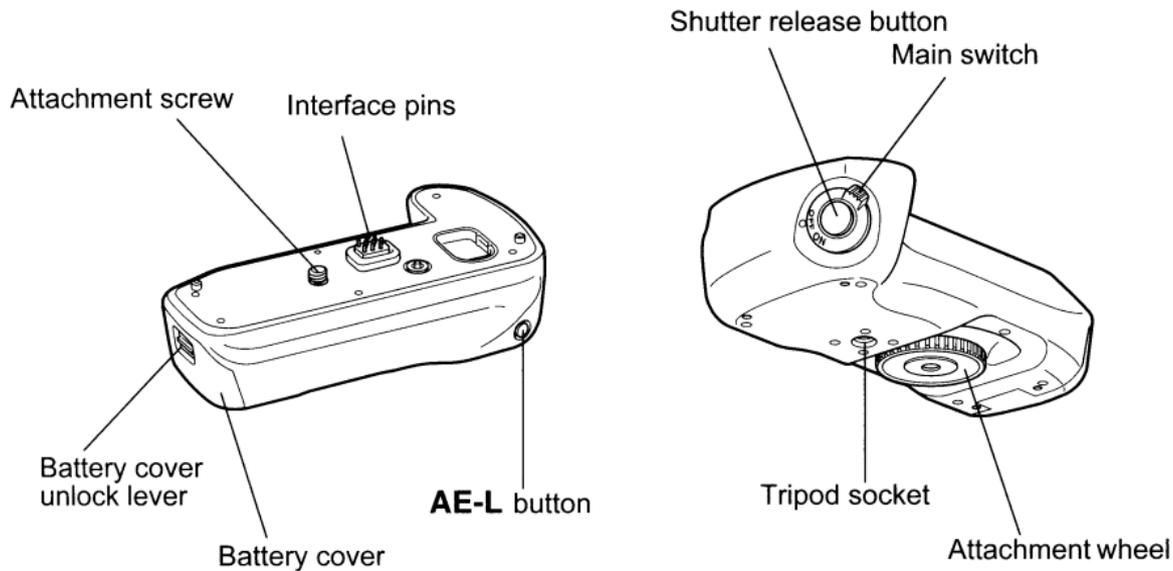

INSTALLING THE BATTERIES

Use four AA batteries of the same type (lithium/Ni-MH/alkaline).

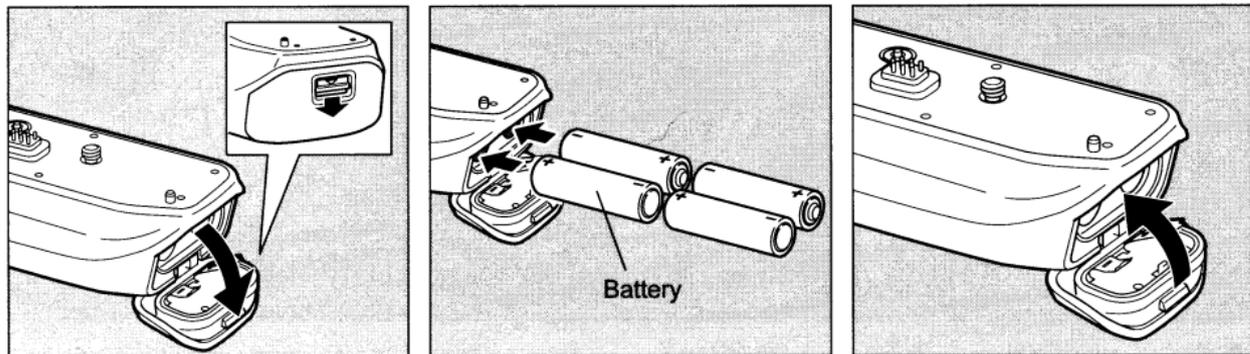

1 Open the battery cover.

Turn the battery cover unlock lever down, towards ▼ and open the battery cover.

2 Insert the batteries.

Be sure to insert the batteries with the "+" and "-" sides facing the correct directions.

3 Close the battery cover.


Press the cover until you hear it click and make sure that the cover is properly locked.

📌 Memo

- For the number of recordable images and playback time, see the chart on page 15.



ATTACHING THE BATTERY GRIP TO THE CAMERA

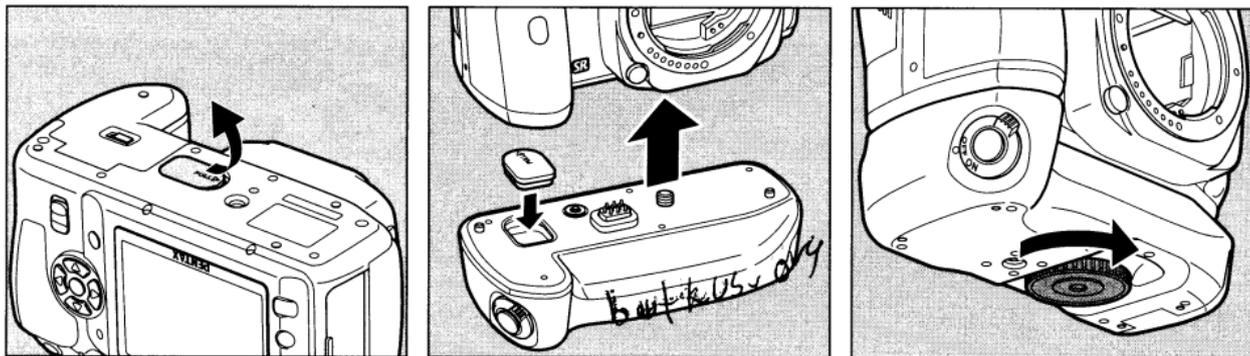

- 1 Open the battery grip connection cover on the camera, and remove the interface pins cap on the battery grip.
- 2 Attach the battery grip to the camera by fitting the interface pins and attachment screw of the battery grip to the battery grip connection terminal and tripod socket of the camera as shown above.
- 3 Secure the battery grip by turning the attachment wheel firmly in the direction of the arrow as shown above.


CAUTION

- Make sure the camera and the battery grip are turned off before attaching.
- Leave the cap on when not using the battery grip. Do not touch the interface pins with the cap off.
- You can store the battery grip connection cover of the camera in the cavity of the battery grip after removing from the camera in step 1 (see illustration in step 2). When storing the cover, push it down straight with your both thumbs.

TAKING PICTURES WITH THE CAMERA IN THE VERTICAL POSITION




Use the shutter release button on the battery grip when taking pictures with the camera in the vertical position.

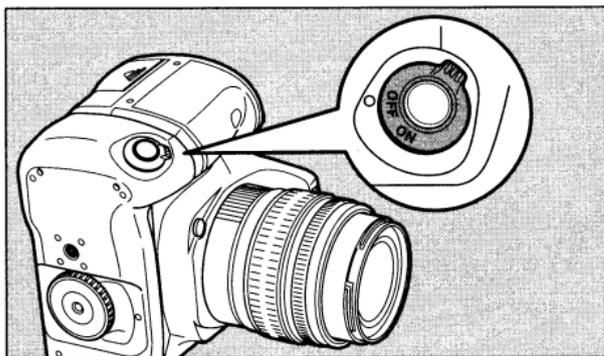

Make sure to turn on the battery grip before attempting to operate the shutter release button or the **AE-L** button on the battery grip. However, the camera can still be operated by its own control even if the battery grip is turned off.

Memo

- It is recommended to turn off the battery grip when using the camera in a position other than the vertical position as the switch may accidentally be pressed.

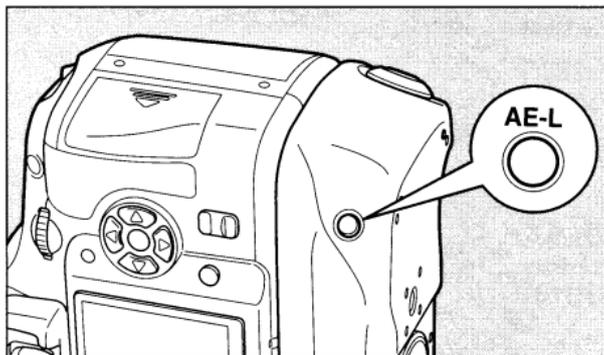

The **AE-L** button can be operated in the same manner as that of the camera.

SPECIFICATIONS

Camera: *K200D*

Batteries: Four AA lithium/Ni-MH/alkaline batteries

Dimensions (W × H × D): Approximately 133.5 × 32.5 × 75.5 mm/5.3 × 1.3 × 3.0 in.
(excluding protrusions)

Weight: Approximately 175 g (6.2 oz)

Specifications and external dimensions are subject to change without notice.

Approximate image storage capacity and Playback Time
(when the same types of batteries are used in the camera and battery grip)

Batteries (ambient temperature)	Normal recording	Flash photography		Playback time	
		50% usage	100% usage		
AA Lithium Batteries	(23°C)	2200 images	1090 images	680 images	1400 minutes
	(0°C)	1780 images	860 images	480 images	1200 minutes
AA Rechargeable Batteries (NiMH 2700mAh)	(23°C)	1400 images	780 images	470 images	960 minutes
	(0°C)	980 images	540 images	360 images	800 minutes
AA Alkaline Batteries	(23°C)	380 images	150 images	90 images	600 minutes
	(0°C)	Not applicable	Not applicable	Not applicable	400 minutes

- The image storage capacity (normal recording and flash use 50%) is based on measuring conditions in accordance with CIPA standards and the others are based on PENTAX measuring conditions. Some deviation from the above figures may occur in actual use depending on shooting mode and shooting conditions.
- Battery performance decreases in low temperatures. In cold environments, it is recommended that you carry extra batteries and keep them warm in your pocket. Battery performance will recover when the surrounding temperature returns to normal.
- Carry extra batteries with you when traveling overseas, taking pictures in cold environments or taking a lot of pictures.

