

This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?


**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

PENTAX®

MZ-7

OPERATING MANUAL





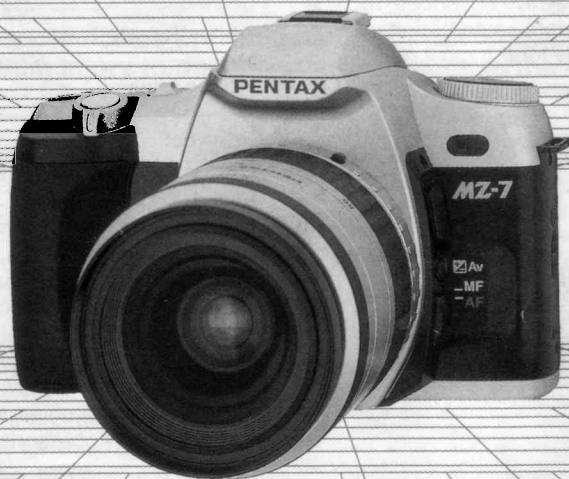

Aug '01



  Congratulations on your purchase of this camera and welcome to the exciting world of Pentax autofocus photography! This compact and light weight camera is an autofocus SLR camera that offers higher levels of sophistication and performance. Incorporating a broad range of advanced technologies and highly accurate automation, this camera will perform superbly for the most exacting photographer.

- Read this instruction manual carefully to get a full explanation of operations before use.
- Illustrations in this operating manual are the data function.

Icon indicators used in this manual

Operation direction	
Automatic operation	
Attention	
Lamp blinking	
Correct	
Incorrect	

Lenses and accessories produced by other manufacturers are not made to our precise specifications and therefore may cause difficulties with, or actual damage to, your Pentax camera. We do not assume any responsibility or liability for difficulties resulting from the use of lenses and accessories made by other manufacturers.

Although we have carefully designed this camera for safe operation, please be sure to follow precautions given on this page.

⚠ WARNING This mark indicates precautions that, if not followed, could result in serious injury to the operator.

⚠ CAUTION This mark indicates precautions that, if not followed, could result in minor or medium injury to the operator or damage to the equipment.

⚠ WARNING

- The electronic circuits inside the camera contain high voltage working parts. Never attempt to disassemble the camera yourself.
- Never touch internal parts of the camera if they become exposed from dropping the camera or for some other reason, as there is danger of an electric shock.
- Wrapping the strap around your neck is dangerous. Make sure that small children do not get the strap caught around their neck.
- Do not look directly at the sun through the camera, as viewing the sun for may damage your eyes, and/or parts of the camera (e.g: shutter blades, etc.)
- Be sure to store batteries out of the reach of children. Seek medical assistance immediately if accidentally swallowed.

⚠ CAUTION

- Do not use the flash near anyone's eyes, as it may hurt them. Be particularly careful with the flash around infants.
- Never try to disassemble, short or recharge the battery. Also, do not dispose of the battery in fire, as it may explode.
- Remove the batteries from the camera immediately if they become hot or begin to smoke. Be careful not burn yourself during removal.

PRECAUTIONS FOR YOUR CAMERA

Your Pentax camera is a high-precision mechanism. Handle it with great care.

Precautions when taking pictures

- Do not use the camera where it may come in contact with rain, water, or any other liquid, because the camera is not weather, water, or liquid resistant. Should the camera get wet from rain, splashing water, or any other liquid wipe it off immediately with a dry soft cloth.
- Do not drop the camera or allow it to hit solid objects. If the camera suffers a shock or impact, take it to a Pentax service center for inspection.
- Be careful not to subject the camera to strong vibrations, shock or pressure. Use a cushion to protect the camera when carrying it in a motorcycle, car, boat, etc.
- Condensation on the interior or exterior of the camera may be extremely harmful to the camera mechanism as it may cause rust. Furthermore, if the camera is taken from warm temperature to a subfreezing one or vice versa, the formation of icelets may cause damage. In such a case, put the camera into a case or plastic bag so that any changes in temperature difference is minimized. Do not remove it from the bag until temperature has stabilized.
- Regular size color prints may cut off what appears on the extreme edges of the film frame. Compose your picture with a margin of safety at the edges.

Precautions for storage

- Avoid leaving the camera for extended periods in places where the humidity and temperature are very high, such as in a car.
- Do not store the camera in a closet with moth balls or in an area where chemicals are handled. Store it in a place with good dry air circulation to prevent the growth of fungus.

Precautions for proper care

- Never touch the shutter curtain or mirror with your finger or any other object.
- Use a blower and lens brush to remove dust accumulated on the lens or viewfinder.
- Never use solvents such as paint thinner, alcohol or benzene to clean the camera.
- Electrical problems may often be caused by water, dirt or dust at points of electrical contact. Also check for battery leakage, traces of dirt or grease, or corrosion due to salinity or gas. If you cannot correct the problems, have your camera inspected at a Pentax service center. Repairs of this nature are not covered under the terms of the warranty and charges may be assessed.

Other precautions

- The temperature range at which this camera functions properly is 50°C to -10°C (122°F to 14°F).
- A camera which has been submerged in water usually cannot be repaired. If such an accident should occur, it is advisable to contact a Pentax Service Center immediately.
- To maintain optimum performance, it is recommended that the camera be inspected every one or two years. If the camera has not been used for an extended period, or is being prepared for an important photographic session, it is recommended that you have the camera inspected or test shoot with it.
- Repairs deemed necessary due to usage of this product in an industrial or commercial application may not be covered under the terms of the Pentax warranty.
- The PENTAX warranty provides only for the repair of defects in materials or workmanship. Damage of any kind cannot be repaired at no charge under the terms of the warranty. If the difficulty is caused as a direct result of the product being used in conditions as outlined in the "Precautions for Your Camera" section or any other operation contrary to the instructions outlined in this manual, charges will be assessed and a repair quotation will be provided.

- Use two 3V lithium batteries (CR2 type).
- Misuse of the battery can cause hazards such as leakage, overheating, explosion, etc. The battery should be inserted with the "+" and "-" sides facing correctly.
- Battery performance may be temporarily hindered in low temperatures, but will recover in normal temperatures.
- Keep a spare battery on hand for replacement convenience when shooting outdoors or while traveling.
- If the built-in flash is used continuously, the battery may become warm, but it does not mean that the battery is faulty; it is one of the battery's characteristics.
- Replace the batteries at the same time. Do not mix battery brands, type or an old battery with a new one. It may cause explosion or overheating.

TABLE OF CONTENTS

Safe use of your camera	1
Precautions for your camera.....	2
Precautions for battery usage.....	3
Table of contents.....	4
Names of working parts.....	6
LCD panel indication	8
Viewfinder indication.....	9
• Multi (6) - segment metering.....	9
Camera functions available with various lenses	10

I. BASIC OPERATION (PREPARATION)11-23

Attaching the camera strap.....	11
Loading the batteries.....	12
• When the battery is exhausted.....	13
Attaching the lens	14
Turning on the power.....	16
Operating the shutter release button	16
Using the data back.....	17
Film loading	18
Unloading film	21
• Rewinding a film in mid-roll	22


II BASIC OPERATION (SHOOTING).....23-36

Using the Auto Picture Mode.....	24
Using the Smart Flash.....	25
• Auto-popup flash function.....	25
• Flash disable function	26
Using zoom lenses	27
Setting the Single-Frame Drive Mode	28
Selecting the Autofocus Mode.....	28
Holding the Camera.....	29
Taking a picture	30
Selecting the various flash Modes.....	32
• AF illuminator	33
• About Red-eye Reduction Flash Function ..	33
Activate the built-in flash in manual.....	34
Flash recommended warning	36

III ADVANCED OPERATION	37-81
Selecting a Drive Mode	37
• Consecutive Frame Mode	38
• Self-Timer Mode	38
Remote control shooting (Optional)	40
• 3-second-delay release mode	40
• Instant release mode	42
Multiple-Exposure Mode	43
Taking a panorama format picture	44
Using the Picture Mode	46
• Green Operation Mode	47
• Portrait Program Mode	48
• Landscape Program Mode	49
• Close-up Program Mode	50
• Action Program Mode	51
• Night-scene Program Mode	52
Selecting an Exposure Mode	53
• Using the Aperture-Priority AE Mode	54
• Using the Shutter-Priority AE Mode	56
• Using the Metered Manual Mode	58
• Bulb Exposure Mode	60
About Exposure Compensation	61
Turning off the audible PCV signal	62
Memory lock function	63


Manual focusing	64
• Using the snap-in focus function	65
• Hard-To-Autofocus Subjects	66
Advanced operation for the Built-in Retractable Flash (RTF)	67
• Compatibility of F and FA lenses with the built-in flash	69
Setting the film speed (ISO) manually	70
Adjusting the Data Back	71
Installing the battery in the Data Back	73
Using a Pentax Dedicated External Flash	74
• Contrast-Control-Sync Flash Photography	75
• Overview of flash function	76
Daylight-sync shooting	77
Slow-shutter-sync shooting	78
ACCESSORIES (OPTIONAL)	79
Camera case scale	80
Depth of field scale	81
 IV. OTHERS	 82-88
Troubleshooting	82
Specifications	84
Program lines	86
Warranty policy	88

NAMES OF WORKING PARTS I

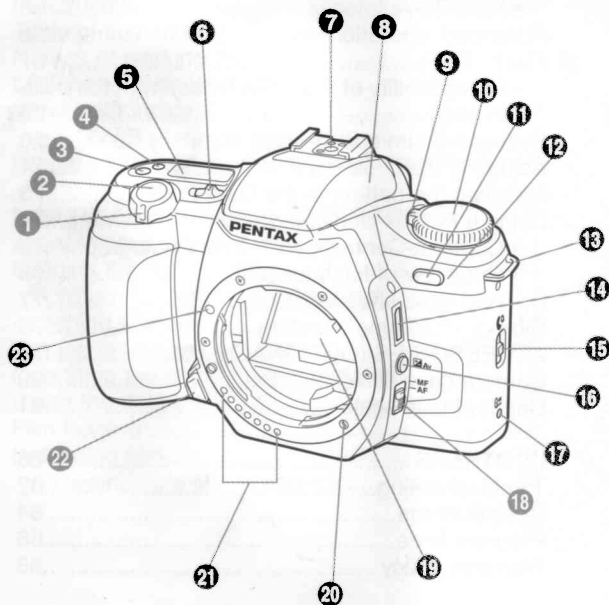


- 1 Select switch
- 2 Shutter release button
- 3 Drive mode button (p.37, 38, 40, 42, 43)
- 4 Flash mode button (p.24)
- 5 LCD panel
- 6 Main switch (p.16)
- 7 Hot shoe
- 8 Built-in flash
- 9 Exposure mode indicator
- 10 Mode dial
- 11 Remote control receiver (p.38, 40, 42)
- 12 Self-timer lamp (p.38, 40, 42)
- 13 Strap lug (p.11)
- 14 Release socket
- 15 Back cover release lever (p.18)
- 16 Exposure compensation button (p.62)
- 17 Mid-roll rewind button (p.22)
- 18 Focus mode switch (p.28, 65)
- 19 Mirror
- 20 AF coupler
- 21 Lens information contacts
- 22 Lens lock button (p.14)
- 23 Lens mount index

- 24 Shutter curtains
- 25 Flash mode button (p.32)
- 26 Eyecup FK (p.39)
- 27 Viewfinder eyepiece
- 28 Diopter adjustment lever (p.23)
- 29 Panorama lever (p.44)
- 30 Memory lock button (p.63)
- 31 Film information window
- 32 Pressure plate
- 33 Back cover (p.18)
- 34 Film leader end mark (p.19)
- 35 Battery cover chamber screw (p.12)
- 36 Battery chamber cover (p.12)
- 37 Sprocket (p.19)
- 38 Tripod socket
- 39 DX-information (p.19)

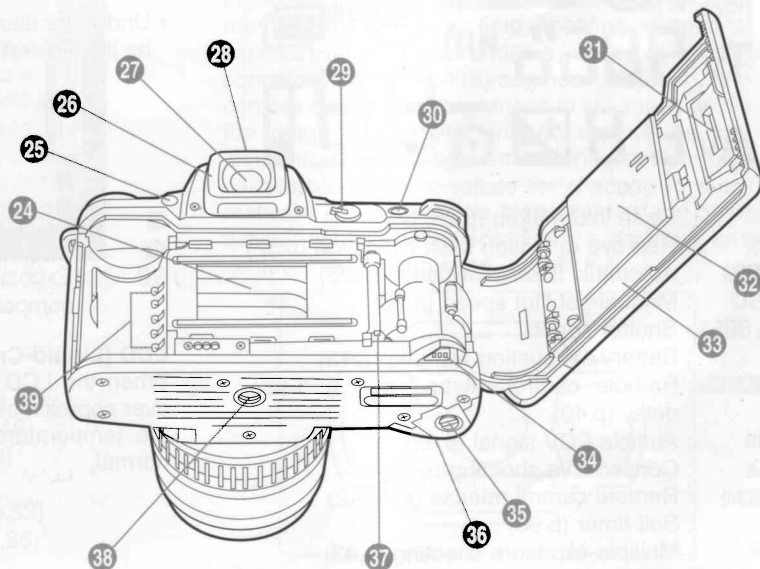

LCD PANEL INDICATION

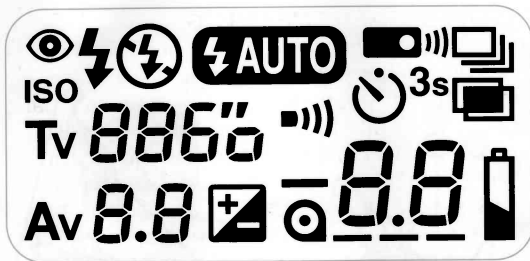

All indications will not actually appear simultaneously as shown.


- Under the dim light condition, the LCD panel will be illuminated automatically.

- : Flash information (p.25, 36)
- : Red-eye reduction flash indication (p.32)
- : Automatic flash information (p.25)
- ISO** : Manual-set film speed (p.70)
- Tv 886** : Shutter speed
- : Battery exhaustion warning (p.13)
- : Remote control release with a 3-sec. delay (p.40)
- : Audible PCV signal (p.62)
- : Consecutive shooting (p.38)
- : Remote control release (p.40,42)
- : Self-timer (p.38)
- : Multiple-exposure shooting (p.43)
- Av 8.8** : Aperture value

- : Exposure compensation (p.61)
- : Film status information (p.20, 22)
- 8.8** : Exposure counter (p.20) and exposure compensation value (p.61)

LCD (Liquid-Crystal Display)

When the LCD is exposed to high temperatures over approximately 60°C, it may blacken, but when the temperature normalizes, it should return to normal.

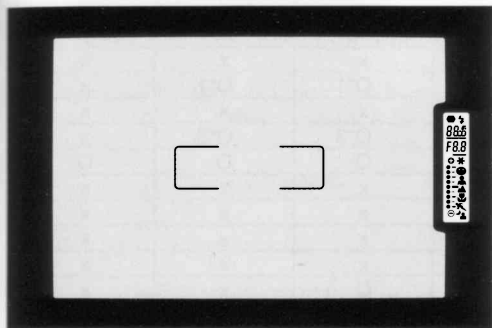

[C]: 3-point AF frame (p.30)

8888 : Shutter speed

F8.8 : Aperture value

☺ : Green Operation Mode (p.47)

👤 : Portrait Operation Mode (p.48)

🏔️ : Landscape Program Mode (p.49)

🌸 : Close-up Program Mode (p.50)

🏃 : Action Program Mode (p.51)

📷 : Night-scene Program Mode (p.52)

⚡ : Flash status information (p.32,36)


⬢ : In-Focus indicator (p.65)

* : Memory lock (p.63)

▬ : Bar graph (p.58, 61)

MULTI (6)-SEGMENT METERING

This camera incorporates six-segment TTL metering system. Light values are measured in six segments within the image field, enabling an optional exposure to be made under a variety of lighting conditions. With multi(6)-segment metering, the camera records the brightness in six zones within the image field and will properly expose the subject. The multi (6)-segment metering system also calculates exposure values for a scene to automatically compensate for high-contrast and other difficult lighting conditions. Even a beginner can achieve results with ease.

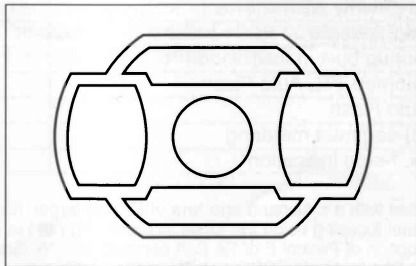

- When the format is switched to panorama, the viewfinder switches to the horizontal panorama format frame. For details on panorama format picture taking, see page 44.

10 CAMERA FUNCTIONS AVAILABLE WITH VARIOUS LENSES

Function	Lens [Mount type]	FA lens [K _{AF2}]	F lens [K _{AF}]	A lens [K _A]	M lens [K]	S lens [Screw]
Autofocus (Lens only)		O	O	x	x	x
(Lens with AF Adapter 1.7X)		-	-	O*1	O*1	x
3-point autofocus		O	O	x	x	x
Manual focus (with FI)		O*3	O*3	O*3	O*3	x
(with Matte field)		O	O	O	O	O
Power zoom		x	x	x	x	x
Image size tracking		x	x	x	x	x
Zoom clip		x	x	x	x	x
Auto zoom effect		x	x	x	x	x
Picture Mode		O*4	O*4	O	x	x
Auto Picture Mode		O*4	O*4	x*5	x	x
Aperture-Priority AE		O	O	O	O	O
Shutter-Priority AE		O*5	O*5	O	O	O
Manual Exposure		O	O	O	O	O
Auto-popup built-in flash mode *6		O	O	O	x	x
Programmed TTL Auto Flash		O	O	O	x	x
TTL Auto Flash		O	O	O	O	O
Multi(6)-segment metering		O	O	O*7	x*8	x*8
Approx. f-stop indication		O	O	x	x	x

Notes:

*1. Lenses with a maximum aperture of f/2.8 or larger. (See AF Adapter operating manual.)

*2. Manual focusing using the focus indicator (FI) (●) in the viewfinder. *3. Lenses with a maximum aperture of f/5.6 or larger.

*4. Exception of Pentax-F or FA Soft 85mm/f2.8. *5. Green Operation Mode only


*6. Auto Picture Mode and Green Operation Mode only.

*7. When the 50mm f/1.2 lens is in use with the lens aperture ring set at a position other than the A position, the center-weighted metering mode will be set. As the exposure will come out 1 stop overexposed, adjust the exposure deliberately 1 stop under.

*8. The center-weighted metering

• K_{AF2} and K_{AF} mount lenses are designed to work with the Autofocus SLR camera.


I. BASIC OPERATION (PREPARATION)

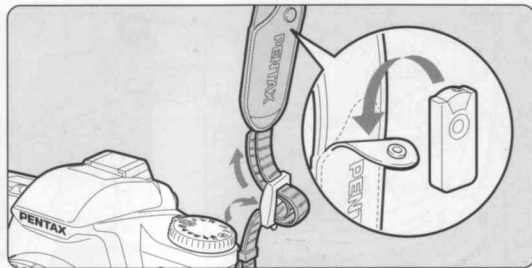


Fit the strap on the camera as illustrated.

- There is a pocket on the strap so you can store the remote control transmitter, finder cap, release socket cover, hot shoe cover or any other small accessory as illustrated.


LOADING THE BATTERIES

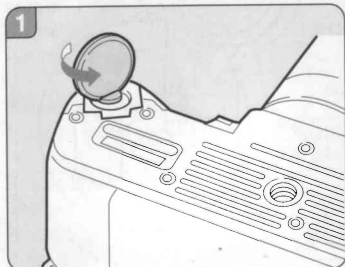

1. Open the battery chamber cover by using a coin, etc. as shown in the illustration.

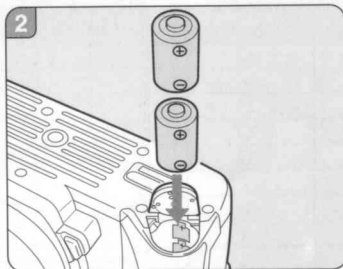

2. Load two 3V lithium batteries (CR2) or equivalent as shown in the illustration.

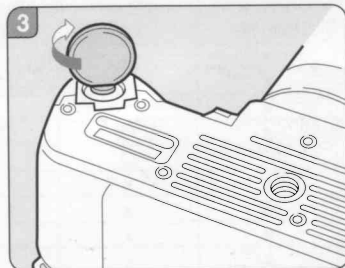

3. Turn the battery chamber cover screw in the direction of the arrow to lock it securely.

- When the batteries are replaced, the camera settings such as the audible PCV signal switching, exposure compensation value, red-eye reduction flash function, self-timer, remote control and auto-popup flash function of the built-in flash will be re-set.
- The optional "AA-Battery Pack FG" is also available for this camera instead of using the lithium batteries.
- Replace two batteries at the same time. Do not mix battery brands, type or an old battery with a new one. It may cause explosion or overheating.


Battery Life (using 24-exposure film rolls at 20°C/68°F)

General existing light photography	about 120 rolls
Flash photography (using flash 50% of the times)	about 20 rolls
Flash photography (using flash 100% of the times)	about 12 rolls
Bulb exposure time	about 8 hours


Battery Life (using 24-exposure film rolls at -10°C/14°F)


General existing light photography	about 30 rolls
Flash photography (using flash 50% of the times)	about 15 rolls
Flash photography (using flash 100% of the times)	about 5 rolls
Bulb exposure time	about 2 hours

CR2 batteries were used under Pentax testing conditions. Actual battery life and performance may vary drastically depending on usage of Autofocus, and external conditions such as temperature and freshness of the battery.

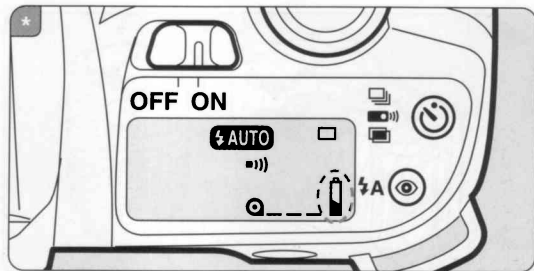


* Low Battery Warning

When the batteries are nearly exhausted, the battery symbol [] appears on the LCD panel to warn you. Replace the batteries as soon as possible.


- Even if the low-battery symbol appears, exposure will be correct as long as the shutter can be released. It is recommended to replace the batteries as soon as possible.
- When the low battery warning [] starts blinking, the shutter cannot be released and all indicators in the viewfinder disappear.

ATTACHING THE LENS

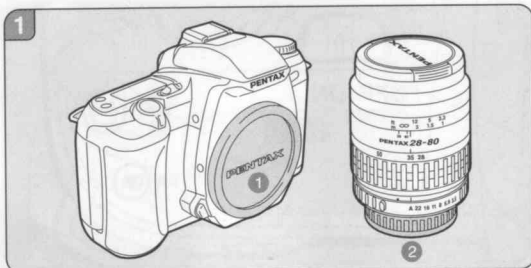


1. Remove the body mount cap ① and rear lens cap ② as shown in the illustration.

- The body mount cap is designed to protect the camera against scratches and dust at the factory. For storage, the optional accessory "Body Mount Cap K" is available.

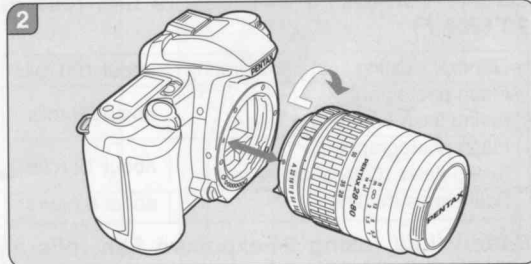


2. Align the red dots on the camera and lens mount, attach the lens to the camera body, and turn it fully to the right until you hear a click.

- Ensure that the camera's main switch is in the [OFF] position before attaching an FA zoom lens to prevent unexpected operation of the lens.

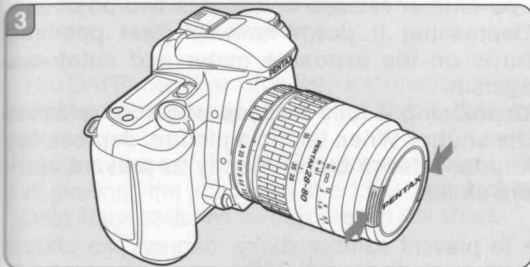

3. To remove the front lens cap, squeeze the tabs on both sides in the direction of the arrow.


- We assume no responsibility nor liability for damages resulting from the use of lenses made by other manufacturers.
- The camera body and lens mount incorporate lens information contacts and an AF coupler. dirt, dust, or corrosion may cause damage to the electrical system. Clean the contacts with a soft, dry cloth.

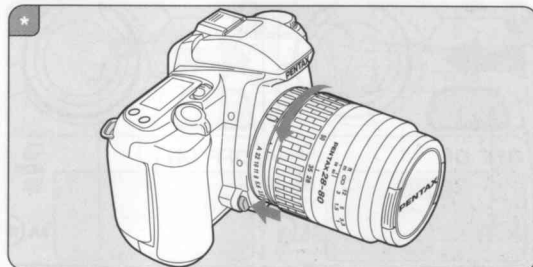

*** How to remove**

To remove the lens, turn it to the left while depressing the lens-lock-release button.

- To protect the contacts and AF coupler of the lens against damage after removal, be sure to set the lens down with the mount side facing upward.

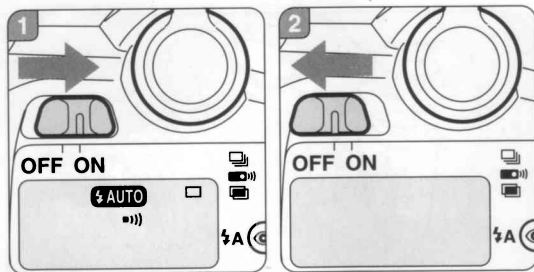


1. The power is turned **ON** when the main switch is set to **ON**.
2. The power is turned **OFF** when the main switch is set to **OFF**.

- When the power is turned on with the Auto picture or Picture Mode set, the mode dial lights up progressively. To cancel this function, set the mode dial to [■||] and reinstall the battery. To light up the mode dial again, the same procedure as cancellation is required.
- When not in use, ensure that the main switch is set to **OFF**.

The shutter release button has two positions. Depressing it down halfway (first position) turns on the exposure meter and autofocus system.

Depressing it fully (second position) releases the shutter. When taking a picture, depress the shutter release button gently to prevent camera shake.


- To prevent camera shake, depress the shutter release button gently.
- Before loading a roll of film, slowly depress the shutter release button to learn where the first position is.
- The LCD indication stays on for about 10 seconds after the button is released from the halfway position. Depressing the shutter release button down halfway keeps the LCD indicator on.

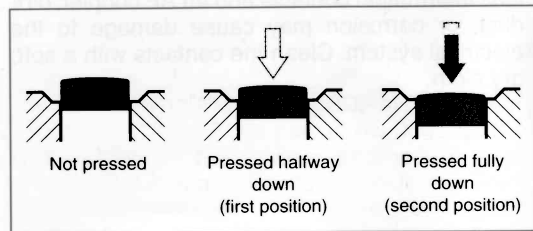


If you have purchased your camera as the Date version, read this section.

The DATE model records data information on your photographs clearly on each frame that you expose.

At each press of the DATE button as shown in the illustration, the mode on the LCD panel of the Data Back switches as indicated in the chart.

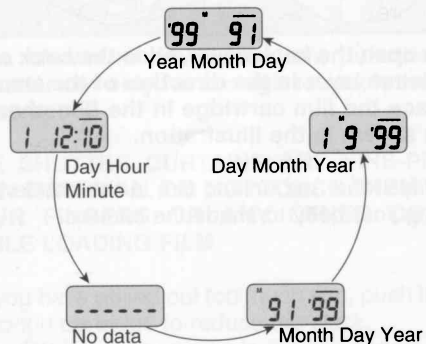

- [M] on the LCD indicates "Month".
- Year 2000 will imprint [00] on pictures.
- As shutter is released, the bar mark [-] in the display blinks for a few seconds that the data has been imprinted.

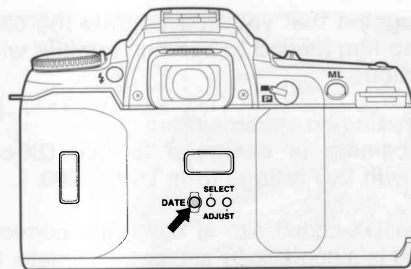

- [— — —] indicates that no data will be imprinted.
- If there is a white or yellow object in the corner of the picture where the data is imprinting, the data may be difficult to read. When composing your photograph, try to avoid brightly-colored subject in that corner.
- The dating unit automatically switches the imprint mode between the standard and panorama according to the format selected.
- To adjust the data, see page 72.
- The data back operates on a 3V lithium battery. If the data imprinted on the picture or the data displayed on the LCD panel become weak or invisible, the battery may need replacing. To replace the battery see page 73.



FILM LOADING

We suggest that you first operate the camera with no film loaded to become familiar with its operations.


Automatic film speed setting

This camera is designed to use DX-coded films with ISO ratings from 25 to 5000.

- When DX-coded film is used, the correct film speed is automatically set for the camera. If you use a non-DX coded film, you can set the film speed manually. See page 70.
- Before loading film for the first time after purchase, open the back cover and remove the protective card. **DO NOT TOUCH THE SHUTTER CURTAINS.**

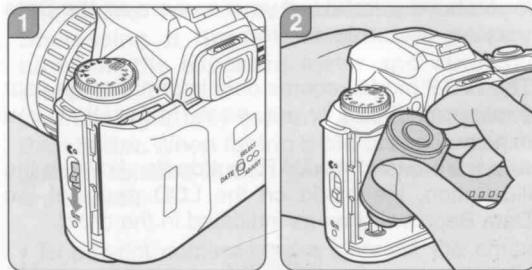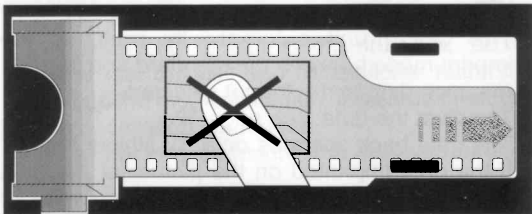


1. To open the back cover, slide the back cover release lever in the direction of the arrow.
 2. Place the film cartridge in the film chamber as shown in the illustration.
- Always load and unload film in the shade or by using your body to shade the camera.

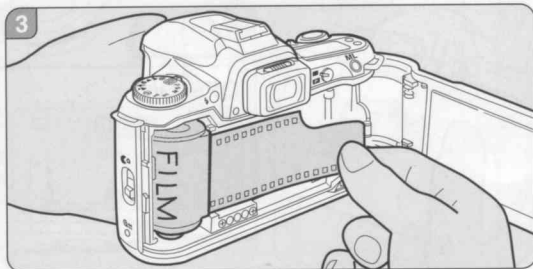

3. As shown in the illustration, pull the film leader out only far enough to reach the take-up spool.

THE SHUTTER CURTAINS ARE FINE-PRECISION MATERIAL. DO NOT TOUCH THEM WITH YOUR FINGERS OR ANY OTHER OBJECT WHILE LOADING FILM.


- If you have pulled out too much film, push it back into the cartridge to reduce the slack.
- The DX information pins in the film chamber are used to read film speed. Keep them clean and free from scratches. To remove smudges, wipe them gently with a soft, dry cloth.

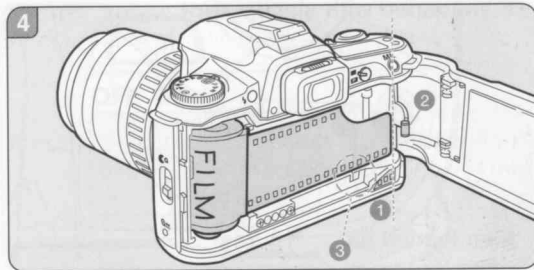



4. Align the film leader with the film leader end mark ① as shown.

- Make sure that the film leader is positioned under the film retainers ② as shown in the illustration.
- Make sure that the film perforations properly engage on the sprocket tooth ③.
- If the end of the film leader is extremely bent, straighten it or cut off the bent portion.

Film loaded with slack No!

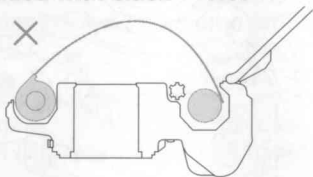


Film loaded flat Yes!

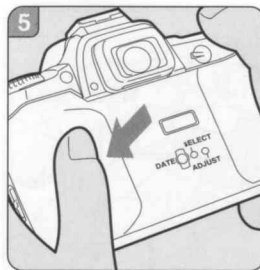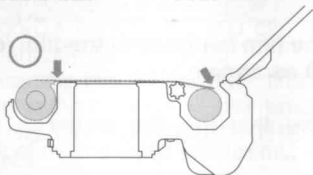


5. Close the back cover and set the main switch to ON.

6. The film automatically advances to the first frame.

- Check that [] and [] are displayed on the LCD panel.
- The film counter indication advances one each time the shutter is released.

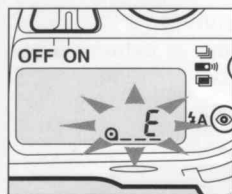


- If the film is not loaded properly, [E] on the LCD panel blinks, indicating that the film is not loaded properly. Open the back cover and load the film once again.

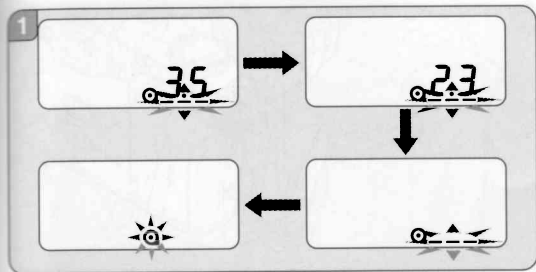


1. The film automatically rewinds at the end of the roll.

- During rewinding, [—] blinks on the LCD panel, indicating that the film is being rewound, the exposure counter counts frame numbers in reverse.
- Never open the back cover until the whole film roll is completely rewound.
- When removing the film from the camera, protect it from exposure to direct sun light.

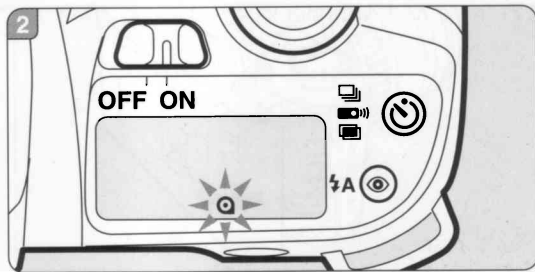


2. When the film is fully rewound, only [Q] blinks on the LCD panel.

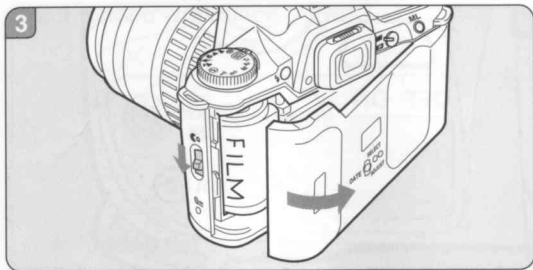

3. Open the back cover and remove the film.

- A roll of 24-exposure film takes about 13 seconds to rewind.
- Before opening the back cover, check that [] is blinking.
- The shutter may be released a frame or more after the specified number of frames have been used as indicated by the number of frames on the film cartridge. However, those extra frames may be lost in processing. When you take important pictures, rewind the film when the film reaches the number of frames indicated on the film cartridge.

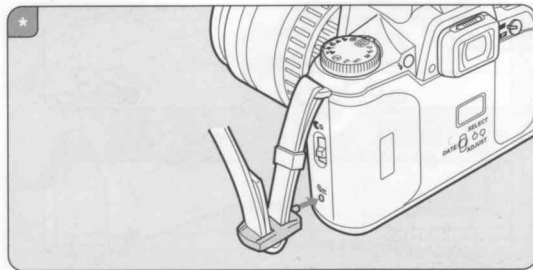


* Rewinding a film in mid-roll

If you wish to unload the film before exposing all the frames, use this function.


Set the main switch to the ON position, and then depress the mid-roll rewind button by using the protruding part of the strap clamp.

- Do not depress the button with an object having a sharp tip.
- Before opening the back cover, check that [] is blinking.

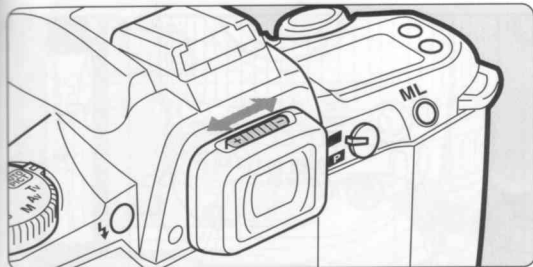

Aim the camera at a bright subject. While looking through the viewfinder, move the diopter adjustment lever to the left or right until the autofocus frame [C] appears in the sharpest focus.

II. BASIC OPERATION (SHOOTING)

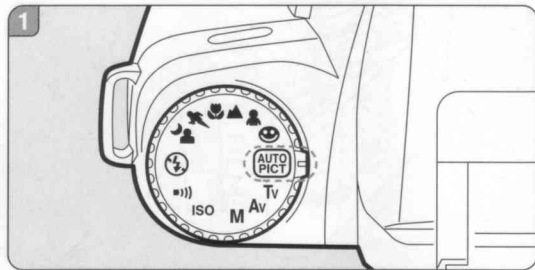


This Auto Picture Mode allows you to take pictures by simply depressing the shutter release button. In this mode, the camera automatically selects one of 5 picture modes according to the requirement of the scene.

How to set

1. Set the mode selection ring to the [**AUTO PICT**] position.
2. Turn the lens aperture ring to the [**A**] position.

- To move the lens aperture ring to the [**A**] position, turn the aperture ring while holding down the aperture-A lock button on the lens. The lens aperture ring can be released from the [**A**] position in the same manner.

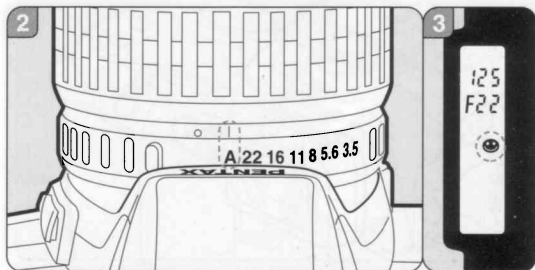

3. The selected picture mode is displayed in the viewfinder.

- The Auto Picture Mode operates only when an FA or F lens is attached. The Green Operation Mode operates only with an A-lens attached.
- See page 54 to 60 for any other exposure mode.
- The memory lock function or exposure compensation function cannot use when the Auto Picture Mode is in use.




Auto-popup flash function

1. Depress the flash mode button until [**FLASH AUTO**] appears on the LCD panel.


The auto-popup flash function operates only when the Auto Picture Modes or Picture Mode is set.

- The Built-in flash does not retract automatically.
- The built-in flash does not discharge when not required even though it has been in the up position.
- See page 32 for more details.
- (**FLASH AUTO**) cannot be cancelled with the Auto Picture Mode set.

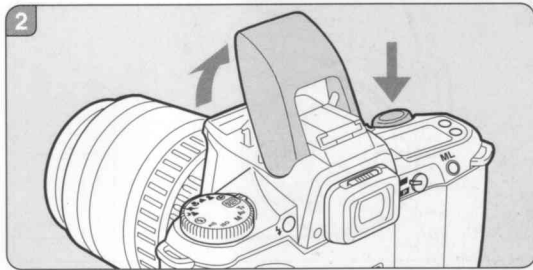

2. The built-in flash automatically pops up when depressing the shutter release button halfway down in the following conditions.


1. low light situation
2. backlit situation

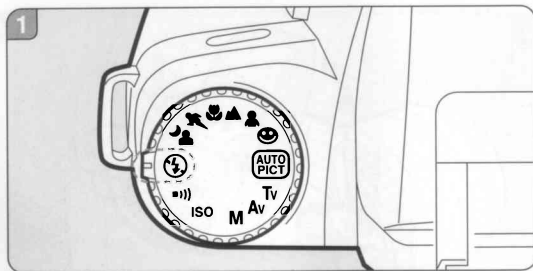

Flash Disable Mode

Use this mode if you don't want the built-in flash to pop-up automatically. The flash will not pop-up automatically even when it is dark nor lights when the flash is in the up position.

1. Set the mode dial to [⚡/].
2. [⚡/] appears on the LCD panel.

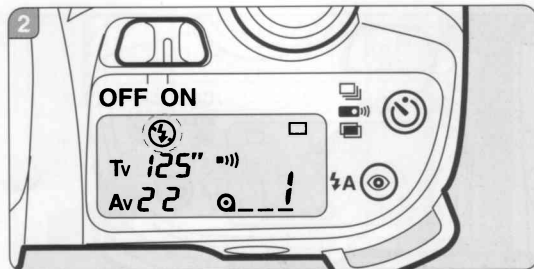


- From among 5 modes, the camera selects the best one depending on the size of the subject and some other factors. The flash disable mode is the same as the Auto Picture Mode except that the built-in flash does not pop up.
- In the flash disable mode, the external flash will not discharge either.
- When the lens aperture ring is set to other than [A] with the mode dial set to [⚡/], the Aperture-Priority AE Mode is automatically set.



Telephoto



Wide angle

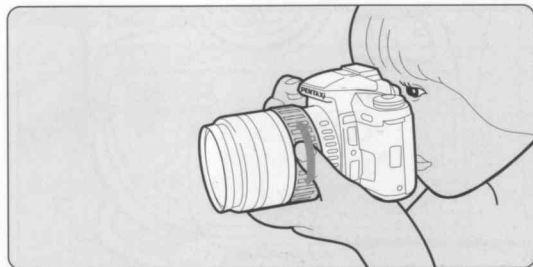

Turning the zoom ring to the right makes the subject appear larger (telephoto) and turning it to the left makes the subject appear smaller (wide angle).

- The Image Size Tracking Mode, Zoom Clip Mode, Auto Zoom Effect Mode and Power Zoom function do not operate with this camera even if an FA power zoom lens is attached.
- The smaller the number shown in the zoom scale window, the wider the angle. Conversely, the larger the number, the more magnified the image appears.