

Quick Guide

Phase One 645DF Camera System and IQ Series Digital Back

01. Content of Kit

02. Batteries

03. Power and Programs

04. ISO/WB and Toolbar

05. IQ Interface Essentials

06. Focus

07. Install Capture One

08. Tethered Shooting

09. Memory Card

10. Mount/Dismount Lens

11. Mount/Dismount Digital Back

12. CF – Custom Functions

13. Further Info – Memory Stick

01. Content of Kit

- Phase One 645DF body with IQ Digital Back
- Schneider Kreuznach 80mm f 2.8 LS Lens with lens hood and cap
- Waterproof roller case (with room for laptop computer)*
- 4.5 meter FireWire 800 cable
- 3m USB3 cable
- Multi-connector>minijack adapt. cable*
- Multi-connector sync cable*
- Capture One raw workflow software
- CF card installed*
- Grey card*
- Focusing screen or Viewfinder Masks
- Two Lens wraps*
- LCC Calibration kit
- Lens cast calibration plate 10x10cm*
- Sensor Cleaning Kit
- Lens cleaning cloth
- Digital back duo battery charger
- Battery charger power supply
- International outlet adaptors
- Digital back battery
- Additional digital back battery*
- CF card reader*
- Protection caps body, lens and back
- Phase One 645DF-HB multi-mount*
- Extra AA battery cassette for 645DF*

Start box

- USB key with User Guide, technical documents and more
- Quick Guide
- Warranty Brochure

* Value Added program only

02. Batteries

01. Charge batteries for back



02. Insert battery in back



03. Insert batteries in camera



03. Power and Programs

01. Power on camera



02. Power on back



03. Select single or continuous drive



04. Choose exposure mode



04. ISO/WB and Toolbar

01. Finding ISO and WB menu



02. Setting ISO



03. Toolbar: Slide finger up and down right side of screen for tool selection



04a. Toolbar: Press and hold tool icons and choose from the options to configure



04b. Configure toolbar list order by pressing the small white arrows

05. IQ Interface Essentials

01. Home: Press and hold button to return to the home screen from any display



02. Context Menu: Press icon in the bottom right corner to get extra options



03. Context Menu: Press and hold icons with white triangle to further configure



04. Zoom: Slide finger up and down the left side of screen



06. Focus

01a. Focus modes - Lenses with AF switch.



01b. Focus modes - Lenses with AF switch. Secondly, select AF/MF on




02. Focus mode - Lenses without AF switch.




07a. Install Capture One for Mac

01. Open License dialogue

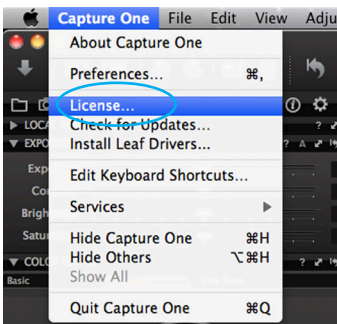


02. Activate License

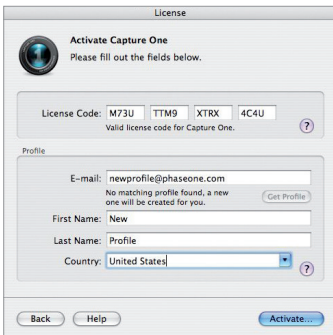A screenshot of the 'License' dialog box in Capture One. The dialog has a title bar that says 'License'. Below the title bar is a camera icon and the text 'Activate Capture One' and 'Please fill out the fields below.' There are four input fields for the License Code: 'M73U', 'TTM9', 'XTRX', and '4C4U'. Below these fields is the text 'Valid license code for Capture One.' and a question mark icon. Under the 'Profile' section, there are input fields for 'E-mail:' (containing 'newprofile@phaseone.com'), 'First Name:' (containing 'New'), 'Last Name:' (containing 'Profile'), and 'Country:' (a dropdown menu showing 'United States'). There is a 'Get Profile' button next to the E-mail field and a question mark icon next to the Country dropdown. At the bottom of the dialog are three buttons: 'Back', 'Help', and 'Activate...'.

07b. Install Capture One for Windows

01. Open License dialogue

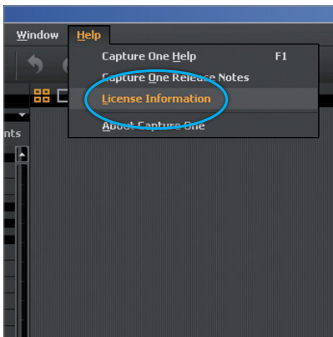

02. Activate License



License

Activate Capture One
Please fill out the fields below.

License Code:
Capture One PRO [What is a license code?](#)

Profile

E-mail:
User data retrieved from the profile

First Name:

Last Name:

Country: ▼


[Read more about Phase One profiles](#)

08. Tethered Shooting

01. Plug the FireWire 800 cable into the digital back



02. Plug the FireWire 800 cable into the back of your computer or laptop

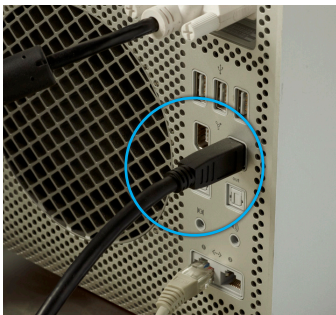

03. Use Capture Tab in Capture One 6



09. Memory Card

01. Open the hatch to the CF card slot



02. Press the button to eject CF card



10a. Mount/Dismount Lens

01. Dismount lens



02. Align white marks, mount lens



10b. Multi-mount Value Added program

03. Mount multi-mount



04. Align red marks to mount Carl Zeiss lens



05. Carls Zeiss on Phase One 645DF



PHASE **ONE**

11. Mount/Dismount Back

01. How to dismount back



02. DO NOT TOUCH



03. How to mount



12. Custom Functions

- C-00 – Select user configuration: A, B, C
- C-01 – TV/AV/Exp step: $\frac{1}{3}$, $\frac{1}{2}$ or 1 EV
- C-02 – Aperture setting after lens change
- C-03 – Time to sleep mode (def. 15 sec.)
- C-04 – Battery type (Alkaline or Nimh/
NiCD)
- C-05 – Auto Bracketing steps (3, 5 or 7)
- C-06 – Front/Rear dial function in
Manual mode
- C-07 – Disable rear dial in P mode
- C-08 – Dial function direction
- C-09 – AEL & AFL button exchange
- C-10 – Shutter half-press function
- C-11 – AEL function lock/unlock mode
- C-12 – AFL lock mode setting
- C-13 – One push function M-Mode
- C-14 – AF beam setting
- C-15 – Flash sync. timing
- C-16 – Beep
- C-17 – Choose shutter function (P, Av or
Tv mode)
- C-18 – SHutter function in Manual mode
- C-19 – AF Speed

- C-98 – Lens Firmware version
- C-99 – Camera body firmware version

12. Custom Functions

Words and letters on the camera's LCD are abbreviated due to limitations of space and available letters

Display examples of the main LCD

<i>On</i>	▶	ON
<i>OF</i>	→	OFF
<i>Err</i>	→	Error
<i>+</i>	→	+ (Plus)
<i>w</i>	→	Under
<i>a</i>	→	Over
<i>n</i>	→	Normal
<i>Loc</i>	→	Lock
<i>SELF</i>	→	Self Timer
<i>bulb</i>	→	bulb
<i>buSY</i>	→	Busy
<i>db</i>	→	Digital Back
<i>LS</i>	→	Lens Shutter
<i>CAP</i>	→	Capture
<i>rP</i>	→	Repeat
<i>TIME</i>	→	Time
<i>batt</i>	→	battery

In custom functions:

<i>SEL</i>	→	Selection
<i>StEP</i>	→	Step
<i>IrIS</i>	→	Iris
<i>HOLD</i>	→	Hold
<i>batt</i>	→	battery
<i>Shot</i>	→	Shot No.
<i>dF</i>	→	Dial function
<i>d.AC</i>	→	Dial action
<i>d.di</i>	→	Dial direction
<i>AEFL</i>	→	AE, AF lock
<i>HALF</i>	→	Half press
<i>AEL</i>	→	AE lock
<i>AFL</i>	→	AF lock
<i>OnEP</i>	→	One-push exposure
<i>AF.L</i>	→	AF assist light
<i>FLSY</i>	→	Flash sync
<i>bu</i>	→	Buzzer
<i>Sh.P</i>	→	Shutter in Program
<i>Sh</i>	→	Shutter in Manual
<i>AF.2</i>	→	AF second mode

13. Further Info – Memory Stick


01. Memory Stick



02. User Guide Capture One



03. User Guide Phase One 645DF and IQ Series digital back

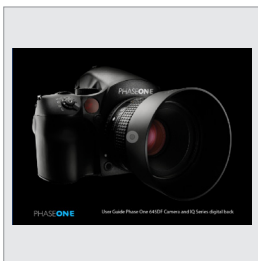

Part # 80064000

PHASE**ONE**