## OSD menu tree atructure



## The OSD Tree

Below is an overall view of the structure of the On-Screen Display. You can use this as reference when you want to later on work your way around the different adjustments.

First Level	Second Level	Third Level
LANGUAGE	ENGLISH ESPAÑOL FRANÇAIS DEUTSCH ITALIANO	
INPUT SIGNAL SELECTION (for 107P, 109P, 201P and 201B models only)		
ZOOM		
— ADJUST HORIZONTAL ————		
ADJUST VERTICAL	ADJUST POSITION ADJUST SIZE	
ADJUST SHAPE		
	- ADJUST SIDE ANGLES	TRAPEZOID PARALLELOGRAM
— ADJUST COLOR (for 1055, 1075, and 1095 models only)	9300K FOR GENERAL USE 6500K FOR GAME USER PRESET RED GREEN BLUE	
(for 1058 model only)	9300K FOR GENERAL USE 6500K FOR IMAGE MANAGEMENT USER PRESET RED GREEN BLUE	
(for 1078, 107P, 109B 109P, 201B, and 201P models only)	9300K FOR GENERAL USE 6500K FOR IMAGE MANAGEMENT 5500K FOR PHOTO RETOUCH USER PRESET RED GREEN BLUE	
	NO YES	
EXTRA CONTROLS (for 1055, 105B, 10) 107B, 107P, 1095, and 109B models on		
(for 2018 model only		
(for 109P and 201P models only)	DEGAUSS ADJUST MOIRE AUTO CALIBRATE ADJUST PURITY ADJUST CONVERGENCE	
CLOSE MAIN CONTROLS		

· Specifications are subject to change without prior notice.