

Service  
Service  
**Service**



# Service Manual

For repair information please refer to Service Manual of FR975/00/01C/17 & MX980D/37  
(service code number = 3104 215 50060)



FR994/00S & MX999/22S is equal to FR975/00 except the following:  
FR994/17 & MX999/37 is equal to FR975/17C except the following:

**Miscellaneous**

MX999/22S		MX999/37	
9965 000 11841	FRONT SPK SILVER MX999FS	9965 000 11856	FRONT SPK BLACK MX999FS
9965 000 11842	CENTER SPK SILVER MX999CS	9965 000 11857	CENTER SPK BLACK MX999CS
9965 000 11843	REAR SPK SILVER MX999RS	9965 000 11858	REAR SPK BLACK MX999RS
9965 000 11844	KEYHOLE BRACKET, MOUNTING	9965 000 11855	KEYHOLE BRACKET, MOUNTING
3104 219 04460	REMOTE CONTROL		
3104 217 06780	MDM 2000 V2 module		

**Electrical:**

Led 6401,6421 are deleted  
Led 6407,6408,6409,6410,6412,6413,6415,6416,6417,6418 red colour led  
is changed into orange colour led code number : 4822 130 11589

Item 7415 changed into TMP87CS71F - MX970 code number : 3139 110 53181  
Item 1301 changed into 1304 code number : 4822 265 11607  
Item 2371 changed into 2317 4n7 code number : 5322 126 10223  
Item 2372 changed into 2322 100p code number : 5322 122 32531  
Item 2373 changed into 2328 4n7 code number : 5322 126 10223  
Item 2374 changed into 2331 100p code number : 5322 122 32531  
Item 2375 changed into 2335 4n7 code number : 5322 126 10223  
Item 2376 changed into 2339 100p code number : 5322 122 32531

Mainstrafo 5001for FR994/00S changed into code number : 3104 218 31030  
Mainstrafo 5001for FR994/17changed into code number : 3104 218 31040

Mains Outled 1053 are deleted in FR994/00S  
Mains Outled 1054 are deleted in FR994/17

Copyright 2002 Philips Consumer Electronics B.V. Eindhoven, The Netherlands  
All rights reserved. No part of this publication may be reproduced, stored in a retrieval  
system or transmitted, in any form or by any means, electronic, mechanical, photocopying,  
or otherwise without the prior permission of Philips.



**Mechanical:** the following items are changed into:

Item	Code number	Description
200	3104 217 53350	FRONT ASSY FR994/00S
200	3104 217 53370	FRONT ASSY FR994/17
201	3141 017 74420	CAP END LEFT FR994/00S
201	3141 014 24480	CAP END LEFT FR994/17
202	3141 017 74430	CAP END RIGHT FR994/00S
202	3141 014 24490	CAP END RIGHT FR994/17
203	3141 017 74440	BUTTONS SURR. FR994/00S
203	3141 017 74280	BUTTONS SURR. FR994/17
205	3141 017 74450	BUTTONS TUNER FR994/00S
205	3141 017 74290	BUTTONS TUNER FR994/17
206	3141 017 74460	BUTTONS MENU FR994/00S
206	3141 017 74300	BUTTONS MENU FR994/17
207	3141 017 74600	BUTTONS BASS FR994/00S
207	3141 017 74580	BUTTONS BASS FR994/17
208	3141 017 74480	BUTTONS EASY LINK FR994/00S
208	3141 017 74320	BUTTONS EASY LINK FR994/17
209	3141 017 75200	RING SURR. FR994/00S
209	3141 014 24660	RING SURR. FR994/17
210	3141 014 24200	LIGHT GUIDE VIRTUAL/HALL
211	3141 014 24210	LIGHT GUIDE SELECTOR
212	3141 014 24290	LENS IR FR994/00S
212	3141 014 24650	LENS IR FR994/17
213	3141 017 74490	RING KNOB VOLUME FR994/00S
213	3141 014 24630	RING KNOB VOLUME FR994/17
214	3141 017 74500	RING KNOB SOURCE SEL.FR994/00S
214	3141 014 24640	RING KNOB SOURCE SEL. FR994/17
215	3141 017 74350	WINDOW DISPLAY ASSY FR994/00S
215	3141 017 74900	WINDOW DISPLAY ASSY FR994/17
222	3141 017 74520	KNOB VOLUME FR994/00S
222	3141 017 74360	KNOB VOLUME FR994/17
223	3141 017 74530	KNOB SOURCE SEL. FR994/00S
223	3141 017 74370	KNOB SOURCE SEL. FR994/17
224	3141 017 74540	KNOB MENU NAV FR994/00S
224	3141 017 74380	KNOB MENU NAV FR994/17
228	3139 247 50570	LEG SILVER
230	3139 247 50560	LEG BLACK
282	4822 535 10638	POWER ROD
283	3141 017 74550	POWER CAP FR994/00S
283	3141 017 74390	POWER CAP FR994/17
287	3104 211 29730	COVER PLATE SILVER FR994/00S
287	4822 442 01817	COVER PLATE BLACK FR994/17

EXPLODED VIEW

