

**Service  
Service  
Service****FR984/00S**

# Service Manual



For repair information please refer to Service Manual of FR965/00 & FR966/00S  
(servicecode number = 3104 215 50070)

FR984/00S & MX980/22S is equal to FR966/00S except the following:

**Miscellaneous:**

3104 219 04460	REMOTE CONTROL
9965 000 11845	FRONT SPEAKER SILVER MX980FS
9965 000 11846	GRILL ASSY FRONT/REAR SPEAKER
9965 000 11847	CENTER SPEAKER SILVER MX980CS
9965 000 11848	GRILL ASSY CENTER SPEAKERK
9965 000 11849	REAR SPEAKER SILVER MX980RS
9965 000 11844	KEYHOLE BRACKET , MOUNTING

**Electrical:**

Led 6401,6421 are deleted

Led 6407,6408,6409,6410,6412,6413,6415,6416,6417,6418 red colour led  
is changed into orange colour led code number : 4822 130 11589

uP 7415 changed into TMP87CS71F-MX970 code number : 3139 110 53181

Item 1301 changed into 1304 code number : 4822 265 11607

Item 2371 changed into 2317 4n7 code number : 5322 126 10223

Item 2372 changed into 2322 100p code number : 5322 122 32531

Item 2373 changed into 2328 4n7 code number : 5322 126 10223

Item 2374 changed into 2331 100p code number : 5322 122 32531

Item 2375 changed into 2335 4n7 code number : 5322 126 10223

Item 2376 changed into 2339 100p code number : 5322 122 32531

Mainstrafo 5001 changed code number : 3104 218 31020

Mains Outled 1053 are deleted

Copyright 2002 Philips Consumer Electronics B.V. Eindhoven, The Netherlands

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

**PHILIPS**

**Mechanical:** the following items are changed into:

Item	Code number	Description
200	3104 217 53330	FRONT CABINET ASSY FR984
201	3141 017 74420	CAP END LEFT ASSY
202	3141 017 74430	CAP END RIGHT ASSY
203	3141 017 74440	BUTTON ASSY SURROUND
205	3141 017 74450	BUTTON ASSY TUNER
206	3141 017 74460	BUTTON ASSY MENU
207	3141 017 74600	BUTTON ASSY BASS
208	3141 017 74480	BUTTONS EASY LINK ASSY
209	3141 017 75200	RING SURROUND ASSY
210	3141 014 24200	LIGHT GUIDE VIRTUAL/HALL
211	3141 014 24210	LIGHT GUIDE SELECTOR
212	3141 014 24290	LENS IR
213	3141 017 74490	RING KNOB VOLUME ASSY
214	3141 017 74500	RING KNOB SOURCE SEL.
215	3141 017 74350	WINDOW DISPLAY ASSY
222	3141 017 74520	KNOB VOLUME ASSY
223	3141 017 74530	KNOB SOURCE SEL. ASSY
224	3141 017 74540	KNOB MENU NAV ASSY
228	3139 247 50570	LEG SILVER
230	3139 247 50560	LEG BLACK
282	4822 535 10638	POWER ROD
283	3141 017 74550	POWER CAP ASSY

EXPLODED VIEW

