

Service
Service
Service



Service Manual



Introduction of FW-C788/30

For Service documentation please refer to Service Manual FW-C788/21/21M/37 - 3139 785 30016.

FW-C788/30 refers to FW-C788/21 with the following adaptations:


1. Mechanical & Accessories

- Change 0385 2422 070 98148 Δ Mains Cord
- 5001 3139 118 32570 Δ Mains Transformer
- Delete 0386

- Delete 1902, 1903, 1904, 2903, 3906, 3907, 5901, 6907, 6908, 6909, 7901, 7902

2. P2002 110/135W Module - Mains Board

- Add 3902 4822 053 10471 470R 5% 1W
- 5900 4822 157 11832 Δ 400uH 3A
- 6900 4822 130 31878 1N4003G
- Change 2912 4822 124 21913 1uF 20% 63V
- 3905 4822 116 52244 15k 5% 0,5W
- 5903 3103 308 30610 Δ Standby Transformer
- 6901 4822 130 31878 1N4003G
- 6902 4822 130 31878 1N4003G
- 6903 4822 130 31878 1N4003G
- 6904 4822 130 31878 1N4003G

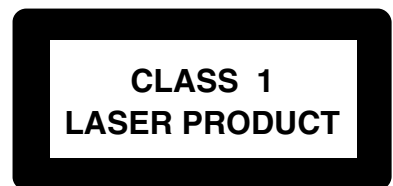

© Copyright 2002 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by BB 0212 Service Audio Printed in The Netherlands Subject to modification



3139 785 30032

Version 1.0



PHILIPS