

Service  
Service  
Service



# Service Manual



**Introduction of FW-C399/25/30/34**

For Service documentation please refer to FW-C399 Service Manual 12NC: 3139 785 30031

**FW-C399/25** refers to FW-C399/22 except the following adaptations:

385 2422 070 98147 Mains Cord

**FW-C399/30** refers to FW-C399/22 except without RDS/NEWS and the following adaptations:

1. Mechanical & Accessories

101	3139 118 17081	Cabinet Front
128	3139 118 16750	Window Display
142	Deleted	
256	3139 114 73140	Panel Rear
385	2422 070 98148	Mains Cord
387	3139 115 21120	Instruction For Use

2. Front Board

Delete 1425, 1427, 1433, 2449 - 2455, 2479, 3510, 3530, 3576 - 3580, 5403, 6426, 7401  
 2400 4822 124 41584 100uF 20% 10V  
 3432 4822 116 80176 1R 5% 0,5W  
 3433 4822 116 80176 1R 5% 0,5W  
 3511 4822 051 30103 10k 5% 0,062W  
 3581 4822 051 30103 10k 5% 0,062W


3. It refers to ECO6 Tuner Board - System Non-Cenelec /01 version.

**FW-C399/34** refers to FW-C399/22 except the following adaptations:

1. Accessories

387 3139 115 21240 Instruction For Use

3. It refers to ECO6 Tuner Board - System Non-Cenelec /14 version.

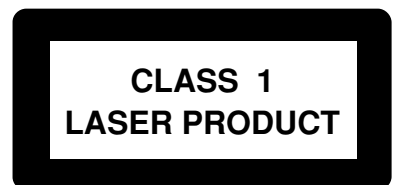

© Copyright 2002 Philips Consumer Electronics B.V. Eindhoven, The Netherlands  
 All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by KC 0208 Service Audio Printed in The Netherlands Subject to modification



3139 785 30058

Version 1.0



**PHILIPS**