

Service
Service
Service



Service Manual




Introduction of MZ-9/22

For Service documentation please refer to Service Manual MZ7/22/37 - 3139 115 50140.

MZ-9/22 refers to MZ7/22 with the following adaptations:

1. Mechanical & Accessories

Add	0255	3139 114 67370	Bracket CDC Left	Change	0129	3139 118 18050	Button Set Source
	0256	3139 114 67380	Bracket CDC Right		0130	3139 118 18060	Button Set Clock/Timer
Change	0101	3139 118 17950	Cabinet Front		0131	3139 118 18070	Button Set Control
	0105	3139 118 17960	Panel Front CDC		0132	3139 118 18080	Button Set Record
	0109	3139 118 17970	Button Set Open/Close		0133	3139 118 18090	Button IS/Loudness
	0110	3139 118 17980	Button Set NEWS/RDS		0135	3139 118 18100	Knob Volume
	0112	3139 118 17990	Cover Tray CDC		0136	3139 118 18200	Ring Knob Volume Foil
	0115	3139 118 18000	Button CDC Select		0137	3139 118 18110	Knob Bass/Treble
	0124	3139 118 18320	Lens Window Display		0158	3139 118 18120	Cover Cassette Left
	0125	3139 118 18010	Panel Front Display Left		0159	3139 118 18130	Cover Cassette Right
	0126	3139 118 18020	Panel Front Display Right		0259	3139 114 76060	Cabinet Rear
	0127	3139 118 18030	Panel Front Display Center		0350	3139 118 79840	L/R Loudspeaker Box
	0128	3139 118 18040	Button Standby/On		0387	3139 115 21510	Instruction For Use

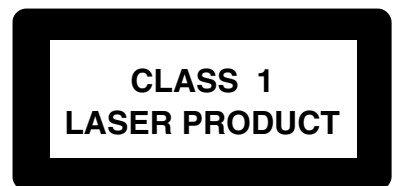

© Copyright 2002 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by BB 0213 Service Audio Printed in The Netherlands Subject to modification



3139 785 30064

Version 1.0



PHILIPS