

Service  
Service  
**Service**

**Product Service Group CE Audio**

# Service Information

## **SPARE PART CODENUMBERS FOR SERVICE CATEGORY I PRODUCTS**

**This publication gives a survey of service spareparts for those typenumbers for which no service manual has been published.**



MODEL	AERIAL	BATTERY COVER	CASSETTE DOOR SPRING	CASSETTE DOOR	VOLUME CONTROL	TRANSFORMER	HEADPHONE SOCKET	MISCELLANEOUS
AE1000	9965 000 03271	9965 000 03262			4822 101 11476			HANDLE SPEAKER 8 OHM 9965 000 03263 9965 000 03270
AE1505	9965 000 04070	9965 000 04071			9965 000 04073		9965 000 04069	HANDLE SPEAKER 8 OHM 9965 000 04072 9965 000 04068
AE1595	4822 303 14019	4822 443 10344			4822 101 11476		4822 267 31921	SPEAKER 2.25" 8 OHM 4822 240 10145
AE1605	9965 000 07190	9965 000 07191			9965 000 07189			SPEAKER 2.25" 8 OHM HANDLE CLIP 9965 000 07188 9965 000 07192
AE2045	4822 303 14057	4822 443 10552			4822 101 11458	120V	4822 267 31468	HANDLE PUSH SWITCH SPEAKER RD102 8 OHM 4822 468 10586 4822 276 13763 4822 240 10207
AE2110	4822 303 14079	4822 442 01735					4822 267 31921	DC JACK HANDLE SPEAKER 3.5" 8 OHM 4822 267 31966 4822 498 10725 4822 240 10349
AE2140	4822 303 14018 (non swirr) 4822 303 14057 (swirr)	4822 443 10326			4822 101 11458	120/230V 120V 230V	4822 267 31468	HANDLE IC TA7368P SPEAKER RD102 PUSH SWITCH 4822 498 10586 4822 209 62192 4822 240 10142 4822 276 13763 4822 265 20706 4822 267 30738 4822 277 21794
AE2145	4822 303 14057 (swirr)	4822 443 10326			4822 101 11458	120V	4822 267 31468	HANDLE IC TA7368P SPEAKER RD102 PUSH SWITCH 4822 498 10586 4822 209 62192 4822 240 10142 4822 276 13763 4822 265 20706
AE2150	4822 303 14079	4822 442 01735					4822 267 31921	AC/DC ADAPTOR 120V UL AC/DC ADAPTOR 230V AC/DC ADAPTOR 240V UK DC JACK HANDLE SPEAKER 3.5" 8 OHM 4822 219 10663 4822 219 10658 4822 219 10662 4822 267 31966 4822 498 10725 4822 240 10349
AE2170		4822 442 01715						BAND SWITCH KNOB BATT DOOR SHIELDING CLOCK MODULE RING HANDLE INSULATOR BAND SWITCH SPEAKER 2.5" 8 OHM 4822 410 12242 4822 466 12156 4822 532 13117 4822 498 10723 4822 532 13116 4822 240 10347

MODEL	AERIAL	BATTERY COVER	CASSETTE DOOR SPRING	CASSETTE DOOR	VOLUME CONTROL	TRANSFORMER	HEADPHONE SOCKET	MISCELLANEOUS
AE2180		4822 442 01715						BAND SWITCH KNOB 4822 410 12242 BATT DOOR SHIELDING 4822 466 12156 CLOCK MODULE RING 4822 532 13117 HANDLE 4822 498 10735 INSULATOR BAND SWITCH 4822 532 13116 SPEAKER 2.5" 8 OHM 4822 240 10347
AE2340	4822 303 30481	4822 423 41271			4822 101 30869	220V 4822 146 31435		SPEAKER D92 8 OHM 1W 4822 240 30728 TACT SWITCH 4822 276 13576
AE2380	9965 000 02254	9965 000 02230			9965 000 02253	230V 9965 000 02197	4822 267 31921	HANDLE 9965 000 22310 SPEAKER 9965 000 02252 SWITCH-POWER 9965 000 02251 SWITCH-SLEEP 9965 000 02250
AE2630	4822 303 30348	4822 423 41226			4822 101 21228 4822 101 30823	220V 4822 146 30763 240V 4822 146 30791	4822 267 30332	IC TAT368P 4822 209 62192 IC TEA5713/N2 4822 209 31065 ON/OFF SWITCH 4822 276 10991 SPEAKER 3" 8 OHM 4822 240 30662
AE3350	4822 526 10618	4822 426 60658			4822 101 40171			ANTENNA CONTACT 4822 290 81702 IC CXA1019S 4822 209 15034 SPEAKER 2" 4 OHM 4822 240 30741 SUPPORTER 4822 417 11246 TUNING KNOB 4822 413 41904 VOLUME KNOB 4822 413 41905
AE6360		4822 443 10497			4822 101 30872			HEADPHONE AY3677/09 9965 000 07194
AE6370		9965 000 07193			4822 101 11457		4822 267 31862	
AE6565		9965 000 01981			4822 101 11457		4822 267 31862	SPEAKER 7 OHM 4822 240 10141
AE6570		9965 000 01981			4822 102 10472		4822 267 31836	DISPLAY 4822 135 00051 HEADPHONE AY3655 4822 242 10423 RUBBER KEYPAD 4822 410 10534 ZEBRA CONDUCT RUBBER 4822 466 10677
AE6745		4822 423 41275						LCD DISPLAY LD-B5124 4822 130 91438 RUBBER KEY PAD 4822 410 90175 SPEAKER 40MM 4822 240 30732 ZEBRA CONDUCT RUBBER 4822 466 10677
AE6750		4822 423 41275			4822 102 10472		4822 267 31836	
AE6775		4822 442 01891			4822 101 11457		4822 267 31862	EARPHONE AY3656 4822 242 11054

MODEL	AERIAL	BATTERY COVER	CASSETTE DOOR SPRING	CASSETTE DOOR	VOLUME CONTROL	TRANSFORMER	HEADPHONE SOCKET	MISCELLANEOUS
AE6780		4822 442 01891			4822 101 11457		4822 267 31862	EARPHONE AY3656 SPEAKER 40MM 7 OHM
AJ3000		4822 442 01756			4822 101 21256			SPEAKER 32 OHM TACT SWITCH (HOR) TACT SWITCH (VER)
AJ3005 (AJ3016) (AJ3017) (AJ3018) (AJ3019)		4822 442 01756			4822 101 21256			AC/DC 120-230V/7.5V AC/DC 120V/7.5V 250MA AC/DC 230V/7.5V 250MA AC/DC 240V/7.5V 250MA SPEAKER 32 OHM TACT SWITCH (HOR) TACT SWITCH (VER)
AJ3010		9965 000 06622			9965 000 06624	230V VDE 9965 000 06625 240V BS 9965 000 07072 120V UL 9965 000 06626 230V ARG 9965 000 07810		SPEAKER 2.5" 8 OHM 0.5W 9965 000 06623
AJ3080		4822 423 41163			4822 101 21256	120V 4822 146 10954 230V 4822 146 10994 240V AUS 4822 146 11059 240V BS 4822 146 11029 240V WHI 4822 146 11033		DISPLAY LTC-637D1P-W IC LM8560 SPEAKER 8 OHM TACT SWITCH
AJ3120		9965 000 06681			9965 000 06683	230V VDE 9965 000 06684 240/05 BS 9965 000 07434 230V ARG 9965 000 07809 120V UL 9965 000 06685		SPEAKER 2.5" 8 OHM 9965 000 06682
AJ3130		3140 114 29480			4822 101 21256	230V 3140 118 32460 120/230V 3140 118 32470		DISPLAY LTC-637D1G-W IC LM8560B SPEAKER 8 OHM TACT SWITCH
AJ3140 (AJ3141) (AJ3142) (AJ3143) (AJ3144)		4822 423 41163			4822 101 21256	120/230V 4822 146 31456 120V UL 4822 146 10451 120V WHI 4822 146 10452 230V VDE 4822 146 10448 230V WHI 4822 146 10706 240V 4822 146 10514 240V WHI 4822 146 10679		DISPLAY LTC637D1G-W IC LM8562 KNOB CLOCK FUNCTION KNOB CLOCK WHI SPEAKER 2.5" 8 OHM TACT SWITCH VOLTAGE SELECTOR
AJ3145		4822 423 41163			4822 101 21256	120V UL 4822 146 10451 230V VDE 4822 146 10448		DISPLAY LTC637D1G-W IC LM8562 SPEAKER 2.5" 8 OHM TACT SWITCH

MODEL	AERIAL	BATTERY COVER	CASSETTE DOOR SPRING	CASSETTE DOOR	VOLUME CONTROL	TRANSFORMER	HEADPHONE SOCKET	MISCELLANEOUS
AJ3190		4822 423 41163			4822 101 21256	230V 4822 146 10994 120/230V 4822 146 11035 240V BS 4822 146 11029		DISPLAY LTC-637D1P-W 4822 130 90498 IC LM8560B 4822 209 71497 SPEAKER 8 OHM 4822 240 10276 TACT SWITCH 4822 276 13577 VOLTAGE SELECTOR 4822 272 10366
AJ3195		4822 423 41163			4822 101 21256	230V 4822 146 10994 120/230V 4822 146 11035		CRYSTAL 3.276MHZ 4822 242 10966 DISPLAY LTC-637D1P-W 4822 130 90498 IC LM8560B 4822 209 71497 IC MC14013BCP 4822 209 17021 ICMC14060BCP 4822 209 16943 SPEAKER 8 OHM 4822 240 10276 TACT SWITCH 4822 276 13577 VOLTAGE SELECTOR 4822 272 10366
AJ3220		9965 000 06711			9965 000 06712	120V UL 9965 000 06713 230V VDE 9965 000 07074 230V ARG 9965 000 07812		SPEAKER 2.5" 8 OHM 9965 000 06623
AJ3225		9965 000 06711			9965 000 07811	230V VDE 9965 000 07074 240V BS 9965 000 08026 120VUL 9965 000 06713		SPEAKER 2.5" 8 OHM 9965 000 08025
/05								SPEAKER 2.5" 8 OHM 9965 000 06623
AJ3290		4822 423 41163			4822 101 21256	120/230V 4822 146 11035 230V 4822 146 10994 240V BS 4822 146 11029		DISPLAY LTC637D1G-W 4822 130 90817 IC LM8562 4822 209 32851 SPEAKER 8 OHM 4822 240 10276 TACT SWITCH 4822 276 13577 VOLTAGE SELECTOR 4822 272 10366
AJ3380		4822 423 41163			4822 101 11868	120/230V 4822 146 10998 120V 4822 146 10955 230V 4822 146 10995 240V 4822 146 11072		DISPLAY 1.4" GREEN 4822 135 00182 DISPLAY 1.4" RED 4822 135 00216 IC LM8562 4822 209 32851 SPEAKER 77MM 8 OHM 4822 240 10041 TACT SWITCH 4822 276 13577 VOLTAGE SELECTOR 4822 272 10366
AJ3430					9965 000 05552	230V VDE 9965 000 05553 120V UL 9965 000 05554		LCD DISPLAY 9965 000 05550 SPEAKER 1.5" 16 OHM 9965 000 05551 TACT SWITCH 9965 000 02251
AJ3480		4822 423 41163			4822 101 11868	120/230V 4822 146 10998 120V 4822 146 10955 230V 4822 146 10995 240V 4822 146 11072		DISPLAY 1.4" GREEN 4822 135 00182 DISPLAY 1.4" RED 4822 135 00216 IC LM8562 4822 209 32851 SPEAKER 77MM 8 OHM 4822 240 10041 TACT SWITCH 4822 276 13577 VOLTAGE SELECTOR 4822 272 10366

MODEL	AERIAL	BATTERY COVER	CASSETTE DOOR SPRING	CASSETTE DOOR	VOLUME CONTROL	TRANSFORMER	HEADPHONE SOCKET	MISCELLANEOUS
AQ4050	4822 158 60656	4822 423 41283	4822 492 42776	4822 443 10298	4822 100 30197	120V 240V 4822 146 10484 4822 146 10485	4822 265 10593	AC SOCKET VDE CASSETTE DOOR LENS CASSETTE SPRING L CASSETTE SPRING R E. HEAD EJECT SLIDER HANDLE MAIN BELT MOTOR R/P HEAD ROLLER ARM ASSY SPEAKER 3" 8 OHM 4822 267 31922 4822 450 10124 4822 492 71705 4822 492 71706 4822 249 40306 4822 403 71219 4822 498 10579 4822 358 31336 4822 261 21641 4822 249 10486 4822 403 20244 4822 240 10136
AQ4150	4822 158 60656	4822 423 41283	4822 492 42776	4822 443 64508	4822 100 30197	120/230V 230V 240V 4822 146 31478 4822 146 31476 4822 146 31479	4822 267 31923	AC SOCKET VDE CASSETTE DOOR LENS CASSETTE SPRING L CASSETTE SPRING R EJECT SLIDER E. HEAD HANDLE MAIN BELT MOTOR EG-630AD-6B R/P HEAD ROLLER ARM ASSY SPEAKER 4" 8 OHM 4822 267 31922 4822 381 12108 4822 492 71705 4822 492 71706 4822 403 71219 4822 249 40306 4822 498 70129 4822 358 31336 4822 361 21641 4822 249 10486 4822 403 20244 4822 240 30757
AQ4150/.S	4822 303 14031	4822 442 01893		4822 443 11263				EJECT SLIDER HANDLE MAIN BELT PINCH ROLLER ARM PINCH ROLLER ASSY 4822 403 70968 4822 498 10741 4822 358 10233 4822 528 70849 4822 528 70695
AQ4460	3140 118 71480	3140 114 21550	4822 492 70231	3140 114 21540	2122 373 00014	120/230V 3140 118 32240		ARM-HANDLE(L) ARM-HANDLE(R) DAMPER ASSY EJECT SLIDER HEAD - ERASE HEAD - R/P LENS-CASS DOOR MAIN BELT 42.3X1.2 MICROPHONE MOTOR SPEAKER 8 OHM D4 SPEAKER 32 OHM D3 3140 114 25270 3140 114 25280 4822 529 10322 4822 403 70968 4822 249 40306 4822 249 10565 3140 113 21600 9965 000 00678 4822 242 10786 4822 361 21641 8240 008 67110 8240 008 67120

MODEL	AERIAL	BATTERY COVER	CASSETTE DOOR SPRING	CASSETTE DOOR	VOLUME CONTROL	TRANSFORMER	HEADPHONE SOCKET	MISCELLANEOUS
AQ5050	4822 303 30425	4822 423 41225	4822 492 42745	4822 443 64397	4822 105 11149	120V 4822 146 31451 230V 4822 146 31113 240V BS 4822 146 31114 240V SAA 4822 146 10753		CASSETTE DOOR LENS 4822 450 62402 DC MOTOR 4822 361 21529 ERASE HEAD 4822 249 40288 MAIN BELT 4822 358 31324 R/P HEAD 4822 249 10508 ROLLER ARM ASSY 4822 403 40244 SPEAKER 4" 8 OHM 4822 240 30737
AQ5055	4822 303 30425	4822 423 41225	4822 492 42745	MX 4822 443 10176 PHI 4822 443 10243	4822 105 11149	230V 4822 146 31113 240V BS 4822 146 31114		CASSETTE DOOR LENS 4822 381 11682 DC MOTOR 4822 361 21529 ERASE HEAD 4822 249 40288 MAIN BELT 4822 358 31324 R/P HEAD 4822 249 10508 ROLLER ARM ASSY 4822 403 40244 SPEAKER 4" 8 OHM 4822 240 30737
AQ5150	4822 303 14003	4822 423 41284	4822 492 42775	4822 443 64509	4822 100 30195 4822 100 30196	120/230V 4822 146 31477 230V 4822 146 31475	4822 267 31921	AC SOCKET VDE 4822 267 31891 CASSETTE DOOR LENS 4822 381 11621 EJECT HOOK A 4822 403 70968 ERASE HEAD 4822 249 40306 HANDLE 4822 498 70131 MAIN BELT 4822 358 31257 MOTOR EG-530-AD-9F 4822 361 21765 R/P HEAD MS15R-AA-2N1 4822 249 10397 ROLLER ARM ASSY 4822 528 70695 SPEAKER 4" 8 OHM 4822 240 30756
AQ5150/..P		4822 423 41284		4822 443 10293				CASSETTE DOOR LENS 4822 450 10117
AQ5150/..S		4822 442 01892		4822 443 11262				CASSETTE DOOR LENS 4822 381 12107 HANDLE 4822 498 10739
AQ5160	4822 303 14058	4822 443 10569	4822 492 11401	4822 443 10568	4822 101 11744 4822 101 11745 (BAL)	4822 146 10759	4822 277 21794	CASSETTE DOOR LENS 4822 450 10296 CONDENSER MICROPHONE 4822 242 10046 DAMPER ASSY 4822 529 10257 E. HEAD 4822 249 40306 EJECT HOOK A 4822 403 70968 HANDLE 4822 498 10642 LEAF SPRING 4822 492 11399 LEAF SWITCH 4822 278 90663 MAIN BELT A 4822 358 31257 MANS CABLE SBC1201 4822 321 10249 MOTOR 4822 361 21765 MOTOR PULLEY 4822 528 81497 PINCH ROLLER ARM 4822 528 70849 PINCH ROLLER ASSY 4822 528 70695 R/P HEAD 4822 249 30218 SOCKET MAINS 4822 265 20318 SPEAKER 105MM 4 OHM 4822 240 10215 SUB BELT 4822 358 31124



MODEL	AERIAL	BATTERY COVER	CASSETTE DOOR SPRING	CASSETTE DOOR	VOLUME CONTROL	TRANSFORMER	HEADPHONE SOCKET	MISCELLANEOUS
AQ5460	3140 118 71480	4822 443 11219	4822 492 42709	4822 443 11218	4822 101 21163 4822 101 11963	120/230V 4822 146 11159	4822 265 11317	BELT-F.F. BELT-MAIN DAMPER ASSY HEAD, ERASE HEAD, R/P LENS-CASS DOOR MAINS SOCKET MICROPHONE MOTOR POWER SWITCH PULLEY-MOTOR ROLLER ARM ASSY SLIDER-EJECT SPEAKER SWITCH-LEAF TA8227P VOLTAGE SELECTOR
AQ6340		4822 443 10279	4822 492 11097	4822 443 10278	4822 100 20868		4822 265 10504	CASSETTE DOOR LENS COUNTER COUNTER BELT DC JACK E. HEAD MIC MOTOR PHONE JACK (BLACK) R/P HEAD PUSH SWITCH SW1 SLIDE SWITCH SW2 SLIDE SWITCH SW5 SLS KONB SPEAKER 36MM 8 OHM SPEAKER GRILLE SWITCH CONTACT TAPE DECK VZRS KNOB
AQ6345 (AQ6346)		9965 000 03639	9965 000 03642	9965 000 03640	9965 000 03646		9965 000 03649	CASS DOOR LENS TAPE COUNTER MU345-003 COUNTER BELT SPEAKER 36MM 8 OHM CONDENSOR MIC 3.5MM MONO PHONE JACK CASS DECK HT23-16

MODEL	AERIAL	BATTERY COVER	CASSETTE DOOR SPRING	CASSETTE DOOR	VOLUME CONTROL	TRANSFORMER	HEADPHONE SOCKET	MISCELLANEOUS
AQ6355		4822 443 10766	4822 492 11454	4822 443 10767	4822 100 11349	120/230V 230V 4822 146 10838 4822 146 20997	4822 265 11029	BELT COUNTER CASSETTE DOOR LENS CONDENSER MIC E. HEAD JACK MIC (BLACK) LOUDSPEAKER MAIN BELT MOTOR EG-530AD-6F R/P HEAD SUB BELT TAPE COUNTER VOLTAGE SELECTOR
AQ6455		4822 443 10783	4822 492 11483	4822 443 10784	4822 105 11128 4822 100 20874 (TONE)	120/230V 230V 4822 146 10857 4822 146 31231	4822 265 11029	BELT COUNTER CASSETTE DOOR LENS CONDENSER MIC DAMPER ASSY E. HEAD IC TDA1904 JACK MIC (BLACK) LOUDSPEAKER MAIN BELT MOTOR MMIN-6S9RX R/P HEAD SUB BELT TAPE COUNTER VOLTAGE SELECTOR
AQ6481		4822 443 10585	4822 492 11406	PHI 4822 443 10664 MUX 4822 443 10584	4822 101 11429		4822 267 31862	CASSETTE DOOR COVER BELT CLIP CASS MECHANISM MCT-7 CASSETTE LENS DC JACK EARPHONE AY3650
AQ6482	(BLUE)	4822 443 10585 4822 443 10805	4822 492 11406	4822 443 10718	4822 101 11783		4822 267 31862	CASSETTE DOOR COVER BELT CLIP BELT CLIP (BLUE) CASS MECHANISM MCT-7 DC JACK EARPHONE AY3650
AQ6483		4822 443 10585	4822 492 11406	4822 443 10717	4822 101 11429		4822 267 31862	CASSETTE DOOR COVER 3 BAND EQ BLOCK BELT CLIP CASS MECHANISM MCT-7 DC JACK EARPHONE AY3650

MODEL	AERIAL	BATTERY COVER	CASSETTE DOOR SPRING	CASSETTE DOOR	VOLUME CONTROL	TRANSFORMER	HEADPHONE SOCKET	MISCELLANEOUS
AQ6485		4822 443 10899			4822 101 11865		4822 267 31861	BELT CLIP DC JACK EARPHONE AY3660/10 IC MM1104CF TAPE DECK TN-8S-131
AQ6487		4822 442 01053	4822 492 11463	4822 443 10803			4822 265 10949	BELT CLIP DC JACK MOTOR PULLEY MOTOR RF-410CA 2V PLAY HEAD P-5044 TAPE DECK TN-44-102
AQ6491		4822 442 01739			4822 101 11429		4822 267 31862	BELT CLIP CASS MECHANISM MCT-7 EARPHONE AY3640/17 EARPHONE AY3650
AQ6492		4822 442 01739			4822 101 11429		4822 267 31862	BELT CLIP CASS MECHANISM MCT-7 EARPHONE AY3650
AQ6511 (AQ6512) (AQ6513) (AQ6514)		4822 443 11076			4822 101 11429		4822 267 31862	BELT CLIP CASS MECHANISM MCT-7 EARPHONE AY3650
AQ6547	BLUE GREEN LIME SILVER	4822 443 10378 4822 443 10703 4822 443 10709 4822 443 10714 4822 442 10712	4822 492 42743	4822 443 10382 4822 443 10702 4822 443 10711 4822 443 10715 4822 443 10713	4822 101 11429		4822 442 00445	BELT CLIP BELT CLIP (BLUE) BELT CLIP (GREEN) BELT CLIP (LIME) BELT CLIP (SILVER) CASS DOOR COVER CASS DOOR LENS CASSETTE DECK MCT-7 DC JACK RUBBER CONDUCTOR
AQ6560		4822 443 10308	4822 492 42743	PHI 4822 459 04171 MVX 4822 449 80074	4822 101 11429		4822 267 31862	BELT CLIP CASS DOOR SPRING PLATE CASS MECHANISM
BLUE		4822 443 10452	4822 492 11336	PHI 4822 443 10465				BELT CLIP (BLUE)

MODEL	AERIAL	BATTERY COVER	CASSETTE DOOR SPRING	CASSETTE DOOR	VOLUME CONTROL	TRANSFORMER	HEADPHONE SOCKET	MISCELLANEOUS
AQ6567 (AQ6603) (AQ6604) (AQ6605) (AQ6606)	BLUE GREEN LIME SILVER	4822 443 10378 4822 443 10703 4822 443 10709 4822 443 10714 4822 443 10712	4822 492 42743	4822 443 10379 4822 443 10702 4822 443 10711 4822 443 10715 4822 443 10713	4822 101 11429		4822 267 31862	BELT CLIP BELT CLIP (BLUE) BELT CLIP (GREEN) BELT CLIP (LIME) BELT CLIP (SILVER) CASS COVER (SILVER) CASS COVER (SILVER) CASS DOOR COVER CASS DOOR LENS CASS DOOR LENS (SILVER) CASSETTE DECK MCT-7 DC JACK RUBBER CONDUCTOR
AQ6581		4822 443 10897			4822 101 11429		4822 267 31862	BELT CLIP CASS MECHANISM MCT-7 EARPHONE AY3640/17
AQ6582		4822 442 01714	4822 492 11727	4822 443 11144	4822 101 11429		4822 267 31862	BELT CLIP (GREY) CASSETTE DECK MCT-7 EARPHONE AY3650
AQ6583		4822 443 10897			4822 101 11429		4822 267 31862	BELT CLIP CASS MECHANISM MCT-7 DC JACK EARPHONE AY3650
AQ6585		4822 443 10907			4822 101 11865		4822 267 31861	BELT CLIP DC JACK TC18-077 EARPHONE AY3660/10 IC MM1104CF TAPE DECK TN-8S-131
AQ6587		4822 442 00923	4822 492 11419	PHI 4822 443 10663 MVX 4822 443 10662	4822 101 11768		4822 265 10949	BELT CLIP DC JACK MOTOR PULLEY MOTOR RF-410CA 2V PLAY HEAD P-5044 TAPE DECK TN-44-102
AQ6588		4822 442 00923	4822 492 11419	4822 443 10721			4822 265 10949	BELT CLIP DC JACK MOTOR PULLEY MOTOR RF-410CA 2V PLAY HEAD P-5044 TAPE DECK TN-44-102
AQ6591		9965 000 03651	9965 000 03653	9965 000 03652	4822 101 11429		4822 267 31862	BELT CLIP TAPE DECK MCT-7

MODEL	AERIAL	BATTERY COVER	CASSETTE DOOR SPRING	CASSETTE DOOR	VOLUME CONTROL	TRANSFORMER	HEADPHONE SOCKET	MISCELLANEOUS
AQ6598		9965 000 02824	9965 000 02825	9965 000 02823	4822 101 11429		4822 267 31862	9965 000 02826 9965 000 02827 9965 000 02828  4822 401 11734 4822 450 10497 4822 691 10516 4822 265 10662 4822 242 10745
AQ6681		4822 443 10928	4822 492 11618	4822 443 10929	4822 101 11429		4822 267 31862	BELT CLIP DC JACK TAPE DECK TN-44-106  BELT CLIP CASS DOOR LENS CASS MECHANISM MCT-7 DC JACK EARPHONE AY3650
AQ6682		4822 443 10928	4822 492 11775	4822 443 11257	4822 101 11429		4822 267 31862	BELT CLIP CASS MECHANISM MCT-7 DC JACK EARPHONE AY3640/17 LOCK BUTTON PRESET KEY
AQ6691		9965 000 02255			4822 101 11429		4822 267 31862	BELT CLIP TAPE DECK MCT-7
AQ6820		4822 443 10308	4822 492 11363	4822 443 10517	4822 101 11429		4822 267 31862	BELT CLIP CASS MECHANISM MCT-7 WATCH ASSY
AQ6840		4822 443 10523	4822 492 11363	4822 443 10522	4822 101 11429		4822 267 31862	BELT CLIP CASS MECHANISM MCT-7 WATCH ASSY
AQ6860		4822 443 10521	4822 492 11363	4822 443 10519	4822 101 11429		4822 267 31862	BELT CLIP CASS MECHANISM MCT-7 WATCH ASSY
AW7050	4822 303 30425	4822 423 41225	4822 492 42746 LL 4822 492 42747 FR	4822 443 64404 4822 443 64405	4822 105 11151	4822 146 31453 4822 146 31468 4822 146 21807	4822 268 30174	4822 450 62403 4822 450 62404 4822 403 71221 4822 249 40286 4822 358 31322 4822 361 21592 4822 528 81547 4822 249 10508 4822 403 20244 4822 240 30738