

Service
Service
Service



Service Manual



For repair information, we refer to manual AZ1018 (3140 785 22540), except the following mechanical parts in different colour or printings :

401	3140 117 63870	Cassette Door Assy
403d	3140 117 63880	Front Cabinet Grille Assy
407	3140 114 45710	Knob DBB
422	3140 114 45690	Tray CD
426	3140 114 45700	Door CD
429	3140 114 45720	Handle

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

© Copyright 1995 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

**CLASS 1
LASER PRODUCT**



PHILIPS