


Service
Service
Service

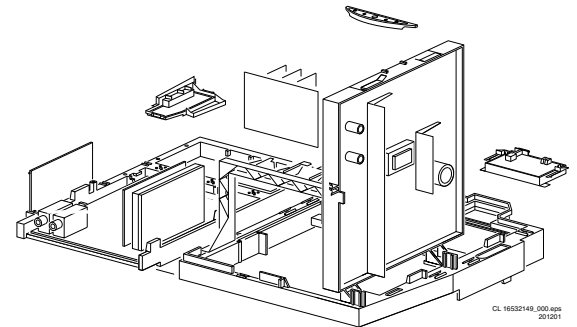

CL 1652149_000_aps
201001

Service Manual

Contents	Page
1. Technical Specifications, Connections and Chassis Overview	2
2. Safety & Maintenance Instructions, Warnings and Notes	5
3. Directions for Use	7
4. Mechanical Instructions	24
5. Service Modes, Error Codes and Faultfinding	29
6. <i>Block Diagram, Testpoints, I²C and Supply Voltage Overview</i>	
Wiring Diagram	41
Block Diagram Supply and Deflection	42
Block Diagram Video	43
Block Diagram Audio 1 (Excl Wireless Audio)	44
Block Diagram Audio 2 (Wireless Audio)	45
I ² C-IC Overview	46
Supply Lines Overview (Part 1)	47
Supply Lines Overview (Part 2)	48
Testpoint Overviews	49-52
7. <i>Electrical Diagrams and PWB's</i>	<i>Diagram PWB</i>
Line Deflection (Diagram A1)	53 57-58
Line Deflection (cont.) (Diagram A2)	54 57-58
Frame Deflection (Diagram A3)	55 57-58
Audio Amplifiers (Diagram A4)	56 57-58
Top Supply Panel (Diagram B)	59 60-61
Mains Switch Panel (Diagram E)	62 63
CRT / Auto Scavem Panel (Diagram F)	64 65-66
DC Shift Panel (Diagram G)	67 67
DAF Panel (Diagram I)	67 67
Tuner, IF and Video Processing (Diagram K1)	68 75-88
Input / Output (Diagram K2)	69 75-88
Sound Processing (Diagram K3)	70 75-88
Audio Dolby (Diagram K4)	71 75-88
Videocontrol & Geometrie (Diagram K6)	72 75-88
Teletext & Control (Diagram K7)	73 75-88

Contents	Page
Source Selection (add to K1) (Diagram K8)	74 75-88
Feature Box 7 (Diagram L1)	89 92-93
Feature Box 7 Eagle (Diagram L2)	90 92-93
Feature Box 7 Falconic (Diagram L3)	91 92-93
Full Dual Screen / PIP (Diagram M)	
Tuner / IF (Diagram M1)	94 99-100
Selector Switches (Diagram M2)	95 99-100
Filter and Buffers (Diagram M3)	96 99-100
Dual Screen IC and Memory (Diagram M4)	97 99-100
Audio (Diagram M5)	98 99-100
Core Top Level (Diagram NA)	101 118/9
Top-level MCS Module (Diagram NB)	102 118/9
MCS Module (Diagr. N1-17)	103 118/9
Side I/O (Diagram O)	120 121
Top Control (Diagram P)	122 122
Wireless Surround Transmitter (Diagram R)	123 124
Auto Scavem (Diagram SC1)	125 127/8
Auto Scavem PCR (Diagram SC2)	126 127/8
Wireless Surround Receiver (Diagram U)	129 130
Active Speaker Box: Amplifier (Diagram W1)	132 133
Active Speaker Box: SOPS (Diagram W2)	134 135
Active Speaker Box: Connector (Diagram W3)	136 136
Active Speaker Box: LED (Diagram W4)	136 136
8. Alignments	137
9. Circuit Description	146
Abbreviation List	152
Data Sheets	156
10 Spare Parts List	162

© Copyright 2001 Philips Consumer Electronics B.V. Eindhoven, The Netherlands.
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.



1. Technical Specifications, Connections and Chassis Overview

1.1 Technical Specifications

1.1.1 Vision

Display type	: CRT, Real Flat WS
Screen size	: 28" (70 cm)
	: 32" (82 cm)
	: 36" (92 cm)
Tuning system	: PLL
Colour systems	: PAL: B/G, D/K, I, Plus
	: SECAM: B/G, D/K, L/L'
	: NTSC: playback only
Channel selections	: 100 presets
	: UVSH
Aerial input	: 75 Ω , IEC-type

1.1.2 Sound

Sound systems	: FM-mono, AM-mono
	: FM/FM: B/G, Czech
	: NICAM: B/G, D/K, I, L
Maximum power	: 4 x 20 Wrms (int.)
	: 2 x 15 Wrms (ext.)

1.1.3 Miscellaneous

Mains voltage	: 220 - 240 V
Mains frequency	: 50/60 Hz
Ambient temperature	: +5 to +45 deg. C
Maximum humidity	: 90 % R.H.
Power dissipation	: < 200 W
Standby Power dissipation	: < 350 mW

1.2 Connections

1.2.1 Front Control/Side Connections

Front and Side View

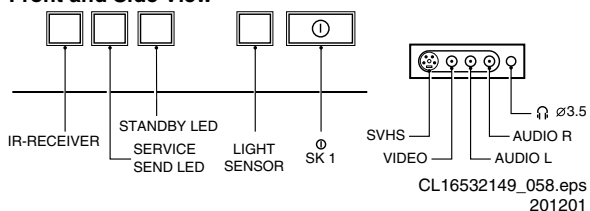


Figure 1-1

SVHS - In

1	-Y	Ground	
2	-C	Ground	
3	-Y	1 Vpp / 75 Ω	
4	-C	0.3 Vpp / 75 Ω	

Cinch - In

1	-CVBS	1 Vpp / 75 Ω	
2	-Audio - L	0.5 Vrms / 10 k Ω	
3	-Audio - R	0.5 Vrms / 10 k Ω	

Mini Jack - Out

-Headphone	32 - 600 Ω / 10 mW	
------------	---------------------------	--

1.2.2 Rear Connections

Connection overview

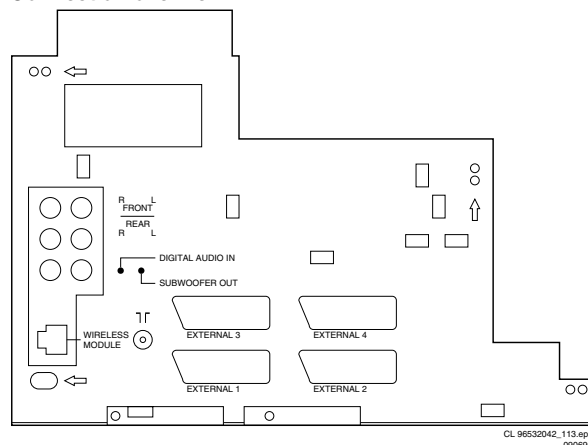


Figure 1-2

Cinch: Front R/L - Out

-Audio - R	0.5 Vrms / 1 k Ω	
-Audio - L	0.5 Vrms / 1 k Ω	

Cinch: Rear R/L - Out

-Audio - R	0.5 Vrms / 1 k Ω	
-Audio - L	0.5 Vrms / 1 k Ω	

Cinch: Digital Audio - In

-S/PDIF	
---------	--

Cinch: Subwoofer - Out

-SW	0.5 Vrms / 1 k Ω	
-----	-------------------------	--

RJ45: Wireless Surround Transmitter - Out

1	-CORDL_L	Signal	
2	-CORDL_L	Ground	
3	-CORDL_R	Signal	
4	-CORDL_R	Ground	
5	-12VP_IN	Supply	
6	-SDA	Signal	
7	-SCL	Signal	
8	-Supply	Ground	

Aerial - In

-IEC-type	Coax, 75 Ω	
-----------	-------------------	--

External 1 - In/Out (RGB and CVBS)

SCART connector

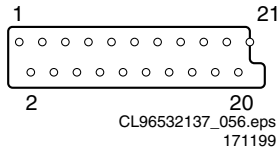


Figure 1-3

1	-Audio - R	0.5 Vrms / 1 kΩ	⊕
2	-Audio - R	0.5 Vrms / 10 kΩ	⊕
3	-Audio - L	0.5 Vrms / 1 kΩ	⊕
4	-Audio	Ground	⊥
5	-Blue	Ground	⊥
6	-Audio - L	0.5 Vrms / 10 kΩ	⊕
7	-Blue	0.7 Vpp / 75 Ω	⊕
8	-CVBS-status	0 - 1.3 V: INT 4.5 - 7 V: EXT 16:9 9.5 - 12 V: EXT 4:3	
9	-Green	Ground	⊥
10	-		
11	-Green	0.7 Vpp / 75 Ω	⊕
12	-		
13	-Red	Ground	⊥
14	-Status	Ground	⊥
15	-Red	0.7 Vpp / 75 Ω	⊕
16	-RGB-status / FBL	0 - 0.4 V: INT 1 - 3 V: EXT / 75 Ω	
17	-CVBS	Ground	⊥
18	-FBL	Ground	⊥
19	-CVBS	1 Vpp / 75 Ω	⊕
20	-CVBS	1 Vpp / 75 Ω	⊕
21	-Shielding	Ground	⊥

External 2 - In/Out for VCR (RGB, Y/C and CVBS)

1	-Audio - R	0.5 Vrms / 1 kΩ	⊕
2	-Audio - R	0.5 Vrms / 10 kΩ	⊕
3	-Audio - L	0.5 Vrms / 1 kΩ	⊕
4	-Audio	Ground	⊥
5	-Blue	Ground	⊥
6	-Audio - L	0.5 Vrms / 10 kΩ	⊕
7	-Blue / C	0.7 Vpp / 75 Ω	⊕
8	-CVBS-status	0 - 1.3 V: INT 4.5 - 7 V: EXT 16:9 9.5 - 12 V: EXT 4:3	
9	-Green	Ground	⊥
10	-Easy Link (P50)		⊕
11	-Green	0.7 Vpp / 75 Ω	⊕
12	-		
13	-Red	Ground	⊥
14	-Status	Ground	⊥
15	-Red / C	0.7 Vpp / 75 Ω	⊕
16	-RGB-status / FBL	0 - 0.4 V: INT 1 - 3 V: EXT / 75 Ω	
17	-CVBS	Ground	⊥
18	-FBL	Ground	⊥
19	-Y / CVBS	1 Vpp / 75 Ω	⊕
20	-Y / CVBS	1 Vpp / 75 Ω	⊕
21	-Shielding	Ground	⊥

External 3 - In (CVBS, Audio)

1	-		
2	-Audio - R	0.5 Vrms / 10 kΩ	⊕
3	-		
4	-Audio	Ground	⊥
5	-	Ground	⊥
6	-Audio - L	0.5 Vrms / 10 kΩ	⊕
7	-		

8	-CVBS-status	0 - 1.3 V: INT 4.5 - 7 V: EXT 16:9 9.5 - 12 V: EXT 4:3	
9	-	Ground	⊥
10	-		
11	-		
12	-		
13	-	Ground	⊥
14	-Status	Ground	⊥
15	-		
16	-		
17	-CVBS	Ground	⊥
18	-CVBS	Ground	⊥
19	-		
20	-CVBS	1 Vpp / 75 Ω	⊕
21	-Shielding	Ground	⊥

External 4 - In (CVBS, Audio)

1	-		
2	-Audio - R	0.5 Vrms / 10 kΩ	⊕
3	-		
4	-Audio	Ground	⊥
5	-	Ground	⊥
6	-Audio - L	0.5 Vrms / 10 kΩ	⊕
7	-		
8	-CVBS-status	0 - 1.3 V: INT 4.5 - 7 V: EXT 16:9 9.5 - 12 V: EXT 4:3	
9	-	Ground	⊥
10	-		
11	-		
12	-		
13	-	Ground	⊥
14	-Status	Ground	⊥
15	-		
16	-		
17	-CVBS	Ground	⊥
18	-CVBS	Ground	⊥
19	-		
20	-CVBS	1 Vpp / 75 Ω	⊕
21	-Shielding	Ground	⊥

1.3 Chassis Overview

PWB Location

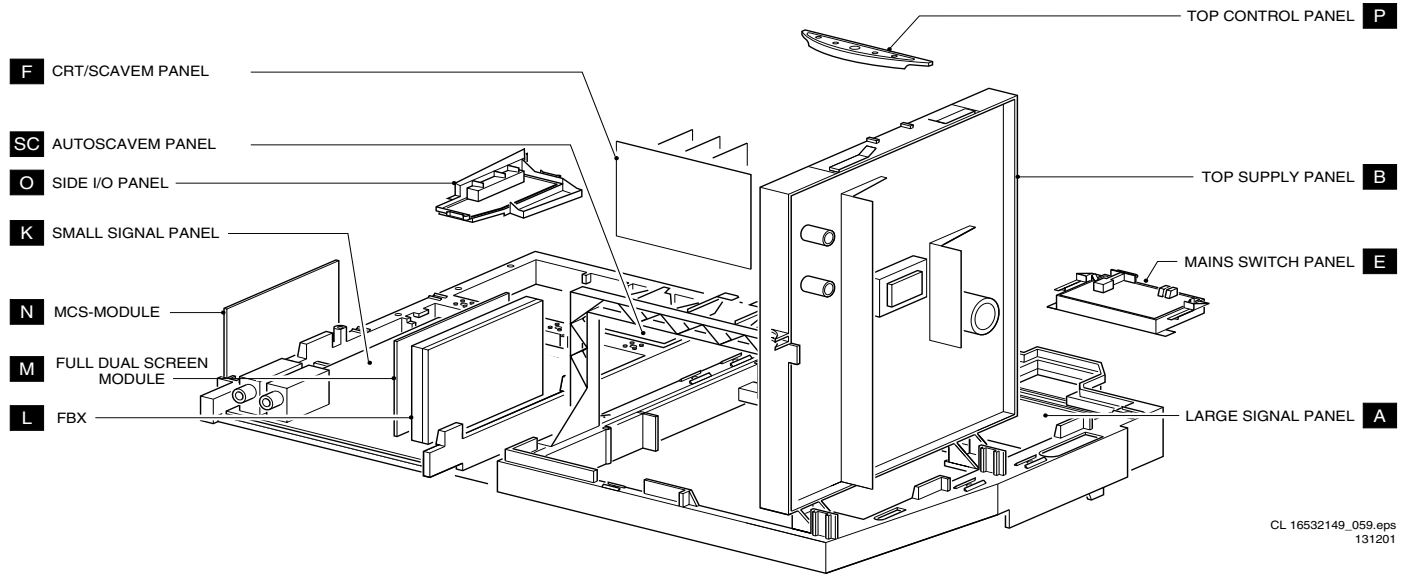


Figure 1-4

2. Safety and Maintenance Instructions, Warnings, and Notes

2.1 Safety Instructions

Safety regulations require that **during** a repair:

- Connect the set to the mains via an isolation transformer, as there are 'hot' parts in this chassis.
- Replace safety components, indicated by the symbol ▲, only by components identical to the original ones. Any other component substitution (other than original type) may increase risk of fire or electrical shock hazard.
- Wear safety goggles when you replace the CRT.

Safety regulations require that **after** a repair, you must return the set in its original condition. Pay, in particular, attention to the following points:

- General repair instruction: as a strict precaution, we advise you to re-solder the solder connections through which the horizontal deflection current is flowing. In particular this is valid for the:
 1. pins of the line output transformer (LOT).
 2. fly-back capacitor(s).
 3. S-correction capacitor(s).
 4. line output transistor.
 5. pins of the connector with wires to the deflection coil.
 6. other components through which the deflection current flows.

Note: This re-soldering is advised to prevent bad connections due to metal fatigue in solder connections, and is therefore only necessary for television sets more than two years old.

- Route the wire trees and EHT cable correctly and secure them with the mounted cable clamps.
- Check the insulation of the mains cord for external damage.
- Check the strain relief of the mains cord for proper function, to prevent the cord from touching the CRT, hot components, or heat sinks.
- Check the electrical DC resistance between the mains plug and the secondary side (only for sets that have an isolated power supply). Do this as follows:
 1. Unplug the mains cord and connect a wire between the two pins of the mains plug.
 2. Turn on the main power switch (keep the mains cord unplugged!).
 3. Measure the resistance value between the pins of the mains plug and the metal shielding of the tuner or the aerial connection of the set. The reading should be between 4.5 MΩ and 12 MΩ.
 4. Switch the TV 'off' and remove the wire between the two pins of the mains plug.
- Check the cabinet for defects, to prevent the possibility of the customer touching any internal parts.

2.2 Maintenance Instructions

We recommend a maintenance inspection carried out by qualified service personnel. The interval depends on the usage conditions:

- When a customer uses the set under normal circumstances, for example in a living room, the recommended interval is three to five years.
- When a customer uses the set in an environment with higher dust, grease, or moisture levels, for example in a kitchen, the recommended interval is one year.
- The maintenance inspection includes the following actions:
 1. Perform the 'general repair instruction' noted above.
 2. Clean the power supply and deflection circuitry on the chassis.
 3. Clean the picture tube panel and the neck of the picture tube.

2.3 Warnings

- In order to prevent damage to ICs and transistors, avoid all high voltage flashovers. In order to prevent damage to the picture tube, use the method shown in Fig. 2-1, to discharge the picture tube. Use a high voltage probe and a multi-meter (position V_{DC}). Discharge until the meter reading is 0 V (after approx. 30 s).

Discharge Picture Tube

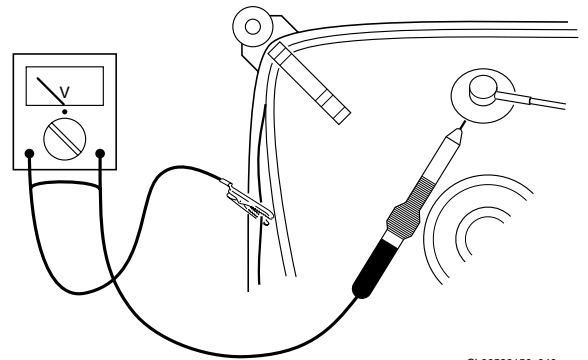



Figure 2-1

- All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD, symbol ▲). Careless handling during repair can reduce life drastically. Make sure that, during repair, you are connected with the same potential as the mass of the set by a wristband with resistance. Keep components and tools also at this potential. Available ESD protection equipment:
 - Complete kit ESD3 (small tablemat, wristband, connection box, extension cable and ground cable) 4822 310 10671.
 - Wristband tester 4822 344 13999.
- Together with the deflection unit and any multi-pole unit, flat square picture tubes form an integrated unit. The deflection and the multi-pole units are set optimally at the factory. We do not recommend adjusting this unit during repair.
- Be careful during measurements in the high voltage section and on the picture tube.
- Never replace modules or other components while the unit is 'on'.
- When you align the set, use plastic rather than metal tools. This will prevent any short circuits and the danger of a circuit becoming unstable.

2.4 Notes

- Measure the voltages and waveforms with regard to the chassis (= tuner) ground (⊥), or hot ground (⤵), depending on the tested area of circuitry.
- The voltages and waveforms shown in the diagrams are indicative. Measure them in the Service Default Mode (see chapter 5) with a colour bar signal and stereo sound (L: 3 kHz, R: 1 kHz unless stated otherwise) and picture carrier at 475.25 MHz (PAL) or 61.25 MHz (NTSC, channel 3).
- Where necessary, measure the waveforms and voltages with (⊥) and without (⤵) aerial signal. Measure the voltages in the power supply section both in normal operation (Ⓜ) and in standby (Ⓜ). These values are indicated by means of the appropriate symbols.
- The picture tube panel has printed spark gaps. Each spark gap is connected between an electrode of the picture tube and the Aquadag coating.

 - The semiconductors indicated in the circuit diagram and in the parts lists, are interchangeable per position with the semiconductors in the unit, irrespective of the type indication on these semiconductors.
- Manufactured under license from Dolby Laboratories. 'Dolby', 'Pro Logic' and the 'double-D symbol', are trademarks of Dolby Laboratories.

Dolby PL Symbol**Figure 2-2**

3. Directions for Use

Installation

Your remote control

Peripherals p. 31
 selection of EXT1, EXT2, EXT3, EXT4 or FRONT

TV, video recorder (VCR), DVD, Satellite (SAT), TUNER, CD, TAPE or cd-recordable (CDR) selection.

- no function
- freeze the picture p. 10
- hold teletext page p. 26
- surround modes p. 10
- NEXTEV on/off p. 10
- activate your choice
- volume up/down p. 10
- sound mute p. 10
- programme selection p. 10
- cursor to select your choice p. 13
- switch to standby p. 10

Colour keys

- select TV channels by theme p. 12
- direct teletext page or subject selection p. 25
- Pixel Plus p. 12

Audio and Video equipment p. 31-32

Teletext p. 26

- time display/subpage selection
- solution to puzzles
- display POC/PS code
- enlarge

DNR reduce image noise p. 12

Zoom p. 12

- zoom on/off

Installation p. 5

EasyLink p. 12

- INSTANT recording
- picture format p. 12

Smart Controls

- smart sound p. 11
- active control p. 11
- smart picture p. 11

Dual Screen p. 18-19

- dual screen on
- swap screens (only for 32-36PW767)
- still picture
- multipip p. 11 (only for 32-36PW767)
- strobe p. 11 (only for 28-32PW617)

Preparation


- Place the TV on a solid surface.**

For ventilation, leave at least 5 cm free all around the TV. Do not place the TV on a carpet. To prevent any unsafe situations, do not place any objects on top of the TV. Avoid heat, direct sunlight and exposure to rain or water. Keep mobile telephones at a safe distance to avoid disturbances in picture and sound.
- Insert the aerial plug firmly into the aerial socket** at the back of the TV. For best picture quality use the suppressor-aerial cable supplied.
- Remote control:** Remove the cover of the battery compartment. Insert the 2 batteries supplied (Type R6-1.5V). Press the **TV** key to be sure your remote control is in the TV mode.

The batteries supplied do not contain the heavy metals mercury and cadmium. Nevertheless in many countries exhausted batteries may not be disposed of with your household waste. Please check on how to dispose of exhausted batteries according to local regulations.


Note: this remote control functions with TVs and other equipment which use the RC6 signalling standard.
- Wireless surround speaker system.**
 Supplied and separately packed with your TV are:
 - a wireless transmitter module with an integrated cable
 - 2 surround loudspeakers
 - connection cable
Wireless transmitter module
 • Attach the wireless module to the back of the TV as shown.
 • Connect the attached cable to the wireless module connector.
 Note: Make sure you only switch the TV on after you have plugged in the wireless module.
- Insert the mains plug of the TV in the wall socket** having a mains voltage of 220V-240V. To prevent damaging the mains (AC) cord which could cause a fire or electric shock, do not place the TV on the cord.
- Switch the TV on:** Press the power switch on the front of your TV. A green indicator on the front of the TV lights up and the screen comes on. If the indicator is red, press the **-P+** keys on the remote control.
 The green lamp blinks every time you press a key on the remote control.
 When you switch on your set for the first time, the menu LANGUAGE automatically appears on the screen. The explanation appears in different languages one at a time. Choose your own language and press the **OK** key on the remote control.

Select the INSTALLATION menu

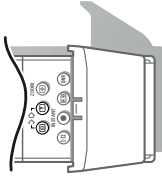


- 1 Open the door of the remote control.
- 2 Press **OK** and **7** at the same time.

To use the menus

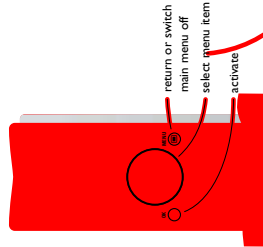

 - 1 Use the cursor in the up/down, left/right directions to select a menu item.
- 2 Press the **OK** key to activate.
- 3 Use the **OK** key to return or to switch the menu off.



Store TV channels



After the new or extra TV channels have been stored, the TV automatically transfers those TV channels to the video recorder if it is equipped with the EasyLink function. The message **EasyLink - Downloading** appears on the screen. The programme list of the video recorder is now the same as the one of the TV. If the TV is connected to a video recorder which supports the MEXTVIEWLink function, the TV also automatically transfers the language and country selections to the video recorder.




Surround loudspeakers

There are two surround loudspeakers supplied. One is the active loudspeaker A. The other loudspeaker B is a passive one which has to be connected with the active loudspeaker.

- The slide channel switch **1** at the bottom of the active loudspeaker has been set default to channel 1 in the factory. See also Sound Setup, p. 9.
- Connect the active to the passive loudspeaker with the supplied speaker cable **2**. Insert the marked wire into the openings of the same coloured connector clips on both speakers. Do not insert the wires too far.
- The Surround sound loudspeakers can be located behind or to either side of the listener. The front of the loudspeakers do not have to face the listener. The distance between the TV and the surround speakers should not exceed 15 m. *Note: In rare occasions people moving around close to the TV may interfere with the sound transmission.*
- Set the position switch **3** to the right, if the active loudspeaker is positioned to the right side of the listener, to the left, if it is positioned to the left side of the listener (seen from the point of view of watching the TV).
- Connect the active loudspeaker to the mains with the mains cable **4**.
- Switch on the active loudspeaker with the **POWER** switch **5**. The red indicator at the front of the active surround speaker shows that the speaker is in standby. During sound transmission the indicator turns to green. 10-15 min. after the sound transmission of the TV has stopped, the indicator turns back to red to indicate the low power standby.
- To switch the active speaker off, use the **POWER** switch.

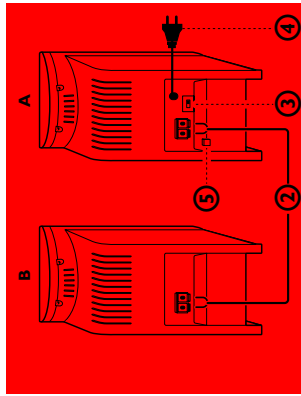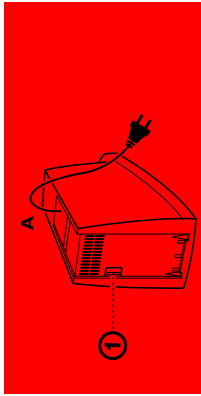

Keys on Top of the TV

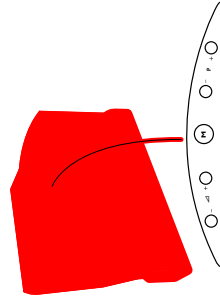

Press the **M** key repeatedly to select **Volume, Brightness, Colour, Contrast, Treble and Bass**. Press the **P** - or + keys to carry out the selected adjustment. When the menu adjustment is not displayed, the **P** - or + keys enable you to select the TV channels, the **↔** - or + keys to adjust the volume.

The selected adjustment automatically switches off when no action has been executed for 10 seconds.


Should your remote control be lost or broken you can still change some of the basic picture settings with the keys on top of the TV.

4 Preparation

Select the menu language and country

First, select your language and country.

- 1 Select **Menu language** and press the **OK** key.
- 2 Select your language and press the **OK** key. Use the cursor up/down to scroll through the list and to bring up other languages which are not displayed on the screen at present.
- 3 Select **Country** and press the **OK** key.
- 4 Select the country where you are now located and press the **OK** key. Use the cursor up/down to scroll through the list and bring up other countries which are not displayed on the screen at present.

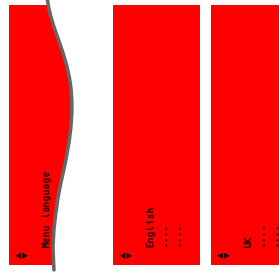

Select **Other** when none of the countries applies.

You can now search for and store the TV channels in two different ways: using **automatic installation** or **manual installation** (tuning-in channel by channel). Select your choice and press the **OK** key.


Automatic installation

In the Automatic Installation menu select **Start** and press the **OK** key to activate the searching. All TV channels are searched for and stored automatically.



If a cable system which broadcasts ACI (Automatic Channel Installation) or a TV channel transmitting a teletext page with the frequencies and programme names of all the TV channels which can be received, is detected, the search is stopped and a programme list appears.

The programme list is automatically filled with all the programme numbers and names of the TV channels transmitted.

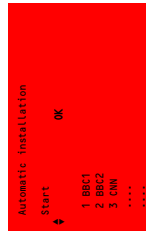

*It is possible that the cable company or the TV channel displays a broadcast selection menu. Layout and items are defined by the cable company or the TV channel.
Make your choice with the cursor and press the **OK** key.*


To exit from the menu press the **OK** key on the remote control.

Go on to page 7.

Manual installation

Searching for and storing TV channels is done channel by channel. You must go through every step of the Manual Installation menu.

Selection mode is only present and lights up if the country selected also offers the channel option (C-channels for aerial, S-channels for cable channels). You can choose either channel or frequency mode.

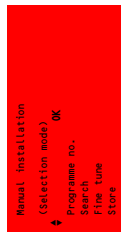

1 Select the TV system. Select the country or part of the world from where you want to receive the TV channel. If you are connected to a cable system, select your country or part of the world where you are now located.

2 Press the cursor down and enter the programme number with the digit keys.

3 Search for a TV channel. Press the cursor left/right. The frequency or the channel number increases until a TV channel is found.

Direct selection of a TV channel
If you know the frequency, the C- or S-channel number, enter it directly with the digit keys 0 to 9. Ask for a list from your cable company or dealer, alternatively consult the Table of frequencies on the inside backcover of this handbook.

4 Fine tune
In case of poor reception, you can improve the reception by adjusting the frequency with the cursor left/right.


5 To store your TV channel, select **Store** and press the **OK** key.

Repeat steps **1** to **5** to store another TV channel.

6 To exit from the menu press the **OK** key on the remote control.

Give name

It is possible to change the name stored in the memory or to assign a name to a TV channel which has not yet been entered. A name with up to 3 letters or numbers can be given to the programme numbers 0 to 99. For example SUPER, BBC1, ... 99 and 0 you can also name any peripherals that are connected to a euroconnector:

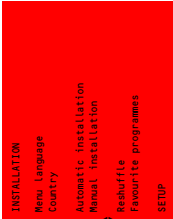

- 1** Select **Give name** in the **INSTALLATION** menu and press the **OK** key
 - 2** Select the programme number.
 - 3** Press the **OK** key.
 - 4** Select the character with the cursor up/down.
 - 5** Select the following position with the cursor right.
 - 6** Select the following character.
 - 7** Press the **OK** key when finished.
 - 8** Press the **OK** key to return to the **INSTALLATION** menu.
- Space, numbers and other special characters are located between Z and A.

Reshuffle the programme list

According to your preference you can change the order of the stored TV channels.



- 1** Select **Reshuffle** in the **INSTALLATION** menu and press the **OK** key.
- 2** Select the programme number you want to exchange.
- 3** Press the **OK** key.
- 4** Select the new number you want to exchange it with.
- 5** Press the **OK** key.
Repeat the operation until all TV channels are allocated as you like.
- 6** Press the **OK** key to return to the **INSTALLATION** menu.

Select Favourite TV channels

After leaving the installation you can browse through the TV channels by pressing the **- P +** keys. Only those TV channels which are in the favourite list will be displayed. Non-favourite TV channels can still be selected with the digit keys. By default all stored TV channels are added to the favourite list.



- 1** Select **Favourite programmes** in the **INSTALLATION** menu and press the **OK** key.
- 2** Select your favourite programme number.
- 3** Select **Yes** or **No** with the cursor left/right.
- 4** Repeat for every TV channel you want to make a favourite or a non-favourite TV channel.
- 5** Press the **OK** key to return to the **INSTALLATION** menu.

In order for NEXTVIEW to function properly, the first TV channel from the favourite list should also broadcast the correct local date and time via teletext.



Install TV Setup

The Setup menu allows you to adjust initial settings, i.e. those which are not related to the installation of the TV channels.

The Setup menu contains items that control the settings of the TV's functions, features, services and peripherals you may have connected.

- 1 Use the cursor in the up/down, left/right directions to select the menu item.
- 2 Use the **OK** key to activate.
- 3 Use the **□** key to return or switch menu off.



Digital sources

See Connect Peripheral Equipment, p. 29 to connect your digital equipment, like a DVD, a digital satellite tuner or a similar digital device.

Sound Setup

See p. 9.

Decoder/Descrambler programme numbers

If a decoder or a descrambler is connected, see p. 27, you can define one or more programme numbers as decoder programme numbers.



Press the cursor left/right to select the input used to connect to your decoder: **Off**, **EXT1** or **EXT2**.

Select **Off** if you do not want the selected programme number being activated as a decoder programme number.

Select **EXT2** when the decoder is connected to your EasyLink video recorder.

When selecting the decoder, the message **EasyLink: Downloading Presets....** appears on the screen.

Picture tilt

Select **Picture tilt** with the cursor up/down. Keep the cursor left/right pressed to adjust the rotation of the picture.

Information line

Select **On** and after the selection of a TV programme or after pressing the **□** key on the remote control, a TV channel which broadcasts teletext may transmit the name of the TV channel, the programme name or another message. This is displayed on screen next to information about sound picture format and DNR setting.

When selected **Off**, only sound picture format and DNR information is displayed after the selection of a TV channel or after pressing the **□** key.

Factory settings

Select **Factory settings** and press the **OK** key to restore picture and sound settings, predefined in the factory.

Auto format

Selecting **Yes** causes the screen to automatically fill as much of the picture as possible when TV programmes are not carrying special signals detecting the correct screen format.

With the **□** key on the remote control you can still select other picture formats. See p. 12.

NEXTVIEW provider

Most broadcasters in Europe are offering teletext pages containing the day's programme schedule. These pages can be requested by switching the TV to Teletext Guide. An increasing number of broadcasters are offering an extended programme guide service called NEXTVIEW.

NEXTVIEW is a new way of presenting programme schedules and offers more features than basic teletext. With NEXTVIEW it is possible to show for instance all the movies or children programmes for tonight or the following days.

If you select **None** as NEXTVIEW provider, the TV will capture all data from the available TV channels which broadcast NEXTVIEW. Broadcaster defined menus will not be available.

If you select a programme number of a TV channel stored in the favourite list as NEXTVIEW provider, the selected TV channel will provide NEXTVIEW data and additional information of its own broadcasts as well as from other (non selected) TV channels.

Normally you will select the NEXTVIEW provider that transmits most information in your language. You can make the best selection via information from TV announcements or from the newspapers.

Important:

In order for NEXTVIEW to function properly, the first TV channel from the favourite list should also broadcast the correct local date and time via teletext. Please check at startup if the time and date are correct in the NEXTVIEW screen.

Remark:

Not all TV channels support NEXTVIEW.
How to make use of NEXTVIEW, see p. 20.

Sound Setup menu

Sound setup

Auto Surround
Wireless Surround
Extra front speakers
Distance to front
Distance to rear

Auto Surround

Sometimes the broadcaster transmits special signals for Surround Sound encoded programmes. The TV automatically switches to the best surround sound mode when **Auto Surround** is switched **On**. However it is possible to overwrite this setting.

Wireless Surround

The system has already been configured in the factory to work properly. In rare circumstances, interference from external RF (wireless) equipment such as RF headphones, mobile phones or remote controls for lights, may occur. Then it may be necessary to shift to another wireless channel. Use the cursor left/right to select another channel. Important:


Always be sure that the active surround speaker and the Wireless Surround setting are switched to the same transmitting channel. Otherwise no sound or only a distorted sound will be heard on the surround speakers.

When the TV is tuned to a channel in the neighbourhood of 864 MHz (433 MHz in case you purchased a TV with a type number in the range 28-32PW9617101 or 158 or 32-36PW9767101 or 158), the transmitter is switched off because no RF surround sound is possible. This is necessary to avoid interfered picture. You can improve the picture quality by using the suppressor aerial cable supplied.

In rare cases, when no RF surround sound is possible or when there is too much interference, use the wired back up solution with a 3.5 mm stereo jack. In this case select **Off** in the Wireless surround menu item. See Connect Peripheral equipment, p. 28.

Extra front speakers

See Connect Extra loudspeakers/Amplifier, p. 30. If no extra front speakers/amplifier are connected, do not change the predefined factory setting which is **No** (TV).

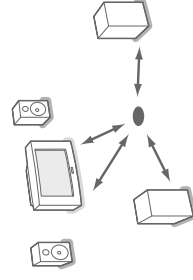

Distance to front

Select the distance between the TV and the place you sit to watch TV.

Distance to rear

Select the distance between the rear surround speakers and the place you sit.

To exit from the menu press the **□** key repeatedly.

Operation

Use of the remote control

Select peripherals

Press this key repeatedly to select EXT1, EXT2, EXT3, EXT4 or FRONT, according to where you connected the peripherals (p. 31).

TV VCR DVD SAT TUNER CD TAPE CDR

Press one of these keys to use the remote control directly in the TV, video recorder, DVD or satellite mode. A green indicator lights up. Press the same key again within 3 seconds to use the remote control in the mode indicated below the key (tuner, CD, tape or CD-recordable). A red indicator lights up. Press the key again to return to the function mentioned above the key.

○ no function

Video recorder see p. 31

NEXT TV new on/off see p. 20

OK Press this key to activate your choice, when in the menus.

Screen information

Press for 5 seconds to activate/de-activate the extended or reduced display of TV channel and programme information on the screen.

Press briefly to display information about the selected TV channel and programme, the sound reception, picture settings, the selected DNR setting and the remaining time set with the sleep timer.

0/9 Digit keys

To select a TV channel. For a two digit programme number, enter the second digit within 2 seconds. To switch immediately to a selected one digit TV channel, keep the digit key pressed a bit longer.

P/P Previous programme

The previously selected TV channel is displayed. The -indicator is only for video recorder.

Standby

The set is switched off and the red indicator (orange when acquiring NEXTVIEW information) lights up. When acquiring NEXTVIEW the TV is switched to full standby after a period of max. 1 hour and the red indicator lights up. To switch the TV on again, press **P** or the digit keys. If your EasyLink video recorder has the system standby function and you press the standby key for 3 seconds, both the TV and video recorder are switched to standby.

Freeze

To activate/de-activate the frozen picture and to hold a teletext page.

Surround mode

Press this key repeatedly to select another available surround mode: Dolby Pro Logic, 3D Surround, Dolby 3 Stereo, Stereo, Hall or Dolby Digital.

Teletext on/off see p. 25

Main menu on/off see p. 13

Volume

Press + or - to adjust the volume.

Mute

Temporarily interrupt the sound or restore it.

P Programme selection

To browse through the TV channels activated in the Favourite Programme menu.

Active control

Active control is a pro-active and automatic system. The TV continuously measures and corrects all incoming signals in order to provide the best picture possible. Thanks to the Ambient Light Sensor, which measures the light conditions of the room in which the TV is situated, the contrast, dynamic contrast, brightness and colour picture settings are adjusted automatically. The light sensor is active when the Active control function is switched to Medium (if provided) or Maximum. Press the key repeatedly to select the Active Control values Off, Minimum, Medium (if provided) or Maximum. Off, Sharpness and Dynamic Contrast are controlled automatically. Minimum, Sharpness, Dynamic Contrast and Noise Reduction are controlled automatically. (Medium) Dynamic Contrast, Colour, Sharpness and Noise reduction are controlled automatically. Maximum Contrast, Colour, Sharpness and Noise reduction are controlled automatically. While the selected Active Control setting information is on top of the screen. The picture settings are being adapted continuously and automatically. The menu items cannot be selected. Colour enhancement (green enhancement, skintone correction and blue stretch) is switched on with certain Smart Picture selections. Press the cursor in the up/down directions again to switch off the menu.

For 32-36PW9167

Dual screen see p. 18

Press to switch on Multipip. A menu line MOSAIC appears. Select the desired function with the cursor left/right and press the OK key. Scan: a scan of the TV channels placed in the favourite list is performed. Press the OK key again to have the continuation of the list. Photo Finish: the main picture is displayed in successive frozen pictures. Press the OK key again to have a new sequence of frozen pictures. Strobe: the picture is reproduced image by image. Press the OK key again to have a faster speed. Press to switch off Multipip.

For 28-32PW9167

Dual screen see p. 19

Press to reproduce the picture image by image. Press the key again to have a faster speed. Press the again to switch off the strobe function.

Smart Keys

To select predefined picture and sound settings.

Smart Sound


Each time it is pressed, a different picture setting is selected, corresponding with specific factory settings of treble and bass.

Smart Picture


Each time it is pressed, a different picture setting is selected, corresponding with specific factory settings of Contrast, Colour, Sharpness, Dynamic Contrast and Colour enhancement.

Personal refers to the personal preference settings of picture and sound selected in the picture and sound menu.

Remark: the moment you are in a predefined smart sound or picture setting and you modify a setting in the picture or sound menu, all values of the menu will overwrite the previously made settings.

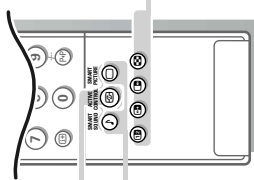


Use of the menus

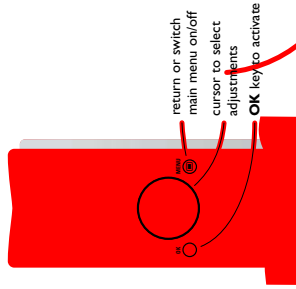

- 1 Press the **MAIN MENU** key to display/cancel the MAIN MENU.
- 2 Use the cursor in the up/down directions to select the PICTURE, SOUND or FEATURES menu or to select PROGRAMMES.
- 3 Press the cursor right to activate the selected menu.
- 4 Use the cursor in the up/down, left/right directions to select the menu item.
- 5 Use the **OK** key to activate.
- 6 Press the **RETURN** key repeatedly to return or to switch the menu off.

Picture menu

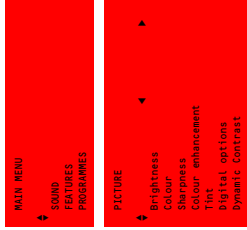

- **100 Hz Dig. Scan = 100 Hz + Dig. Scan (Field and line flicker reduction)** without motion compensation.
 - **Pixel Plus** = creates near-High Definition performance inside the TV on the basis of a regular input signal. The number of lines are increased and the number of pixels on a line are doubled in combination with Digital Natural Motion.
- As such Pixel Plus enhances both regular broadcast signals and DVD or Digital TV input towards unparalleled sharpness and depth, near-High Definition and natural detail.
- **Double Lines** = provides for a doubling of vertical resolution which adds astonishing sharpness and a total absence of visible picture lines. Motion compensation reduces jitter and offers smooth, yet sharp motion reproduction.

Note:
Pixel Plus is not active when Multi screen (Stroke), Teletext (Except when Subtitled is activated), NEXTView or Teletext, Dual screen is selected.

Colour enhancement

When activated, this feature automatically controls skin tone correction, green enhancement and blue stretch. It makes the colours more vivid. Select **On** or **Off** in order to activate/de-activate Colour enhancement.


Tint
Select the colour temperature: **Normal, Warm or Cool.**

Digital options
Although Pixel Plus is the most ideal setting, it may be preferable, dependent on your own preference, to select Double lines .or. 100 Hz Digital Scan.

Dynamic Contrast

To make the contrast in the darker and the brighter picture areas more noticeable, select the **Med** setting. In certain circumstances it may be preferred to select **Min, Max or Off.**

The modified adjustments for Contrast, Brightness, Colour, Sharpness, Colour enhancement, Tint, Digital options and Dynamic Contrast are automatically stored for all TV channels. Select **Factory settings** in the Setup menu to restore the predefined factory settings, see p. 8.

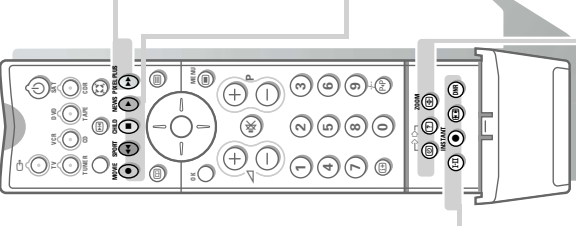

II Bilingual choice and sound mode selection
Press this key
• to switch from Stereo to Mono sound, in case of stereo transmission, or from Nicam Stereo to Nicam available, in case of digital transmission;
• to choose between language I (Dual I) or language II (Dual II), in case of bilingual transmission. The setting is separately stored for each TV channel.

Instant record
If your video recorder has the EasyLink function the **INSTANT** key for record can be operated in the TV mode.

Picture format
Press this key repeatedly to select another picture format: 4:3, Movie Expand 149, Movie Expand 16:9 with or without subtitling, Wide Screen, Super zoom or Automatic (when Auto format is set to Yes in the SETUP menu).
Auto format makes the picture to fill the screen as much as possible.
Sometimes also video recorder programmes carry special signals which will automatically switch the TV to the correct screen format. Auto format is disabled when in Dual screen. When in Automatic, Movie Expand 149 or 16:9 or Super zoom picture format, you can make subtitles visible with the cursor up/down.

DNR Dyn. Noise Reduction
To reduce the image noise and improve picture quality when receiving weak signals, Press the **DNR** key to select **Off, Minimum, Medium or Maximum.**

Switching Pixel Plus demo on/off
The TV screen is divided into 2 parts: in the left part Pixel Plus and Digital Natural Motion switched off; in the right part Pixel Plus and Digital Natural Motion switched on.
Press the **PIXEL PLUS** key again to switch the Pixel Plus demo off.


Select TV channels by theme
If programmes in the TV guide of nextView have defined themes, it is possible to quickly select TV programmes with the coloured keys.
Press the red, green, yellow or blue key to select one of the four predefined theme categories **MOVIES, SPORTS, CHILDREN, NEWS.**
The TV switches to the first TV channel broadcasting a programme of the selected theme. At the same time a list of all the TV channels currently transmitting a programme of the selected theme appears on the screen.
Use the cursor up/down to select a programme.
Press the same colour key again to remove the list.

Time display
The time, downloaded from the TV channel (with teletext) stored on programme number 1 or the lowest favourite programme number, is displayed on the screen.
This function is not available when continuous subtitles have been switched on.

Teletext functions see p. 26

Zoom
Press the **ZOOM** key repeatedly to select one of the zoom magnifications (x1, x4, x9, x16). Additionally you can shift the selected zoom window over the screen with the cursor.
Press **RETURN** to activate/de-activate the continuous display of the zoom magnification. The zoom window is reset after selecting another TV channel, another picture format or when another picture format is selected automatically.
Zooming is disabled in Dual Screen mode.

Sound menu

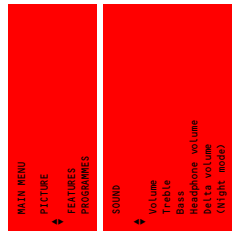


The modified adjustments for Volume, Treble and Bass are automatically stored for all TV channels. Select **Factory settings** in the Setup menu to restore the predefined factory settings, see p. 8.

Select **Surround settings** in the Sound menu.

The contents of the Surround settings menu depends on the selected Surround mode.


Surround settings

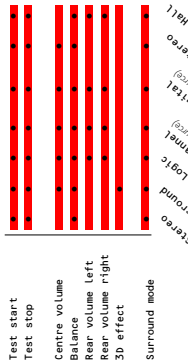

The graphical representation of the speakers is displayed on screen when controls are being changed or when in test tone mode. The drawing on screen is updated according to the chosen loudspeaker setup and the selected surround mode. Speakers which are active are highlighted. In 3D surround mode the graphical representation of the rear loudspeakers is replaced by the symbol . The menu item **3D effect** appears and the level of the 3D effect can be adjusted.

Note: If extra front speakers are connected and selected in the Sound Setup menu, all internal TV speakers produce centre sound. See Connect Peripheral Equipment, Extra loudspeakers/Amplifier, p. 30.

Adjustment of the volume level of the loudspeakers

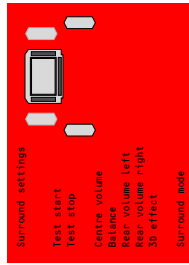

The menu item **Test** enables you to have a reference of the internal and the rear loudspeakers loudness.

- 1** Select **Test start** and press the **OK** key. A steady noise tone is switched sequentially through the available loudspeakers, for 2 seconds each. This enables you to have a reference of the loudness of each loudspeaker and to adjust the level of each until they all sound equally loud. The loudspeakers activated light up in the screen graphic.
- 2** Select **Centre volume**, **Balance**, **Rear volume left** or **right** and alter the selected adjustments.
- 3** Select **Test stop** and press the **OK** key when you have finished the adjustment of the speaker levels.


Headphone volume

See Connect Peripheral Equipment, p. 28 for the connection of the headphone.

Delta volume

Here you may adjust the volume differences of each selected TV channel or external device separately. This can compensate volume differences between different broadcasters. Use the **- P +** keys to compare to the volume of other TV channels or externals.

Night mode (only available with certain Dolby Digital sound sources)
Select **Yes** to reduce the dynamics of the sound and to improve listening at low volume. This is useful for late-night listening, e.g. to a DVD disc.

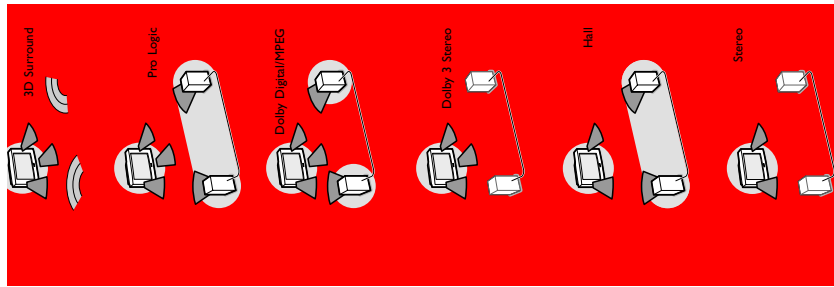

Surround Modes
Select the Surround mode according to the sound mode being broadcast.

3D Surround (optimal with Dolby Surround broadcasting)
3D Surround enables you to experience the effect of Dolby Surround Pro Logic without the need of having rear speakers connected or activated. With Dolby Digital or MPEG Multichannel an improved virtual effect is offered. The graphical representation of the rear loudspeakers is replaced by the symbol . Select the level of **3D effect** with the cursor left/right.

Pro Logic (with Dolby Surround broadcasting)
In addition to the left and right internal speakers, the centre and the rear surround loudspeakers reproduce the Dolby Surround Pro Logic sounds. This sound is always present in the movie or programme marked with **DD** Dolby Surround. This mode is especially recommended for such programmes or movies. Dolby Pro Logic signals are also present on some DVD tracks.

Note: Normal stereo broadcast is not always encoded to produce a rear surround sound.

Dolby Digital* or **MPEG Multichannel**
When you have connected a DVD player or a Laser Disc player containing a Dolby Digital decoder (AC-3) or MPEG 2 decoder output. (See Connecting Peripherals, Digital equipment p. 29), you can enjoy Multichannel Surround Sound in your home when playing discs recorded in Dolby Digital or MPEG2. In addition to the left and right internal speakers, the centre, the left and right rear surround loudspeakers and the subwoofer reproduce the Dolby Digital or Dolby MPEG 5-channel Surround sounds. Select Dolby Digital or MPEG Multichannel Surround mode.

Dolby 3 Stereo (optimal with Dolby Surround broadcasting)
The sound signal is now distributed over the front, left, the front right and the centre TV loudspeakers. The rear loudspeakers do not produce any signal.


Hall
The special sound signal is distributed over the rear loudspeakers which creates a hall effect from the rear. The centre loudspeaker does not reproduce any signal. This mode is recommended when you wish to add surround sound to a broadcast which is not encoded Dolby Surround or to a mono signal.

Stereo
This mode reproduces only the left and right front sound signals. You only hear a stereo sound if the broadcast which you are receiving is transmitted in stereo or nicam stereo.



* Manufactured under license from Dolby Laboratories, "Dolby Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Copyright © 1992, 1997 Dolby Laboratories, Inc. All rights reserved.

Features menu

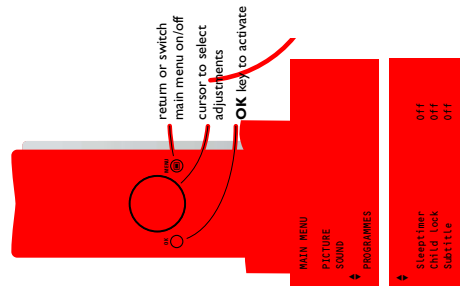


- 1 Press the **OK** key to display/cancel the **MAIN MENU**.
- 2 Use the cursor in the up/down directions to select the **FEATURES** menu.
- 3 Press the cursor right to activate the selected menu.
- 4 Use the cursor in the up/down directions to select a menu item.
- 5 Use the cursor in the left/right directions to select the desired setting.

With two extra front loudspeakers connected

To enhance the sound reproduction of your TV you may connect two extra front loudspeakers via an external amplifier. See Connect Peripheral Equipment, Extra Loudspeakers/Amplifier, p. 30
In the Surround modes, Hall and Stereo (+ amp) is added to indicate that you should switch on your amplifier as in these modes the internal TV speakers do not produce any sound.
The subwoofer output is muted.

Note: If extra front speakers are connected and selected, all internal TV speakers produce centre sound in the surround modes Pro Logic, Dolby 3 Stereo, Dolby Digital, and MPEG.

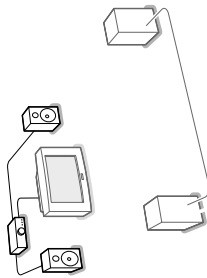

Press the **OK** key to return to the **SOUND** menu.

Dolby Digital sound reception info via the **OK** key

Press the **OK** key.
When Dolby Digital sound is reproduced, the sound info on screen displays the number of loudspeaker signals which are transmitted.
This is indicated by 2 numbers: the first one indicates the number of front loudspeaker signals, the second one the number of rear loudspeaker signals.
Eg. "Dolby Digital 3/2" means that 3 front signals are transmitted: left, right and centre, and 2 rear signals: left and right surround.
"Dolby Digital 1/0" means that a mono signal is transmitted.
"Dolby Digital 2/0" means that the transmission contains a stereo signal which can be Dolby Pro Logic encoded.
In this case the surround mode will display Dolby Pro Logic.

Programme list

- 1 Press the **OK** key to display/cancel the **MAIN MENU**.
 - 2 Select **PROGRAMMES** with the cursor up/down.
 - 3 Press the cursor right to activate and to display an overview of all the TV channels installed.
 - 4 Press the cursor up/down to run through the list and press **OK** to select the desired TV channel.
- Press the **OK** key to switch off the Programme list.

Sleep timer

With the sleep timer you can set a time period after which the TV should switch itself to standby.
The counter runs from **Off** up to **180 min**.
One minute before the TV is set to go to standby, the remaining seconds appear on screen. Not visible in dual screen mode. You can always switch off your set earlier or change the set time.

Child lock

If the child lock is on, the TV can only be switched on with the remote control. The **P** - and + keys on top of the TV cannot be used to select a TV channel. In this way you can prevent unauthorised use of your TV.
If the message **Child lock On** appears, the child lock must be switched off before you can use the **P** - and + keys on top of the TV to select a TV channel.


Subtitle

TV channels with teletext often transmit certain programmes with subtitling. See Teletext, Continuous Subtitles, p. 26 how to select the proper subtitle page from the teletext index.
Select **Subtitle On** or **Off**.

Press the **OK** key to switch off the Features menu.

Dual screen

Only for 32-36PW9767

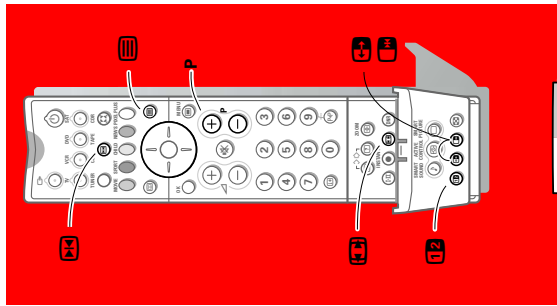

- 1 Press the **[Left Arrow]** key to switch on Dual screen.
The TV screen is divided into 2 parts:
- the left side for the picture of the selected TV channel;
- the right side for the picture from the TV channel in the favourite programme list following on the selected TV channel.
 - 2 Press the **[Right Arrow]** key under the door of the remote control to select a vertical squeezed or a non vertical squeezed picture size.
- Select left and right pictures**
- 1 Press **+ P** - to run through the TV channels in the left picture.
 - 2 Press the cursor up/down to select the TV channels in the right picture.
Also TV channels which are not in the favourite list may be selected.
Press the cursor left/right to select peripheral equipment connected to **EXT1, EXT2, EXT3, EXT4 or FRONT**.
 - Selecting TV channels in the right picture with the cursor up/down is not possible when a menu is displayed on the screen.
 - Programmes via a decoder/descrambler can not be reproduced in the right picture.
 - The sound of the right picture can be heard via headphones. Only programmes via a peripheral can be heard in stereo.
 - Zooming is reset to 1x when Dual screen is switched on.

Swapping screens

Press the **[P]** key to swap the right and left picture. The sound is swapped as well.

Select still picture

- Press the **[Freeze]** key to freeze the left picture.
- Press the **[Freeze]** key to freeze the right picture.


Possible Dual screen combinations

- TV channel/TV channel: see Select left and right pictures.
 - TV channel/Peripheral: see Select left and right pictures.
 - Peripherals/TV channel
 - Select the connection (**EXT1, EXT2, EXT3, EXT4 or FRONT**) of the connected peripheral.
 - Press the **[P]** key.
 - TV channel/Teletext
 - Press the **[Teletext]** key to display teletext of the selected TV channel.
 - Press the **[Freeze]** key.
- To operate teletext, see p. 25.
- The **+P** - keys can only be used to run through the teletext pages.
 - Press the **[Teletext]** key again to return to a full screen picture or press the **[Teletext]** key again to return to a full teletext picture.
- TV channel/NEXTVIEW
 - Press the **[NEXTVIEW]** key to display NEXTVIEW.
 - Press the **[Freeze]** key.
- To operate NEXTVIEW, see p. 20
- Press the **[Teletext]** key again to return to a full screen picture or press the **[Teletext]** key again to return to a full NEXTVIEW picture.

BBC1	BBC2
BBC1	EXT2
EXT2	BBC1
BBC1	CEEFAX
BBC1	NEXTVIEW

Dual screen

Only for 28-32PW9617

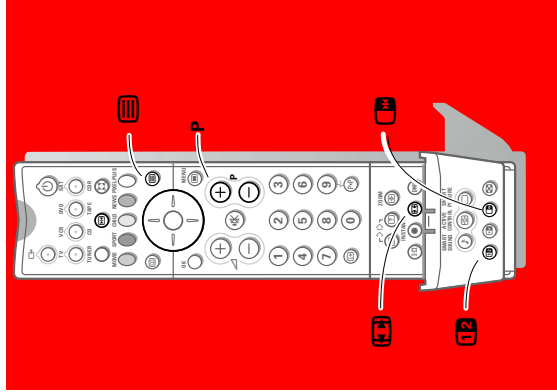

- 1 Press the **[Left Arrow]** key to switch on Dual screen.
The TV screen is divided into 2 parts:
- the left side for the normal main picture;
- the right side for teletext broadcast by the selected TV channel or for NEXTVIEW.
- To operate NEXTVIEW, see p. 20.
To operate teletext, see p. 25.
- If Dual screen is **Off**, the picture, teletext or NEXTVIEW is displayed full screen.
- 2 Press the **[Right Arrow]** key under the door of the remote control to select a vertical squeezed or a non vertical squeezed picture size.
 - 3 Press **+ P** -, digit keys or colour keys to run through the teletext pages.
 - 4 Press the **[Teletext]** key to return to a full picture screen and to select another TV channel with the **+ P** - keys or with the digit keys.

Select still teletext picture

Press the **[Freeze]** key to freeze the teletext picture.
The info in this page is not being updated by the teletext broadcaster.

NEXTVIEW / Teletext guide


In the Setup menu, p. 8, you were asked to select a NEXTVIEW provider. If the selected provider supports nextTVView then the TV will automatically present the NEXTVIEW programme schedule. If the TV channel supports just teletext, then the TV will switch automatically to teletext guide. Both facilities are offering the same functions: record, remind, info and watch. However, in case of Teletext guide the broadcaster is responsible for the availability of these functions.

Some broadcasters provide information about their own programmes and sometimes other TV channels for one or more days. You can search for the programmes you want to watch up to 7 days in advance. It is also possible to search for a programme by theme, e.g. sport, movie, etc. Once a programme has been selected it can be tagged, to remind you, or to record on the video recorder automatically (provided the video recorder is equipped with NEXTVIEWLink), once, daily, weekly or series. Teletext guide/NEXTVIEW also allows direct access to detailed information about programmes if provided by the broadcaster.


The broadcaster is responsible for the content of the information. The TV is responsible for the capture of that information and for the presentation to the user.

Use of the Teletext guide/NEXTVIEW menus

- 1 Press the **OK** key on the remote control to display/cancel the Teletext Guide/NEXTVIEW menu.
- 2 Use the cursor in the up/down, left/right directions to select the date, **DAY** for the daily guide, **THEME** for the theme guide, **OVERVIEW** for an overview of all the programmes which are marked as reminders or for recording, the programme guide page number or to enter the programme list.

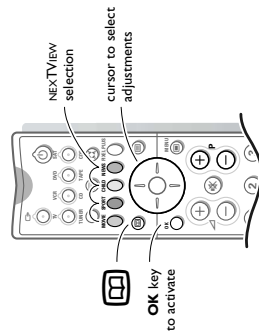

Teletext guide

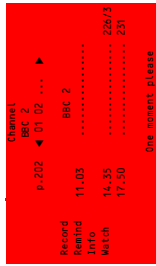

TV channels which broadcast teletext also transmit a page with the programme guide of the day. For each selected TV channel the programme guide page can be selected with the **OK** key:

- automatically if the selected TV channel supports services like PDC (Programme Delivery Control) or MP (Magazine Inventory Page).
- if automatic pre-selection is not possible then the index page is displayed and the proper programme guide page number of the selected TV channel has to be entered with the digit keys.

The programme guide page will be stored automatically only if it satisfies Video Programming via Teletext (VPT) requirements.

Every time you press the **OK** key, the programme guide page of the selected TV channel will be available if the TV channel does not support NEXTVIEW.


The function items record, remind, info and watch, corresponding with the coloured keys, become highlighted if the displayed programme page satisfies the Video Programming via Teletext (VPT) requirements. Select a Programme item and press one of the function keys, e.g. Record or Remind. See Basic functions further on. The Info item is enabled if the selected programme contains a page number with an optional subcode referring to a page with more info about the programme.

NEXTVIEW modes to sort and represent information

Menu
If in the Setup menu, see p. 8, you have selected a TV channel as NEXTVIEW provider which also supports NEXTVIEW, NEXTVIEW menu is displayed or can be selected. The selected TV channel is responsible for this menu. The NEXTVIEW menu appears when NEXTVIEW is switched on.

Use the cursor up/down to select a menu item. Use the cursor right to select the menu item. While going through the menus, the TV is collecting the sorting criteria to finally display a list of programme events. The functions in the left column are shown at reduced brightness as long as the menu is displayed. If **None** has been selected as NEXTVIEW provider in the Setup menu, the broadcaster's defined menu will not be available.

Day
The day guide provides an overview of all programme titles active in the selected time block. Time blocks are 15 minute intervals starting from the current time of the current day. The default order is based on the programme list of the favourite TV channels as stored in the installation of the TV. TV channels not marked as favourite TV channels will not appear. Default NEXTVIEW opens with the day screen if the broadcast does not have its own menu.

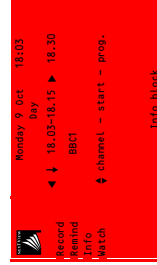


NEXTVIEW




- 3 Select a programme with the cursor up/down.
- 4 Press one of the colour keys to select one of the basic functions (if available): record, remind, watch, info. See Basic functions further on.
- 5 Press the **OK** key to return to the header area again.


Teletext guide

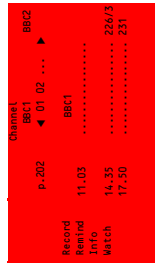


- 3 Enter the proper programme guide page number with the digit keys or with the **- P +** keys.
- 4 Press the cursor left/right to run through the subpages.
- 5 Select a programme with the cursor up/down.
- 6 Press one of the colour keys to select one of the basic functions (if available): record, remind, watch, info. See Basic functions further on.
- 7 Press the **OK** key to return to the header area again.

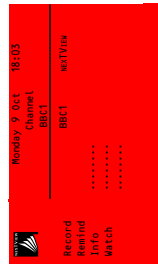

Channel
The Channel guide provides an overview of all programmes that are broadcast by a single channel during one day. Previous programmes can be made visible via cursor up. The list will start with the earliest broadcast programme. With cursor left/right another favourite TV channel can be selected.

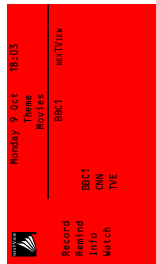


Theme
The theme guide displays a list of all programmes at the selected date, that matches with the selected category (news, sport, culture, movies, ...). The default starting item will be the current or next programme on the current TV channel. The **THEME** selection is only present if programmes in the TV guide have defined themes.

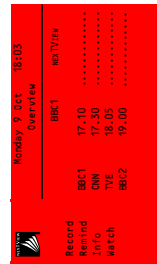

Overview
The Overview menu provides a list of programmes that are marked as reminders and those that have to be recorded. When more than one programme to be recorded has an overlap in time, these programmes will be marked by a red colour. After the programme has been broadcast, all items set for once will be deleted from the list the following day. This menu can be used to change a reminder or programmes to be recorded.

Note: the TV will automatically interpret the broadcast time (as shown on the teletext guide) of your selected programme into the correct local time and date.

Basic functions

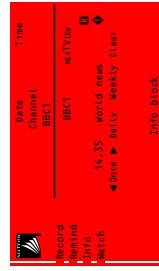

The functions Record, Remind, Info and Watch can be activated with the corresponding colour keys on the remote control. If the function is not available, then the text is shown at reduced brightness. Select a programme with the cursor up/down.

Record [R] or Remind [R]

- Press the red colour key to activate **Record** or the green colour key to activate **Remind**.
If the programme number of the broadcaster is not yet known, a message appears with the request to input the correct programme number with the cursor left/right and press OK.
- A small menu pops up in which you can choose the interval: once, daily or weekly, or clear an earlier made record or remind setting. The default interval is set to **Once**. If a programme is an episode of a series, it is identified by the system and the options **daily** and **weekly** are replaced by the option **series**. In this case the system identifies when the next episode of the series will be broadcast. This is not possible in the Teletext guide.
- Use the cursor in the left/right directions to select the interval.
The colour of the tag refers to the interval.
Press the **OK** key.

When Record [R] is activated:

Storing appears to indicate the video recorder is programmed.

When Remind [R] is activated:

- a message will appear on the screen the moment the tagged programme with [R] starts, when watching the TV later on.
- the TV switches on the moment the tagged programme with [R] starts, when the TV is in standby.

*Note: Recordings and reminders are not possible when the broadcaster does not transmit dates and times of the programmes. The message **No TV programming possible** appears. Make sure you are on the TV programming page.*

Info


- Press the yellow colour key to activate **Info**. Advertisements or information relating to the selected programme are displayed. In some cases all of the information does not fit on the screen. Use the cursor up/down to browse through all of the information.
- Press the yellow colour key again to switch off the information.

Watch

Press the blue colour key to activate **Watch**. This function is only available if a currently broadcast programme is selected. Otherwise the function is not available. The selection causes the TV to tune to the selected TV channel. **NEXTVIEW** is switched off.

Teletext

Select Picture/NEXTVIEW-Teletext Guide

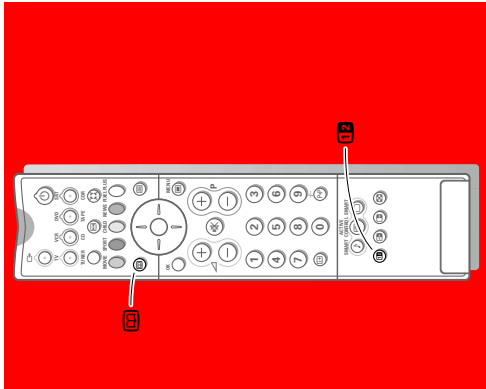

Press the **Teletext** key.
Press the **NEXTVIEW** key.
The screen is divided into two parts: the left side for the normal main picture, the right side for NEXTVIEW/Teletext Guide.
Press the **Teletext** key to return to a full NEXTVIEW/Teletext guide screen and press the **NEXTVIEW** key to return to a full picture screen.

Most TV channels broadcast information via teletext. Each channel which broadcasts teletext transmits a page with information on how to use its teletext system. Look for the teletext page with the main index (usually p. 100). Depending on the TV channel, teletext is transmitted in different systems.


The colours used in the options line correspond with the colour keys of your remote control.

About Easy Text

Easy Text considerably reduces the waiting time (on condition that the teletext broadcast of the particular TV channel is received for at least half a minute) by:

- a direct selection of previous and following pages which are in transmission and of the pages referred to in the options line
- a habit-watcher list: frequently used pages are put automatically in a list of preferred pages, so that they are immediately available
- the precapturing of the page numbers referred to in the displayed page
- the precapturing of all the subpages.

Switch Teletext on and off

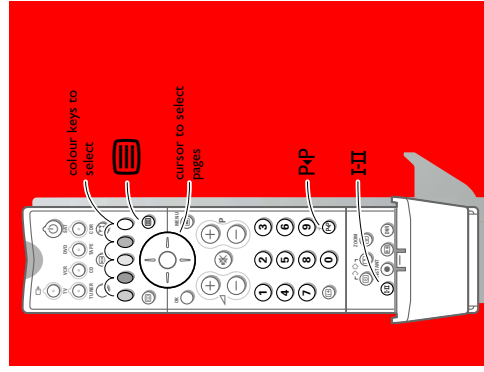

Press **Teletext** to switch the teletext on or off.
The main index page appears on the screen together with two information lines at the top and one option line at the bottom of the screen.

Remark: if the displayed teletext characters on screen do not correspond with the characters used in your language, press the **Teletext** key, under the cover of the remote control, repeatedly to select language group 1 or 2.

Select a Teletext page


With the digit keys

Enter the desired page number with the digit keys. The page counter seeks the page or the page appears immediately when the page number has been stored in the memory.
A message appears when you have entered a non-existent or incorrect page number. Page numbers beginning with 0 or 9 do not exist. Choose another number.

With the option line

Select with the colour keys, corresponding to the coloured options at the bottom of the screen, the desired subpage.

Select Picture/Teletext

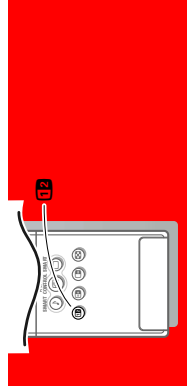

Select a TV channel which broadcasts teletext.

Press the **Teletext** key.

Press the **NEXTVIEW** key.

The screen is divided into two parts: the left side for the normal main picture, the right side for teletext broadcast by the selected TV channel.

Press the **Teletext** key to return to a full screen picture or press the **NEXTVIEW** key to return to a full teletext picture.

Quickly run through the teletext pages

Press the cursor up/down or the **Teletext** + keys to run through the previous or the following pages.

Select the previously selected txt page

Press the **PAP** key.

Acquisition and updating of NEXTVIEW info

Acquisition and updating of NEXTVIEW is done when you are watching the TV channel of the selected NEXTVIEW provider, see Setup menu p. 8, or when the TV is switched to standby.

The indicator on the front of the TV remains orange during standby.

After all needed acquisition or updating is complete, it turns red.

Acquisition of fresh data will happen once during the night.

Note: it may be necessary to put the TV in standby mode when all NEXTVIEW information is outdated, e.g. returning from holiday.

Video recorder restrictions with NEXTVIEW

The **Record** item and the automatic recording will only be present and possible if your video recorder is equipped with NEXTVIEWLink.
Your video recorder should be connected to **EXTERNAL 2**. See Connect Peripheral Equipments, p. 27.

The daily, weekly and series options, the number of recordings set and the way overlapping recordings are managed, depend on the type of video recorder you have. When all video recorder timers are full, **No free record timer** appears on the screen.

Upload video recorder overview.


When the TV is switched on, the timer recordings are uploaded to the TV to check if any manual addition or deletions have been done. This is shown in the overview. The video recorder manages and removes timer recordings when performed.

Some NEXTVIEWLink video recorders do not allow a daily programming of the recording to start on a Saturday or Sunday. In this case the item **daily** will be removed from the menu on those days.

Connect Peripheral Equipment

There is a wide range of audio and video equipment that can be connected to your TV. The following connection diagrams show you how to connect them.

Video recorder

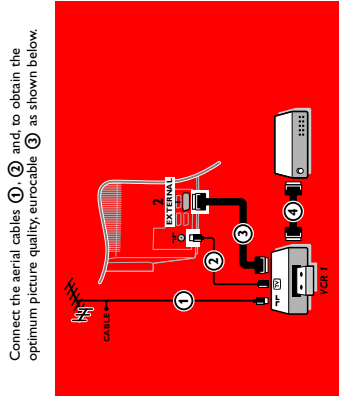

Connect the aerial cables ①, ② and, to obtain the optimum picture quality, eurocable ③ as shown below.


If your video recorder is provided with the EasyLink function, the eurocable supplied with it should be connected to EXTERNAL 2 to benefit from the EasyLink functionality.

If the eurocable ③ is not used the following steps are required:

- 1 Search for and store the test signal of the video recorder
- 2 Unplug the aerial cable ① from the aerial socket of your video recorder.
- 3 Switch on your TV and put the video recorder on the test signal. (See the handbook for your video recorder)
- 4 Search for the test signal of your video recorder in the same way as you searched for and stored the TV signals. See Installation, Searching for and storing TV channels, Manual Installation, p. 6.
- 5 Score the test signal under programme number 0 or between 90 and 99.
- 6 Replace the aerial cable in the aerial socket of your video recorder after you have stored the test signal.

Select the index teletext page

Press the grey colour key to display the main index (usually p.100).

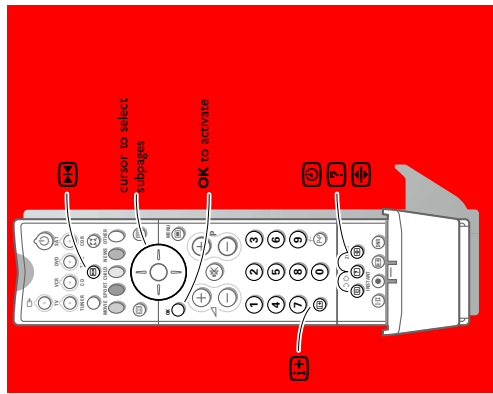

Only for T.O.P teletext broadcasts :
TOP orders the pages in categories and adds other possibilities of enhancing ease of use.
Press [3]. ATOP over view of the teletext subjects available is displayed.
Not: all TV channels broadcast T.O.P teletext. When the teletext system is not T.O.P teletext, a message appears at the top of the screen.
Select with the cursor up/down, left/right the desired subject and press the OK key.

Select subpages

When a selected teletext page consists of different subpages, one of the subpages appears on the screen. The coloured number in the first information line refers to the displayed subpage.
The other subpages can be selected in 2 ways :

With the cursor left/right

The other subpage numbers appear in white as soon as the transmission has found them. They are stored in the memory so that they are available while the teletext page is on screen.
Select with the cursor left/right the previous or the following subpage.

With the OK key

- Enter the subpage number yourself:
Press [OK]. Enter the desired subpage with the digit keys : eg. 3 for the third page of seven subpages.
The TV searches for the selected subpage.

Automatically rotating subpages:

- Press [OK] again to cancel the entered digit key for the subpage.
Now the subpages rotate automatically.
- Press [OK] again to select the subpages with the cursor left/right again.

Special teletext functions

- Hold**
Press [OK] to stop the automatically rotating of the subpages or to stop the page counter from seeking when you have entered a wrong page number or when the page is not available.
Enter another page number.
- Enlarge**
Press [2] repeatedly to display the upper part, the lower part and then to return to the normal page size. When the upper part is displayed, you can scroll the text line by line using the cursor up/down.
- Reveal**
Press [3] to reveal/conceal the hidden information, such as solutions to riddles and puzzles.

Select Continuous Subtitles

TV channels with teletext often transmit programmes with subtitling. For each TV channel you can store a subtitle page which will be displayed continuously if the programme being broadcast is transmitted with subtitles.


Switch on teletext and select the proper subtitle page from the index.
Switch off teletext.
Now the subtitle page is stored for the selected TV channel.

Once subtitles have been stored and Subtitle On has been selected they will automatically be displayed on the selected TV channel if subtitles are in the transmission. Select Subtitle On or Off in the Features menu, see p. 17. The subtitle symbol [SUB] appears when Subtitle On is selected.

Remark: you are in teletext mode, so only teletext functions are available.

Decoder and video recorder
Connect a eurocable ③ to your decoder and to the special euroconnector of your video recorder. See also the video recorder handbook.
See Define Decoder/Discrambler prog. numbers, p. 8.
You can also connect your decoder directly to EXTERNAL 1 or 2 with a eurocable.

Video recorder and other equipment (except Digital Sources)

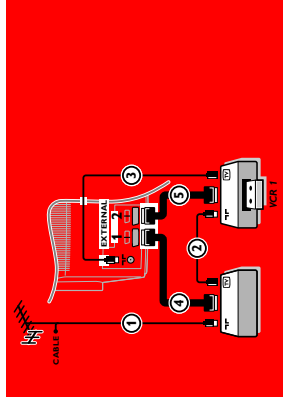


- 1 Connect the aerial cables ①, ② and ③ as shown. Better picture quality can be obtained if you also connect eurocable ③ to EXTERNAL 2, and a eurocable ④ to EXTERNAL 1, 3 or 4.
- 2 Look for the test signal of your peripheral in the same way as you do for a video recorder.

When a video recorder is connected to EXTERNAL 1 you can only record a programme from your TV.
Only when a video recorder is connected to EXTERNAL 2 it is possible to record a programme from your TV as well as from other connected equipment. See Record with your video recorder, p. 33.

Note: EXTERNAL 1 can handle CVBS and RGB, EXTERNAL 2 CVBS, Y/C and RGB, EXTERNAL 3 and 4 only CVBS. It is preferred to connect peripherals with RGB output to EXTERNAL 1 or 2 as RGB provides a better picture quality.


Camera & camcorder

- 1 Connect your camera or camcorder to sockets at the right side of your TV.
 - 2 Connect the equipment to **VIDEO 2** and **AUDIO L 3** for mono equipment. Press the **III** key repeatedly to select the sound coming from one or both loudspeakers of your TV.
 - 3 For stereo equipment also connect **AUDIO R 3**.
- S-VHS quality with an S-VHS camcorder is obtained by connecting the S-VHS cables with the **S-VIDEO** input **1** and **AUDIO** inputs **3**.
- Warning: Do not connect cable 1 and 2 at the same time. This may cause picture distortion!*

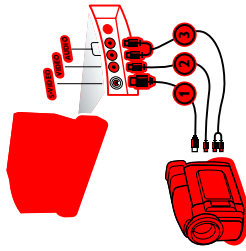


Wired rear loudspeakers

When no wireless RF surround sound is possible or when there is too much interference you can still enjoy Dolby Pro Logic and Dolby Digital surround sound by connecting the two rear loudspeakers to the TV with a stereo cinch to stereo 3.5 mm jack cable. Connect the (not supplied) cable with the **PRE-AMP IN (TV)** connector at the back of the active surround loudspeaker and with the black and red **REAR R** or **L** outputs at the back of the TV.

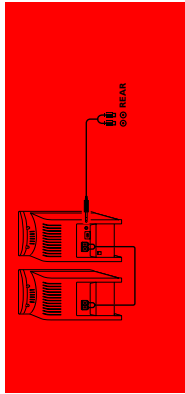


Headphone



- 1 Insert the plug into the headphone socket (H) at the right side of the TV.
 - 2 Press **HK** on the remote control to switch off the internal loudspeakers of the TV. *The headphone impedance must be between 8 and 4000 Ohm. The headphone socket has a 3.5 mm jack.*
- In the **SOUND** menu select: **Headphone volume** to adjust the headphone volume.

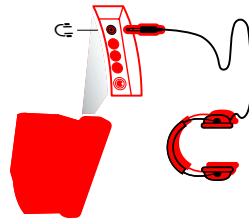

Digital equipment (DVD, digital Set Top Box,...)

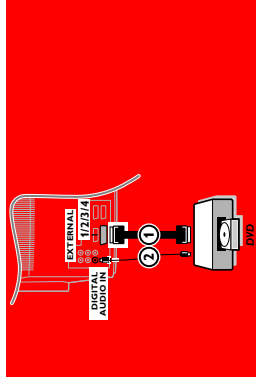

- 1 Press **2** and **7** at the same time.

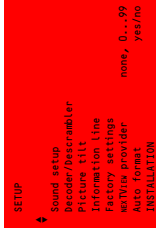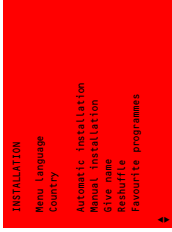

Connect your digital equipment with a eurocable **1** to one of the euroconnectors (**EXT1**, **EXT2**, **EXT3** or **EXT4**), or with a cinch cable to the **VIDEO** input at the right side of the TV (see illustration above).

For digital sources with a Dolby Digital (AC-3)/MPEG2 audio output also connect an audio cable **2** to the **DIGITAL AUDIO IN** socket of your TV to enjoy MultiChannel surround sound. This is only valid when you have connected your digital equipment to **EXT1**.

- 2 Select **Digital sources** in the **Setup** menu of the **INSTALLATION** menu and select:
 - **None** if you have no digital source connected,
 - **EXT1**, **EXT2**, **EXT3** or **EXT4** if you have connected your equipment to a euroconnector,
 - **EXT1 + Dig. Audio** if you have connected your digital equipment with a Dolby Digital/MPEG2 audio output to **EXT1** and to the **DIGITAL AUDIO IN** socket,
 - **EXT1.2.3** or **4 + Dig. STB** if you have connected your Digital Set Top Box to one of the euroconnectors,
 - **FRONT** in case you connected your equipment to the right side of the TV.

- 3 Press the **2** key to switch off all menus.

*Note: When you have connected a digital source + Digital audio to **EXT1** and a digital STB to one of the other externals*

- 1 Always select **EXT1 + Dig. Audio** in the Digital sources menu.


- 2 When you want to watch digital broadcasts via your Set Top Box, use the **2** key on the remote control, to select the external where the STB has been connected. **Multimedia** setting using the Smart Picture **2** key without changing the picture settings manually.

Other equipment


Other equipment can be connected to one of the remaining euroconnectors.

Connect Extra loudspeakers / Amplifier

Stereo amplifier and two extra FRONT speakers
To enhance the sound reproduction of your TV you can connect two extra speakers via an external amplifier.

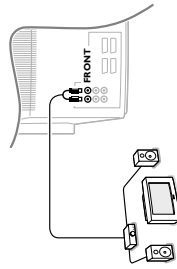

Connect extra subwoofer

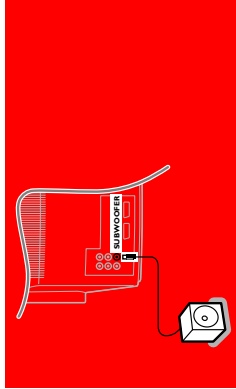

- 1 Connect the audio cables to the audio input of your amplifier and to **AUDIO FRONT L** and **R** at the back of your TV. The output level is controlled by the volume control of your TV.
Note: Switch off the TV and your audio amplifier before connecting them. Set the audio amplifier's volume to minimum.
- 2 Select **Extra front speakers Yes (Amp)** in the Sound Setup menu. See p. 9.
See Surround settings, p. 15 for the available Surround modes.
- 3 Adjust the volume of the audio amplifier.
You may make use of the test tone function in the Surround Settings menu, see p. 14, to have a reference of the loudness of the separate loudspeakers.
Note: Once you have adjusted the volume of the amplifier, do not change it while watching TV as the whole configuration operates with the volume adjustment of your TV.

Dolby Pro Logic Surround amplifier

Although your TV is already equipped with a Digital Multichannel decoder you might want to connect your own Dolby Surround amplifier.

- 1 Connect the Dolby Pro Logic Surround amplifier to the **AUDIO FRONT L** and **R** at the back of your TV.
- 2 Select **Extra front speakers No** in the Sound Setup menu. See p. 9.
The audio output is now independent of volume, treble, bass and surround settings.
- 3 Switch off the volume of the TV with the mute key .
All volume settings, tone control and speaker connections have to be done via the external Dolby Pro Logic amplifier.


Attention: the sound info on screen will not correspond with the actual sound reproduction. You will not be able to reproduce multichannel Dolby Digital or wireless surround sound through the AUDIO L and R output of your TV.

To select connected equipment

If the TV is connected to a video recorder with the EasyLink function, in some cases the TV will be switched on, even when it was in standby. (E.g. playmode, tape...)
This is not possible when Child Lock On is selected.

Equipment connected with an aerial cable only :
Select the programme number under which you have stored the test signal with the digit keys.

Equipment connected to a euroconnector or to the right side of the TV

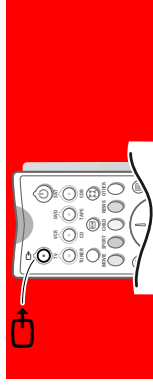


Press the **CH** key repeatedly to select **EXT1, EXT2, EXT3, EXT4** or **FRONT**, according to where you connected your equipment at the back or the right side of your TV.
Remark: Most equipment (decoder, video recorder, satellite receiver) carries out the switching itself.

If you want to change to TV channels?

Enter the programme number of the TV channel which you want to watch with the digit keys or press the **TV** key.

Audio- and video equipment keys

Most of the audio and video equipment from our range of products can be operated with the remote control of your TV.

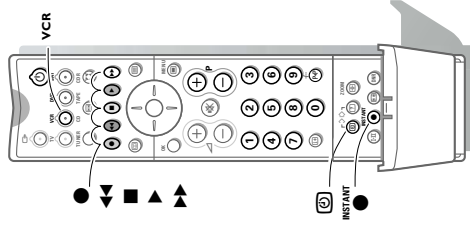


Press the **VCR, DVD, SAT, TUNER, CD, TAPE** or **CDR** key according to the equipment you want to operate with this remote control. See Use of the remote control, p. 10.

Video recorder
Press one of the video recorder keys after you pressed the **VCR** key.

- for record,
- ◀ for rewind,
- for stop,
- ▶ for play,
- ▶▶ for fast forward,
- /- for selecting 1- or 2-digit programme numbers from the videorecorder,
- P + for sequential programme selection from the video recorder tuner,
- 0 to 9 to select a programme number from your video recorder tuner,
- ⏻ to switch the video recorder to standby
- ⏸ VCR timer

These keys function with equipment which use the IEC5 signalling standard.

*If your video recorder has the EasyLink function the key **INSTANT** ● for recording under the door of the remote control can be operated in the TV mode.*
*If your EasyLink video recorder has the system standby function, when you press the **⏻** key for 3 seconds, both TV and the video recorder are switched to standby.*

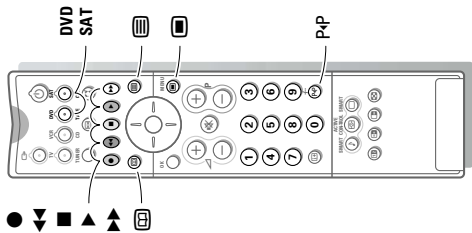


- DVD keys**
Press one of the following keys after you have pressed the DVD key.
- to switch the DVD menu on or off
 - to select a DVD chapter
 - to select a DVD title
 - to select your choice of subtitle language
 - pause
 - to search down
 - stop
 - play
 - to search forward
 - 0-9** to enter a programme number from your DVD
 - OK** to enter the selected menu item

These keys function with equipment which use the RC6 signalling standard and with Philips DVD players.

Satellite receiver keys
Press one of the TV keys after you have pressed the SAT key.

These keys function with equipment which use the RCS signalling standard.

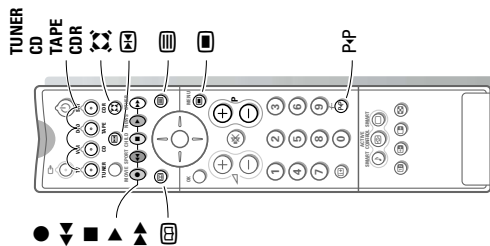

- Tuner, CD, Tape and CDR keys**
Press one of the following keys after you have pressed the TUNER, CD, TAPE or CDR key.
- to switch the menu on or off (tuner)
 - to select a frequency (tuner)
 - to record
 - to search down (tuner); rewind (CD/tape); speed down (CD)
 - stop
 - play
 - to search up (tuner); forward (CD/tape); speed up (CD)
 - RDS display (tuner); info on screen (CD/CDR)
 - RDS news/TA (tuner); disc increment (CD/CDR)
 - pause (CD/CDR/tape)
 - surround modes (CD/CDR/tape)
 - + P -** next/previous (CD)

Record with your video recorder without EasyLink

To record S-VHS quality, connect an S-VHS peripheral directly to the video recorder.

- 1** Record a TV programme
- 2** Select the programme number on your video recorder.
- 3** Set your video recorder to record.
- 4** See the handbook for your video recorder.

Switching programme numbers on your TV does not disturb recording.

Record a programme on your video recorder connected to EXTERNAL 3 from Audio/Video equipment connected to EXTERNAL 1, EXTERNAL 3, EXTERNAL 4 or to sockets on the right side of the TV


- 1** Switch on the equipment.
- 2** Select the right external on your video recorder.
- 3** Set your video recorder to record.
- 4** You record what you are watching on the screen.

Do not switch programme numbers or do not switch off your TV when you are recording!

Record with your video recorder with EasyLink

If you have connected an S-VHS video recorder, provided with the EasyLink function, you can record S-VHS quality from an S-VHS peripheral connected to the right side of the TV. (E.g. from an S-VHS camcorder)

In TV mode, it is possible to start a direct recording of the programme, which is being displayed on the TV screen. Press the **INSTANT** record key, under the door of the remote control.

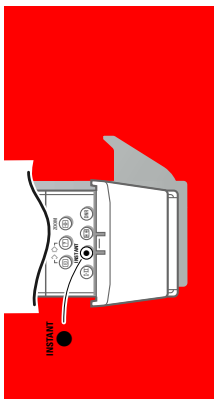

The video recorder switches on from standby and a message of what is being recorded appears on the screen. The video recorder starts recording the programme you are watching. Switching programme numbers on your TV does not disturb recording!

When recording a programme from a peripheral connected to EXTERNAL 1, 3, 4 or FRONT, you can not select another TV programme on the screen. To watch TV programmes again, press the programme number you want to select twice. Attention: the recording is stopped and your video recorder switches to standby.

If you switch to standby during recording of a programme from a peripheral connected to EXTERNAL 1, 3, 4 or FRONT, the blinking lamp on the front of your TV indicates that you are still recording. The blinking stops after the recording is finished.

Record with your video recorder with NEXTVIEWLink



If your video recorder is equipped with NEXTVIEWLink, and you tagged one or more programmes to be recorded automatically in the NEXTVIEW mode, it is not necessary for the TV to be in the standby mode or switched on for the recording to start.

Tips

Care of the screen
Clean the TV with a slightly damp soft cloth. Do not use abrasive solvent as it can damage the TV screen.

Mobile telephone warning!
To avoid disturbances in picture and sound, malfunctioning of your TV or even damage to the TV, keep away your mobile telephone from the TV.

- Poor Picture**
- Have you selected the correct TV system?
 - Is your TV or house aerial located too close to loudspeakers, non-earthed audio equipment or neon lights, etc.?
 - Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial.
 - Is the picture or teletext unrecognisable? Check if you have entered the correct frequency. See Installation, p. 6.
 - Are brightness, sharpness and contrast out of adjustment? Select Factory settings in the Setup menu, p. 8.
 - Sometimes poor picture quality is possible when having activated an S-VHS camera or camcorder connected to the right side of your TV and another peripheral is connected to EXT1, EXT2, EXT3 or EXT4 at the same time. In this case switch off one of the other peripherals.

- No picture**
- Is the aerial connected properly?
 - Are the plugs tightly connected in the aerial socket?
 - Is the aerial cable in good condition and does it have suitable plugs?
 - Are the connection facilities to a possible second TV in good condition? If in doubt, consult your dealer.

- No sound**
- No sound on any channel? Check the volume isn't at minimum.
 - Is the sound interrupted with the mute key **MUTE**? Check if your speaker configuration corresponds with the selections made in the Sound Setup menu, p. 9. E.g. is your amplifier switched on when you have 2 extra front speakers connected?
 - No sound from the rear speakers or the centre speakers? Select an appropriate surround mode, according to the broadcasted sound signal or adjust the volume or check if the wireless transmitter is properly connected. See Surround Modes, p. 15.
 - In case you connected digital equipment with a digital audio connection you have to select **EXT1** + **dig. audio** in the Sound Setup. Digital sources, p. 29 to reproduce sound.

- Remote control**
- If your TV no longer responds to the remote control, the batteries may be dead or the wrong mode (TV or other peripheral, see p. 3) is selected.
 - You can still use the **M** key and the **-/+** keys at the top of your TV.
- Menu**
- Have you selected the wrong menu? Press the same key again to exit from the menu.
- NEXTVIEW - No information**
- See Acquisition and updating of NEXTVIEW information, p. 24.
- NEXTVIEW - Displayed time is wrong**
- The broadcaster on programme number one does not transmit the correct local date on time. Use **Reshuffle** in the **INSTALLATION** menu to place another broadcaster on programme number one.

- Wireless Surround speaker system**
- Are the active surround speaker and the Surround Sound setting in the Setup menu switched to the same transmitting channel?
 - External RF equipment, mobile telephones or people moving around close to the TV may disturb the sound transmission.
 - When no RF surround sound is possible, or when there is too much interference, try to switch to another wireless channel or use the wired back up solution. See Install Sound Setup, p. 9.
 - When you switch to another wireless transmitting channel as well in the setup menu as on the speaker box.
 - For wireless transmitter modules with a built in antenna, direct the antenna to achieve the best reception.

- No solution**
- Switch your TV off and then on again once.
- Never attempt to repair a defective TV yourself.**
- Check with your dealer or call a TV technician.

End of life directives

Philips is paying a lot of attention to producing environmentally-friendly in green local areas. Your new TV contains materials which can be recycled and reused. At the end of its life specialised companies can dismantle the discarded TV to concentrate the reusable materials and to minimise the amount of materials to be disposed of.

Please ensure you dispose of your old TV according to local regulations.

How to dispose of dead batteries?

The batteries supplied do not contain the heavy metals mercury and cadmium. Nevertheless in many countries dead batteries may not be disposed of with your household waste. Please ensure you dispose of dead batteries according to local regulations.

Index

- a** ACI, 6
- active control**, 11
- double lines**, 13
- interrupt the sound**, 10
- language**, 5
- sound adjustments**, 14
- sound setup**, 9
- stereo**, 12
- store TV channels**, 5
- stroke**, 11
- subwoofer**, 30
- surround mode**, 15
- S-VHS**, 32
- switch TV on**, 4
- teletext**, 25
- triple**, 14
- v** video recorder, 27
- volume**, 10
- w** wireless surround, 9
- zoom**, 12
- 3D effect**, 14
- 3D surround**, 15
- dolby surround settings**, 14
- manual installation**, 6
- menu languages**, 5
- multitap**, 11
- n** **NEXTVIEW**, 20
- nextview provider**, 8
- nicam**, 12
- extra front speakers**, 9
- night mode**, 14
- picture adjustments**, 13
- picture format**, 12
- programme list**, 17
- Pro-Logic**, 33
- r** recording, 33
- reshuffle**, 7
- s** satellite receiver keys, 32
- search for TV channels**, 6
- setup**, 8
- sleep timer**, 17
- smart picture & sound**, 11
- active control**, 11
- automatic installation**, 6
- dynamic contrast**, 13
- e** easy text, 25
- erratic**, 27
- f** favourite programmes, 7
- factory settings**, 8
- child lock**, 17
- colour enhancement**, 13
- continuous subtitles**, 26
- country**, 5
- d** decoder/descrambler, 8
- delta volume**, 14
- digital options**, 13
- digital sources**, 29
- DNR**, 12
- dolby 3 stereo**, 15
- dolby digital**, 15
- g** give name, 7
- hall**, 15
- headphone**, 28
- hue**, 13
- i** info on screen, 10
- information line**, 8
- instant recording**, 12

Glossary

- 100 Hz Digital Scan**
- If you look at a television screen you will see small imperfections in the picture caused by line vibration. Digital Scan (an internal process) removes interline flicker. When combined with 100 Hz, you will see a totally stable image.
- Automatic Channel Installation (ACI)**
- Automatically installs all TV channels in the same order as offered by your cable company. Provided of course that the data is transmitted. It also automatically includes programme number and programme name. With ACI, channel installation is fully automatic, simple and fast.
- Child Lock**
- Feature to prevent unauthorised use of your TV.
- Digital Natural Motion**
- 100 Hz Digital Natural Motion eliminates the juddering effect that is noticeable when there are moving objects in the picture. This results in razor sharp pictures and ensures smooth movements.
- DNR**
- Digital Noise Reduction. By encoding signals digitally in 100 Hz sets, it is possible to clean up picture noise. This is especially beneficial in poor signal areas and when viewing poor quality video tapes.
- Dolby Digital**
- The audience is completely surrounded by the sound. Both the left/right/centre and subwoofer speakers and the surround speakers are driven by the digitally processed sound system of the TV. The Dolby Digital sound contains 6 independent digital channels which results in a CD sound performance from both the front and rear sound channels.
- Dolby Surround Pro Logic**
- Literally wraps you in 4-channel sound. It brings your favourite movies to life with all the realism and impact of cinema sound as though you are part of the action.
- Easy Link**
- Digital "intelligent" ESI bus-system between TV and VCR (Start connection required). Turns source selection and control into a one-button operation.
- Easy Text**
- Teletext memory that automatically memorises Teletext pages and gives you instant access to them.
- Euroconnector**
- A 21-pin connector system enabling you to simply connect various types of audio/video and computer equipment.
- Menu**
- On-screen display of functions and facilities in a well-organised survey, which you can select using your remote control.
- NEXTVIEW**
- NEXTVIEW is a new feature to assist the TV and VCR user in selecting the programmes she or he likes to watch from a television programme guide on the screen. It enables the user to see a description of every programme, and mark interesting programmes to be reminded (auto TV on) or recorded (NEXTVIEWLink video recorder required).
- NTSC**
- The broadcasting system used in the USA, Japan and parts of South America and Southeast-Asia.
- Smart Picture and Sound Controls**
- Keys on the remote control to select predefined picture and sound settings.
- Sleep timer**
- Function with which you can set a time period after which the TV should switch itself to standby.
- Picture Freeze**
- TV mode which allows you to "freeze" a certain image in order to study a specific detail at ease, e.g. to make notes of certain programme information like phone numbers.
- Teletext**
- See also Easy Text
- WST/World Standard Teletext. FLOF/Full Level One Features. System applied by the BBC, RVE... that provides a fast access to the teletext pages.
- TOP: Table of (Teletext) Pages. German system for an easy access to the teletext pages.
- Tint**
- TV-function to modify the general colour balance between cool and warm and to adjust it according to your personal preference.

4. Mechanical Instructions

Index of this chapter:

1. Set Disassembly
2. Service Positions
3. Board Removal
4. Set Reassembly

Note: Figures below can deviate slightly from the actual situation, due to different set executions.

4.1 Set Disassembly

Follow the disassemble instructions in described order.

4.1.1 Wireless Surround Transmitter Removal (if attached)

Transmitter module

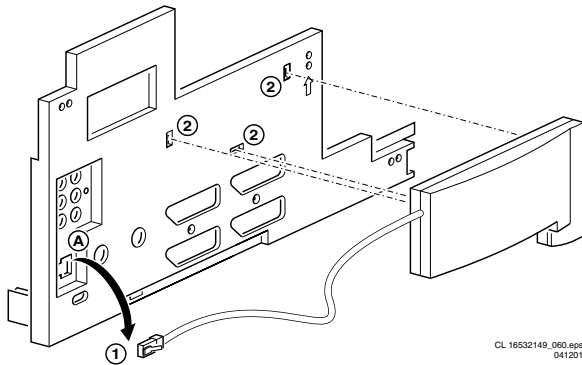


Figure 4-1

1. Remove the cable [1] of the Wireless Surround Transmitter box (at the left side of this RJ45 plug you can find the release-hook of the lock-mechanism).
2. Pull the Wireless Surround Transmitter box backwards. It is clicked to the rear cover via three clamps [2].

4.1.2 Rear Cover Removal

Rear view

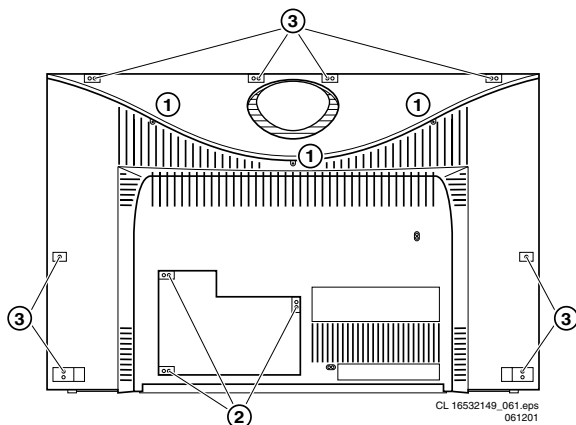


Figure 4-2

Warning: disconnect the mains power cord before you remove the rear cover.

First, remove the top cover (= plate with 'saucer'):

1. Remove the three fixation screws [1] that hold the cover plate.
2. Pull the cover (horizontally) backwards.

To be able to access the electronics of the set, you must remove the rear cover:

1. Remove the three remaining fixation screws [2] of the I/O-cover plate.
2. Remove the remaining fixation screws [3] at the two sides and the top of the rear cover.
3. Now remove the rear cover. Make sure that wires and cables are not damaged during cover removal.

4.1.3 I/O Cover Plate Removal

Cover plate

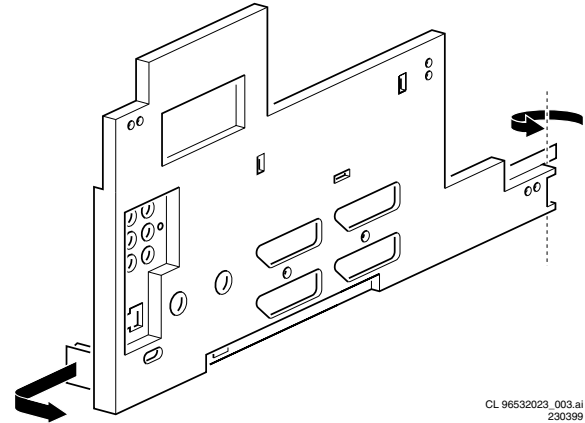


Figure 4-3

It is rather easy to remove the I/O-cover plate:

1. Release the hook on the left side (pull slightly outwards).
2. Now remove the plate (it hinges at the right side).

4.1.4 Sub-woofer Removal

How to remove the sub-woofer:

1. Disconnect the loudspeaker cable at the top of the sub-woofer box.
2. The subwoofer has two rubber feet at the bottom. Behind them, there is a snap hook. Release this hook (pull backwards), and at the same time pull the sub-woofer box upwards.
3. Now remove the sub-woofer.

4.1.5 DAF-module Removal

DAF-bracket

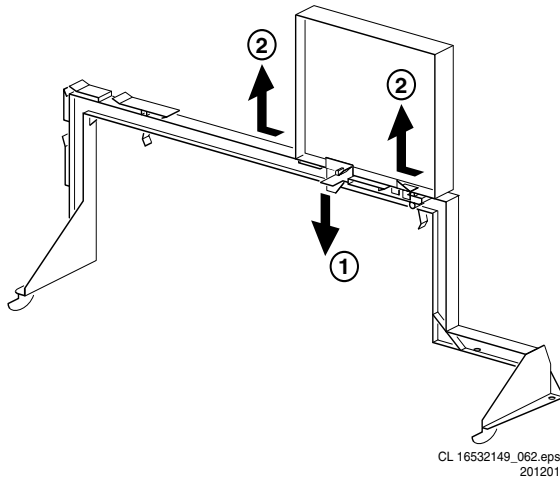


Figure 4-4

How to remove the DAF-module:

1. Press down the snap hook [1].
 2. At the same time, slide the complete DAF-module to the left
- Caution:** be very careful not to damage the CRT while doing this!.
3. Now lift the module from the LSP top bracket.

4.1.6 Support Brackets Removal

SSP support bracket

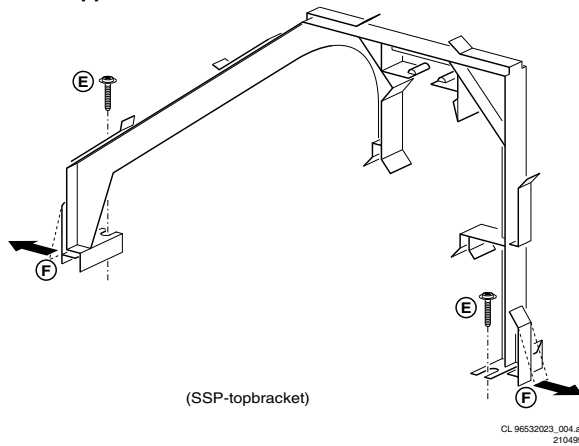


Figure 4-5

How to remove the 'module support bracket' on the Small Signal Panel (SSP):

1. Remove the two fixation screws [E].
2. Pull the snap-hooks [F] to the outside direction, and remove the bracket. The left snap-hook is somewhat difficult to release (with some effort it is possible to release it, by manipulating the hook with a finger underneath the MCS-module at the left hand side).

LSP support bracket

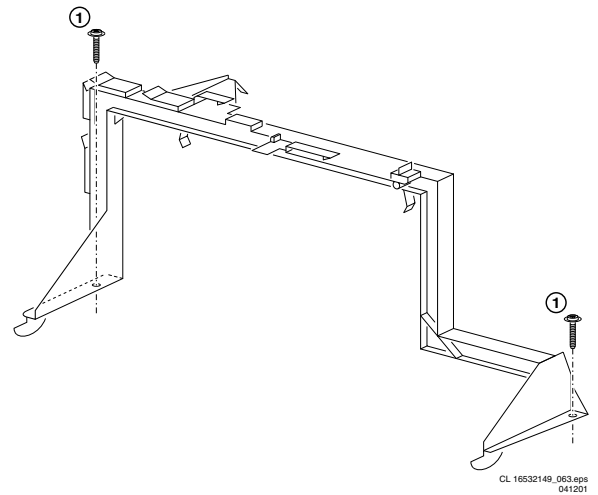


Figure 4-6

How to remove the 'module support bracket' on the Large Signal Panel (LSP):

1. Remove the two fixation screws [1].
2. Remove the Top Supply panel (besides the LSP, see 'Service position 3' below).
3. Now remove the bracket.

4.2 Service Positions

This chassis has several predefined service positions:

1. For the component side of the main chassis panels (SSP, LSP and Top Supply).
 2. For the copper side of the Multi Channel Sound (MCS) panel.
 3. For the copper side of the Top Supply panel (TSP).
 4. For the copper side of both the LSP and TSP.
- All service positions are explained in more detail below.

4.2.1 Service Position 1

Overview 1

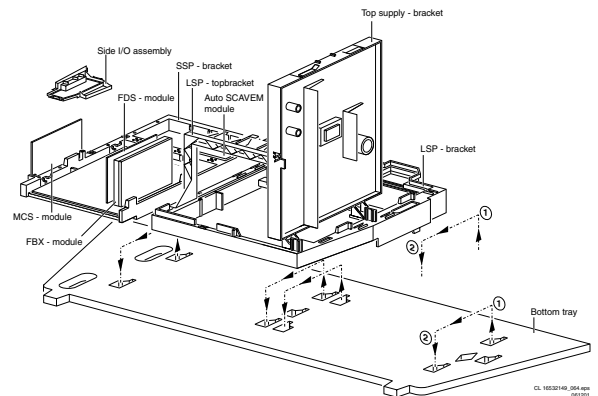


Figure 4-7

1. Pull the complete SSP- and LSP assembly about eight cm backwards
- Caution:** be very careful not to damage the CRT panel with the DAF-module!.
- The brackets are not fixed together, but can be repositioned backwards, as if they were one bracket.
2. Hook the brackets in the first row of the fixation-holes in the bottom plate (in other words: re-position the fixation from [1] to [2]).
 3. Now all important service test points are accessible at the topside of the SSP.

4.2.2 Service position 2

Overview 2

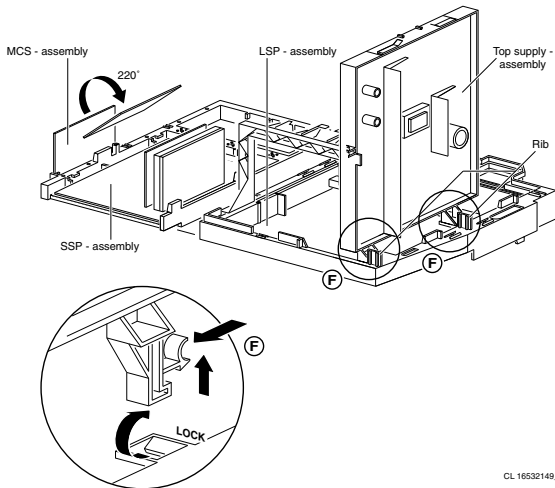


Figure 4-8

In its normal position, the MCS module can be serviced from the copper side (left hand side). In order to gain access to the other side of the board (reflow side), do the following:

1. First, release the snap construction at the bottom side of the MCS module. To do this, release the hook with e.g. a screwdriver (approach it from the rear).
2. After release, rotate the board about 220 degrees clockwise (hinge at connectors). The board can lean on the SSP top bracket.
3. All reflow components and test points on this side, are accessible now.

4.2.3 Service Position 3

Overview 3

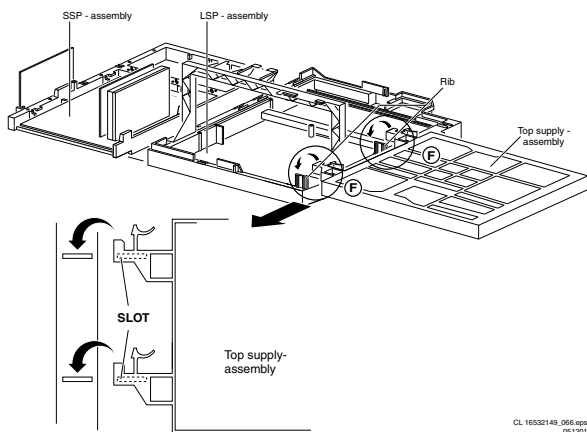


Figure 4-9

In order to gain easy access to the copper side of the Top Supply (TSP) assembly, do the following:

1. Pull the two release hooks (F) of the TSP-bracket backwards (see figure of 'Service position 2').
2. After you hear a release click, you can lift the bracket.
3. Now, rotate the assembly 90 degrees clockwise (from vertical to horizontal position).
Caution: before doing this, release the wire cables from their clamps and, if necessary, disconnect the wire cable 0390 coming from the rotation-coil.
4. Place the two support-posts [F] of the assembly over the two ribs that are available on the right side of the LSP bracket.

5. The copper side of the TSP, with its service test points is available now.

4.2.4 Service position 4

Overview 4

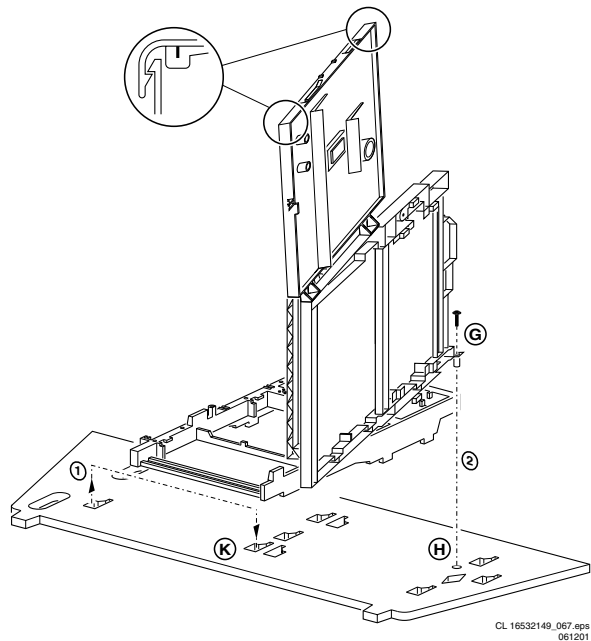


Figure 4-10

In order to gain easy access to the component sides of the LSP and Top Supply assembly, do the following:

1. First, reinforce the above-described 'TSP fixation' with a screw (the rear support-post contains a hole for this).
2. Now move as well the SSP- as the LSP bracket about 25 cm to the right.
3. Rotate the complete LSP/TSP assembly 90 degrees anti-clockwise, such that snap hook [G] is placed into hole [H]. If necessary, reinforce this construction with a screw.
4. Now you can measure all the service test points of the LSP on the right hand side, and of the TSP at the left hand side.
5. For measurement safety, shift the left front hook of the SSP bracket in the right SSP hole of the bottom plate (see [K] of service position 1).

4.2.5 FDS-module

One side is easy accessible whit the module on its place. One way to measure the other side (= FBX side) is to remove the FBX and overrule the protections (see 'Repair Tips' in chapter 5).

4.2.6 Feature Box (FBX)

First, remove the shielding of the FBX. Now, the test points on the 'LOT side' are easy accessible.

To get access to the test points on the 'FDS side', you have to remove the FDS module and bypass the RGB-path (see also the 'Repair Tips' in chapter 5).

4.2.7 Auto-SCAVEM

This panel is placed in front of the SSP. Because most of its components are placed on the bottom side, you must lift the panel from its bracket before you can measure it. Therefore release the two fixation clamps (one at the 'SSP side' and one at the 'LSP side'), and lift the panel.

4.3 Board Removal

Sometimes, it can be necessary to swap a complete Printed Wiring Board (PWB). How that can be done is explained below.

4.3.1 Small Signal Panel (SSP)

1. Remove the 'module support bracket' (see paragraph 4.1.6).
2. Release the three fixation clamps on the right hand side of the bracket.
3. Press the board upwards at the same side.
4. Remove the board from the bracket.

4.3.2 Top Supply Panel (TSP)

1. Remove the fixation screws (one at the top, one on the right side, and two on the left side).
2. Release the two top-corner snap constructions (see circle in figure 'Position 4'), by forcing them outwards.
3. The panel hinges at the bottom of the bracket. Remove the bracket, by forcing the two sides of the bracket somewhat outwards.

4.3.3 Large Signal Panel (LSP)

1. Remove the Top Supply module (see paragraph above)
2. Remove the 'module support bracket' (see paragraph 4.1.6).
3. Remove the fixation screw in the middle of the Large Signal board.
4. Release the fixation clamps on the right, rear, and front side of the bracket (the board hinges at the left side).
5. Remove the board from the bracket.

4.3.4 Top Control Assy/Panel

Control assy

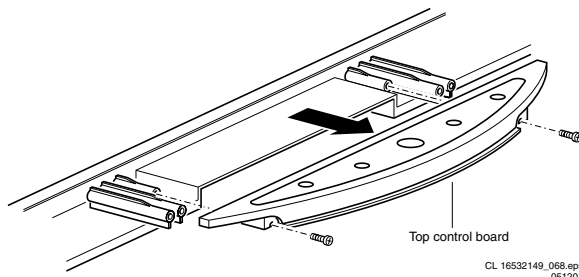


Figure 4-11

1. Release both fixation screws about 5 full turns.
2. Pull the complete assy back- and upwards (it hinges in the cabinet front).
3. Flip the assy, and you can access the board by releasing (carefully) the four fixation clamps.

4.3.5 Side-I/O Assy/Panel

Side I/O

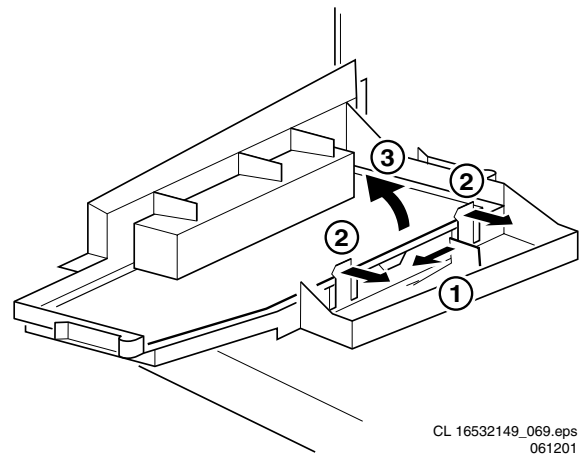


Figure 4-12

1. Release the snap-hook [1] with your finger.
2. At the same time, pull the assy backwards [2].
3. Release the two fixation clamps on the right side of the bracket (the board hinges at the left side).
4. Remove the board from the bracket.

4.3.6 Mains Switch Assy/Panel

Mains Switch

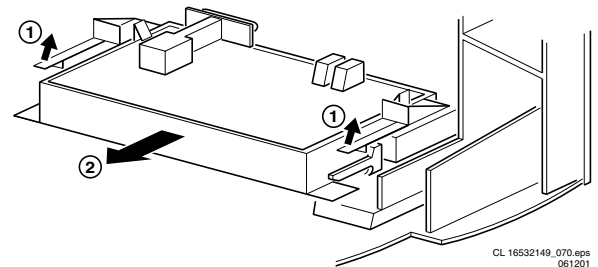


Figure 4-13

1. Release the two fixation clamps (rather difficult to reach), by pushing them upwards [1]. At the same time, pull the complete assy backwards [2]
Note: be aware that the degaussing coil can hamper this.
2. Release the two fixation clamps on the two sides of the bracket (the board hinges at the connector side).
3. Remove the board from the bracket.
4. When the light guide (sitting in the cabinet, in front of the LEDs) is defective, you can replace it by pushing it forwards at the left side (seen from the rear). It hinges at the right side.

4.3.7 Wireless Active Surround Box

Exploded view

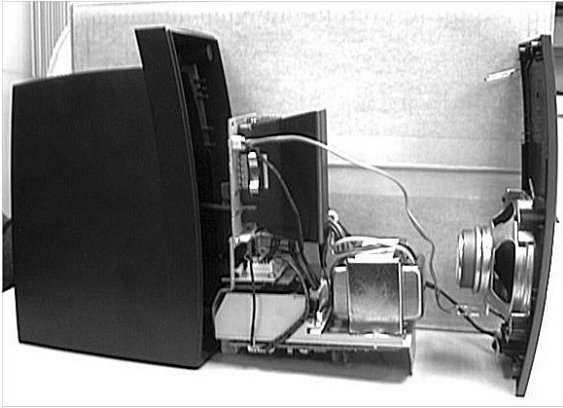


Figure 4-14

The box consists of four panels (W1 to W4), which are part of one family/combi-board. They are fixed together with wire cables (sometimes without connectors).

1. Remove the four screws which hold the front cover.
2. If necessary, unplug the loudspeaker and the LED panel (W4).
3. Remove the two screws which hold the clickfit connector for the passive loudspeaker.
4. Remove the six screws that hold the metal frame (which hold all PWBs and transformer).
5. See photo above for the exploded view.

PWB location

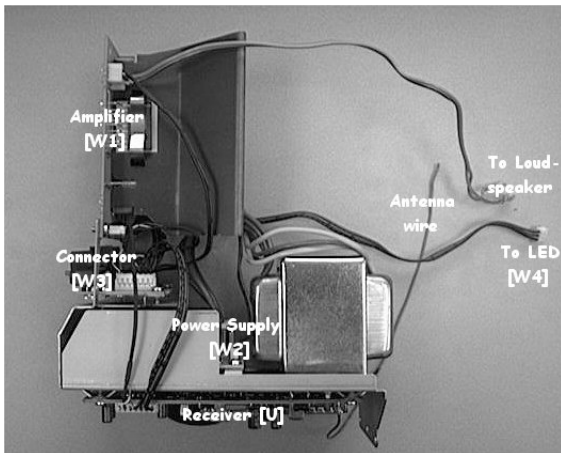


Figure 4-15

Each panel is now easily accessible to measure. If necessary, remove the panel from the metal frame by removing the belonging screws. See photo above for the panel positions. See further chapter 8.7 of the Training Manual MG3.1E.

To reassemble the box, do all processes in reverse order.

Be sure that, before the front cover is mounted:

- The (blue) antenna wire is mounted correctly in its guiding brackets.
- The 'foam dust cover' is replaced on the channel selector switch (on the bottom PWB).
- All wires/cables are returned in their original positions.

4.4 Set Reassembly

To reassemble the whole set, do all processes in reverse order.

Be sure that, before the rear cover is mounted:

- The mains cord is mounted correctly in its guiding brackets.
- All wires/cables are returned in their original positions.

5. Service Modes, Error Codes and Fault Finding

Index of this chapter:

1. Test Points
2. Service Modes
3. Problems and Solving Tips (related to TV-settings).
4. ComPair
5. Error Codes
6. Protections
7. Repair/Service Tips

5.1 Test Points

5.1.1 General Test Conditions

Perform the measurements under the following conditions:

- Service Default Mode.
- Video: Colour bar signal.
- Audio: 3 kHz left, 1 kHz right.

5.1.2 Waveform Test Points

The chassis is equipped with test points, which are, in most cases, printed on the circuit board assemblies (if not, please check chapter 6 'test point overview'). They refer to the functional blocks. The test points have names starting with I for IF, S for sound etc. The numbering is done in a logical sequence for diagnostics.

Note: Not all test points are measured, but they can serve as identification names in Service communication (e.g. ComPair fault find trees, SearchMan files).

In the following cases, there will be no waveform:

- When already a V_{DC} voltage is displayed in the diagrams, or when the waveform does not have an added value.
- External AV-inputs are not measured, as the waveform is equal to the source (dependent of load resistor matching).

5.1.3 DC-voltage Test Points

From practically all semiconductor pins, the DC-voltages are measured. These values are displayed in the circuit diagrams. If a DC-value is displayed between brackets then this value is measured in STANDBY-mode.

5.2 Service Modes

Service Default Mode (SDM) and Service Alignment Mode (SAM) offer several features for the service technician, while the Customer Service Mode (CSM) is used for communication between a Philips Customer Care Centre (P3C) and a customer.

There is also the option of using ComPair, a hardware interface between a computer (see requirements below) and the TV chassis. It offers the ability of structured troubleshooting, test pattern generation, error code reading, software version readout, and software upgrading.

Requirements: a Pentium processor, Windows 95/98, and a CD-ROM drive (see also paragraph 5.4).

5.2.1 Service Default Mode (SDM)

Purpose

- To create a pre-defined setting to get the same measurement results as given in this manual.
- To override SW protections (only when SDM is entered via the 'service pins' on SSP connector 0356).

Specifications

- Tuning frequency: 475.25 MHz for PAL/SECAM.
- Colour system: SECAM L for France or PAL B/G for the rest of Europe.
- All picture settings at 50 % (brightness, colour, contrast).
- All sound settings at 50 % (except volume: at 25 %).
- All service-unfriendly modes (if present) are disabled, like:
 - (sleep) timer,
 - child/parental lock,
 - blue mute,
 - auto switch-off (when no 'IDENT' video signal was received for 10 minutes),
 - skip/blank of non-favourite pre-sets,
 - smart modes,
 - auto store of personal presets,
 - auto user menu time-out.

How to Enter SDM

Use one of the following methods:

- Use the standard RC-transmitter and key in the code **0 6 2 5 9 6**, directly followed by the 'MENU' button.

Note: It is possible that, together with the SDM, the main menu will appear. To switch it off, push the 'MENU' button again).
- Short pins 2 and 3 on connector 0356 of the SSP (see Fig. 'SSP Component Side' in chapter 8) while the set is in the normal operation mode.

Caution: Entering SDM by this method will override all the processor-controlled protections. When doing this, the service-technician must know exactly what he is doing, as it could lead to damaging the set.
- Use the 'DEFAULT' button on the Dealer Service Tool (RC7150).
- Use the DST-emulation feature of ComPair.

SDM Menu



CL 16532044_031.eps
140501

Figure 5-1

After entering SDM, a blank screen is visible, with 'Service Default' in the lower right part for recognition.

How to Navigate

To toggle to the SAM mode, use a standard customer RC-transmitter and key in the code **0 6 2 5 9 6**, directly followed by the 'OSD (i+)' key.

How to Exit

Switch the set to STANDBY by pressing the Standby button (⏻) on the remote control transmitter. If you switch the set 'off' via the mains switch, the set will return in SDM when Mains power is re-applied.

5.2.2 Service Alignment Mode (SAM)

Purpose

- To perform (software) alignments.
- To change option settings.
- To easily identify the used software version.
- To view operational hours.
- To display (or clear) the error code buffer.

Specifications

- Software version.
- Operational hours counter.
- Options setting.
- Error buffer reading and erasing.
- Software alignments.


How to Enter

Use one of the following methods:

- Use the standard RC-transmitter and key in the code **0 6 2 5 9 6** directly followed by the 'OSD (+)' button.
- Short pins 1 and 2 of connector 0356 on the SSP.
- Use the 'ALIGN' button on the Dealer Service Tool (RC7150), enter password **3 1 4 0** and press 'OK'.
- Use the DST-emulation feature of ComPair.

The following screen is visible:

SAM Menu

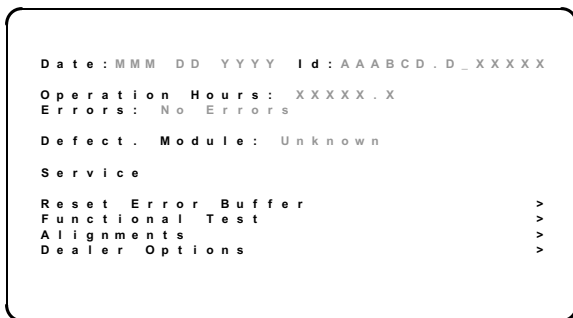

CL16532044_032.eps
140501

Figure 5-2

- **Date.** Displays the software date.
- **ID.** Displays the main software version of the ROM (example: MG32E11. 0_01234 = AAABCD.D_XXXXX).
 - A = the chassis name (MG32).
 - B = the region: E = Europe, A = Asia Pacific, U = NAFTA, L = LATAM.
 - C = the language cluster number.
 - D = the main software version number.
 - X = latest 5 digits of 12nc code software.
 - For the latest software versions, see the 'Product Survey - Colour Television' publication, which is issued 4 times per year.
- **Operation Hours.** Displays the accumulated total of operation hours.
- **Errors** (followed by maximal 10 errors). The most recent error is displayed at the upper left (for an error explanation see paragraph 5.5).
- **Defect. Module.** Here, the module that generates the error is displayed. If there are multiple errors in the buffer that have not all been generated by a single module there is probably another defect. It will then display the message 'Unknown' here.
- **Reset Error Buffer.** When you press the 'OK' button, the error buffer is reset.
- **Functional Test.** All devices are tested via the 'OK' button. Eventual errors are displayed in the error buffer. The error buffer is not erased, the content returns when this test is terminated.
- **Alignments.** This will activate the 'Alignments' sub-menu.

- **Dealer Options.** Extra features for the dealers.

Note: When an NVM was corrupted (or replaced) in the MG3.1E chassis, the microprocessor replaced the content with default data (to assure that the set can operate). However, all presets and alignment values are gone now, and option numbers are also not correct. So, this was a very drastic way. In the MG3.2E chassis, the procedure is implemented in another way:

- The moment the processor recognises a corrupted NVM, an extra line will be added to the SAM menu: '**Initialise NVM**'.
- Now, you can do two things (dependent of the service instructions at that moment):
 - Save the content of the NVM via ComPair for development analysis, **before** initialising. This will give the Philips Service department an extra possibility for diagnosis (e.g. when Development asks for this).
 - Initialise the NVM (same as in the past, however now it happens conscious).

How to Navigate

- In SAM, you can select the menu items with the 'CURSOR UP/DOWN' key on the RC-transmitter. The selected item will be highlighted. When not all menu items fit on the screen, move the 'CURSOR UP/DOWN' key to display the next/previous menu items.
- With the 'CURSOR LEFT/RIGHT' keys, it is possible to:
 - (De)activate the selected menu item.
 - Change the value of the selected menu item.
 - Activate the selected submenu.
- When you press the 'MENU' key in a submenu, you will return to the previous menu.

How to Exit

Use one of the following methods:

- Press the 'MENU' button on the RC-transmitter.
- Switch the set to 'STANDBY' (⏻) via the RC-transmitter.
- Switch the set 'off' and 'on' with the mains switch.
- Press the 'EXIT' button on the DST.

5.2.3 Customer Service Mode (CSM)

Purpose

When a customer is having problems with his TV-set, he can call his dealer. The service technician can then ask the customer to activate the CSM, in order to identify the status of the set. Now, the service technician can judge the severness of the complaint. In many cases, he can advise the customer how to solve the problem, or he can decide if it is necessary to visit the customer.

The CSM is a read only mode, therefore modifications in this mode are not possible.

How to Enter CSM

Use one of the following methods:

- Press the 'MUTE' button on the RC-transmitter simultaneously with the 'MENU' button on the TV (top control) for, at least, 4 seconds (be sure to point the RC-transmitter directly to the IR-receiver of the set, otherwise you will activate the 'Dealer Demo Mode').
- Key in the code **1 2 3 6 5 4** via the standard RC transmitter.

Notes

- Activation of the CSM is only possible if there is no (user) menu on the screen!
- If you do not point the RC-transmitter correctly to the RC-receiver in the set, and you push the 'MENU' button for more than 6 s, the TV starts in 'demo' mode. To leave this mode, push 'MENU' again for more than 6 s.

After activation of the Customer Service Menu, the following screen (Customer Service Menu 0) will appear:

CSM Menu 0

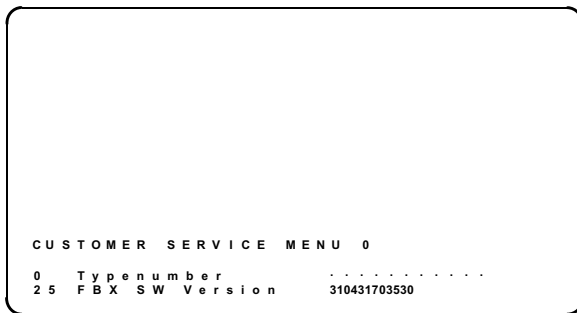
CL16532149_072.eps
061201

Figure 5-3

- **Type number.** This information (e.g. 32PW9767/12) is very helpful for a helpdesk or repair shop, as reference for further diagnosis. In this way, it is not necessary for the customer to look at the rear of his TV-set.
- **FBX SW Version.** The 12nc-code of the build-in Feature Box software version. For the latest software versions, see the 'Product Survey - Colour Television' publication, which is issued four times per year.

By means of the 'CURSOR-DOWN' knob on the RC-transmitter the Customer Service Menu 1 will appear. By means of the 'CURSOR-UP' knob on the RC-transmitter the Customer Service Menu 0 will appear again.

Customer Service Menu 1 represents following information:

CSM Menu 1

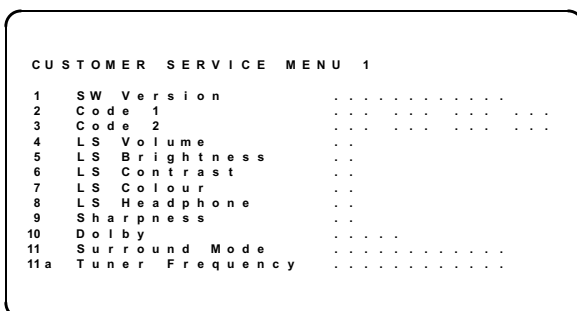
CL16532044_034.eps
140501

Figure 5-4 CL

- **Software version.** The build in software version (e.g. MG32E11.0_XXXXX). You will find details of the software versions in the chapter 'Software Survey' of the 'Product Survey - Colour Television' publication. This publication is issued four times a year.
- **Code 1.** Gives the last five errors of the error buffer. As soon as the built-in diagnose software has detected an error the buffer is adapted (see paragraph 5.5.3 for a description).
- **Code 2.** Gives the first five errors of the error buffer. As soon as the built-in diagnose software has detected an error the buffer is adapted. The last occurred error is displayed on the leftmost position of code 2. Each error code is displayed as a 3 digit number. When less than 10 errors occur, the rest of the line(s) is (are) empty. In case of no errors, the text 'No Errors' is displayed (see paragraph 5.5.3 for a description).
- **LS Volume.** Gives the Last Status of the volume as set by the customer for this selected transmitter. The value can vary from 0 (volume is minimum) to 36 (volume is maximum). Volume values can be changed via the volume key on the RC-transmitter.

- **LS Brightness.** Gives the Last Status of the brightness as set by the customer for this selected transmitter. The value can vary from 0 (brightness is minimum) to 63 (brightness is maximum). Brightness values can be changed via the 'CURSOR LEFT' and 'CURSOR RIGHT' keys on the RC-transmitter after pressing the 'MENU' button and selecting 'PICTURE' and 'BRIGHTNESS'.
- **LS Contrast.** Gives the Last Status of the contrast as set by the customer. The value can vary from 0 (contrast is minimum) to 63 (contrast is maximum). Contrast values can be changed via 'CURSOR LEFT' and 'CURSOR RIGHT' keys on the RC-transmitter after pressing the 'MENU' button and selecting 'PICTURE' and 'CONTRAST'.
- **LS Colour.** Gives the Last Status of the colour saturation, as set by the customer. The value can vary from 0 (colour is minimum) to 63 (colour is maximum). Colour values can be changed via 'CURSOR LEFT' and 'CURSOR RIGHT' keys on the RC-transmitter after pressing the 'MENU' button and selecting 'PICTURE' and 'COLOUR'.
- **LS Headphone.** Gives the Last Status of the headphone volume, as set by the customer. The value can vary from 0 (volume is minimum) to 24 (volume is maximum). Headphone volume values can be changed via the 'CURSOR LEFT' and 'CURSOR RIGHT' keys on the RC-transmitter after pressing the 'MENU' button and selecting 'SOUND' and 'HEADPHONE'.
- **Sharpness.** Gives the sharpness value. The value can vary from 0 (sharpness is minimum) to 7 (sharpness is maximum). In case of bad antenna signals, a too high value of the sharpness can result in a noisy picture. Sharpness values can be changed via the 'CURSOR LEFT' and 'CURSOR RIGHT' keys on the RC-transmitter after pressing the 'MENU' button and selecting 'PICTURE' and 'SHARPNESS'.
- **Dolby.** Indicates whether the received transmitter transmits Dolby sound (present) or not (not present). Attention: The presence of Dolby can only be tested by the software on the Dolby Signalling bit. If a Dolby transmission is therefore received without a Dolby Signalling bit, then this indicator will show 'not present' even though such a Dolby transmission is received.
- **Surround Mode.** Indicates the by the customer selected surround mode (or automatically chosen mode). In case the set is a Non-Dolby set, there will be displayed '0'. If it is a Dolby-set then is displayed: 'Stereo', '3D Surround', 'Dolby Pro Logic', 'Dolby 3 Stereo', or 'Hall'. These settings can be influenced by toggling the surround mode button on remote control (white button). It can also have been selected automatically by signalling bits (internal software).
- **Tuner Frequency.** Indicates the frequency the selected transmitter is tuned to. The tuner frequency can be changed via the 'CURSOR LEFT' and 'CURSOR RIGHT' keys for fine tune or by entering directly with the digit keys 0 to 9 on the RC-transmitter after opening the installation menu and selecting 'MANUAL INSTALLATION'. Pressing 'TIMER' and 'ENLARGE' at the same time can open the installation menu.

By means of the 'CURSOR-DOWN' knob on the RC-transmitter the Customer Service Menu 2 will appear. By means of the 'CURSOR-UP' knob on the RC-transmitter the Customer Service Menu 1 will appear again.

Customer Service Menu 2 represents following information:

CSM Menu 2

CUSTOMER SERVICE MENU 2			
13	Centre Volume	..	
14	DNR	...	
15	Noise Figure	...	
16	Digital Option	...	
17	Colour System	
18	TV System	
19	Audio System	
20	Tuned bit	
21	Speaker Config.	
22	Digital Sources	
23	Rear volume left	..	
24	Rear volume right	..	

CL 16532149_073.eps
061201

Figure 5-5

- **Centre Volume.** Gives the volume value of the centre loudspeaker. This value can vary from 0 (minimum volume) to 63 (maximum volume). Centre volume can be changed via the 'CURSOR LEFT' and 'CURSOR RIGHT' keys on the RC-transmitter after pressing the 'MENU' button and selecting 'SOUND', 'DOLBY PRO LOGIC' and selecting 'CENTRE VOLUME'. This feature is only available when surround mode is in 'DOLBY PRO LOGIC', 'DOLBY 3 STEREO', or '3D SURROUND'.
- **DNR.** Gives the setting of the Dynamic Noise Reduction for the selected transmitter. The DNR can be changed via the 'DNR' button on the remote control handset. The following selections are possible:
 - 'OFF - MIN - MED - MAX' or,
 - 'OFF - AUTOMATIC' (for sets with 'Automatic Noise Reduction').
- **Noise Figure.** Gives the noise ratio for the selected transmitter. This value can vary from 0 (good signal) to 127 (average signal) and to 255 (bad signal).
- **Digital Option.** Gives the selected digital mode. Change via the 'CURSOR LEFT' and 'CURSOR RIGHT' keys on the RC-transmitter, after pressing the 'MENU' button and selecting 'PICTURE', 'DIGITAL OPTIONS'. Options are:
 - 100 HZ DIG. SCAN.
 - PIXEL PLUS.
 - DOUBLE LINES.
- **Colour System.** Gives information about the colour system of the selected transmitter.
 - Black and white: No colour carrier received
 - PAL: PAL signal received
 - SECAM: SECAM signal received
 - NTSC: NTSC signal received
- **TV System.** Gives information about the video system of the selected transmitter.
 - BG: BG signal received
 - DK: DK signal received
 - I: PAL I signal received
 - L: SECAM L signals received
 - M38.9: NTSC M signal received with video carrier on 38.9 MHz
 - MN: NTSC M signal received
- **Audio System.** Gives information about the audio system of the selected transmitter.
 - Sound Muted: No sound
 - Dolby Pro Logic: Dolby Pro Logic sound received
 - Mono: Mono sound received
 - Stereo: Stereo sound received
 - Dual I: Language I received
 - Dual II: Language II received
 - Digital Mono: Digital mono sound is received
- Digital Stereo: Digital stereo sound is received
- Digital Dual I: Digital language I is received
- Digital Dual II: Digital language II is received
- **Tuned bit.** Gives information about the tuning method of the stored pre-set. If a channel is found via 'automatic installation', you will see the value 'On'. When you change this (automatically found) frequency via 'fine tune' adjustment (installation menu - manual installation), the displayed value will change to 'Off'. Therefore, when you see the value 'Off' in this line, it is an indication that the received channel is a non-standard signal (e.g. of a VCR).
- **Speaker config.** Gives the speaker configuration settings. In case the set is a non-Dolby set, it displays '0'. If it is a Dolby-set, it displays: 'FULL INTERNAL', 'L/R EXTERNAL', 'SURROUND EXTERNAL' or 'FULL EXTERNAL'. Change the speaker configuration (for a Dolby-set), via the 'CURSOR LEFT' and 'CURSOR RIGHT' keys on the RC-handset after opening the 'INSTALLATION' menu and selecting 'SETUP'. Open the 'INSTALLATION' menu by pressing the 'TIMER' and 'ENLARGE' buttons at the same time.
- **Digital Sources.** Gives the configuration setting for the digital source. If one of these is selected, the starting point is a top quality signal on that input and a number of settings are therefore changed automatically. Change the digital source via the 'CURSOR LEFT' and 'CURSOR RIGHT' keys on the RC-transmitter after opening the installation menu and selecting 'SETUP'. Pressing 'TIMER' and 'ENLARGE' at the same time can open the installation menu. It displays:
 - NONE
 - EXT1, 2, 3, or 4
 - EXT1 + DIG. AUDIO
 - EXT1, 2, 3, or 4 + DIG. STB (Digital Set Top Box)
 - FRONT
- **Rear volume Left.** Only valid when Dolby Digital option is 'on'. This gives the volume value of the left surround sound loudspeaker. This value can vary from 0 (minimum volume) to 63 (maximum volume). Rear volume left can be changed via the 'cursor left' and 'cursor right' keys on the remote control handset after pressing the 'menu' button and selecting 'sound', 'Surround settings' and selecting 'Rear volume left'.
- **Rear Volume Right.** Only valid when the Dolby Digital option is 'on'. This gives the volume value of the right surround sound loudspeaker. This value can vary from 0 (minimum volume) to 63 (maximum volume). Rear volume right can be changed via the 'cursor left' and 'cursor right' keys on the remote control handset after pressing the menu button and selecting 'sound', 'Surround settings' and selecting 'Rear volume right'.

How to Exit CSM

Use one of the following methods:

- After you press a key on the RC-transmitter (with exception of the 'CHANNEL' and 'VOLUME' keys).
- After you switch the TV-set 'off' with the mains switch.

5.3 Problems and Solving Tips (Related to TV-settings)

Note: Below described problems are all related to the TV settings. The procedures to change the parameter (or status) of the different settings are described.

5.3.1 Picture Problems

Worse Picture Quality in Case of Digital Sources (e.g. DVD)

1. Check line 'Digital sources'. This will give the indication 'Front', 'Ext1', 'Ext1 + Dig. Audio', 'Ext2', 'Ext3', 'Ext4' or 'None'.

2. Check if the digital source is really connected to the indicated external input. If not, change the input to the correct one.

Snowy/Noisy Picture

Check line 'Noise Figure'. In case the value is 127 or higher and also high on other programs, check the aerial cable/aerial system.

Picture too Dark

1. Press 'Smart Picture' button on the Remote Control handset. In case picture improves, raise the brightness value or raise the contrast value. The new value(s) are automatically stored for all TV channels.
2. After switching on the Customer Service Mode, the picture is OK. Raise the brightness and/or the contrast value. The new value(s) are automatically stored for all TV channels.
3. Check lines 'Brightness' and 'Contrast'. The brightness and/or the contrast value is low (<15). Raise the brightness and/or contrast value.

Picture too Bright

1. Press 'Smart Picture' button on the Remote Control handset. In case picture improves, reduce the brightness value or reduce the contrast value. The new value(s) are automatically stored for all TV channels.
2. After switching on the Customer Service Mode, the picture is OK. Reduce the brightness value or reduce the contrast value. The new value(s) are automatically stored for all TV channels.
3. Check lines 'Brightness' and 'Contrast'. The brightness and/or the contrast value is high (>70). Reduce the brightness value or raise the contrast value.

Fading Picture

Digital scan effect. Check line 'DNR'. The status of 'DNR' is a value between 0 and 100. This value has not really a practical explanation. In case you have a fading picture, you could influence the 'DNR'-level by navigating route: 'Menu' - 'Picture' - 'DNR'. There are four different levels selectable.

White Line around Picture Elements and Text

1. Press 'Smart Picture' button on the Remote Control handset. In case picture improves, reduce the sharpness value. The new value(s) are automatically stored for all TV channels.
2. After switching on the Customer Service Mode, the picture is OK. Reduce the sharpness value. The new value(s) are automatically stored for all TV channels.
3. Check line 'Sharpness'. Reduce the sharpness value. The new value(s) are automatically stored for all TV channels

No Picture

Check line 'Tuned bit'. In case the value is 'on', install the required program again. Open the installation menu by pressing 'Timer' and 'Enlarge' at the same time, and perform manual installation.

Blue Picture and/or Unstable Picture

No proper signal is received. Check line 'Noise Figure'. If value is higher than 127, suspect the signal. Check your cable- or aerial signal.

Black and White Picture.

Check line 'Colour'. In case the value is low (<30), raise the value of colour. The new value(s) are automatically stored for all TV channels.

No Colours/ Colours not Correct / Unstable Picture / Colour Lines around Picture Elements.

Check lines 'TV System'. Check if system is OK.
BG stand for PAL B/G, L/La for SECAM L, I for PAL I or L', D/K or SECAM D/K. They correspond with the System selections

made in the 'install' menu, respectively West Europe, France, UK, and East Europe. In case system is wrong, correct this via manual installation.

Menu Text not Sharp Enough.

1. Press 'Smart Picture' button on the Remote Control handset. In case picture improves, reduce the contrast value. The new value(s) are automatically stored for all TV channels.
2. After switching on the Customer Service Mode, the picture is OK. Reduce the contrast value. The new value(s) are automatically stored for all TV channels.
3. Check line 'Contrast'. If the value is high (>75), reduce it.

5.3.2 Sound Problems

No Sound from Left and Right Speaker.

1. Press 'Smart Sound' button on the Remote Control handset. In case sound improves, raise the volume value. The new value(s) are automatically stored for all TV channels.
2. After switching on the Customer Service Mode, the volume is OK. Raise the volume value. The new value(s) are automatically stored for all TV channels.
3. Check line 'Volume'. The value is low, so raise it. The new value(s) are automatically stored for all TV channels.

Sound too Loud for Left and Right Speaker.

1. Press 'Smart Sound' button on the Remote Control handset. In case sound improves, reduce the volume value. The new value(s) are automatically stored for all TV channels.
2. After switching on the Customer Service Mode, the volume is OK. Reduce the volume value. The new value(s) are automatically stored for all TV channels.
3. Check line 'Volume'. The value is high, so reduce it. The new value(s) are automatically stored for all TV channels.

No Sound from Centre Speaker.

1. Check line 'Centre Volume'. If the value is low, raise it.
2. In case of a Dolby set, check line 'Surround mode'. The centre speaker is only active in the surround modes 3D Surround, ProLogic, Dolby 3 Stereo and DD.

Sound too Loud from Centre Speaker.

Check line 'Centre Volume'. If the value is high, reduce it.

No Sound from Rear Speakers.

1. Check line 'Surround mode'. In case this line is 'Off' or 'Hall', change the surround mode into 3D Surround, ProLogic, Dolby 3 Stereo and DD.
2. Check line 'Rear volume'. If the value is low, raise it. The new value(s) are automatically stored for all TV channels.
3. Check lines 'Rear volume left' and 'Rear volume right'. If the value is low, raise them. The new value(s) are automatically stored for all TV channels.
4. Check if the surround boxes receive sound, the green LED should be on.
5. Check if the correct RF-channel is chosen. Look at the bottom of the active box for the RF-channel of the surround speakers. Check the installed RF-channel in the installation menu. If this RF-channel is different, change it to the correct one.

5.4 ComPair

5.4.1 Introduction

ComPair (Computer Aided Repair) is a service tool for Philips Consumer Electronics products. ComPair is a further development on the European DST (service remote control),

which allows faster and more accurate diagnostics. ComPair has three big advantages:

- ComPair helps you to quickly get an understanding on how to repair the chassis in a short time by guiding you systematically through the repair procedures.
- ComPair allows very detailed diagnostics (on I²C level) and is therefore capable of accurately indicating problem areas. You do not have to know anything about I²C commands yourself because ComPair takes care of this.
- ComPair speeds up the repair time since it can automatically communicate with the chassis (when the microprocessor is working) and all repair information is directly available. When ComPair is installed together with the SearchMan electronic manual of the defective chassis, schematics and PWBs are only a mouse click away.

5.4.2 Specifications

ComPair consists of a Windows based faultfinding program and an interface box between PC and the (defective) product. The ComPair interface box is connected to the PC via a serial or RS232 cable.

In this chassis, the ComPair interface box and the TV communicate via a bi-directional infrared link.

The ComPair faultfinding program is able to determine the problem of the defective television. ComPair can gather diagnostic information in two ways:

- **Automatic** (by communication with the Receiver box): ComPair can automatically read out the contents of the entire error buffer. Diagnosis is done on I²C level. ComPair can access the I²C bus of the Receiver box. ComPair can send and receive I²C commands to the micro controller of the Receiver box. In this way, it is possible for ComPair to communicate (read and write) to devices on the I²C busses of the Receiver box.
- **Manually** (by asking questions to you): Automatic diagnosis is only possible if the micro controller of the Receiver box is working correctly and only to a certain extent. When this is not the case, ComPair will guide you through the faultfinding tree by asking you questions (e.g. *Does the screen give a picture? Click on the correct answer: YES / NO*) and showing you examples (e.g. *Measure test-point 17 and click on the correct oscillogram you see on the oscilloscope*). You can answer by clicking on a link (e.g. text or a waveform picture) that will bring you to the next step in the faultfinding process.

By a combination of automatic diagnostics and an interactive question/answer procedure, ComPair will enable you to find most problems in a fast and effective way.

Beside fault finding, ComPair provides some additional features like:

- Up- or downloading of pre-sets.
- Managing of pre-set lists.
- Emulation of the (European) Dealer Service Tool (DST).
- If both ComPair and SearchMan (Electronic Service Manual) are installed, all the schematics and the PWBs of the set are available by clicking on the appropriate hyperlink. **Example:** *Measure the DC-voltage on capacitor C2568 (Schematic/Panel) at the SSP.*
 - Click on the 'Panel' hyperlink to automatically show the PWB with a highlighted capacitor C2568.
 - Click on the 'Schematic' hyperlink to automatically show the position of the highlighted capacitor.

Stepwise Start Up / Shut Down

Under normal circumstances, a fault in the power supply, or an error during start-up, will switch the television to protection mode. ComPair can take over the initialisation of the television. In this way it is possible to distinguish which part of the start-up routine (hence which circuitry) is causing the problem.

Stepwise start up explanation

This is realised via ComPair and is very helpful when a protection is activated (see also chapter 5.6).

Table 5-1

State	Mode description	Display LEDs	Enabled protections
0	- Low power standby - uP in Standby	Red 'on'	None
1	- High power standby - TV-set in standby	Red 0.5 Hz	None
2	- Supply 'on' - Protections 5V2, 8V6, and DC-PROT activated.	Orange/ Green0.25 Hz	67, 68, and 76
3	- Sound ICs initialised - Protections FBX- and TUNER activated.	Orange/ Green0.5 Hz	+ 77 and 80
4	- EHT startup - No black-current stabilisation - Protections VFB, HFB, LDP, and BC-PROT activated (blanked picture).	Orange/ Green2 Hz	+ 70, 71, 73, and 74
5	- TV operates - Unblanked picture.	Orange/ Green10 Hz	

Stepwise shut down explanation

In the stepwise shutdown mode, state 2 is skipped (it is not possible to de-initialise ICs).

Table 5-2

State	Mode description	Display LEDs(*)	Disabled protections
5	- TV operates - Unblanked picture.	Orange/ Green10 Hz	-
4	- EHT startup - No black-current stabilisation - All protections are enabled.	Orange/ Green2 Hz	-
3	- Sound ICs stay initialised - All protections are 'off'.	Orange/ Green0.5 Hz	74, 73, 71, and 70
1	- High power standby- TV-set in standby	Red 0.5 Hz	80, 77, 76, 68, and 67
0	- Low power standby- uP in Standby	Red 'on'	-

Note (*): When the set is in stepwise mode and, due to stepping-up, a protection is activated; the set will really go into protection (blinking red LED). The set will not leave the stepwise-mode however. By stepping up, the set can be activated again, until state X where the protection was activated. At state (X-1) diagnostic measurements can be performed.

5.4.3 How to Connect

1. First, install the ComPair Browser software on your PC (read the installation instructions carefully).
2. Connect the RS232 interface cable between a free serial (COM) port of your PC and the PC connector (marked with 'PC') of the ComPair interface.
3. Connect the Mains power adapter to the supply connector (marked with 'POWER 9V DC') on the ComPair interface.
4. Switch the ComPair interface 'off'.
5. Switch the Receiver box 'off' (remove the Mains power).

6. Point the ComPair interface to the 'Service send-LED' on the front of the set.
7. Plug the Mains power adapter in a Mains power outlet and switch on the interface. The green and red LEDs light up together. The red LED extinguishes after approximately 1 second, while the green LED remains lit.
8. Start the ComPair program and read the 'introduction' chapter.

Interface Connection

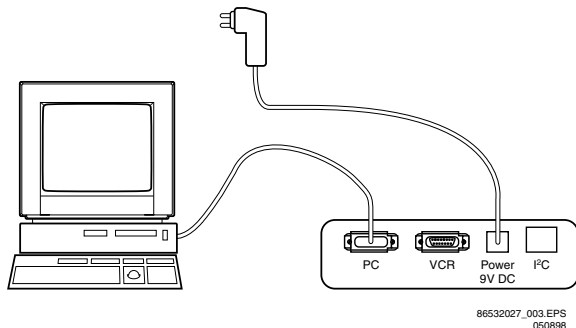


Figure 5-6

Interface Arrangement

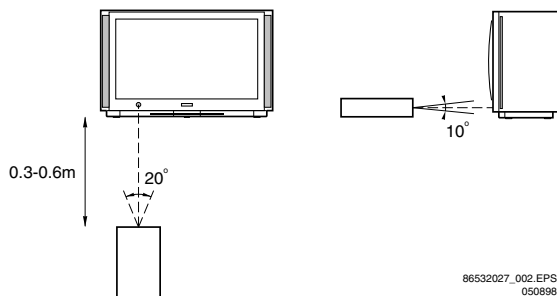


Figure 5-7

5.4.4 How to Order

ComPair order codes:

- Starter kit ComPair, SearchMan software, and ComPair interface (excluding transformer): 4822 727 21629
- ComPair interface (excluding transformer): 4822 727 21631
- Starter kit ComPair software (registration version): 4822 727 21634
- Starter kit SearchMan software: 4822 727 21635
- ComPair CD (update): 4822 727 21637
- SearchMan CD (update): 4822 727 21638

5.5 Error Codes

The error code buffer contains all detected errors since the last time the buffer was erased. The buffer is written from left to right. When an error occurs that is not yet in the error code buffer, it is written at the left side and all other errors shift one position to the right.

5.5.1 How to Read the Error Buffer

It is possible to read out the error buffer in several ways:

- **On screen via the SAM.**
In case picture is OK, the error buffer can be read easiest via the SAM. In the main menu of the SAM the last 10 different error codes occurred are displayed. The most recent detected error code is displayed on the left side.
Examples:
 - **003 000 000 000 000**: error code 3 is the last and only detected error.
 - **002 003 000 000 000**: error code 3 was first detected and error code 2 is the last detected (newest) error.
- **On screen via the CSM.**
Same explanation as above.
- **Via ComPair (or DST).**
See ComPair/DST manual.

5.5.2 How to Clear the Error Buffer

Use one of the following methods:

- By activation of the 'RESET ERROR BUFFER' command in the SAM menu:
- When you transmit the commands 'DIAGNOSE' - '99' - 'OK' with ComPair (or with a DST). This works in all modes, except SAM.

Notes:

- When the error buffer is full (10 codes), no new error can be stored anymore. However, of every error raised is monitored how long it exists in the error buffer. When for any reason a false raised error exists in the buffer, it will be deleted after 50 hours. If this error still is actual after 50 hours, it will be raised again. In this way, it is safeguarded that history of error codes is stored.
- Sometimes it is an option to first write down the error buffer content, reset the buffer, and look again which error codes are generated by the set.
- If the content of the error buffer has not changed for 50 hours, it resets automatically.

5.5.3 Error Codes Overview

In case of non-intermittent faults, clear the error buffer before you begin the repair. These to ensure that old error codes are no longer present.

If possible, check the entire contents of the error buffer. In some situations, an error code is only the result of another error code and not the actual cause (e.g., a fault in the protection detection circuitry can also lead to a protection).

Table 5-3

Error	Device	Description	Defective item	Diagram	Defective module indication
2	ST24E32 or M24C32	Non volatile memory	IC7008	K7	Control
3	SAA5801	OTC2.5 microprocessor/TXT	IC7003	K7	Control
5	UV1316	Tuner	U1102	K1	Tuner
10	TEA6415	I/O source select video	IC7208	K8	Source select
11	TEA6422	I/O source select audio	IC7777	K8	Source select
15	TDA9320H	HIP I/O-video processing	IC7501	K1	Chroma IF I/O
20	TDA9330H	HOP video/deflection processor	IC7300	K6	Video Controller
21	TDA9178	LTP Peaking	IC7402	K6	Video Controller
25	MSP3410D	ITT sound processor	IC7751	K3	Audio module
26	SAA7712H	SEDSP Dolby processor	IC7770	K4	Audio module
35	UV1316	FDS Tuner	U1102	M1	Video Dual Screen Panel
36	PCF8574	FDS I/O Expander	IC7860	M2	Video Dual Screen Panel
37	SAB9079	FDS POPOV	IC7700	M4	Video Dual Screen Panel
38	TDA9320	FDS HIP2	IC7501	M1	Video Dual Screen Panel
39	M24C04	FDS NVM	IC7991	M1	Video Dual Screen Panel
40	83C751	Cordless Transmitter processor	IC7105	R	Surround Transmitter Panel
41	TDA7309	FDS Headphone	IC7620	M5	Video Dual Screen Panel
50	SAA4978H	FBX PICNIC	IC7611	L1	Feature Box
53	SAA4992	FBX FALCONIC	IC7626	L3	Feature Box
54	T8F24EF	FBX EAGLE	IC7724	L2	Feature Box
56	83C654	MCS processor	IC7803	N3	Digital Audio Module
57	TDA7438	MCS SOFAC L/R	IC7540	N8	Digital Audio Module
58	TDA7438	MCS SOFAC L/R	IC7600	N9	Digital Audio Module
59	TDA7438	MCS SOFAC L/R	IC7570	N10	Digital Audio Module
61	PCF8574	MCS I/O expander	IC7690	N16	Digital Audio Module
63	TDA8444	Auto Scavem DAC	IC7500	SC1	Auto Scavem
65	Slow I2C bus blocked		See fig 5.8	Slow I2C bus blocked	
66	Fast I2C bus blocked		See fig 5.8	Fast I2C bus blocked	
67	Supply 5V	5V2	See fig 5.8	+5V Supply	
68	Supply 8V	8V6	See fig 5.8	+8V Supply	
70	V fail protection	VFB	See fig 5.11	A3/A1/K6	Vertical Flyback
71	H fail protection	HFB	See fig 5.10	A1/K6	Horizontal Flyback
73	Line Deflection protection	LDP	See fig 5.8	A1/K6	Line Deflection
74	Beam Current Protection	BC-PROT	See fig 5.8	K6/K7	Beam Current
76	DC Sound protection	DC-PROT	See fig 5.8	A4	Sound Output
77	Feature box protection	FBX-PROT	See fig 5.8	L1	+3V (FBX) Supply
80	Tuner protection	Tuner-PROT	See fig 5.8	K1	+8V (Tuner) Supply

5.6 Protections

5.6.1 Introduction


This chassis has only one microprocessor (OTC), which remains active during Standby. This because the power of the microprocessor (and the attached memory chip set) is coming from the 3V3 supply, which is derived from the 5V Standby circuitry.

Therefore, in both 'Power on' as in 'Standby' mode, the microprocessor is connected to this power supply. The

microprocessor controls the Standby line for switching 'on' and 'off' the main supply. In the Standby mode, or in the protection mode, the Standby line will open the contacts of relay 1002 via T7000, which results in switching 'off' the mains input to the main supply. In the mean time, via T7550, the LED-intensity of the opto-coupler will increase, which results in a quick shutdown of the power supply.

If a fault situation is detected, an error code is generated and, if necessary, the set is put in protection mode. This mode is indicated by blinking of the red front LED.

Protection Structure

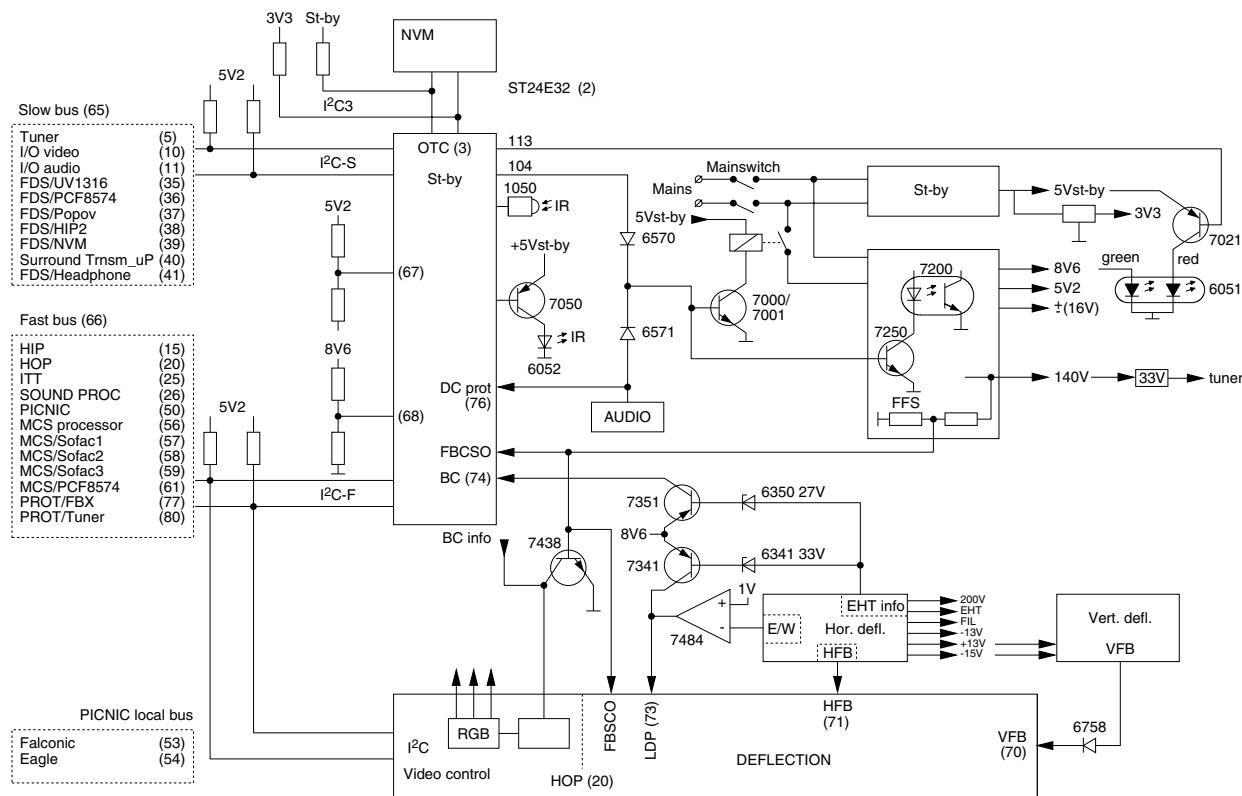

CL 16532149_074.eps
211201

Figure 5-8

We can divide the protections in four groups:

- Protection from I²C-busses (fast and slow) or I²C-IC errors (device errors).
- Protection from the inputs on the OTC.
- Protection from the status register of the HOP (communicated via I²C-bus).
- DC-protection (from the sound amplifiers) monitored on the OTC.

5.6.2 Protection from the I²C Bus

In normal operation, some registers of the I²C controlled ICs are refreshed every 200 ms. During this sequence, three I²C-busses (and the I²C-ICs as well) are checked.

Possible protections:

- An I²C-bus protection will take place if the SDA and SCL are whether short-circuited to ground or to each other.
- An I²C-device protection can occur, when there is malfunction in communication with one specific device, or if the power supply of the device is missing.
- A FBX- and/or Tuner circuitry protection can occur, when one of these circuits do not respond for more than 1 second (measured via I²C). The set goes in protection mode.

5.6.3 Protection from the Inputs on the OTC

If a protection is detected at an input of the OTC, all protection inputs of the OTC will be scanned every 200 milliseconds for five times. If the protection on one of the inputs is still activated after 1 sec., then the set will be put in the protection-mode. Before the scanning is started, a so-called 'ESD refresh' is carried out. This is done, because the interrupt on one of the inputs might be caused by a Flash or ESD. As both phenomena can harm the settings of some ICs, they are initialised again to ensure the normal picture and sound conditions of the set.

8V6 and 5V2 Protection.

The OTC senses the presence of the 8V6 and 5V2. If the 8V6 and 5V2 is not present, then an error code is stored in the error buffer.

BC (Beam Current) Protection.

A circuit on the SSP measures the beam current. If this current exceeds a certain reference level, the BC-input of the OTC is set to 'high' via D6350 and T7351. The error code is stored in the error buffer and the set is put in protection mode.

DC Protection.

Speaker Protection

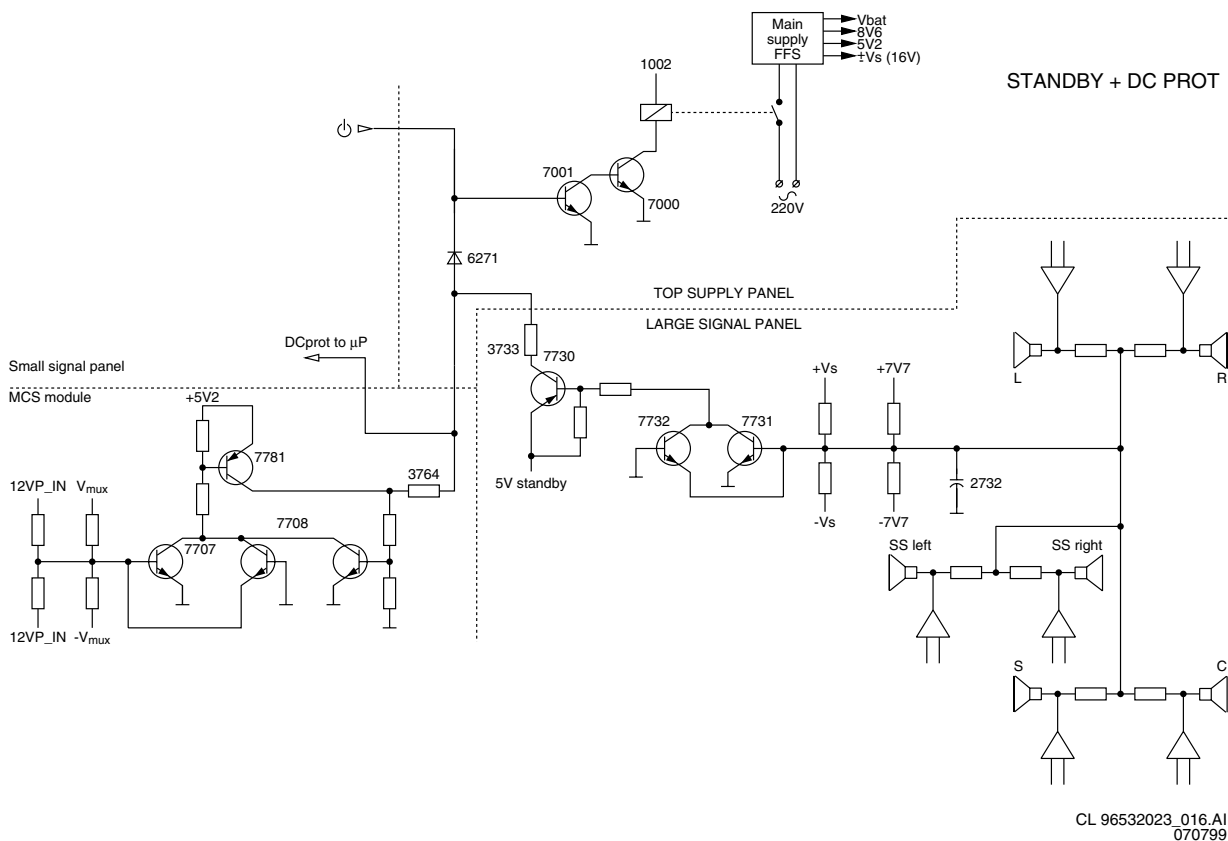


Figure 5-9

This is an important protection, measured by a circuitry on the LSP. The output of the protection circuit will slow down the power supply immediately via the opto-coupler. Then, via relay 1002, the supply is set to Standby-mode at once. To be able to store the error code in the error buffer, the protection signals are also wired to the OTC. The protection is activated in case of:

- Unbalance between +Vs and -Vs.
- Unbalance between +7V7 and -7V7.
- V_{DC} on one of the audio amplifier outputs.
- Unbalance in the supplies of the MCS-module.

5.6.4 Protections from the Status Register of the HOP

Every 200 milliseconds the status register of the HOP is read by the OTC via I²C. If a protection signal is detected on one of the inputs of the HOP, then the relevant error bit in the HOP register is set to 'high'. If the error bit is still 'high' after 1 s., the OTC will store the error code in the error buffer and depending on the relevancy of the error bit the set will either go into the protection-mode or not.

HFB: Horizontal Flyback

HFB Protection

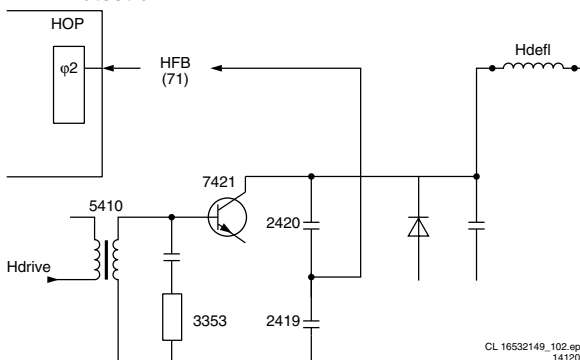


Figure 5-10

If the horizontal flyback is not present, then this is detected via the HOP. One status bit is set to 'high'. The error code is stored in the error buffer and the set will go into the protection mode

VFB: Vertical Flyback

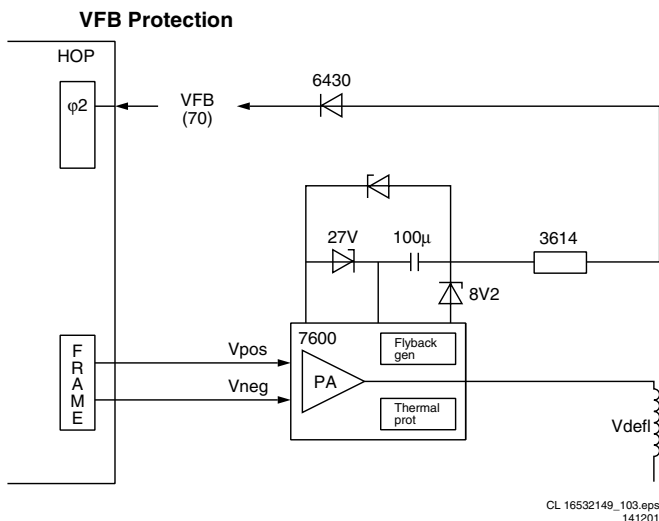


Figure 5-11

The HOP will blank the screen, if the vertical flyback signals are not present at the VFB-guard input. The relevant status bit will be set in the register of the HOP. The error code is stored in the error buffer; in this case, protection is not necessary.

LDP: Line Deflection Protection

LDP Protection

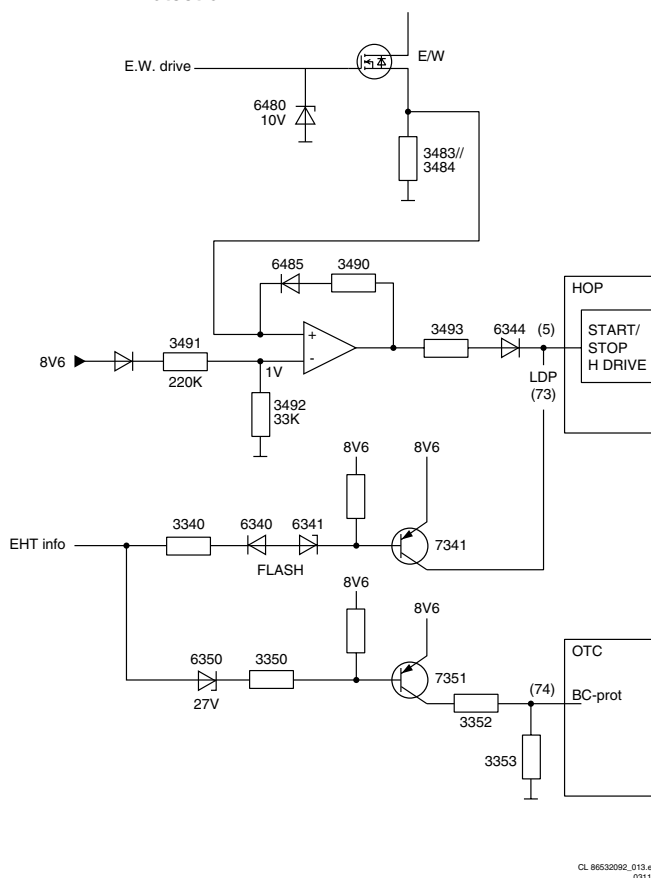


Figure 5-12

Two protection circuits are connected to the LDP-input of the HOP:

- **Flash detection.** From the EHT-info, via D6341 and T7341 a flash will stop the H-drive and line output stage immediately. The FLS-bit in the status register of the HOP is set to 'high'. As the

duration of a flash is very short, the FLS-bit will be reset to 'low' again after the flash refresh, and via a slow start the set will start again.

- **LDP detection.** The EW-protection, coming from the line-output is also connected to the same input as above. The current through the EW-stage is measured by R3483 and R3484 on the LSP. The voltage across these precision resistors will increase in case of a failure at the line output stage. If the voltage becomes higher than 1 V, then the output of IC7484 will become 'high' and remains 'high' via D6485 and R3490. Via D6344 the H-drive will be stopped. The FLS-bit will be set to 'high' and remains 'high' by means of the software filtering even after a flash refresh. The OTC will put the set in Standby-mode. The error code is stored in the error buffer and the set gets into the protection mode.


5.7 Repair/Service Tips

Below, you will find some additional repair/service tips:


- To have a good **service position of the FDS module**, remove the FBX module. As the set will go in protection now, you have to overrule this. Therefore, go to the Service Default Mode via the HW-entry method (short jumpers on SSP). There will be no picture, but as the signal processing of the FDS-module is done **before** the FBX processing, you can measure the necessary waveforms, and check if the module is functioning.
- To have a good **service position of the FBX module**, remove the FDS module. To keep the set functioning, you have to bypass the YUV-path now: short pins 1-7, 2-8, and 3-9 of connector 0352.
- More **User Service Tips** are described in chapter 3 of this manual (page 34 of the DFU).
- Be aware that when you switch 'off' the TV-set, the active surround speaker is going to standby after about 10 minutes.
- In Pixel Plus mode, the **OSD menus** are a little different in size. This is normal.
- When one wants to **store settings of the FDS module**, first one has to make a hardware intervention (see explanation on diagram M1). This is because of the fact that the local NVM has a write protection that is not controlled by the main microprocessor. Be sure to remove the connection after storing.
- When the set has a **'hazy' focus**, this can be related to a bad focus setting, but can also be related to a malfunctioning of the parabola modulation part of the Auto Scavem circuitry (see diagram SC).
- An easy indication if the **'Pixel Plus' feature is functioning correctly**, is via the 'Pixel Plus Demo Mode'. To activate this, press the 'Pixel Plus' button on the RC-transmitter (see also DFU).
- When **no wireless sound** is possible, or when there is too much interference, you can still enjoy Dolby surround sound by connecting the two rear loudspeakers to the TV with a stereo cinch to stereo 3.5 mm jack cable. This cable can be ordered as service part nr. 3104 311 02251 (10 m. backup cable).

6. Wiring Diagram, Block Diagrams and Overviews


Wiring Diagram

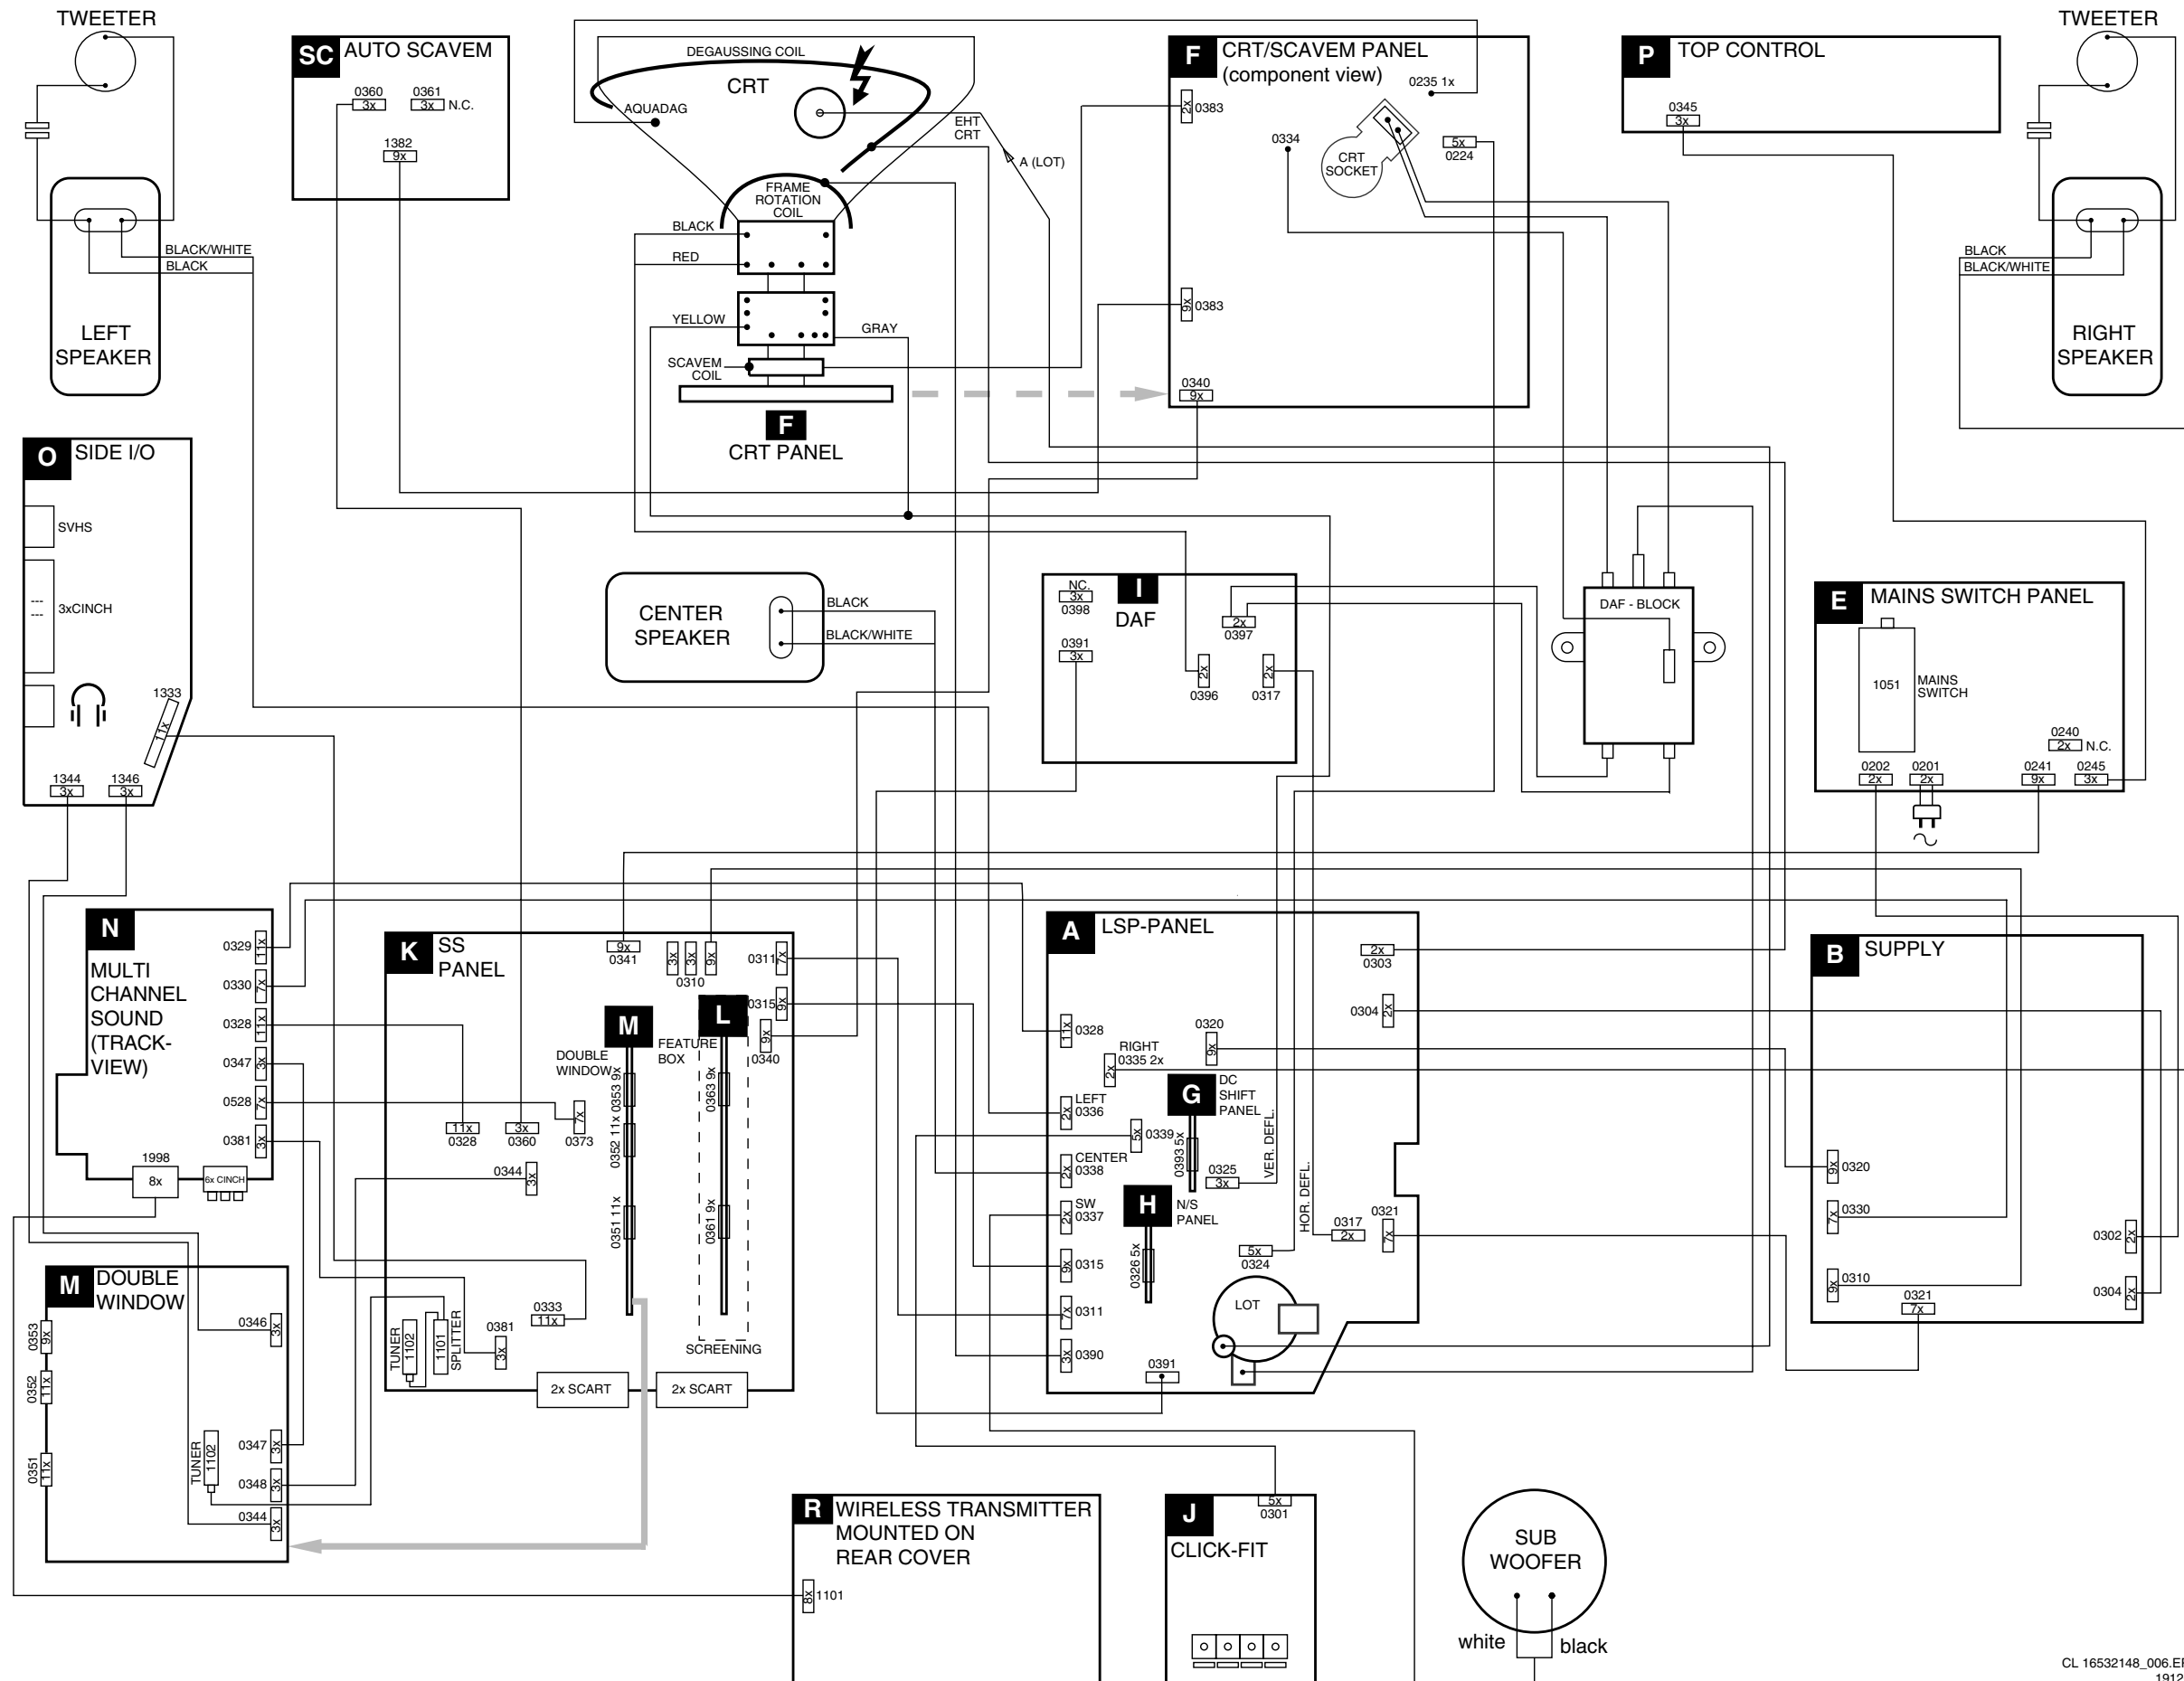


Block Diagram Supply and Deflection

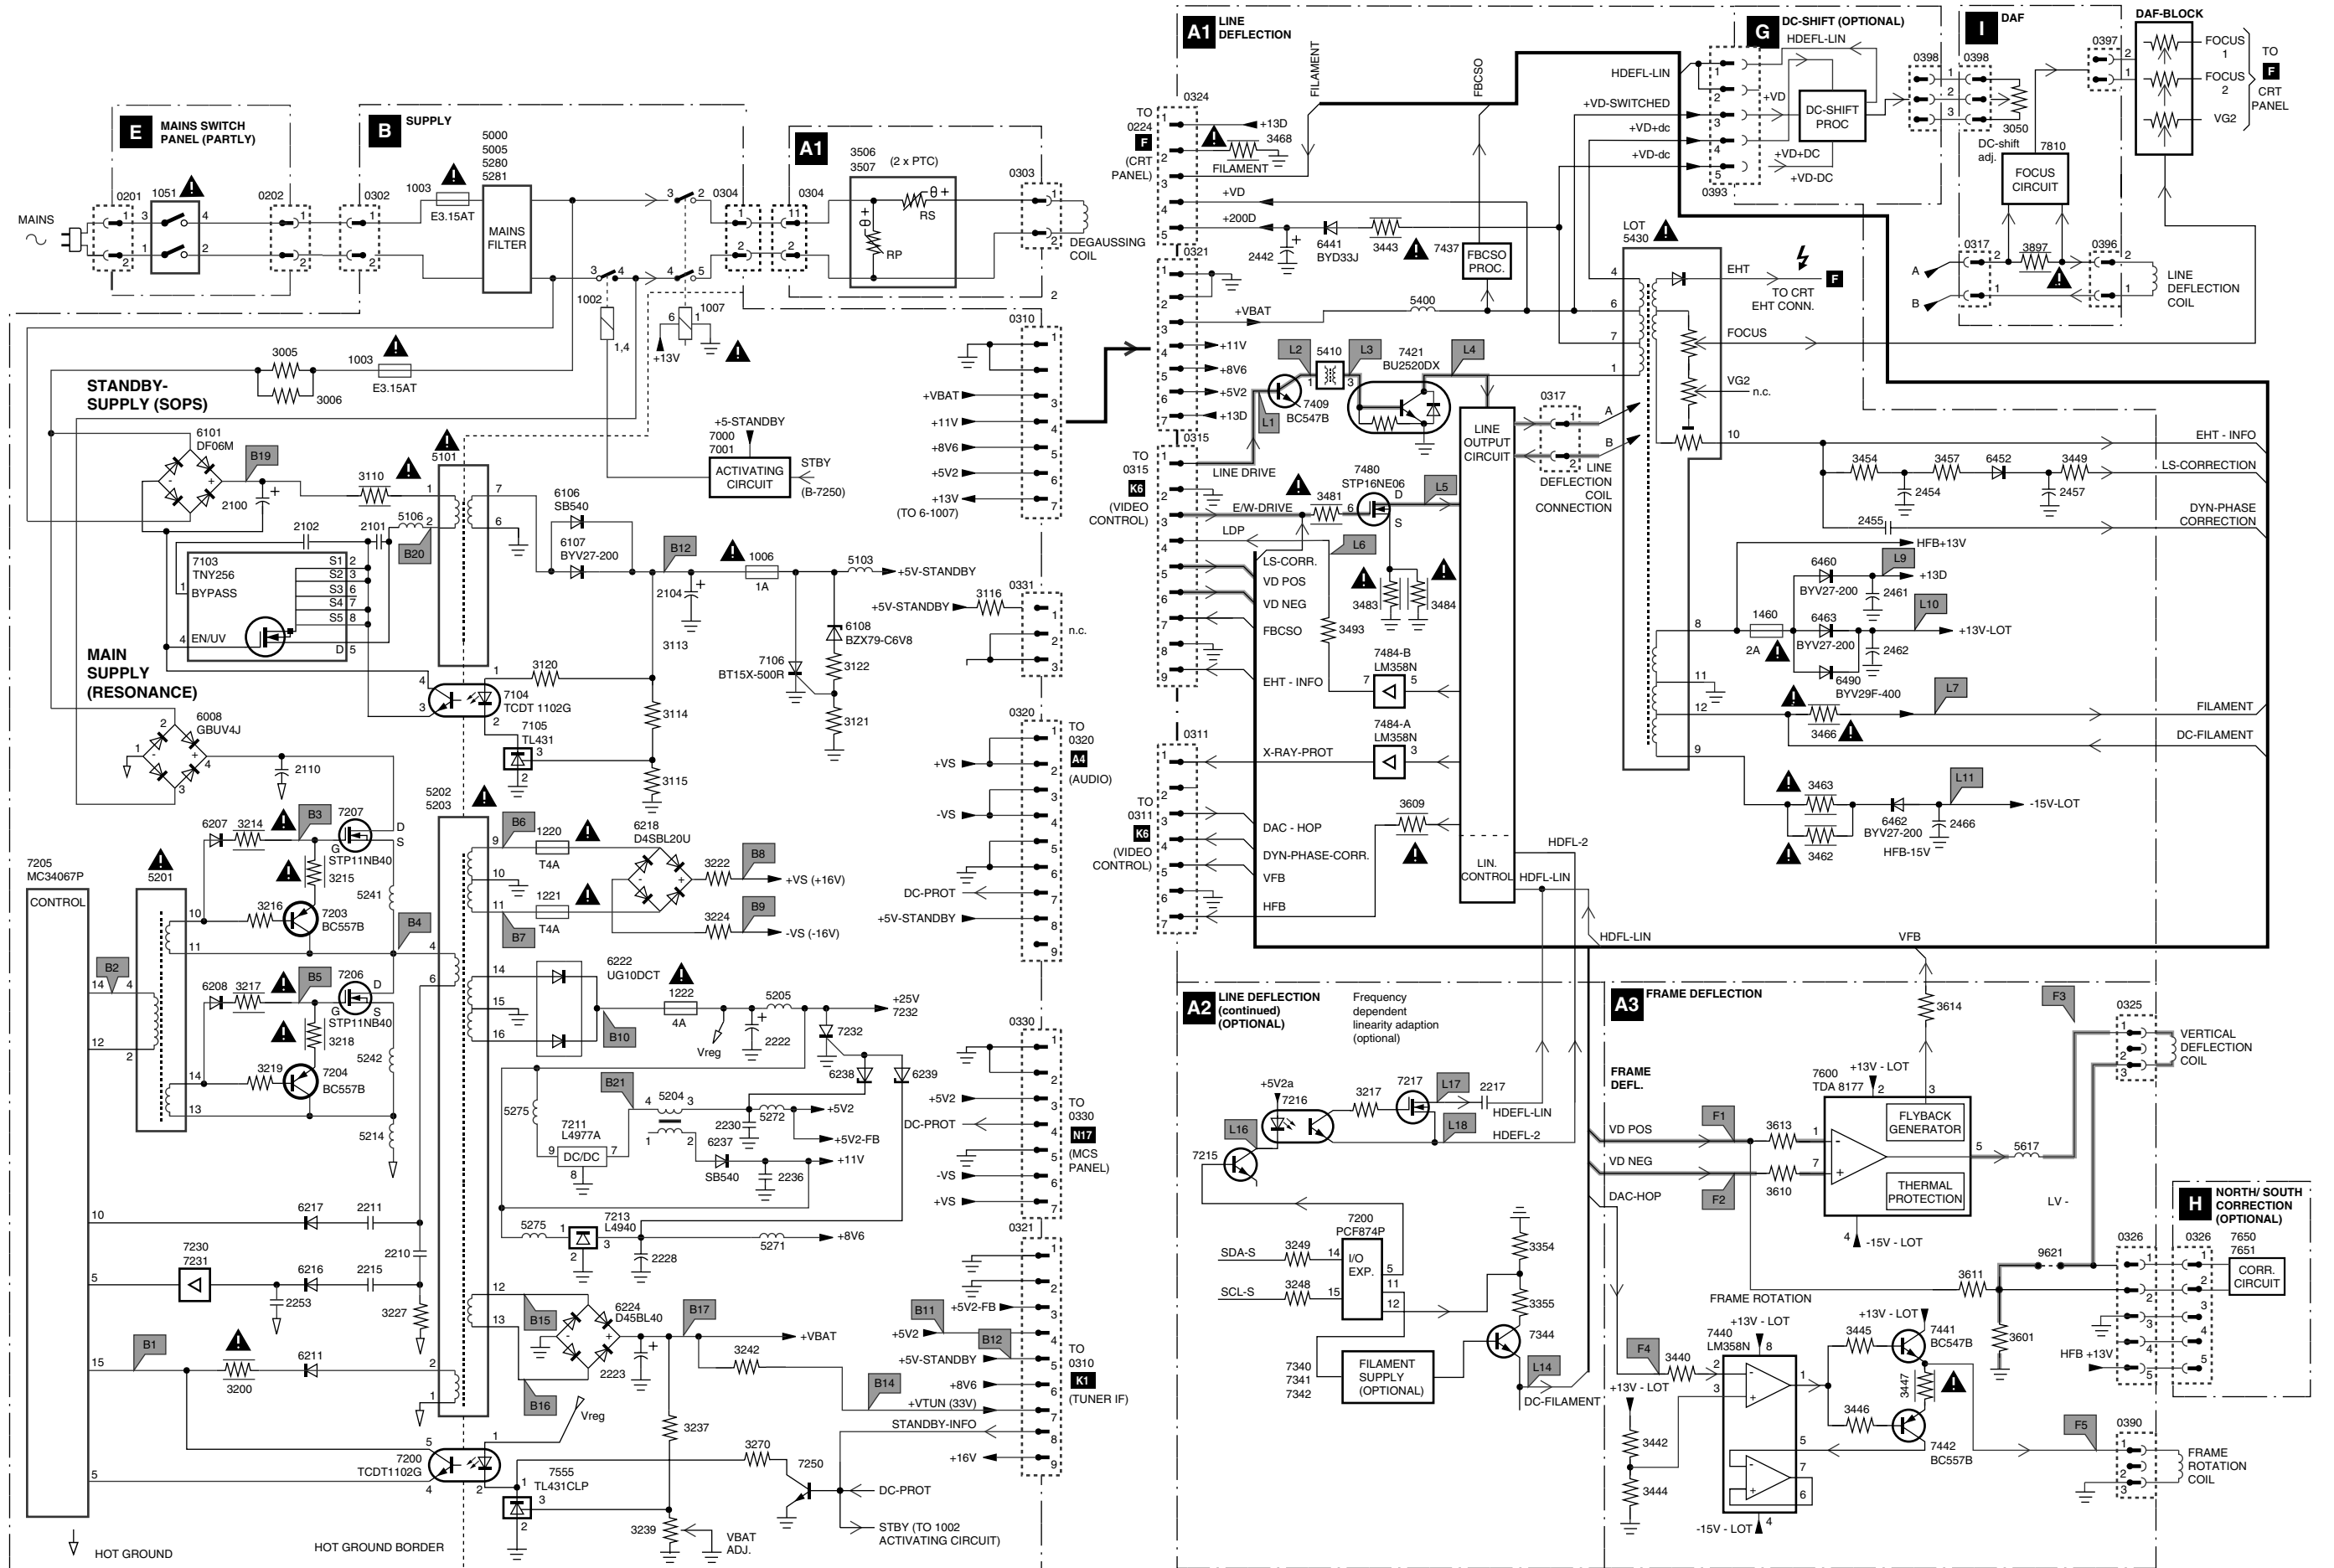


Block Diagram Video

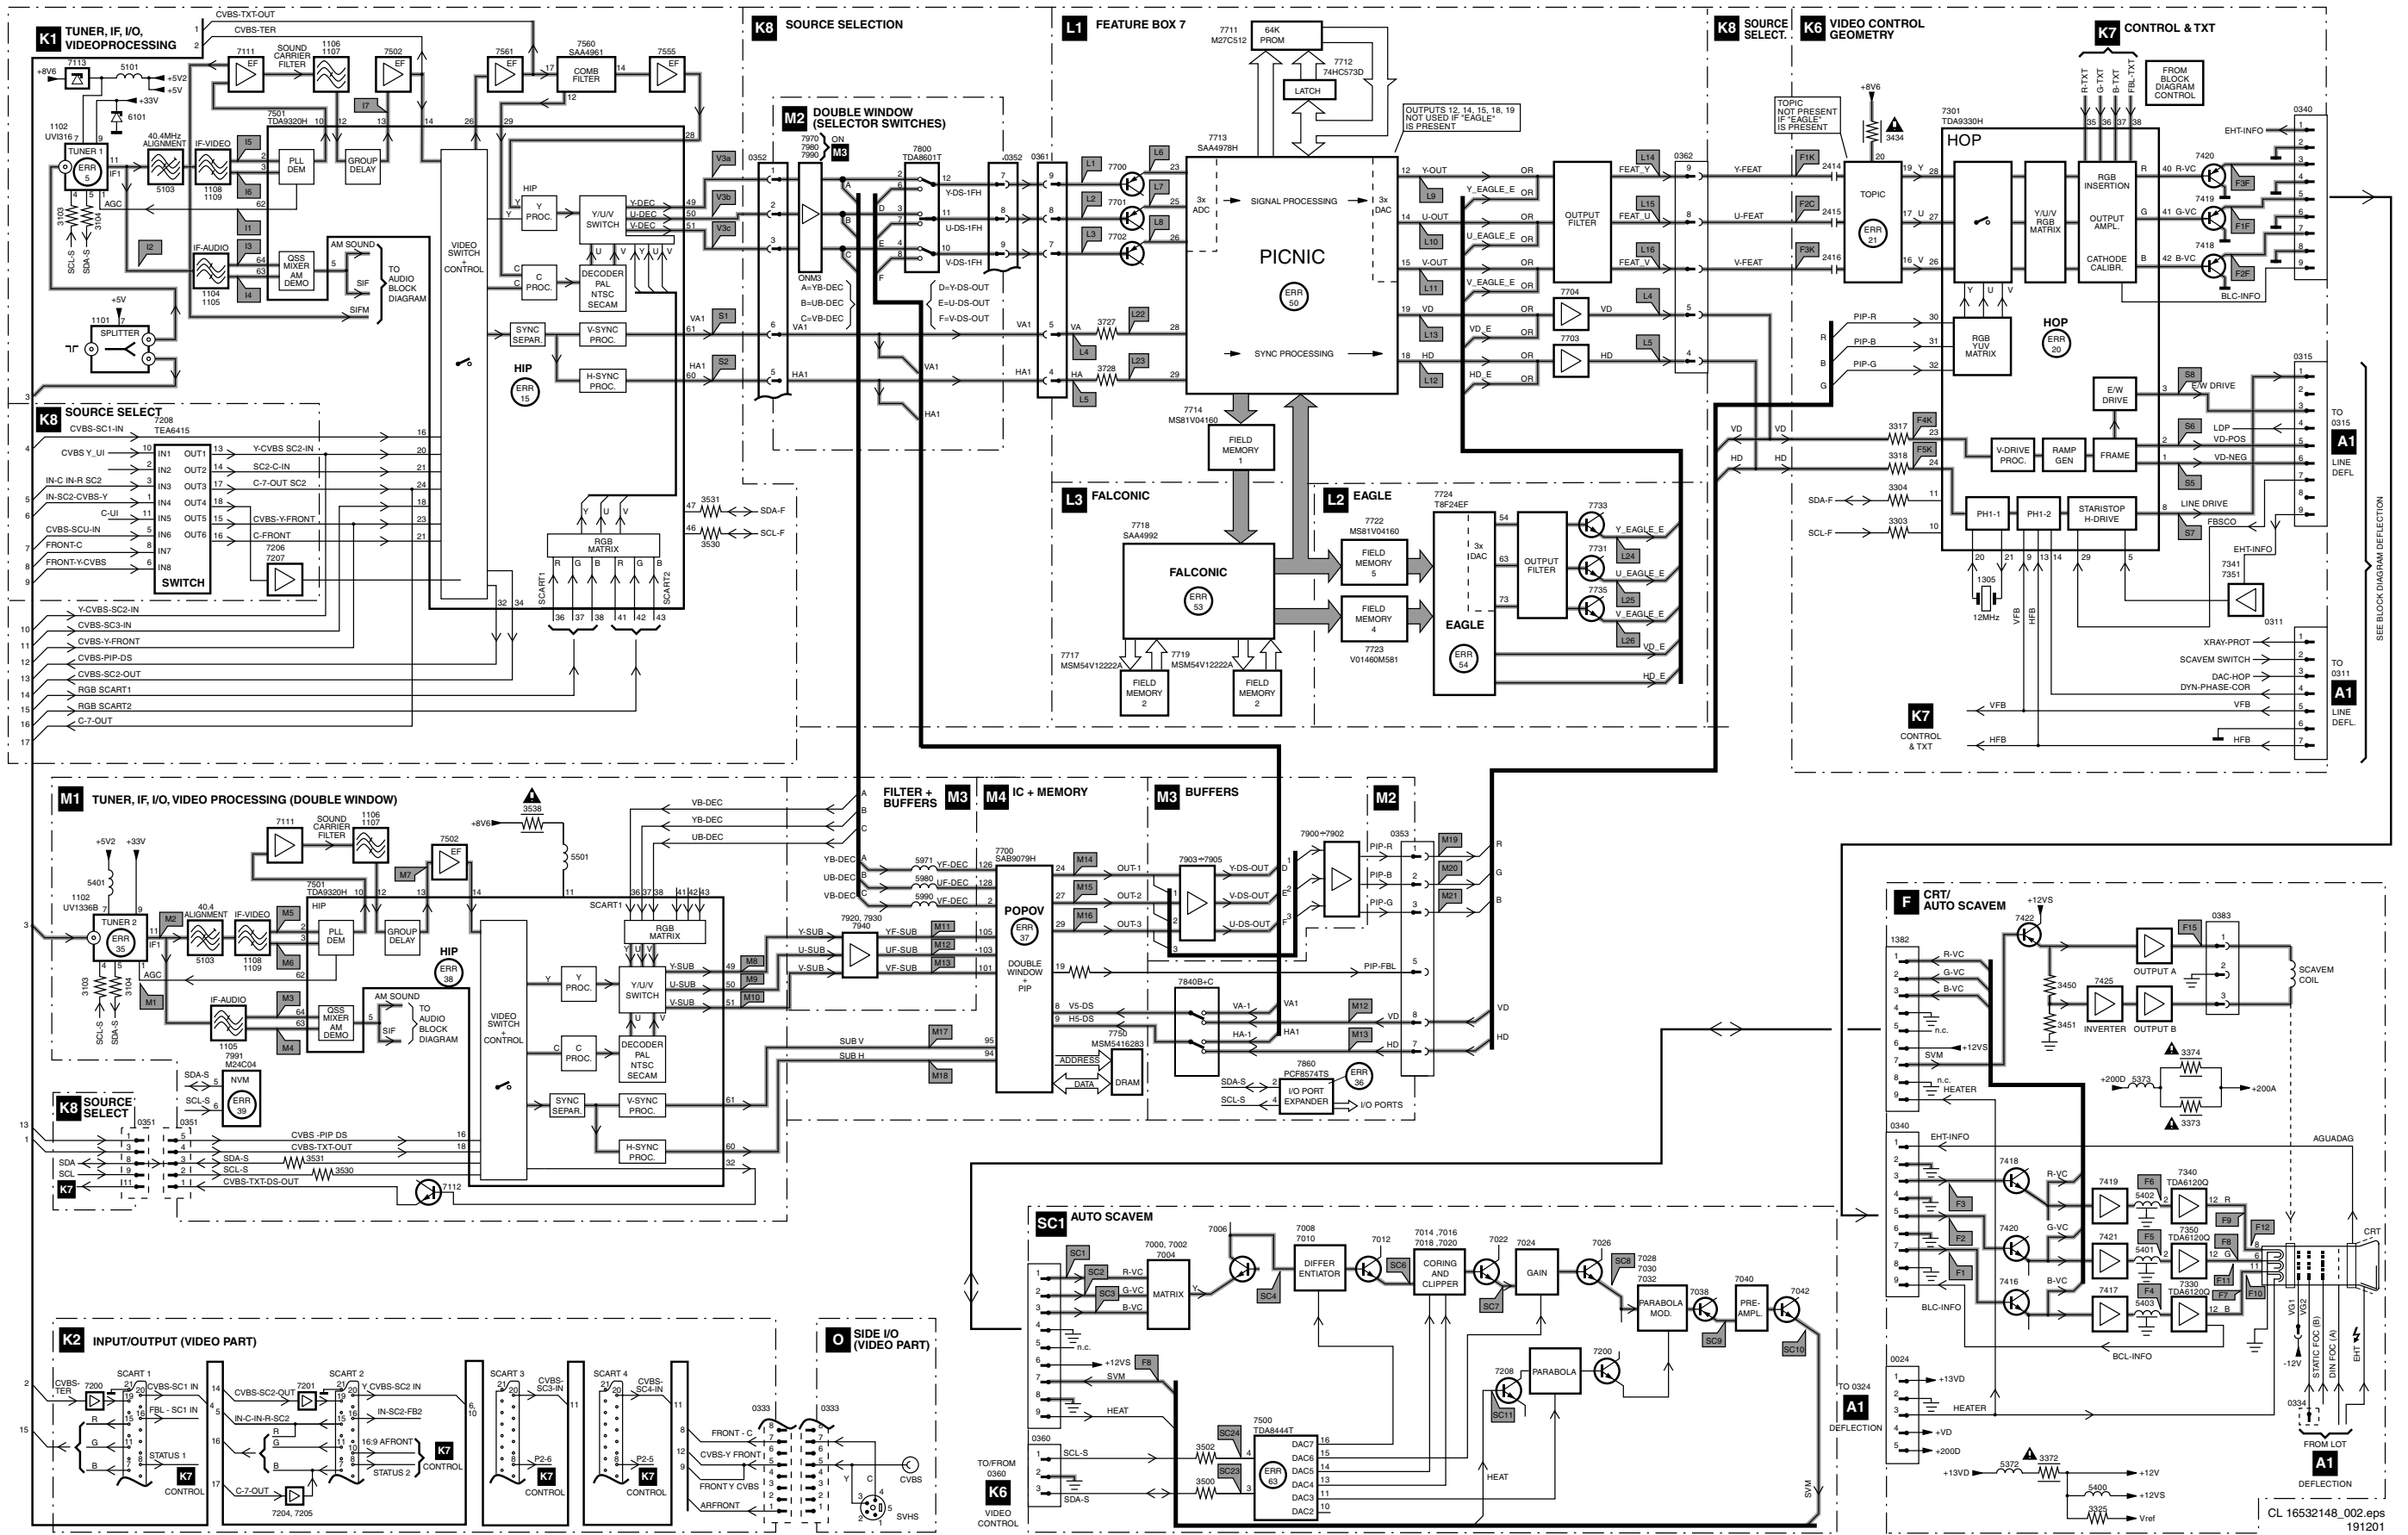


Block Diagram Audio 1 (Exclusive Wireless Audio Details)

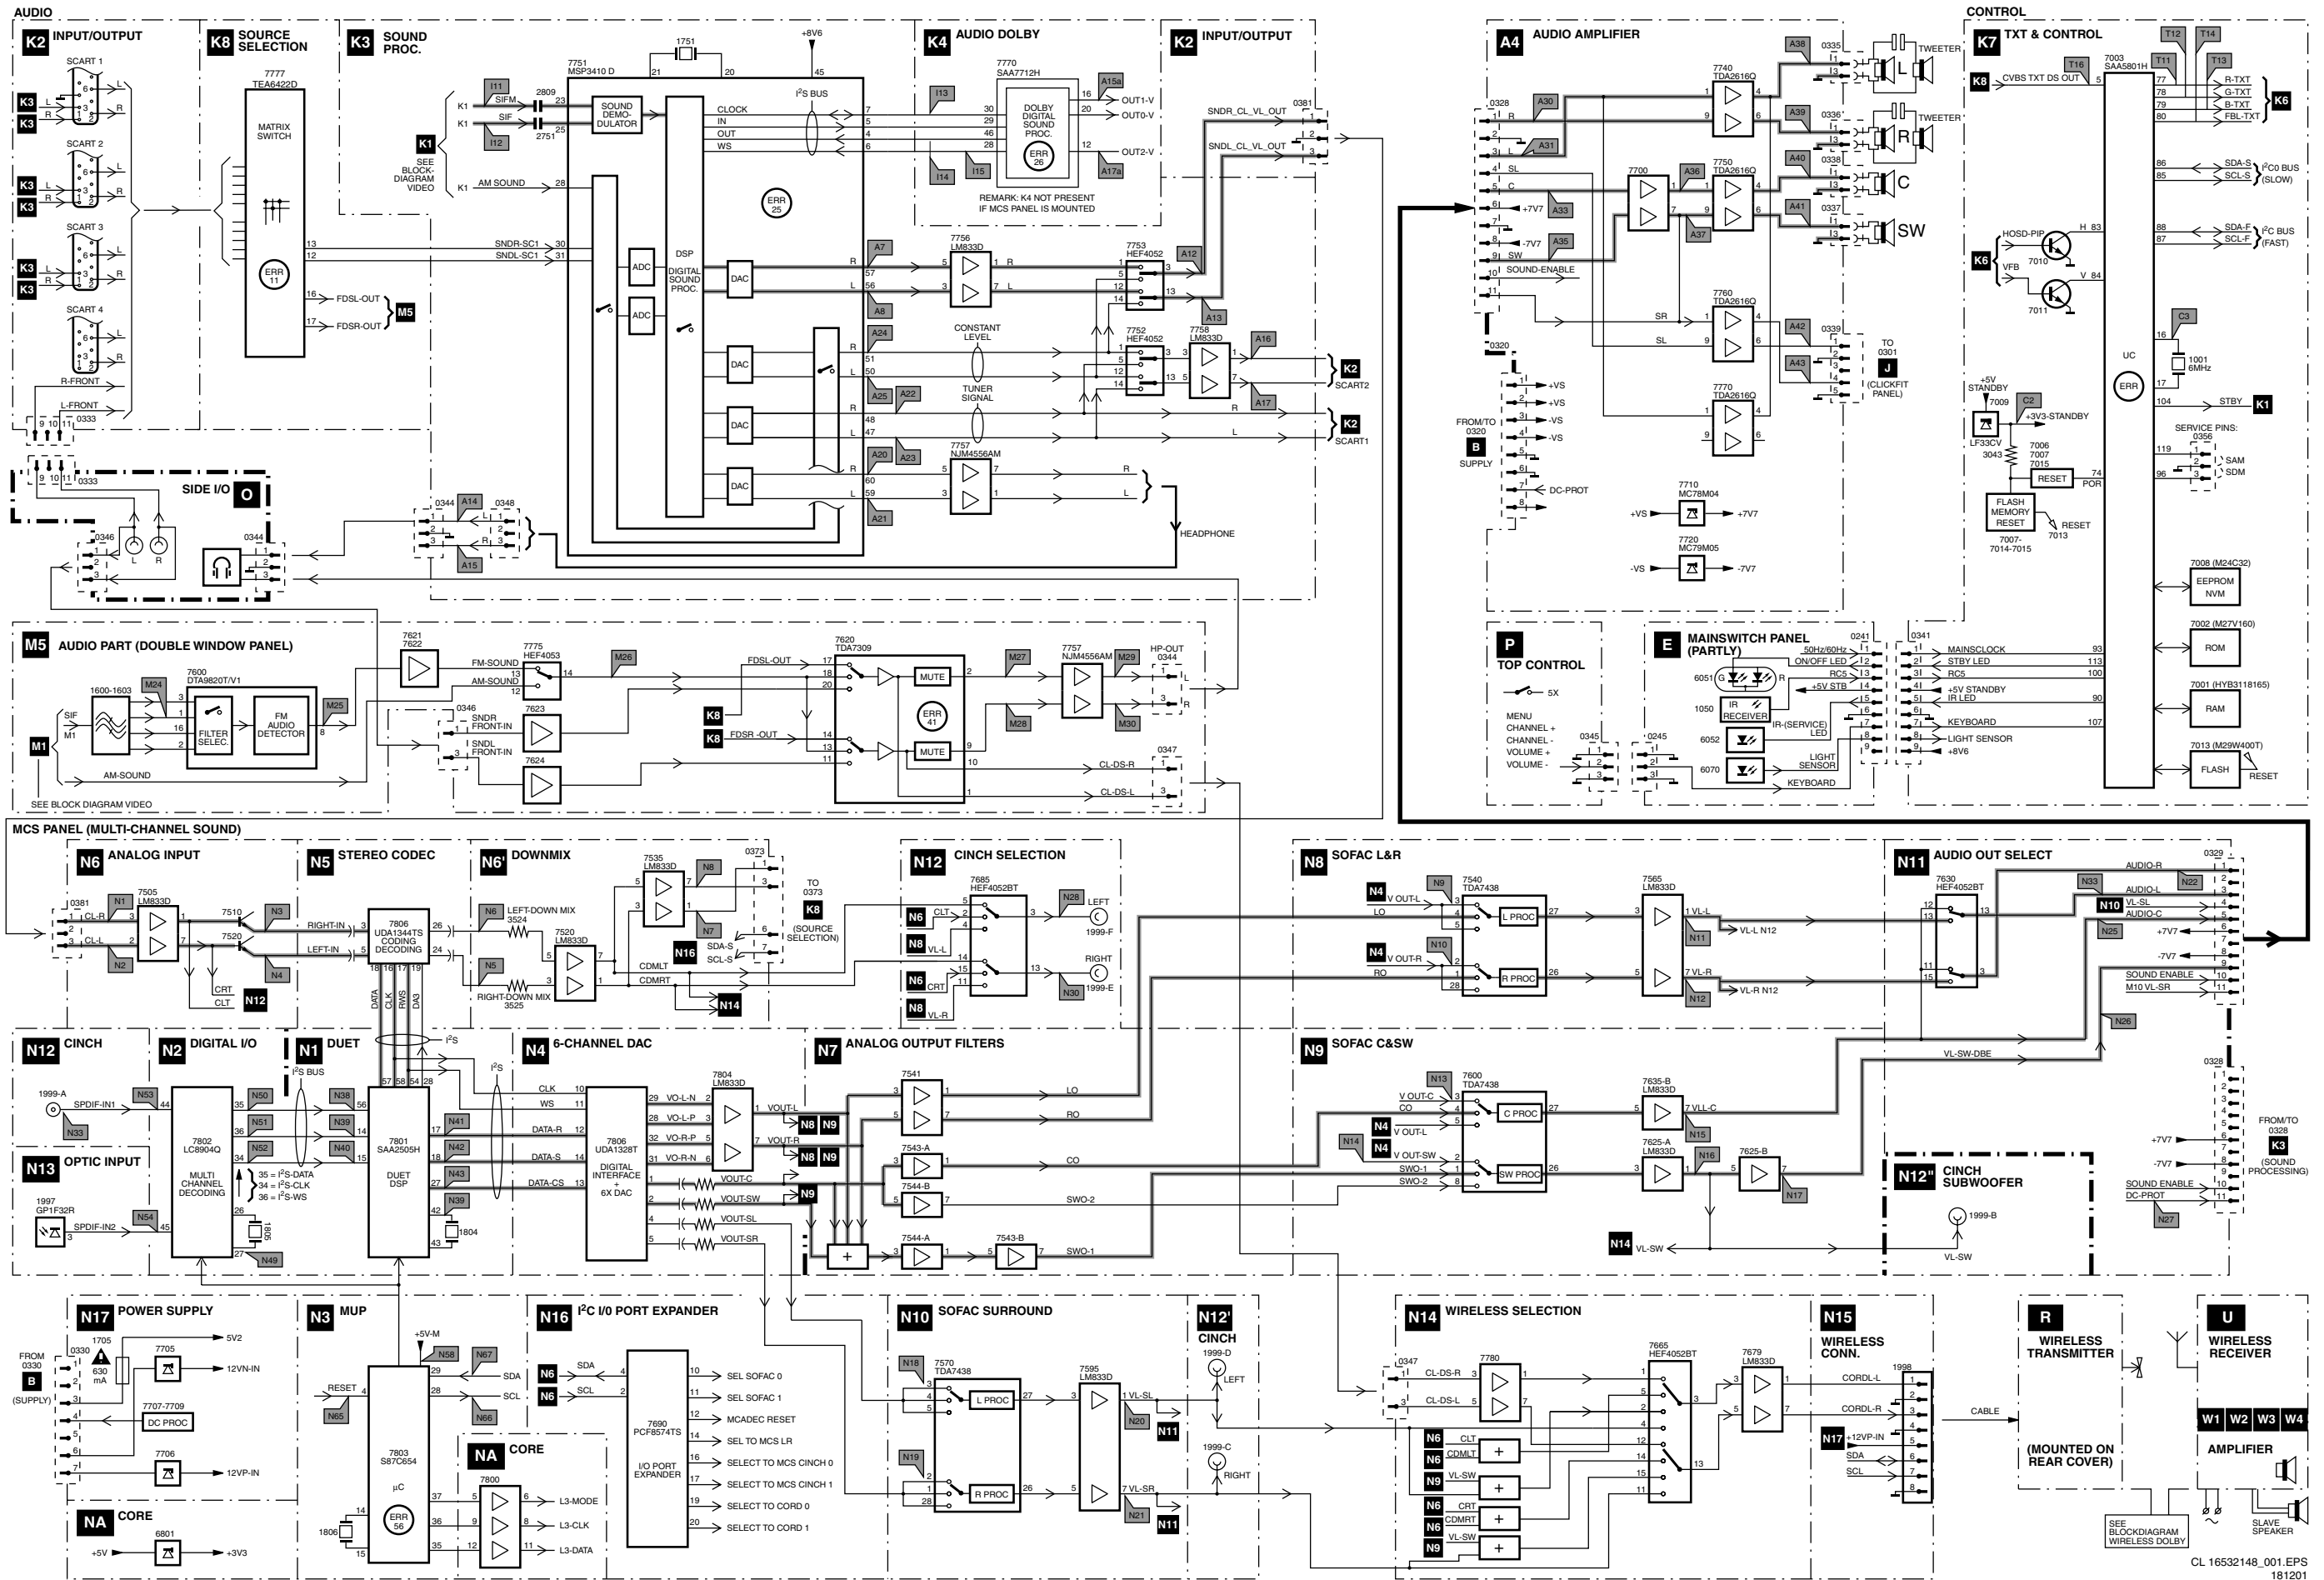


Block Diagram Audio 2 (Wireless Audio Details)

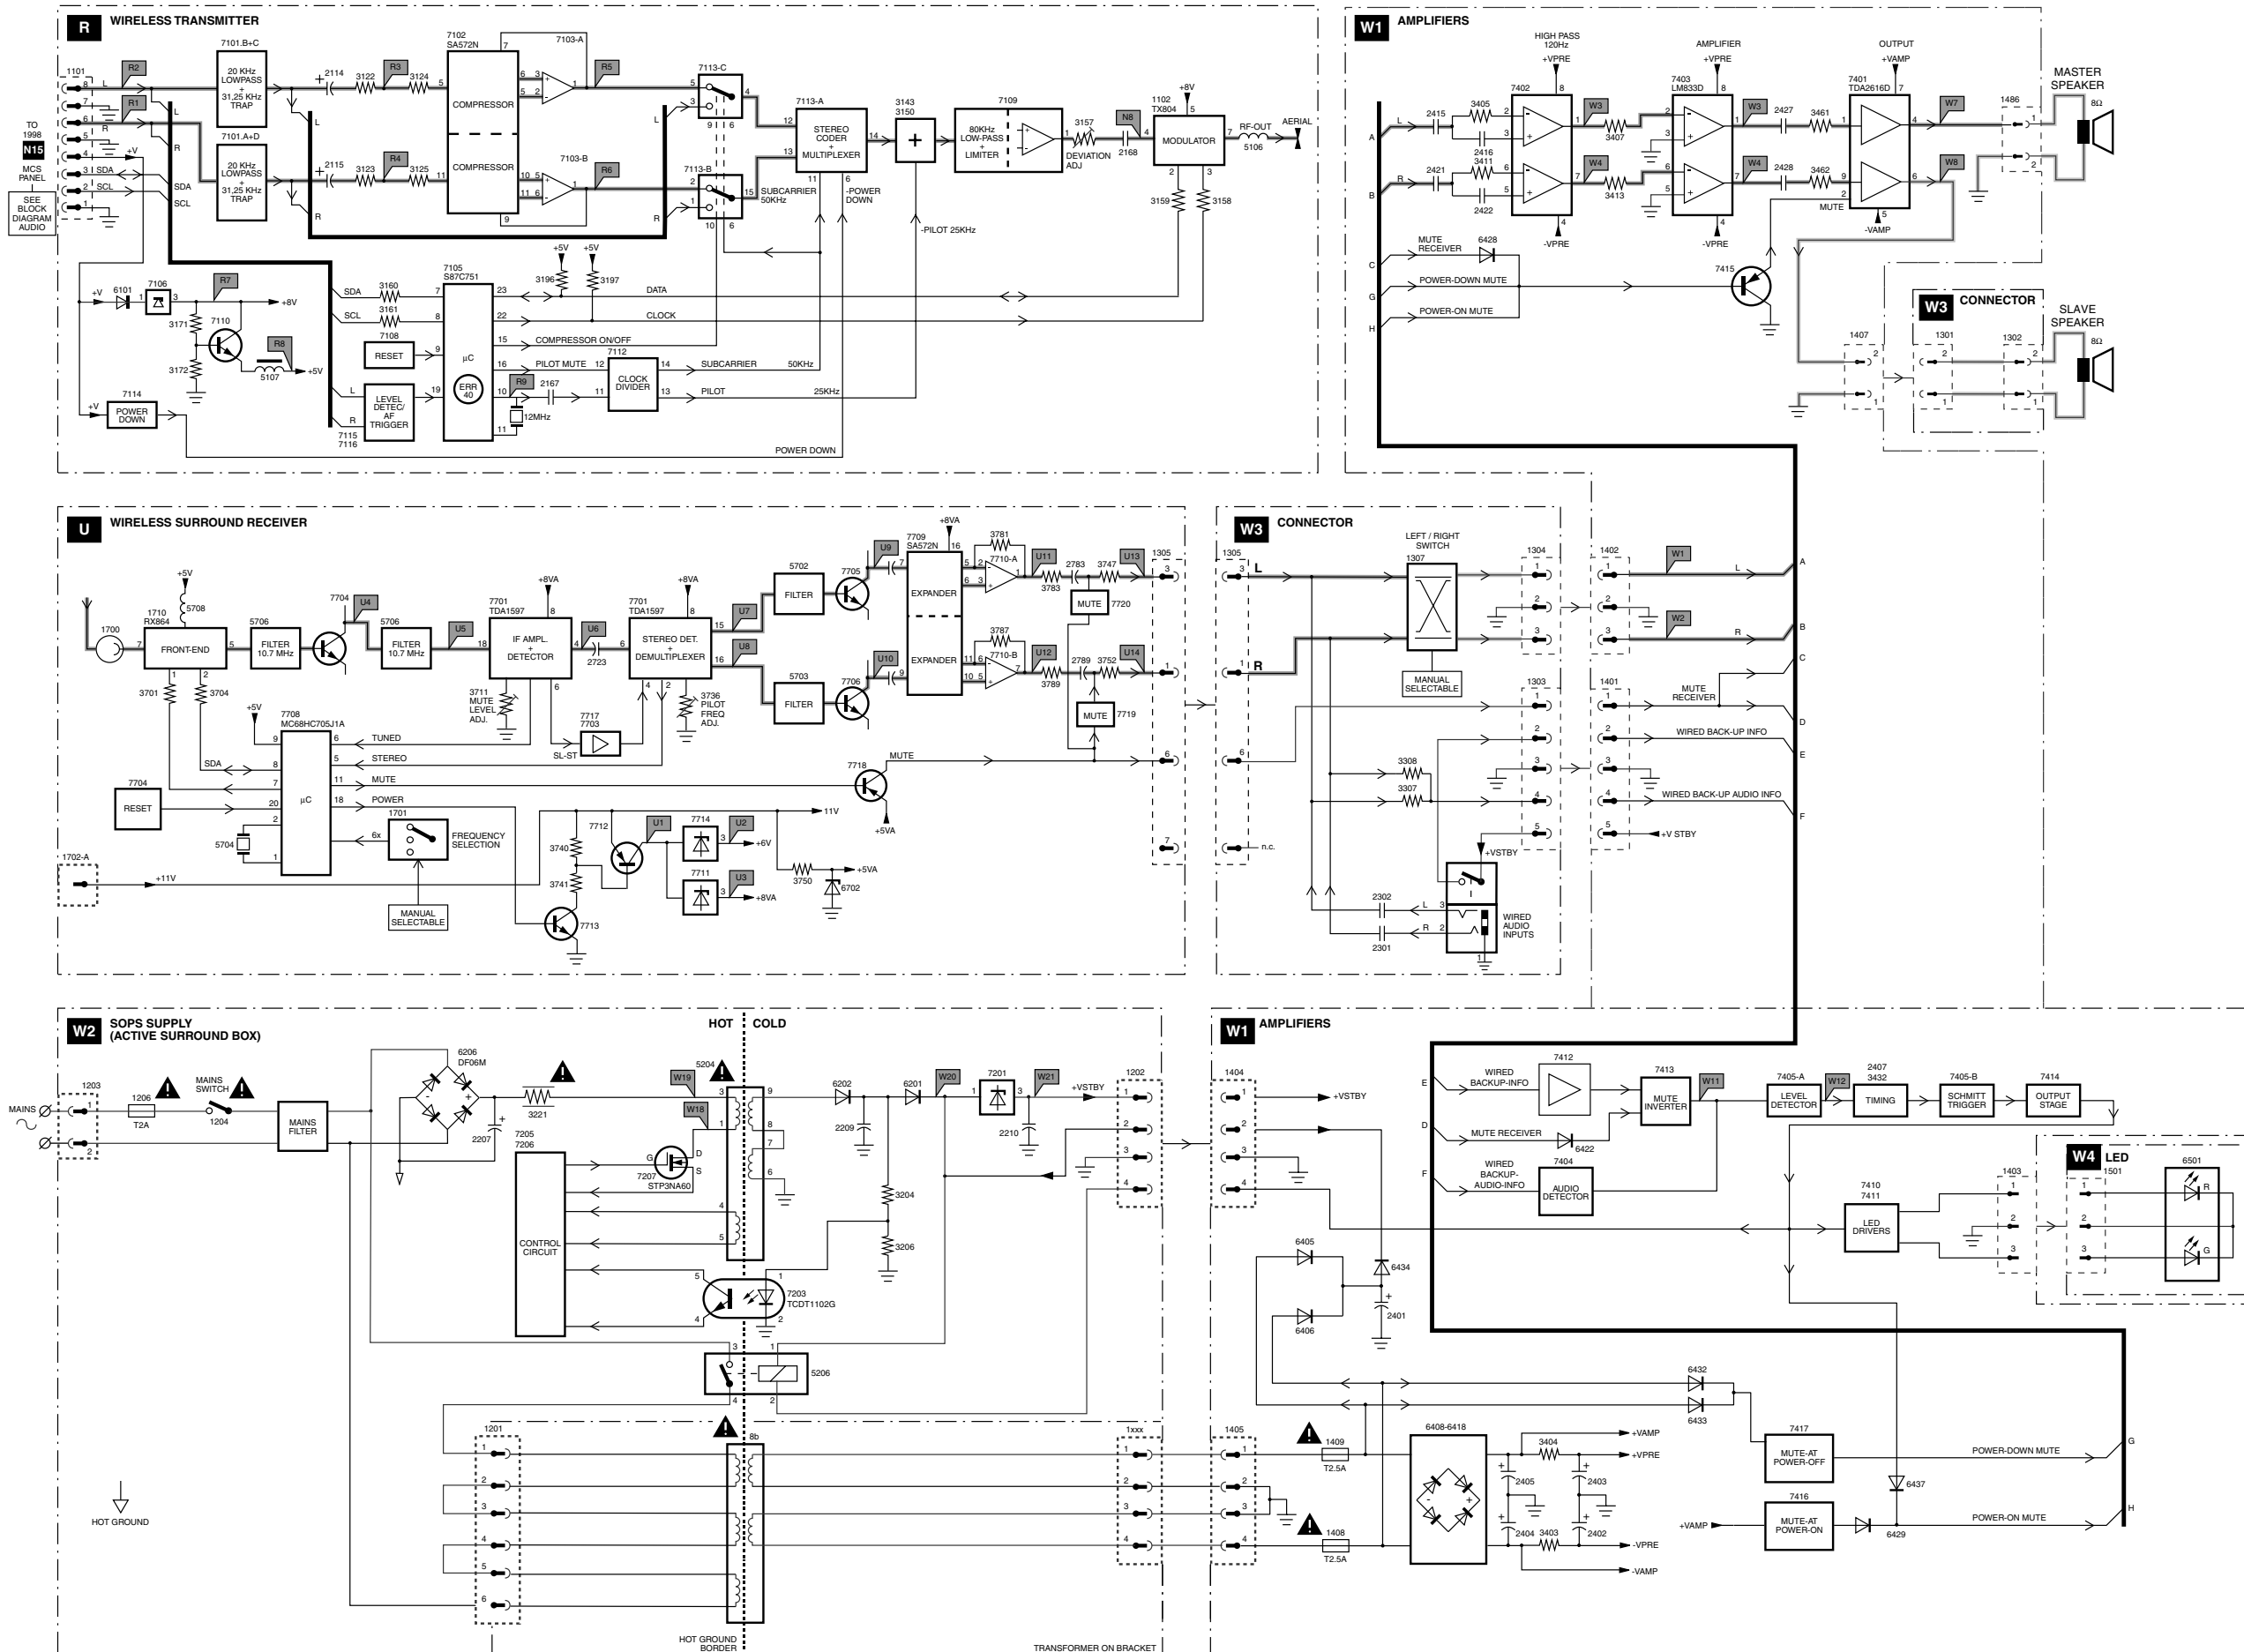


I²C IC's overview

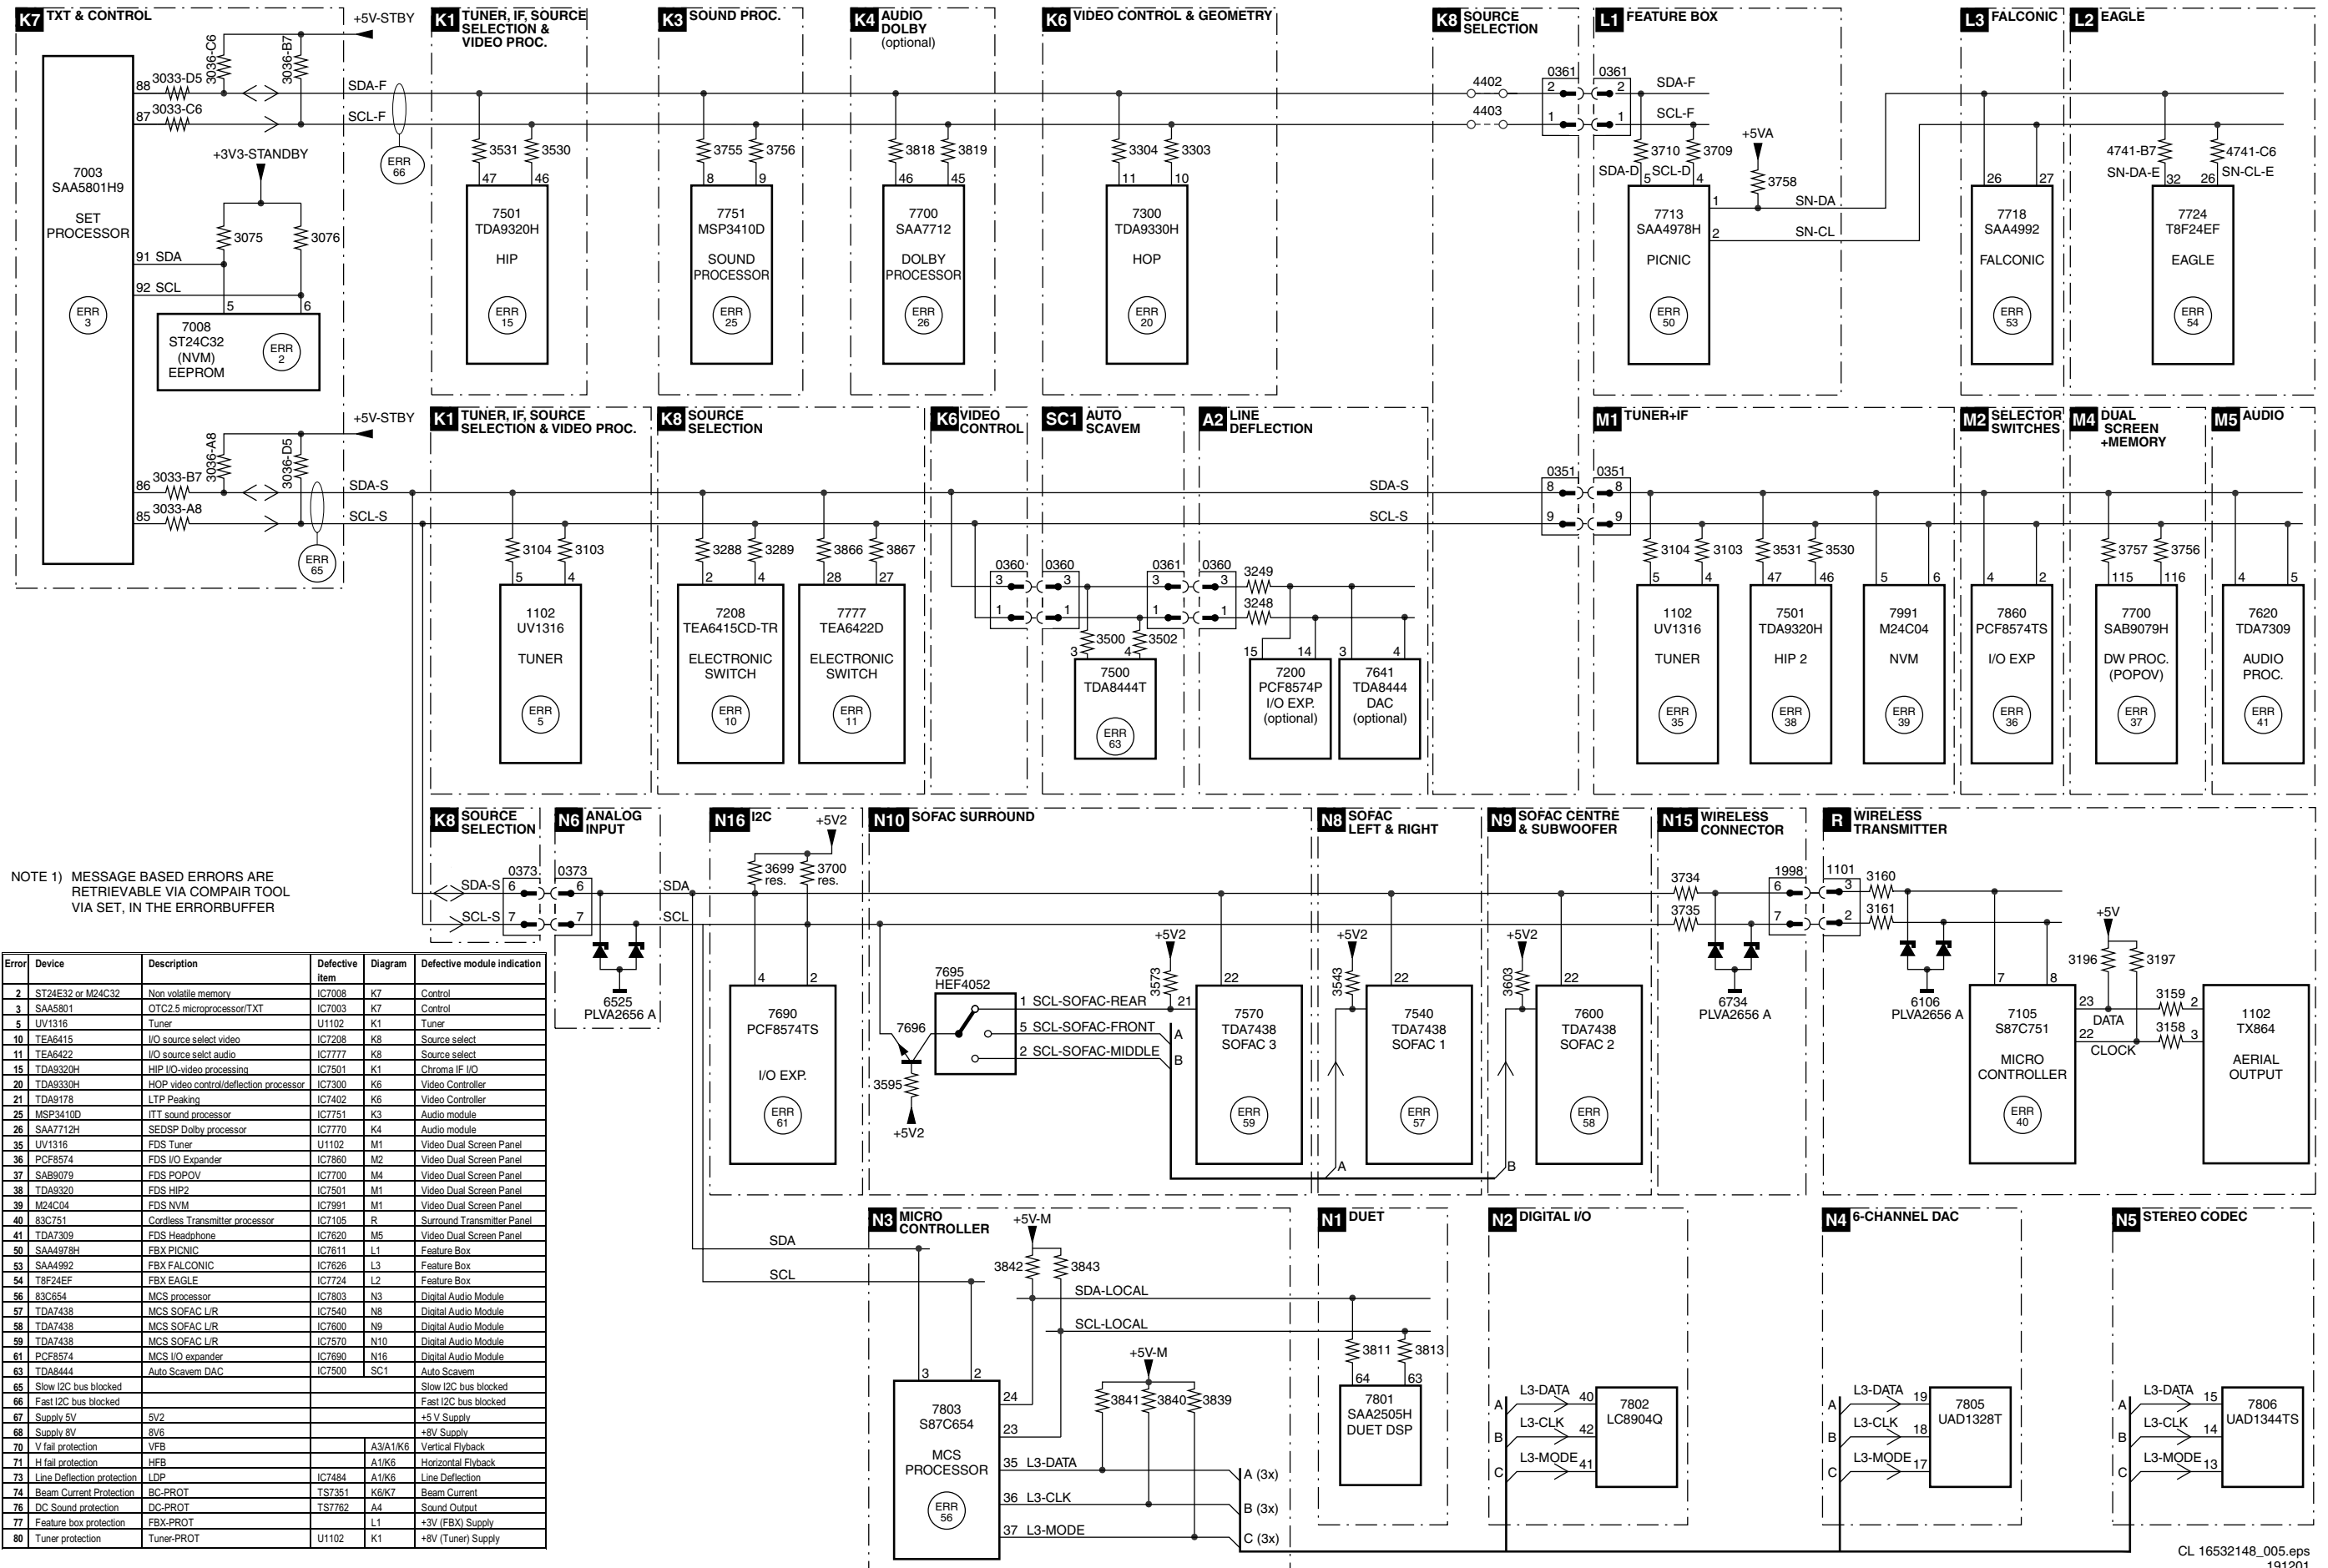


Supply Lines Overview (Part 1)

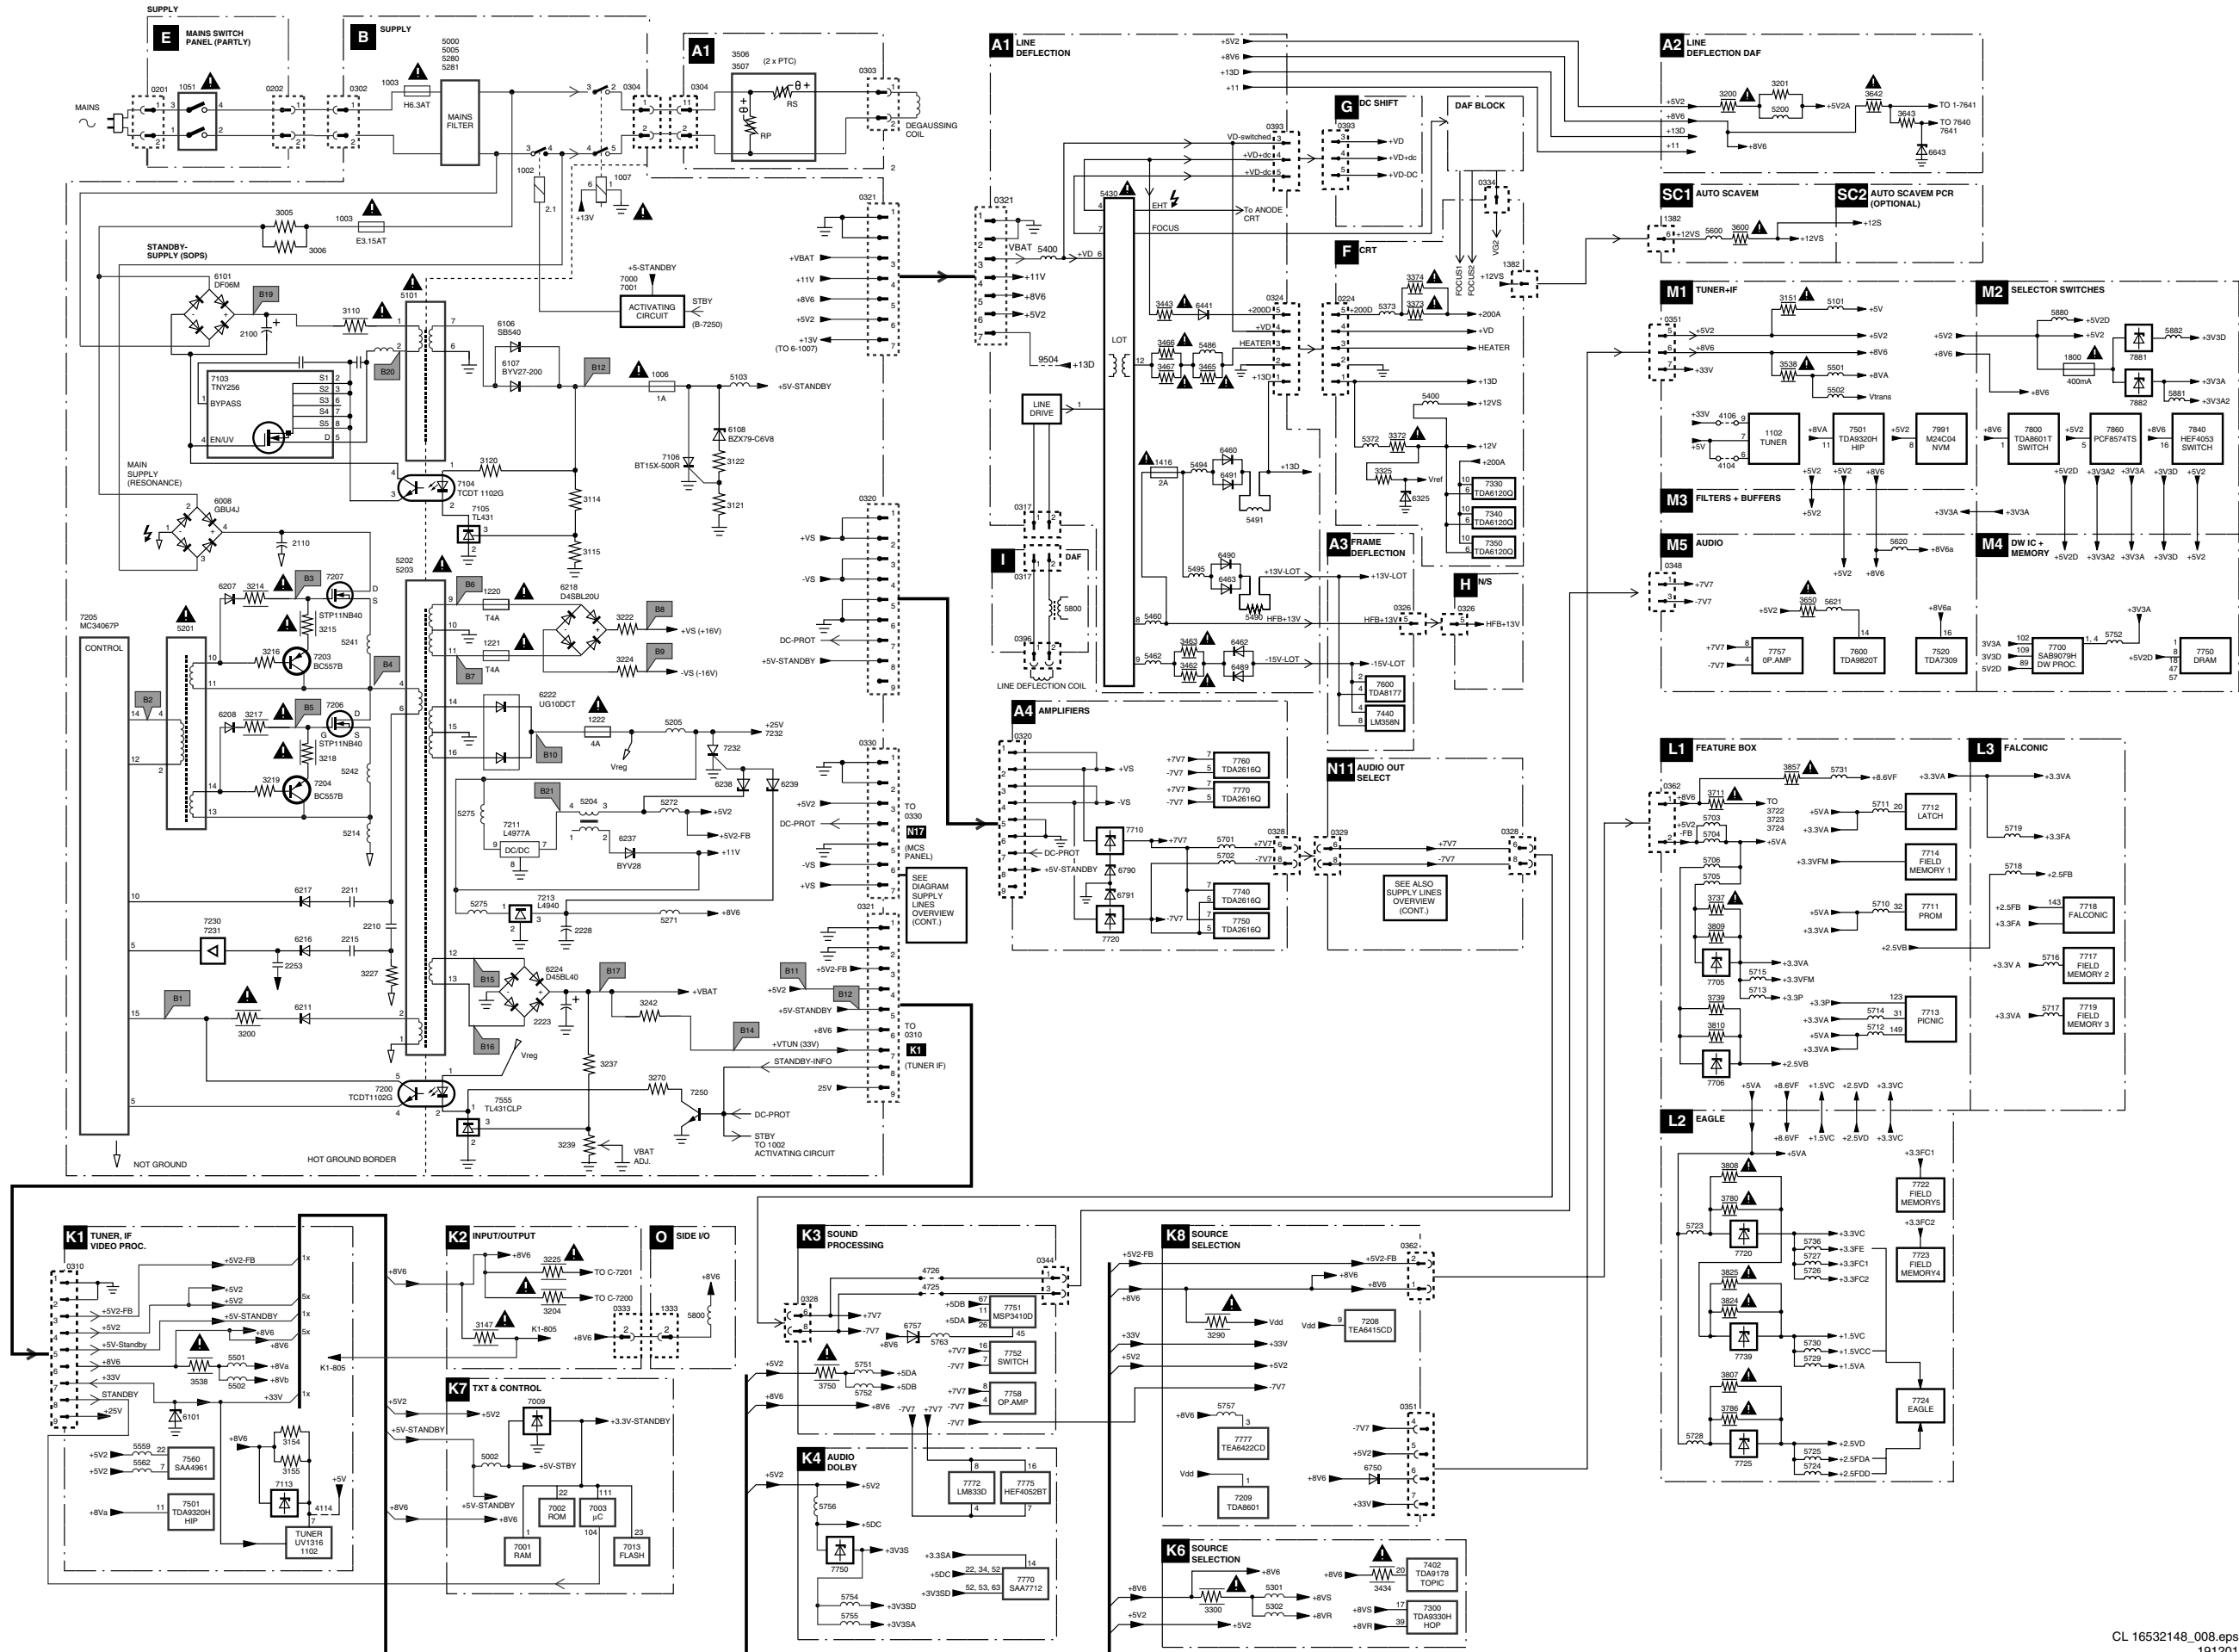


Supply Lines Overview (Part 2)

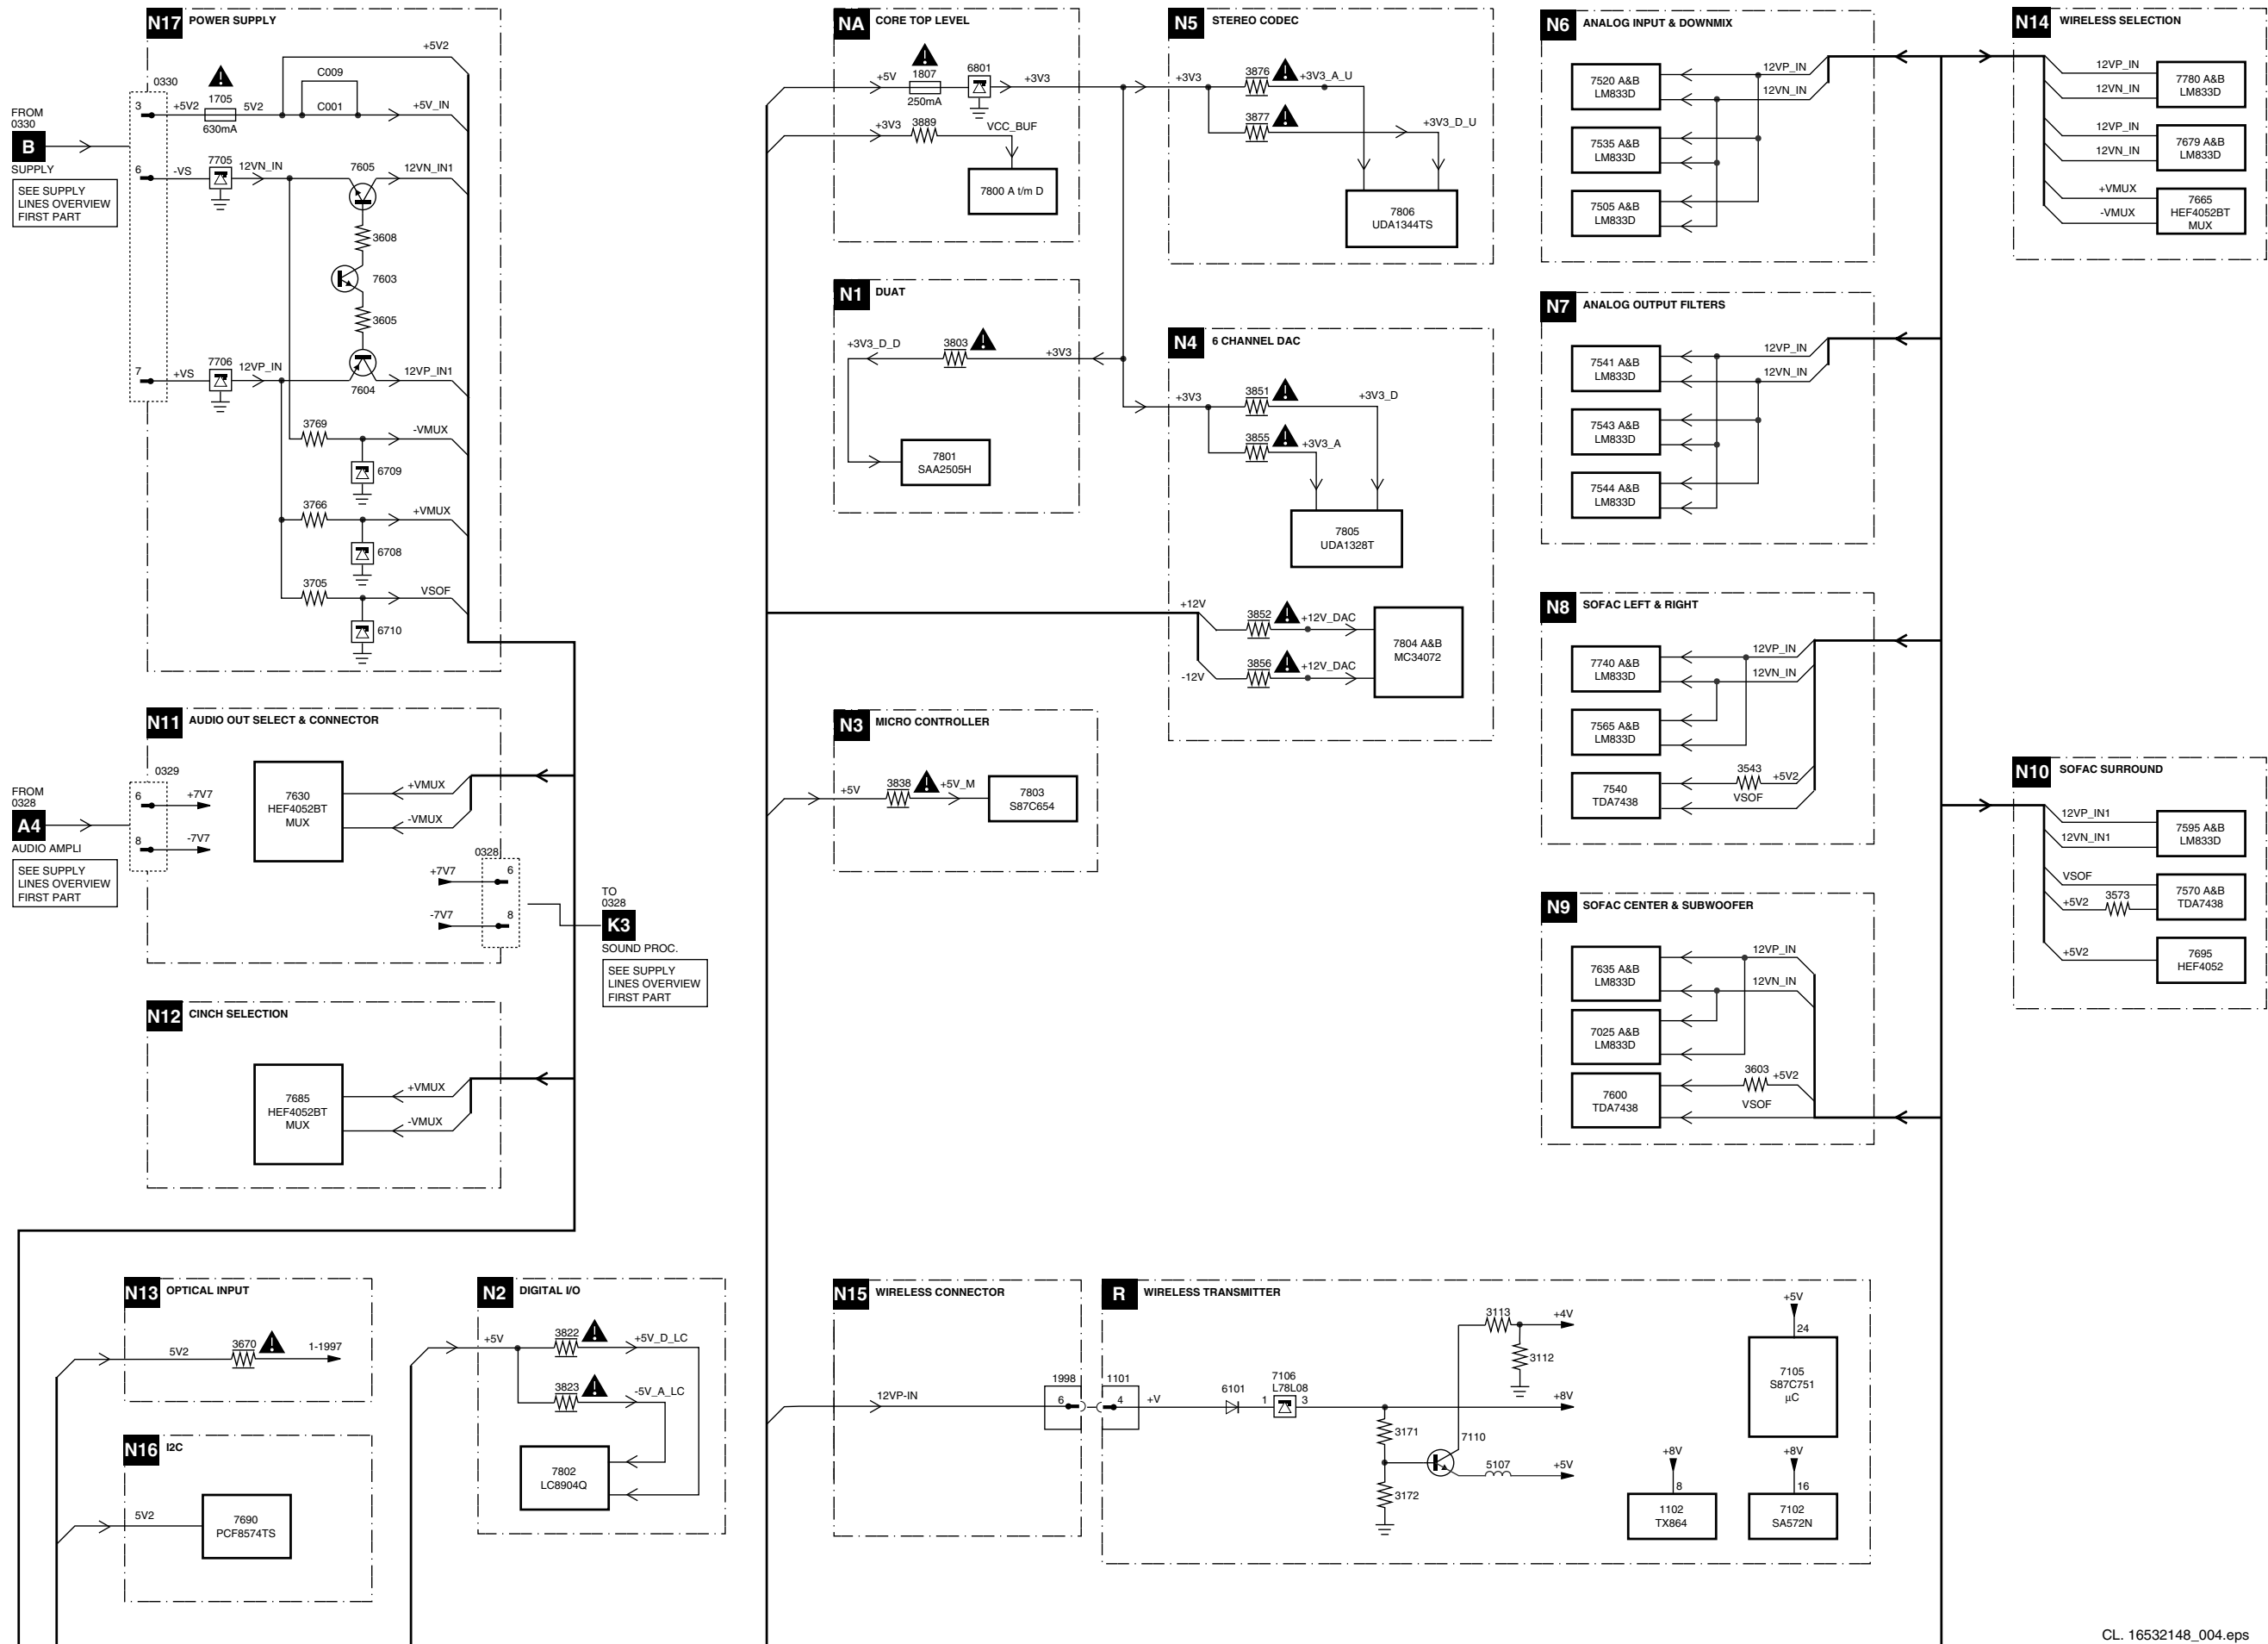


CRT / SCAVEM panel (F) (Copper Side)

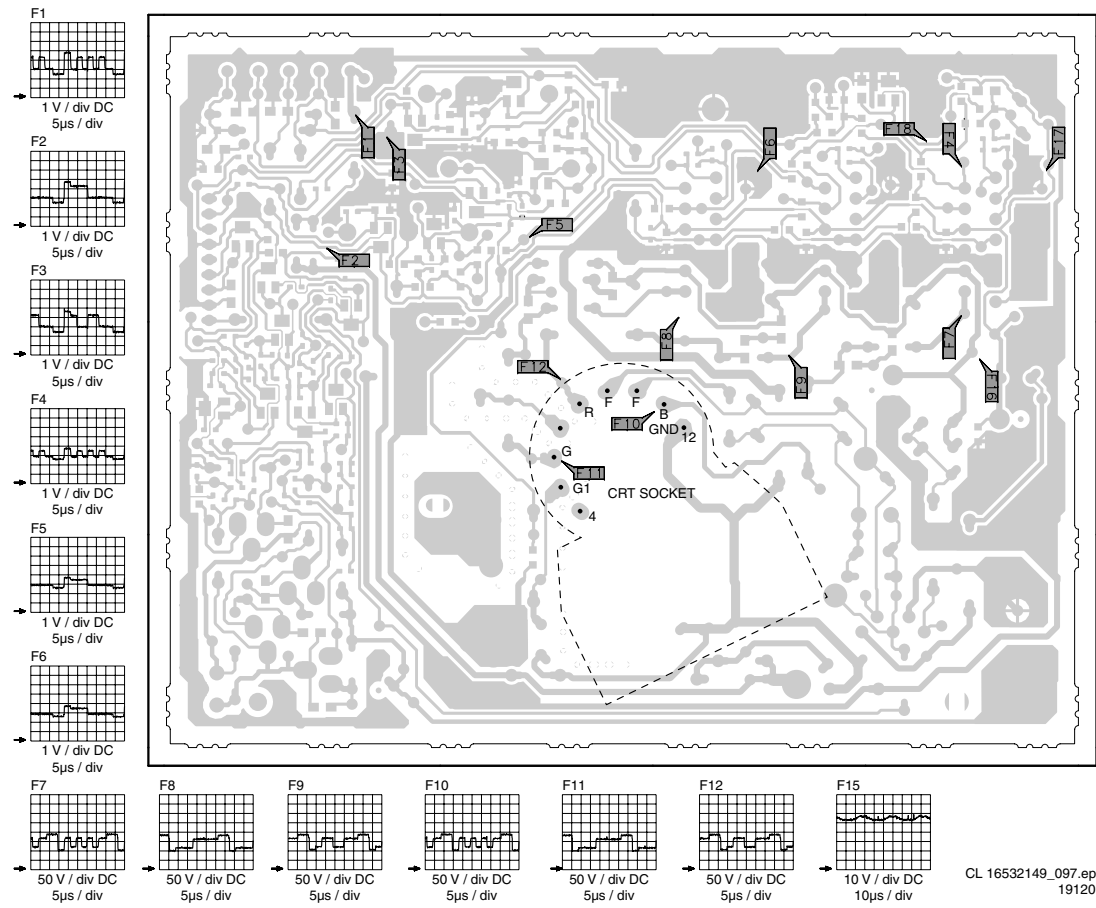

Auto SCAVEM Panel (SC) (Copper Side)

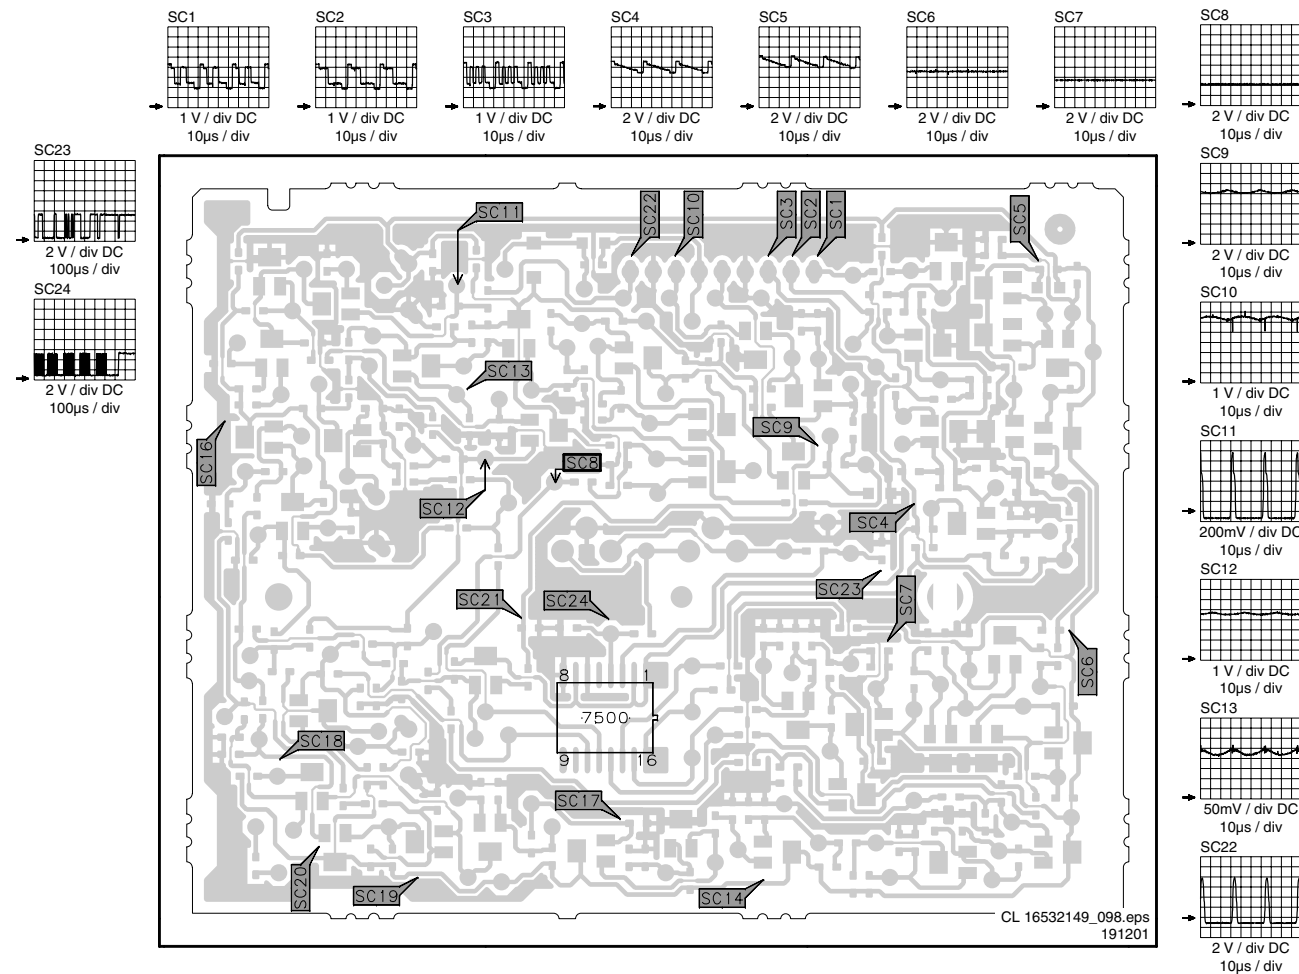


Small signal panel (K)

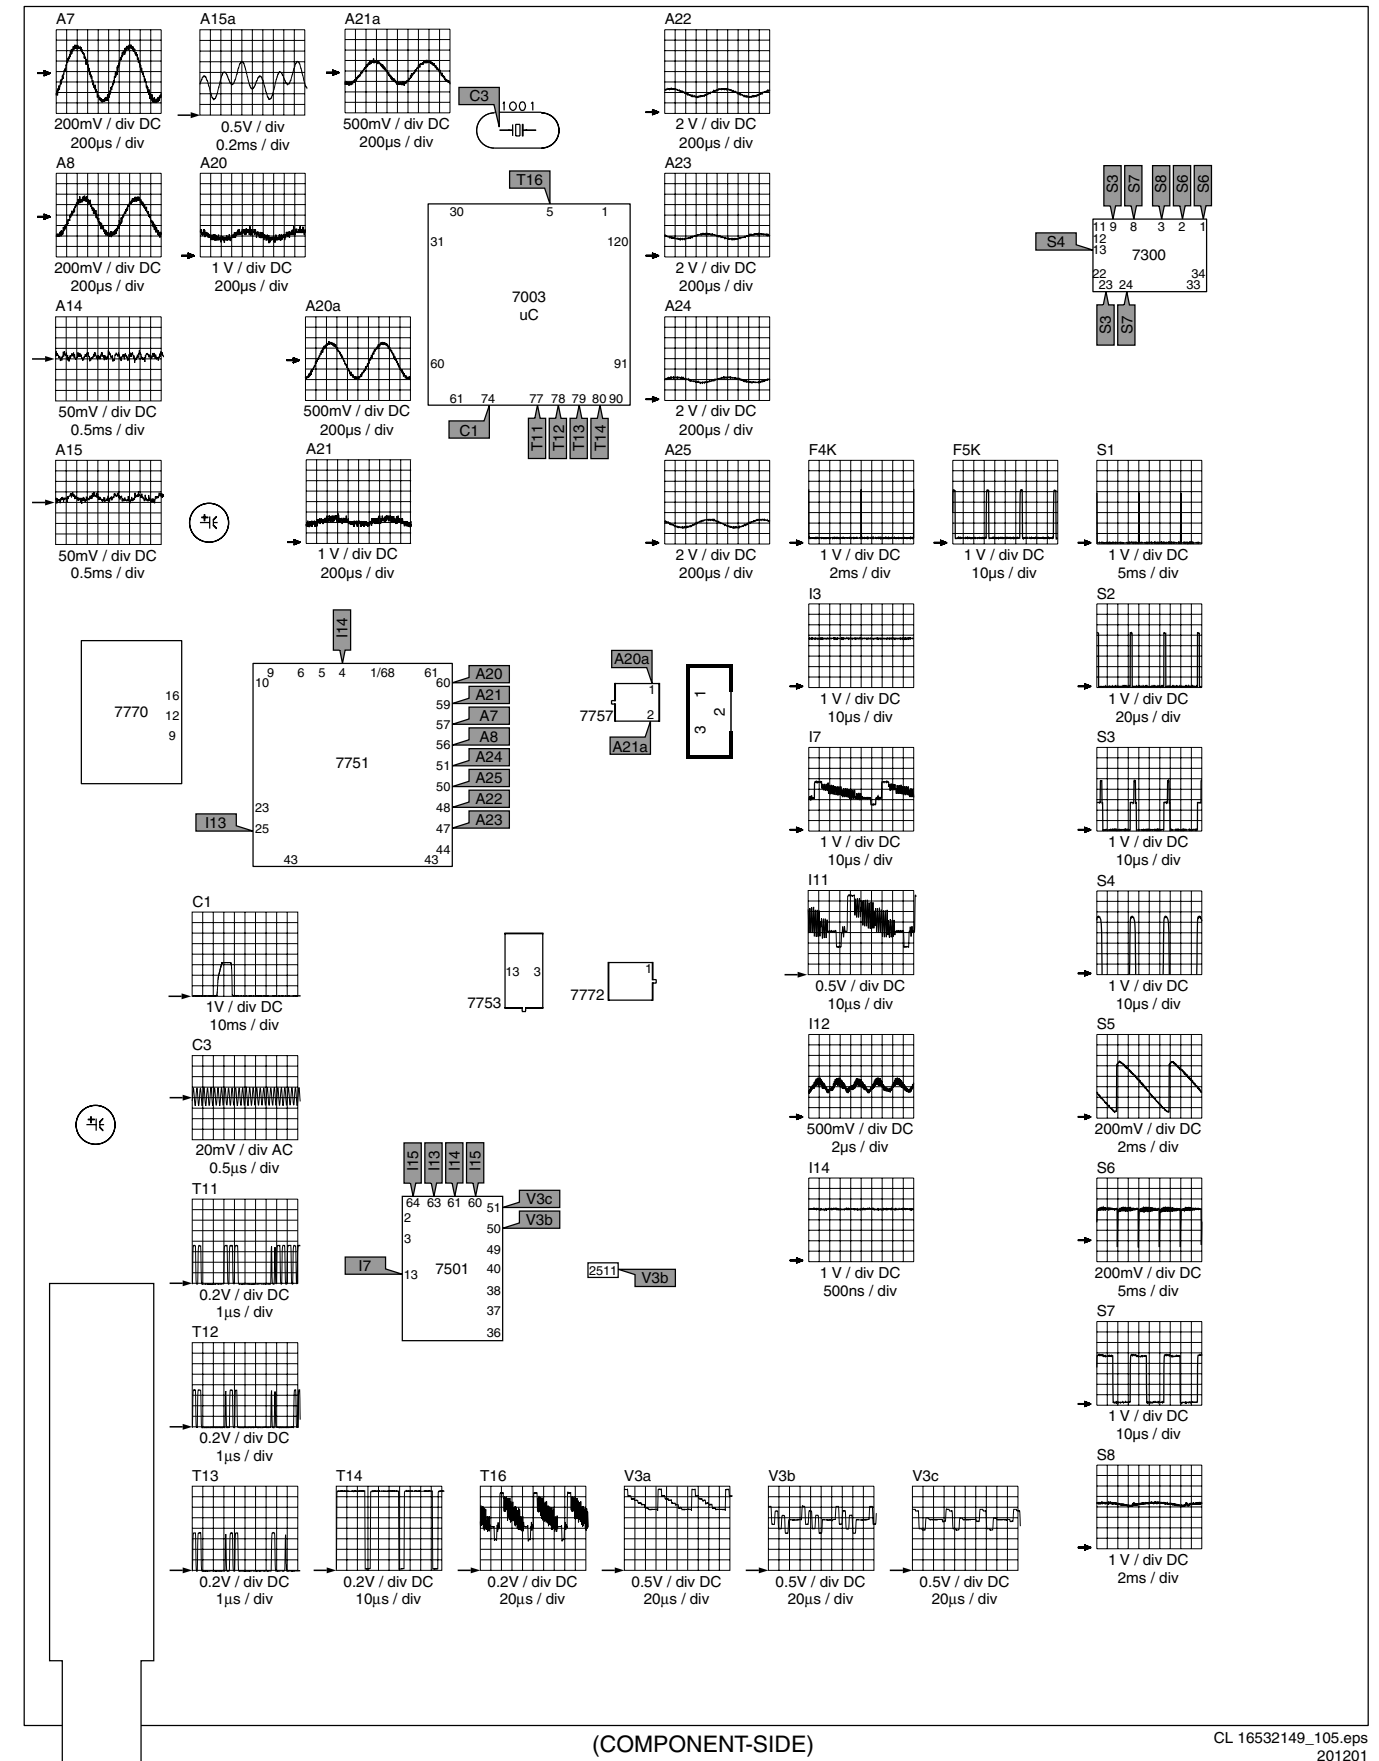


(COMPONENT-SIDE)

CL 16532149_105.eps 201201

Large Signal Panel (A)

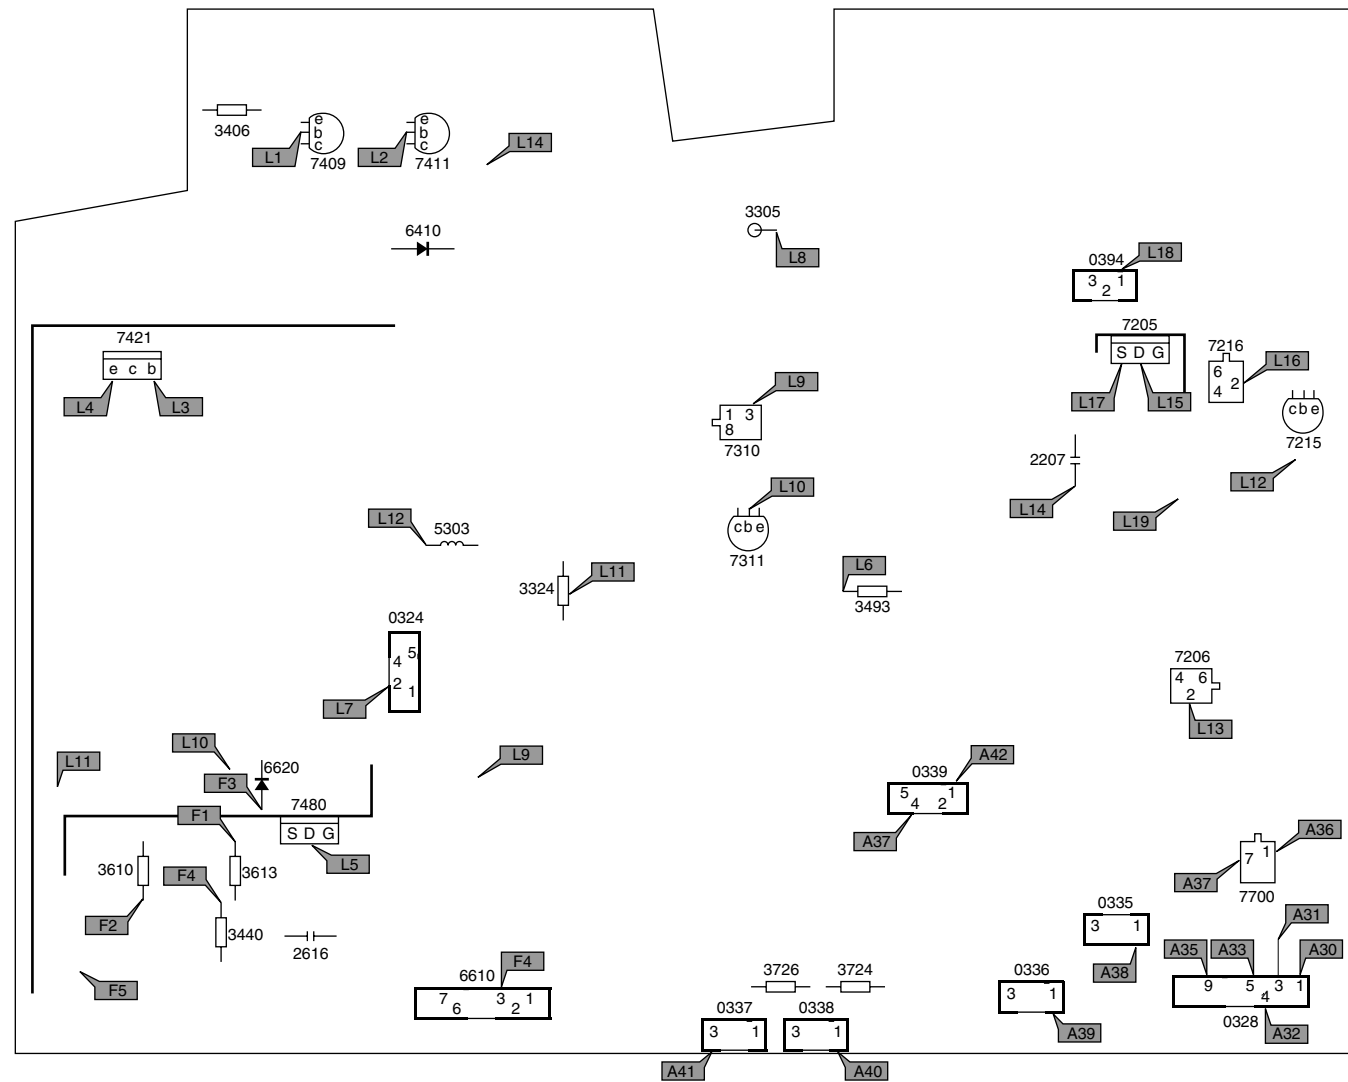


COPPERSIDE

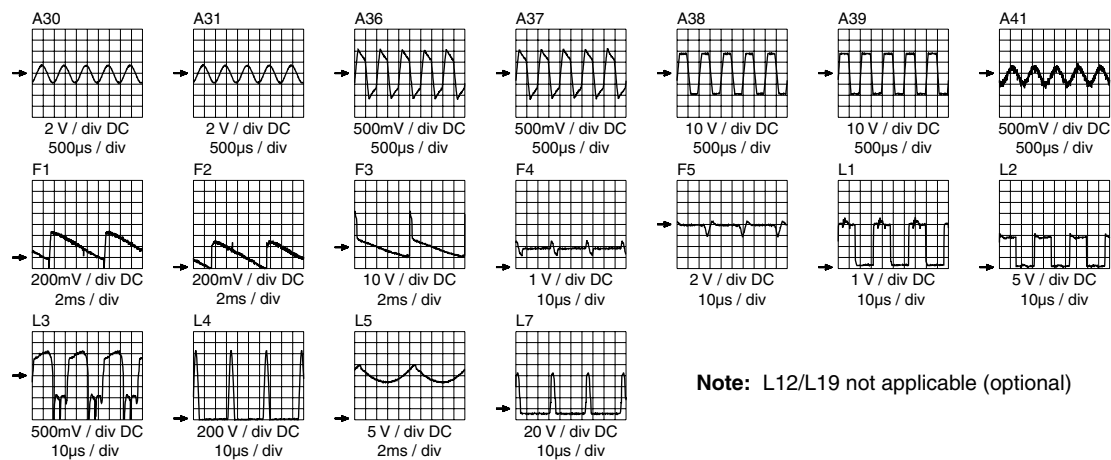


Note: L12/L19 not applicable (optional)

CL 16532149_099.eps
201201

Top Supply (B)

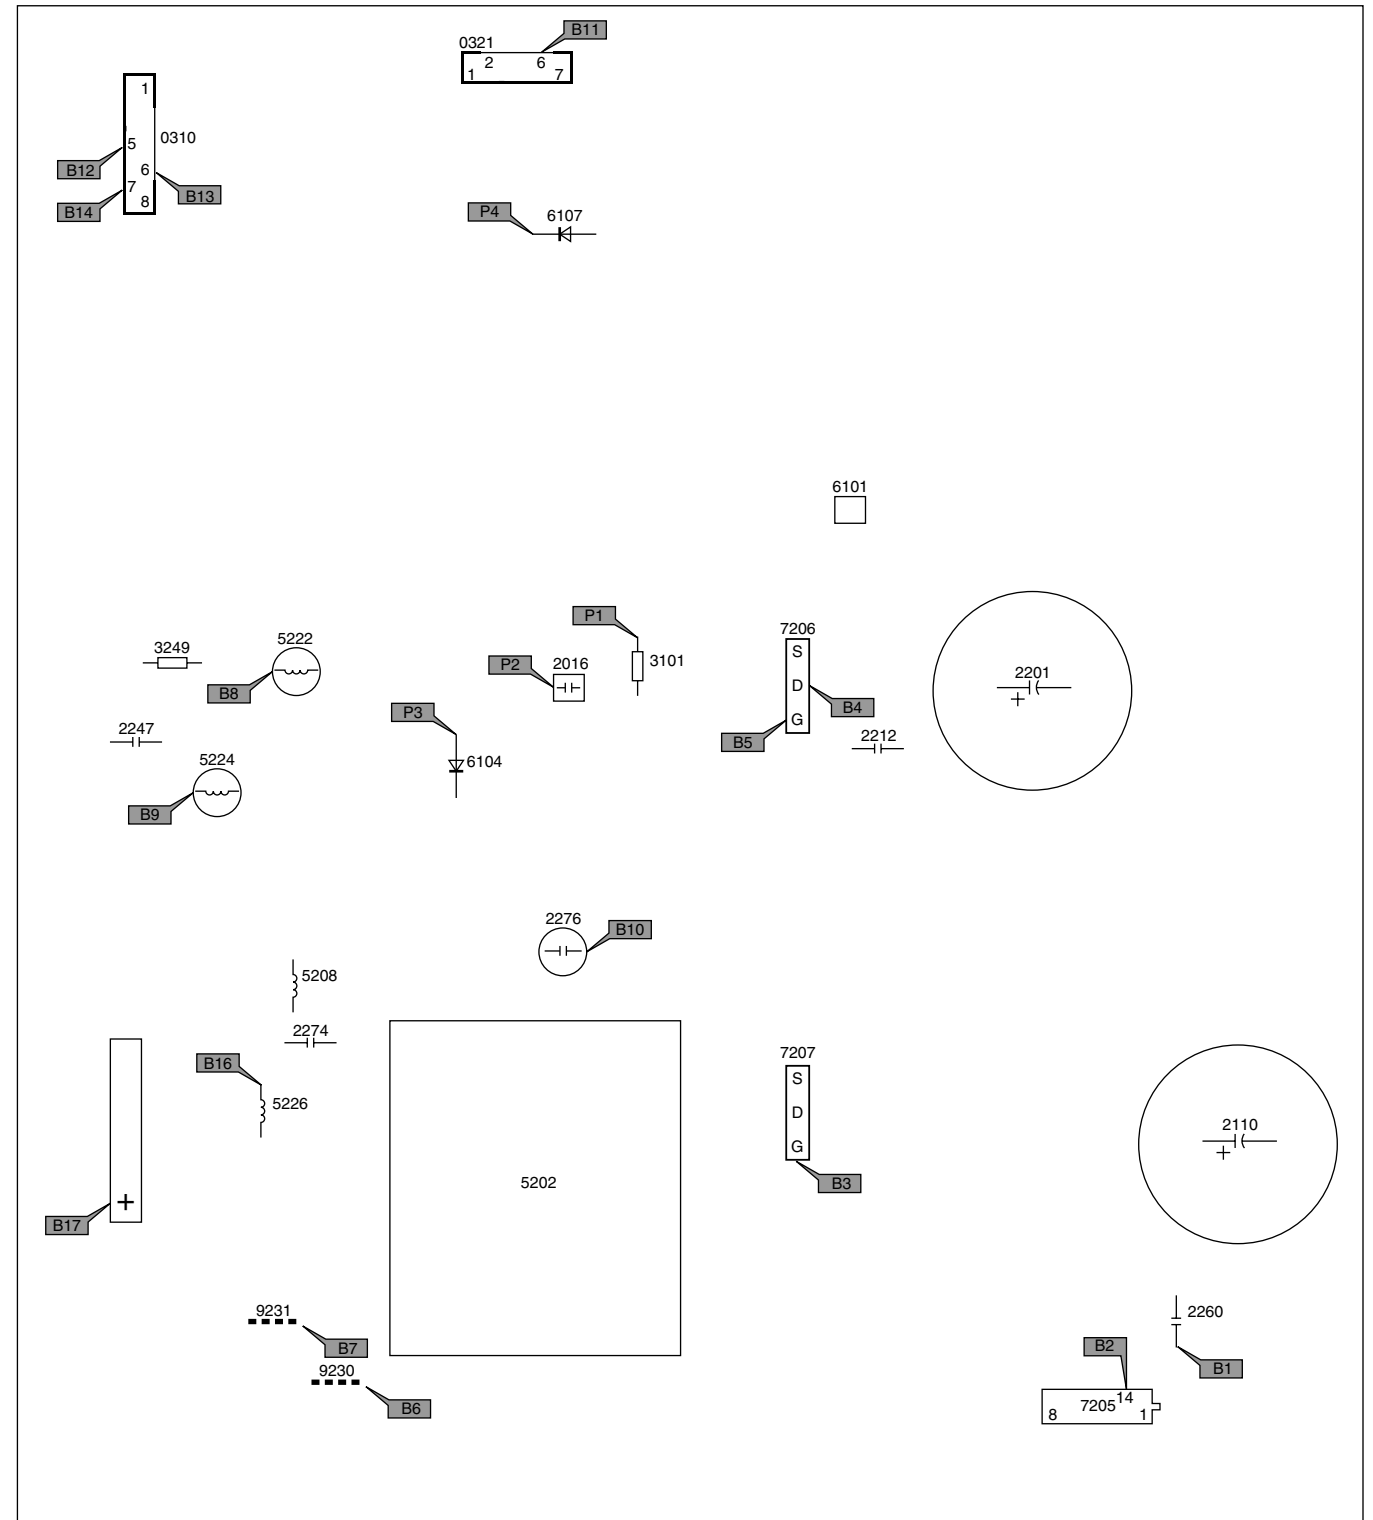


COPPERSIDE

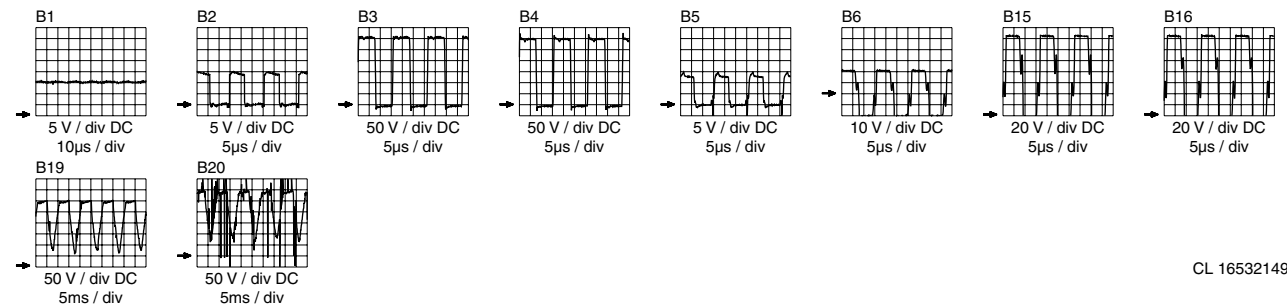


CL 16532149_106.eps
191201


MCS Module (N)

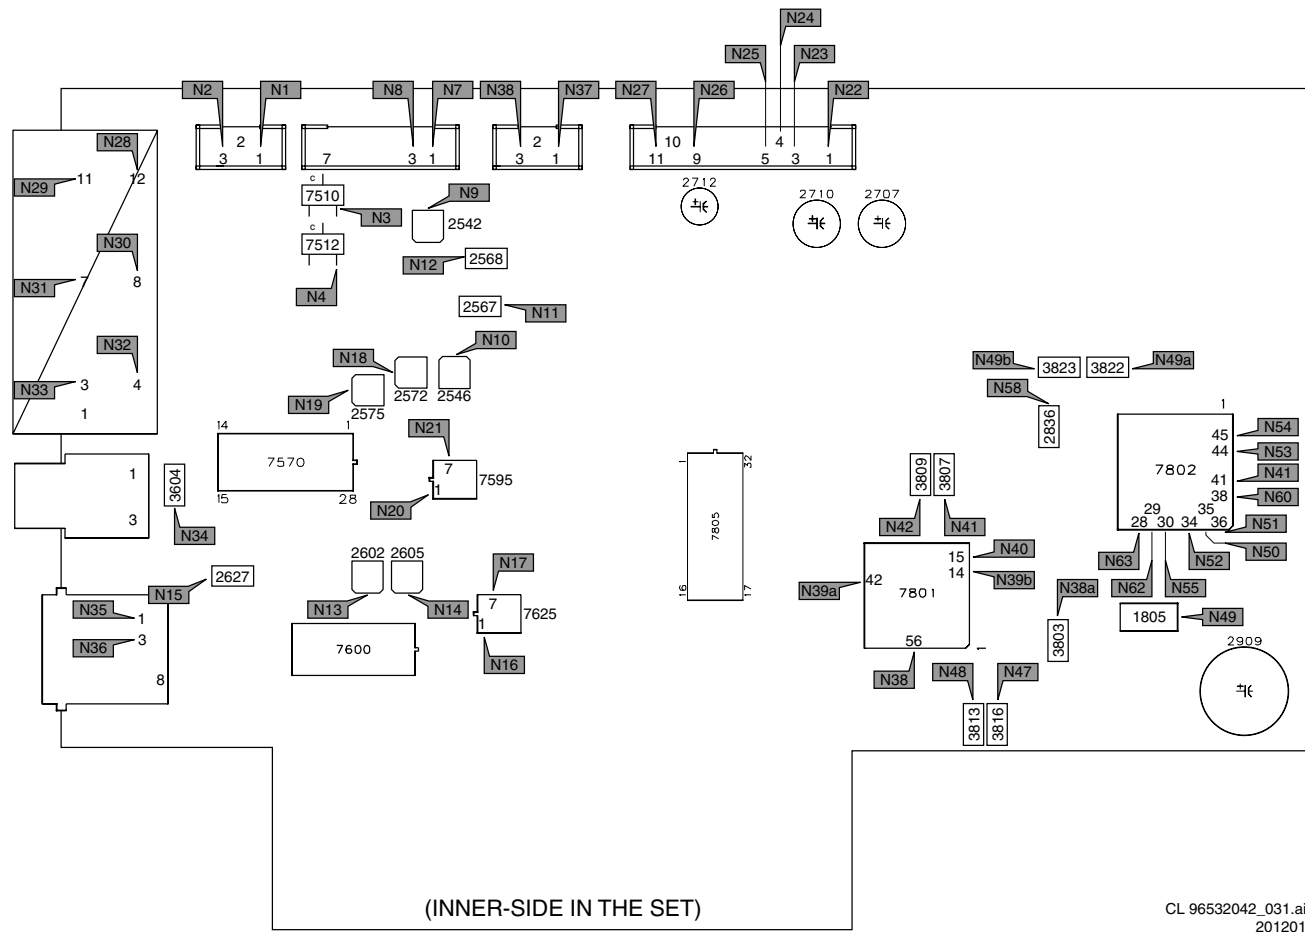


MCS Module (N)

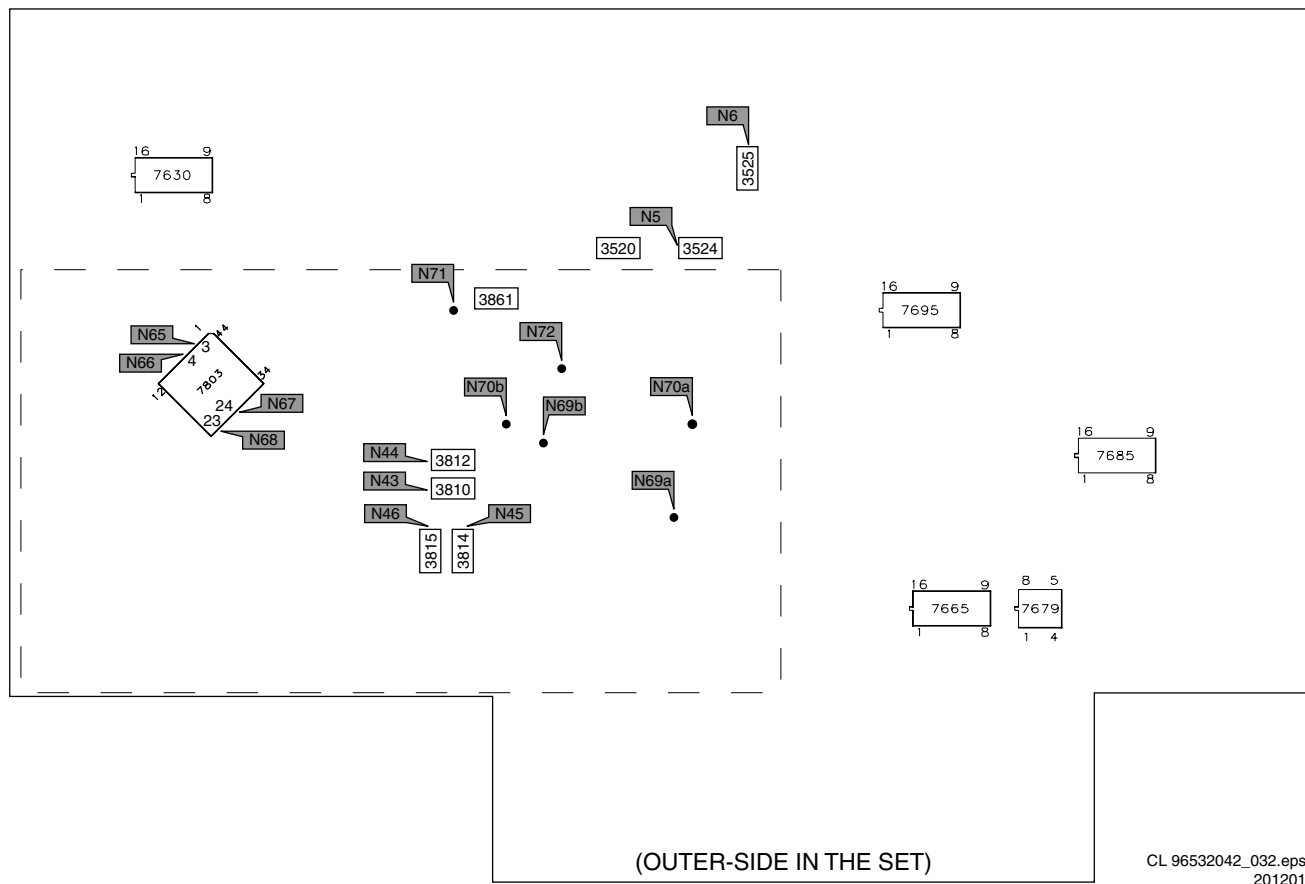


FDS Module (M)

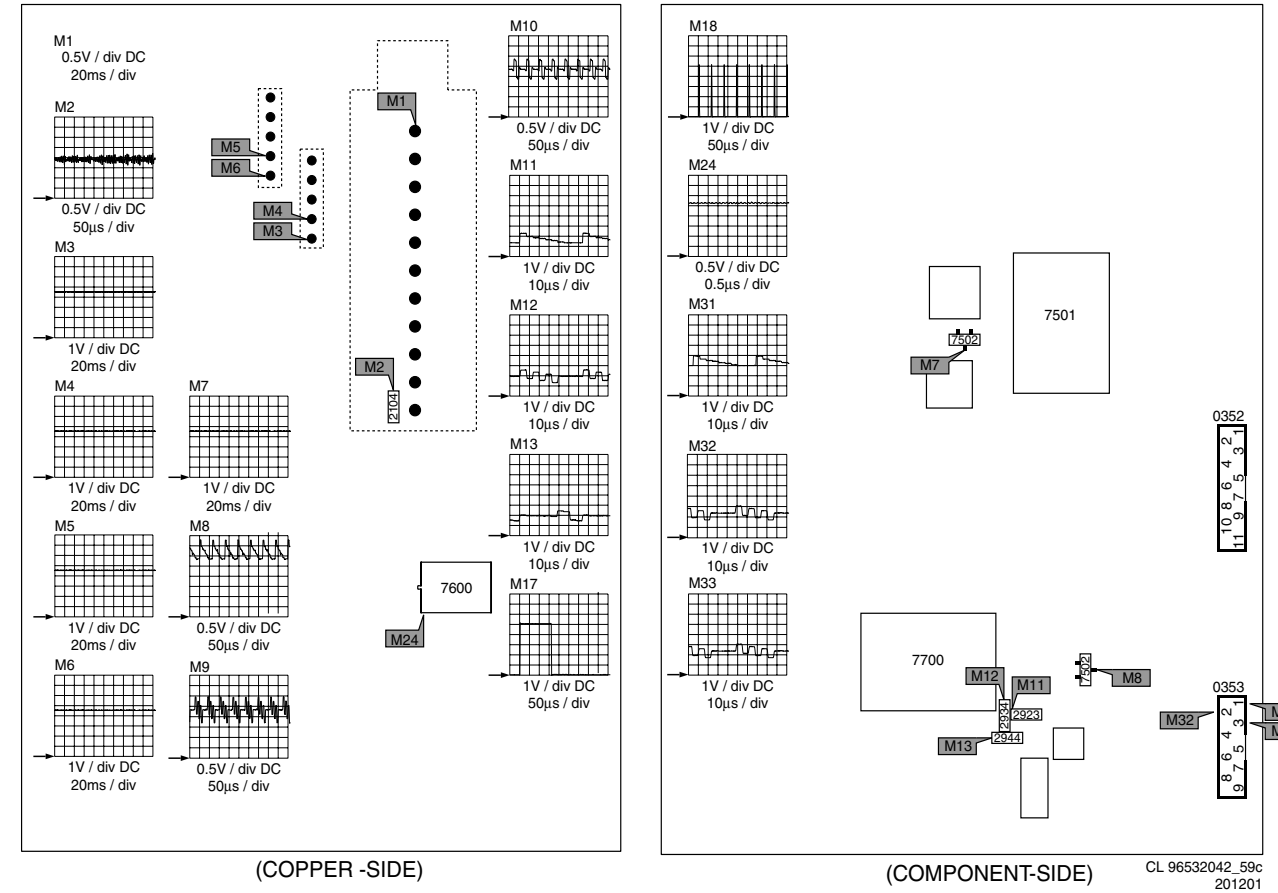

FBX Panel (L) (Copper Side)

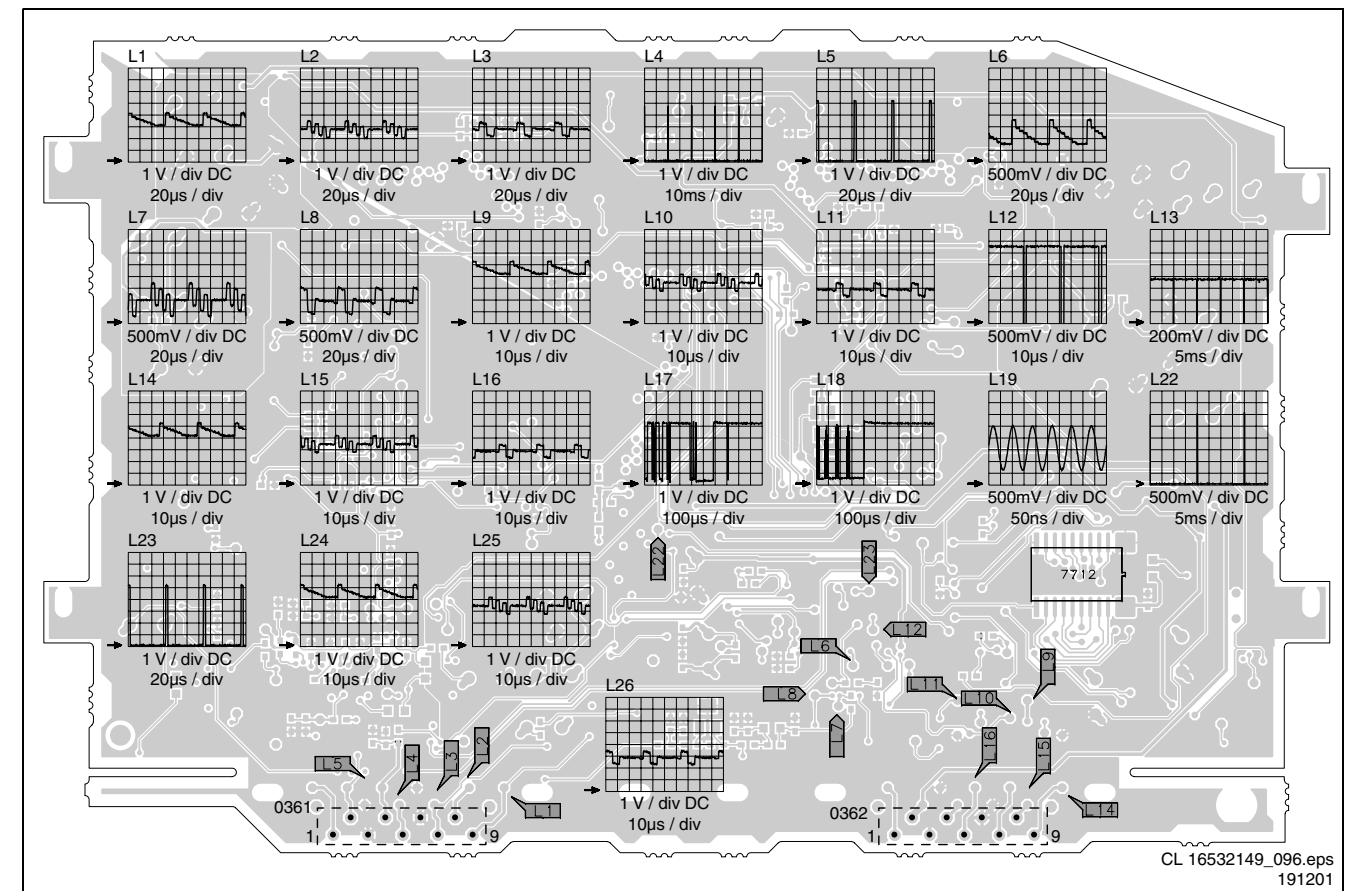


Surround Transmitter (R)

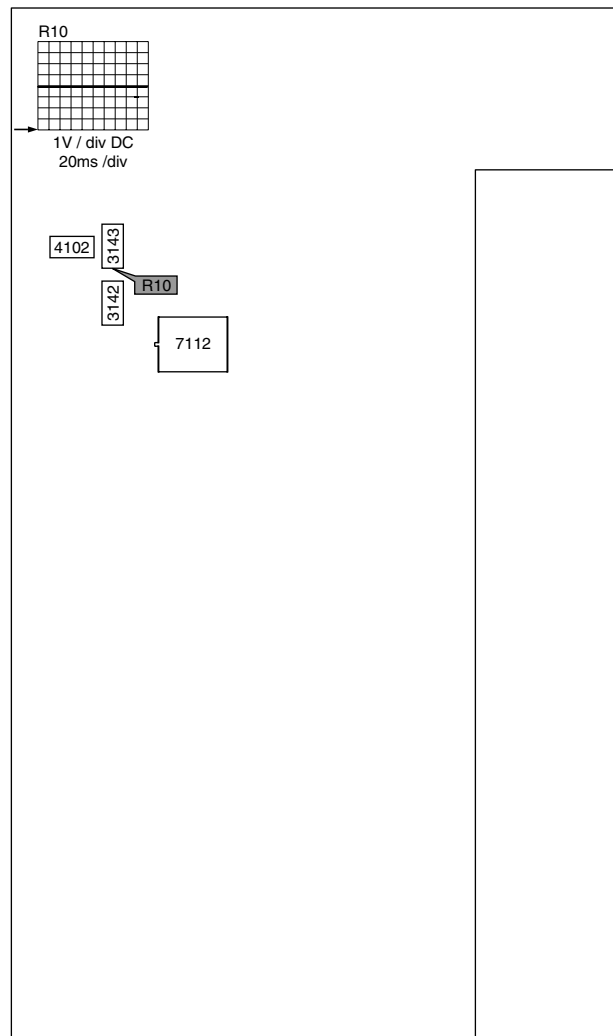

(COPPER-SIDE)

CL 96532042_056.eps
201201


Surround Transmitter (R)

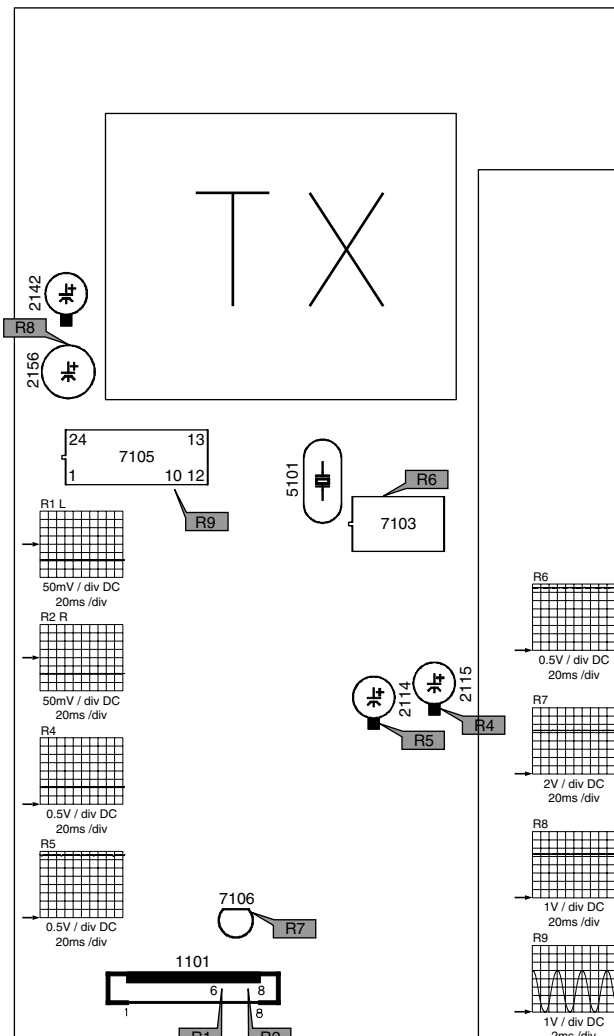

(COMPONENT-SIDE)

CL 96532042_057.eps
211201


Active Surround Box Amplifier (W1)

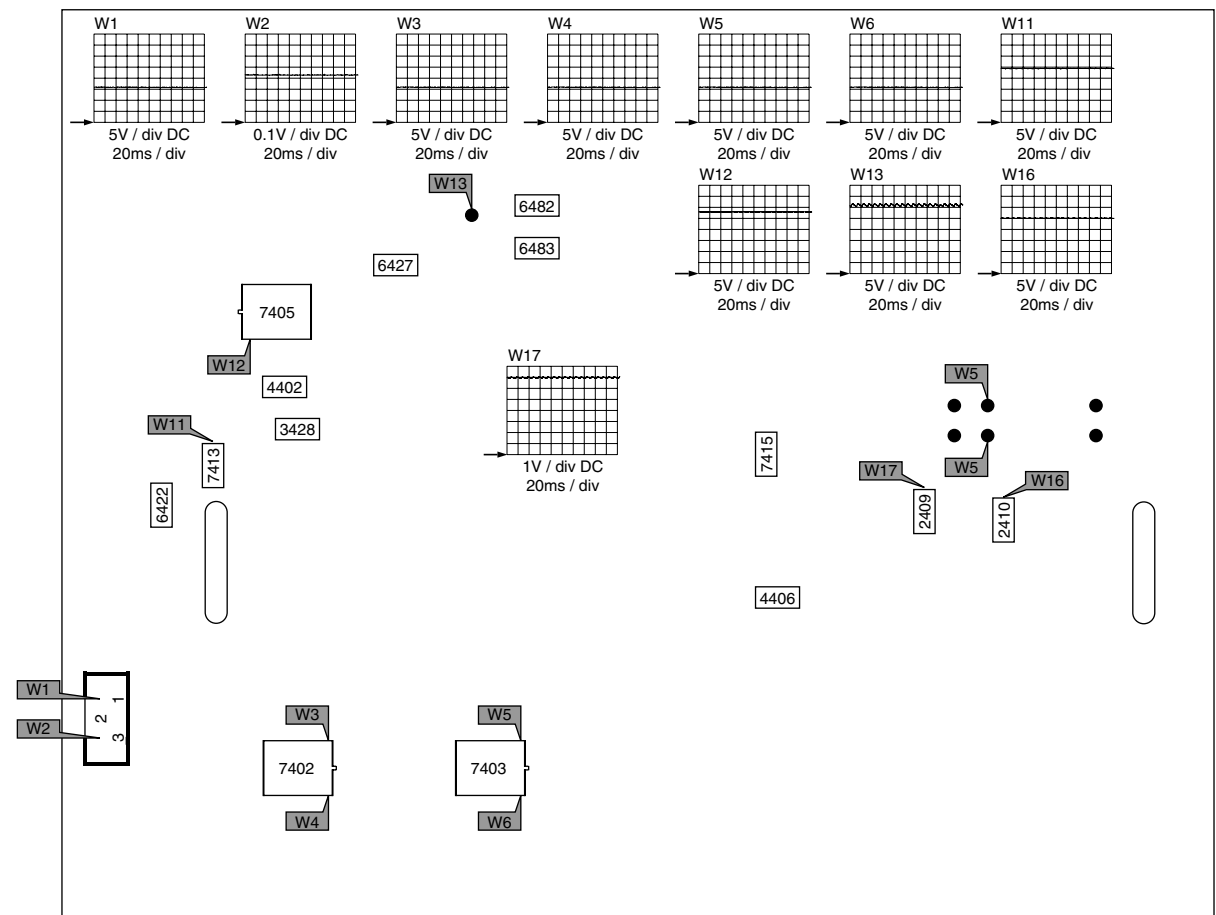

(COPPER -SIDE)


CL 96532042_055.ai
201201

Surround Receiver (U)

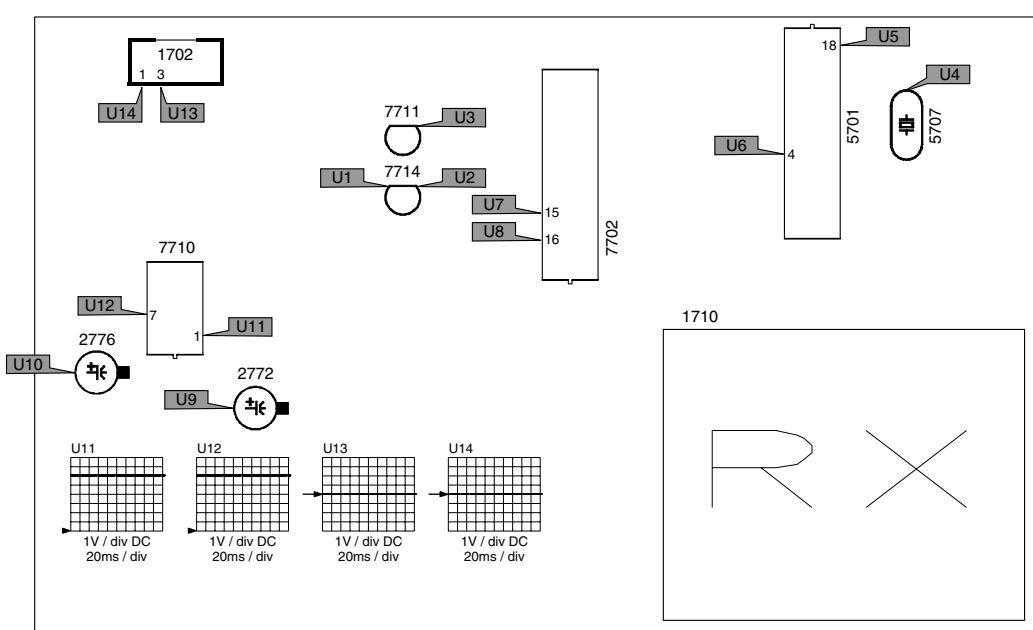


(COMPONENT-SIDE)

CL 96532042_058.ai
201201

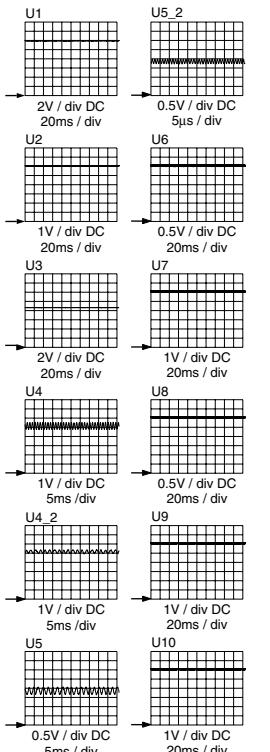

Active Surround Box Supply (W2)

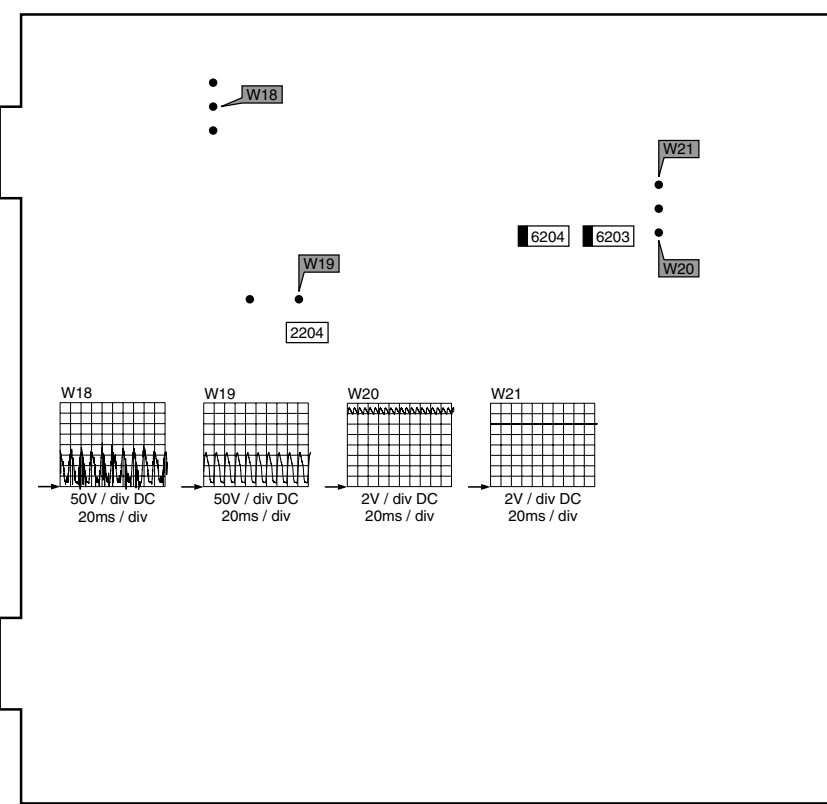


(COPPER-SIDE)

CL 96532042_054.eps
201201

7. Circuit Diagrams and PWB Layouts

Large Signal Panel: Line Deflection

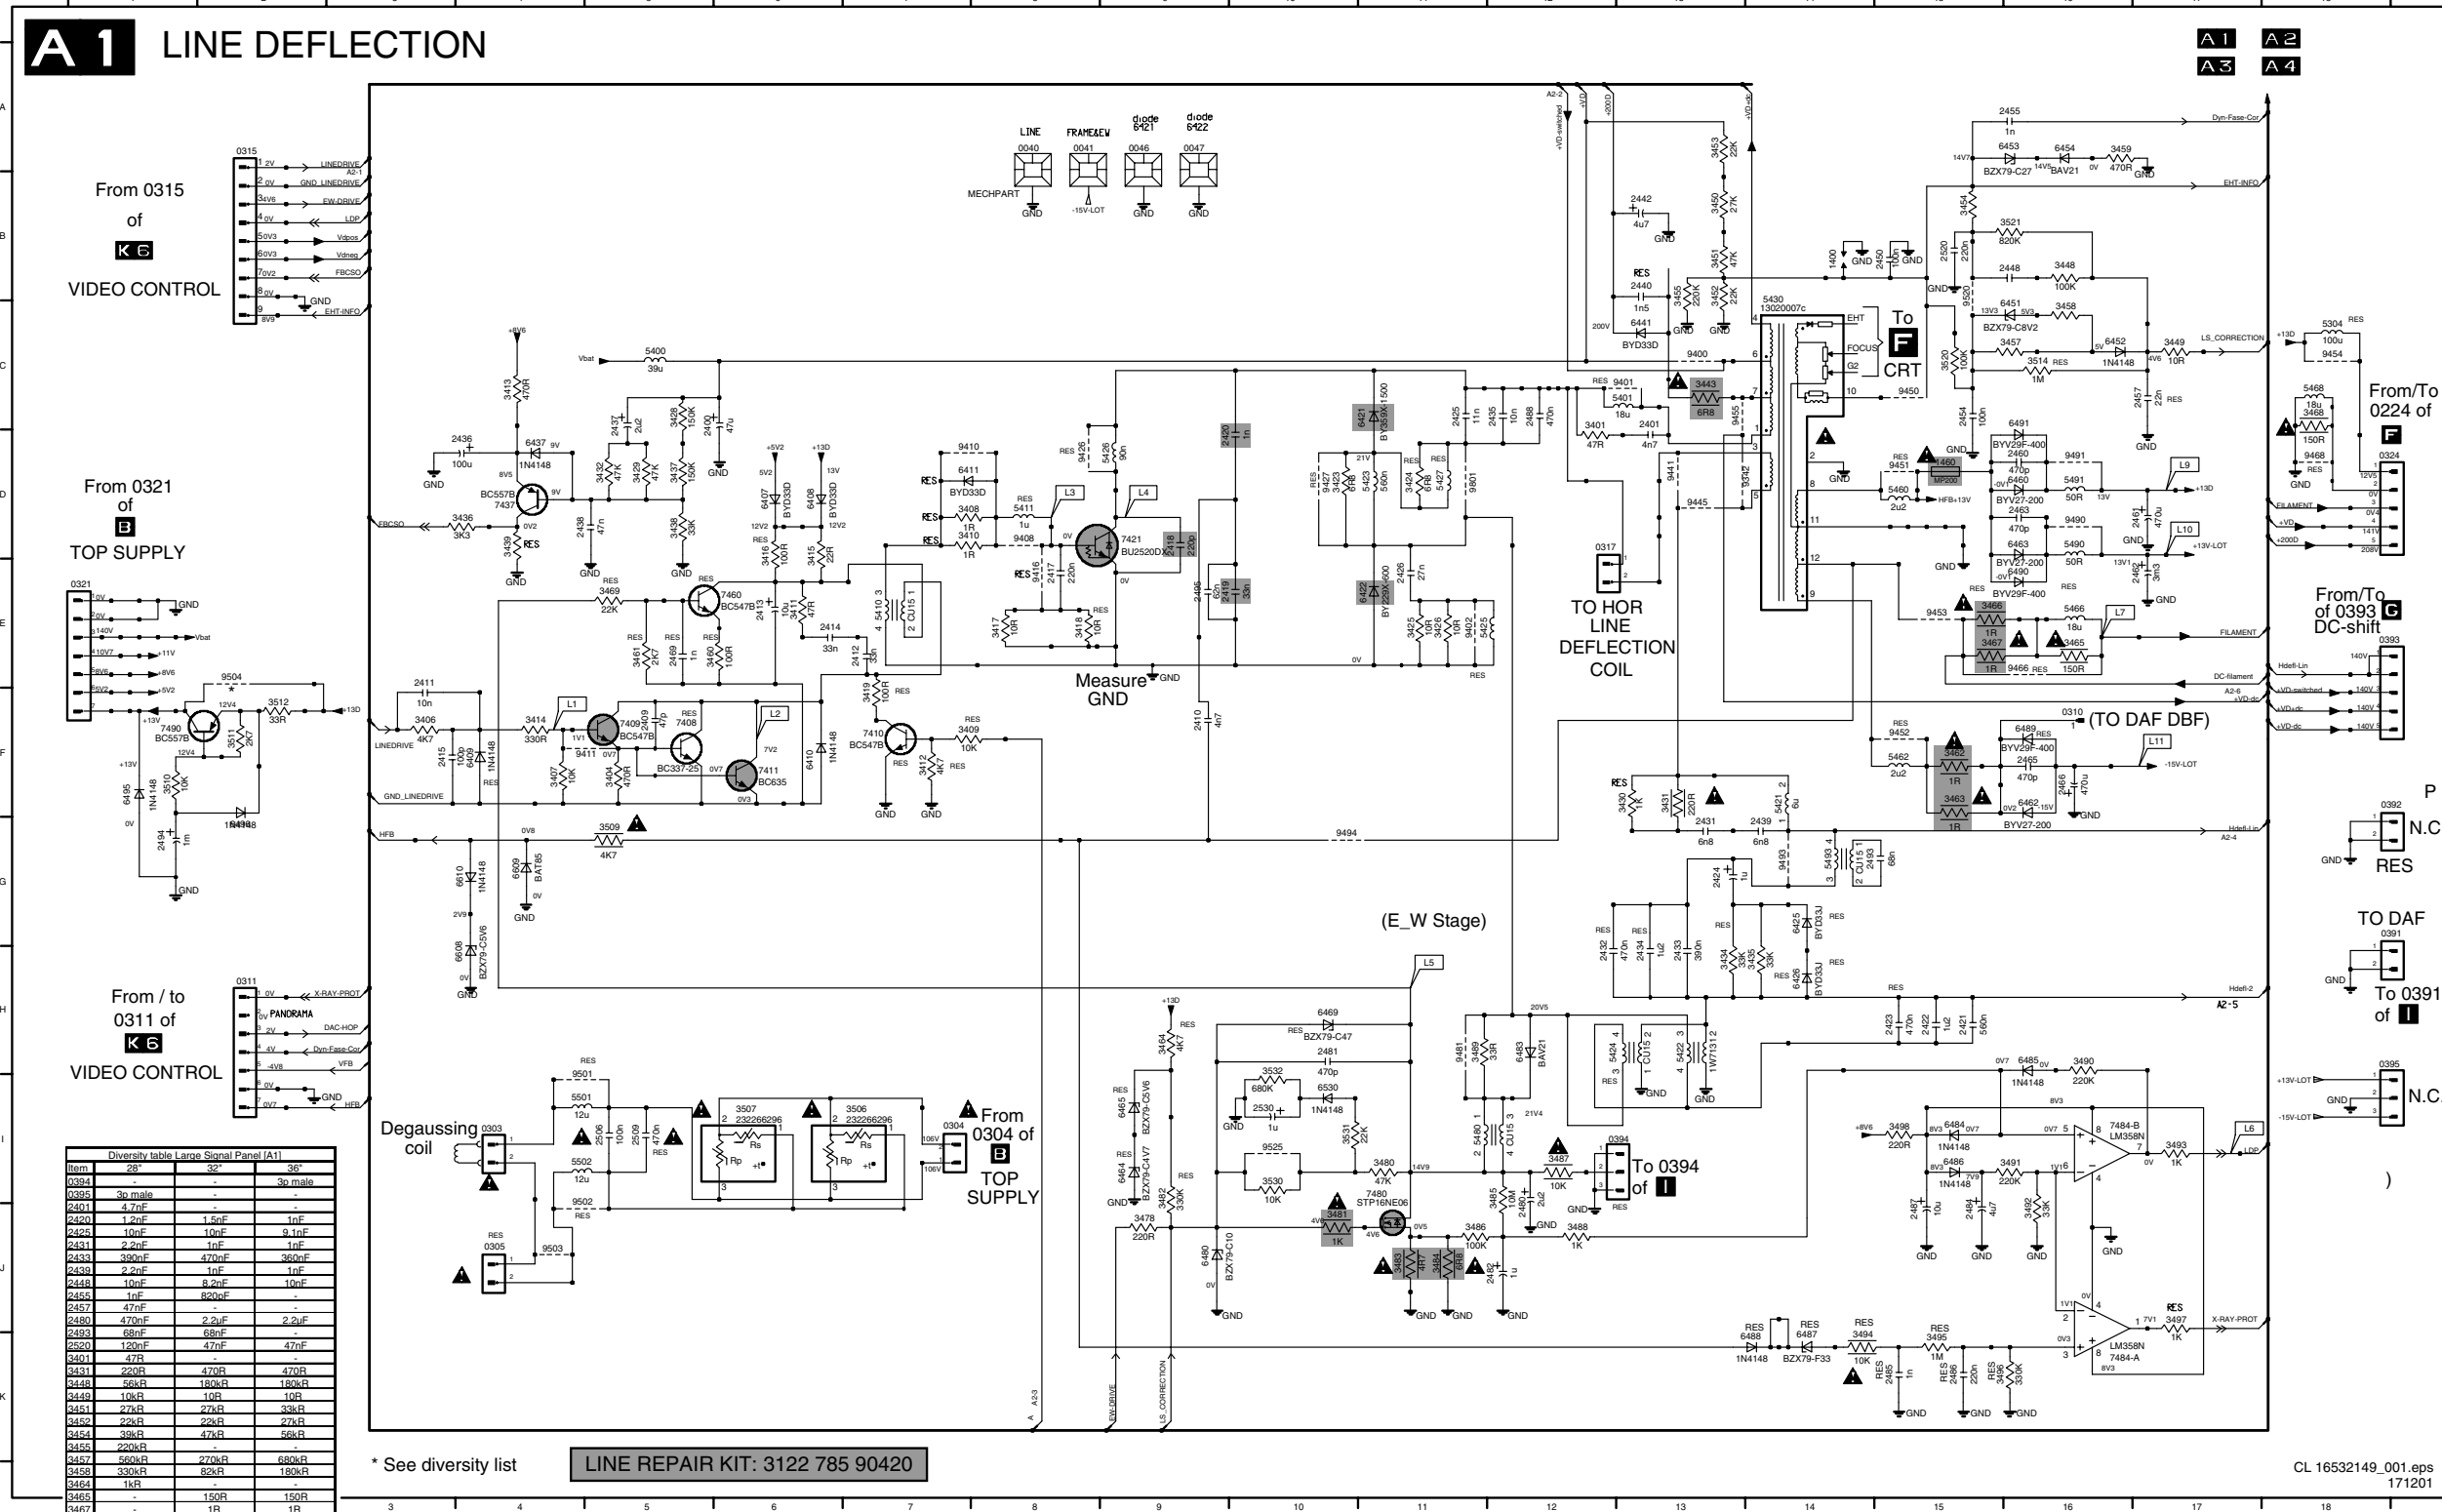


0040 A8	3443 C13	6489 F16
0041 A8	3448 B16	6490 E16
0046 A9	3446 C17	6491 C16
0047 A9	3450 B13	6495 F1
0303 I4	3451 B13	6496 G2
0304 I7	3452 B13	6530 I10
0305 J4	3453 A13	6608 H4
0310 F16	3454 B15	6609 G4
0311 H2	3455 B13	6910 G4
0315 A2	3457 C16	7408 F5
0317 D12	3458 C16	7409 F5
0321 E1	3459 A16	7410 F7
0324 D18	3460 E6	7411 F6
0391 G18	3461 E5	7421 D9
0392 F18	3462 F15	7437 D4
0393 E18	3463 F15	7460 E6
0394 I12	3464 H9	7480 I11
0395 H18	3465 E16	7484-A K16
1400 B14	3466 E15	7484-B I16
1480 D15	3467 E15	7490 F1
2400 C5	3468 C18	9342 D13
2401 C13	3469 E5	9400 C13
2409 F5	3478 J9	9401 C13
2410 F9	3480 I11	9402 E11
2411 E3	3481 J10	9408 D8
2412 E7	3482 I9	9410 D7
2413 E6	3483 J11	9411 F5
2414 E6	3484 J11	9416 E8
2415 F3	3485 I12	9426 D8
2417 E8	3486 J11	9427 D10
2418 D9	3487 I12	9441 D13
2419 E9	3488 J12	9445 D13
2420 D9	3489 H11	9450 C15
2421 H15	3490 H16	9451 D15
2422 H15	3491 I16	9452 F15
2423 H15	3492 J16	9453 E15
2424 G13	3493 I17	9454 C18
2425 C11	3494 K14	9455 C13
2426 E11	3495 K15	9466 E16
2431 G13	3496 K15	9468 D18
2432 H12	3497 J17	9481 H11
2433 H13	3498 I15	9490 D16
2434 H13	3506 I7	9491 D16
2435 C12	3507 I6	9493 G14
2436 D4	3508 D5	9494 G10
2437 C5	3510 F1	9501 I4
2438 D4	3511 F2	9502 J4
2439 G14	3512 F2	9503 J4
2440 B13	3514 C16	9504 E2
2442 B13	3520 C15	9520 B15
2448 B16	3521 B16	9525 E8
2450 B15	3530 I10	9601 D11
2454 C15	3531 I10	
2455 A16	3532 H10	
2457 C17	3598 K4	
2460 D16	5304 C18	
2461 D17	5400 C5	
2462 E17	5401 C13	
2463 D16	5410 E7	
2465 F16	5411 D8	
2466 F16	5421 F14	
2469 E5	5422 H13	
2480 J12	5423 D11	
2481 H10	5424 H12	
2482 J12	5425 E11	
2484 J15	5426 D9	
2485 K15	5427 D11	
2486 K15	5430 C14	
2487 J15	5460 D15	
2488 C12	5462 F15	
2493 G14	5466 E16	
2494 G1	5468 C18	
2495 E9	5480 I11	
2505 I5	5490 D16	
2509 I5	5491 D16	
2520 B15	5493 G14	
2530 I10	5501 I4	
3401 C12	5502 I4	
3404 F5	6407 D6	
3406 F3	6408 D6	
3407 F4	6409 F4	
3408 D7	6410 F6	
3409 F7	6411 D7	
3410 D7	6421 C10	
3411 E6	6422 E11	
3412 F7	6423 D10	
3413 C4	6424 E10	
3414 F4	6425 G14	
3415 D6	6426 H14	
3416 D6	6437 D4	
3417 E8	6441 C13	
3418 E8	6451 C16	
3419 F7	6452 C16	
3423 D10	6453 A16	
3424 D11	6454 A16	
3425 E11	6460 D16	
3426 E11	6462 F16	
3428 C5	6463 D16	
3429 D5	6464 I9	
3430 F13	6465 I9	
3431 F13	6469 H10	
3432 D5	6480 J9	
3434 H13	6483 H12	
3435 H14	6484 I15	
3436 D4	6485 H16	
3437 D5	6486 I15	
3438 D5	6487 K14	
3439 D4	6488 K14	

Item	28"	32"	36"
0394	-	-	3p male
0395	3p male	-	-
2401	4.7nF	-	-
2420	1.2nF	1.5nF	1nF
2425	10nF	10nF	9.1nF
2431	2.2nF	1nF	1nF
2434	390nF	470nF	360nF
2439	2.2nF	1nF	1nF
2444	10nF	8.2nF	10nF
2455	1nF	820nF	-
2457	47nF	-	-
2490	470nF	2.2nF	2.2nF
2493	58nF	68nF	-
2520	120nF	47nF	47nF
3401	47R	-	-
3431	220R	470R	470R
3448	56kR	150kR	150kR
3449	10kR	10R	10R
3451	27kR	27kR	33kR
3452	22kR	22kR	27kR
3454	33kR	47kR	50kR
3455	220kR	-	-
3457	560kR	27kR	680kR
3458	330kR	82kR	150kR
3464	1kR	-	-
3465	150R	150R	-
3467	1R	1R	-
3482	330kR	-	-
3484	33R	4R7	6R8
3485	7.5MR	10MR	10MR
3487	-	-	10kR
3489	-	-	33R
3520	75kR	100kR	33R
3521	1MΩ	820kR	820kR
3531	47kR	22kR	22kR
3532	680kR	820kR	820kR
3533	100kR	-	-
5421	3128 138 56152	3128 138 57411	3128 138 56611
5430	8204 000 75001	3128 138 20931	3128 138 20931
5466	18uH	15uH	15uH
5468	18uH	10uH	10uH
5490	Resist	-	-
5493	3128 138 38881	3128 138 38881	-
6483	-	-	RAV21
6491	Jumper	Jumper	Jumper
6491	Jumper	Jumper	Jumper
6490	Jumper	-	-
6493	Jumper	-	-


* See diversity list

LINE REPAIR KIT: 3122 785 90420

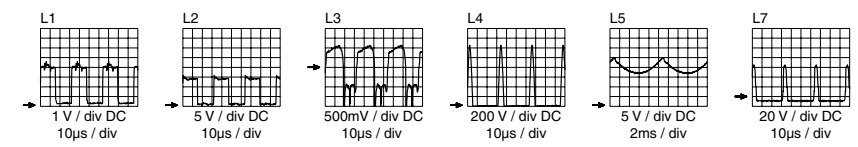

Large Signal Panel: Line Deflection (Continued)


0049 C13	2200 D2	3200 D1	3218 E8	3341 D11	3346 E13	3353 D13	3642 C3	3649 C8	6248 G3	6641 B4	6646 B8	7340 C12	7640-B A7
0055 E10	2217 E9	3201 D2	3219 F8	3342 E11	3347 F13	3354 E14	3643 C4	3650 B8	6249 G4	6642 B5	7200 F4	7341 E11	7641 C4
0327 B3	2340 D11	3204 F6	3248 F3	3343 E11	3348 D11	3355 E14	3646 C6	3651 C8	6340 D13	6643 C4	7215 F7	7342 E12	7642 B8
0329 B3	2341 D13	3215 E7	3249 G3	3344 E13	3349 D12	3640 B5	3647 C6	5200 D2	6341 E13	6644 C6	7216 E7	7344 D14	9340 D11
0360 F1	2640 C3	3217 E8	3340 D12	3345 D13	3350 D13	3641 B5	3648 B8	6217 F8	6640 B4	6645 C6	7217 E9	7640-A A6	9341 D11

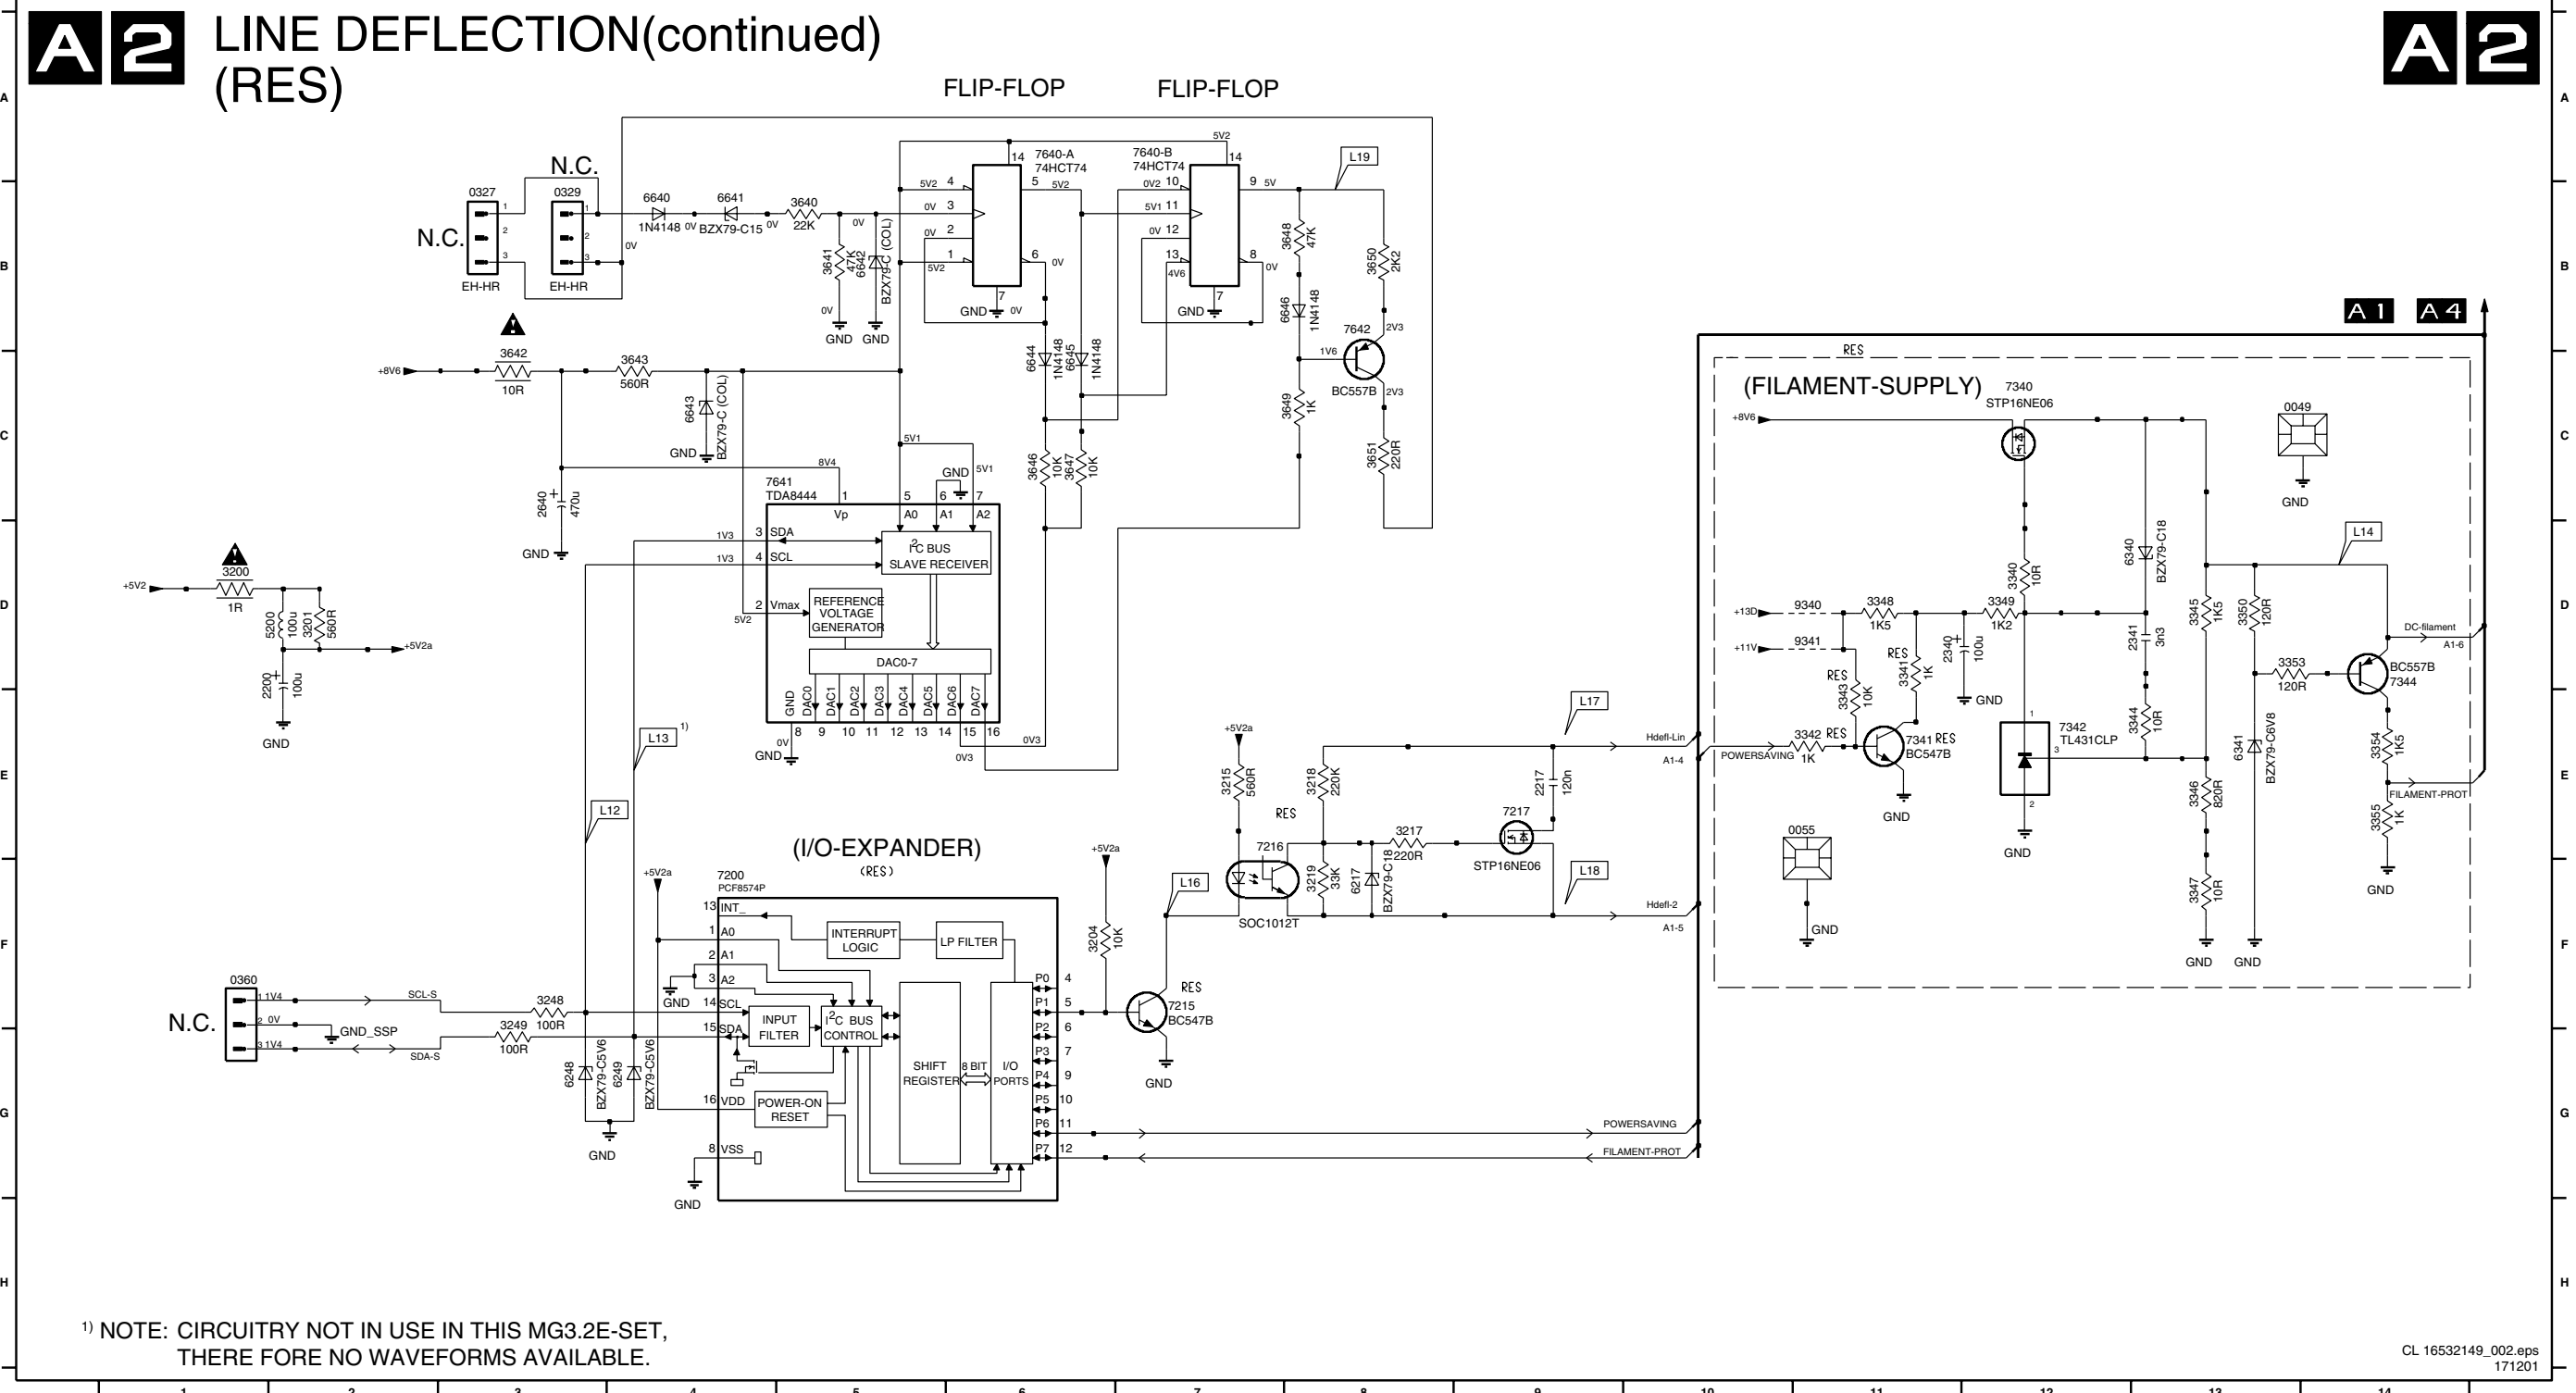

1) NOTE: CIRCUITRY NOT IN USE IN THIS MG3.2E-SET, THERE FORE NO WAVEFORMS AVAILABLE.

Large Signal Panel: Frame Deflection

A3 FRAME DEFLECTION

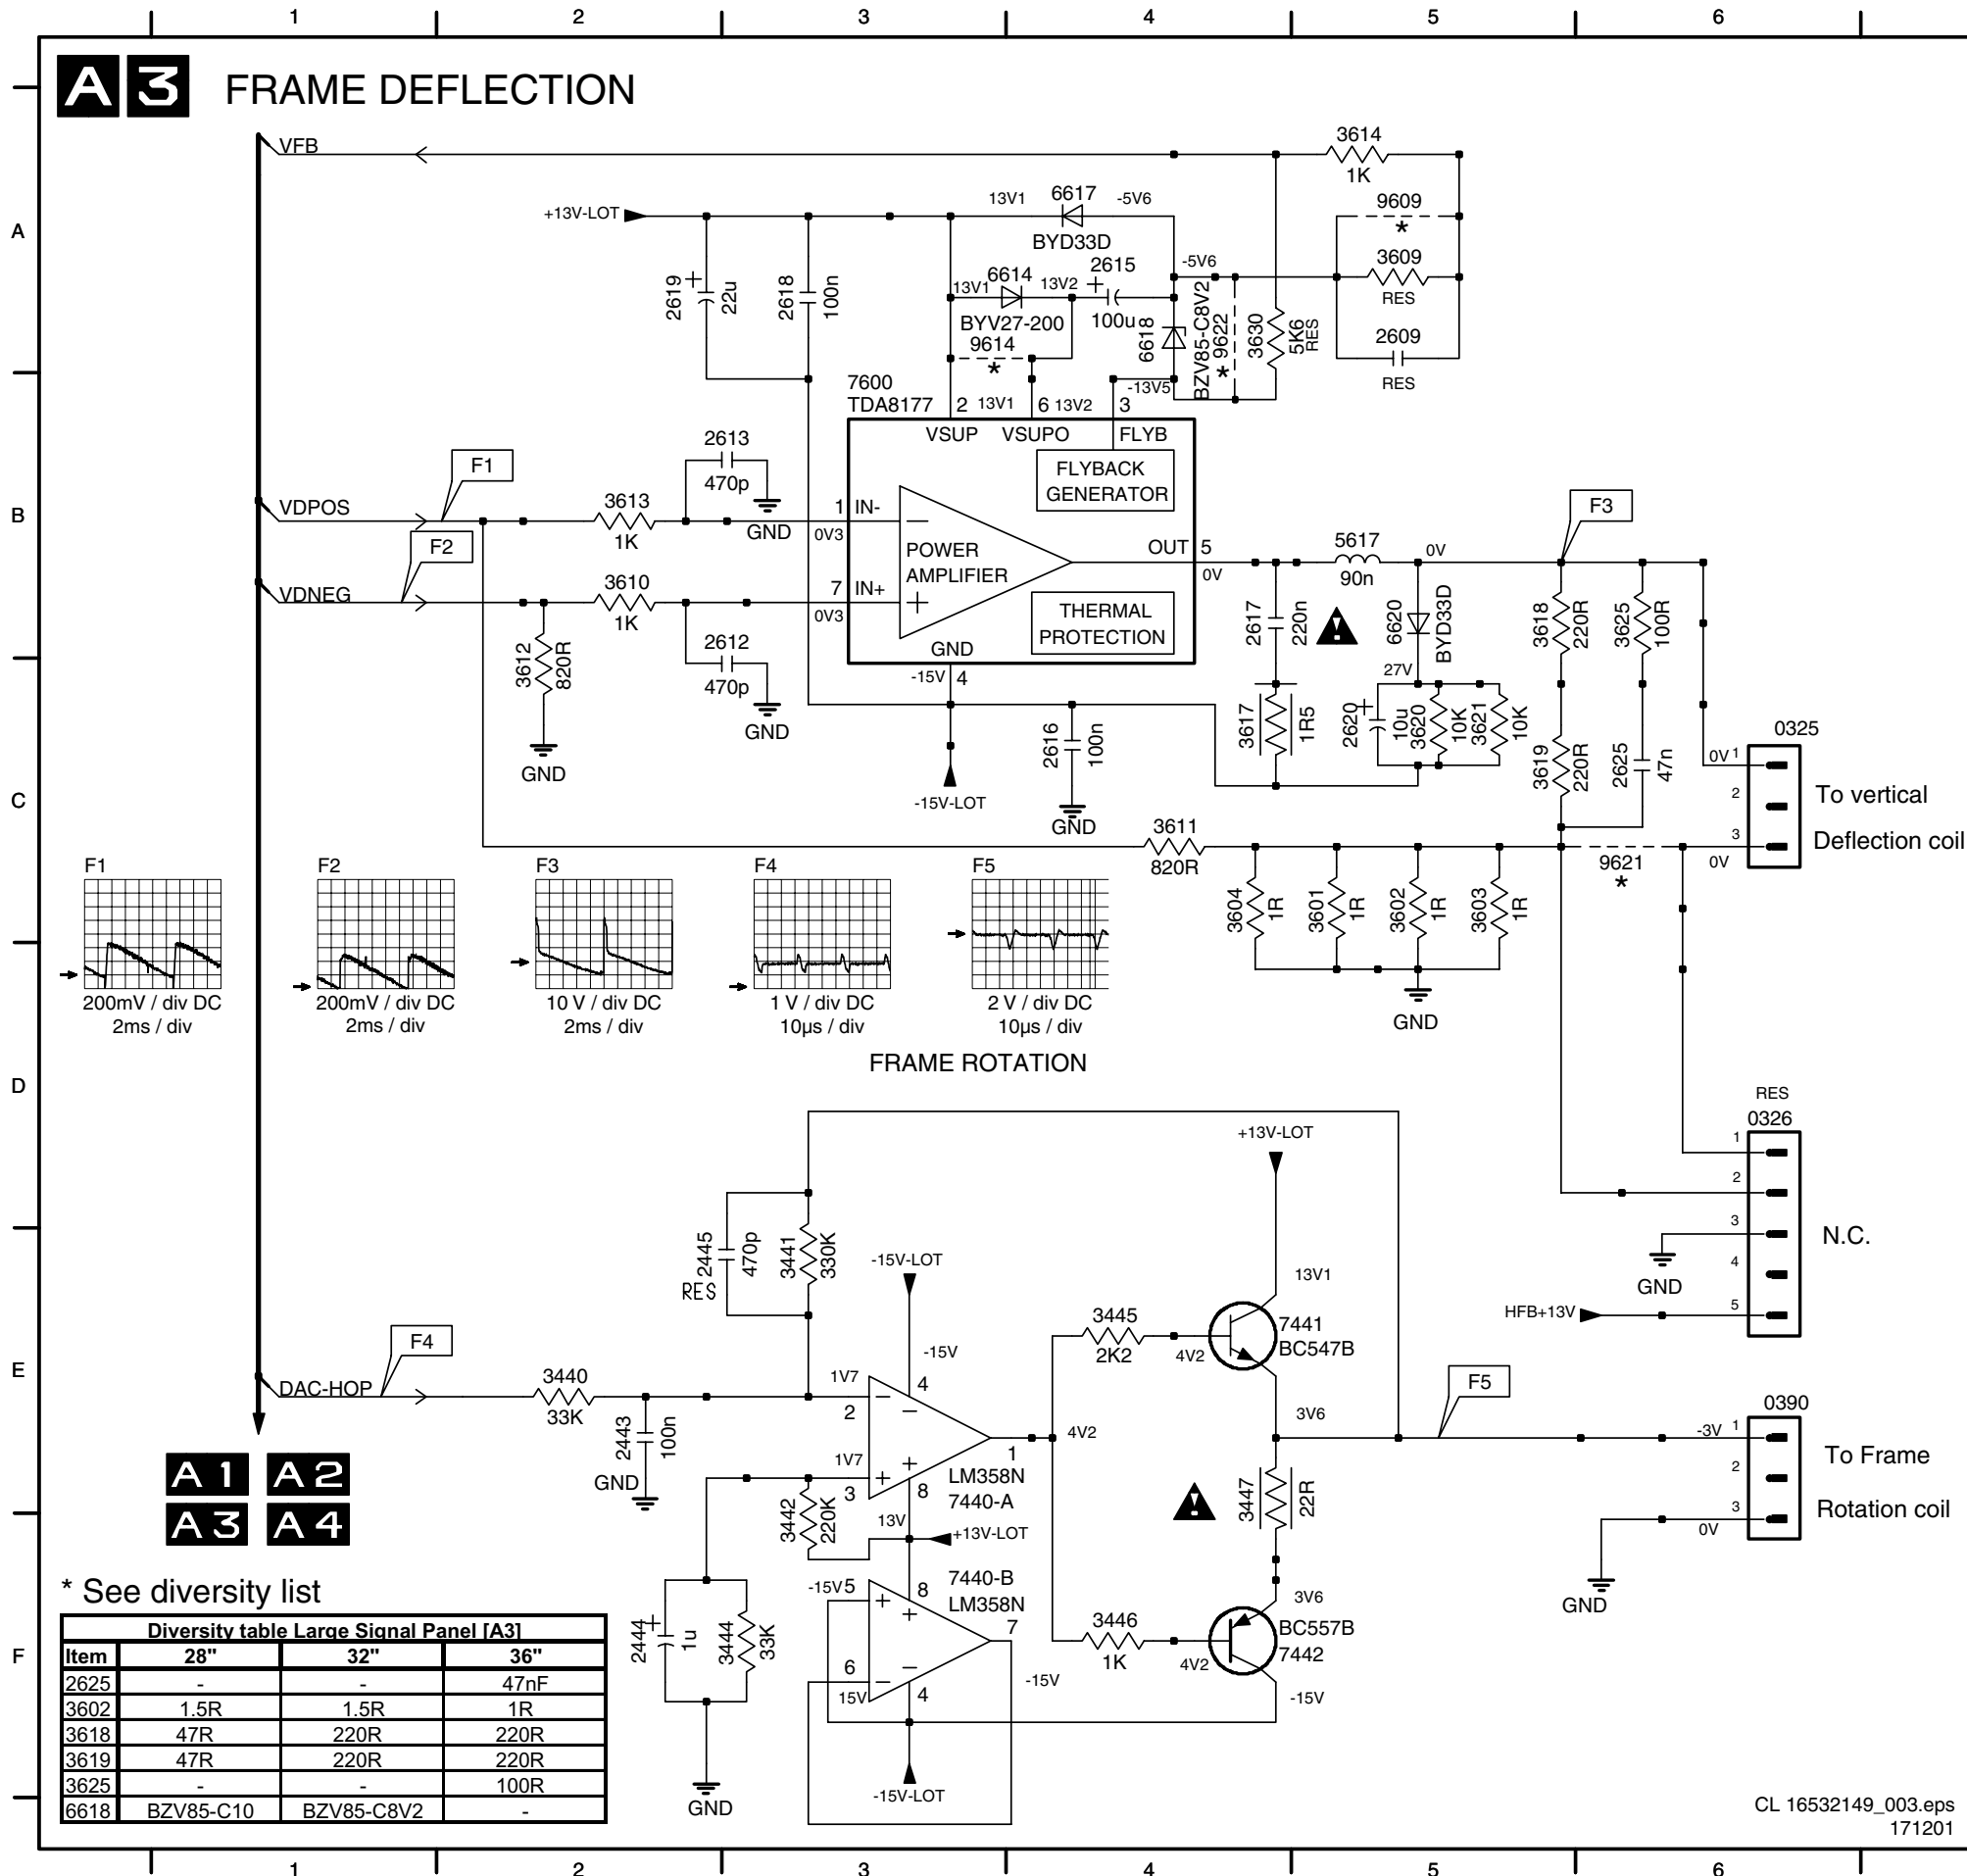


- 0325 C6
- 0326 D6
- 0390 E6
- 2443 E2
- 2444 F2
- 2445 E2
- 2609 A5
- 2612 B3
- 2613 B3
- 2615 A4
- 2616 C4
- 2617 B4
- 2618 A3
- 2619 A2
- 2620 C5
- 2625 C6
- 3440 E2
- 3441 E3
- 3442 F3
- 3444 F3
- 3445 E4
- 3446 F4
- 3447 E4
- 3601 C5
- 3602 C5
- 3603 C5
- 3604 C4
- 3609 A5
- 3610 B2
- 3611 C4
- 3612 C2
- 3613 B2
- 3614 A5
- 3617 C4
- 3618 B5
- 3619 C5
- 3620 C5
- 3621 C5
- 3625 B6
- 3630 A4
- 5617 B5
- 6614 A4
- 6617 A4
- 6618 A4
- 6620 B5
- 7440-A E3
- 7440-B F3
- 7441 E4
- 7442 F4
- 7600 B3
- 9609 A5
- 9614 A3
- 9621 C6
- 9622 A4

* See diversity list

Diversity table Large Signal Panel [A3]			
Item	28"	32"	36"
2625	-	-	47nF
3602	1.5R	1.5R	1R
3618	47R	220R	220R
3619	47R	220R	220R
3625	-	-	100R
6618	BZV85-C10	BZV85-C8V2	-

Large Signal Panel: Audio Amplifiers

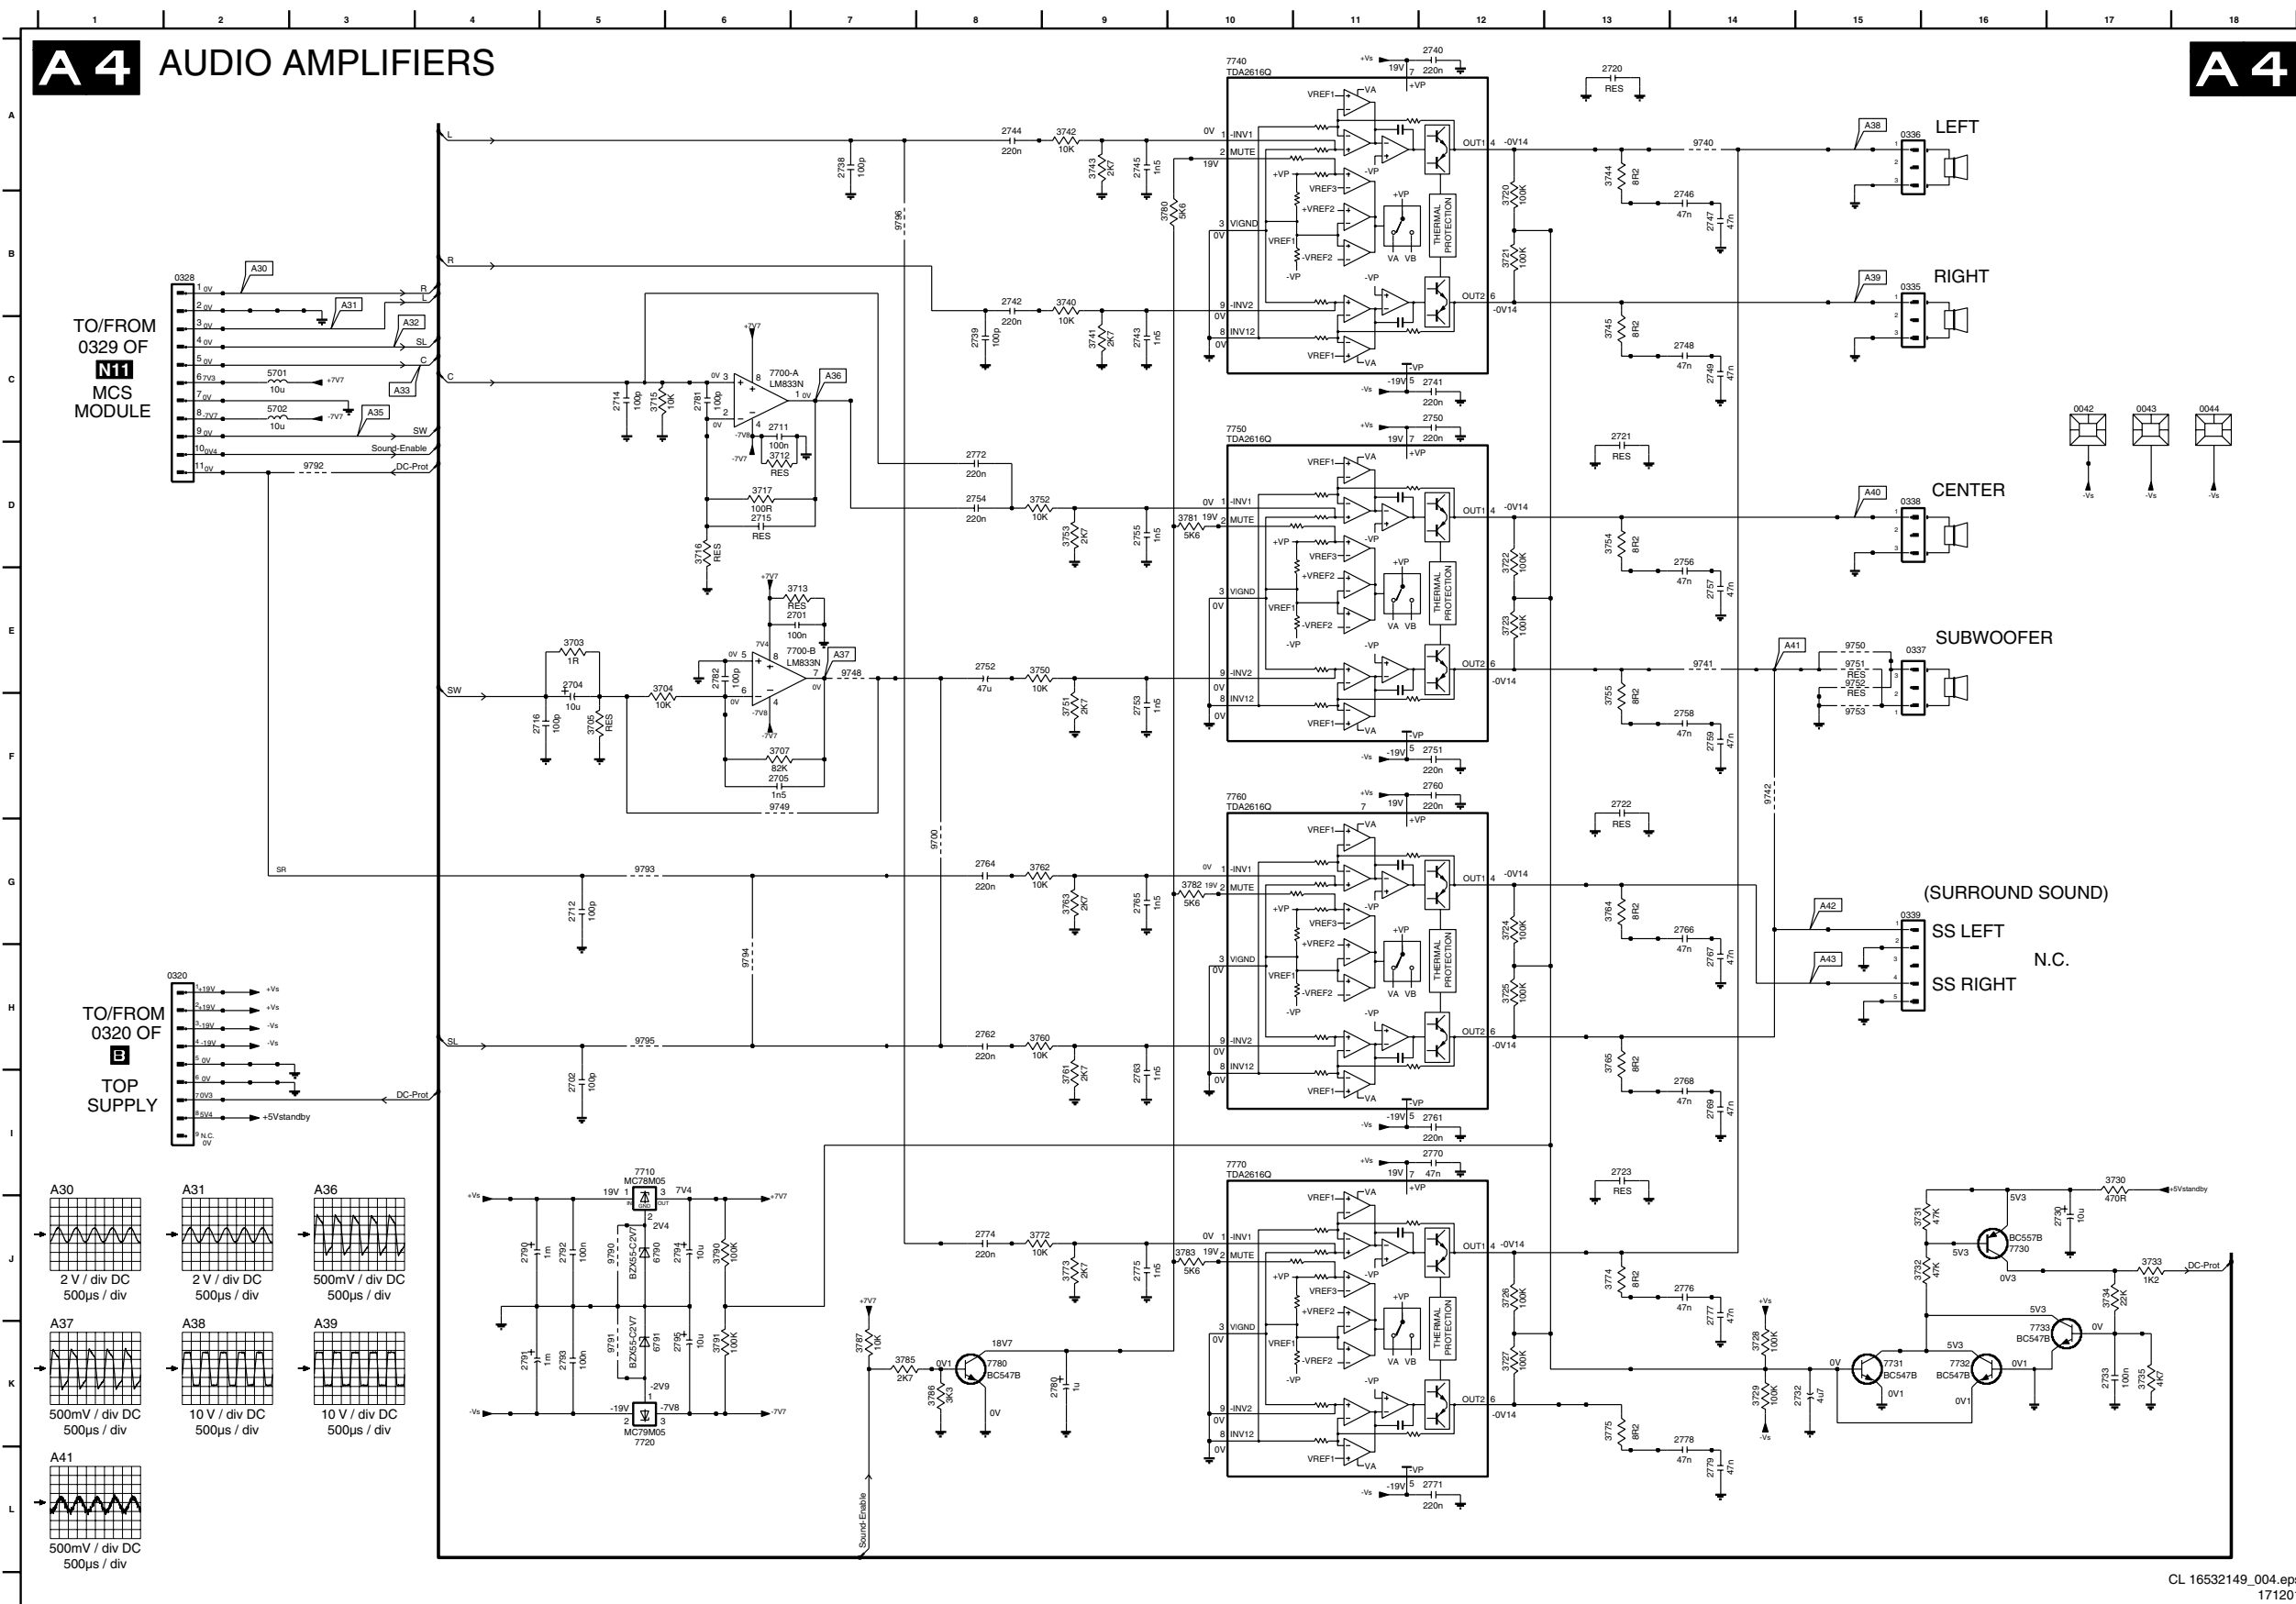


CL 16532149_004.eps 171201


Item	Quantity	Part Number	Notes
0042	C17	2768 I14	3755 F13
0043	C17	2769 I14	3760 H8
0044	C18	2770 I12	3761 I9
0320	H2	2771 L12	3762 G8
0328	B2	2772 D8	3763 G9
0335	B15	2774 J8	3764 G13
0338	A15	2775 J9	3765 H13
0337	E15	2776 J14	3772 J8
0338	D15	2777 J14	3773 J9
0339	G15	2778 K14	3774 J13
2701	E7	2779 L14	3775 K13
2702	I5	2780 K9	3780 B10
2704	E5	2781 C6	3781 D10
2705	F6	2782 E5	3782 E10
2711	C6	2790 J4	3783 J10
2712	G5	2791 K4	3785 K7
2714	C5	2792 J5	3786 K8
2715	D6	2793 K5	3787 K7
2716	F4	2794 J6	3790 J6
2720	A13	2795 K6	3791 K5
2721	C13	2796 E5	3791 C2
2722	F13	2797 E5	3798 C2
2723	I13	2798 F5	3799 J5
2730	J17	2797 F6	6791 K5
2732	K15	2712 D6	7700-A C6
2733	K17	3713 E7	7700-B E6
2738	A7	3715 C5	7710 I5
2739	C8	3716 D6	7701 C2
2740	B14	3717 D6	7702 H15
2741	C12	3720 B12	7731 K15
2742	B8	3721 B12	7732 K16
2743	C9	3722 D12	7733 K17
2744	A8	3723 E12	7740 A10
2745	A9	3724 G12	7750 C10
2746	B14	3725 H12	7760 F10
2747	B14	3726 J12	7770 H10
2748	C14	3727 K12	7780 K8
2749	C14	3728 K14	9700 G8
2750	C12	3729 K14	9740 A14
2751	F12	3730 I17	9741 E14
2752	E8	3731 J16	9742 F14
2753	F9	3732 J16	9748 E7
2754	D8	3733 J17	9749 F6
2755	D9	3734 J17	9750 E15
2756	D14	3735 K17	9751 E15
2757	E14	3740 B9	9752 E15
2758	F14	3741 C9	9753 F15
2759	F14	3742 A9	9790 J5
2760	F12	3743 A9	9791 K5
2761	H2	3744 A13	9798 D9
2762	H8	3745 C13	9799 G5
2763	I9	3750 E8	9794 H6
2764	G8	3751 F9	9795 H5
2765	G9	3752 D8	9796 B7
2766	G14	3753 D9	-
2767	H14	3754 D13	-

Large Signal Panel [A4]		
Item	Quantity	Notes
0328	4822 267 10981	4822 267 10982
0330	4822 267 10971	-
2702	4.7nF	-
2705	150nF	100nF
2712	4.7nF	-
2742	4.7nF	220nF
2743	680nF	1.5nF
2744	4.7nF	-
2752	1.1F	-
2753	1.5nF	330nF
2754	150nF	220nF
2755	1.5nF	680nF
2784	1.1F	-
2785	1.5nF	1.5nF
2786	4.7nF	4.7nF
2787	4.7nF	4.7nF
2788	4.7nF	4.7nF
2789	4.7nF	4.7nF
2770	-	4.7nF
2771	-	220nF
2774	-	220nF
2775	-	1.5nF
2776	-	4.7nF
2777	-	4.7nF
2778	-	4.7nF
2779	-	4.7nF
3700	1k	-
3701	330E	-
3702	15k	-
3710	1k	8k2
3711	330E	-
3715	15k	10k
3716	1k	200nF
3717	1k8	100R
3720	100k	-
3723	100k	-
3724	47k	100k
3725	47k	47nF
3726	47k	100k
3741	33k	820R
3742	470R	-
3743	33k	-
3750	3k9	200nF
3751	58k	-
3752	470R	3k3
3753	68k	1k8
3760	470R	22k
3761	68k	3k9
3762	470R	-
3763	68k	-
3764	82k	82k
3765	82k	82k
3772	-	470R
3773	-	820R
3774	-	82k
3775	-	82k
3782	5k6	5k6
3783	-	5k6
7760	TDA2616Q/N1	TDA2616Q/N1
7700	-	TDA2616Q/N1
9700	-	Jumper
9707	-	Jumper
9710	-	Jumper
9716	-	Jumper
9720	-	Jumper
9724	-	Jumper
9740	-	Jumper

Layout Large Signal Panel (Bottom View)

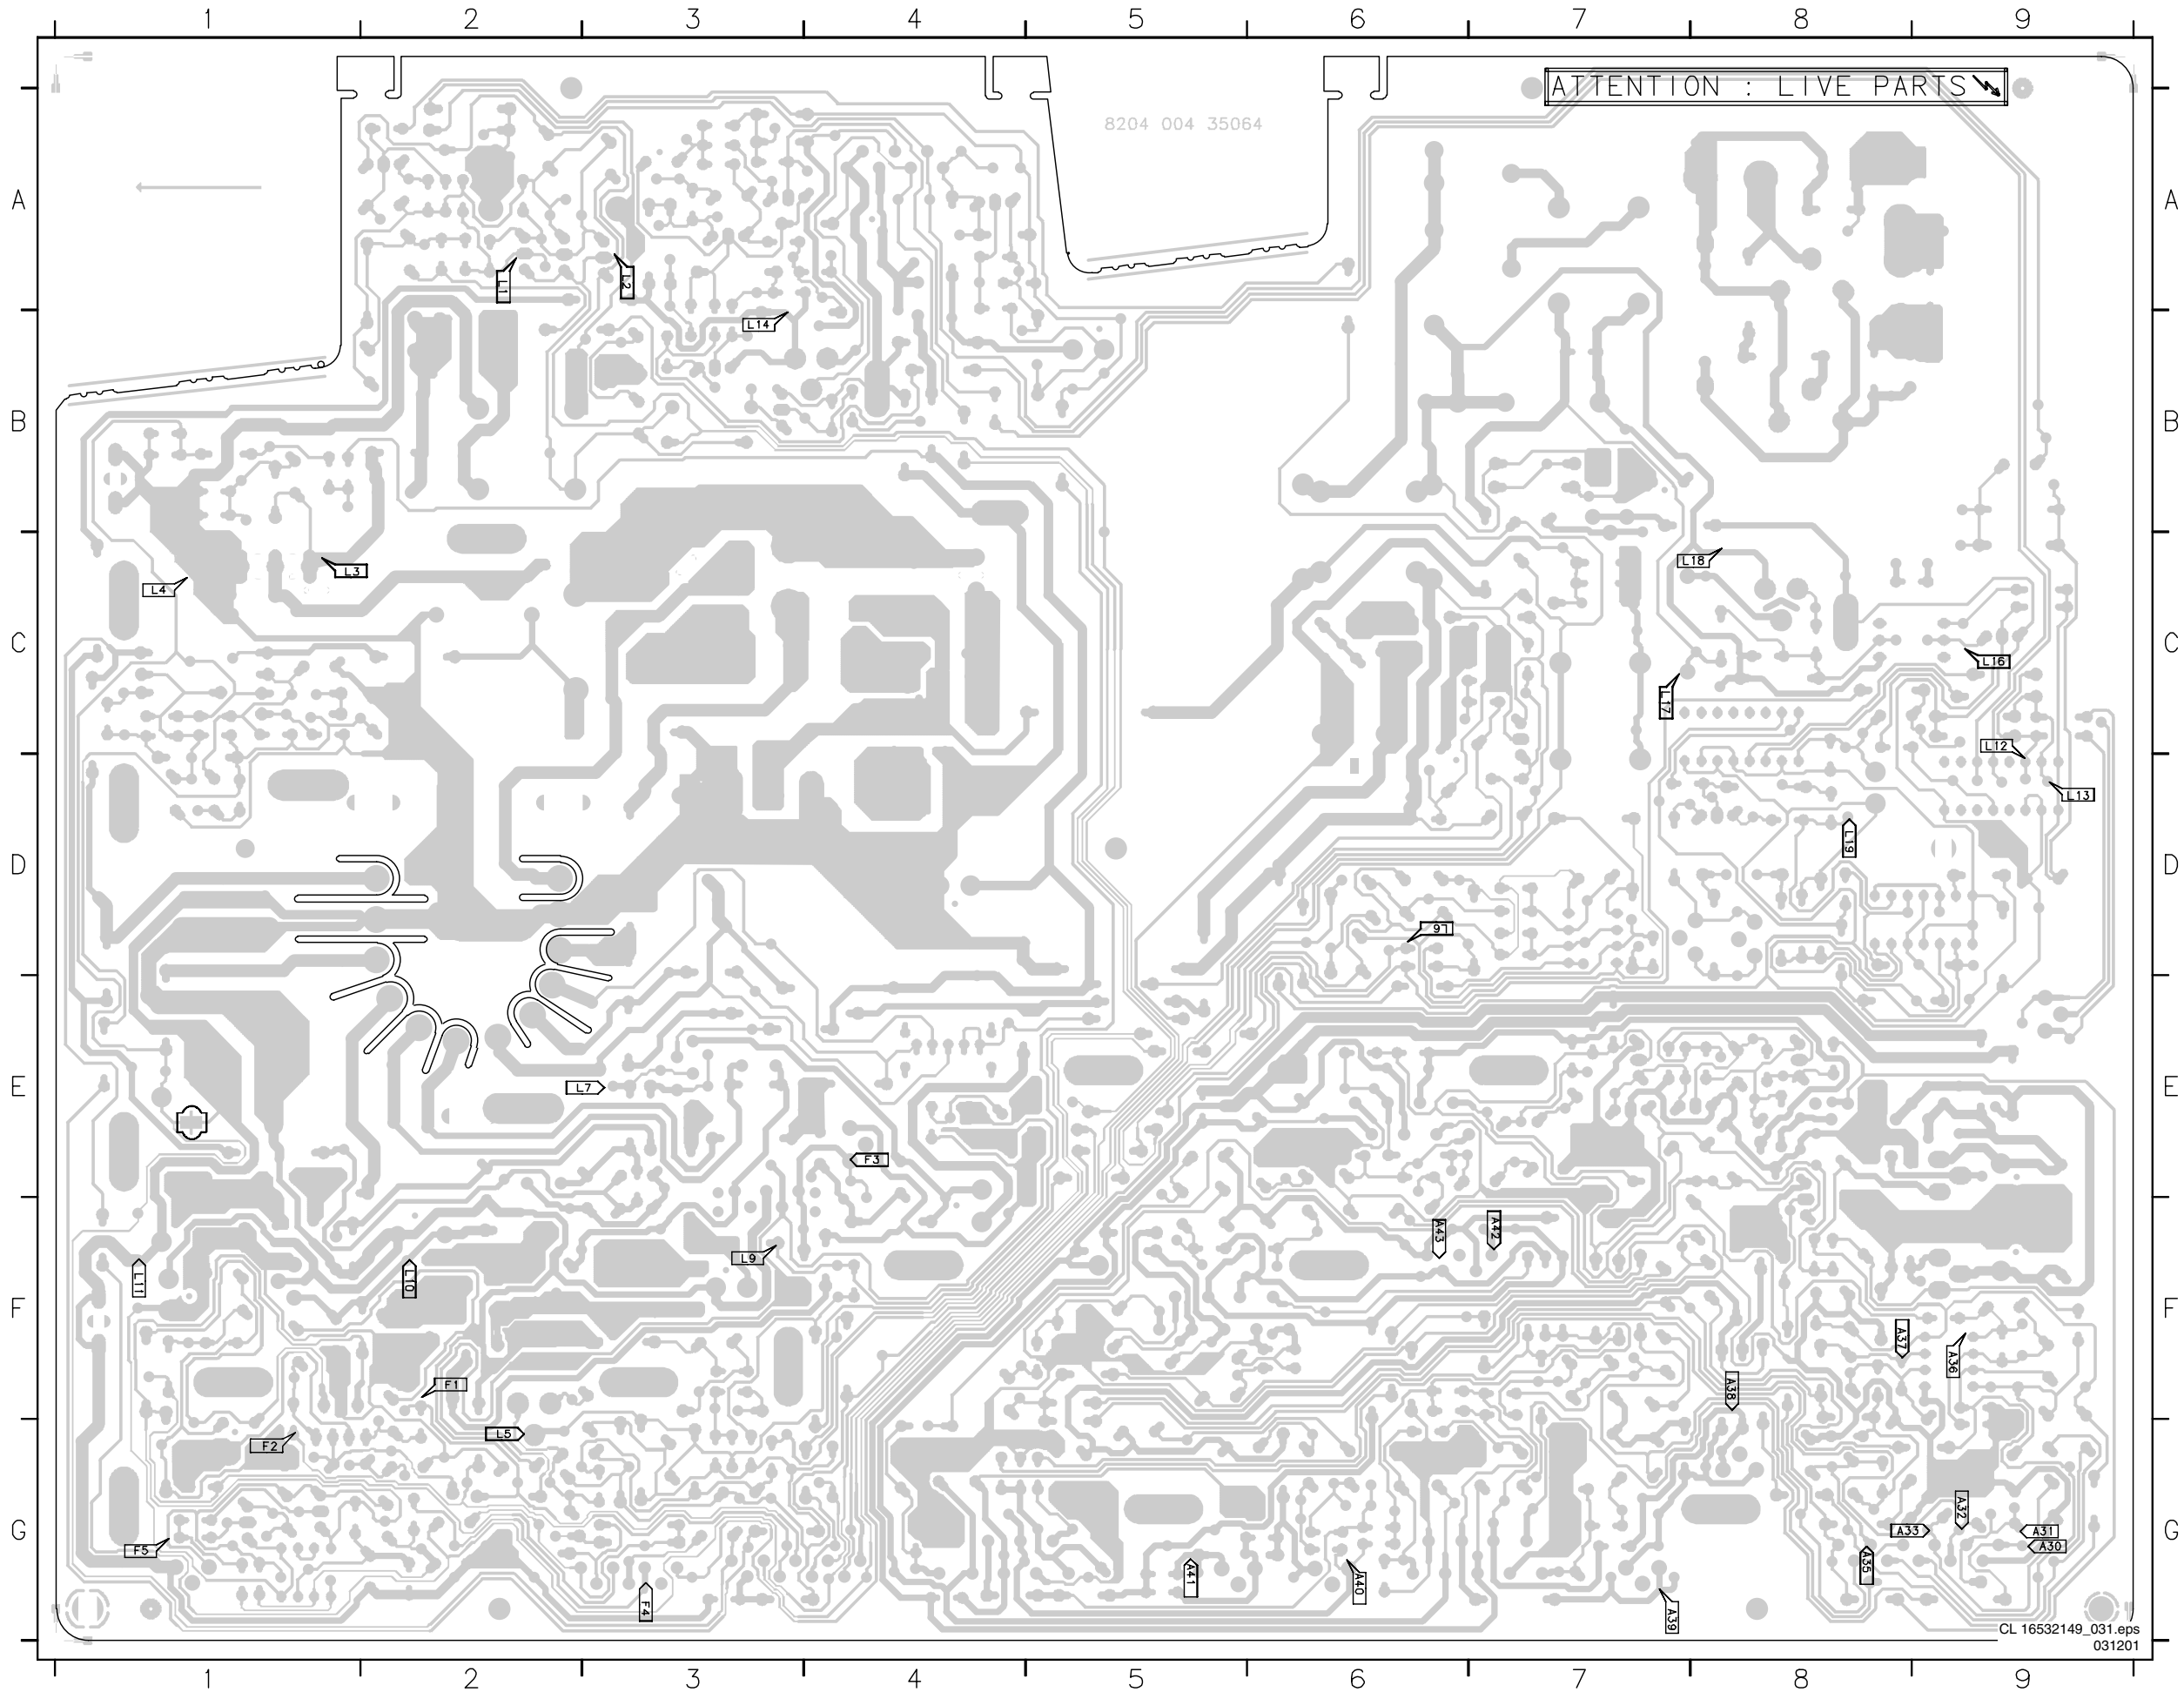

Top Supply

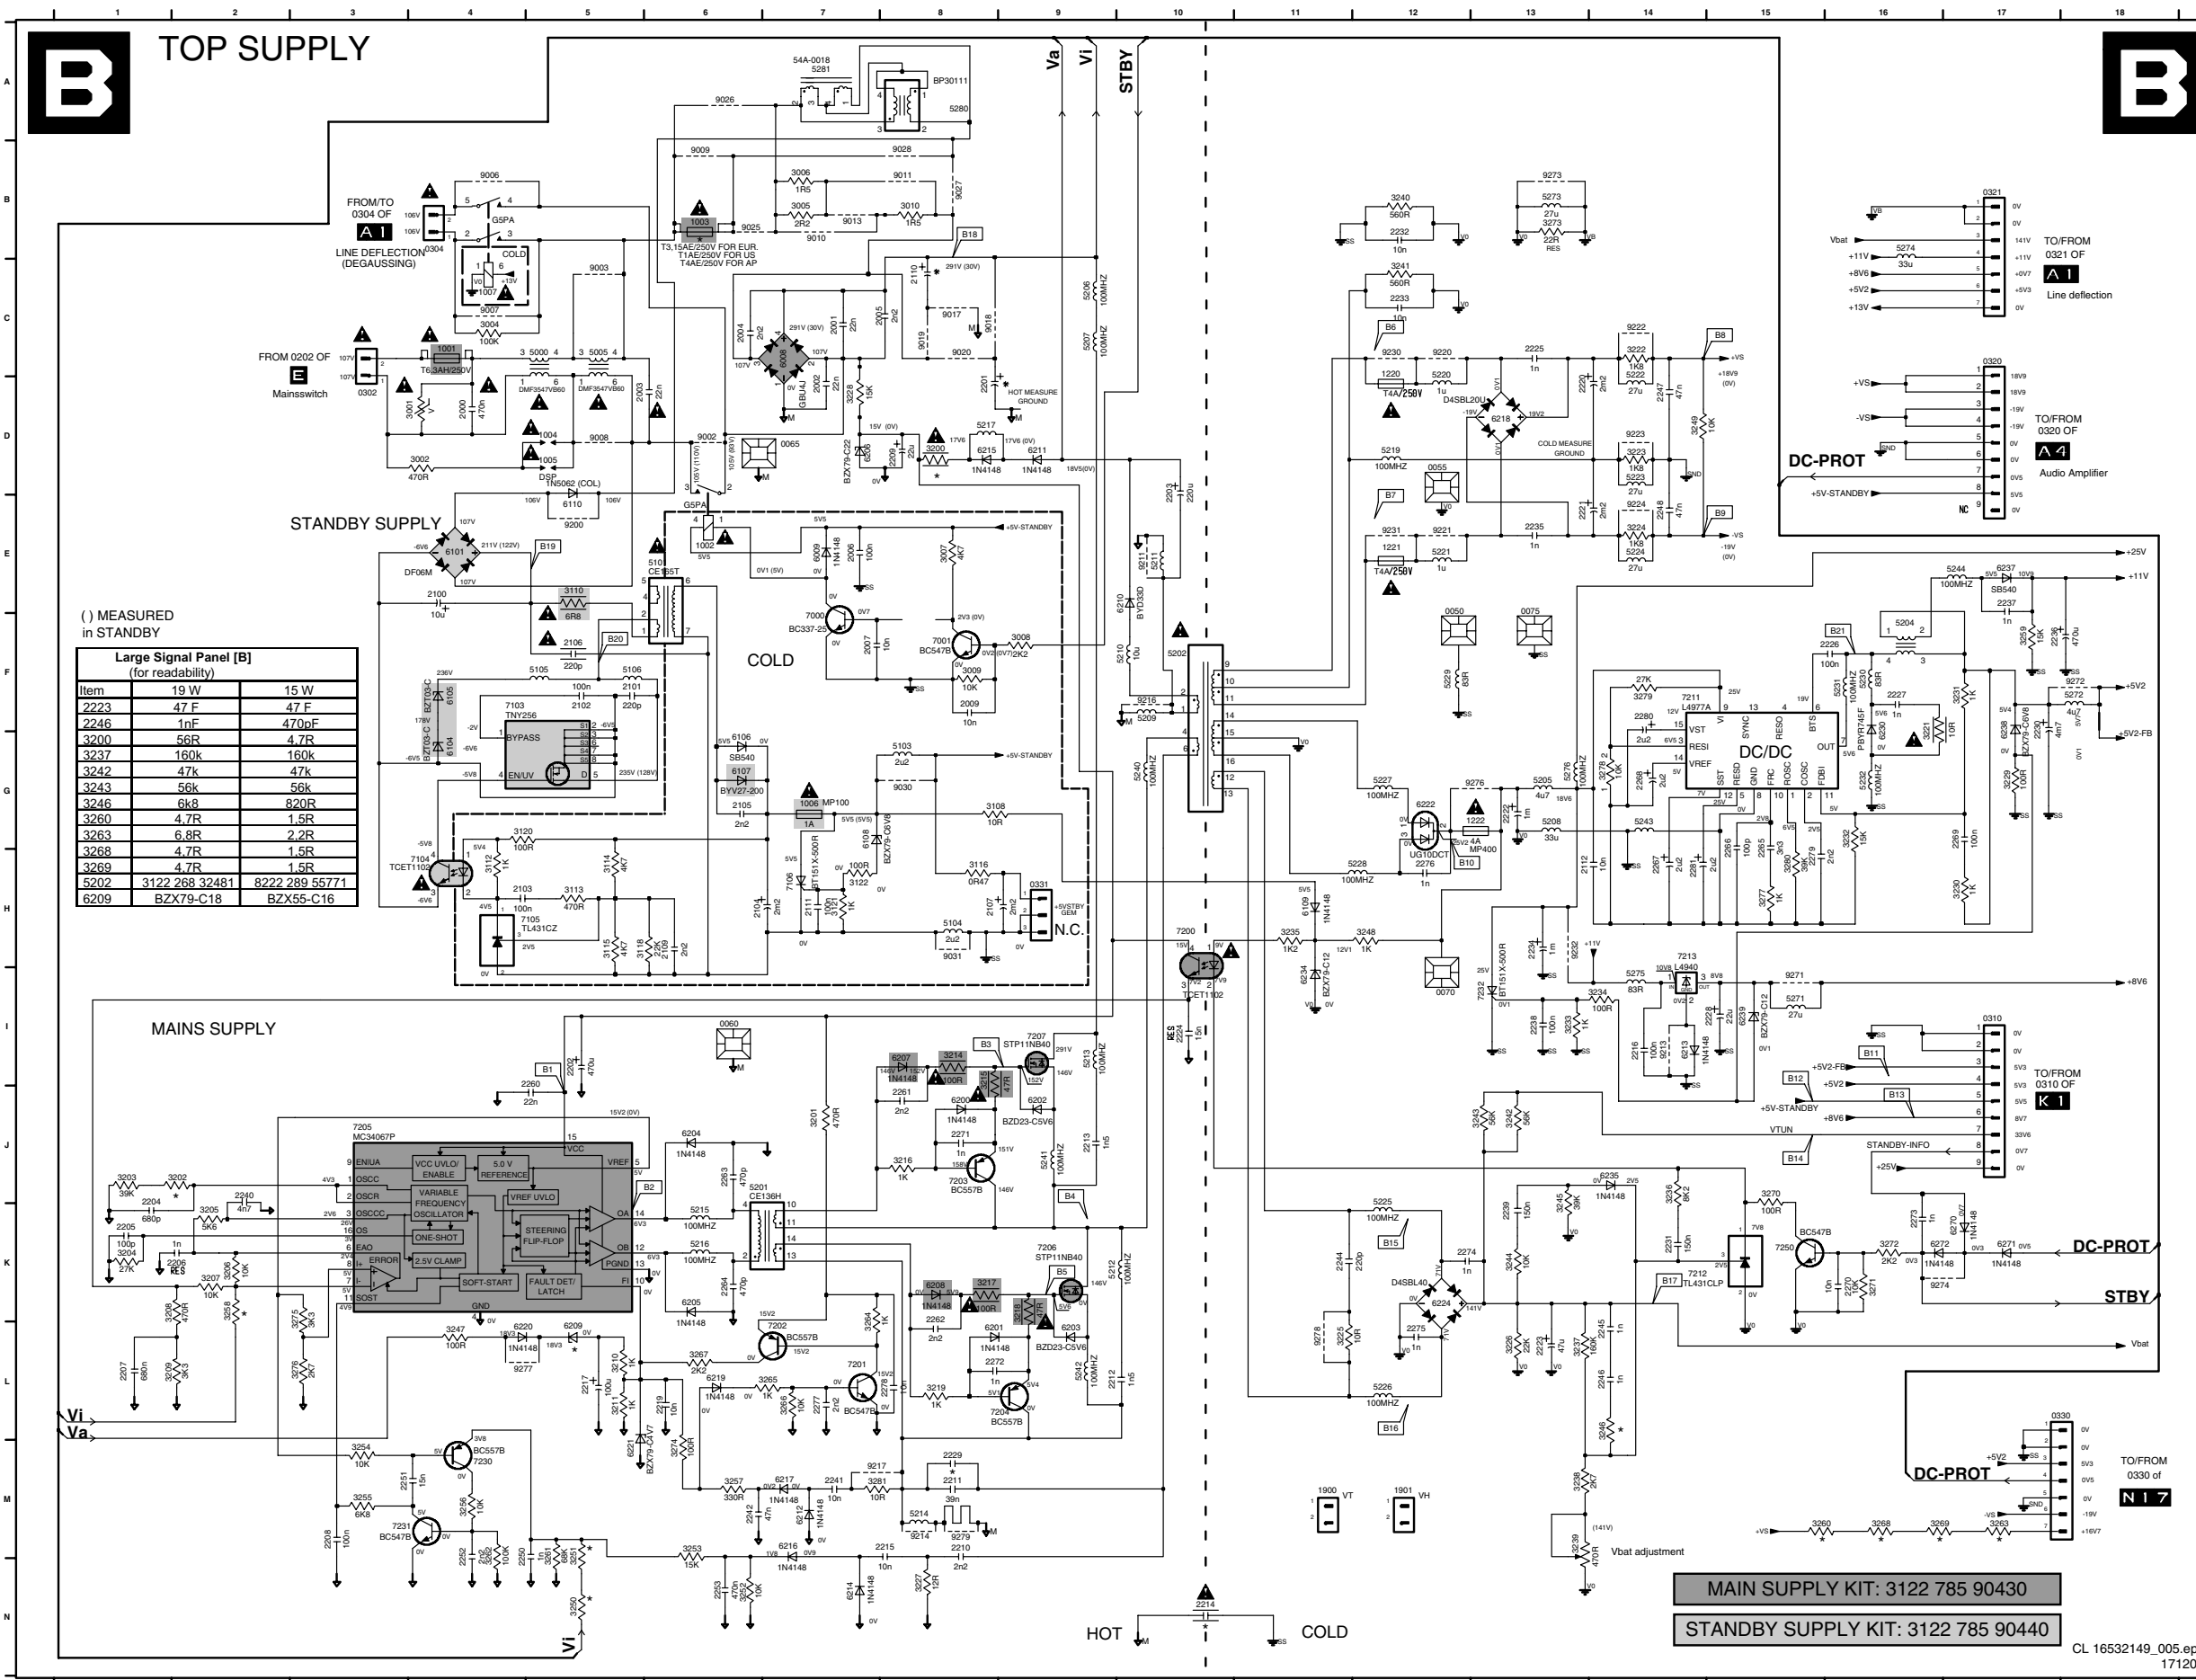


() MEASURED in STANDBY

Large Signal Panel [B] (for readability)


Item	19 W	15 W
2223	47 F	47 F
2246	1nF	470pF
3200	56R	4.7R
3237	160k	160k
3242	47k	47k
3243	56k	56k
3246	6k8	820R
3260	4.7R	1.5R
3263	6.8R	2.2R
3268	4.7R	1.5R
5202	3122 268 32481	8222 289 55771
6209	BZX79-C18	BZX55-C16

- 0050 F12
- 0055 D12
- 0060 I6
- 0065 D7
- 0070 I12
- 0075 D5
- 0302 D3
- 0304 B4
- 0310 I17
- 0320 C17
- 0321 B17
- 0330 L17
- 0331 H9
- 1001 C4
- 1002 E6
- 1003 B6
- 1004 D5
- 1005 D6
- 1006 G7
- 1007 C4
- 1220 C12
- 1221 E12
- 1222 G13
- 1500 M11
- 1901 M12
- 2000 D4
- 2001 C7
- 2002 D7
- 2003 D5
- 2004 C6
- 2005 C8
- 2006 E7
- 2007 F7
- 2008 F8
- 2100 E4
- 2101 F5
- 2102 F5
- 2103 H4
- 2104 H6
- 2105 G6
- 2106 F5
- 2107 H8
- 2109 H6
- 2110 C8
- 2111 H7
- 2112 H7
- 2201 D8
- 2202 I5
- 2203 D10
- 2204 K1
- 2205 K2
- 2207 L1
- 2208 M3
- 2209 D8
- 2210 M8
- 2211 M8
- 2212 J9
- 2213 J9
- 2214 N10
- 2215 M8
- 2216 I14
- 2217 L5
- 2218 L5
- 2220 D13
- 2221 E13
- 2222 G13
- 2223 H10
- 2225 C16
- 2226 F16
- 2227 F16
- 2228 I15
- 2229 M8
- 2231 K14
- 2232 B12
- 2233 C12
- 2234 H13
- 2235 E13
- 2236 F17
- 2237 E17
- 2238 I13
- 2239 K13
- 2240 J2
- 2241 M7
- 2242 M6
- 2244 K11
- 2245 L14
- 2246 L14
- 2247 D14
- 2248 E14
- 2250 M4
- 2251 M3
- 2252 M4
- 2253 M6
- 2254 J5
- 2255 L8
- 2256 L8
- 2262 L8
- 2263 J6
- 2264 K6
- 2265 F10
- 2266 G15
- 2267 H14
- 2268 G14
- 2269 G17
- 2270 K16
- 2271 J8
- 2272 L8
- 2273 K6
- 2274 K12
- 2275 L12
- 2276 H12
- 2277 L7
- 2278 L8
- 2279 H15
- 2280 F14
- 2281 H14
- 3002 D4
- 3003 F8
- 3004 C4
- 3005 B7
- 3006 B7
- 3007 E8
- 3008 F9
- 3009 F9
- 3010 B8
- 3108 G8
- 3110 E5
- 3112 H4
- 3113 H5
- 3114 H5
- 3115 H5
- 3116 H8
- 3118 H5
- 3120 G4
- 3121 H7
- 3122 H7
- 3200 D8
- 3201 J7
- 3202 J2
- 3203 J1
- 3204 K1
- 3205 K2
- 3206 K2
- 3207 K2
- 3208 K1
- 3209 L1
- 3210 L5
- 3211 L5
- 3214 B6
- 3215 B6
- 3216 J8
- 3217 K8
- 3218 K9
- 3219 L8
- 3221 F16
- 3222 C14
- 3223 D14
- 3224 H14
- 3225 L11
- 3226 L13
- 3227 N8
- 3228 D7
- 3229 G17
- 3230 G17
- 3231 F17
- 3232 G16
- 3233 H3
- 3234 H4
- 3235 H4
- 3236 M13
- 3239 M13
- 3240 B12
- 3241 C12
- 3242 J13
- 3243 J13
- 3244 K13
- 3245 J13
- 3246 L14
- 3247 L4
- 3248 H12
- 3249 D14
- 3250 N5
- 3251 M5
- 3252 M6
- 3253 M7
- 3254 M3
- 3255 M3
- 3256 M4
- 3257 M6
- 3258 K2
- 3259 F17
- 3260 M15
- 3261 M5
- 3262 M4
- 3263 M17
- 3264 H10
- 3265 L7
- 3266 L7
- 3267 L6
- 3268 M16
- 3269 M16
- 3270 H15
- 3271 K16
- 3272 K16
- 3273 B13
- 3274 M6
- 3275 K3
- 3276 L3
- 3277 H15
- 3278 G14
- 3279 F14
- 3280 H15
- 3281 M7
- 3282 M8
- 3283 M15
- 3284 K11
- 3285 C5
- 3286 E5
- 3287 E11
- 3288 G14
- 3289 L3
- 3290 C9
- 3291 C9
- 3292 G13
- 3293 G13
- 3294 G13
- 3295 G13
- 3296 G13
- 3297 F10
- 3298 F10
- 3299 F10
- 3300 F10
- 3301 D14
- 3302 D14
- 3303 D14
- 3304 G14
- 3305 F16
- 3306 B7
- 3307 E8
- 3308 F9
- 3309 F9
- 3310 B8
- 3311 H5
- 3312 H4
- 3313 H5

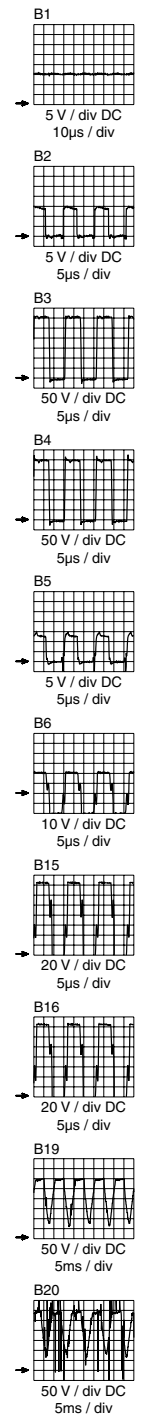

MAIN SUPPLY KIT: 3122 785 90430
 STANDBY SUPPLY KIT: 3122 785 90440

Layout Top Supply (Top View)

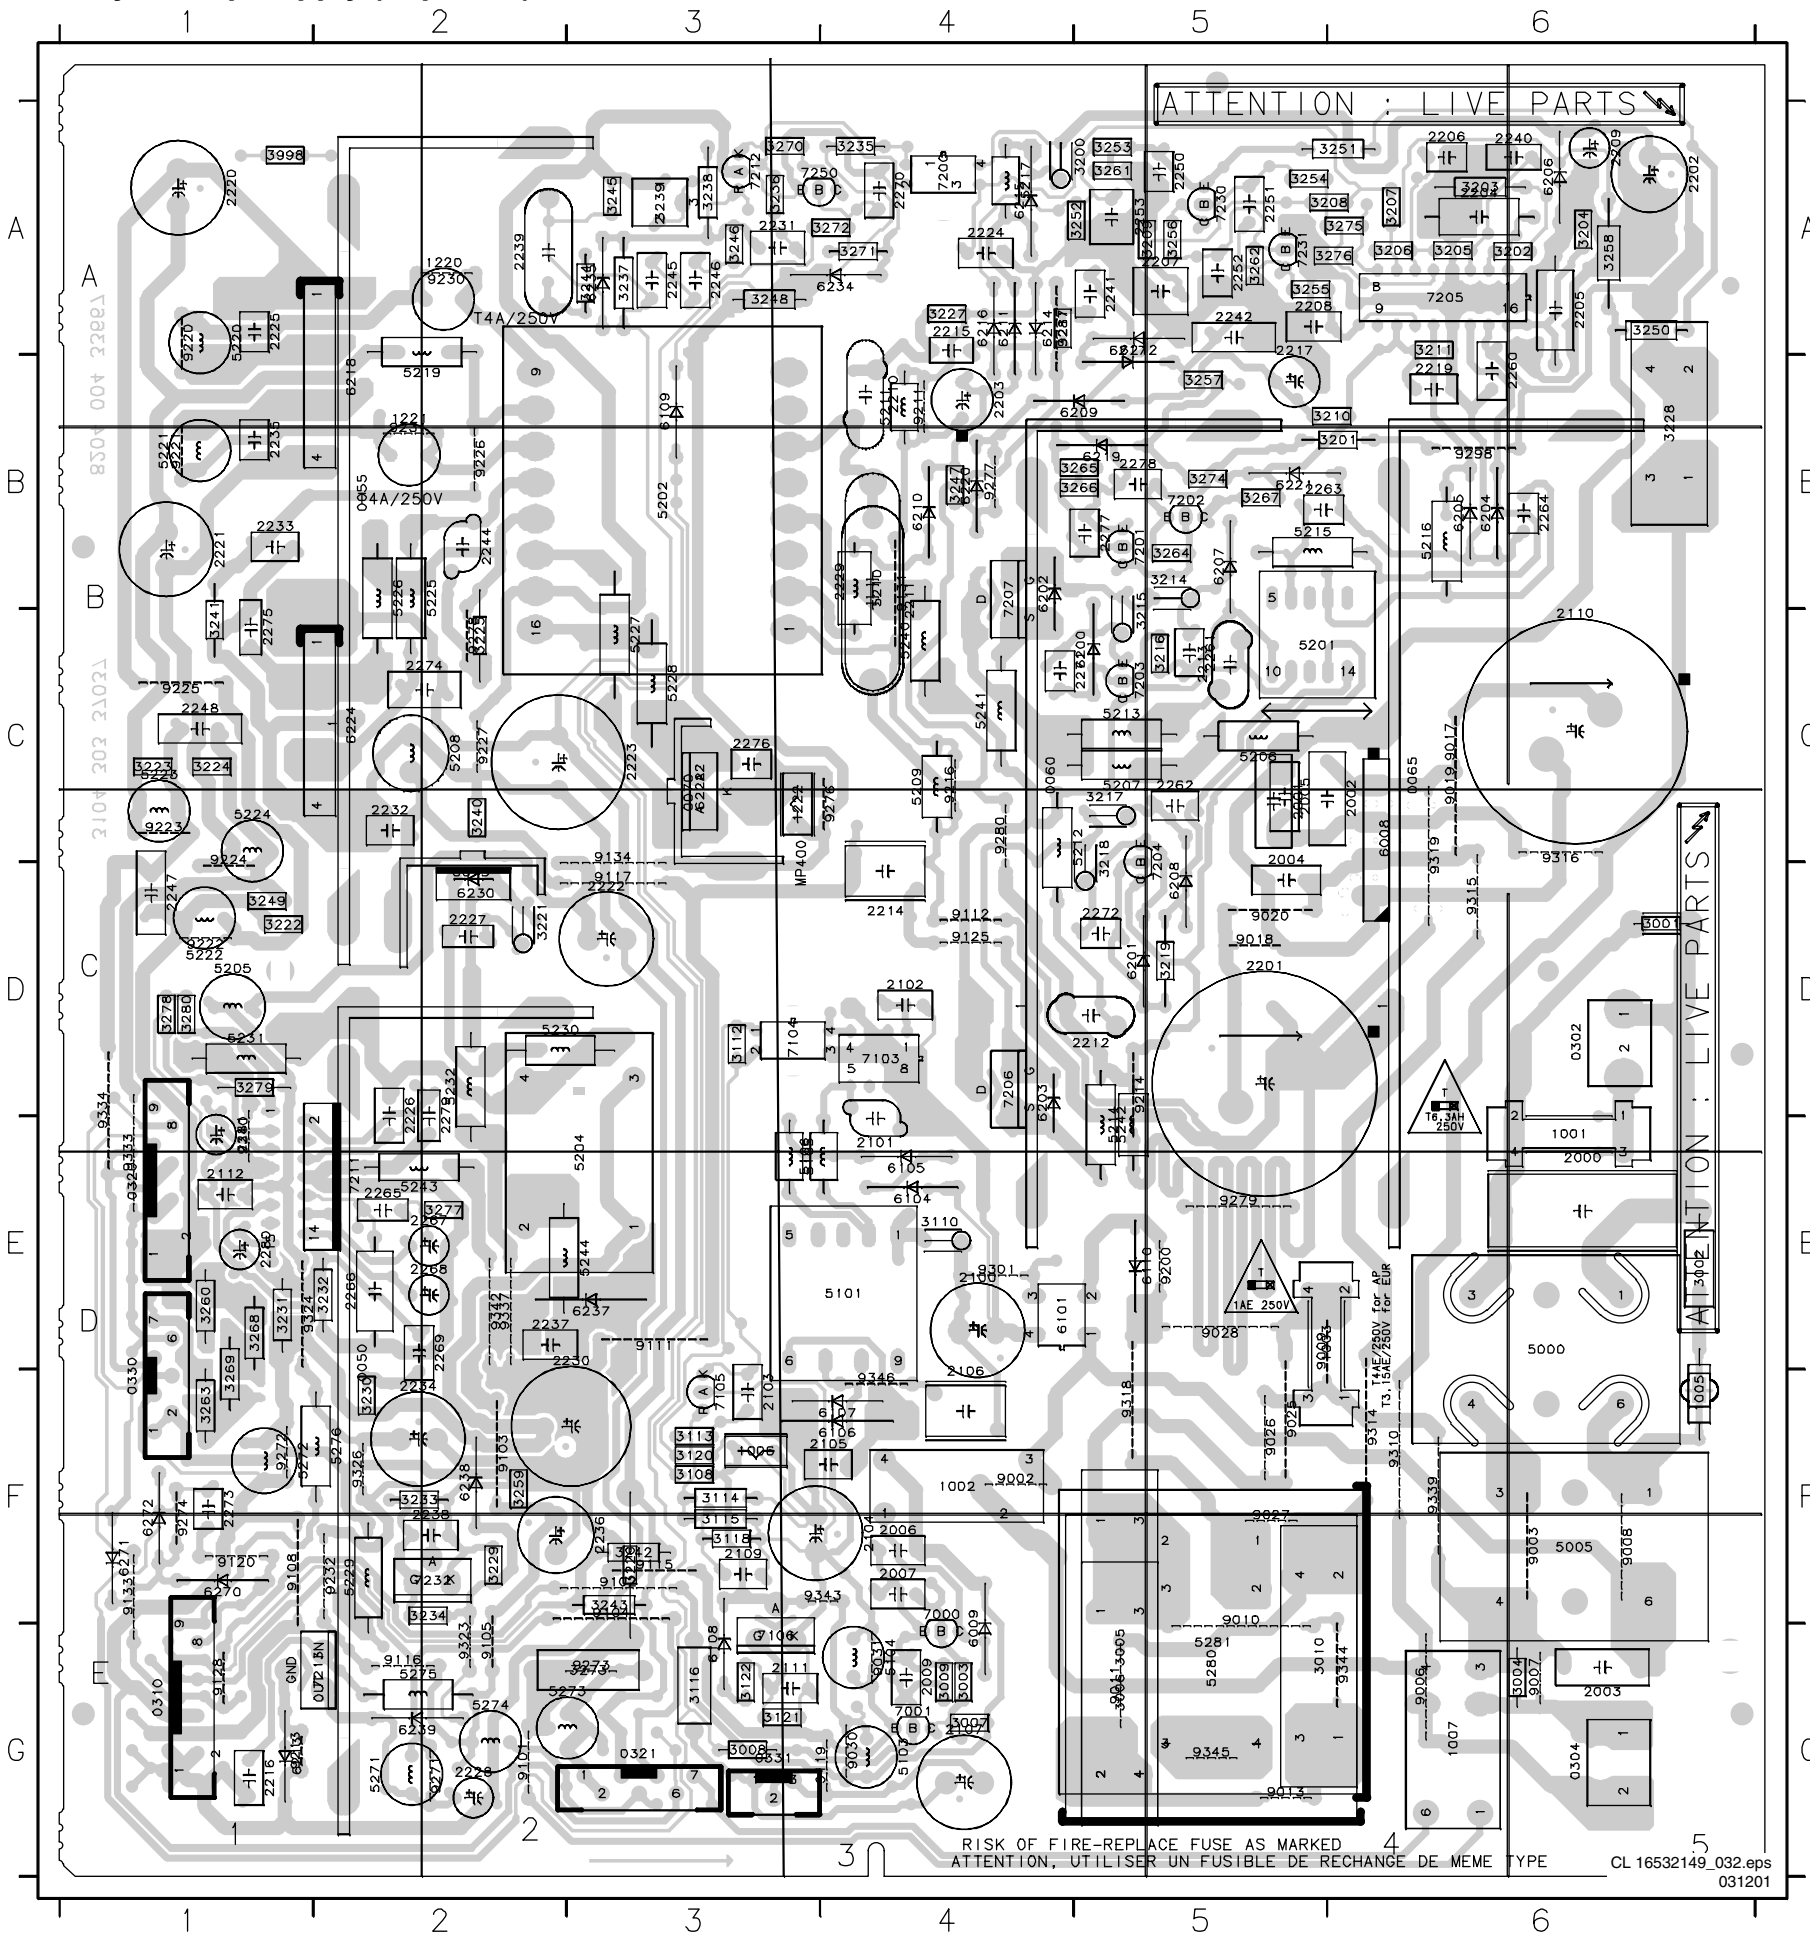


0050	E2	2267	E2	3267	B5	6230	D2	9319	C6
0055	B2	2268	E2	3268	E1	6234	A4	9323	G2
0060	C4	2269	E2	3269	F1	6235	A3	9324	F1
0065	C6	2270	A4	3270	A3	6237	E3	9326	F2
0070	C3	2271	C4	3271	A4	6238	F2	9333	E1
0075	D2	2272	D5	3272	A4	6239	G2	9334	D1
0302	D6	2273	F1	3273	G3	6270	F1	9337	E2
0304	G6	2274	C2	3274	B5	6271	F1	9339	F6
0310	G1	2275	C1	3275	A5	6272	F1	9340	E1
0320	E1	2276	C3	3276	A6	7000	F4	9342	E2
0321	G3	2277	B4	3277	E2	7001	G4	9343	F4
0330	F1	2278	B5	3278	D1	7103	E4	9344	G6
0331	G4	2279	D2	3279	D1	7104	D3	9345	G5
1001	D6	2280	E1	3280	D1	7105	E3	9346	F4
1002	F4	2281	D1	3281	A5	7106	G3		
1003	E6	3001	D6	3998	A1	7200	A4		
1005	F6	3002	E6	5000	E6	7201	B5		
1006	F3	3003	G4	5005	F6	7202	B5		
1007	G6	3004	G6	5101	E3	7203	C5		
1220	A2	3005	G4	5103	G4	7204	C5		
1221	B2	3006	G4	5104	G4	7205	A6		
1222	C3	3007	G4	5105	E4	7206	D4		
2000	E6	3008	G3	5106	E3	7207	C4		
2001	C5	3009	G4	5201	C6	7211	D2		
2002	C5	3010	G6	5202	B2	7212	A3		
2003	G6	3108	F3	5204	E3	7213	G2		
2004	C5	3110	E4	5205	D1	7230	A5		
2005	C5	3112	D3	5206	C5	7231	A5		
2006	F4	3113	F3	5207	C5	7232	F2		
2007	F4	3114	F3	5208	C2	7250	A4		
2009	G4	3115	F3	5209	C4	9002	F4		
2100	E4	3116	G3	5210	C4	9003	F6		
2101	E4	3118	F3	5211	B4	9006	G6		
2102	D4	3120	F3	5212	D4	9007	G6		
2103	F3	3121	G3	5213	C5	9008	F6		
2104	F3	3122	G3	5214	E5	9009	E5		
2105	F4	3200	A4	5215	B5	9010	G5		
2106	F4	3201	B6	5216	B6	9011	G5		
2107	G4	3202	A6	5217	A4	9013	G6		
2109	F3	3203	A6	5219	B2	9017	C6		
2110	C6	3204	A6	5220	A1	9018	D5		
2111	G3	3205	A6	5221	B1	9019	C6		
2112	E1	3206	A6	5222	D1	9020	D5		
2201	D5	3207	A6	5223	C1	9025	F5		
2202	A6	3208	A6	5224	C1	9026	F5		
2203	B4	3209	A5	5225	B2	9027	F5		
2204	A6	3210	B6	5226	B2	9028	E5		
2205	A6	3211	B6	5227	C3	9030	G4		
2206	A6	3214	C5	5228	C3	9031	G4		
2207	A5	3215	C5	5229	F2	9101	G2		
2208	A5	3216	C5	5230	D2	9102	F3		
2209	A6	3217	C5	5231	D1	9103	F2		
2210	B4	3218	C5	5232	D2	9104	G3		
2211	C4	3219	D5	5240	C4	9105	G2		
2212	D5	3221	D2	5241	C4	9108	F1		
2213	C5	3222	D1	5242	E5	9111	E3		
2214	D4	3223	C1	5243	E2	9112	D4		
2215	A4	3224	C1	5244	E2	9115	F3		
2216	G1	3225	C2	5271	G2	9116	G2		
2217	A5	3226	F3	5272	F1	9117	D3		
2219	B6	3227	A4	5273	G3	9119	G3		
2220	A1	3228	B6	5274	G2	9120	F1		
2221	B1	3229	F2	5275	G2	9125	D4		
2222	D3	3230	E2	5276	F2	9128	G1		
2223	C3	3231	E1	5280	G4	9131	B4		
2224	A4	3232	E2	5281	G5	9133	F1		
2225	A1	3233	F2	6008	C6	9134	C3		
2226	D2	3234	G2	6009	G4	9200	E5		
2227	D2	3235	A4	6101	E4	9211	B4		
2228	G2	3236	A3	6104	E4	9213	G1		
2229	B4	3237	A3	6105	E4	9214	D5		
2230	E3	3238	A3	6106	F4	9216	C4		
2231	A3	3239	A3	6107	F4	9217	A4		
2232	C2	3240	C2	6108	G3	9220	A1		
2233	B1	3241	C1	6109	B3	9221	B1		
2234	F2	3242	F3	6110	E5	9222	D1		
2235	B1	3243	F2	6200	C5	9223	C1		
2236	F3	3244	A3	6201	D5	9224	D1		
2237	E2	3245	A3	6202	B4	9225	C1		
2238	F2	3246	A3	6203	D4	9226	B2		
2239	A3	3247	B4	6204	B6	9227	C2		
2240	A6	3248	A3	6205	B6	9230	A2		
2241	A5	3249	D1	6206	A6	9231	B2		
2242	B5	3250	A6	6207	B5	9232	F1		
2244	B2	3251	A6	6208	D5	9271	G2		
2245	A3	3252	A4	6209	B5	9272	F1		
2246	A3	3253	A5	6210	B4	9273	G3		
2247	D1	3254	A5	6211	B4	9274	F1		
2248	C1	3255	A5	6212	A5	9276	C4		
2250	A5	3256	A5	6213	G1	9277	B4		
2251	A5	3257	B5	6214	A4	9278	C2		
2252	A5	3258	A6	6215	A4	9279	E5		
2253	A5	3259	F2	6216	B4	9280	C4		
2260	B6	3260	E1	6217	B5	9298	B6		
2261	C5	3261	A5	6218	B1	9301	E4		
2262	C5	3262	A5	6219	B5	9310	F6		
2263	B5	3263	F1	6220	B4	9314	F6		
2264	B6	3264	B5	6221	B5	9315	D6		
2265	E2	3265	B5	6222	C3	9316	D6		
2266	E2	3266	B4	6224	C1	9318	F5		


RISK OF FIRE-REPLACE FUSE AS MARKED ATTENTION, UTILISER UN FUSIBLE DE RECHANGE DE MEME TYPE

CL 16532149_032.eps
031201


Layout Top Supply (Top View)

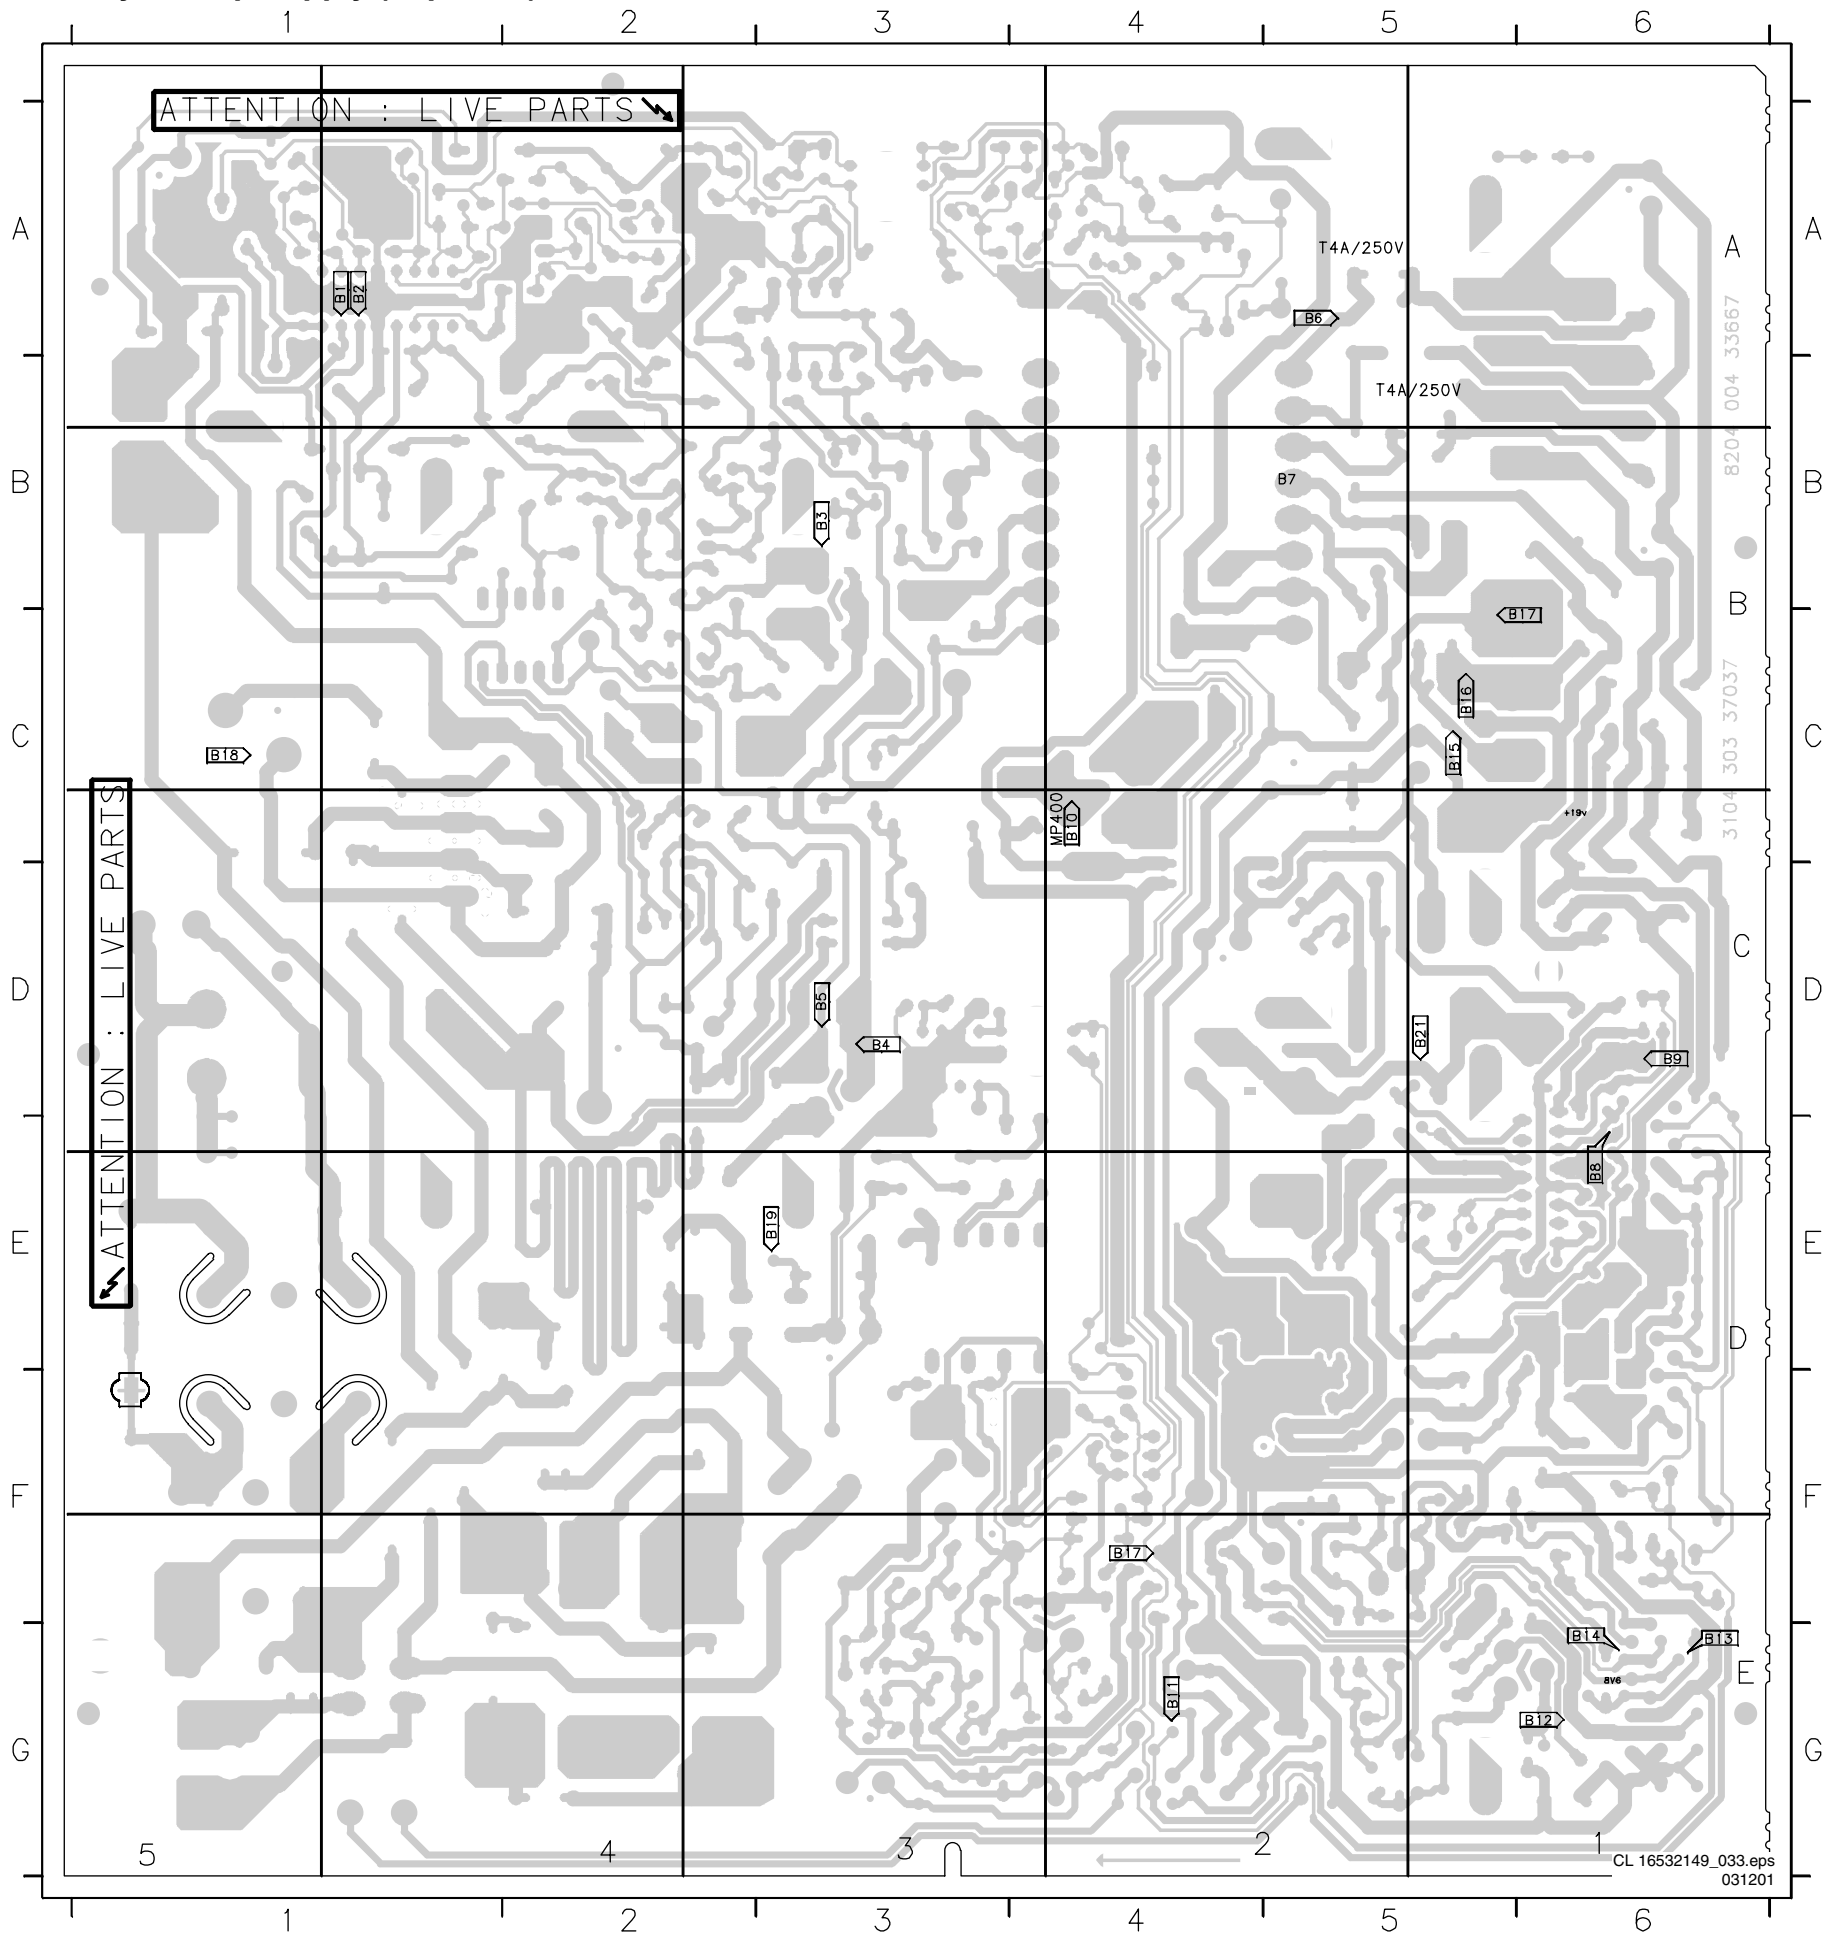

Layout Mains Switch Panel

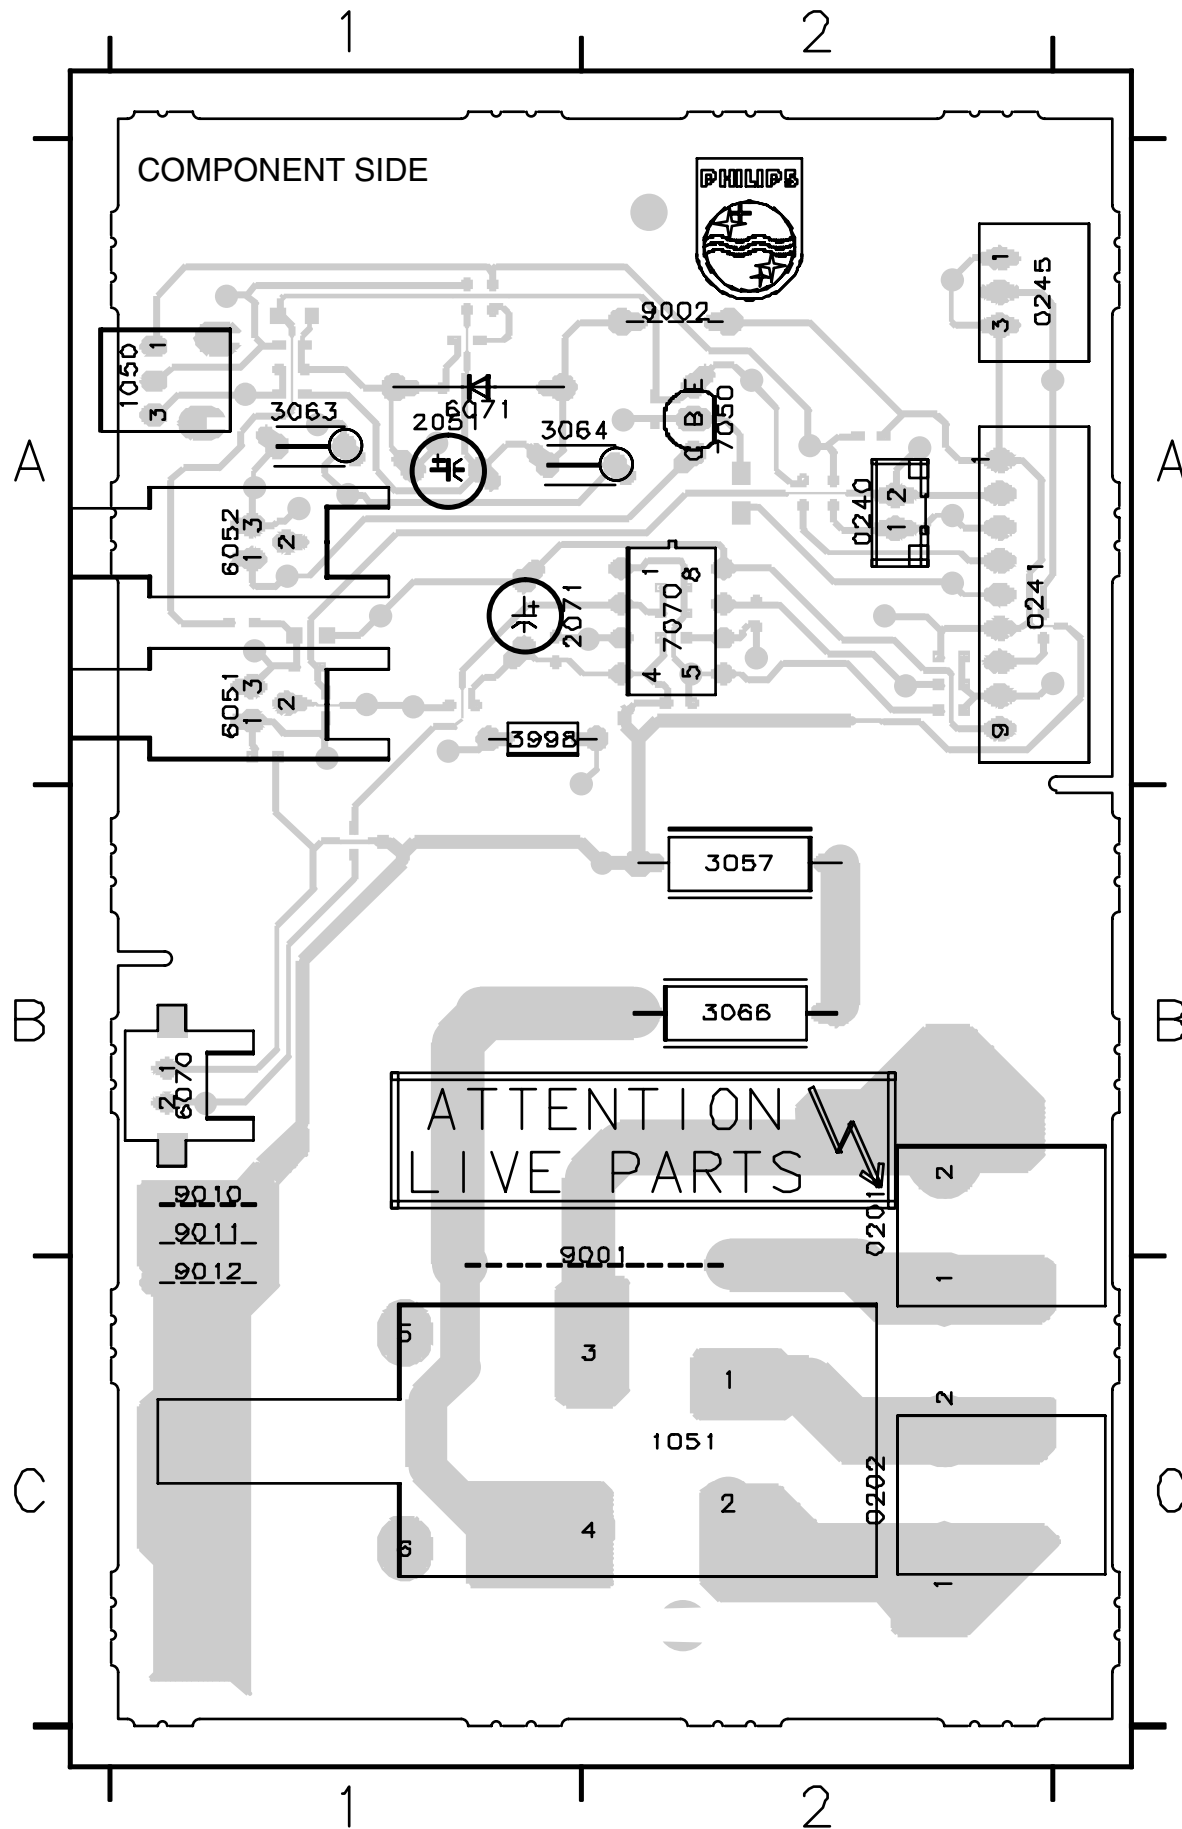


- 0201 B2
- 0202 C2
- 0240 A2
- 0241 A2
- 0245 A2
- 1050 A1
- 1051 C2
- 2051 A1
- 2071 A1
- 3057 B2
- 3063 A1
- 3064 A2
- 3066 B2
- 3998 A1
- 6051 A1
- 6052 A1
- 6070 B1
- 6071 A1
- 7050 A2
- 7070 A2
- 9001 B2
- 9002 A2
- 9010 B1
- 9011 B1
- 9012 C1

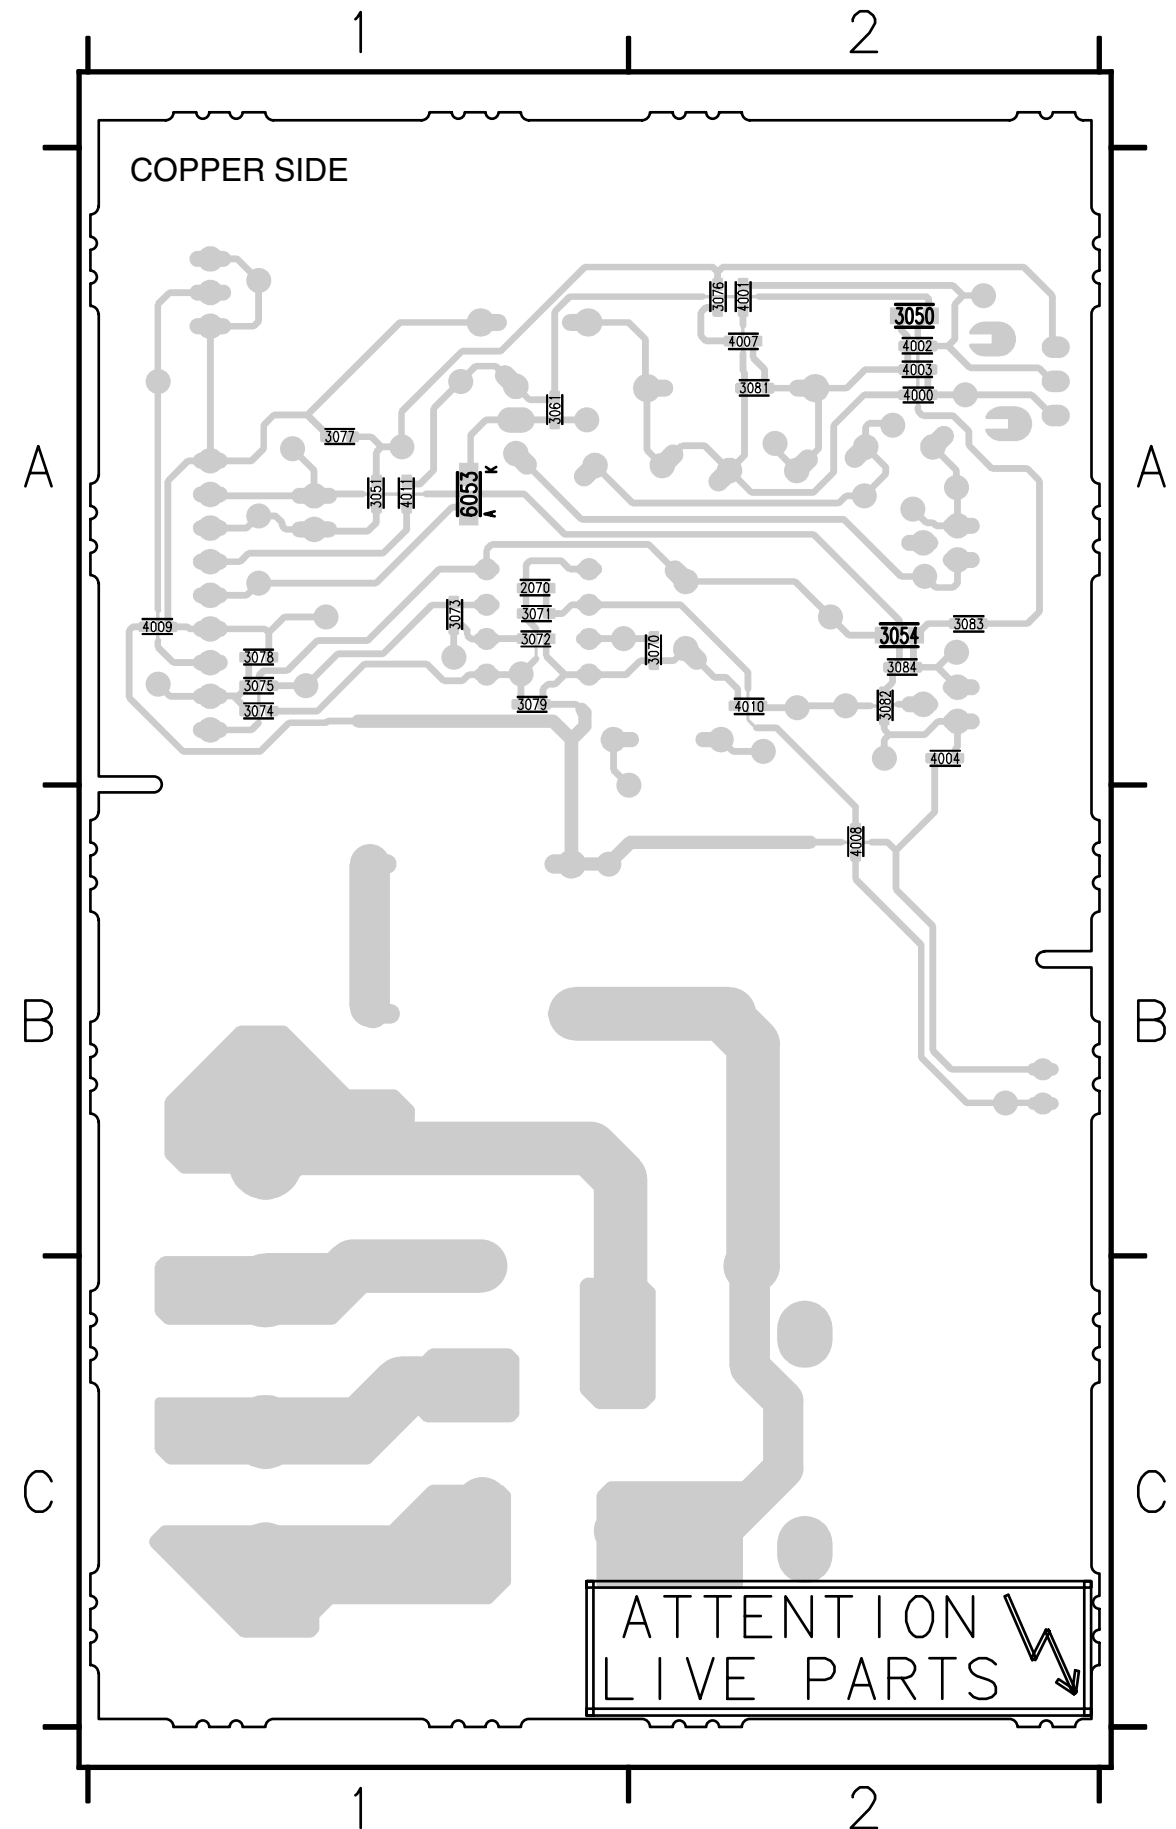

- 2070 A1
- 3050 A2
- 3051 A1
- 3054 A2
- 3061 A1
- 3070 A2
- 3071 A1
- 3072 A1
- 3073 A1
- 3074 A1
- 3075 A1
- 3076 A2
- 3077 A1
- 3078 A1
- 3079 A1
- 3081 A2
- 3082 A2
- 3083 A2
- 3084 A2
- 4000 A2
- 4001 A2
- 4002 A2
- 4003 A2
- 4004 A2
- 4007 A2
- 4008 B2
- 4009 A1
- 4010 A2
- 4011 A1
- 6053 A1

CRT / Auto SCAVEM Panel


0031 C7	0297-D E11	0334 D1	2332 B5	2347 F7	2370 G2	2384 G11	2421 C11	2428 B15	2489 B11	3332 C4	3341 H6	3350 F7	3359 D5	3372 E1	3392 H13	3410 A13	3423 B3	3434 E3	3445 G4	3453 C9	3468 B15	3477 C11	3489 B11	4346 G5	5356 E5	6320 B2	6336 E10	6373 H11	7330 A6	7416 B2	7423 C12	9381 C13
0032 F8	0297-E E11	0340 A1	2336 A6	2350 F6	2372 F1	2383 H3	2422 B12	2429 C9	3324 I2	3333 A7	3342 H4	3351 E6	3360 I8	3373 G1	3396 H13	3411 B13	3424 C3	3435 D4	3446 G4	3454 C15	3470 C14	3478 D14	3492 A15	4356 E5	5372 E1	6321 B2	6346 E10	6374 H10	7340 G6	7417 B4	7424 C10	9383 H12
0033 D8	0297-F G11	0383 C14	2337 A6	2351 F5	2373 G1	2397 H3	2423 B15	2430 C13	3325 H2	3334 E9	3343 F7	3352 E4	3361 I8	3374 G1	3397 H13	3413 D13	3425 B4	3436 D4	3447 G4	3455 D9	3472 A14	3483 D11	3493 B15	4401 B3	5373 G1	6322 B9	6346 E10	6412 A14	7350 D6	7418 F3	7425 C10	9384 H12
0235 D11	0297-G G11	1982 A8	2340 H6	2352 E5	2374 F1	2398 H4	2424 C11	2440 F2	3327 H2	3335 E10	3344 F9	3353 D7	3362 I7	3382 H10	3401 A9	3414 A12	3426 B4	3437 E4	3448 A15	3456 D9	3473 A13	3484 D11	3494 B13	4402 G3	5400 E2	6355 E9	6413 B14	7419 G4	7426 C12	9385 H11		
0297-A G13	0297-H G11	2325 H1	2341 H5	2356 D6	2381 G10	2410 C12	2425 A10	2475 B11	3329 H3	3336 C5	3345 F10	3354 F9	3363 D8	3383 H13	3402 A9	3416 B15	3427 C4	3441 G3	3450 B10	3460 B12	3474 C10	3485 A11	3495 C13	4403 D3	5401 B3	6324 H1	6356 E9	6414 B14	7413 B14	7420 D3	7427 A11	9390 H11
0297-B G13	0297-J G15	2330 C6	2342 G5	2357 D7	2382 H10	2411 A13	2426 B10	2484 D11	3330 C6	3339 B5	3346 G5	3355 F10	3364 G8	3385 H12	3403 A9	3421 B3	3431 D3	3443 G3	3451 B10	3462 B12	3475 C11	3484 A11	3495 I5	5336 C5	5402 G3	6325 I3	6371 H8	6415 C14	7414 B13	7421 E4	7428 B11	9392 H10
0297-C F11	0324 C1	2331 D5	2346 F6	2360 I7	2383 G10	2420 B12	2427 B15	2485 A11	3331 C6	3340 H7	3349 G5	3356 E5	3365 H8	3386 H10	3404 B9	3422 B14	3433 E3	3444 G3	3452 C9	3463 B15	3476 C11	3488 A11	4336 C5	5346 H5	5403 E3	6335 E10	6372 I7	7324 I2	7415 C13	7422 A10	7431 C10	

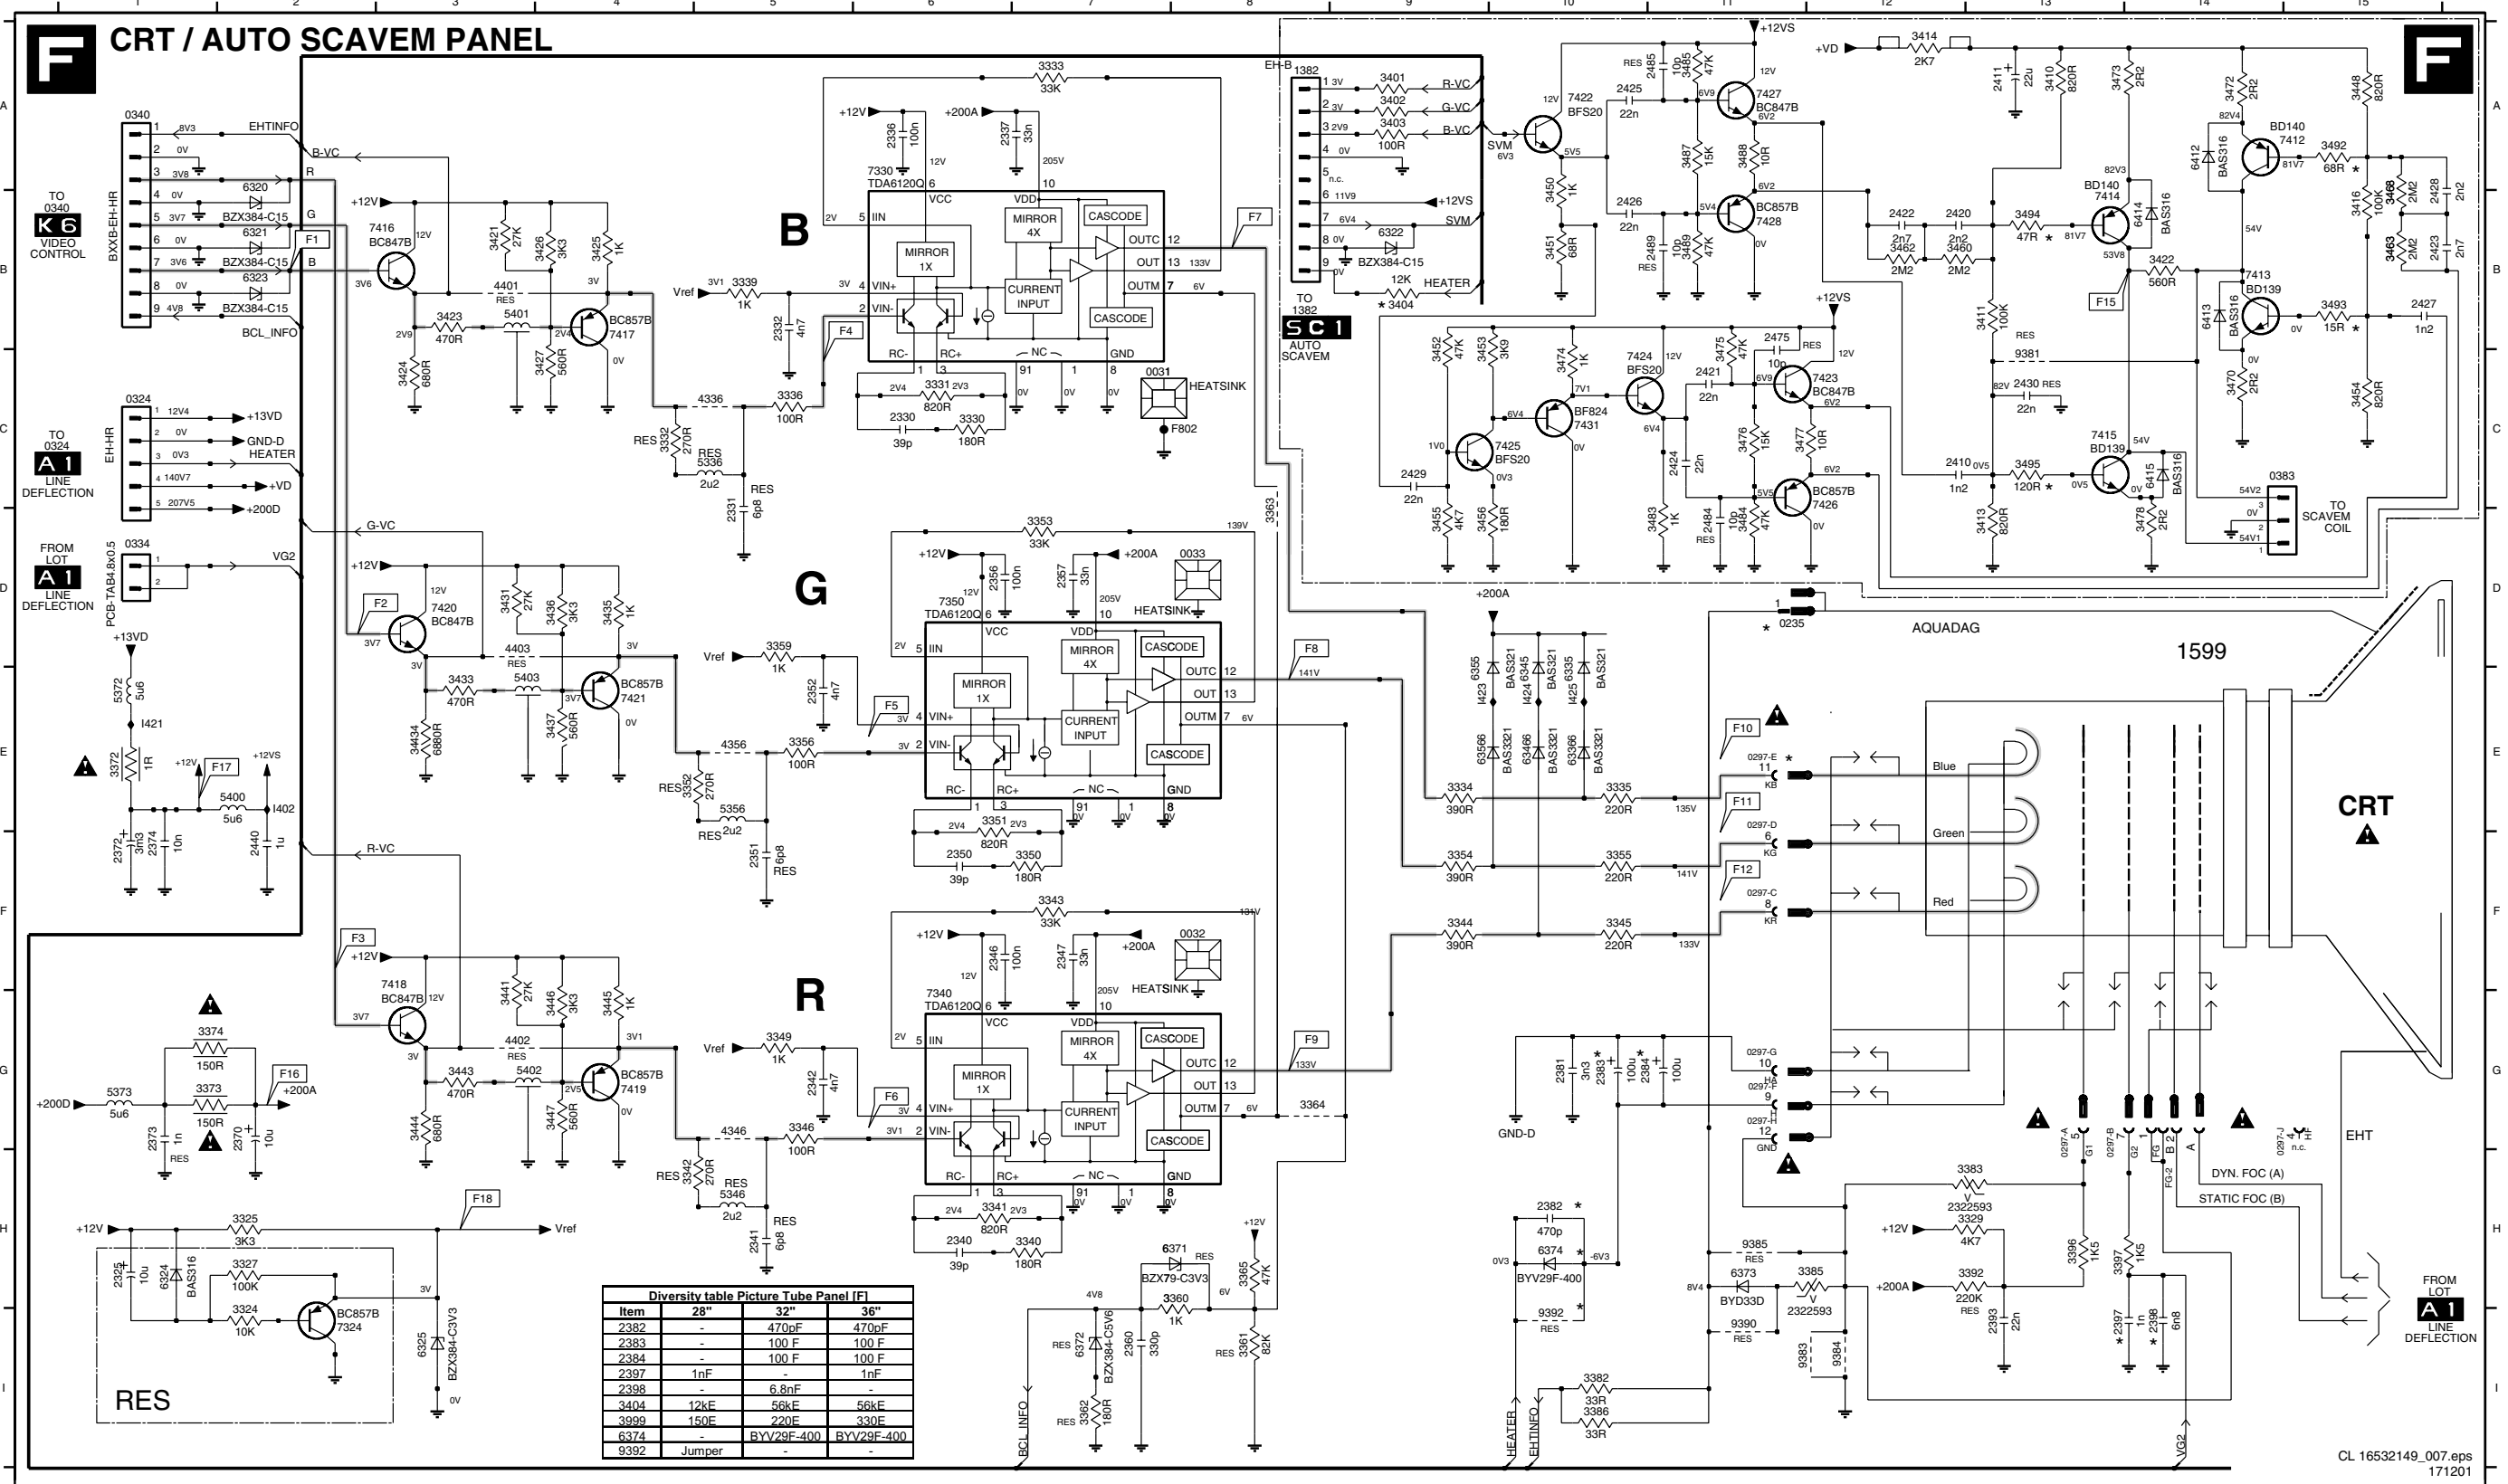


Diversity table Picture Tube Panel IF

Item	28"	32"	36"
2382	-	470pF	470pF
2383	-	100 F	100 F
2384	-	100 F	100 F
2397	1nF	-	1nF
2398	-	6.8nF	-
3404	12kE	56kE	56kE
3999	150E	220E	330E
6374	-	BYV29F-400	BYV29F-400
9392	Jumper	-	-

USE HEATSINK-GROUND AS MEASUREGROUND

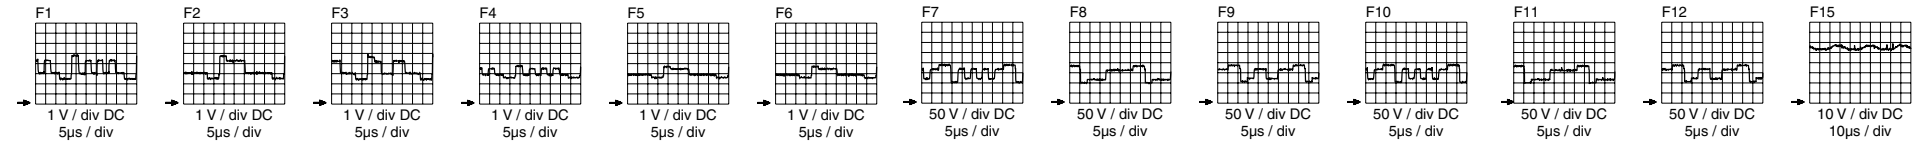


Layout CRT / Auto SCAVEM Panel (Top View)

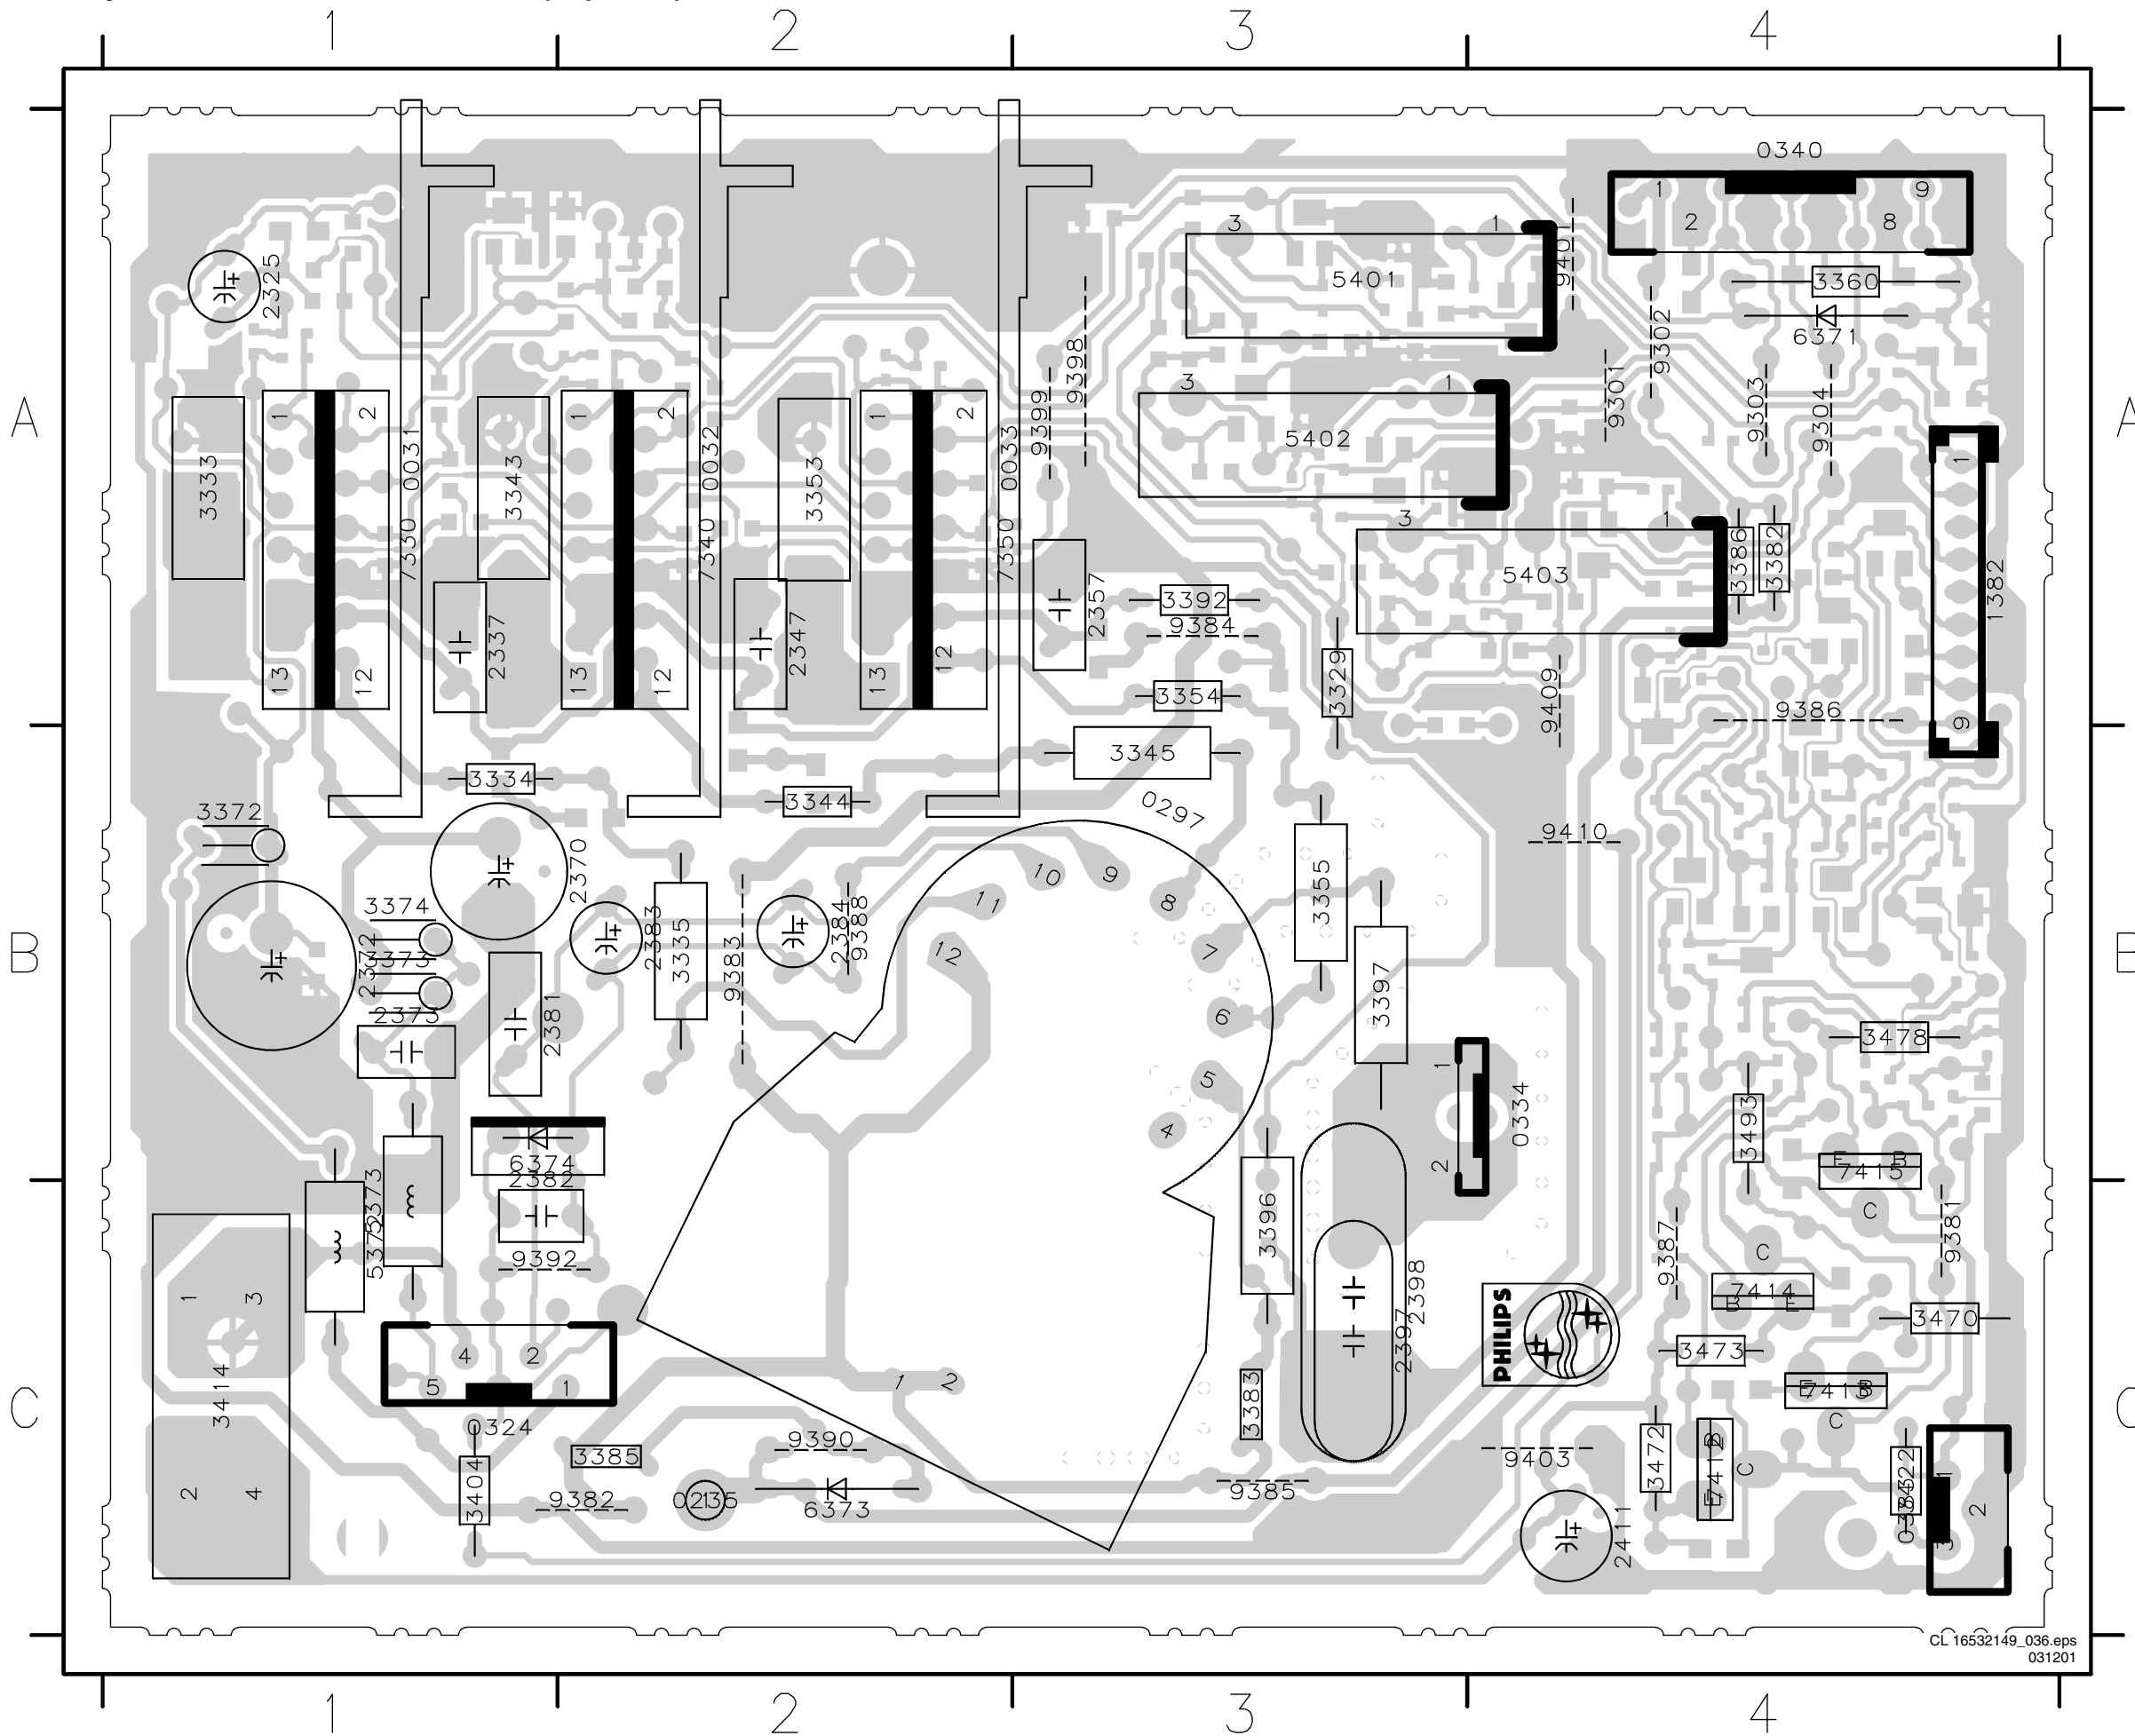

- | | |
|---------|---------|
| 0031 A1 | 9302 A4 |
| 0032 A2 | 9303 A4 |
| 0033 A3 | 9304 A4 |
| 0235 C2 | 9381 C4 |
| 0297 B3 | 9382 C2 |
| 0324 C1 | 9383 B2 |
| 0334 B4 | 9384 A3 |
| 0340 A4 | 9385 C3 |
| 0383 C4 | 9386 A4 |
| 1382 A4 | 9387 C4 |
| 2325 A1 | 9388 B2 |
| 2337 A1 | 9390 C2 |
| 2347 A2 | 9392 C1 |
| 2357 A3 | 9398 A3 |
| 2370 B1 | 9399 A3 |
| 2372 B1 | 9401 A4 |
| 2373 B1 | 9403 C4 |
| 2381 B2 | 9409 A4 |
| 2382 C1 | 9410 B4 |
| 2383 B2 | |
| 2384 B2 | |
| 2397 C3 | |
| 2398 C3 | |
| 2411 C4 | |
| 3329 A3 | |
| 3333 A1 | |
| 3334 B2 | |
| 3335 B2 | |
| 3343 A1 | |
| 3344 B2 | |
| 3345 A3 | |
| 3353 A2 | |
| 3354 A3 | |
| 3355 B3 | |
| 3360 A4 | |
| 3372 B1 | |
| 3373 B1 | |
| 3374 B1 | |
| 3382 A4 | |
| 3383 C3 | |
| 3385 C2 | |
| 3386 A4 | |
| 3392 A3 | |
| 3396 C3 | |
| 3397 B3 | |
| 3404 C1 | |
| 3414 C1 | |
| 3422 C4 | |
| 3470 C4 | |
| 3472 C4 | |
| 3473 C4 | |
| 3478 B4 | |
| 3493 B4 | |
| 5372 C1 | |
| 5373 C1 | |
| 5401 A3 | |
| 5402 A3 | |
| 5403 A4 | |
| 6371 A4 | |
| 6373 C2 | |
| 6374 B1 | |
| 7330 A1 | |
| 7340 A2 | |
| 7350 A2 | |
| 7412 C4 | |
| 7413 C4 | |
| 7414 C4 | |
| 7415 B4 | |
| 9301 A4 | |


Layout CRT / Auto SCAVEM Panel (Bottom View)

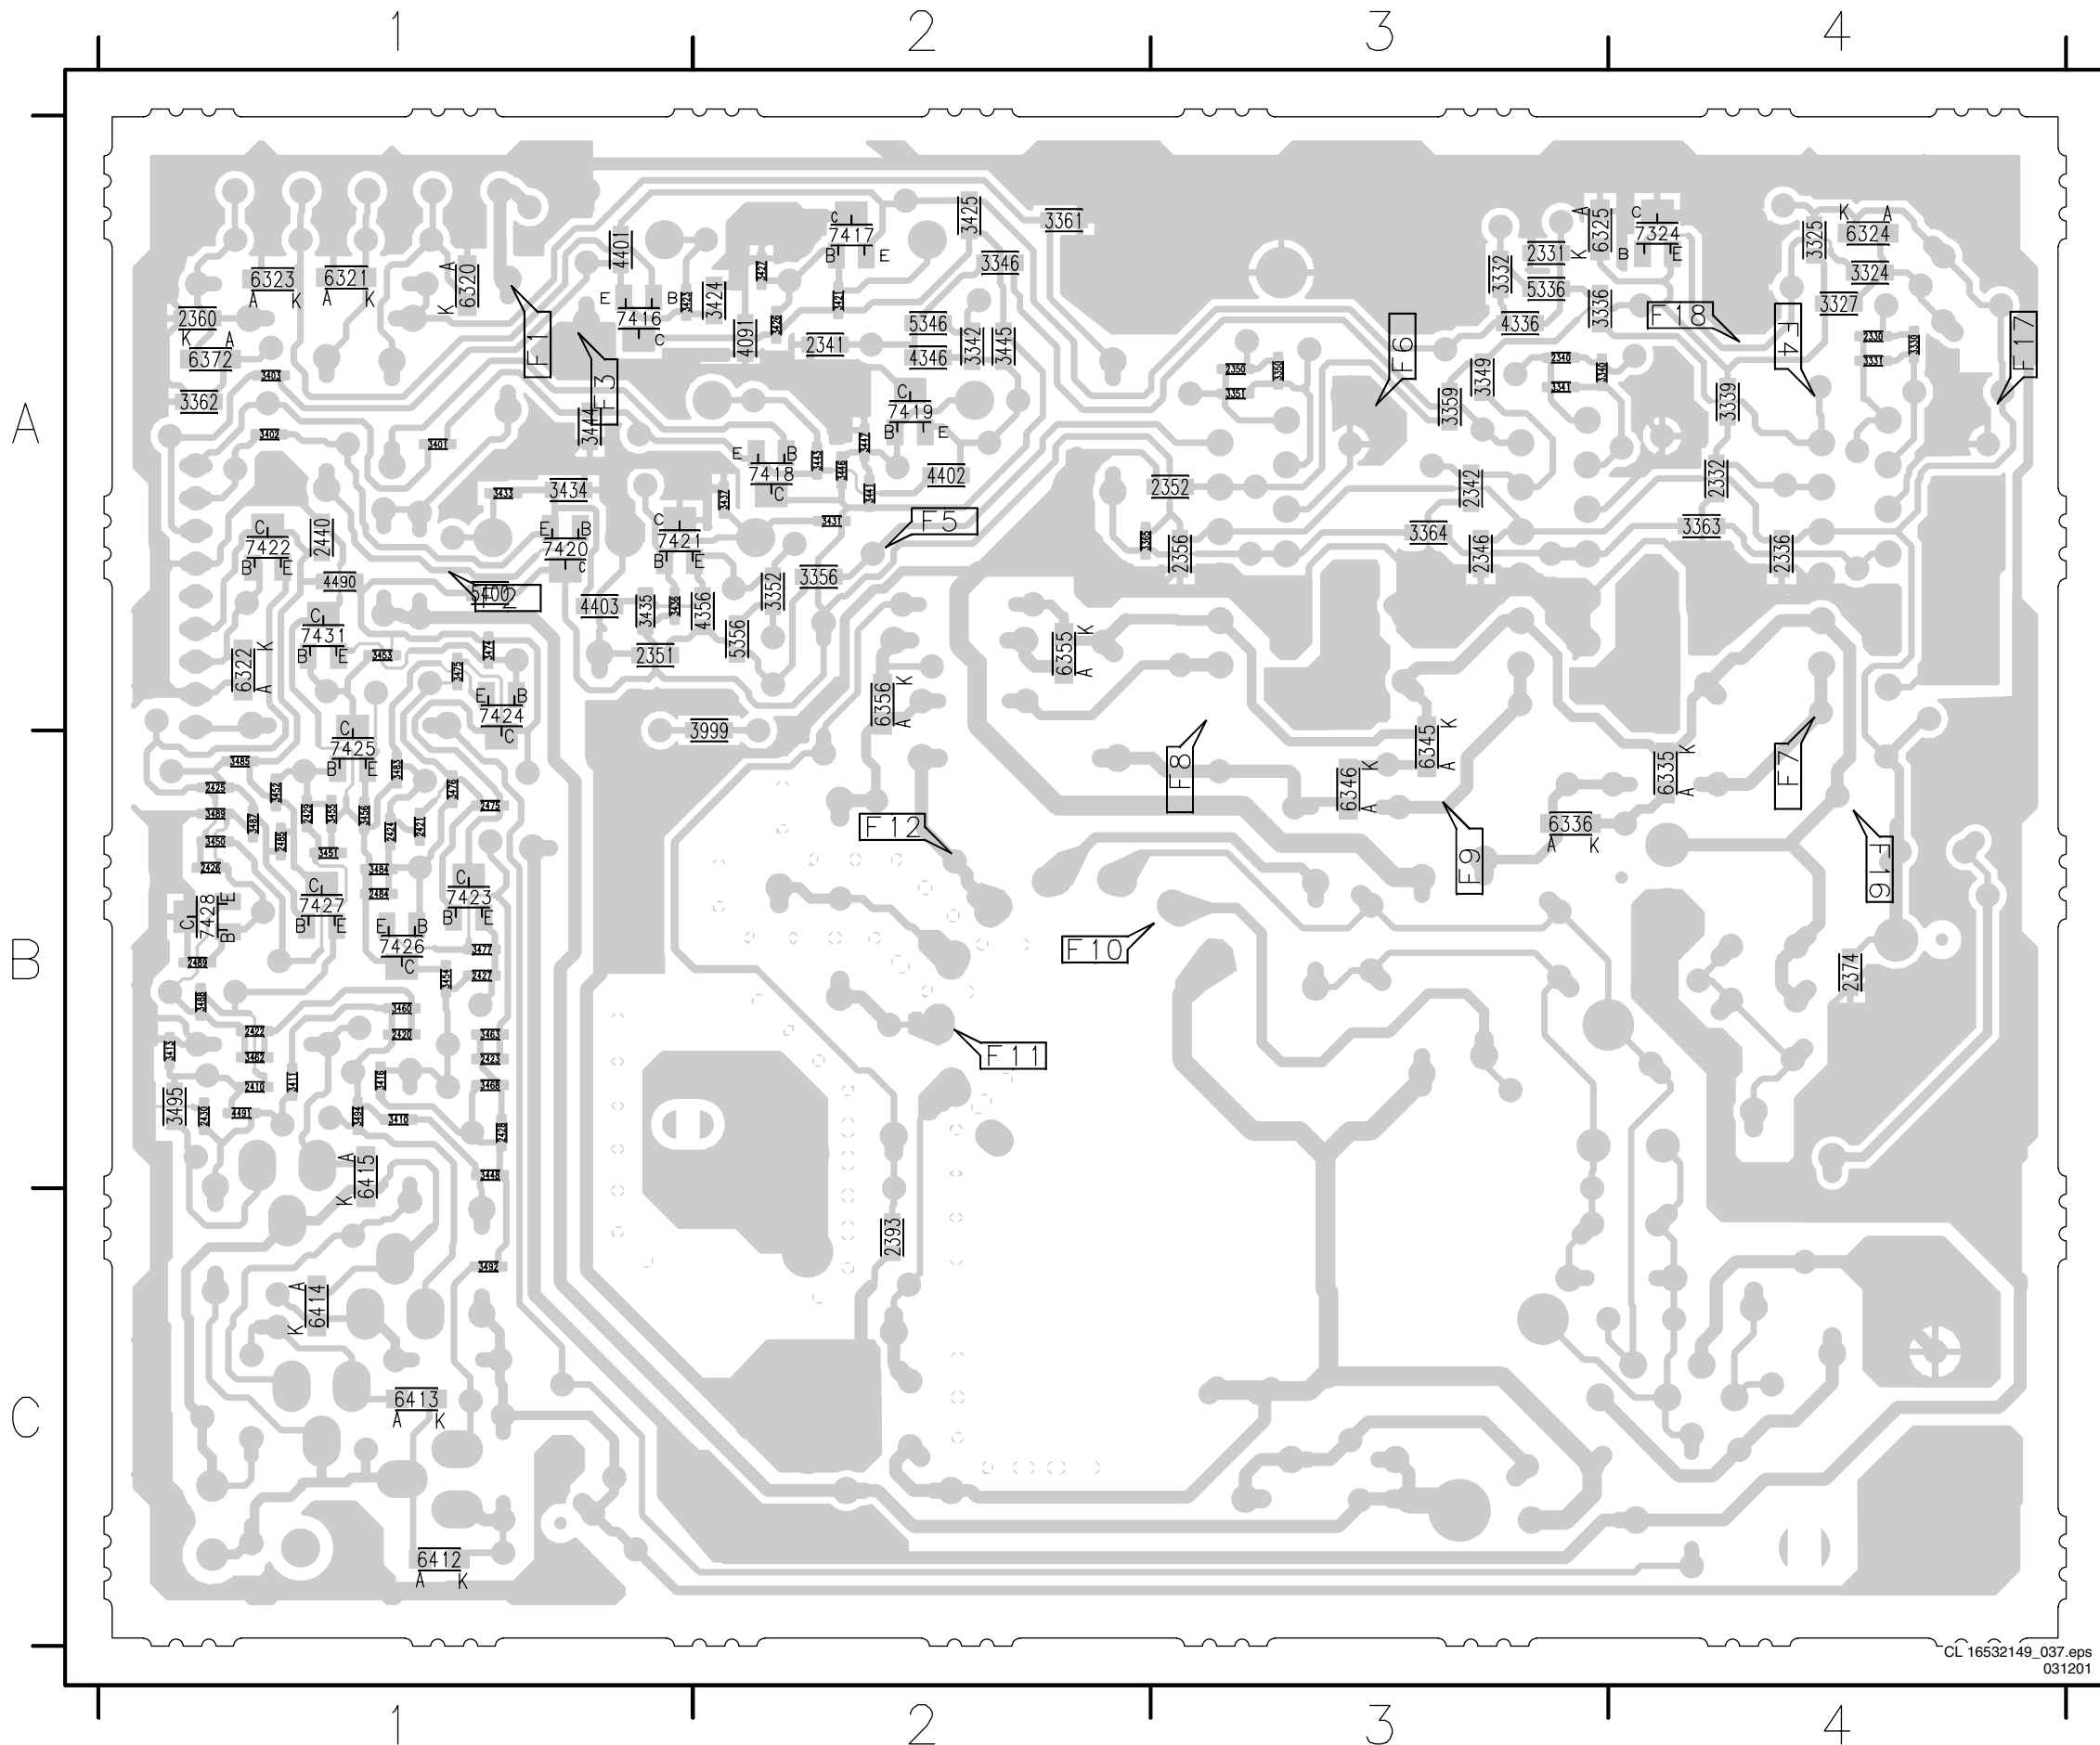

2330	A4	3433	A1	7417	A2
2331	A3	3434	A1	7418	A2
2332	A4	3435	A1	7419	A2
2336	A4	3436	A1	7420	A1
2340	A3	3437	A2	7421	A1
2341	A2	3441	A2	7422	A1
2342	A3	3443	A2	7423	B1
2346	A3	3444	A1	7424	B1
2350	A3	3445	A2	7425	B1
2351	A1	3446	A2	7426	B1
2352	A3	3447	A2	7427	B1
2356	A3	3448	B1	7428	B1
2360	A1	3450	B1	7431	A1
2374	B4	3451	B1		
2393	C2	3452	B1		
2410	B1	3453	A1		
2420	B1	3454	B1		
2421	B1	3455	B1		
2422	B1	3456	B1		
2423	B1	3460	B1		
2424	B1	3462	B1		
2425	B1	3463	B1		
2426	B1	3468	B1		
2427	B1	3474	A1		
2428	B1	3475	A1		
2429	B1	3476	B1		
2430	B1	3477	B1		
2440	A1	3483	B1		
2475	B1	3484	B1		
2484	B1	3485	B1		
2485	B1	3487	B1		
2489	B1	3488	B1		
3324	A4	3489	B1		
3325	A4	3492	C1		
3327	A4	3494	B1		
3330	A4	3495	B1		
3331	A4	3999	A2		
3332	A3	4091	A2		
3336	A3	4336	A3		
3339	A4	4346	A2		
3340	A3	4356	A2		
3341	A3	4401	A1		
3342	A2	4402	A2		
3346	A2	4403	A1		
3349	A3	4490	A1		
3350	A3	4491	B1		
3351	A3	5336	A3		
3352	A2	5346	A2		
3356	A2	5356	A2		
3359	A3	5400	A1		
3361	A2	6320	A1		
3362	A1	6321	A1		
3363	A4	6322	A1		
3364	A3	6323	A1		
3365	A2	6324	A4		
3401	A1	6325	A4		
3402	A1	6335	B4		
3403	A1	6336	B3		
3410	B1	6345	B3		
3411	B1	6346	B3		
3413	B1	6355	A2		
3416	B1	6356	A2		
3421	A2	6372	A1		
3423	A1	6412	C1		
3424	A2	6413	C1		
3425	A2	6414	C1		
3426	A2	6415	B1		
3427	A2	7324	A4		
3431	A2	7416	A1		


DC Shift Panel

0393 A1 2031 B3 2033 B2 3031 A3 3040 C4 6030 A2 9030 B3
 2030 A2 2032 B3 3030 C4 3032 B3 5030 B4 6033 C2 9031 B3

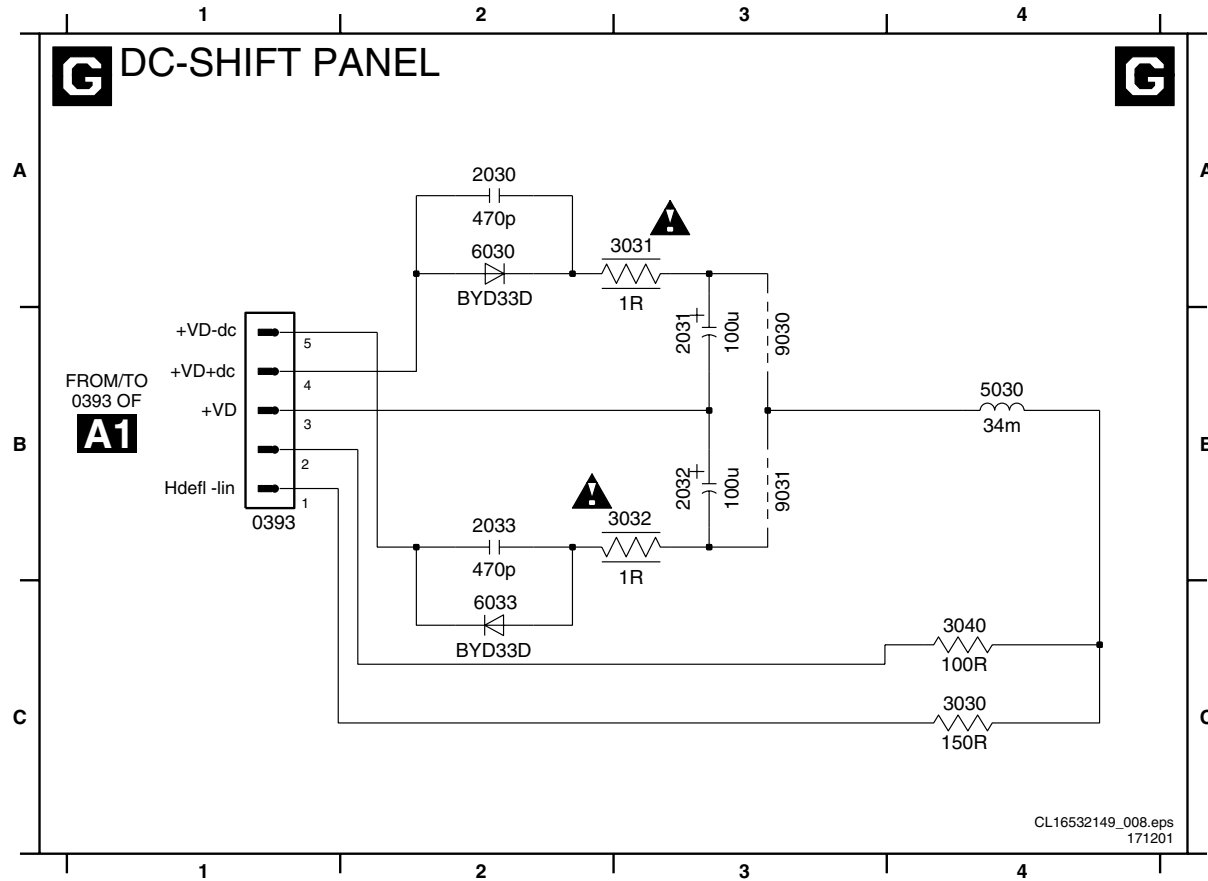

CL16532149_008.eps
171201

Layout DC Shift Panel

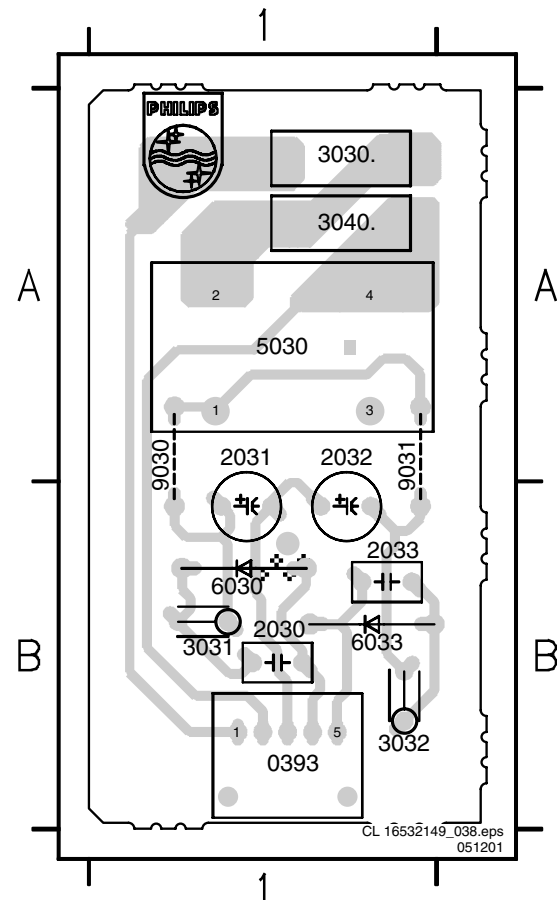


0393 B1
 2030 B1
 2031 B1
 2032 B1
 2033 B1
 3030 A1
 3031 B1
 3040 A1
 3040 A1
 5030 A1
 6030 B1
 6033 B1
 9030 B1
 9031 B1

CL 16532149_038.eps
051201


DAF Panel

0317 B1 0396 A1 2800 B2 2812 E2 2816 C2 3810 C3 3814 D4 3899 B4 6811 E1 9801 A4
 0340 C4 0397 A4 2803 B3 2813 E3 2890 B3 3811 D3 3815 D3 3998 C3 6812 D3
 0391 B4 0398 D1 2810 C1 2814 E4 2891 B3 3812 E4 3897 B1 5800 A2 7810 D4
 0394 E1 1392 A4 2811 E1 2815 E3 3050 C1 3813 E2 3898 A4 6810 C2 9800 B4

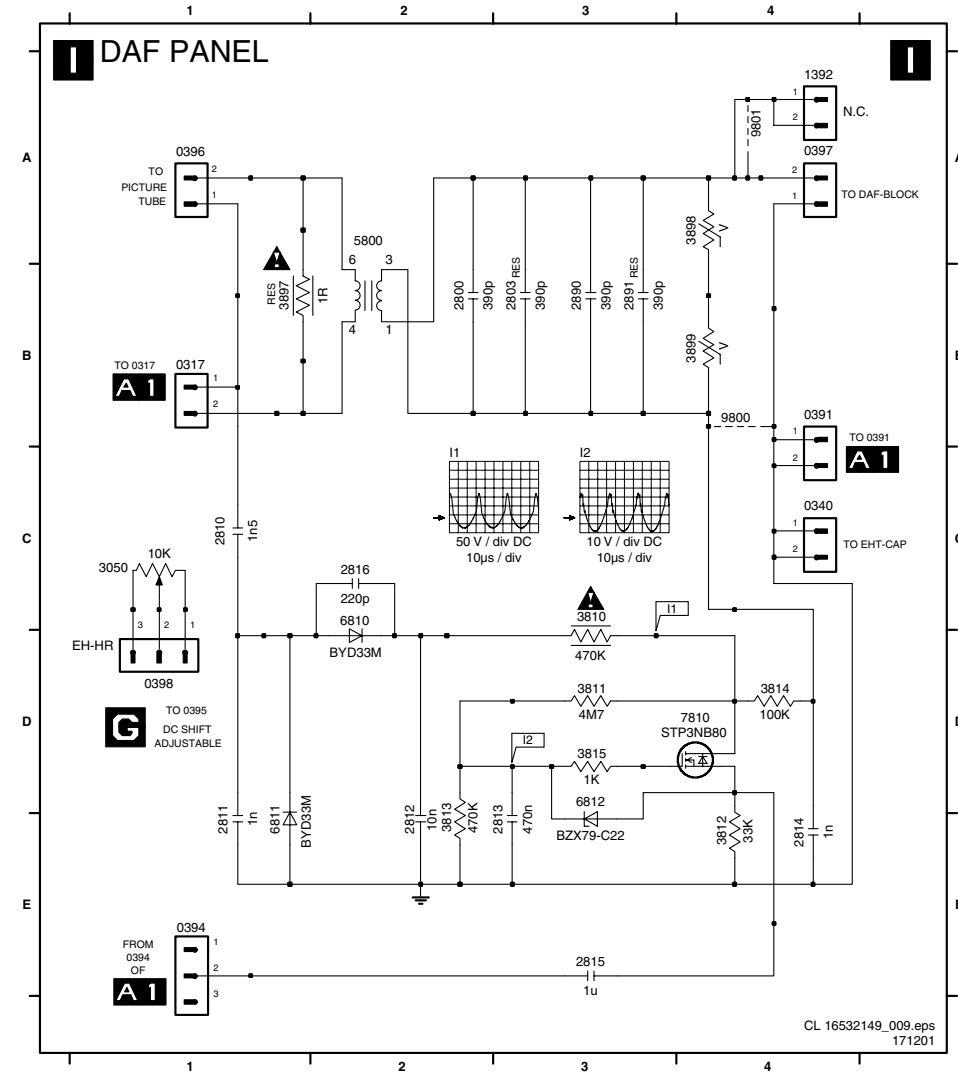

CL 16532149_009.eps
171201

Layout DAF Panel


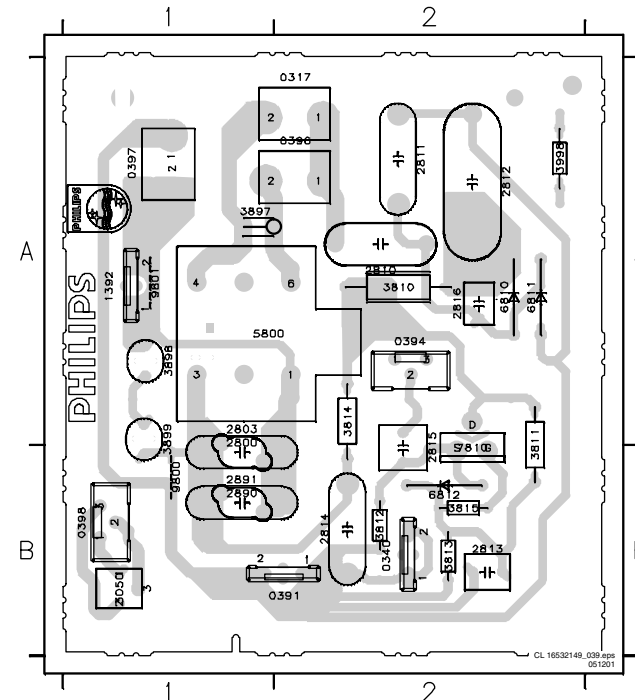


0317 A2
 0340 B2
 0391 B2
 0394 A2
 0396 A2
 0397 A1
 0398 B1
 1392 A1
 2800 A1
 2803 A1
 2810 A2
 2811 A2
 2812 A2
 2813 B2
 2814 B2
 2815 A2
 2816 A2
 2817 A2
 2818 B2
 2819 B1
 3050 B1
 3810 A2
 3811 A2
 3812 B2
 3813 B2
 3814 A2
 3815 B2
 3897 A1
 3898 A1
 3899 A1
 3998 A1
 5800 A2
 6810 A2
 6811 A2
 6812 B2
 7810 A2
 9800 B1
 9801 A1

CL 16532149_039.eps
051201


Small Signal Board: Tuner, IF, Source Selection and Video Processing

0310 H2	1109 B6	2105 B5	2116 B2	2127 A4	2511 C13	2528 E15	2539 A7	2554 F11	2562 I14	2788 H4	3111 F5	3119 D7	3136 D8	3145 F8	3521 E14	3552 G15	3566 G10	4102 E8	4111 G7	5102 B4	5502 A8	6103 F4	7104 G4	7113 A2
1101 D3	1525 E14	2106 C4	2117 D9	2501 F9	2512 C13	2532 A13	2540 B8	2555 G11	2563 I13	3102 A2	3112 G5	3121 G7	3137 D9	3146 A2	3530 B11	3553 G15	3567 E11	4103 B9	4112 B1	5103 D4	5540 G10	6104 F4	7105 G6	7501 D11
1102 B3	1526 E14	2107 C4	2118 D8	2502 F10	2520 E13	2533 B10	2541 B8	2556 H11	2564 I14	3103 B2	3113 G4	3122 G6	3138 E8	3148 E7	3531 B12	3554 F15	3568 F11	4104 B3	4113 F7	5104 D5	5553 H15	6105 C5	7106 G7	7502 E9
1104 E6	1527 E15	2108 D4	2119 A10	2503 F10	2521 F14	2534 A13	2545 F9	2557 G12	2565 F11	3104 B1	3114 G5	3123 G6	3139 E8	3149 F7	3532 A13	3556 H14	3569 F11	4105 G6	4114 A3	5105 E7	5559 I12	6106 A2	7107 F8	7555 G15
1105 F6	1528 E15	2109 C8	2120 A3	2504 F10	2522 E14	2535 B10	2550 G12	2558 I12	2566 F9	3106 C4	3115 G5	3124 B7	3140 B1	3152 B9	3538 A8	3557 G12	3571 D14	4107 G7	4803 I9	5106 E8	5560 F13	6107 A2	7108 F7	7560 F12
1106 E7	2101 A4	2110 C9	2121 A3	2505 F10	2525 E14	2536 B10	2551 H15	2559 I12	2567 G12	3107 D5	3116 F4	3133 B5	3141 B1	3153 B9	3545 F9	3558 H12	3590 G15	4108 G7	4804 H10	5108 C8	5562 I12	7101 D5	7109 E7	7561 F11
1107 E8	2102 B4	2111 C8	2122 D9	2506 F10	2526 E14	2537 B10	2552 H15	2560 F12	2569 H3	3109 E4	3117 F5	3134 D5	3142 B10	3154 A2	3546 G9	3560 F9	3999 A6	4109 G8	4809 G14	5109 C2	6101 B4	7102 E5	7111 D9	
1108 D6	2104 B4	2112 A10	2125 B2	2510 C13	2527 E15	2538 A7	2553 F15	2561 F12	2570 H11	3110 F4	3118 C9	3135 G8	3143 A10	3155 A2	3551 G14	3565 G10	4101 E4	4110 E7	5101 A4	5501 A8	6102 E4	7103 G5	7112 A9	

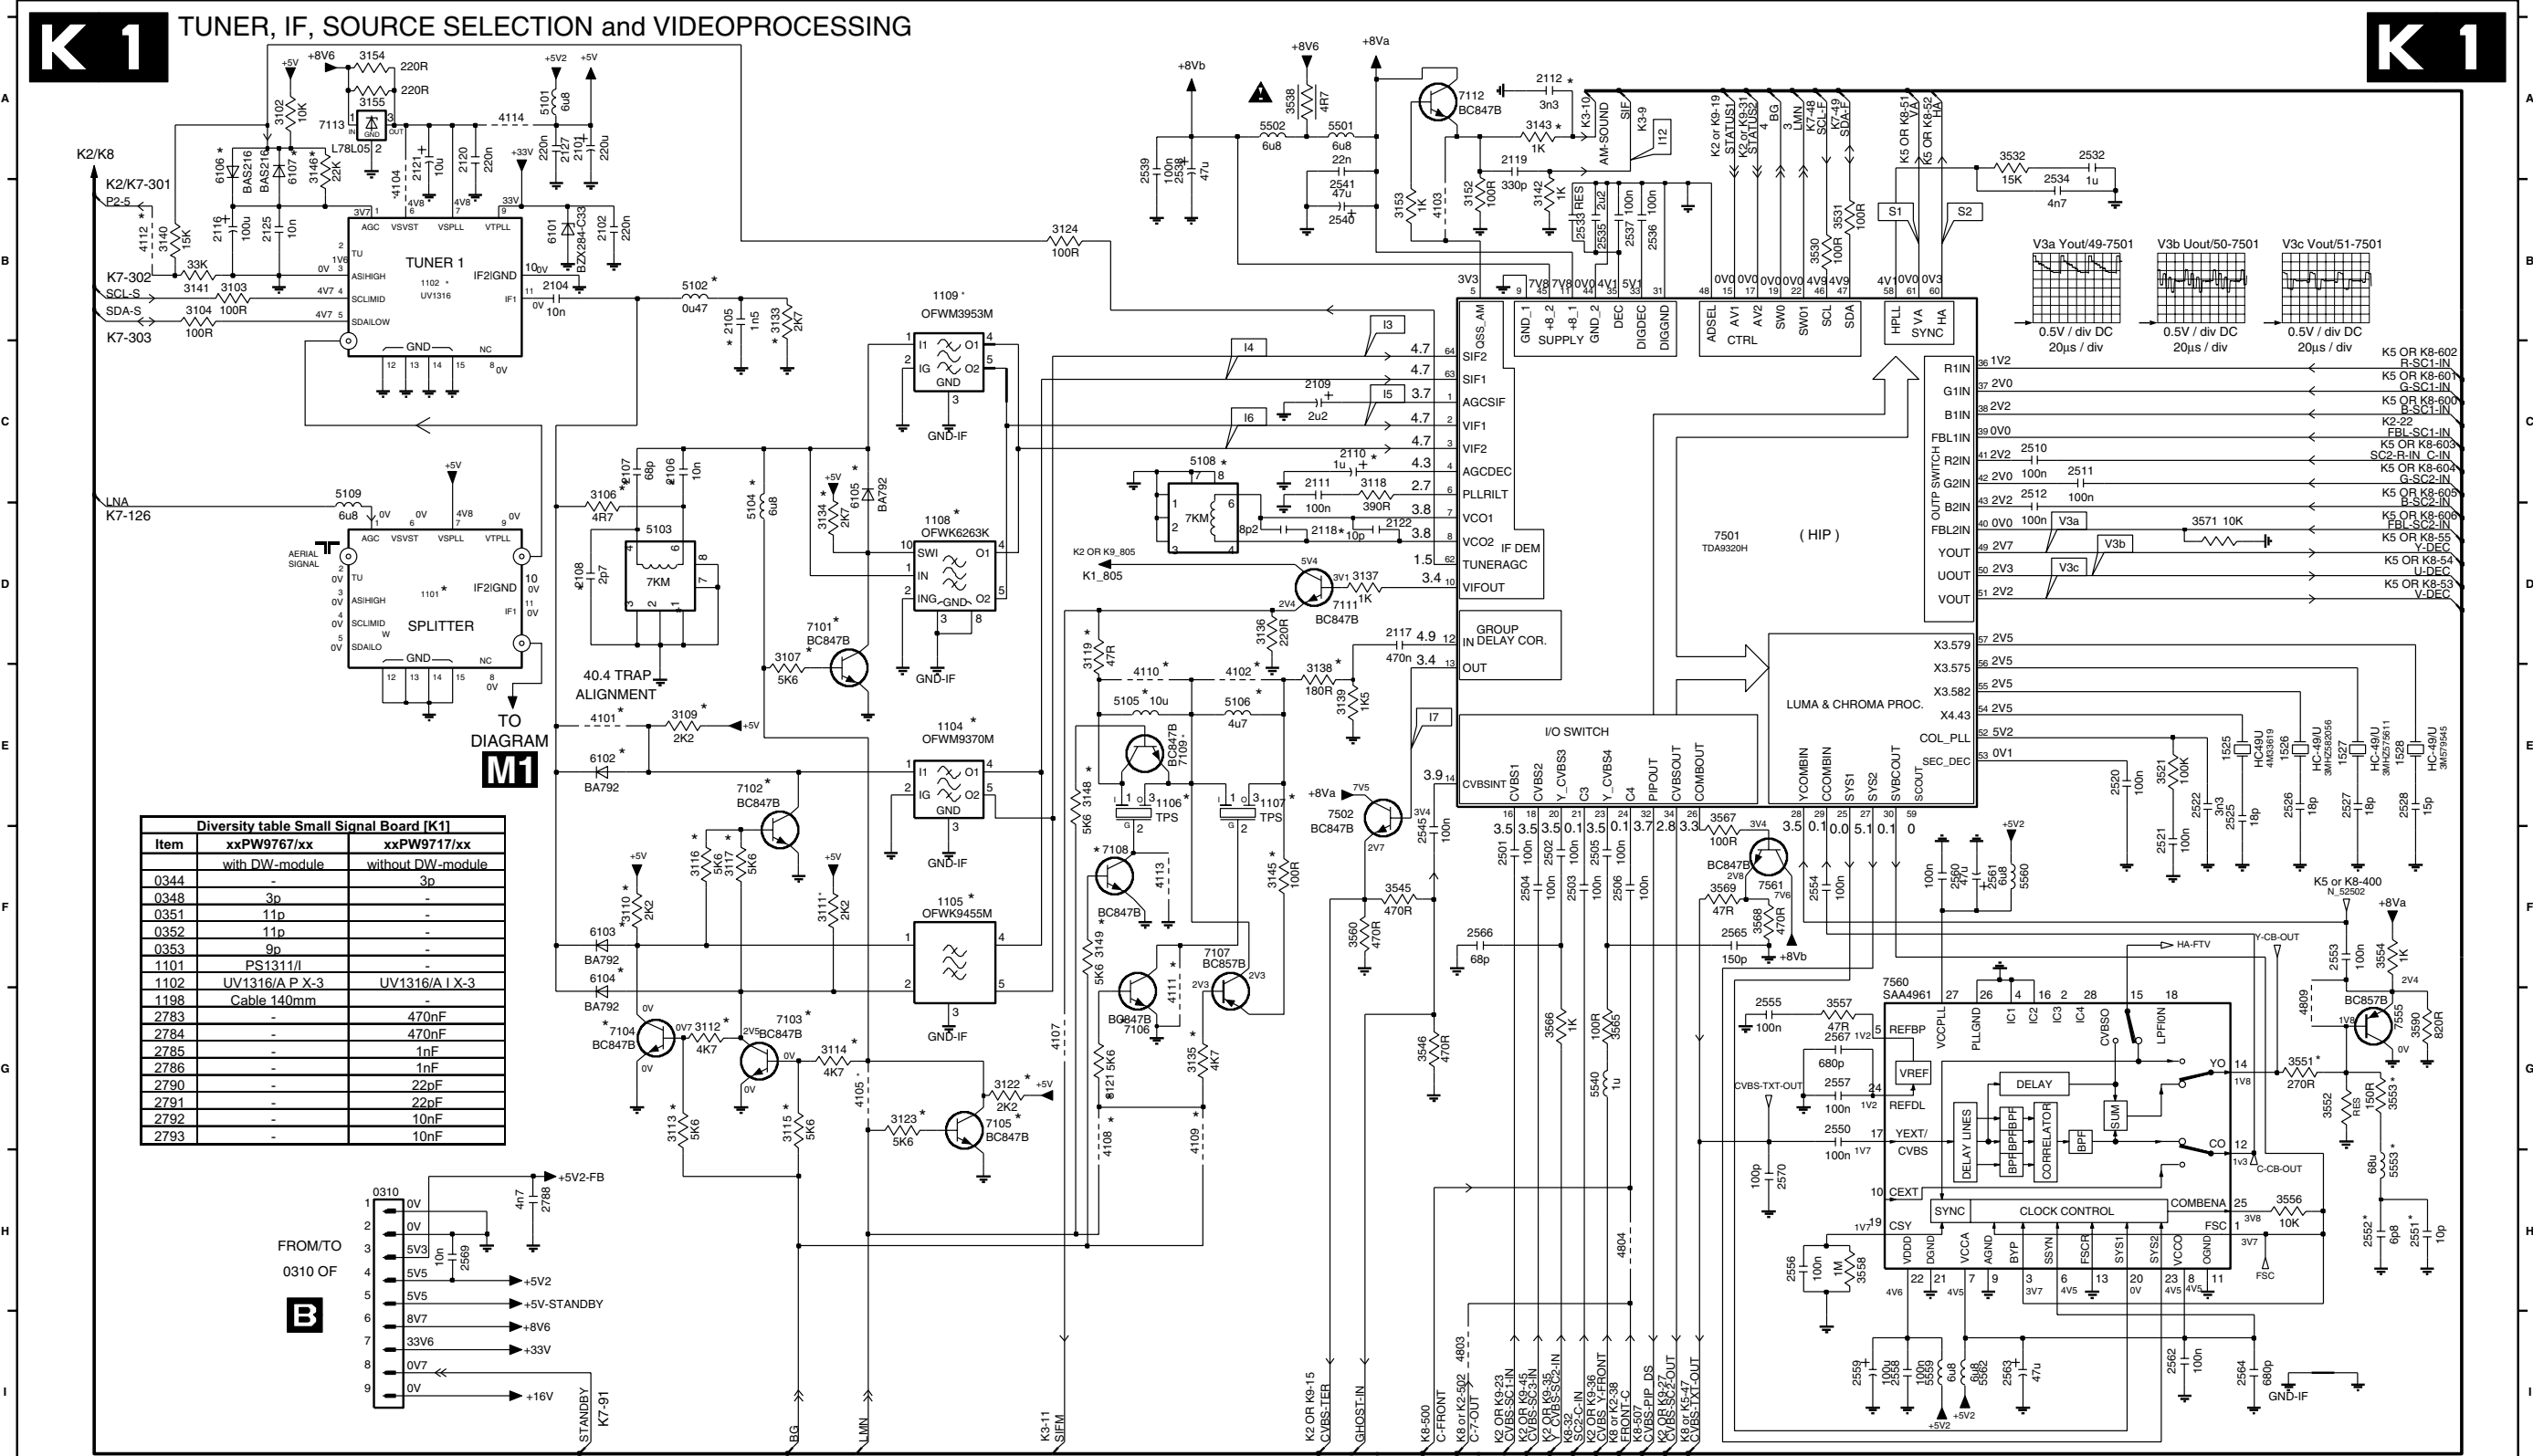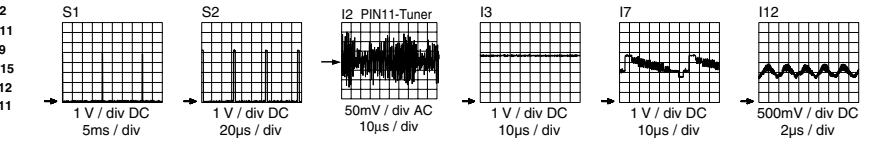


Diversity table Small Signal Board [K1]

Item	xxPW9767/xx	xxPW9717/xx
0344	with DW-module	without DW-module
0348	3p	-
0351	11p	-
0352	11p	-
0353	9p	-
1101	PS1311/1	-
1102	UV1316/A P X-3	UV1316/A1 X-3
1198	Cable 140mm	-
2783	-	470nF
2784	-	470nF
2785	-	1nF
2786	-	1nF
2790	-	22pF
2791	-	22pF
2792	-	10nF
2793	-	10nF

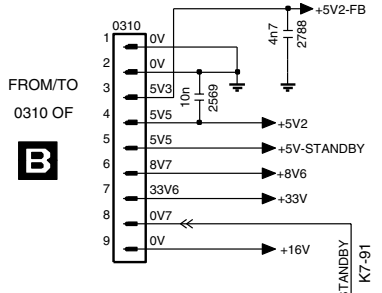


Small Signal Board: Input / Output

0333 F7	2126 H8	2215 B7	2228 H2	3204 C2	3215 C4	3227 G12	3241 C11	3252 F8	3270 E11	4228 G6	6206 B4	6216 B7	6226 D10	6236 G2	6261 F1
0376 H8	2202 B2	2216 B7	2229 H2	3205 D1	3216 C4	3228 E6	3242 C12	3253 F8	3271 F11	4229 B5	6207 C4	6217 C7	6227 D11	6237 H2	7200 D2
0381 C2	2203 B2	2217 B11	2235 F1	3206 D2	3218 C3	3229 F6	3243 F9	3254 E4	3272 G1	4230 B5	6208 B5	6218 C7	6228 E10	6239 C10	7201 E6
1200-A E1	2204 D2	2218 G6	2240 E11	3207 D2	3219 B4	3230 F6	3244 B11	3255 F4	3273 G11	4235 D12	6209 C5	6219 D7	6229 E4	6240 E12	7203 F9
1200-B E2	2205 D2	2219 C11	2241 F11	3208 E12	3220 B3	3231 H12	3245 C11	3256 H4	3274 G11	6200 B1	6210 C3	6220 B11	6230 E4	6241 E12	7204 F8
1200-C E2	2206 B4	2220 C11	3147 G9	3209 E3	3221 B6	3232 E7	3246 B11	3257 G2	3280 E2	6201 C1	6211 D3	6221 B11	6231 F4	6242 F11	
1201-A A3	2209 C4	2221 F7	3200 B1	3210 D4	3222 B6	3233 G1	3247 F8	3258 G2	3826 E1	6202 B2	6212 D3	6222 C11	6232 F4	6243 F11	
1201-B E3	2210 C4	2222 F9	3201 B1	3211 D4	3223 B7	3235 D11	3248 F8	3264 F4	4201 C6	6203 C2	6213 E3	6223 B12	6233 H3	6244 H11	
1202-A A10	2212 E6	2224 E4	3202 B2	3212 E12	3224 B7	3236 D11	3249 F8	3265 G4	4226 H6	6204 D2	6214 B6	6224 C12	6234 G1	6259 C2	
1202-B E10	2213 E6	2226 F4	3203 B2	3213 C3	3225 D6	3240 C11	3250 F7	3266 F8	4227 H6	6205 B4	6215 C6	6225 C10	6235 H1	6260 F1	

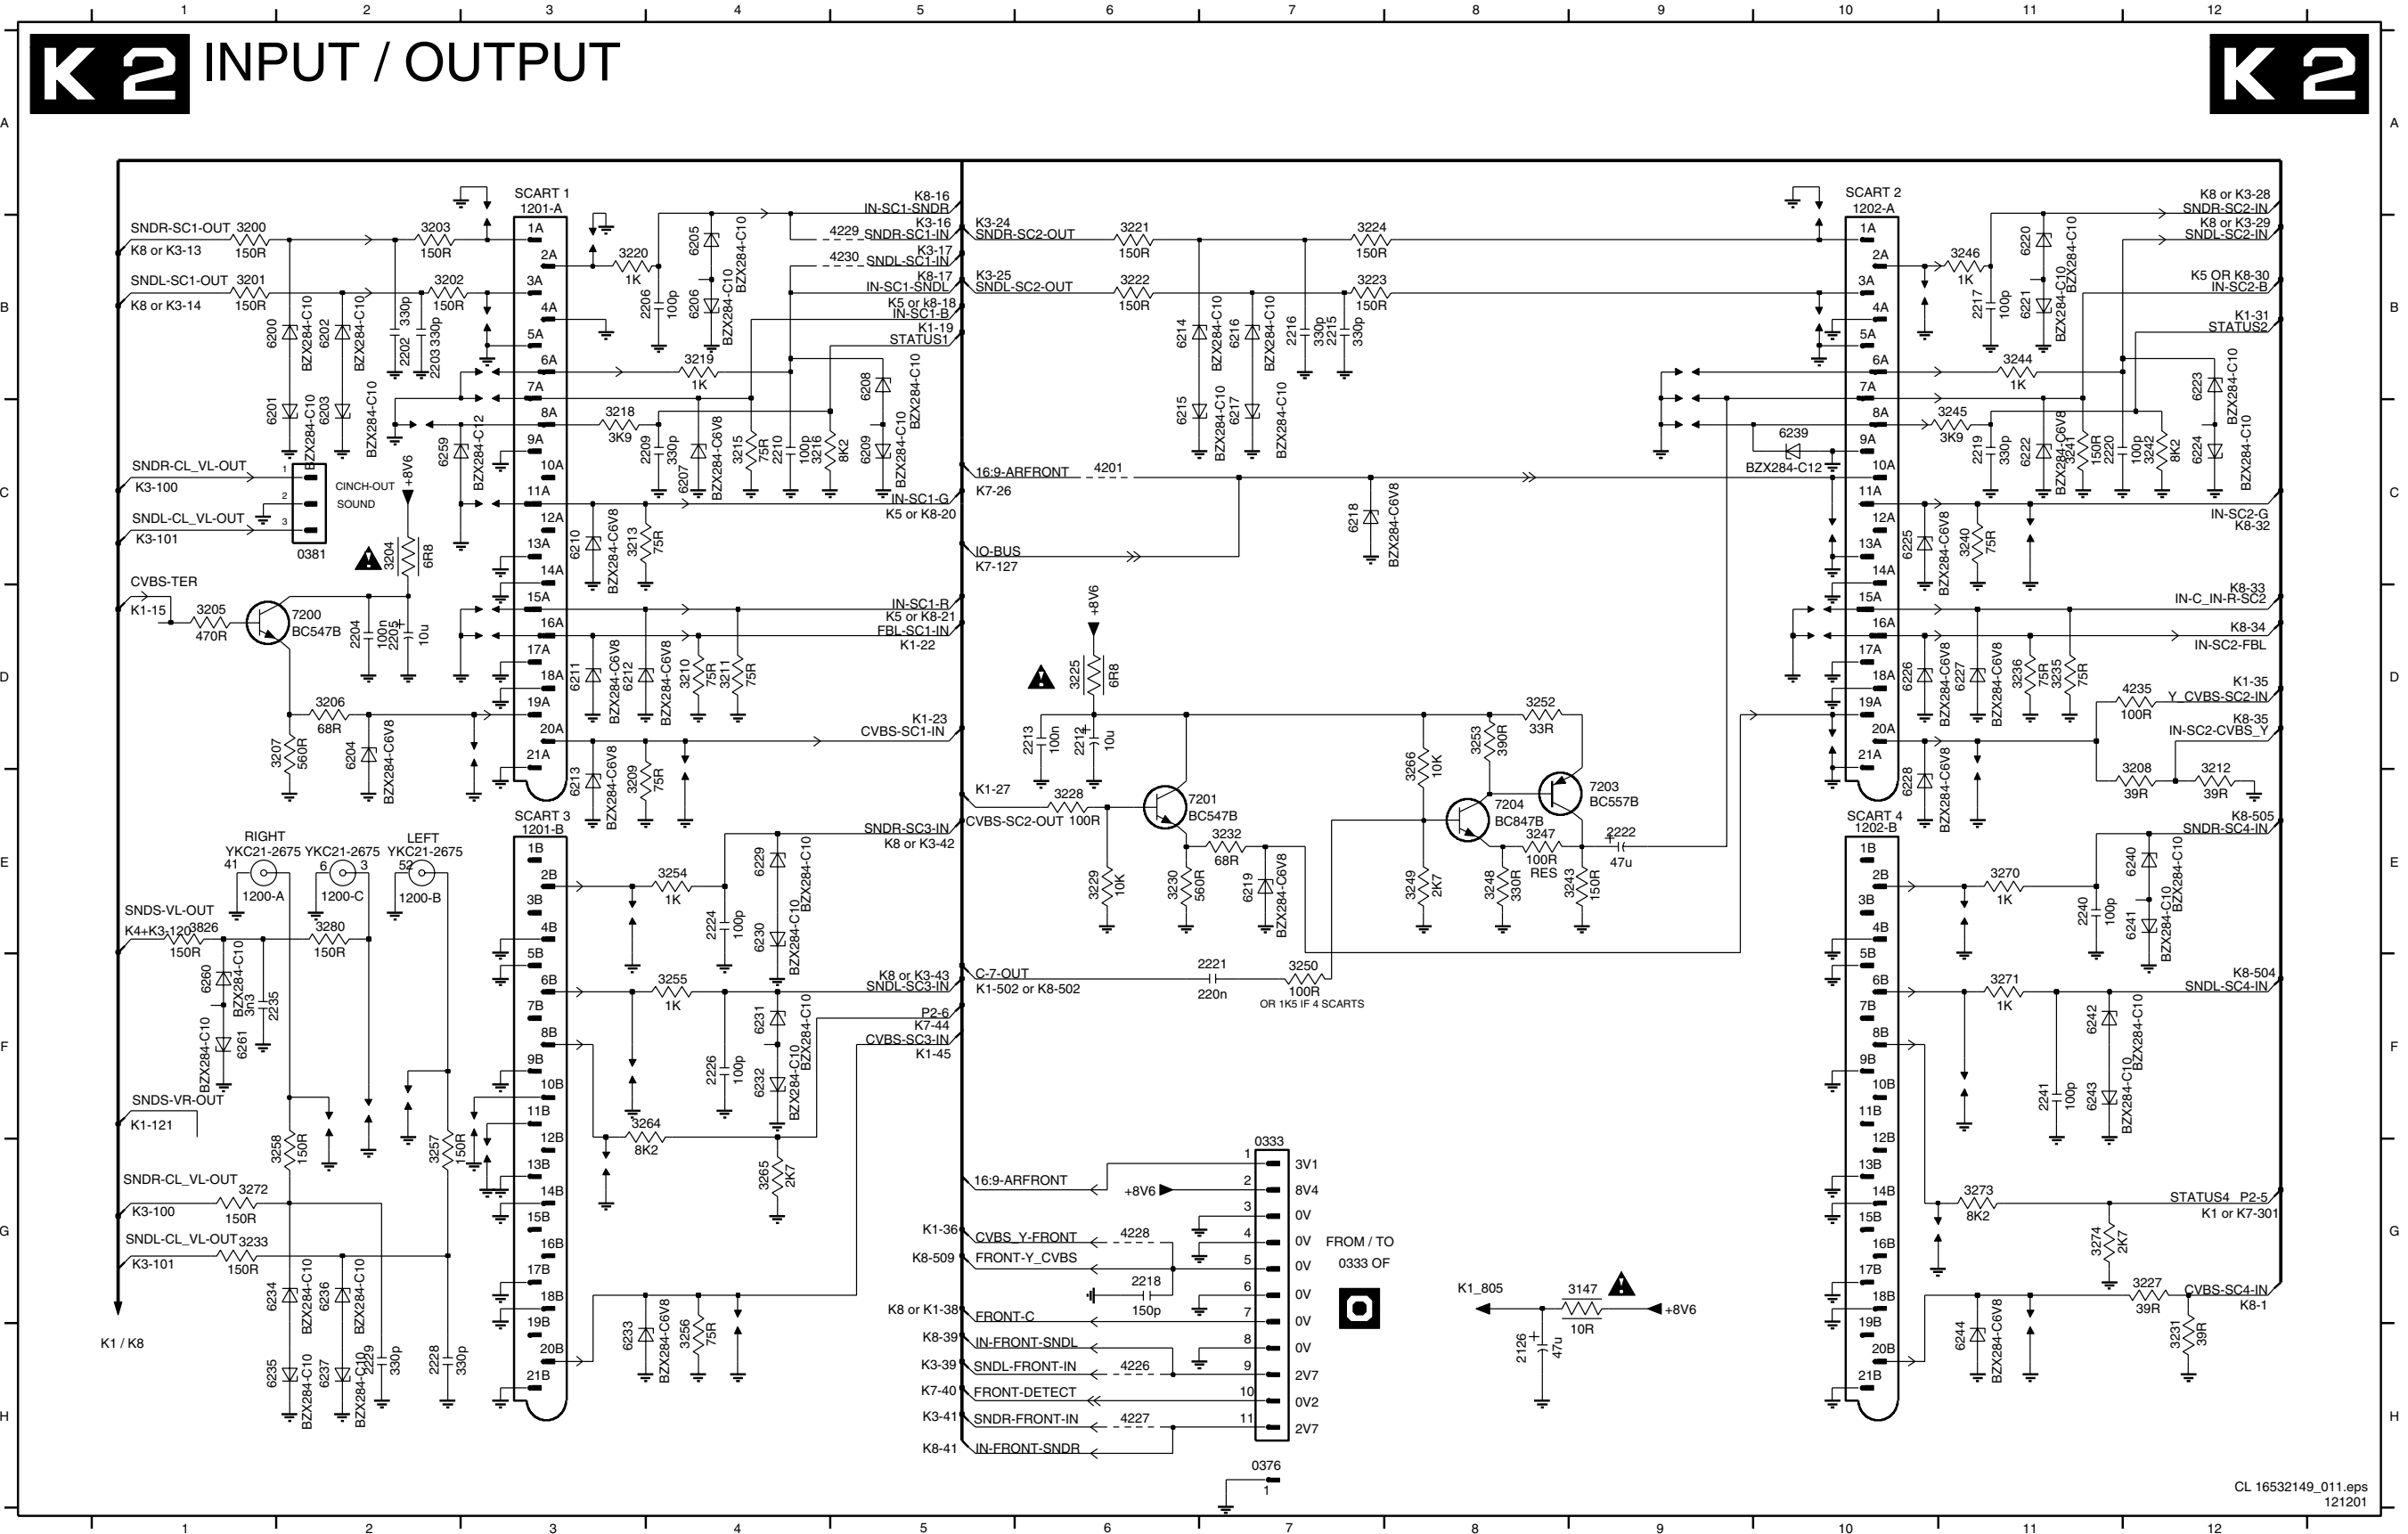

Small Signal Board: Sound Processing

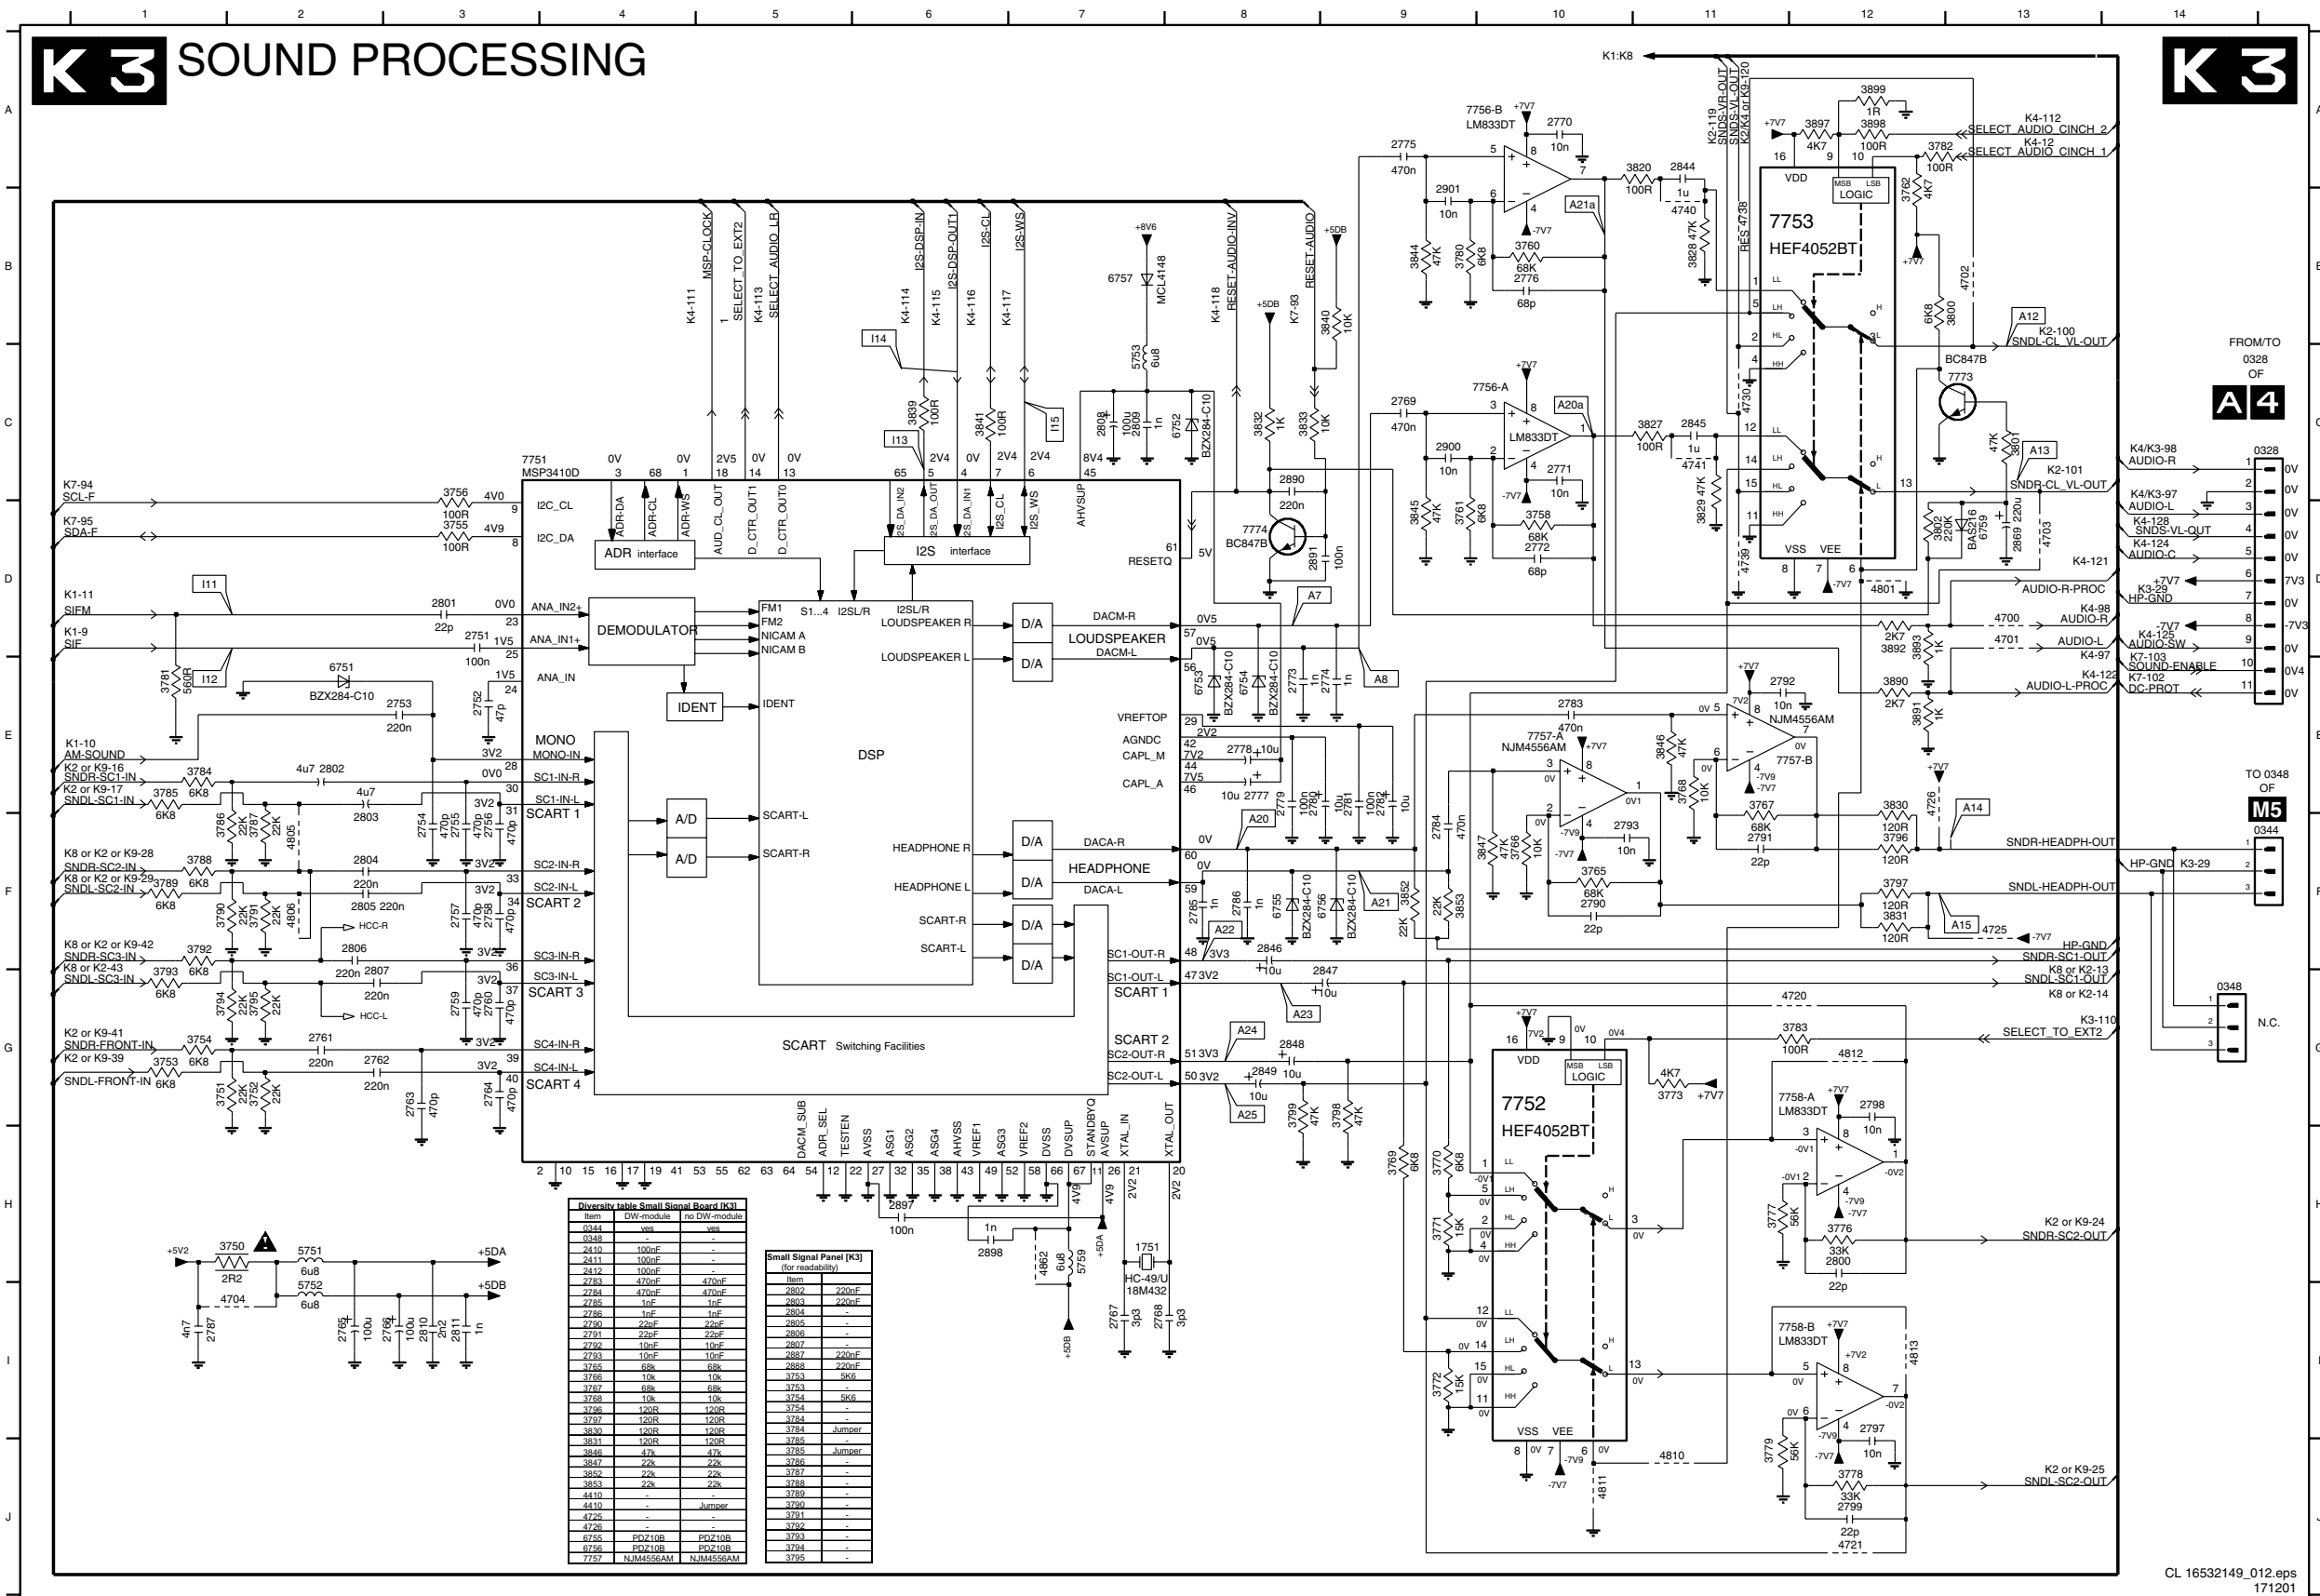


Diversity table Small Signal Board (K3)

Item	DW-module	no DW-module
0344	yes	yes
2410	100nF	-
2411	100nF	-
2412	100nF	-
2783	470nF	470nF
2784	470nF	470nF
2785	1nF	1nF
2786	1nF	1nF
2787	22nF	22nF
2788	22nF	22nF
2789	22nF	22nF
2790	22nF	22nF
2791	22nF	22nF
2792	22nF	22nF
2793	10nF	10nF
3762	68k	68k
3763	68k	68k
3764	10k	10k
3765	10k	10k
3766	68k	68k
3767	68k	68k
3768	10k	10k
3769	100R	120R
3770	120R	120R
3830	120R	120R
3831	120R	120R
3832	120R	120R
3846	47k	47k
3847	22k	22k
3850	22k	22k
3853	22k	22k
4410	-	Jumper
4411	-	Jumper
4725	-	Jumper
4726	-	Jumper
6756	PDZ10R	PDZ10R
6757	PDZ10R	PDZ10R
7757	NJM4556AM	NJM4556AM

Small Signal Panel (K3) (for readability)

Item	Value
2692	220nF
2693	220nF
2804	-
2805	-
2806	-
2807	-
2808	220nF
2809	220nF
3354	5k
3355	5k
3356	5k
3357	5k
3358	5k
3359	5k
3360	5k
3361	5k
3362	5k
3363	5k
3364	5k
3365	5k
3366	5k
3367	5k
3368	5k
3369	5k
3370	5k
3371	5k
3372	5k
3373	5k
3374	5k
3375	5k
3376	5k
3377	5k
3378	5k
3379	5k
3380	5k
3381	5k
3382	5k
3383	5k
3384	5k
3385	5k
3386	5k
3387	5k
3388	5k
3389	5k
3390	5k
3391	5k
3392	5k
3393	5k
3394	5k
3395	5k

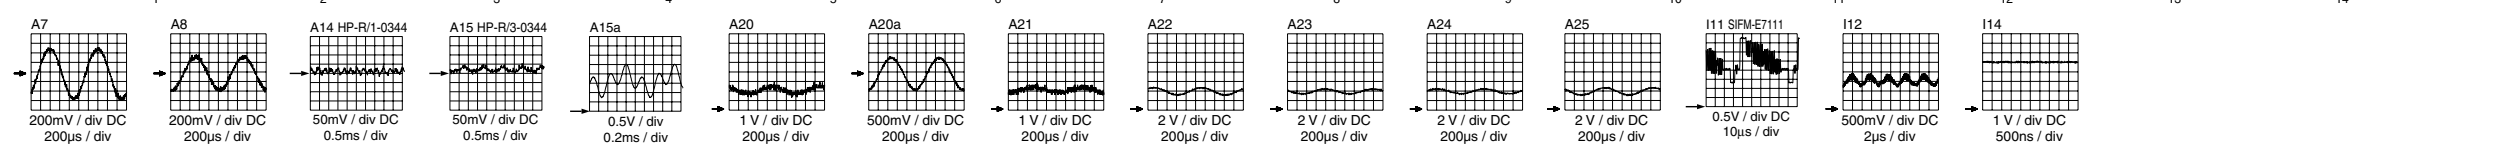

0328 C14	3845 D9	7751 C3
0344 F14	3846 E11	7752 G10
0348 G14	3847 F10	7753 B11
1751 H7	3852 F9	7756-A C9
2751 D3	3853 F9	7756-B A9
2752 E3	3890 E12	7757-A E10
2753 E3	3891 E12	7757-B E12
2754 F3	3892 D12	7758-B G11
2755 F3	3893 D12	7758-B I11
2756 F3	3897 A12	7758-B C12
2757 F3	3898 A12	7773 C13
2758 F3	3899 A12	7774 D8
2759 G3	4700 D13	
2760 G3	4701 D13	
2761 G2	4702 B13	
2762 G2	4703 D13	
2763 G3	4704 I2	
2764 G3	4720 G11	
2765 I2	4721 J12	
2766 I3	4725 F13	
2767 I7	4726 E12	
2768 I7	4730 C11	
2769 C9	4738 B11	
2770 A10	4739 D11	
2771 C10	4740 B11	
2772 D10	4741 C11	
2773 E8	4801 D12	
2774 E9	4805 F2	
2775 A9	4806 F2	
2776 B10	4810 J11	
2777 E8	4811 J10	
2778 E8	4812 G12	
2779 E8	4813 I12	
2780 E8	4862 H7	
2781 E9	5751 H2	
2782 E9	5752 I2	
2783 E10	5753 C7	
2784 F9	5759 H7	
2785 F8	6751 E2	
2786 F8	6752 C8	
2787 I1	6753 E8	
2790 F10	6754 E8	
2791 E11	6755 F8	
2792 E11	6756 F9	
2793 F10	6757 B7	
2797 I12	6759 D13	
2798 G12		
2800 H12		
2801 D3		
2802 E2		
2803 E2		
2804 F2		
2805 F2		
2806 F2		
2807 G2		
2808 C7		
2809 C7		
2810 I3		
2811 I3		
2811 I3		
2844 A11		
2845 C11		
2846 F8		
2847 F9		
2848 G8		
2849 G8		
2869 D13		
2890 C8		
2891 D8		
2897 H6		
2898 H6		
2900 C9		
2901 B9		
3750 H2		
3751 G1		
3752 G2		
3753 G1		
3754 G1		
3755 D3		
3756 C3		
3758 D10		
3760 B10		
3761 D9		
3762 B12		
3765 F10		
3766 F10		
3767 E11		
3768 E11		
3769 H9		
3770 H9		
3771 H9		
3772 I9		
3773 G11		
3776 H12		
3777 H11		
3778 J12		
3779 J11		
3780 B9		
3781 E1		
3782 A12		
3783 G11		
3784 E1		
3785 E1		
3786 F1		
3787 F2		
3788 F1		
3789 F1		
3790 F1		
3791 F2		
3792 F1		
3793 G1		
3794 G1		
3795 G2		
3796 F12		
3797 F12		
3798 G9		
3799 G8		
3800 B13		
3801 C13		
3802 D12		
3820 A11		
3827 C11		
3828 B11		
3829 D11		
3830 E12		
3831 F12		
3832 C8		
3833 C8		
3839 C6		
3840 B9		
3841 C6		
3844 B9		


CL 16532149_012.eps 171201

Small Signal Board: Sound Processing

K 4

AUDIO DOLBY
(CIRCUITRY NOT
IN USE IN MG3.2E)

K 4

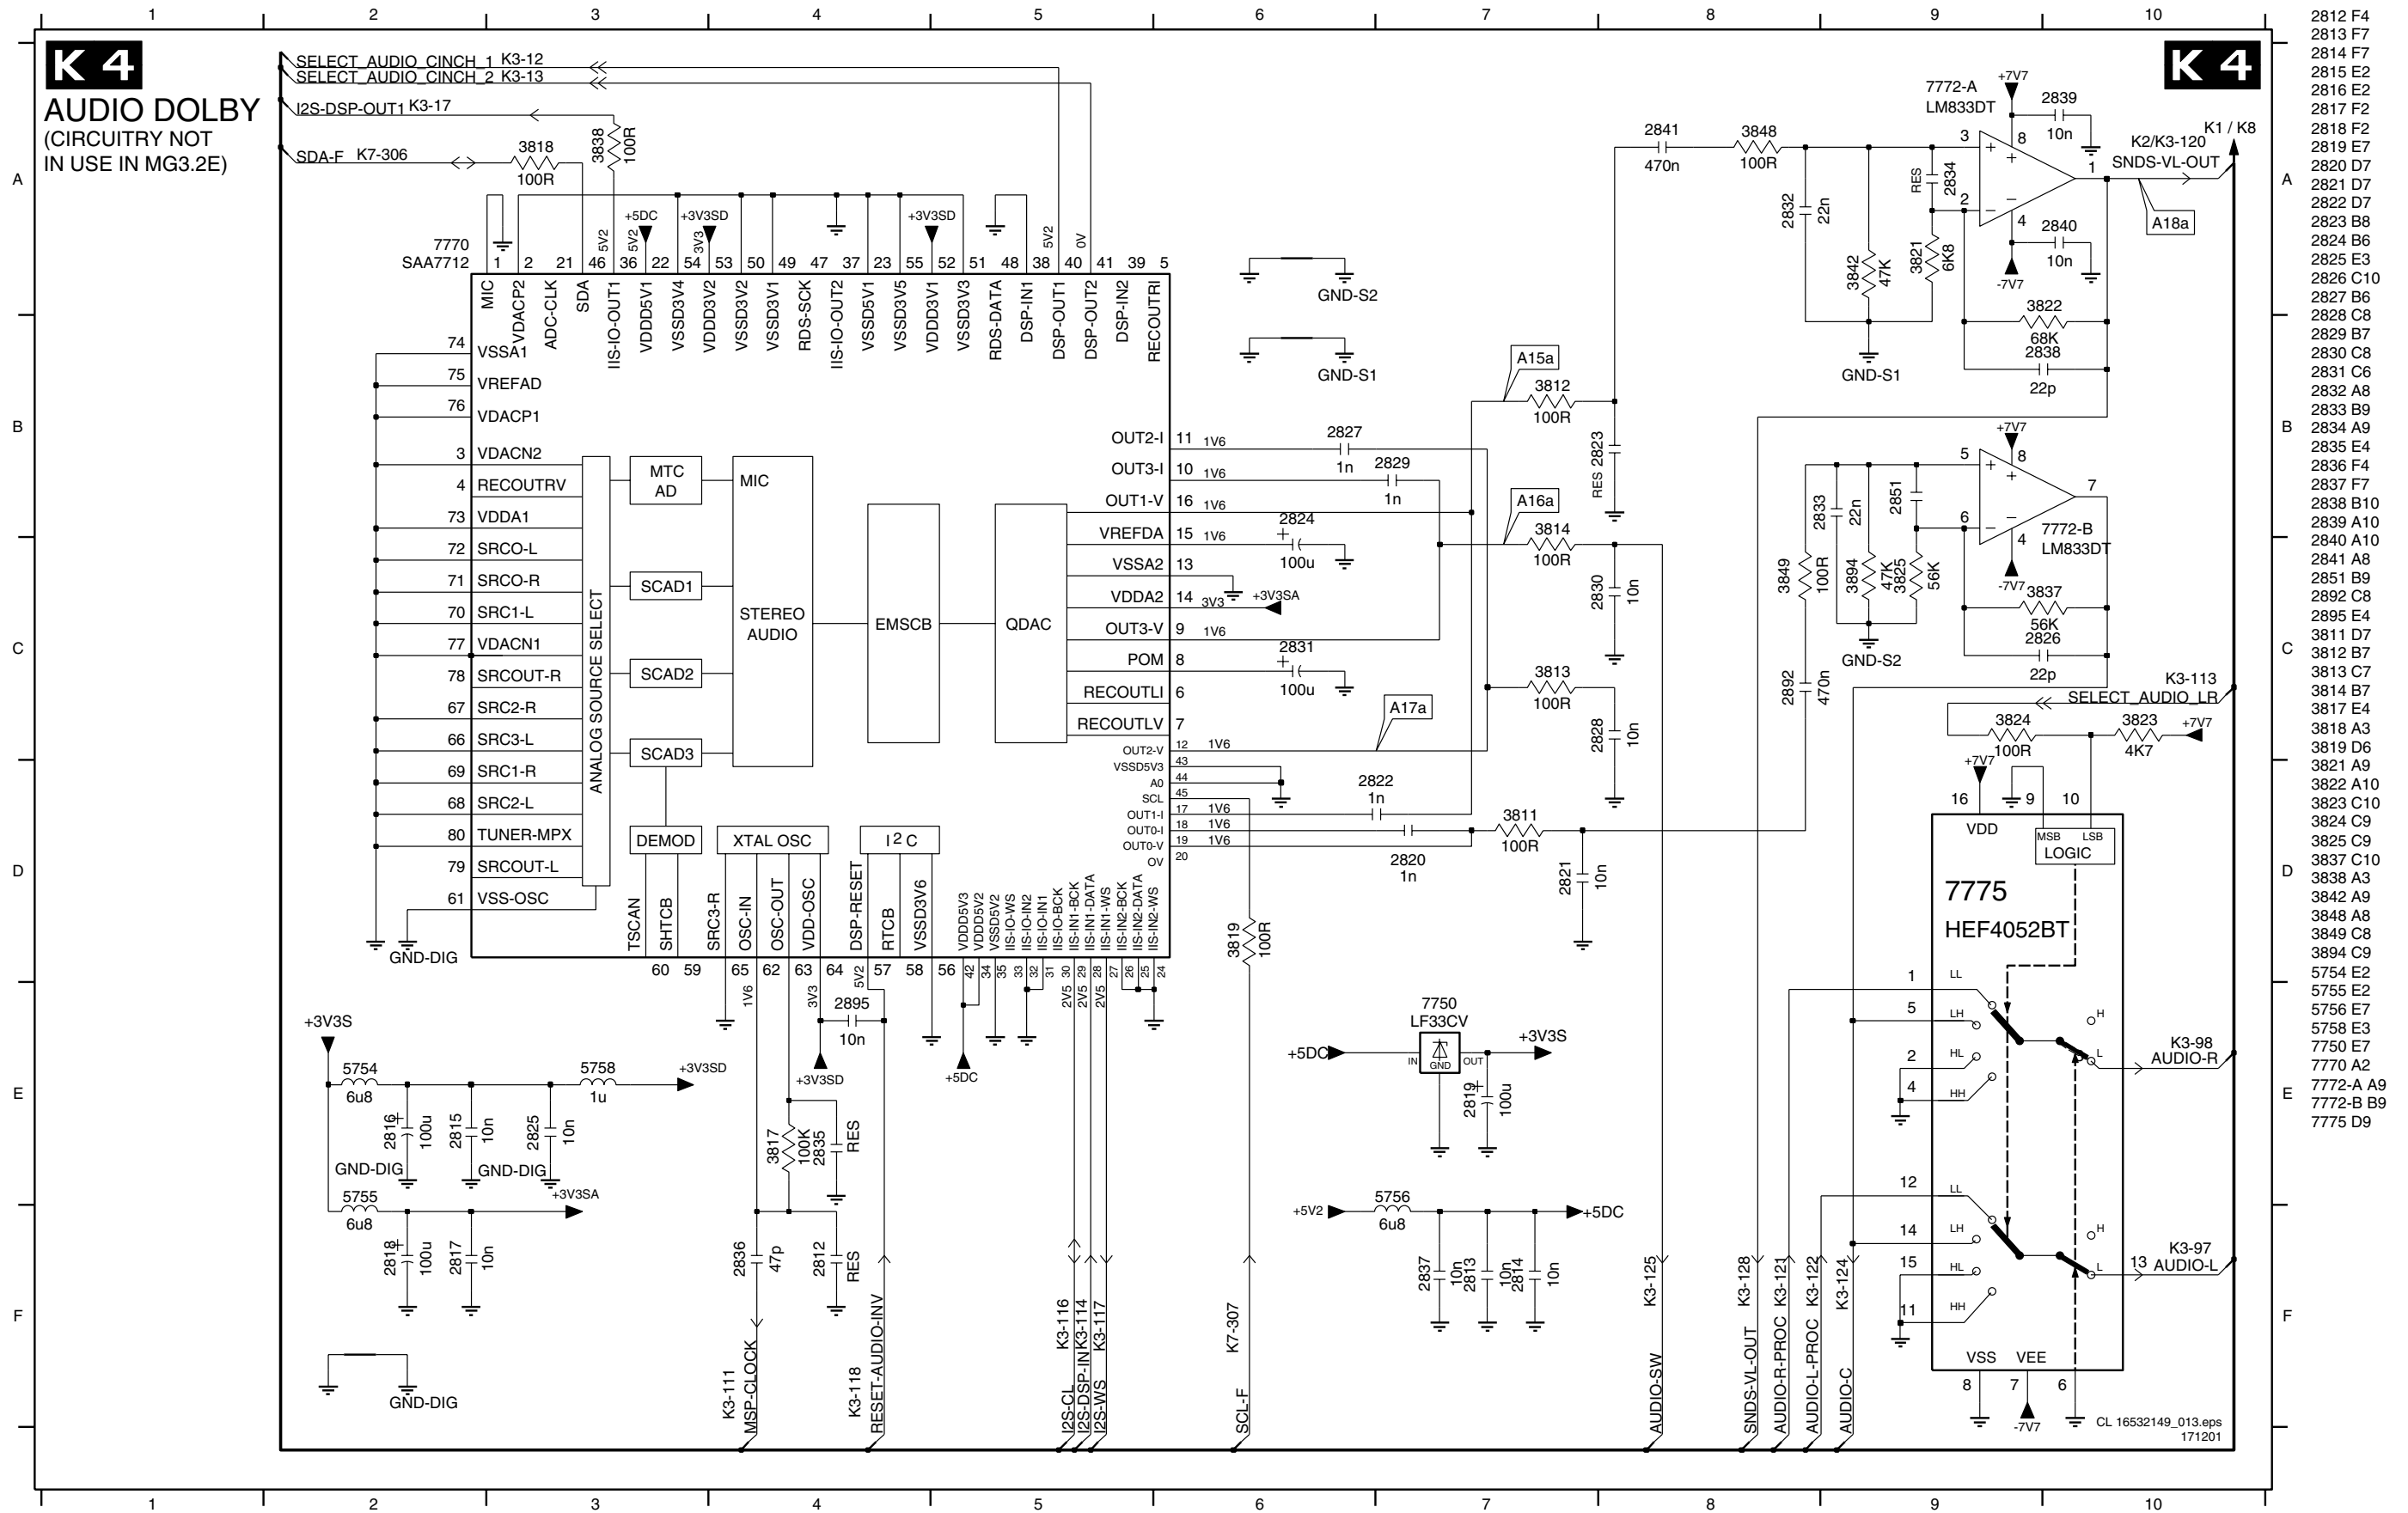



- 2812 F4
- 2813 F7
- 2814 F7
- 2815 E2
- 2816 E2
- 2817 F2
- 2818 F2
- 2819 E7
- 2820 D7
- 2821 D7
- 2822 D7
- 2823 B8
- 2824 B6
- 2825 E3
- 2826 C10
- 2827 B6
- 2828 C8
- 2829 B7
- 2830 C8
- 2831 C6
- 2832 A8
- 2833 B9
- 2834 A9
- 2835 E4
- 2836 F4
- 2837 F7
- 2838 B10
- 2839 A10
- 2840 A10
- 2841 A8
- 2842 B9
- 2843 C8
- 2844 E4
- 2845 D7
- 2846 B7
- 2847 C7
- 2848 B7
- 2849 E4
- 2850 A9
- 2851 A9
- 2852 A10
- 2853 C9
- 2854 C9
- 2855 E2
- 2856 E7
- 2857 E3
- 2858 E7
- 2859 A2
- 2860 A9
- 2861 B9
- 2862 D9

Small Signal Board: Video Control and Geometry

K6

VIDEO CONTROL & GEOMETRY

K6

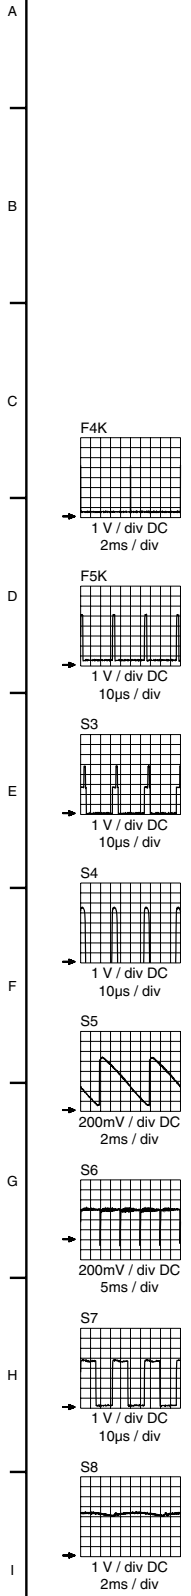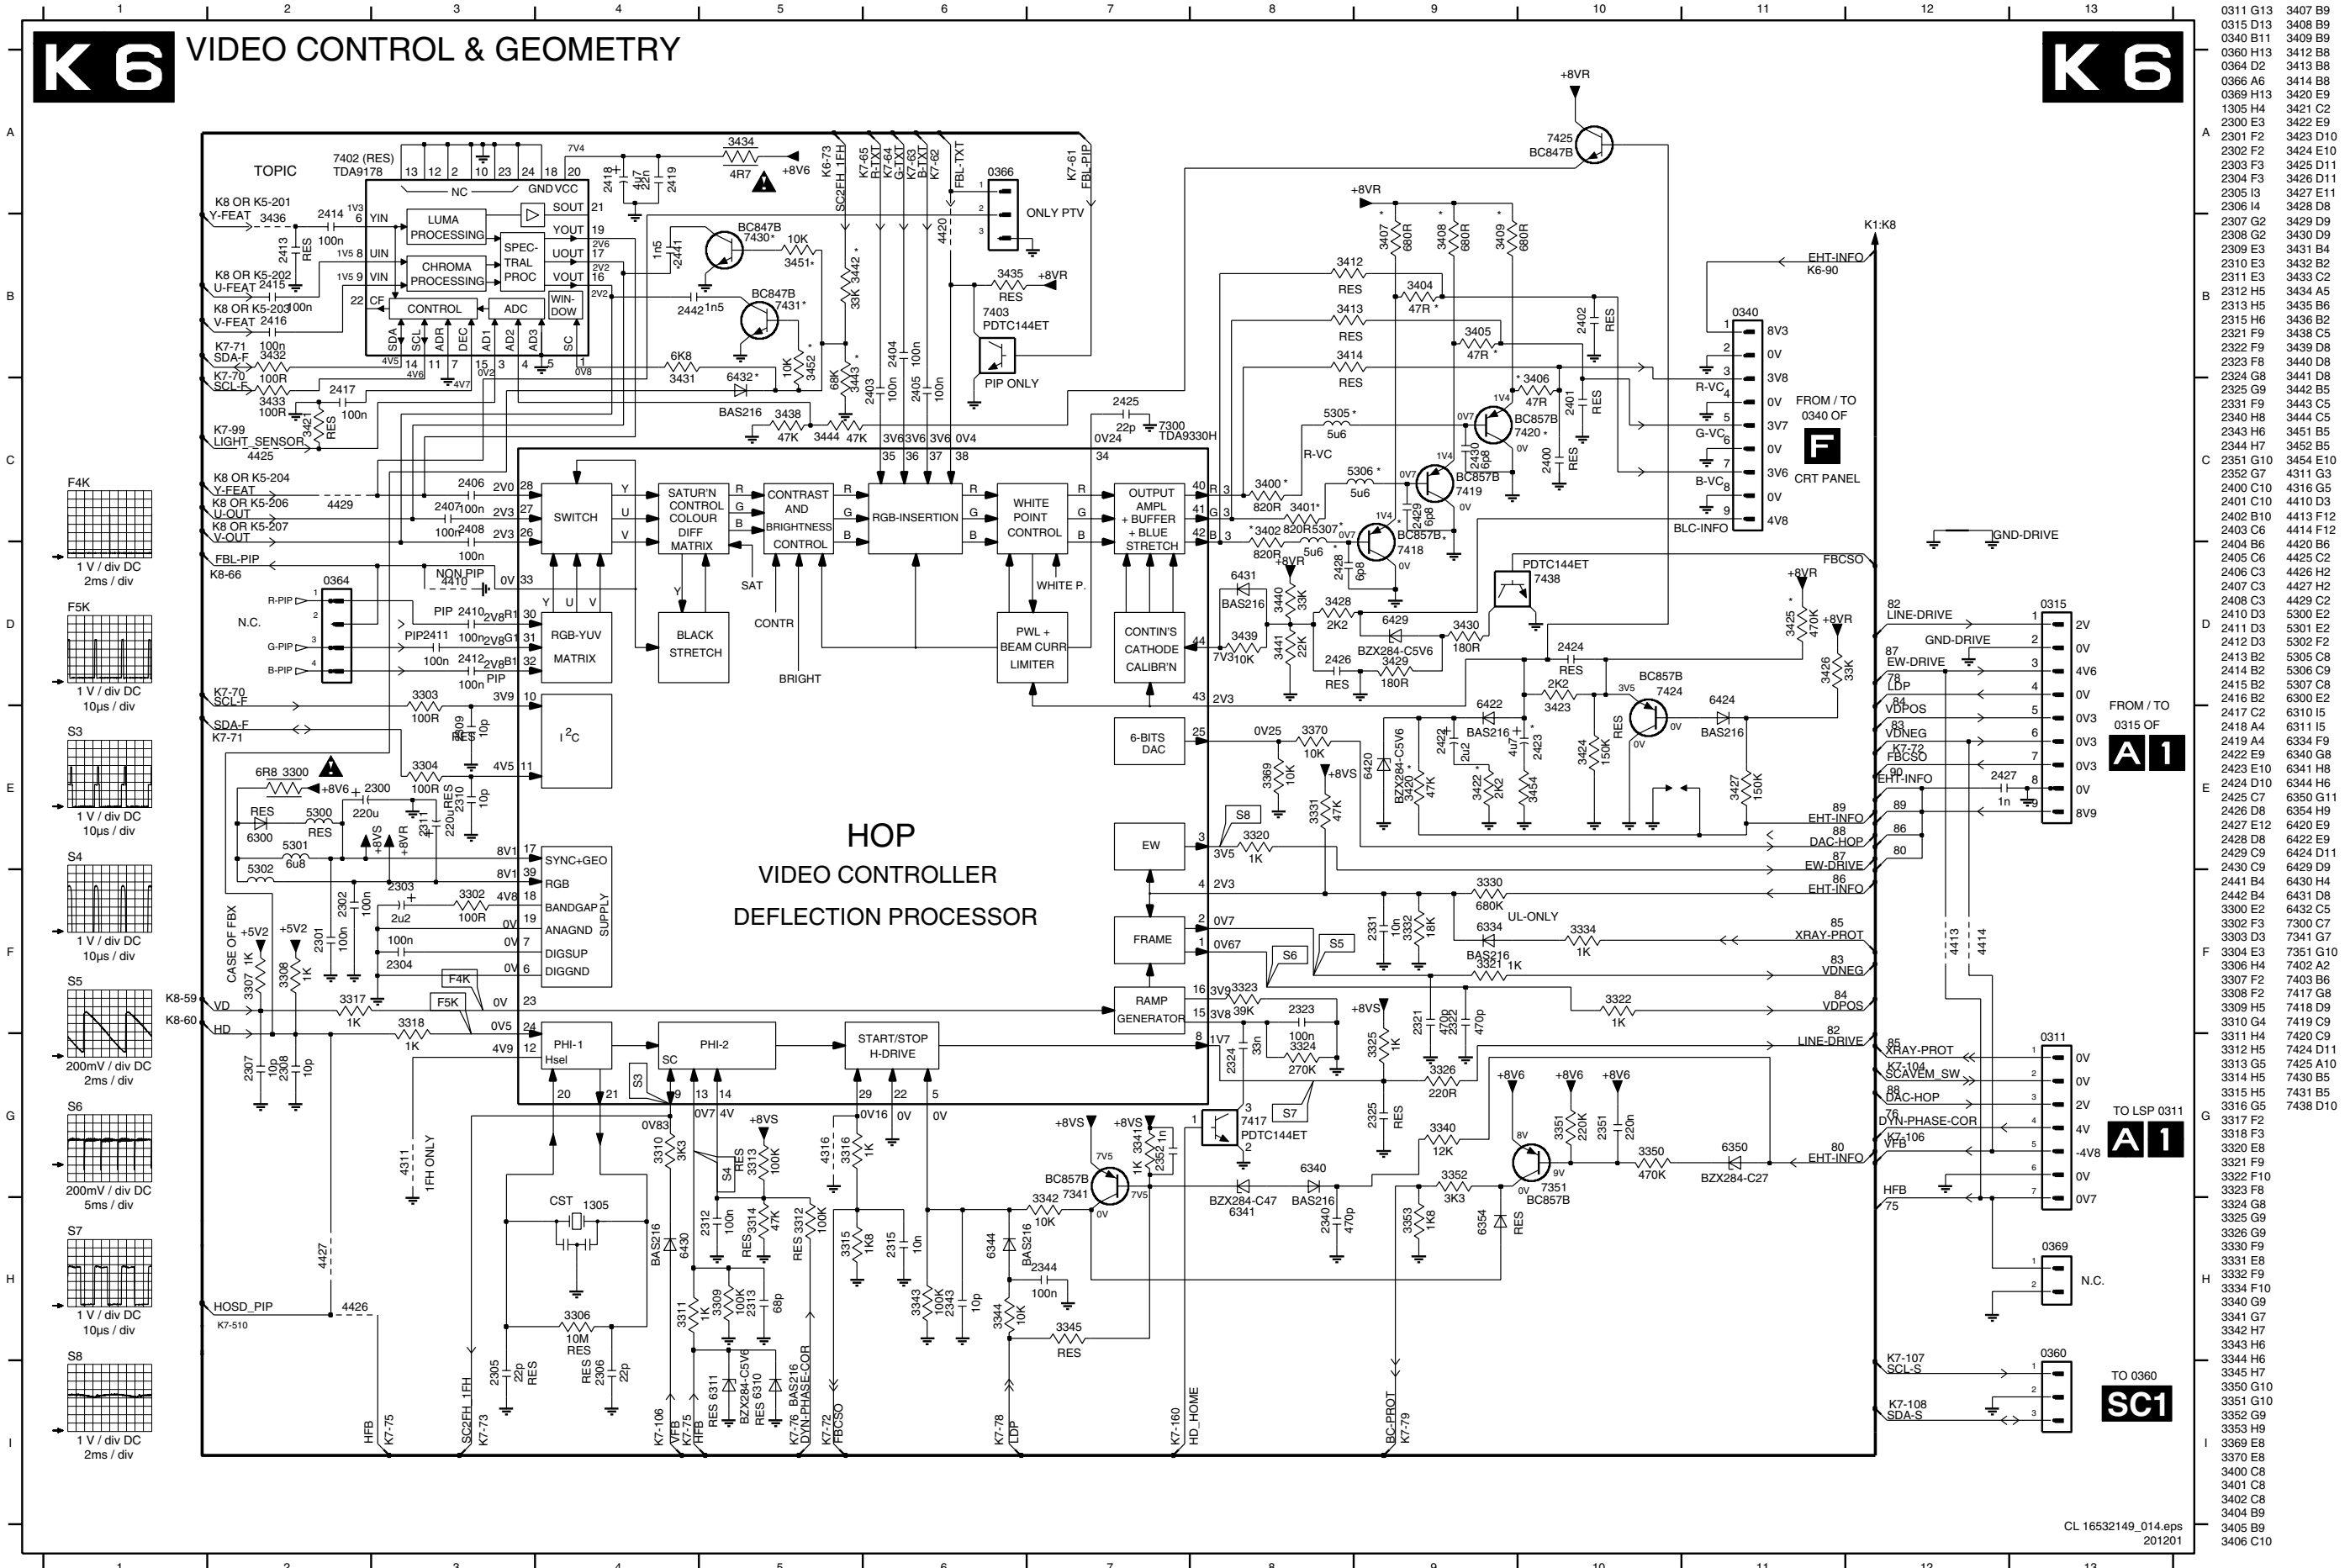

0311 G13	3407 B9
0315 D13	3408 B9
0340 B11	3409 B9
0360 H13	3412 B8
0364 D2	3413 B8
0366 A6	3414 B8
0369 H13	3420 E9
1305 H4	3421 C2
2300 E3	3422 E9
2301 F2	3423 D10
2302 F2	3424 E10
2303 F3	3425 D11
2304 F3	3426 D11
2305 I3	3427 E11
2306 I4	3428 D8
2307 G2	3429 D9
2308 G2	3430 D9
2309 E3	3431 B4
2310 E3	3432 B2
2311 E3	3433 C2
2312 H5	3434 A5
2313 H5	3435 B6
2315 H6	3436 B2
2321 F9	3438 C5
2322 F9	3439 D8
2323 F8	3440 D8
2324 G8	3441 D8
2325 G9	3442 B5
2331 F9	3443 C5
2340 H8	3444 C5
2343 H6	3451 B5
2344 H7	3452 B5
2351 G10	3454 E10
2352 G7	4311 G3
2400 C10	4316 G5
2401 C10	4410 D3
2402 B10	4413 F12
2403 C6	4414 F12
2404 B6	4420 B6
2405 C6	4425 C2
2406 C3	4426 H2
2407 C3	4427 H2
2408 C3	4428 C2
2410 D3	5300 E2
2411 D3	5301 E2
2412 D3	5302 F2
2413 B2	5305 C8
2414 B2	5306 C9
2415 B2	5307 C8
2416 B2	6300 E2
2417 C2	6310 I5
2418 A4	6311 I5
2419 A4	6334 F9
2422 E9	6340 G8
2423 E10	6341 H8
2424 D10	6344 H6
2425 C7	6350 G11
2426 D8	6354 H9
2427 E12	6420 E9
2428 D8	6422 E9
2429 C9	6424 D11
2430 C9	6429 D9
2441 B4	6430 H4
2442 B4	6431 D8
3300 E2	6432 C5
3302 F3	7300 C7
3303 D3	7341 G7
3304 E3	7351 G10
3306 H4	7402 A2
3307 F2	7403 B6
3308 F2	7417 G8
3309 H5	7418 D9
3310 G4	7419 C9
3311 H4	7420 C9
3312 H5	7424 D11
3313 G5	7425 A10
3314 H5	7430 B5
3315 H5	7431 B5
3316 G5	7438 D10
3317 F3	
3318 F3	
3320 E8	
3321 F9	
3322 F10	
3323 F8	
3324 G8	
3325 G9	
3326 G9	
3330 F9	
3331 E9	
3332 F9	
3340 G9	
3341 G7	
3342 H7	
3343 H6	
3344 H6	
3345 H7	
3350 G10	
3352 G9	
3353 H9	
3369 E8	
3370 E8	
3400 C8	
3401 C8	
3402 C8	
3404 B9	
3405 B9	
3406 C10	

FROM / TO 0340 OF CRT PANEL

1	8V3
2	0V
3	3V8
4	0V
5	3V7
6	0V
7	3V6
8	0V
9	4V8

FROM / TO 0315 OF

1	2V
2	0V
3	4V6
4	0V
5	0V3
6	0V3
7	0V3
8	0V
9	8V9

TO LSP 0311

1	0V
2	0V
3	2V
4	4V
5	-4V8
6	0V
7	0V7

N.C.





1	N.C.
2	N.C.

TO 0360

1	0V
2	0V
3	0V

Small Signal Board: TXT and Control


0341 B7	2005 B18	2013 K11	2025 K10	2035 L18	2044 K15	2054 H18	3004-B D10	3007 C10	3023-B L13	3027-D F10	3030-C K15	3034 J8	3042 L16	3048-A D2	3051-A E2	3053-A F2	3055-A G2	3057-A H2	3067 E5	3075 H10	3084 L8	3091-B G15	3093-B H15	3095-B I15	3097-B E15	3099-B F15	3896 K3	4011 B8	4021 C7	5002 J5	6012 C5	6037 D7	7008 I9	7016 L17
0356 B6	2006 G16	2014 H10	2026 K10	2037 J5	2045 G17	2055 K10	3004-C D10	3009-A E10	3023-C L13	3028-A F10	3031 G10	3035 I8	3043 K17	3049-B D2	3051-C E2	3053-D F2	3055-D G2	3057-C I2	3068 E6	3076 H10	3085 L9	3091-C G15	3093-C H15	3095-C I15	3097-D E15	3099-D F15	4001 H4	4012 E4	4022 C8	6001 H7	6013 C10	6238 K5	7009 J17	7018 D6
0375 F9	2007 F17	2015 J9	2027 C13	2038 J5	2046 J17	2056 K10	3004-D D10	3009-B E10	3023-D L13	3028-B F10	3031 G10	3035 I8	3043 K17	3049-C D2	3051-D E2	3053-E F2	3055-E G2	3057-D H2	3069 E6	3077 H10	3086 J15	3091-D H15	3093-D I15	3095-D E15	3097-E F15	3099-E G15	4002 H4	4013 E4	4023 C8	6002 H7	6014 C10	6250 J4	7009 J17	7018 D6
1001 H10	2008 C13	2021 K9	2028 C13	2039 H4	2048 B21	2058 H10	3005-A D10	3009-C D10	3024 L15	3029-A F10	3032 G10	3036 B H9	3047 K11	3049-D D2	3051-E E2	3053-F F2	3055-F G2	3057-E H2	3070 L17	3080-B J15	3091-E H15	3093-E I15	3095-A E15	3096-A F15	3259 J5	4003 H4	4015 D5	4024 H8	6003 H8	6019 G7	7004 G17	7011 B8	7205 K5	7216 J4
2001 L16	2010 C12	2022 K11	2030 K16	2041 L15	2051 H16	2061 H16	3005-B D10	3009-D D10	3024 L15	3029-B F10	3032 G10	3036-C H9	3048-A K14	3049-E D2	3051-F F2	3053-G G2	3055-G H2	3057-F H2	3071 K18	3080-C J15	3091-F I15	3093-F J15	3095-B E15	3096-B F15	3261 K4	4008 G4	4017 F16	4025 H8	6004 D8	6021 H7	7002 C17	7012 E7	7216 J4	
2002 K17	2011 C12	2023 K11	2031 B21	2042 K15	2052 H16	2062 H16	3005-C D10	3009-E D10	3024 L15	3029-C F10	3032 G10	3036-D H9	3048-B K14	3049-F D2	3051-G G2	3053-H H2	3055-H I2	3057-G H2	3072 L18	3080-D J15	3091-G I15	3093-G J15	3095-C E15	3096-C F15	3262 K4	4009 G4	4018 F16	4027 F16	6006 G8	6023 G8	7003 C11	7013 C20		
2003 G17	2012 C12	2024 J17	2032 K17	2043 K15	2053 H16	2063 H16	3005-D D10	3009-F D10	3024 L13	3027-C F10	3030-B K15	3033-D G10	3041 K17	3049-D E2	3051-H H2	3053-I I2	3055-I J2	3057-H H2	3073 K17	3080-E J15	3091-H I15	3093-H J15	3095-D E15	3096-D F15	3263 K5	4009 G4	4019 G4	4028 J9	6008 G8	6025 G9	7006 K16	7014 L18	7015 L19	

 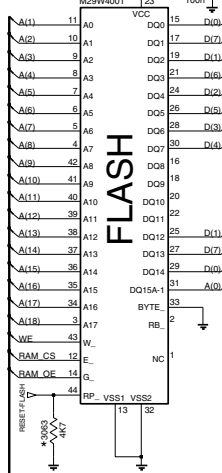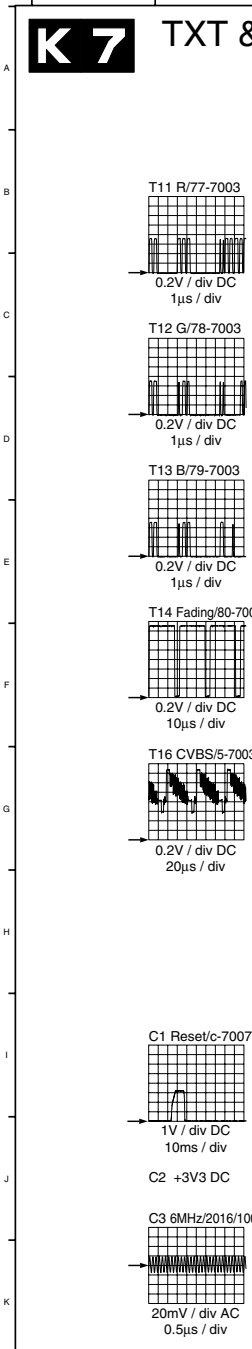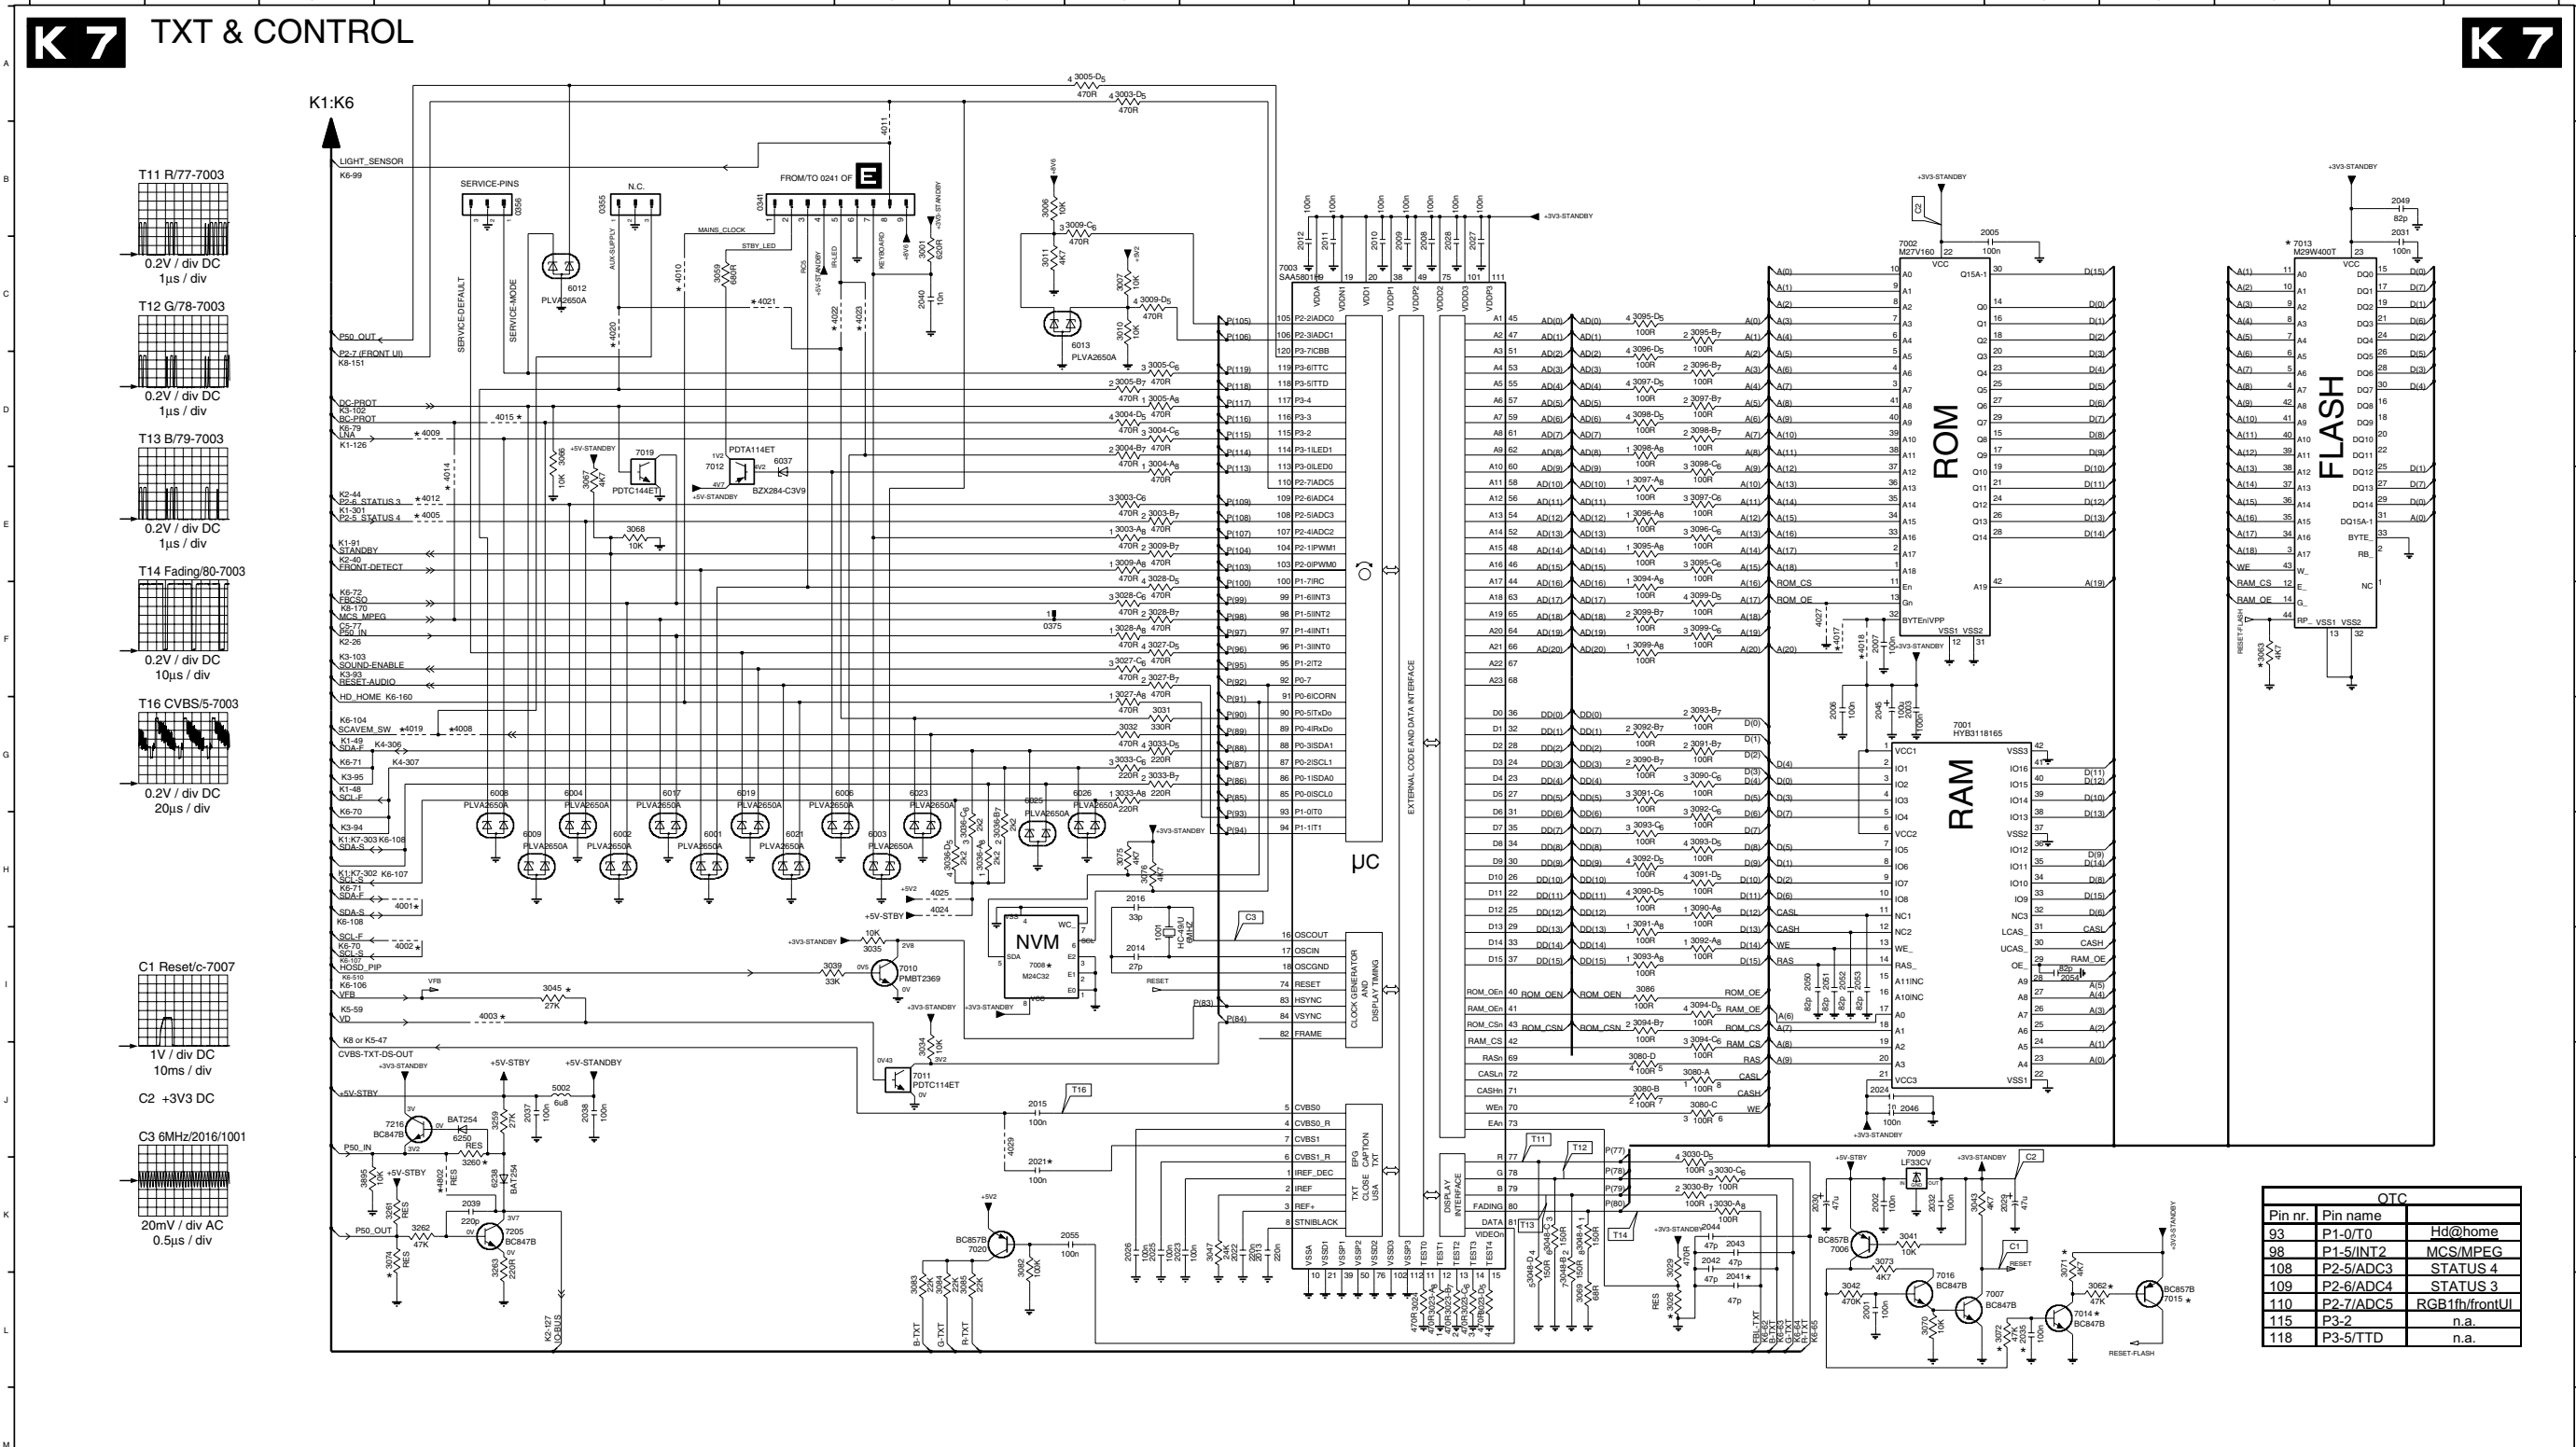

Pin nr.	Pin name	Hd@home
93	P1-0/T0	Hd@home
98	P1-5/INT2	MCS/MPEG
108	P2-5/ADC3	STATUS 3
110	P2-6/ADC5	RGB1fb/frontUI
115	P3-2	n.a.
118	P3-5/TTD	n.a.

Small Signal Board: Source Selection (Additional to K1)


0312 K3	0372 I17	2249 J4	2258 G8	2437 I15	2853 F6	2862 E3	2873 E5	3239 B11	3279 J9	3289 J5	3298 I4	3570-B G9	3855 F6	3864 E2	3873 B4	3885 D3	4216 D11	4222-C I13	4412 E8	4424 C9	4612 K2	4627 K2	4742 K16	4858 K15	7209 A12
0351 A17	0373 J19	2250 I4	2259 D15	2440 A9	2854 C5	2863 D3	2880 F4	3251 C11	3281 J8	3290 G7	3299 I4	3570-C G9	3856 C6	3865 D2	3877 C5	3887 C3	4217 D12	4222-D J13	4415 B9	4430 C17	4613 K2	4728 D8	4743 K15	4859 K14	7426 H15
0352 B17	2242 G7	2251 J9	2260 K6	2507 G9	2855 G6	2864 E5	2893 G12	3267 C10	3282 K4	3291 J6	3448 G15	3570-D G9	3857 G6	3866 E7	3878 F5	3887 C3	4218 D12	4400 G16	4416 C9	4431 C17	4614 H2	4729 E8	4745 F17	5757 D5	7427 H15
0353 D18	2243 J4	2252 B12	2431 G12	2508 G9	2856 B6	2865 C4	3214 B15	3268 D10	3283 K4	3292 H7	3449 G15	3568 A15	3858 B6	3867 E8	3879 C6	3888 D3	4219-A E11	4401 G16	4417 D9	4432 C18	4615 H2	4732 F3	4750 D8	6039 E16	7575 A16
0361 F17	2244 K4	2253 B12	2432 H12	2509 G9	2857 G6	2867 D3	3217 C15	3269 J6	3284 H6	3293 I7	3450 H15	3568 A16	3859 G6	3868 E2	3880 G6	4006 E16	4219-B E11	4402 G16	4421-A J13	4433 D9	4616 I2	4733 F3	4751 F9	6040 E17	7701 C3
0362 G17	2245 J5	2254 C12	2433 F12	2548 G2	2858 B6	2868 E3	3226 C15	3275 J9	3285 I6	3294 J7	3453 H11	3568 A17	3860 B6	3869 D2	3881 B6	4202 J9	4219-C E11	4403 G16	4421-B J13	4434 K2	4617 I2	4734 F3	4807 C2	6750 A16	7776 D4
0368 K17	2246 K6	2255 B12	2434 G12	2842 D2	2859 H6	2870 C6	3234 I4	3276 I8	3286 J4	3295 K7	3460 E17	3859 B6	3861 H6	3870 F2	3882 G6	4203 I10	4219-D E11	4406 I2	4421-C J13	4435 C2	4618 J2	4735 F2	4853 G2	7206 J8	7777 D5
0370 G19	2247 H6	2256 B12	2435 G12	2843 H6	2860 D6	2871 F6	3237 I5	3277 J8	3287 K4	3296 I7	3461 E17	3851 H6	3862 E2	3871 E2	3883 D2	4212 F2	4222-A J13	4407 J2	4421-D K13	4436 F17	4619 J2	4736 E5	4856 K15	7207 J9	7801 C4
0371 I19	2248 I5	2257 C12	2436 I15	2852 C6	2861 F5	2872 E5	3238 K4	3278 J8	3288 I5	3297 J7	3570-A H9	3854 C6	3863 D2	3872 C4	3884 C3	4215 D11	4222-B I13	4411 D8	4423 B9	4500 F2	4626 K2	4737 K14	4857 K14	7208 I5	

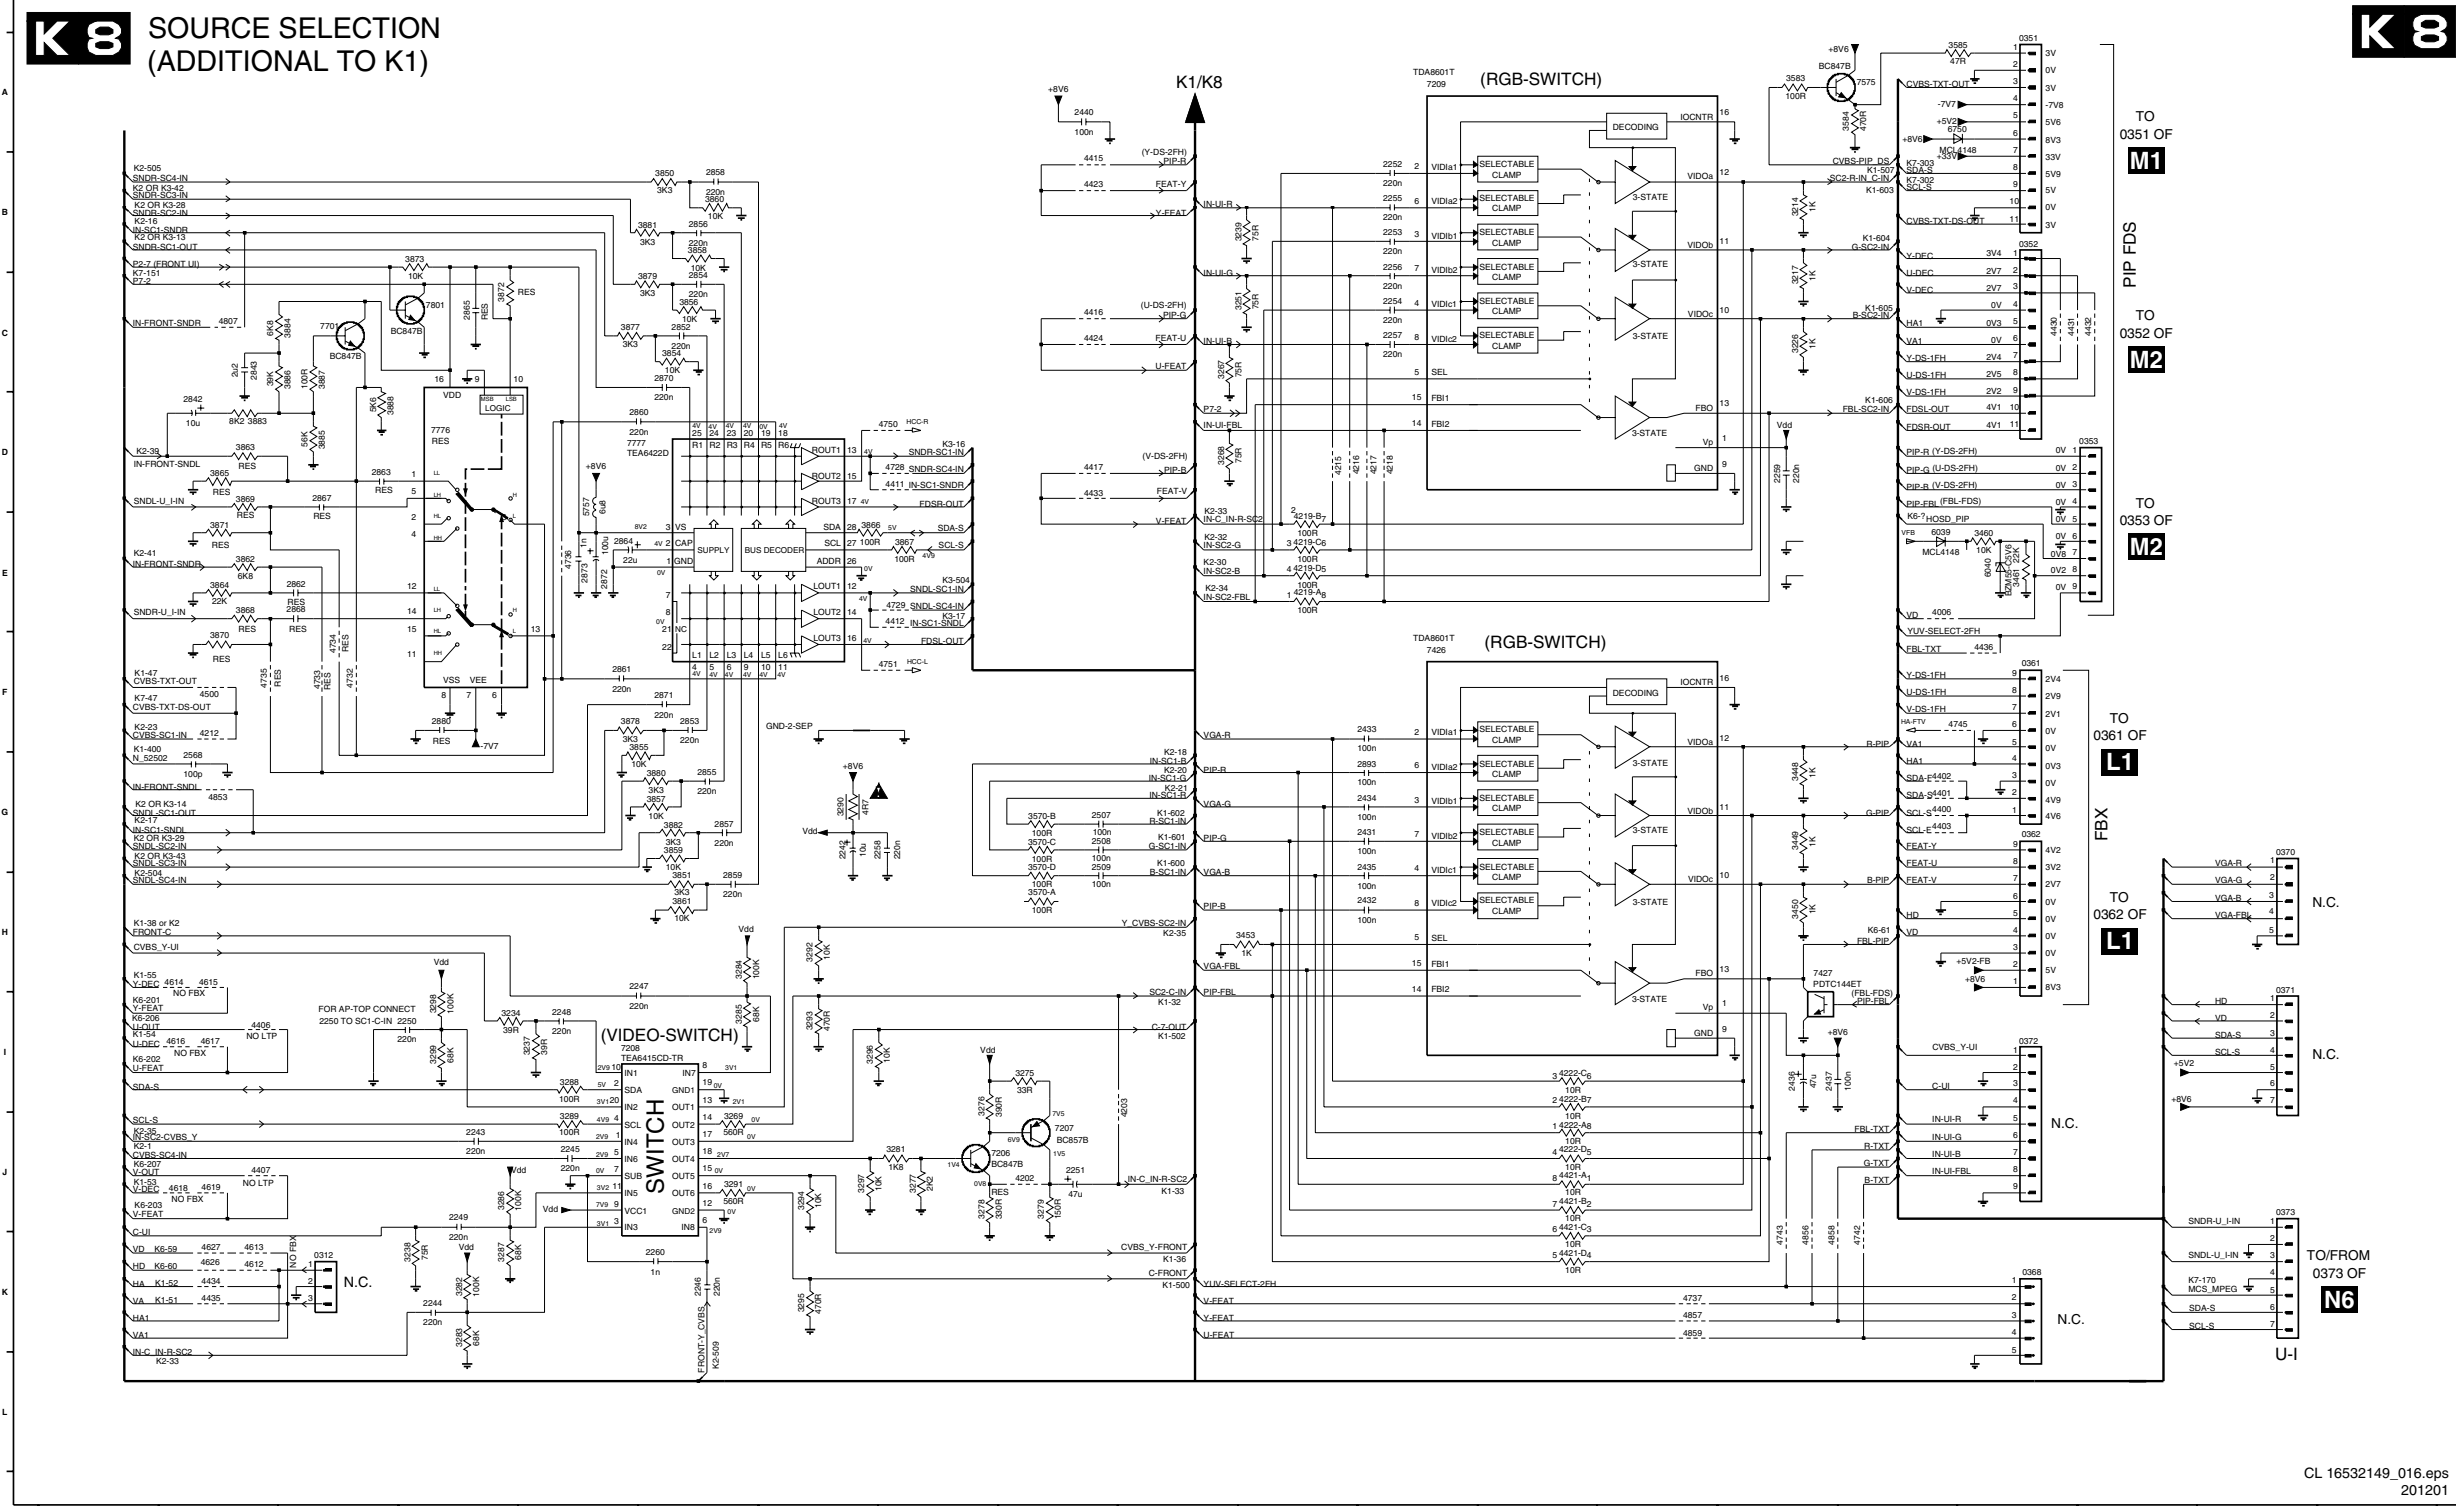

Diversity table Small Signal Board (K8)		
Item	no DW-module	DW-module
0351	-	X
0352	-	X
0353	-	X
0370	-	-
0371	-	-
2431	-	-
2432	-	-
2433	-	-
2434	-	-
2435	-	-
2437	-	-
2440	-	-
2893	-	-
3445	-	-
3446	-	-
3447	-	-
3448	-	-
3449	-	-
3450	-	-
3453	-	-
3583	-	100R
3584	-	470R
3585	-	47R
4222	-	-
4421	-	4x10R
4423	Jumper	Jumper
4424	Jumper	Jumper
4430	Jumper	-
4431	Jumper	-
4432	Jumper	-
4433	Jumper	Jumper
4436	-	Jumper
4500	Jumper	Jumper
7426	-	-
7427	-	-
7428	-	-
7429	-	-
7575	-	BC847B

Small Signal Panel (K8) (for readability)		
Item		
2842	10 F	
2843	2.2 F	
2852	220nF	
2853	220nF	
2854	220nF	
2855	220nF	
2856	220nF	
2857	220nF	
2858	220nF	
2859	220nF	
2860	220nF	
2861	220nF	
2864	22 F	
2870	220nF	
2871	220nF	
2872	100 F	
2873	1nF	
3850	3k3	
3851	3k3	
3854	10k	
3855	10k	
3857	10k	
3858	10k	
3859	10k	
3860	10k	
3861	10k	
3862	6k8	
3864	22k	
3866	100R	
3867	100R	
3877	3k3	
3878	3k3	
3879	3k3	
3880	3k3	
3881	3k3	
3882	3k3	
3883	8k2	
3884	6k8	
3885	56k	
3886	39k	
3887	100R	
3888	5k6	
4411	-	
4412	-	
4728	-	
4729	-	
4732	Jumper	
4736	Jumper	
5757	6.8 H	
7701	BC847B	
7777	TEA6422D	

Layout Small Signal Board (Top Overview)

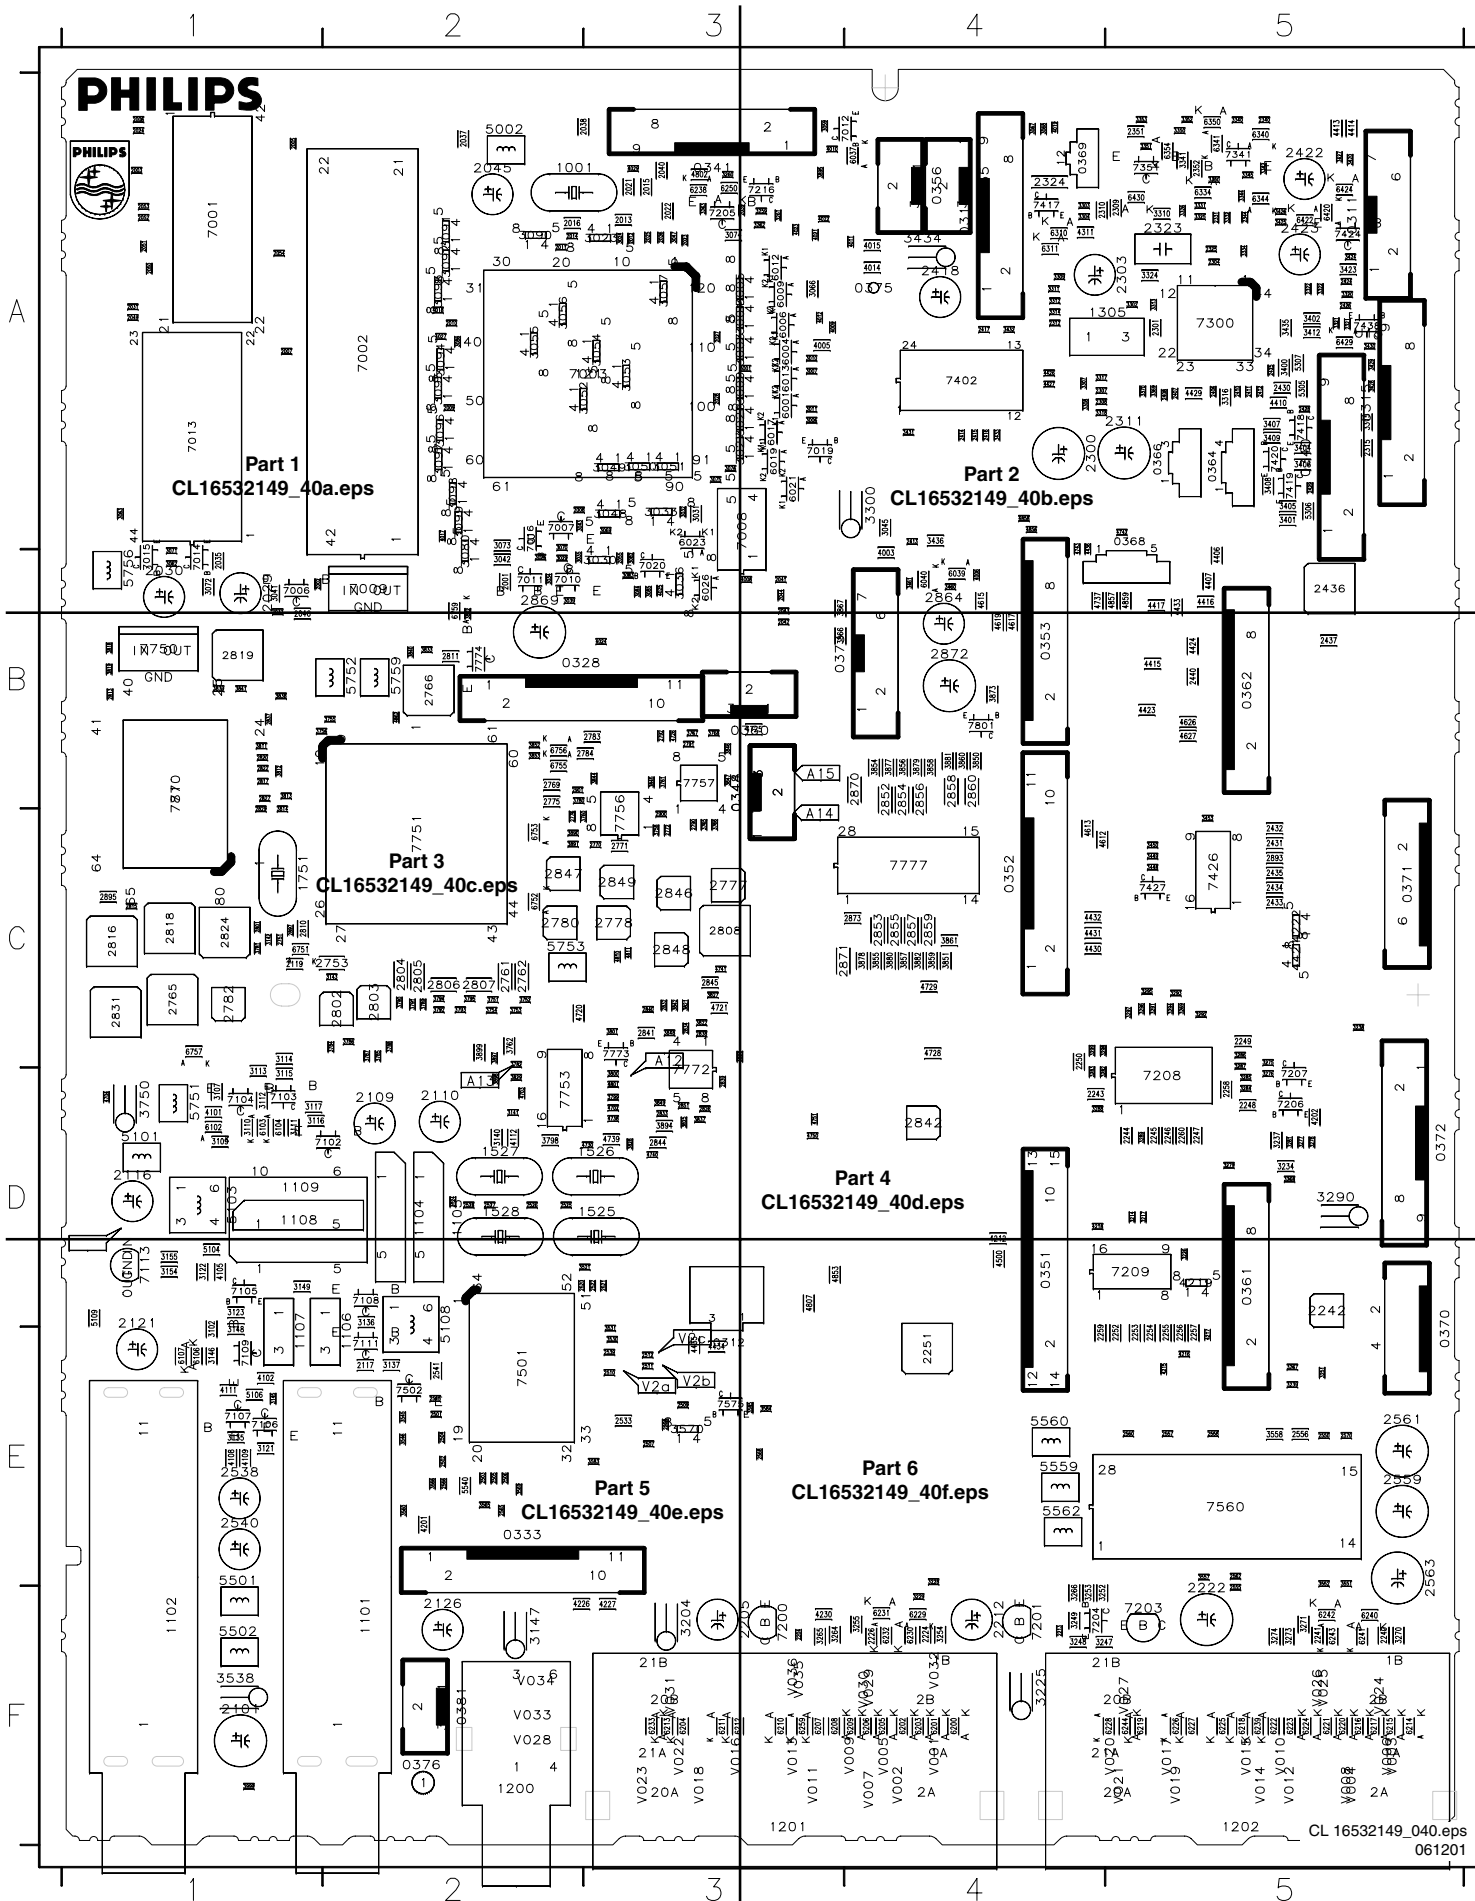

0310	A4	2037	A2	2407	A5	2772	C3	3006	A3	3121	E1	3299	C4	3551	E5	3852	B2	4421	C5	6009	A3	6755	B2
0311	A5	2038	A2	2408	A5	2775	B2	3007	A3	3122	D1	3300	A3	3552	E5	3853	B2	4423	B5	6012	A3	6756	B2
0312	D3	2039	A3	2410	A5	2776	C2	3009	A3	3123	D1	3302	A5	3557	E5	3854	B4	4424	B5	6013	A3	6757	C1
0315	A5	2040	A3	2411	A5	2777	C3	3010	A3	3124	D2	3303	A4	3558	E5	3855	C4	4426	A4	6017	A3	6759	B2
0328	B2	2041	B3	2412	A5	2778	C3	3011	A3	3135	E1	3304	A4	3560	E2	3856	B4	4427	A4	6019	A3	7001	A1
0333	E2	2042	B3	2413	A4	2780	C2	3023	A3	3136	D2	3307	A4	3565	E2	3857	C4	4429	A5	6021	A3	7002	A1
0340	A5	2043	B3	2414	A4	2782	C1	3024	A3	3137	E2	3308	A4	3566	E2	3858	B4	4430	C4	6023	A3	7003	A2
0341	A3	2044	B3	2415	A4	2783	B3	3026	B2	3140	D2	3309	A4	3569	E2	3859	C4	4431	C4	6026	B3	7006	B1
0344	C3	2045	A2	2416	A4	2784	B3	3027	A3	3141	D2	3310	A5	3570	E3	3860	B4	4432	C4	6037	A4	7007	A2
0348	B3	2046	B1	2417	A4	2790	C3	3028	A3	3142	C1	3311	A4	3583	E3	3861	C4	4433	B5	6039	B4	7008	A3
0351	D4	2049	A1	2418	A4	2791	B3	3029	B2	3143	C2	3312	A4	3584	E3	3866	B3	4434	E3	6040	B4	7009	B2
0352	C4	2050	A1	2422	A5	2792	B3	3030	A3	3145	E1	3313	A5	3585	E3	3867	B3	4435	E3	6102	D1	7010	B3
0353	B4	2051	A1	2423	A5	2801	C1	3031	A3	3146	E1	3314	A4	3750	C1	3873	B4	4436	A4	6103	D1	7011	B2
0355	A4	2052	A1	2424	A5	2802	C1	3032	A3	3147	F2	3315	A5	3751	C2	3877	B4	4500	D4	6104	D1	7012	A4
0356	A4	2053	A1	2425	A5	2803	C2	3033	A3	3148	E1	3316	A5	3752	C2	3878	C4	4612	C4	6106	D1	7013	A1
0360	B3	2054	A1	2426	A5	2804	C2	3034	B2	3149	D1	3317	A4	3753	C2	3879	B4	4613	C4	6107	D1	7014	B1
0361	D5	2055	B3	2428	A5	2805	C2	3035	B2	3154	D1	3318	A4	3754	C2	3880	C4	4615	B4	6200	F4	7015	B1
0362	B5	2101	F1	2429	A5	2806	C2	3036	B3	3155	D1	3320	A5	3755	B2	3881	B4	4617	B4	6201	F4	7016	A2
0364	A5	2109	D2	2430	A5	2807	C2	3039	B2	3204	F3	3321	A5	3756	B1	3882	C4	4619	B4	6202	F4	7019	A3
0366	A5	2110	D2	2431	C5	2808	C3	3041	B1	3214	D5	3322	A5	3758	C3	3890	C2	4626	B5	6203	F4	7020	B3
0368	B5	2116	D1	2432	C5	2810	C1	3042	B2	3217	D5	3324	A5	3760	C2	3891	C2	4627	B5	6204	F3	7102	D2
0369	A4	2117	E2	2433	C5	2811	B2	3043	A2	3225	F4	3325	A5	3761	B3	3894	D3	4702	D3	6205	F4	7103	D1
0370	E5	2119	C1	2434	C5	2813	B1	3045	A4	3226	D5	3326	A5	3762	C2	3895	A3	4703	D2	6206	F4	7104	D1
0371	C5	2121	D1	2435	C5	2815	C1	3047	A3	3228	E4	3330	A5	3765	C3	3897	C2	4704	D1	6207	F3	7105	D1
0372	D5	2126	F2	2436	B5	2816	C1	3048	A3	3229	F4	3331	A5	3766	C3	3898	D2	4720	C2	6208	F3	7106	E1
0373	B4	2204	F3	2437	B5	2817	B1	3049	A3	3234	D5	3332	A5	3767	B3	3899	C2	4721	C3	6209	F4	7107	E1
0375	A4	2205	F3	2440	B5	2818	C1	3050	A3	3237	D5	3334	A5	3768	B3	3999	F1	4725	B3	6210	F3	7108	D2
0376	F2	2212	F4	2501	E2	2819	B1	3051	A3	3238	C5	3340	A5	3780	B2	4003	B4	4726	B3	6211	F3	7109	E1
0381	F2	2213	F4	2502	E2	2820	B1	3052	A3	3239	E5	3341	A5	3781	C1	4005	A3	4728	C4	6212	F3	7111	E2
1001	A2	2222	F5	2503	E2	2822	B1	3053	A3	3247	F4	3342	A5	3782	C2	4006	B4	4729	C4	6213	F3	7113	D1
1101	F1	2224	F4	2504	E2	2824	C1	3054	A2	3248	F4	3344	A5	3784	C2	4008	B3	4730	D3	6214	F5	7200	F3
1102	F1	2226	F4	2505	E2	2826	D3	3055	A2	3249	F4	3345	A5	3785	C2	4009	A3	4737	B4	6215	F5	7201	F4
1104	D2	2240	F5	2506	E2	2827	B1	3056	A2	3251	E5	3350	A5	3786	C2	4010	A3	4738	D3	6216	F5	7203	F5
1105	D2	2241	F5	2507	E3	2829	C1	3057	A3	3252	F4	3351	A5	3787	C2	4011	A4	4739	D3	6217	F5	7204	F5
1106	D2	2242	D5	2508	E3	2831	C1	3059	A3	3253	F4	3352	A5	3788	C2	4012	A3	4740	D3	6218	F5	7205	A3
1107	D1	2243	D4	2509	E3	2832	C3	3062	B1	3254	F4	3353	A5	3789	C2	4014	A4	4741	C3	6219	F5	7206	D5
1108	D1	2244	D5	2510	E3	2833	D3	3063	A1	3255	F4	3369	A5	3790	C2	4015	A4	4742	A5	6220	F5	7207	C5
1109	D1	2245	D5	2511	E3	2834	C3	3066	A3	3259	A3	3370	A5	3791	C2	4017	A2	4743	A4	6221	F5	7208	C5
1200	F2	2246	D5	2512	E3	2837	B1	3067	A4	3260	A3	3400	A5	3792	C2	4018	A2	4750	D3	6222	F5	7209	D4
1201	F3	2247	D5	2520	D2	2838	C3	3068	A4	3261	A3	3401	A5	3793	C2	4019	A4	4751	D3	6223	F5	7216	A3
1202	F5	2248	D5	2521	D3	2839	D3	3069	A3	3262	A3	3402	A5	3794	C2	4021	A3	4801	D3	6224	F5	7300	A5
1305	A4	2249	C5	2522	D3	2840	C3	3070	A2	3263	A3	3404	A5	3795	C2	4022	A3	4802	A3	6225	F5	7341	A5
1525	D3	2250	C4	2525	D2	2841	C3	3071	B1	3264	F3	3405	A5	3798	D2	4023	A3	4807	D3	6226	F5	7351	A5
1526	D2	2251	D4	2526	D2	2842	D4	3072	B1	3265	F3	3406	A5	3799	D3	4024	B3	4810	C3	6227	F5	7402	A4
1527	D2	2252	E5	2527	D2	2844	D3	3073	A2	3266	F4	3407	A5	3800	D3	4025	B3	4811	C3	6228	F4	7417	A4
1528	D2	2253	E5	2528	D2	2845	C3	3074	A3	3267	E5	3408	A5	3801	C3	4027	A2	4853	D3	6229	F4	7418	A5
1751	C1	2254	E5	2533	E3	2846	C3	3075	A3	3268	D5	3409	A5	3802	B2	4029	A3	4854	A4	6230	F4	7419	A5
2001	B2	2255	E5	2538	E1	2847	C2	3076	A3	3269	C5	3412	A5	3811	B1	4101	D1	4857	B5	6231	F4	7420	A5
2002	B1	2256	E5	2539	E3	2848	C3	3080	B2	3270	F5	3420	A5	3812	B1	4102	E1	4858	A4	6232	F4	7424	A5
2003	A1	2257	E5	2540	E1	2849	C3	3082	B3	3271	F5	3423	A5	3813	B1	4105	D1	4859	B5	6233	F3	7426	C5
2005	A1	2258	D5	2541	E2	2851	D3	3083	B3	3273	F5	3424	A5	3814	C1	4108	E1	4862	B2	6238	A3	7427	C5
2006	A1	2259	E4	2545	E2	2852	C4	3084	B3	3274	F5	3425	A5	3818	B1	4109	E1	5002	A2	6239	F5	7438	A5
2007	A1	2260	D5	2550	E5	2853	C4	3085	B3	3275	C5	3426	A5	3819	B1	4111	E1	5101	D1	6240	F5	7501	D2
2008	A2	2300	A4	2555	F5	2854	C4	3086	A2	3276	D5	3427	A5	3820	C3	4112	D2	5103	D1	6241	F5	7502	E2
2009	A2	2301	A5	2556	E5	2855	C4	3090	A2	3277	D5	3428	A5	3821	C3	4201	E2	5104	D1	6242	F5	7560	E5
2010	A2	2303	A5	2557	E5	2856	B4	3091	A2	3278	D5	3429	A5	3822	C3	4202	D5	5106	E1	6243	F5	7575	E3
2011	A2	2304	A5	2558	E5	2857	C4	3092	A2	3279	D5	3430	A5	3825	D3	4212	D4	5108	D2	6244	F5	7750	B1
2012	A3	2307	A4	2559	E5	2858	B4	3093	A2	3281	D5	3431	A4	3827	C3	4215	E5	5109	D1	6250	A3	7751	B2
2013	A3	2308	A4	2560	E5	2859	C4	3094	A2	3282	D4	3432	A4	3828	D3	4216	E5	5305	A5	6259	F3	7753	C2
2014	A2	2309	A5	2561	E5	2860	B4	3095	A2	3283	D4	3433	A4	3829	D2	4217	E5	5306	A5	6310	A4	7756	B3
2015	A3	2310	A4	2562	E5	2864	B4	3096	A2	3284	D5	3434	A4	3833	B2	4218	D4	5307	A5				

Layout Small Signal Board (Top View Part 1)

1


2

3

Part 1

PHILIPS





PHILIPS

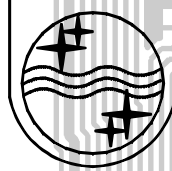

7001

7002

  7013

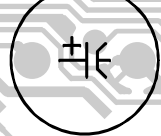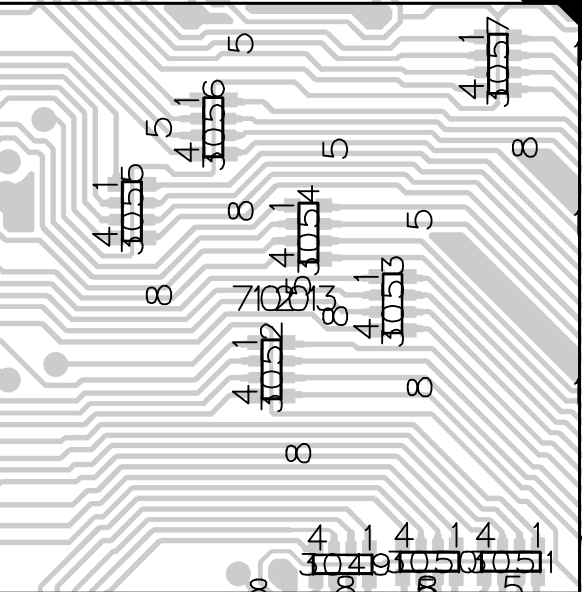


Layout Small Signal Board (Top View Part 2)

4


5

Part 2

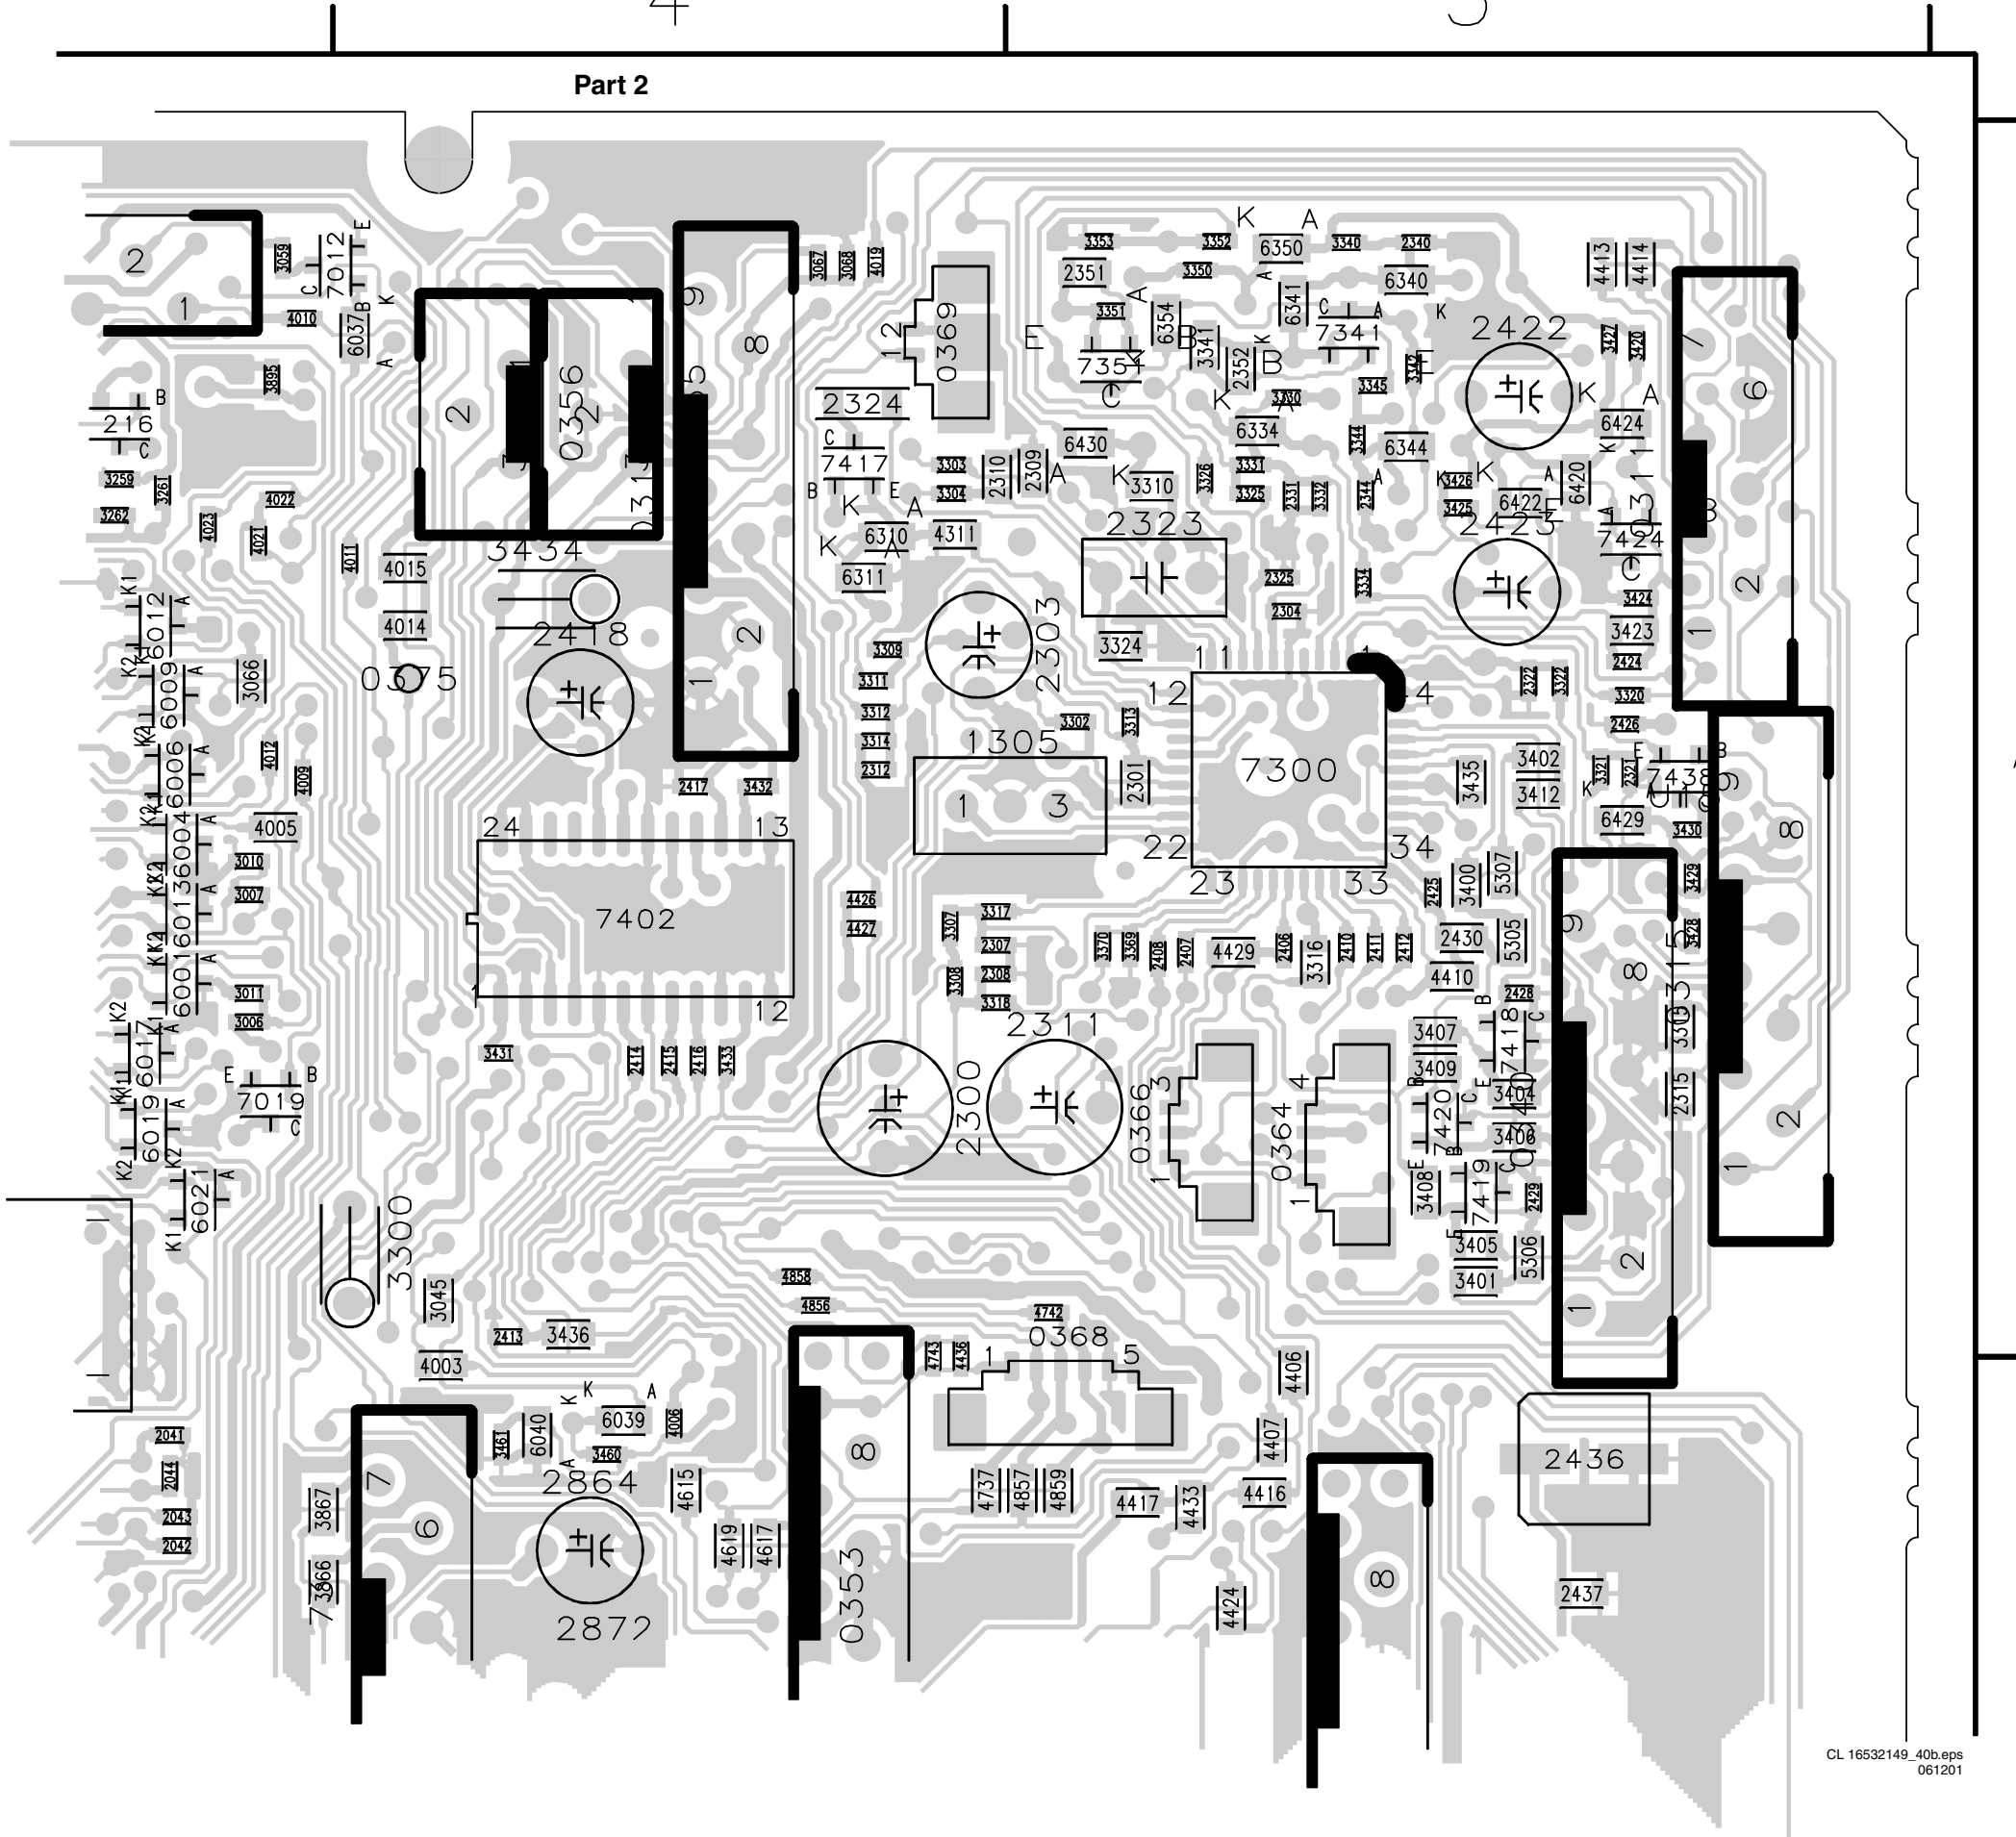


A

Layout Small Signal Board (Top View Part 3)

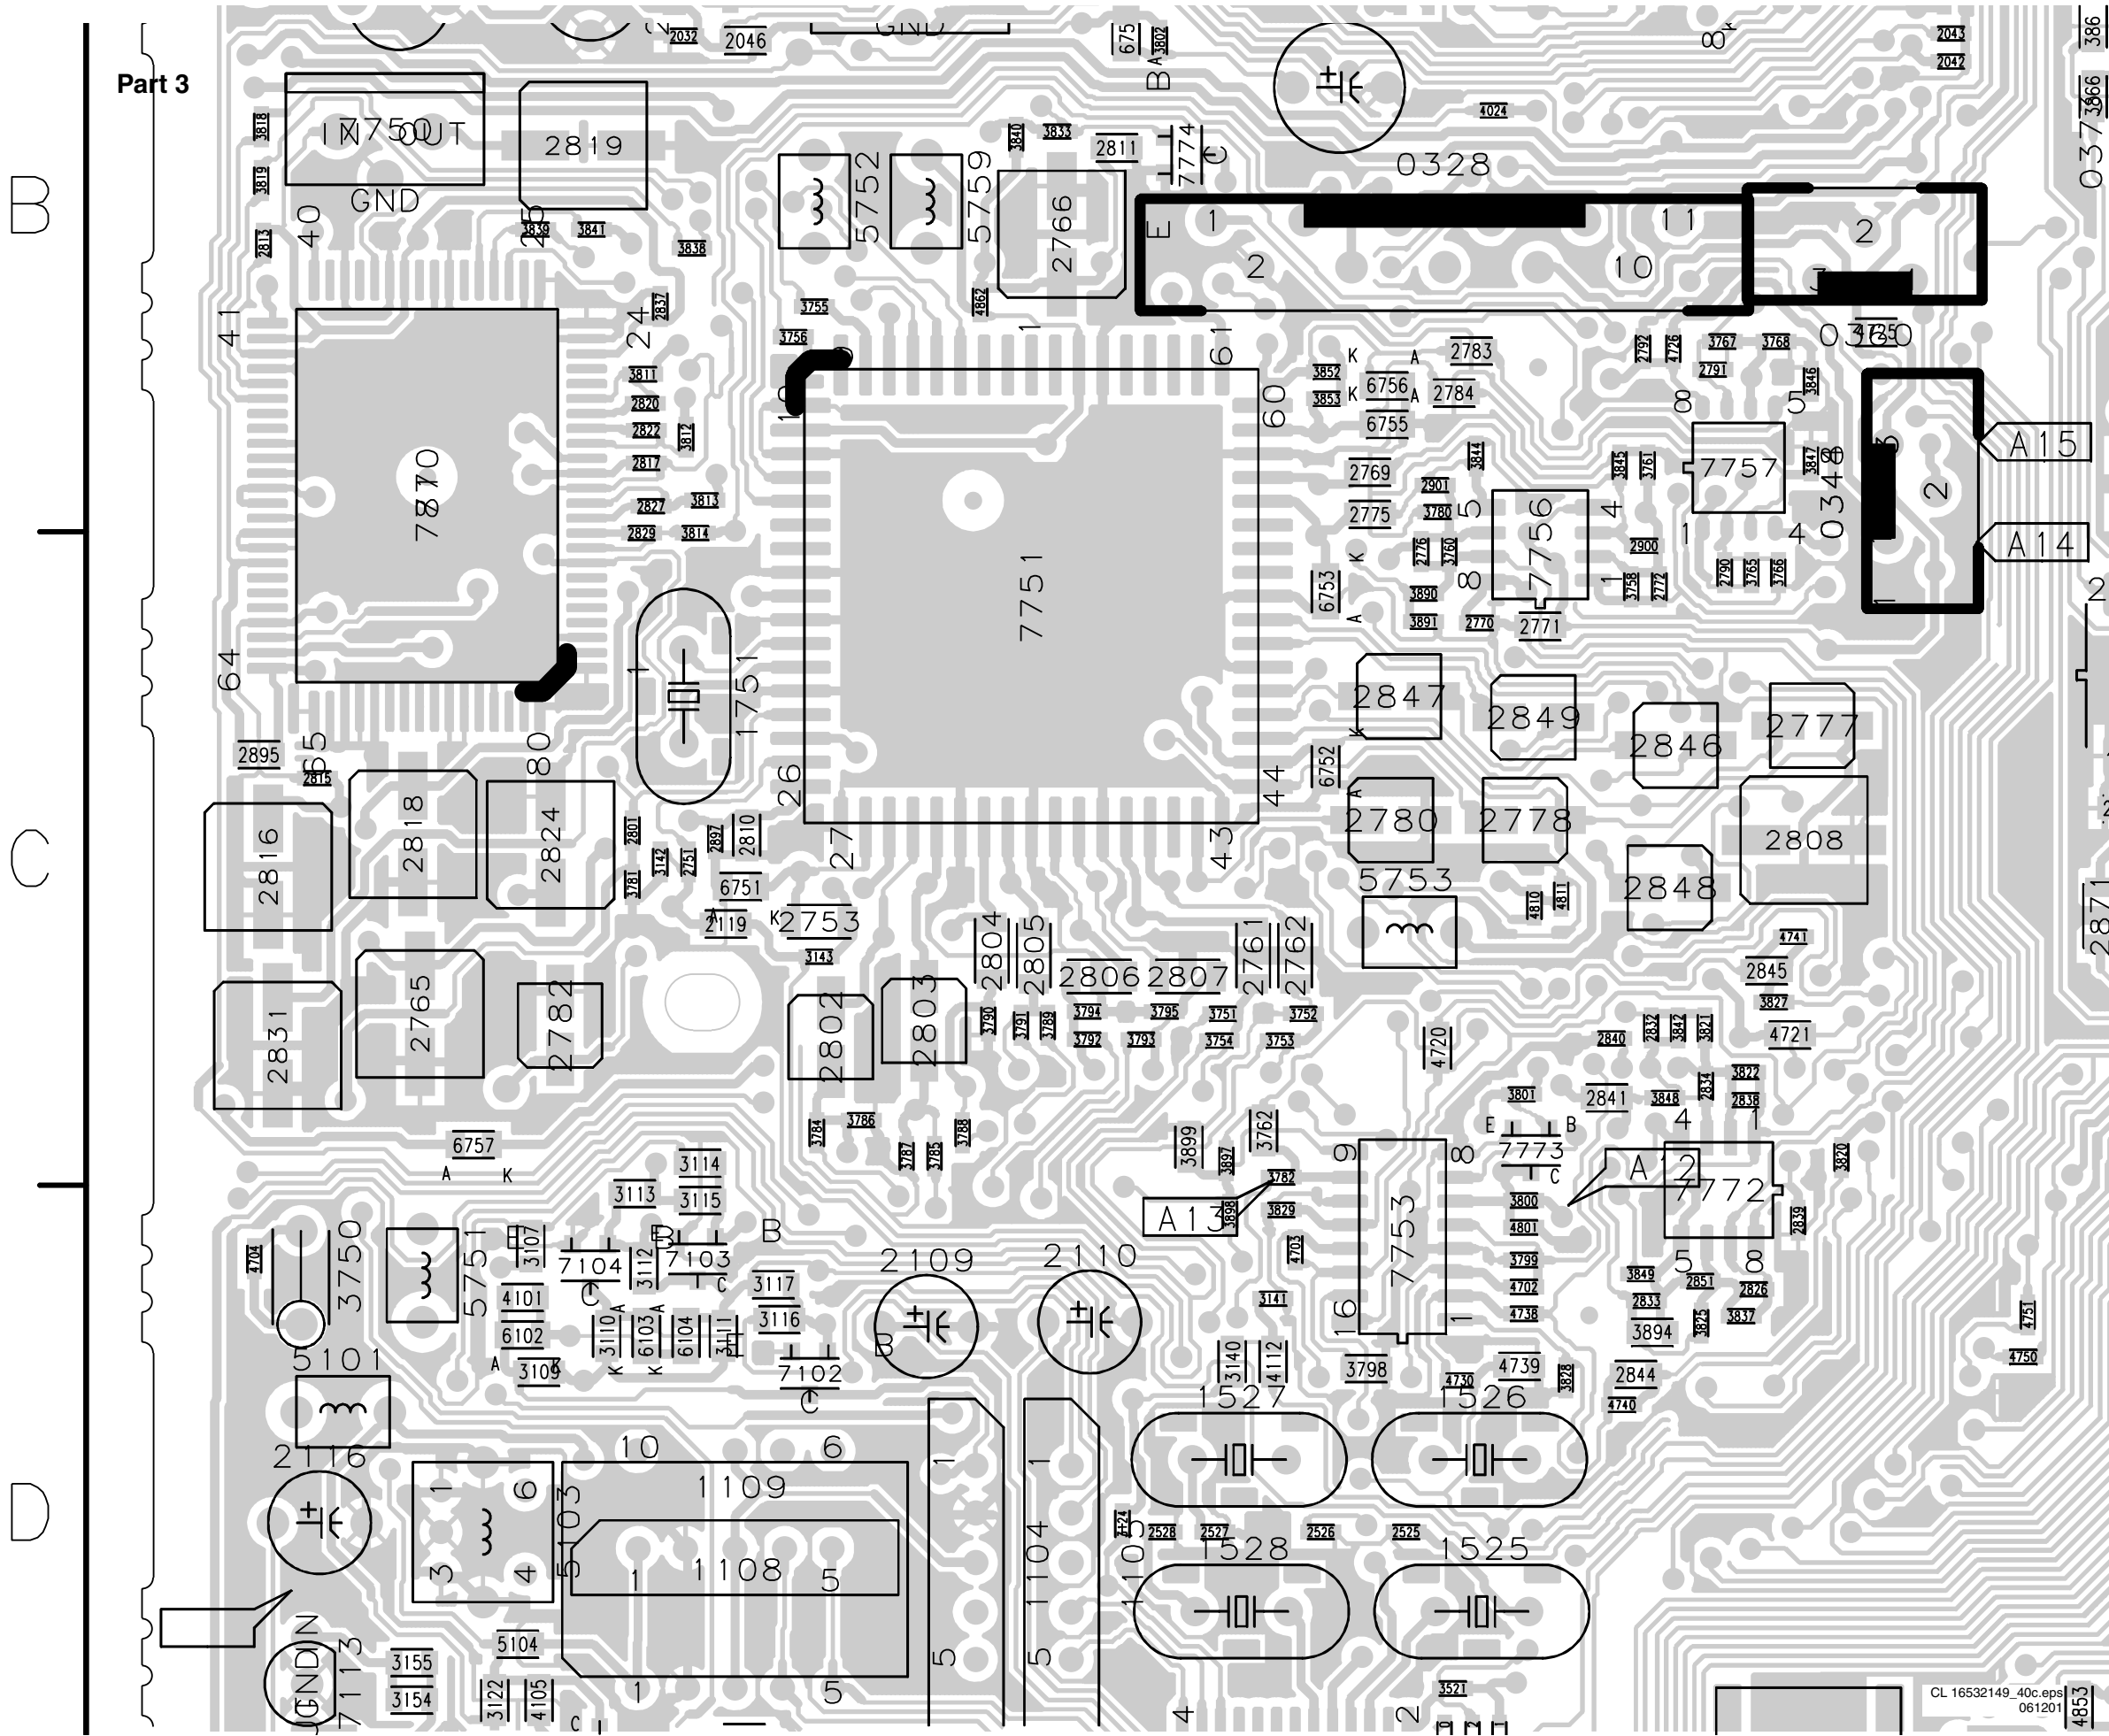


Layout Small Signal Board (Top View Part 5)

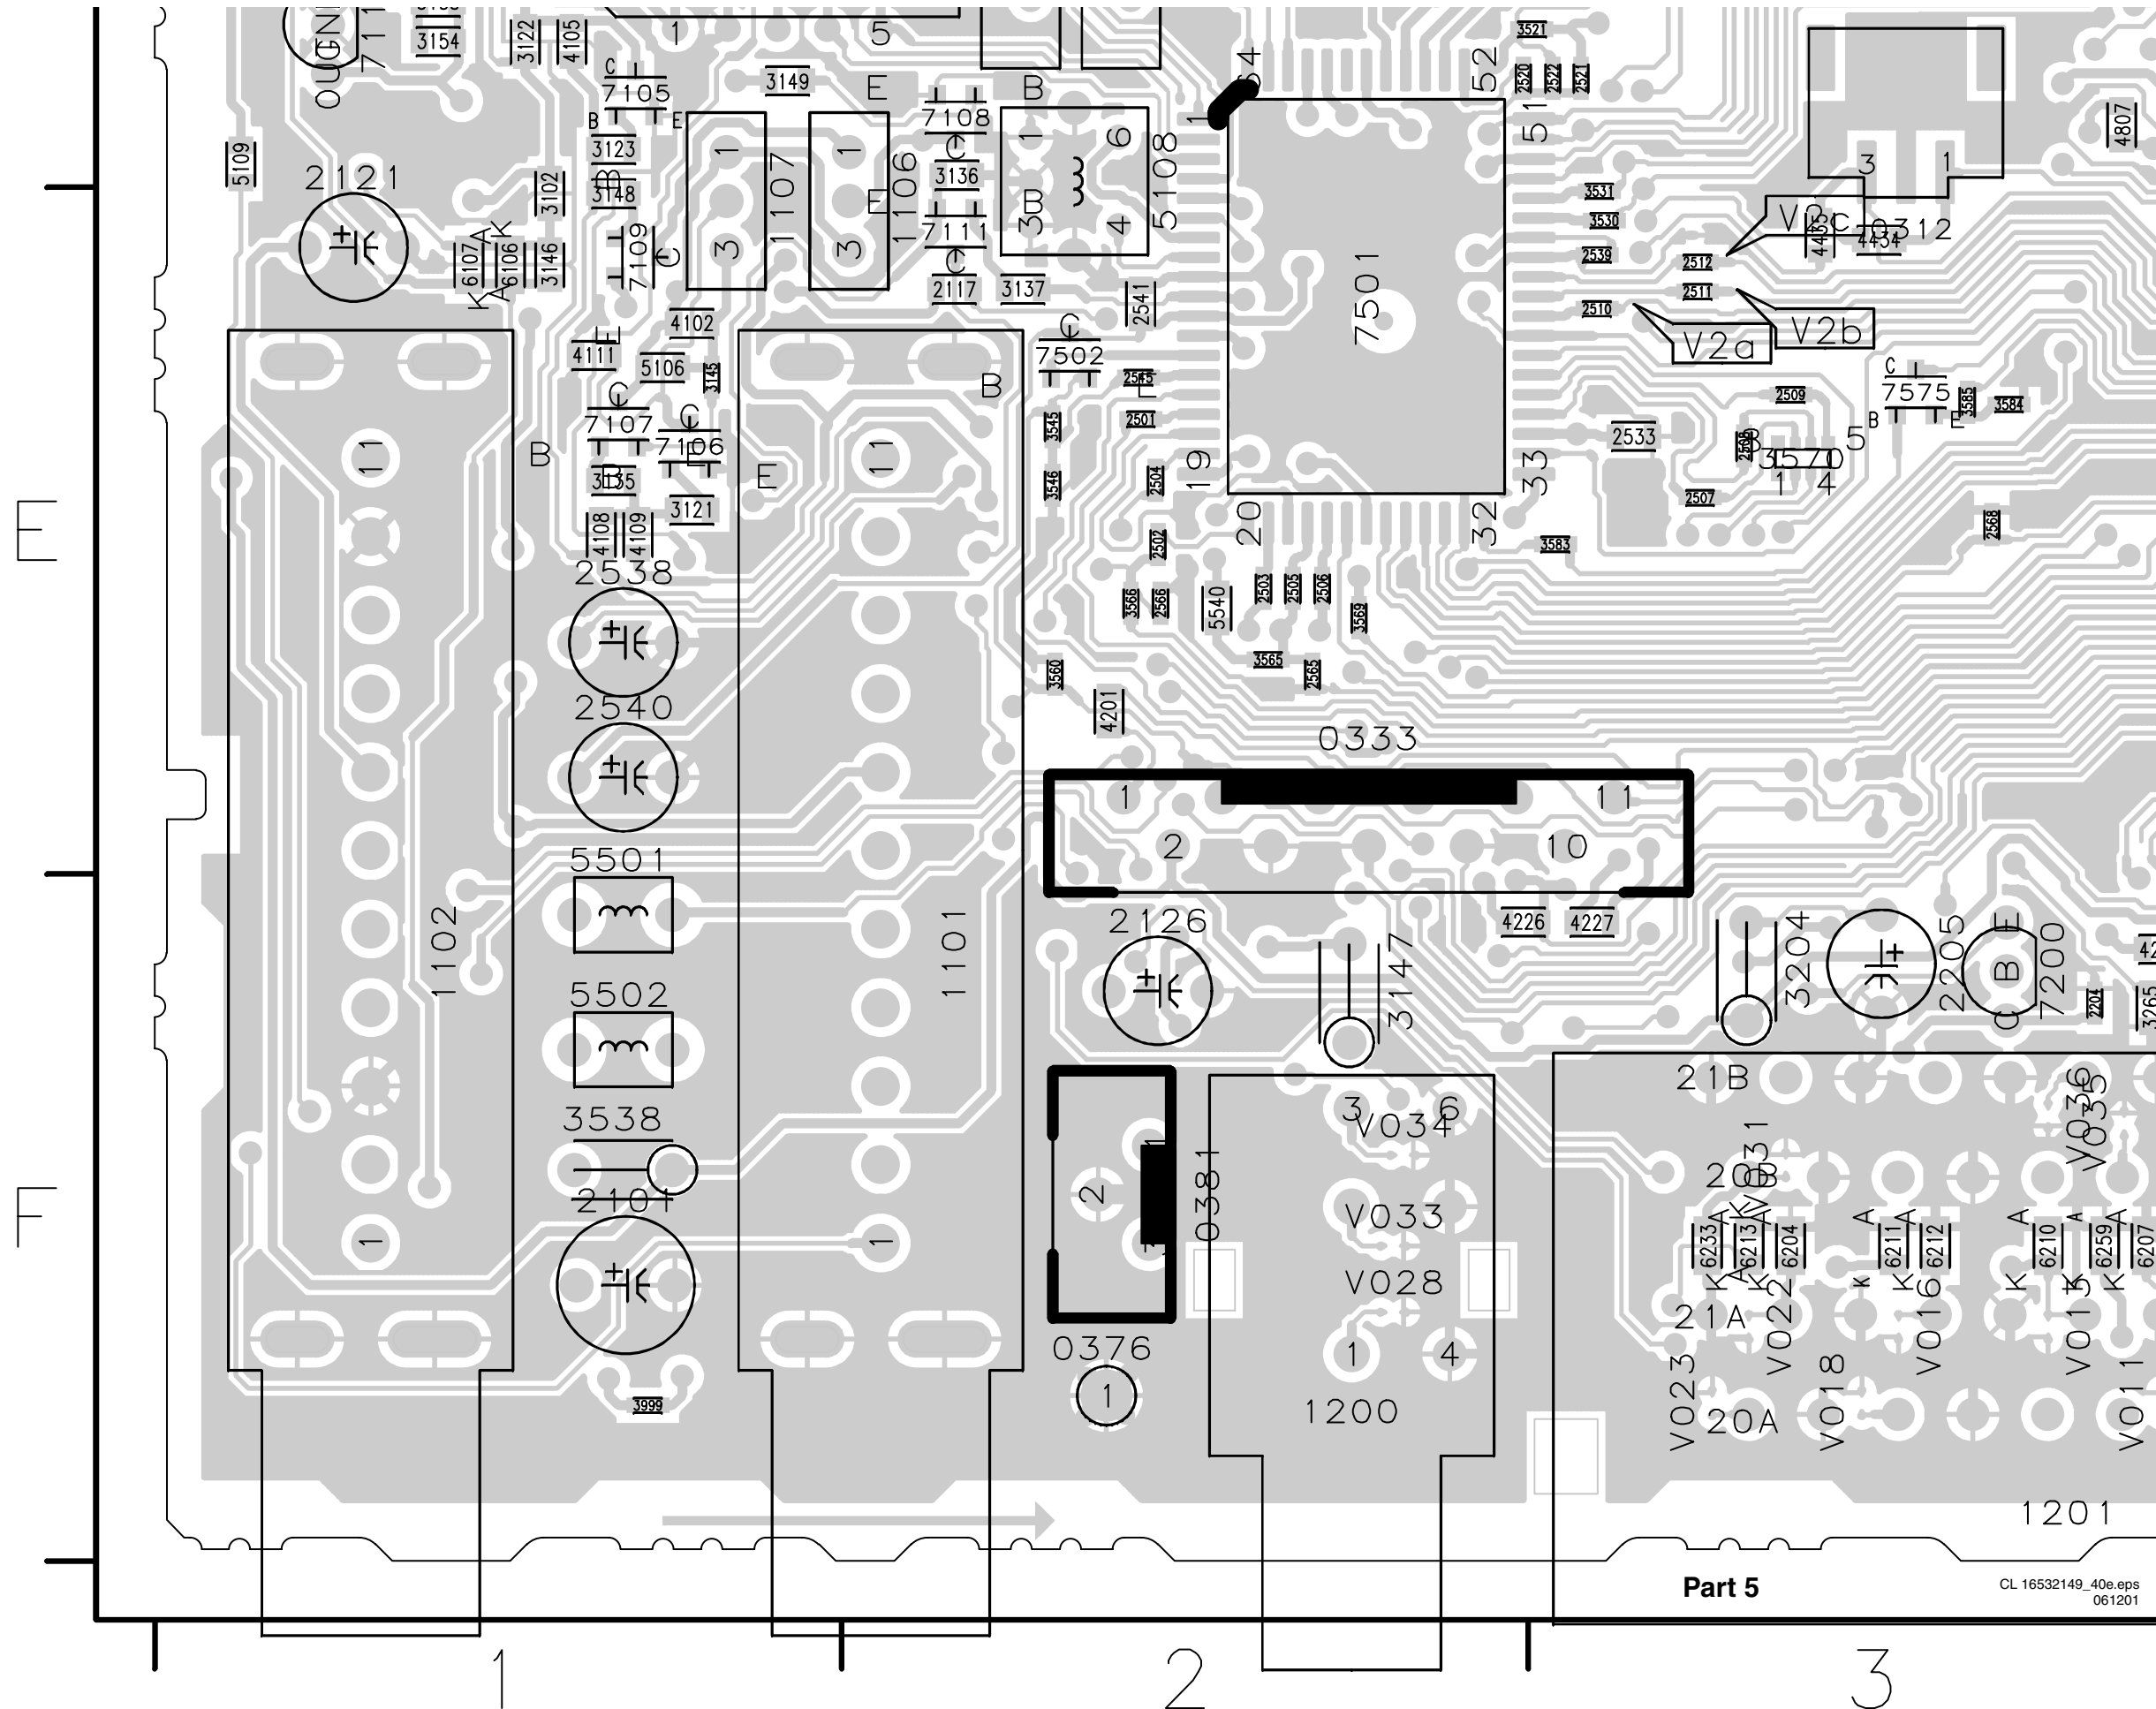


Part 5

CL 16532149_40e.eps
061201

Layout Small Signal Board (Top View Part 6)

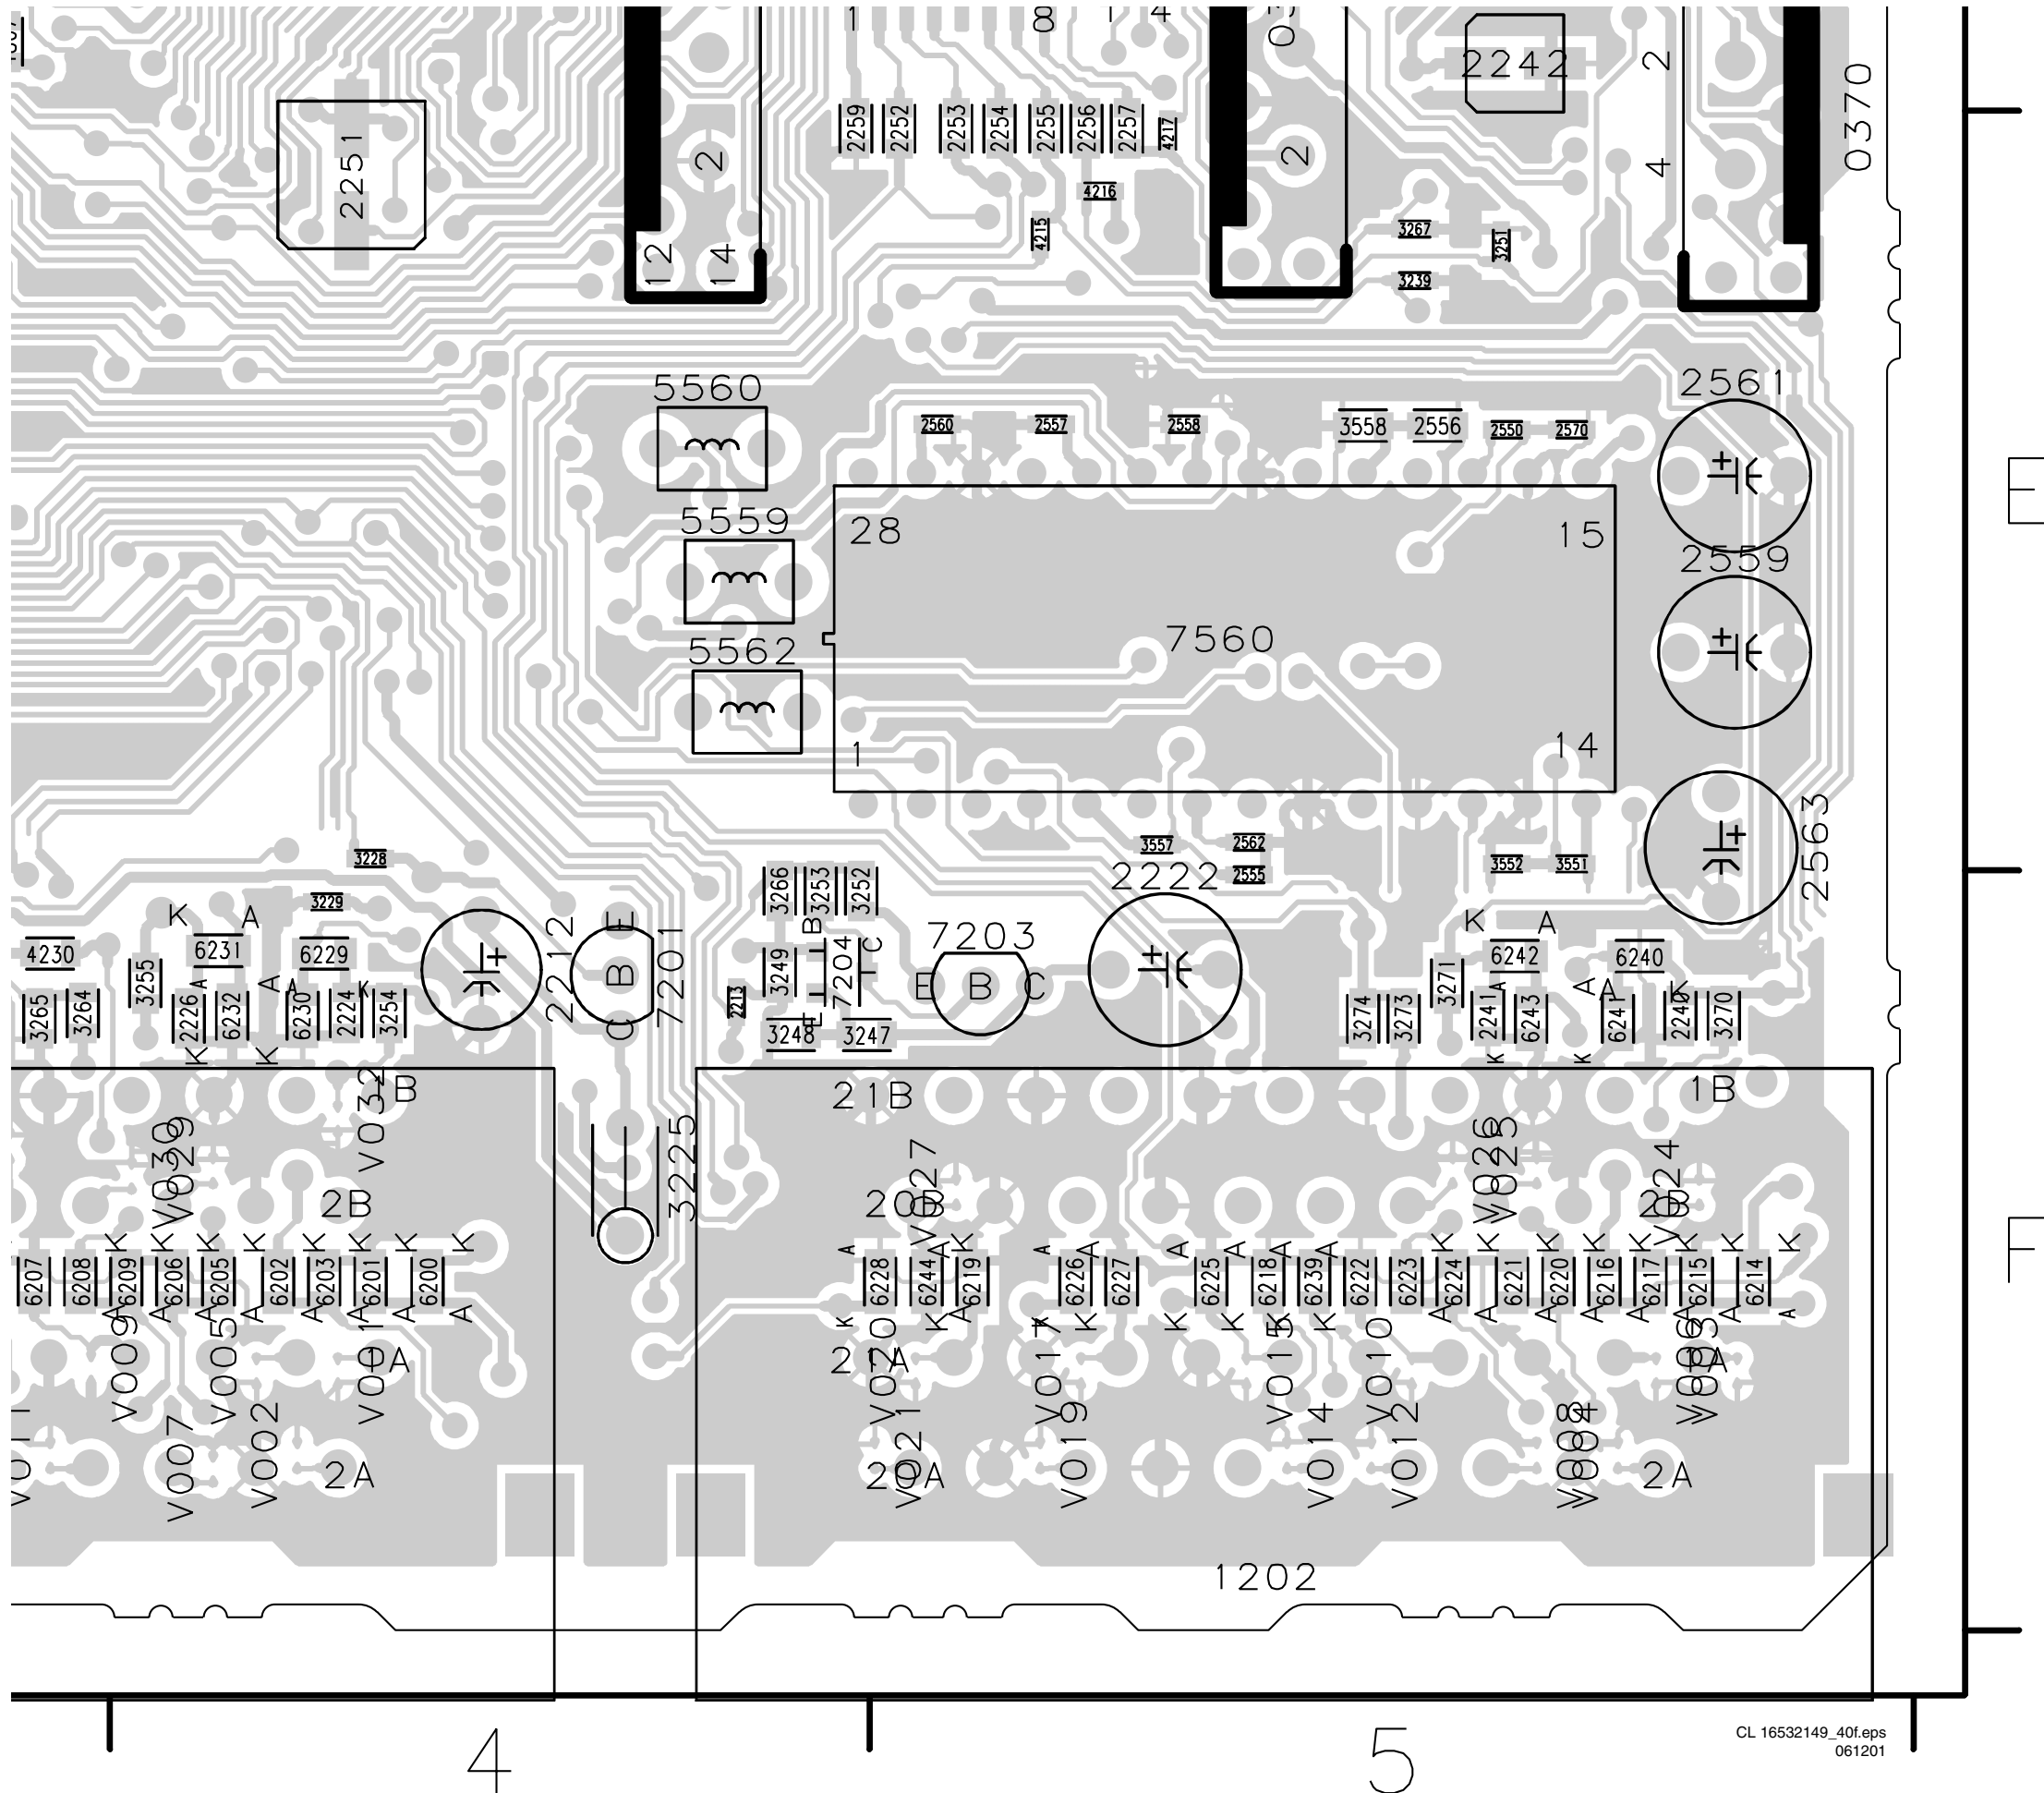


Layout Small Signal Board (Bottom Overview)

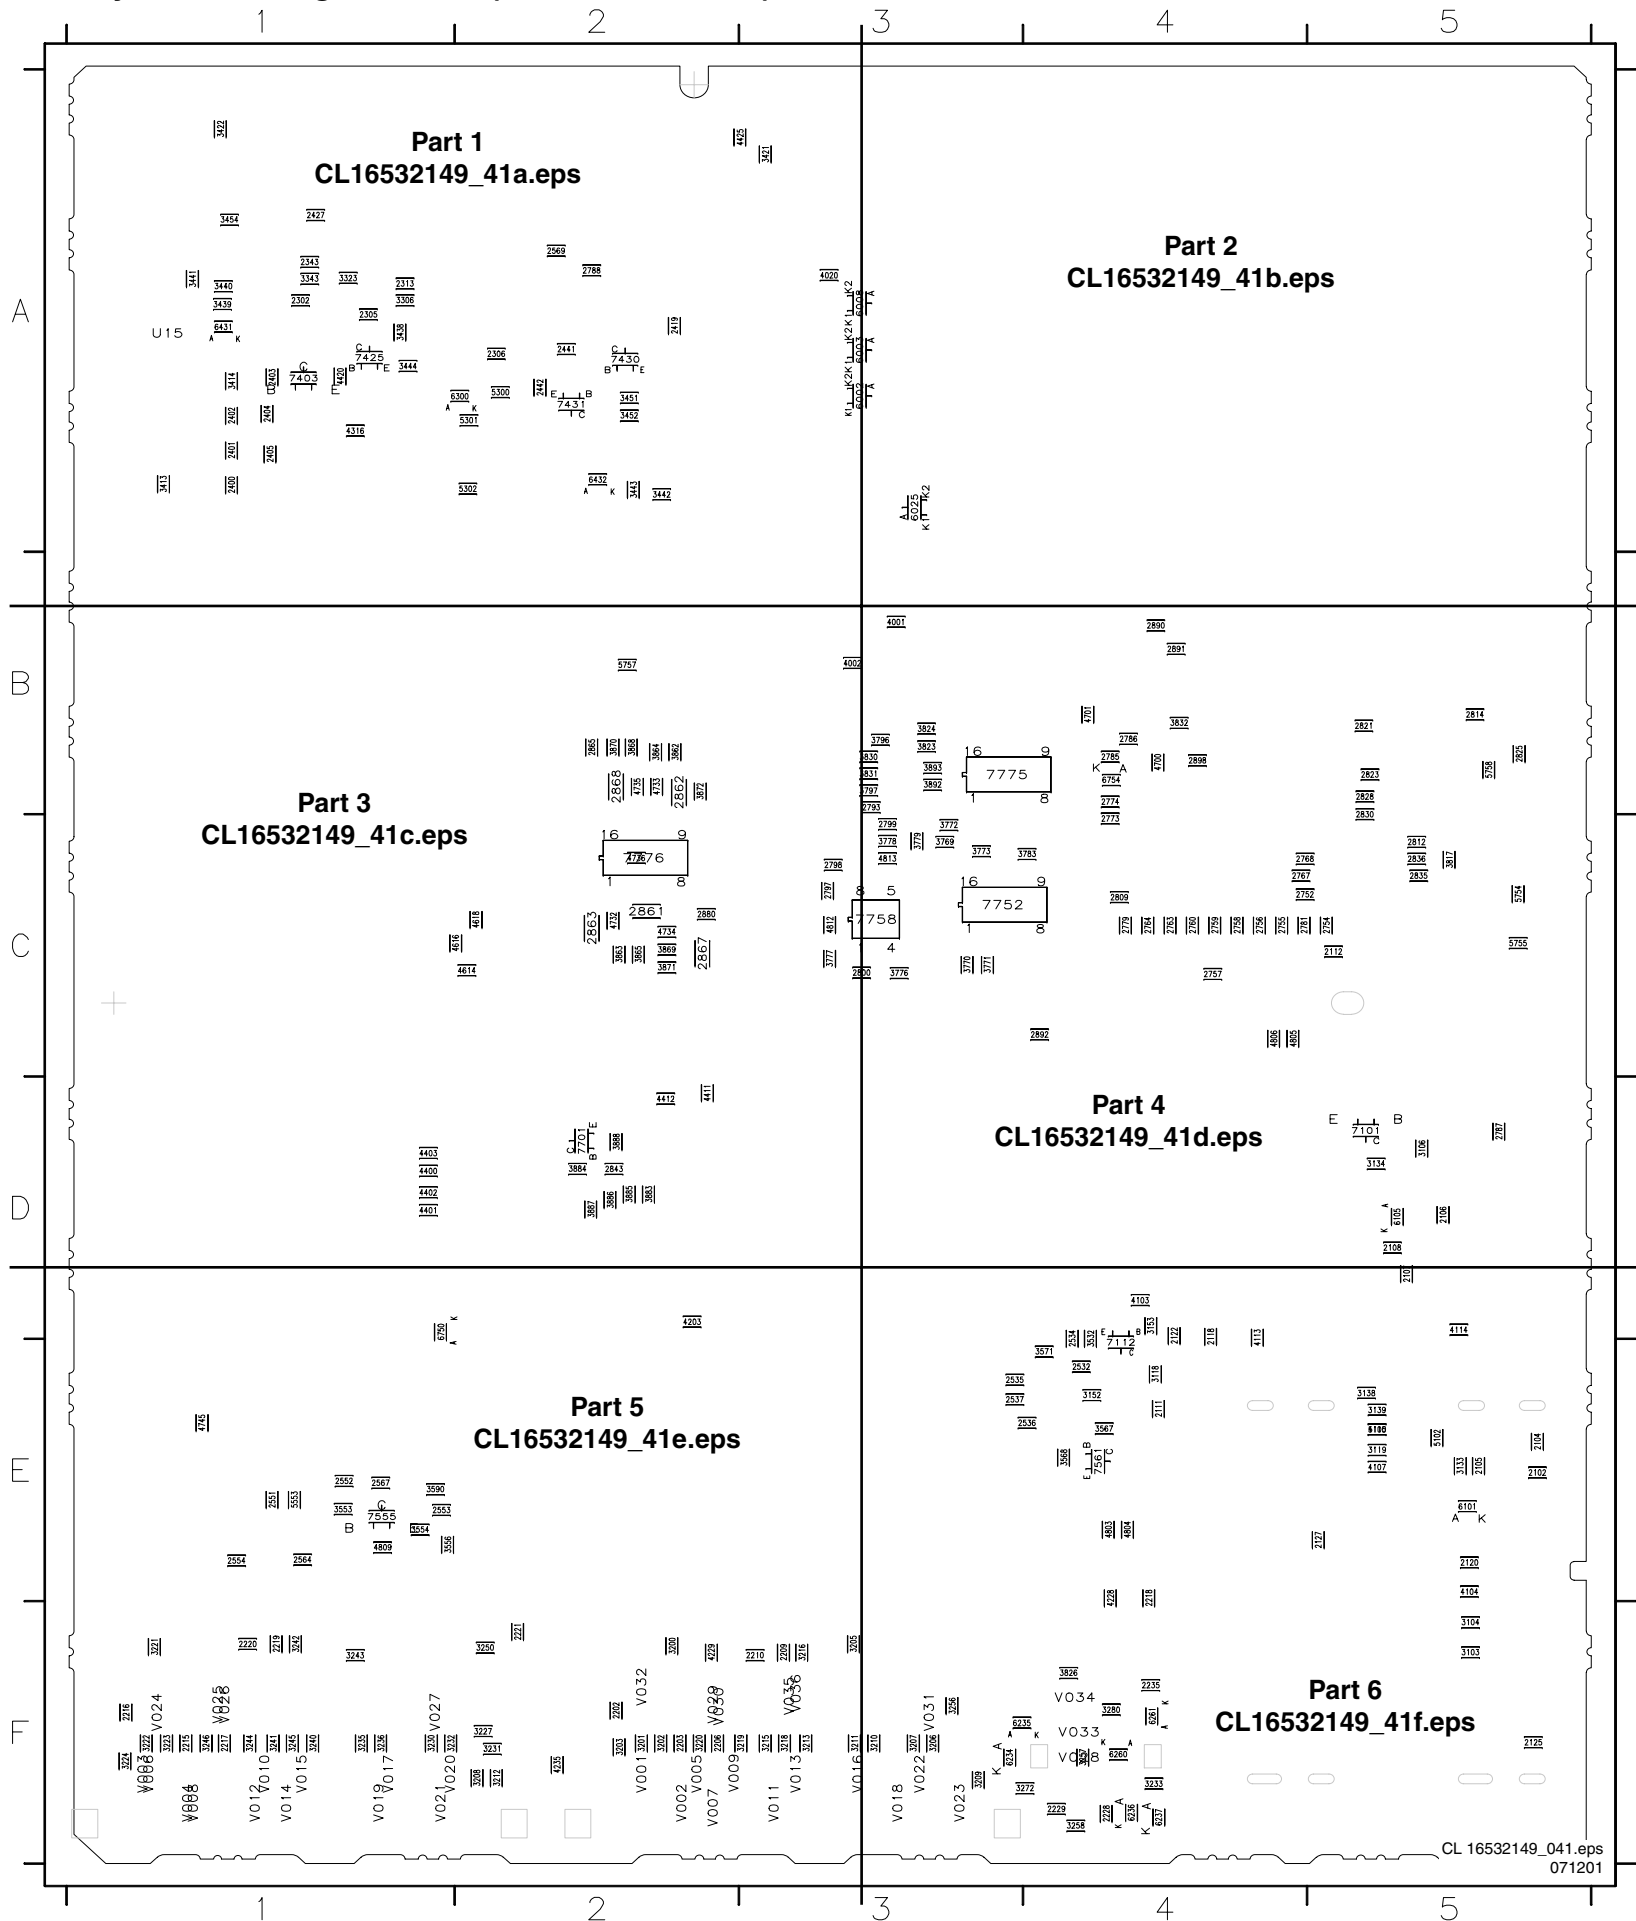


2102 E5	2787 D5	3244 F1	4103 D4	7752 C3
2104 E5	2788 A2	3245 F1	4104 E5	7758 C3
2105 E5	2793 B3	3246 F1	4107 E5	7775 B3
2106 D5	2797 C3	3250 F2	4110 E5	7776 C2
2107 D5	2798 C3	3256 F3	4113 D4	
2108 D5	2799 C3	3257 F4	4114 D5	
2111 E4	2800 C3	3258 F4	4203 D2	
2112 C5	2809 C4	3272 F4	4228 E4	
2118 D4	2812 C5	3280 F4	4229 F2	
2120 E5	2814 B5	3306 A1	4235 F2	
2122 D4	2821 B5	3323 A1	4316 A1	
2125 F5	2823 B5	3343 A1	4400 D1	
2127 E5	2825 B5	3413 A1	4401 D1	
2202 F2	2828 B5	3414 A1	4402 D1	
2203 F2	2830 C5	3421 A3	4403 D1	
2206 F2	2835 C5	3422 A1	4411 D2	
2209 F3	2836 C5	3438 A1	4412 D2	
2210 F3	2843 D2	3439 A1	4420 A1	
2215 F1	2861 C2	3440 A1	4425 A3	
2216 F1	2862 B2	3441 A1	4614 C2	
2217 F1	2863 C2	3442 A2	4616 C2	
2218 E4	2865 B2	3443 A2	4618 C2	
2219 F1	2867 C2	3444 A1	4700 B4	
2220 F1	2868 B2	3451 A2	4701 B4	
2221 F2	2880 C2	3452 A2	4732 C2	
2228 F4	2890 B4	3454 A1	4733 B2	
2229 F4	2891 B4	3532 D4	4734 C2	
2235 F4	2892 C4	3553 E1	4735 B2	
2302 A1	2898 B4	3554 E1	4736 C2	
2305 A1	3103 F5	3556 E1	4745 E1	
2306 A2	3104 F5	3567 E4	4803 E4	
2313 A1	3106 D5	3568 E4	4804 E4	
2343 A1	3118 E4	3571 E4	4805 C4	
2400 A1	3119 E5	3590 E1	4806 C4	
2401 A1	3133 E5	3769 C3	4809 E1	
2402 A1	3134 D5	3770 C3	4812 C3	
2403 A1	3138 E5	3771 C3	4813 C3	
2404 A1	3139 E5	3772 C3	5102 E5	
2405 A1	3152 E4	3773 C3	5105 E5	
2419 A2	3153 D4	3776 C3	5300 A2	
2427 A1	3200 F2	3777 C3	5301 A2	
2441 A2	3201 F2	3778 C3	5302 A2	
2442 A2	3202 F2	3779 C3	5553 E1	
2532 E4	3203 F2	3783 C4	5754 C5	
2534 D4	3205 F3	3796 B3	5755 C5	
2535 E3	3206 F3	3797 B3	5757 B2	
2536 E4	3207 F3	3817 C5	5758 B5	
2537 E3	3208 F2	3823 B3	6002 A3	
2551 E1	3209 F3	3824 B3	6003 A3	
2552 E1	3210 F3	3826 F4	6008 A3	
2553 E1	3211 F3	3830 B3	6025 A3	
2554 E1	3212 F2	3831 B3	6101 E5	
2564 E1	3213 F3	3832 B4	6105 D5	
2567 E1	3215 F3	3862 B2	6234 F3	
2569 A2	3216 F3	3863 C2	6235 F3	
2752 C4	3218 F3	3864 B2	6236 F4	
2754 C5	3219 F3	3865 C2	6237 F4	
2755 C4	3220 F2	3868 B2	6260 F4	
2756 C4	3221 F1	3869 C2	6261 F4	
2757 C4	3222 F1	3870 B2	6300 A2	
2758 C4	3223 F1	3871 C2	6431 A1	
2759 C4	3224 F1	3872 B2	6432 A2	
2760 C4	3227 F2	3883 D2	6750 D1	
2763 C4	3230 F1	3884 D2	6754 B4	
2764 C4	3231 F2	3885 D2	7101 D5	
2767 C4	3232 F1	3886 D2	7112 D4	
2768 C4	3233 F4	3887 D2	7403 A1	
2773 C4	3235 F1	3888 D2	7425 A1	
2774 B4	3236 F1	3892 B3	7430 A2	
2779 C4	3240 F1	3893 B3	7431 A2	
2781 C4	3241 F1	4001 B3	7555 E1	
2785 B4	3242 F1	4002 B3	7561 E4	
2786 B4	3243 F1	4020 A3	7701 D2	

Layout Small Signal Board (Bottom View Part 1)


1 2 3

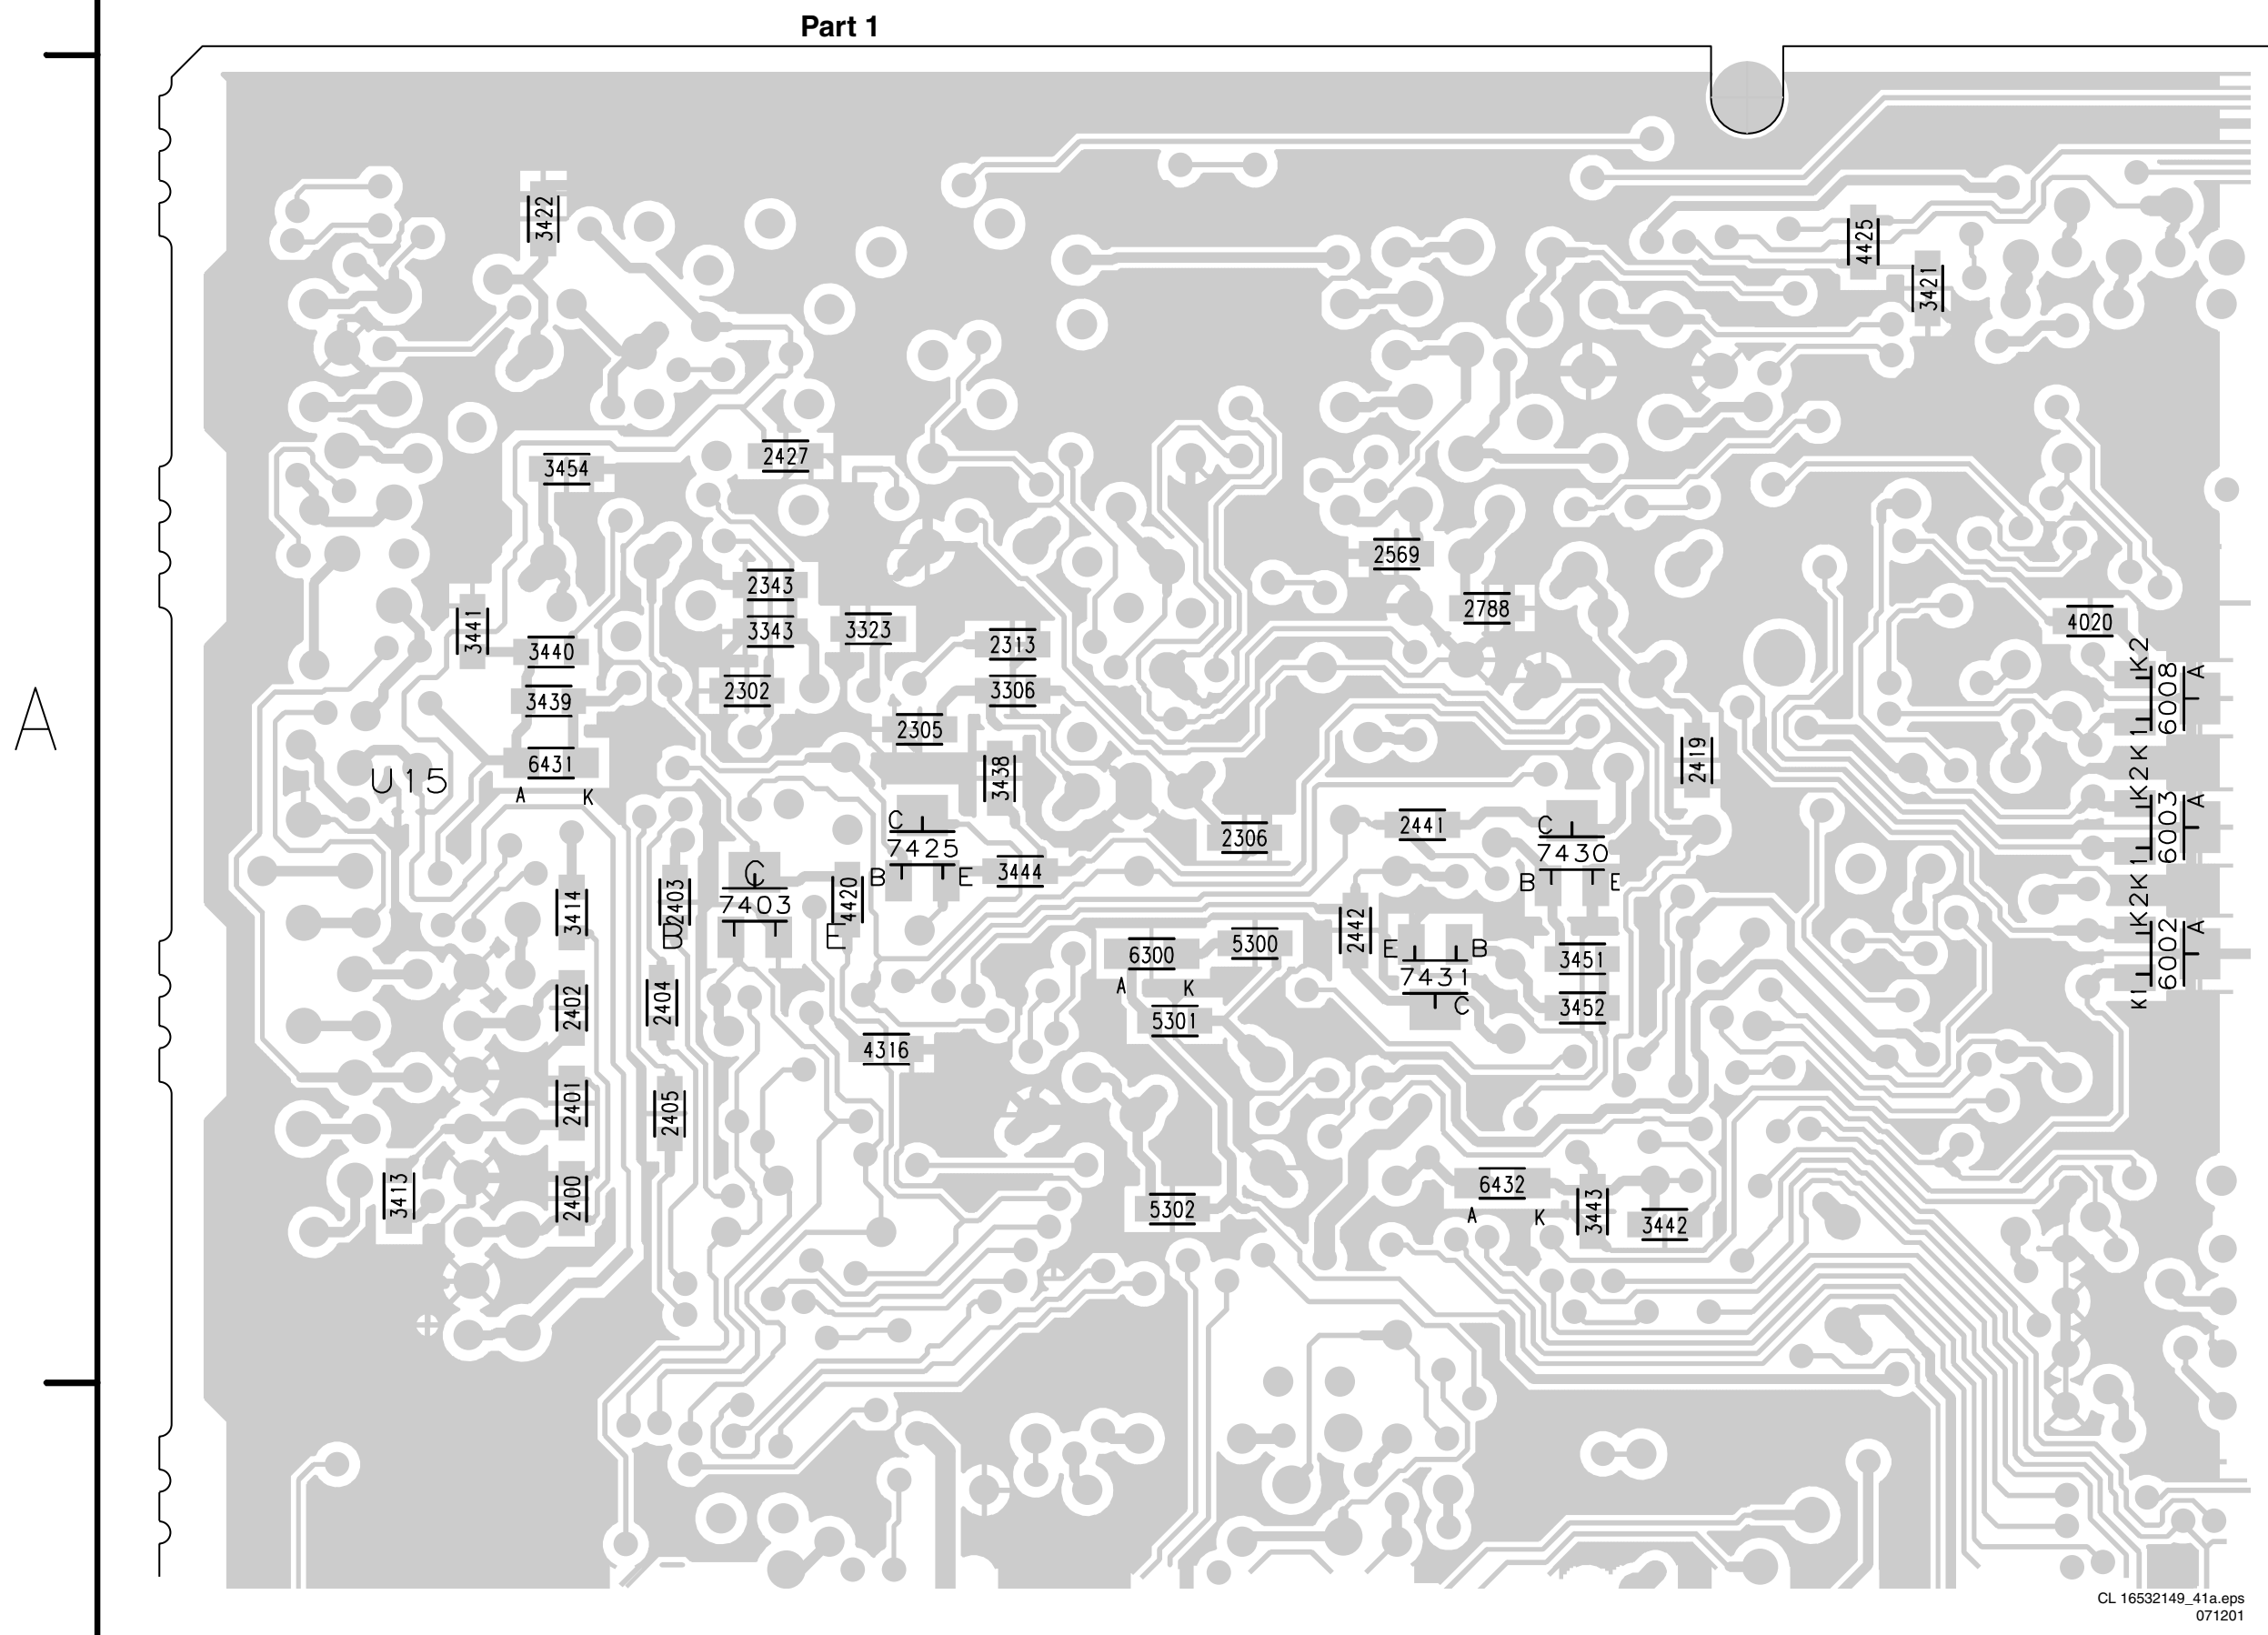

Layout Small Signal Board (Bottom View Part 2)

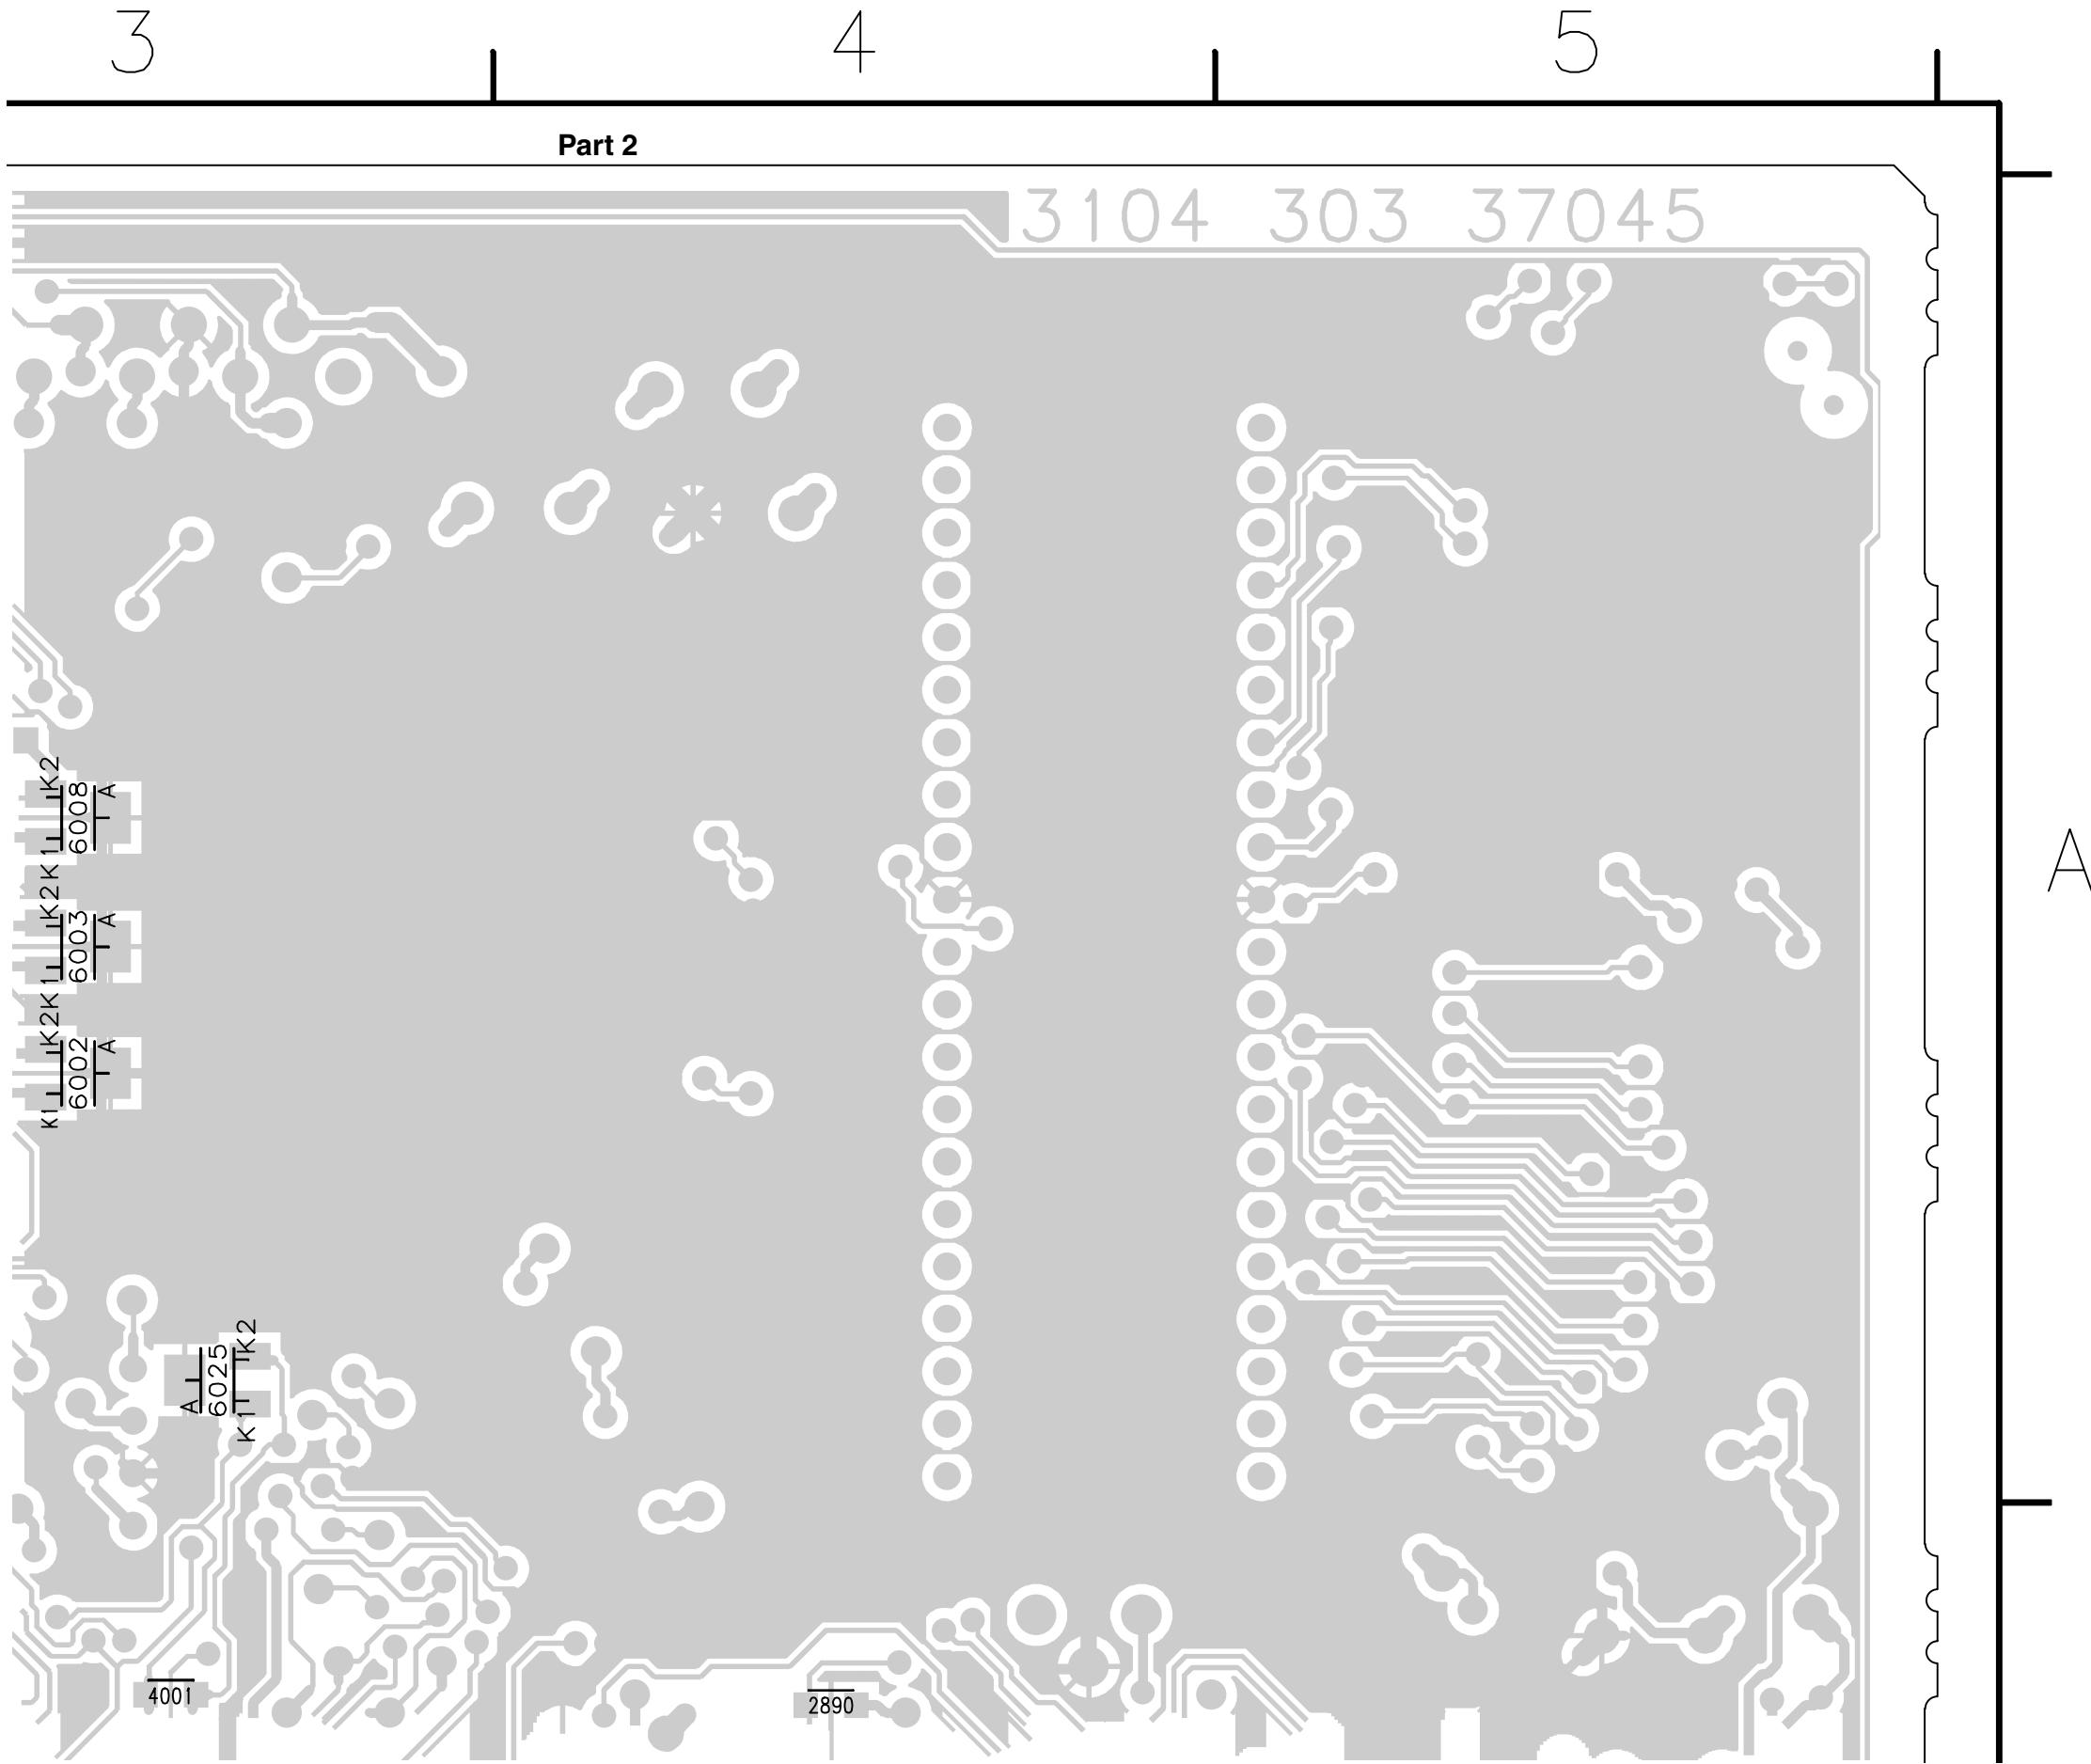


Layout Small Signal Board (Bottom View Part 3)

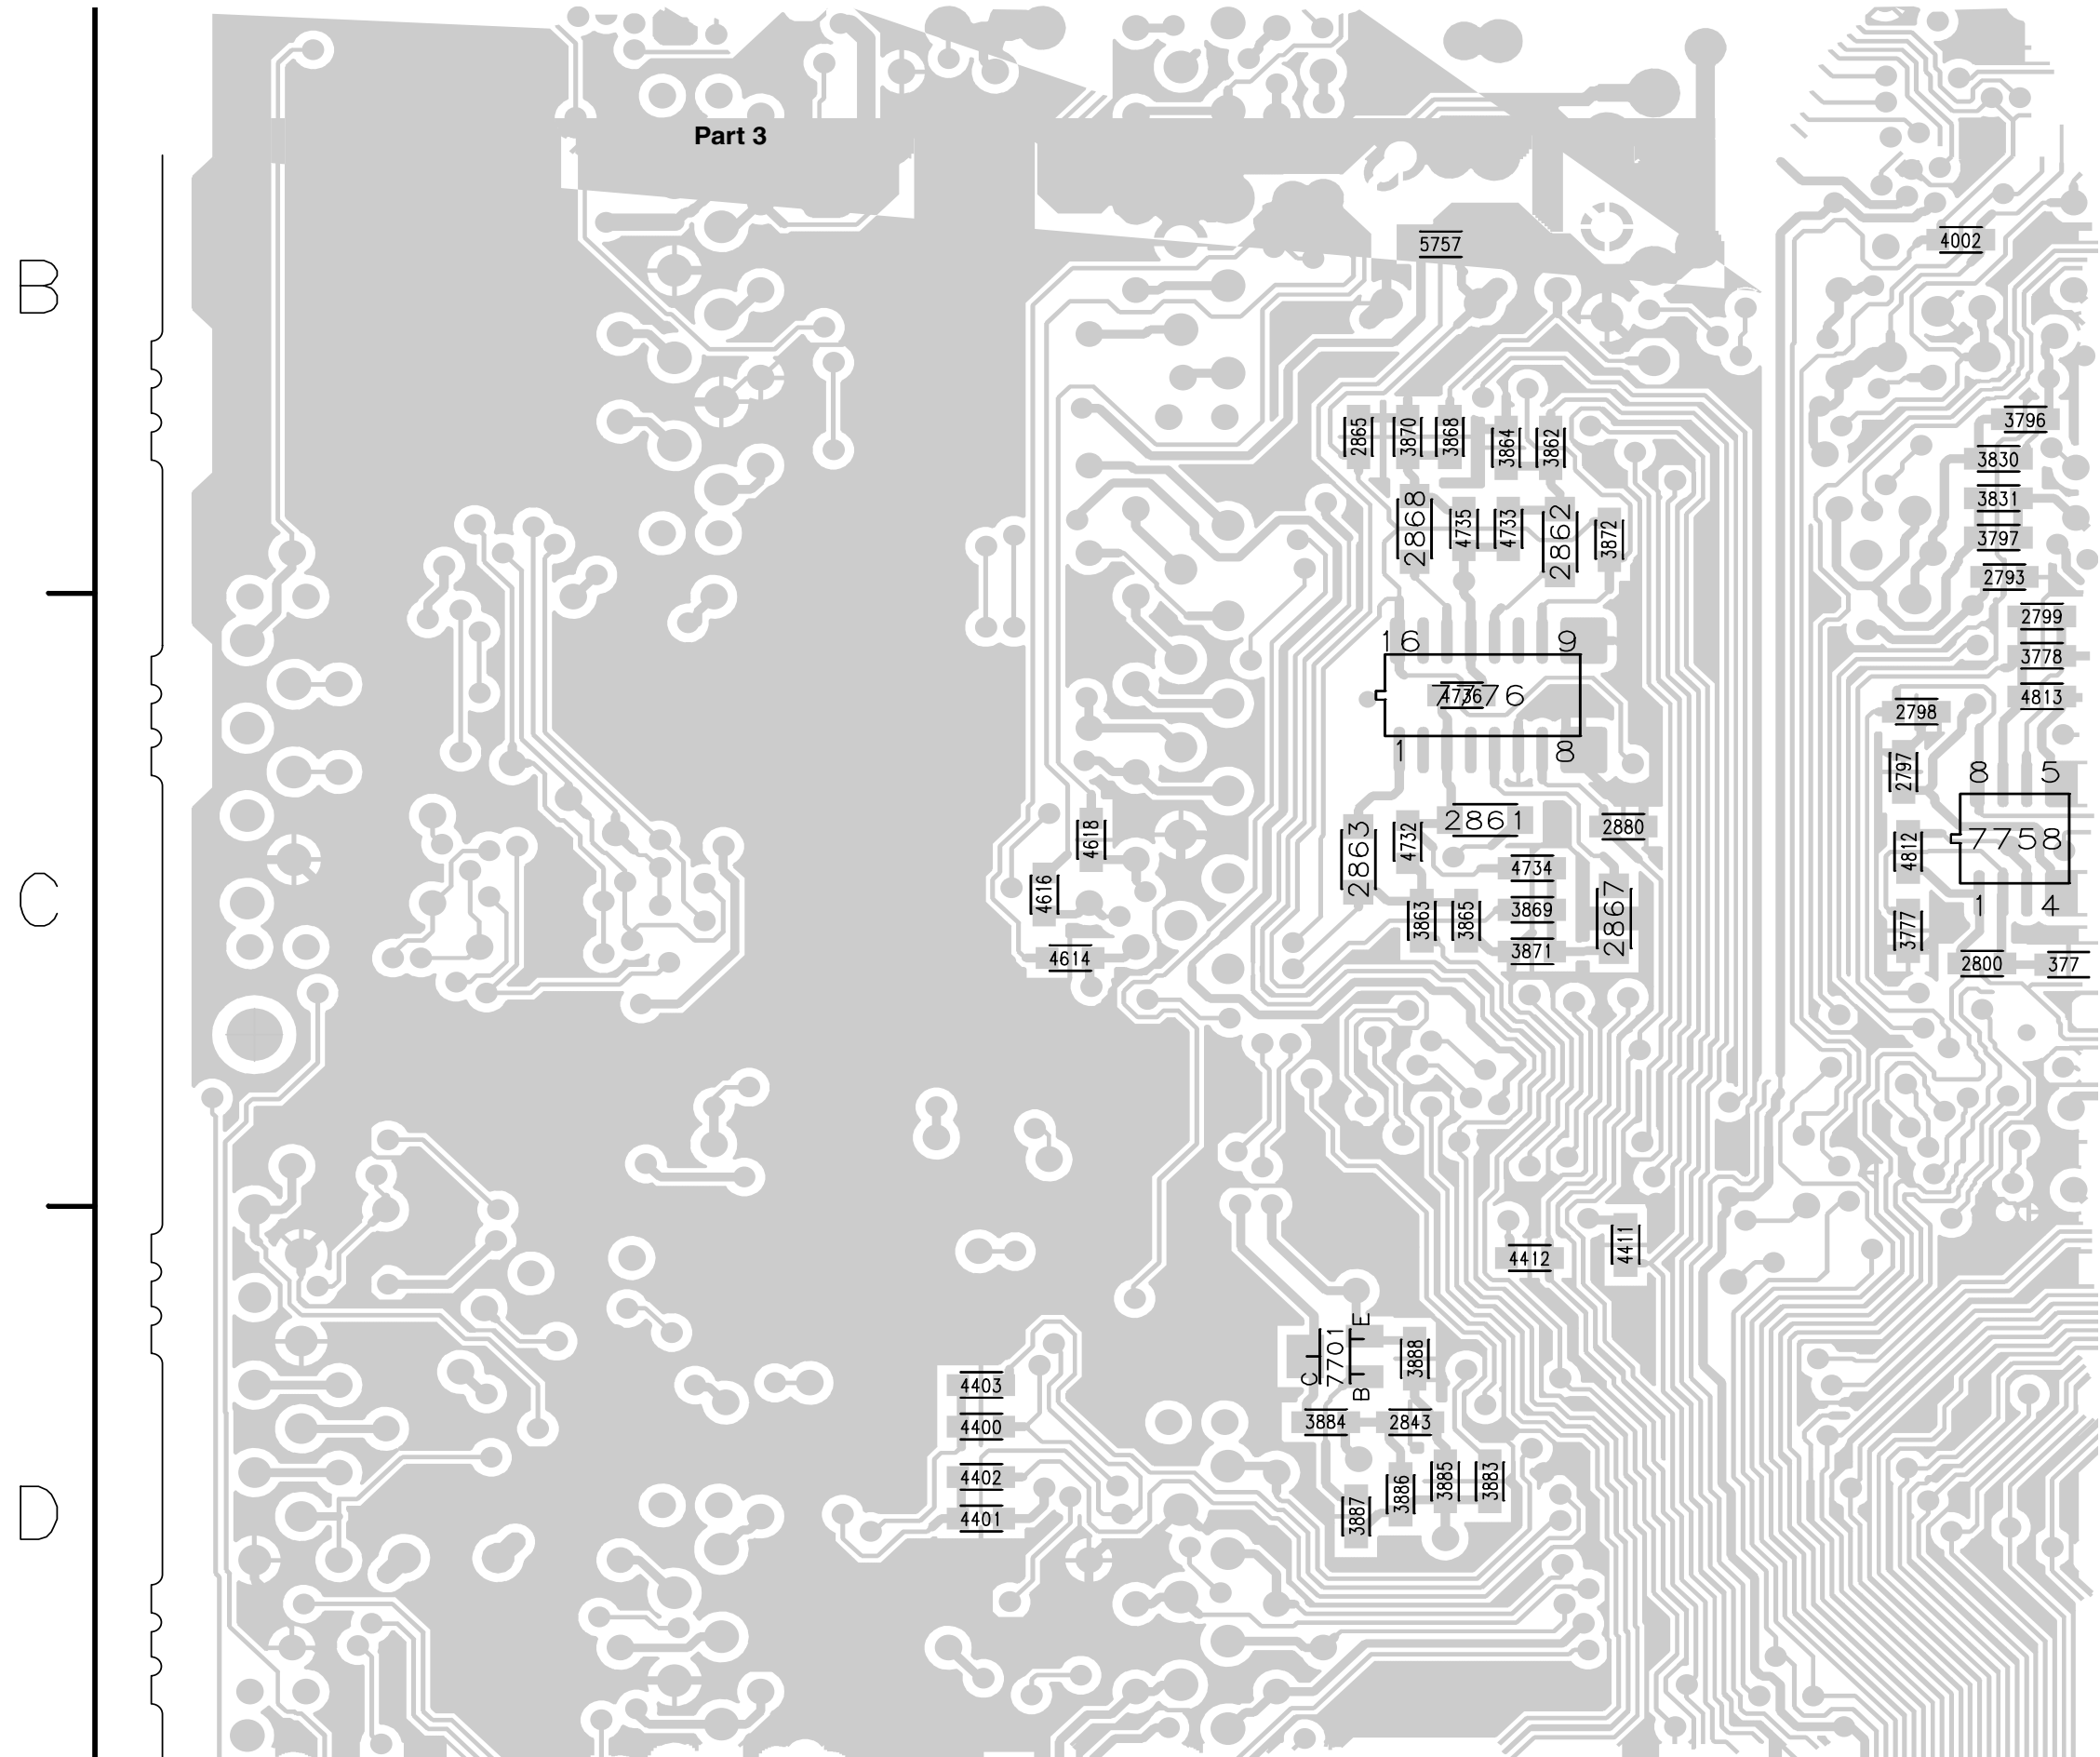


Layout Small Signal Board (Bottom View Part 4)

Part 4

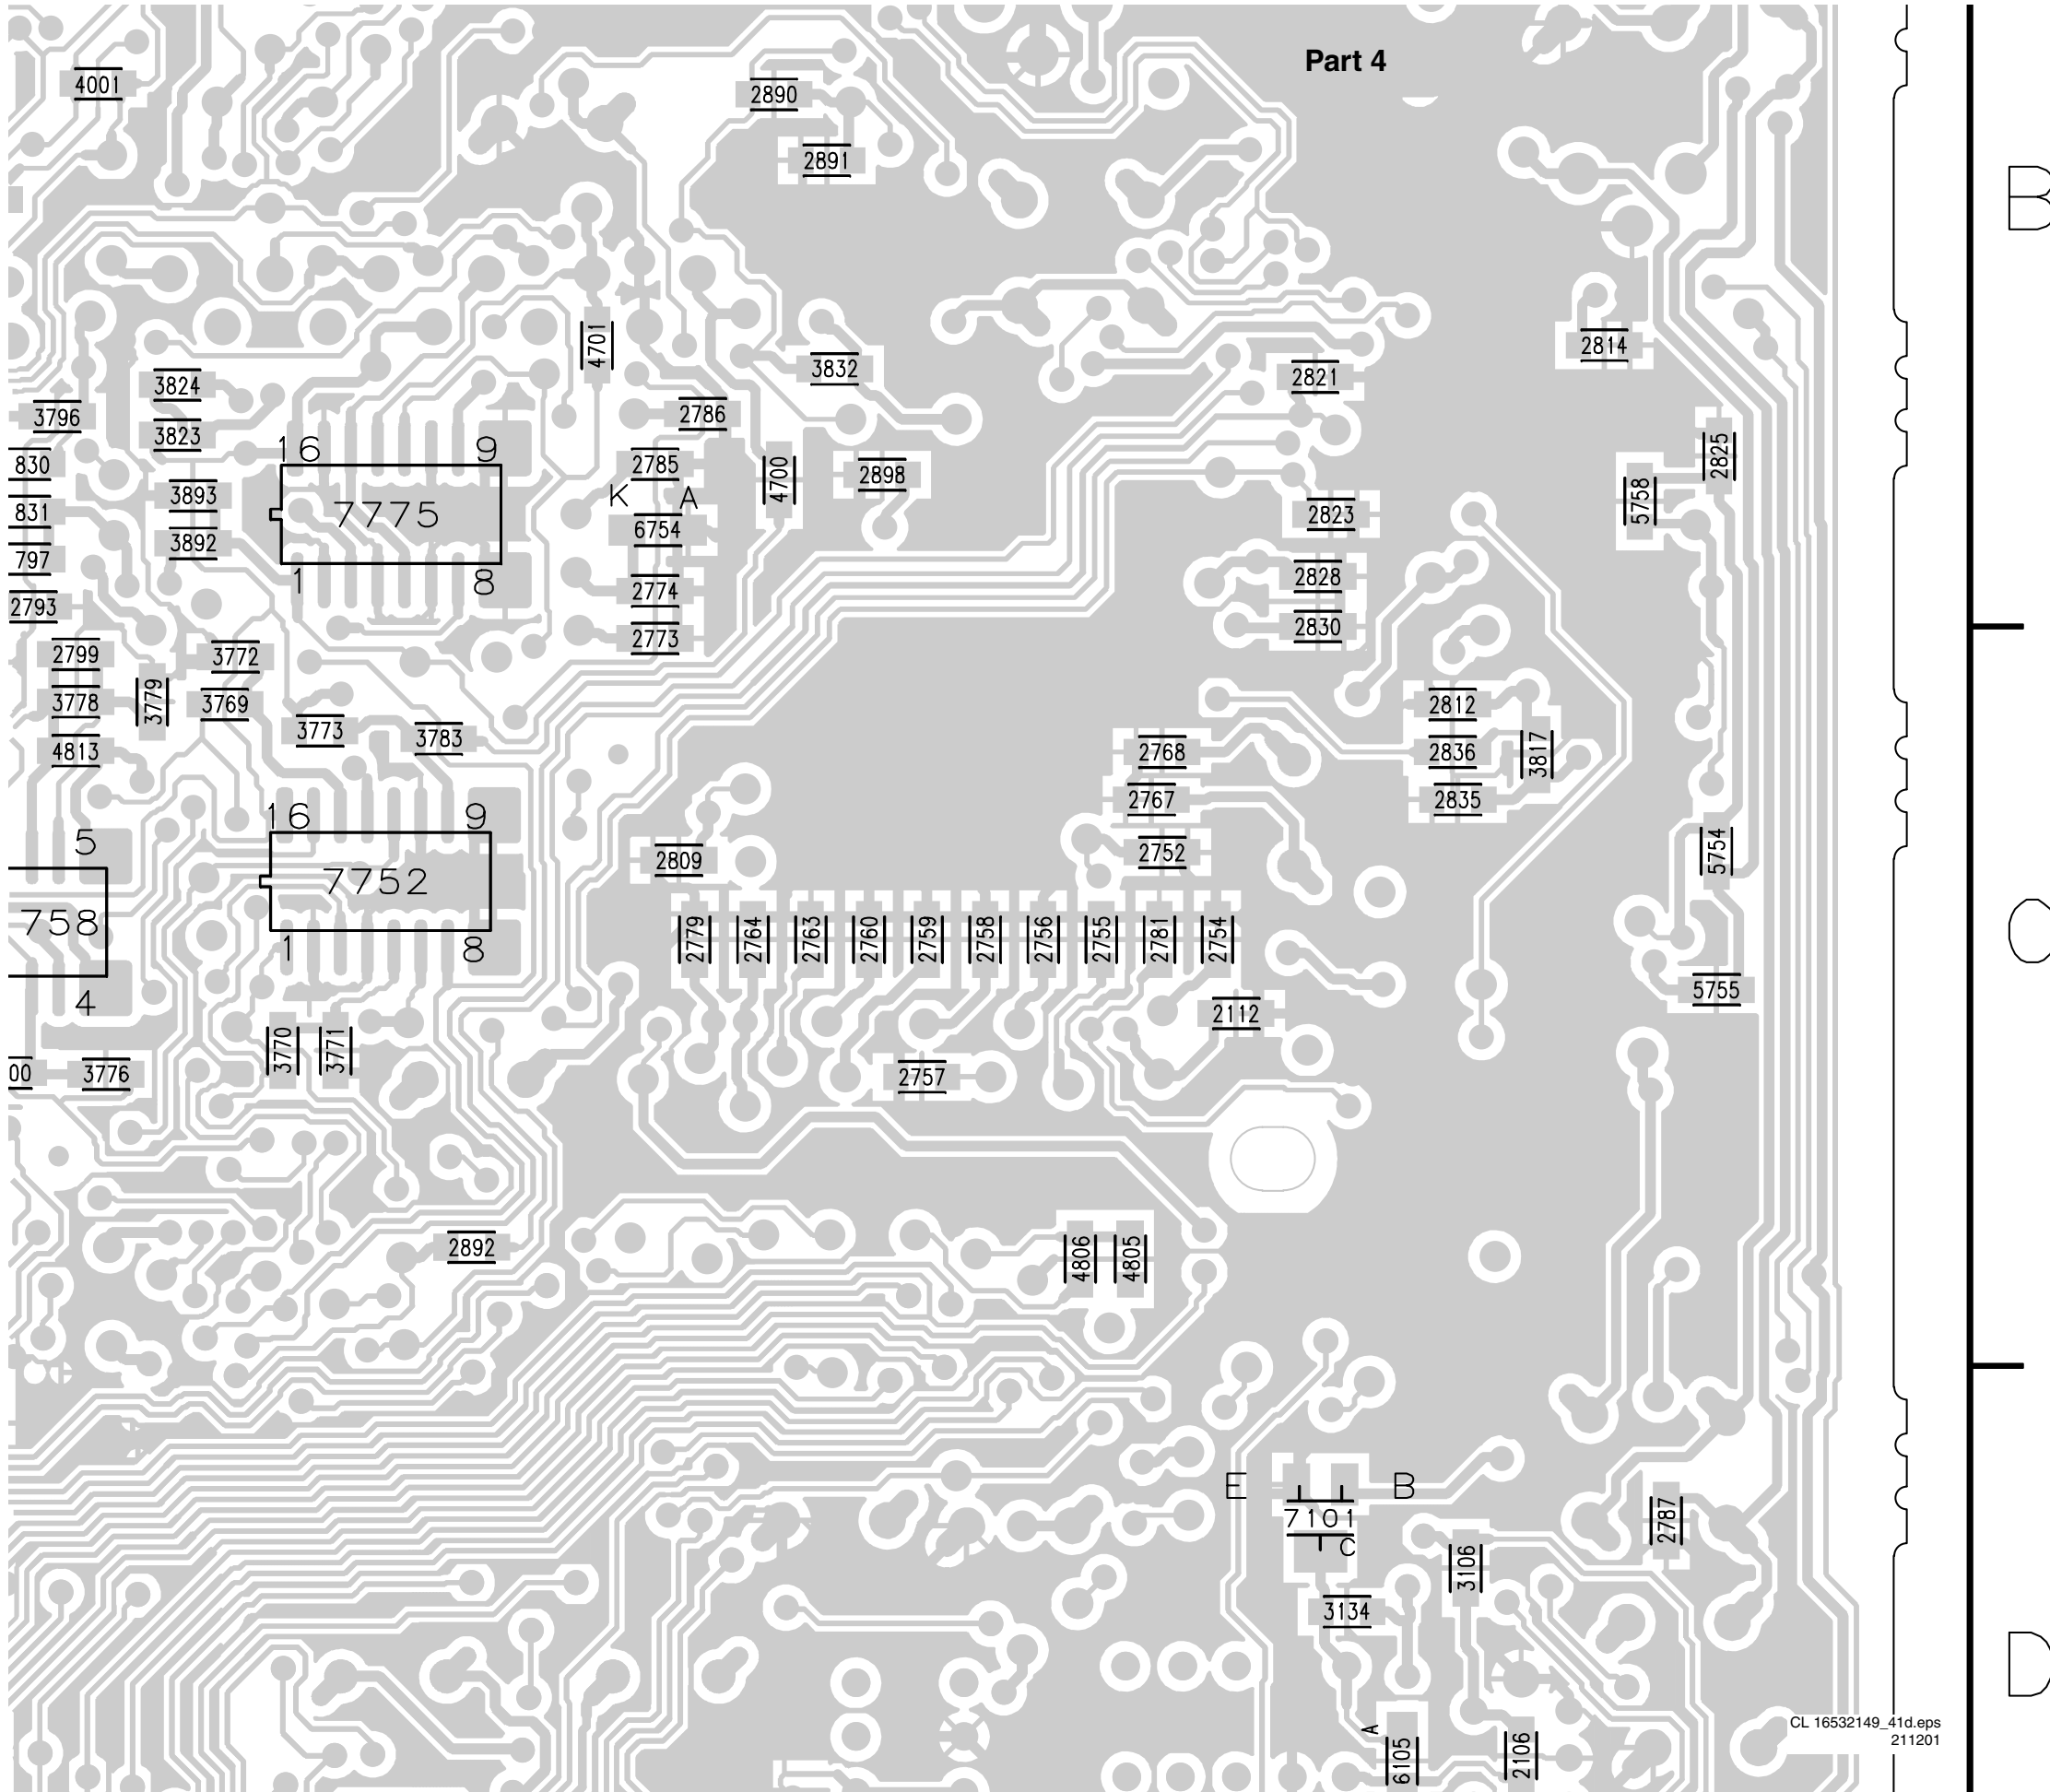

Layout Small Signal Board (Bottom View Part 5)

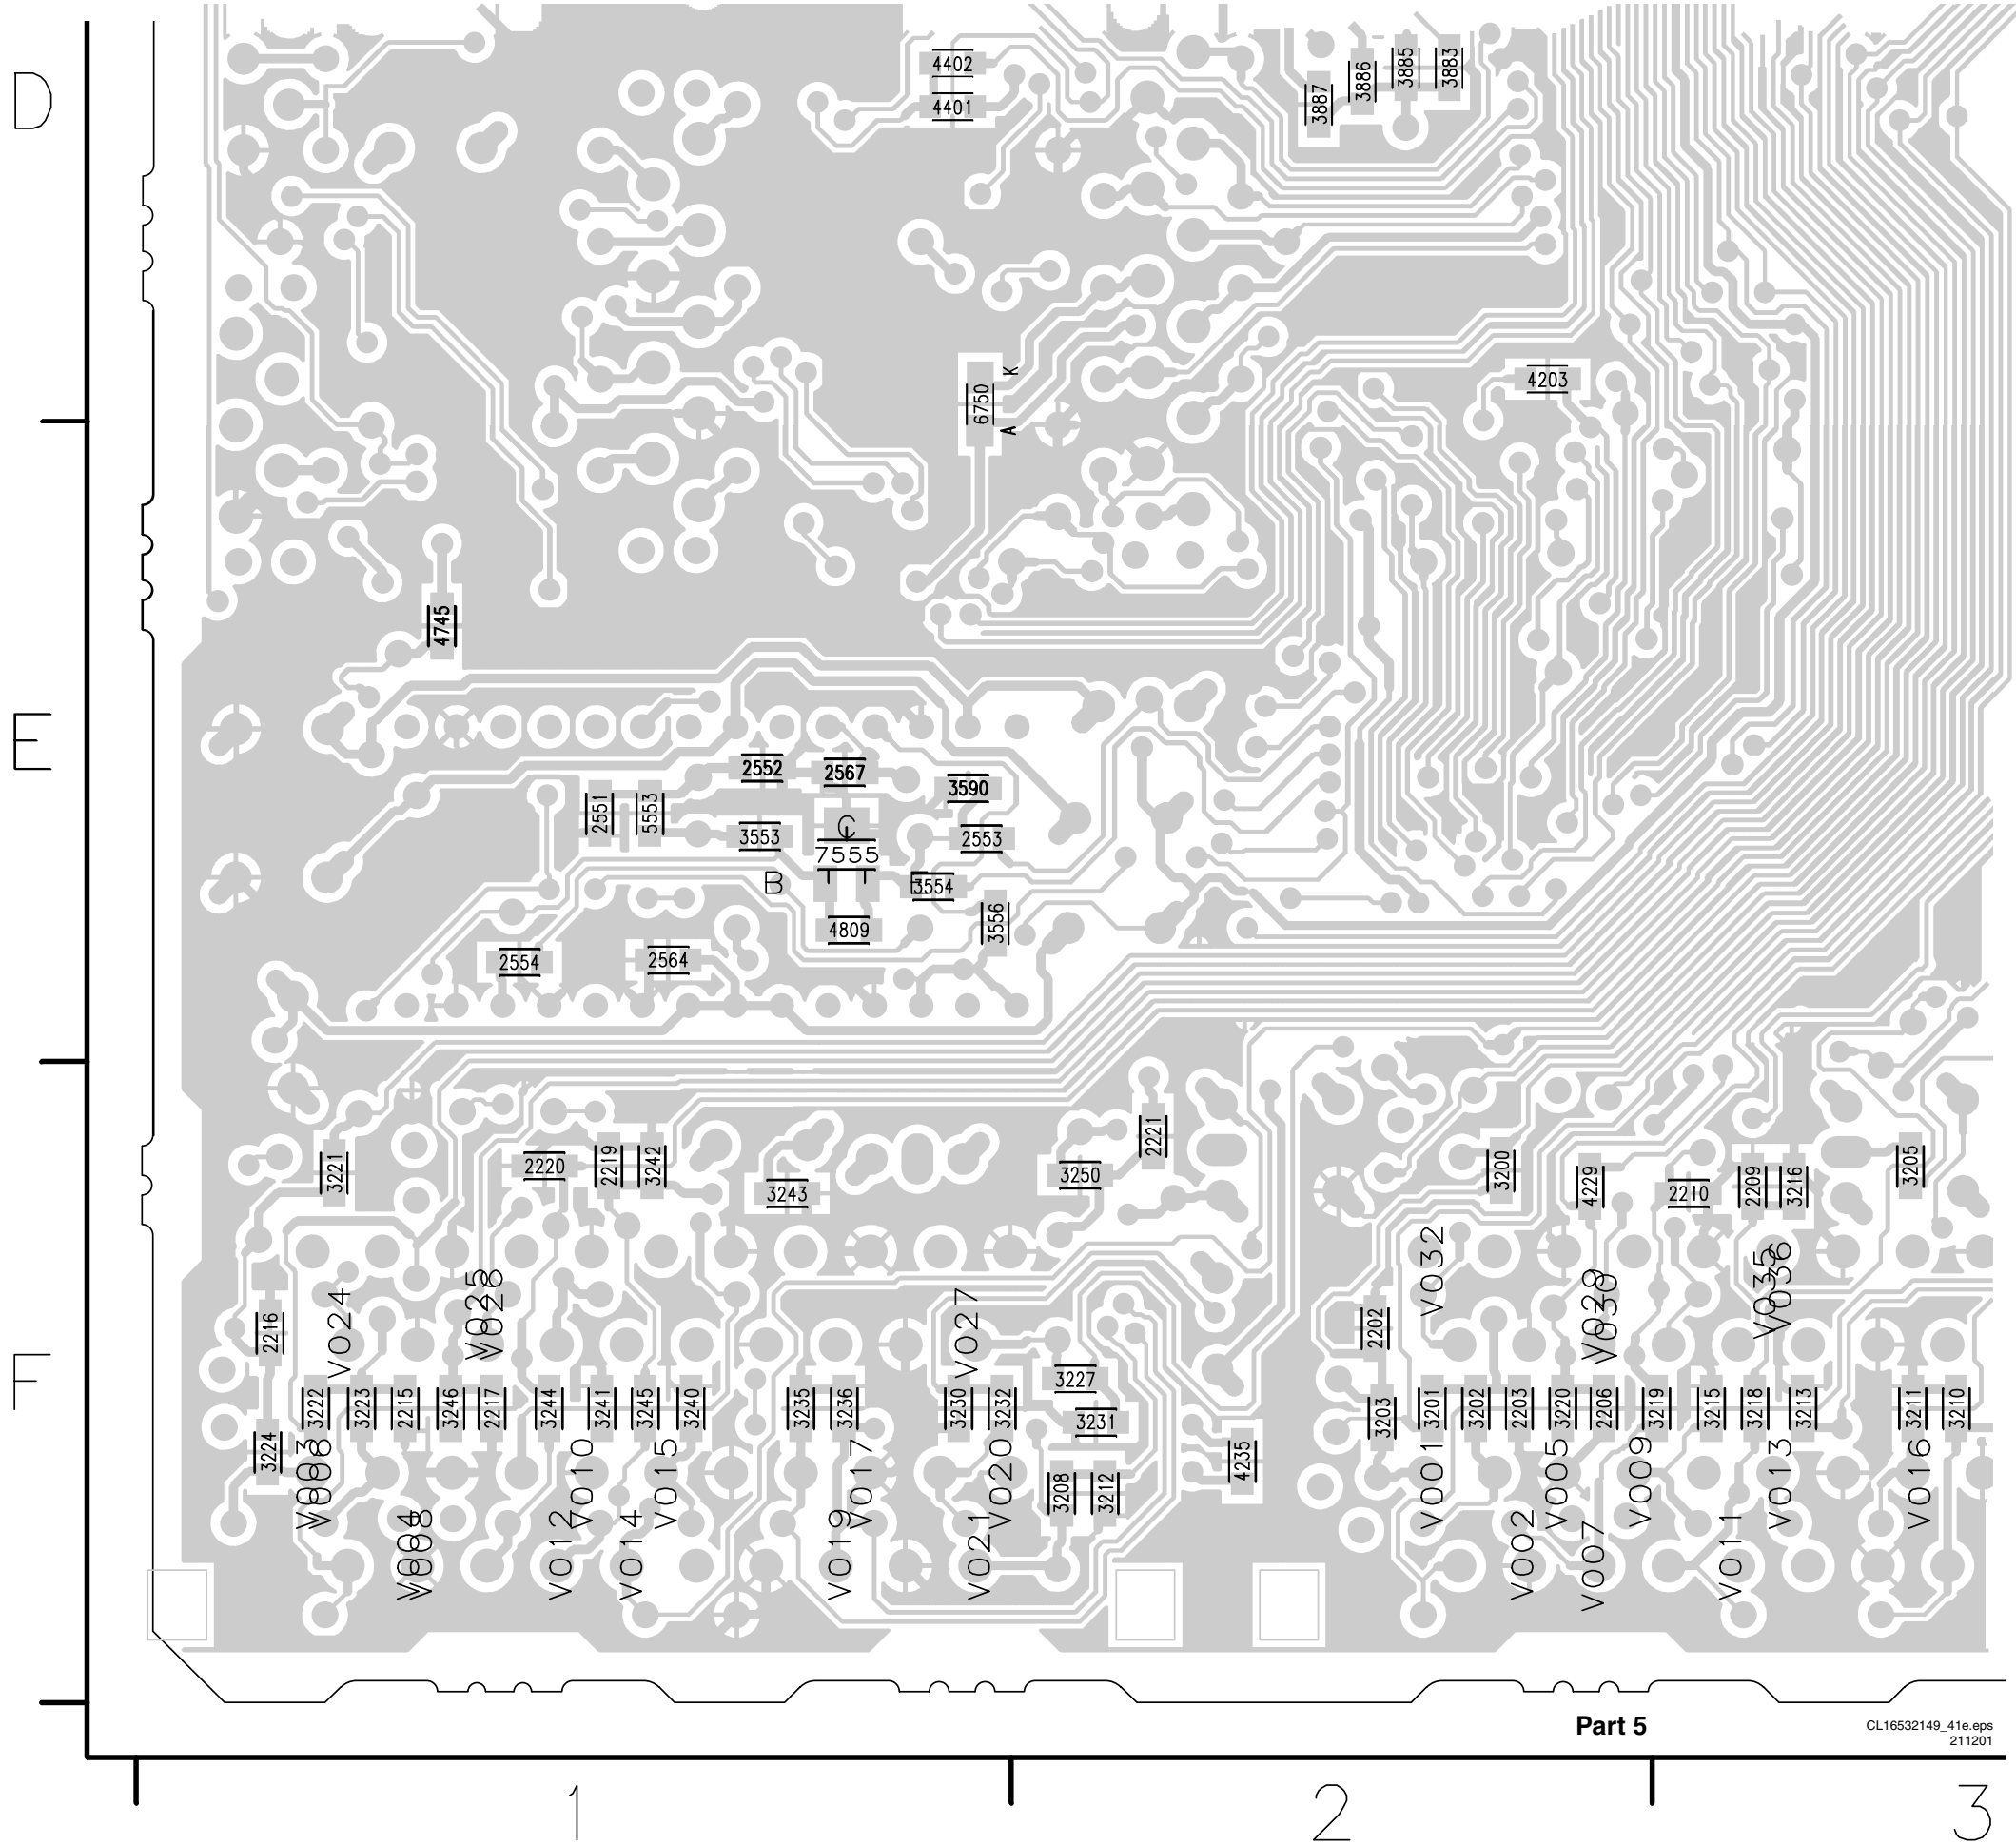

Part 5


CL16532149_41e.eps
211201

1


2

3

Feature Box 7 Panel: Feature Box

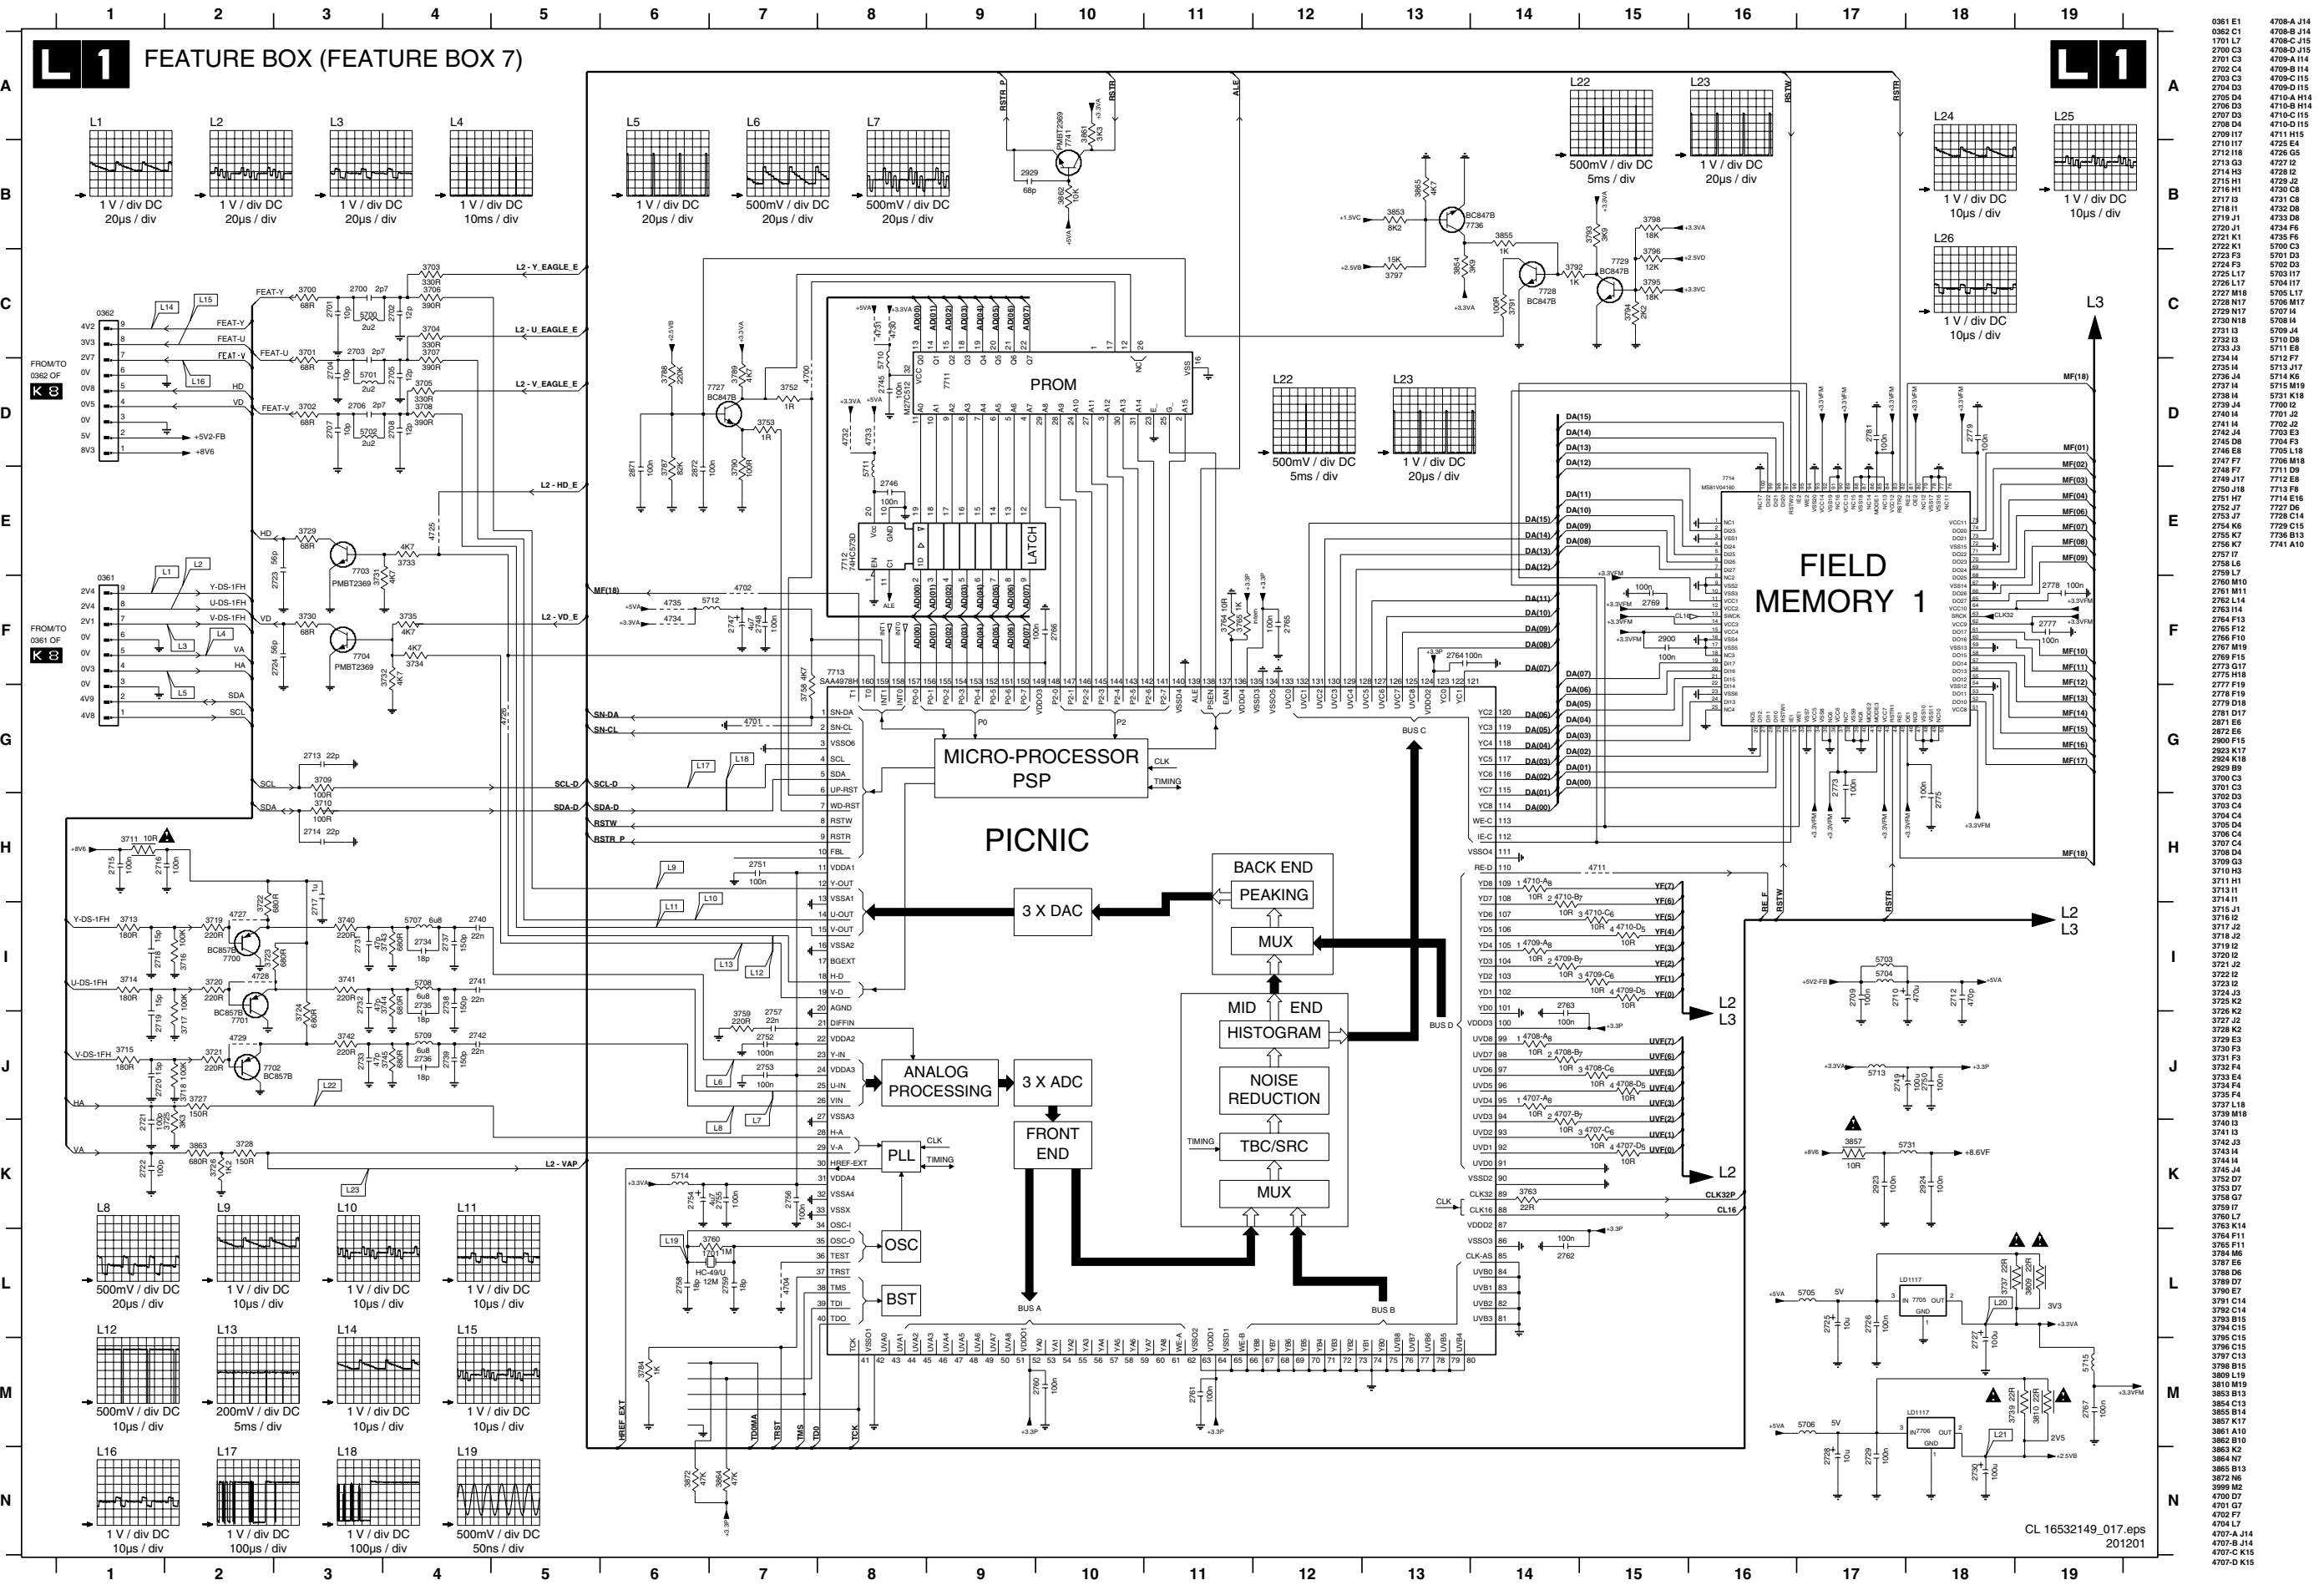


Feature Box 7 Panel: Eagle

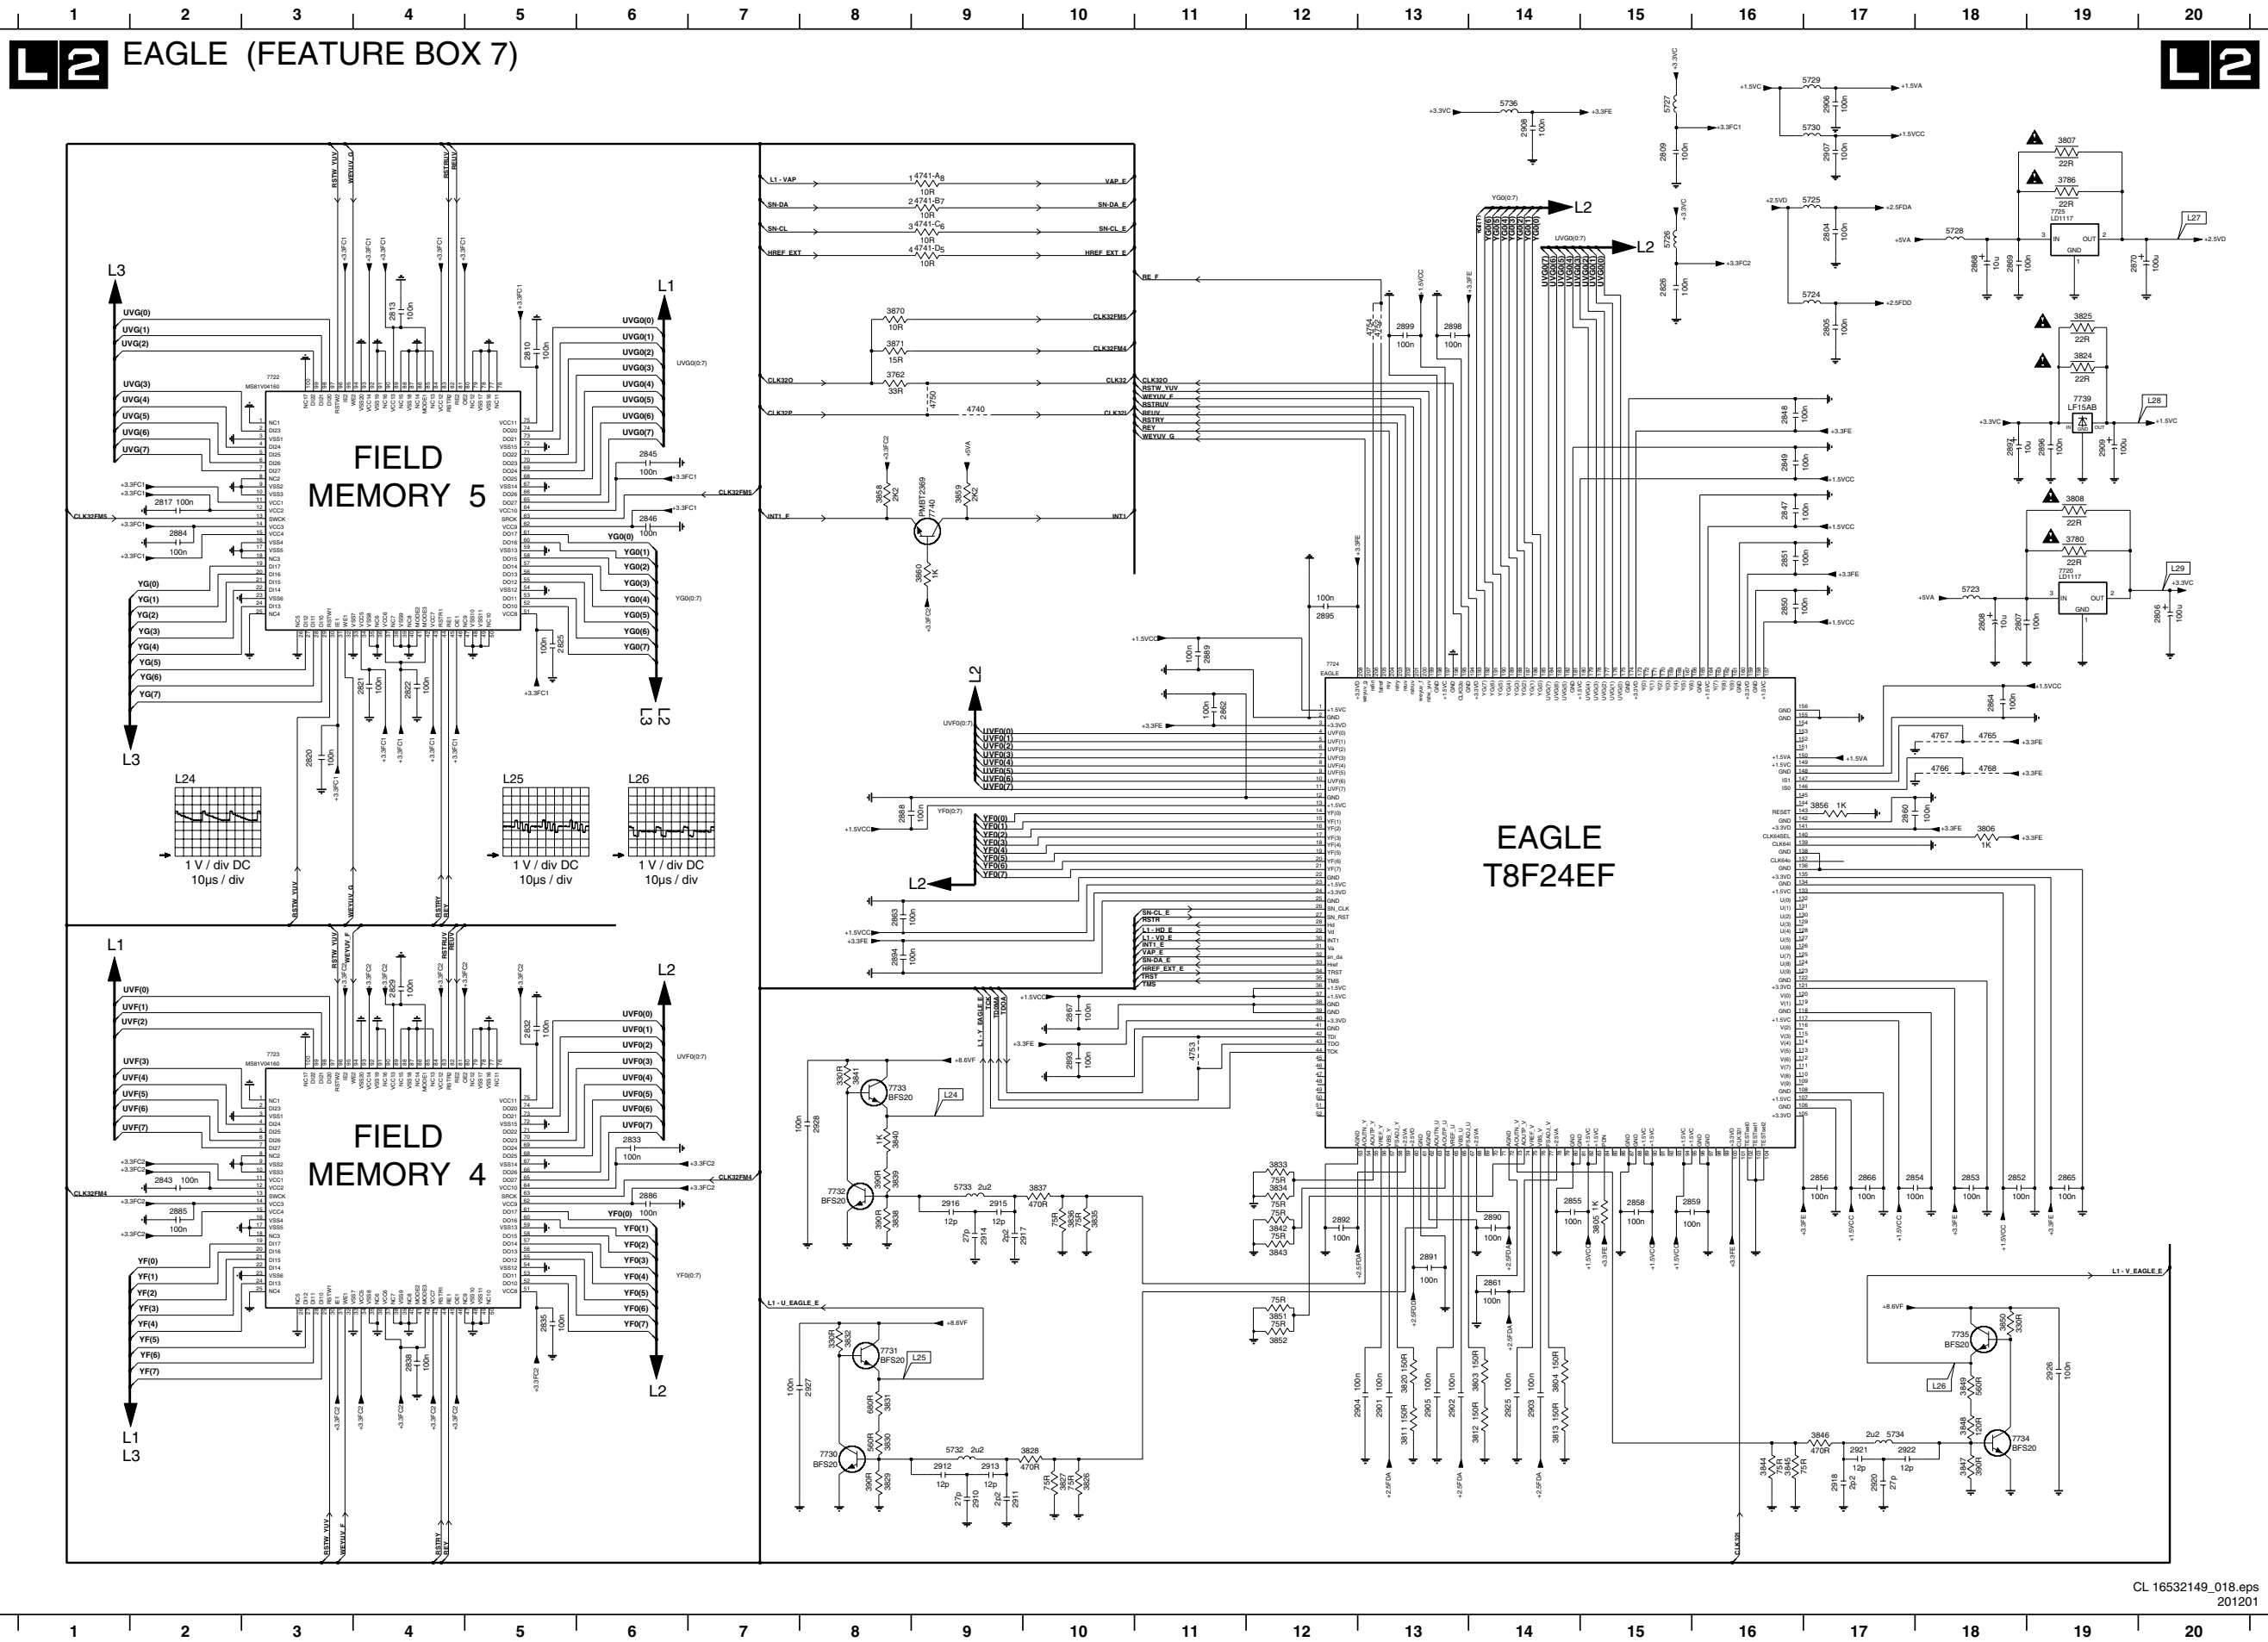

2804 B17
2805 C17
2806 D20
2807 F18
2808 F18
2809 A15
2810 C5
2811 C4
2812 E2
2820 G3
2821 F4
2822 F4
2825 F5
2826 C15
2829 I4
2832 I5
2833 A6
2835 L5
2838 L4
2843 K2
2845 D6
2846 E9
2847 E16
2848 D16
2849 D16
2850 F16
2851 E16
2852 K18
2853 K18
2854 K17
2855 C14
2856 K17
2858 K15
2859 I15
2860 G17
2861 L14
2862 H11
2863 H8
2864 F18
2865 I19
2866 K17
2867 H0
2868 B18
2869 B18
2870 B19
2882 C2
2885 K2
2886 K6
2888 G8
2889 F11
2890 K14
2891 K15
2892 K12
2893 D10
2894 I8
2895 F12
2896 D19
2897 D18
2898 C13
2899 C13
2901 M13
2902 M13
2903 M14
2904 M13
2905 M13
2906 A17
2907 A17
2908 A14
2909 D19
2910 N9
2911 N9
2912 M9
2913 M9
2914 M9
2917 G9
2918 K9
2919 K9
2918 M17
2920 M17
2921 M17
2922 M17
2925 M14
2925 I19
2927 M8
2928 J8
2929 E19
2932 G8
2932 H8
2933 L8
2933 K12
2934 I12
2935 K10
2936 K10
2937 I10
2938 K8
2939 K8
2940 J8
2941 J8
2942 K12
2943 I12
2944 M16
2945 I16
2946 M17
2947 M17
2948 M18
2949 M18
2950 L18
2951 L12
2952 L12
2956 G17
2958 E9
2959 E9
2960 E9
2960 C8
2971 C8
2972 D9
2973 B9
2974 B9
2975 C13
2976 C13
2977 B18
2978 B18
2979 A17
2980 A17
2981 A17
2982 A17
2983 A17
2984 A17
2985 A17
2986 A17
2987 A17
2988 A17
2989 A17
2990 A17
2991 A17
2992 A17
2993 A17
2994 A17
2995 A17
2996 A17
2997 A17
2998 A17
2999 A17
3000 A17
3001 A17
3002 A17
3003 A17
3004 A17
3005 A17
3006 A17
3007 A17
3008 A17
3009 A17
3010 A17
3011 A17
3012 A17
3013 A17
3014 A17
3015 A17
3016 A17
3017 A17
3018 A17
3019 A17
3020 A17
3021 A17
3022 A17
3023 A17
3024 A17
3025 A17
3026 A17
3027 A17
3028 A17
3029 A17
3030 A17
3031 A17
3032 A17
3033 A17
3034 A17
3035 A17
3036 A17
3037 A17
3038 A17
3039 A17
3040 A17
3041 A17
3042 A17
3043 A17
3044 A17
3045 A17
3046 A17
3047 A17
3048 A17
3049 A17
3050 A17
3051 A17
3052 A17
3053 A17
3054 A17
3055 A17
3056 A17
3057 A17
3058 A17
3059 A17
3060 A17
3061 A17
3062 A17
3063 A17
3064 A17
3065 A17
3066 A17
3067 A17
3068 A17
3069 A17
3070 A17
3071 A17
3072 A17
3073 A17
3074 A17
3075 A17
3076 A17
3077 A17
3078 A17
3079 A17
3080 A17
3081 A17
3082 A17
3083 A17
3084 A17
3085 A17
3086 A17
3087 A17
3088 A17
3089 A17
3090 A17
3091 A17
3092 A17
3093 A17
3094 A17
3095 A17
3096 A17
3097 A17
3098 A17
3099 A17
3100 A17


Feature Box 7 Panel: Falconic

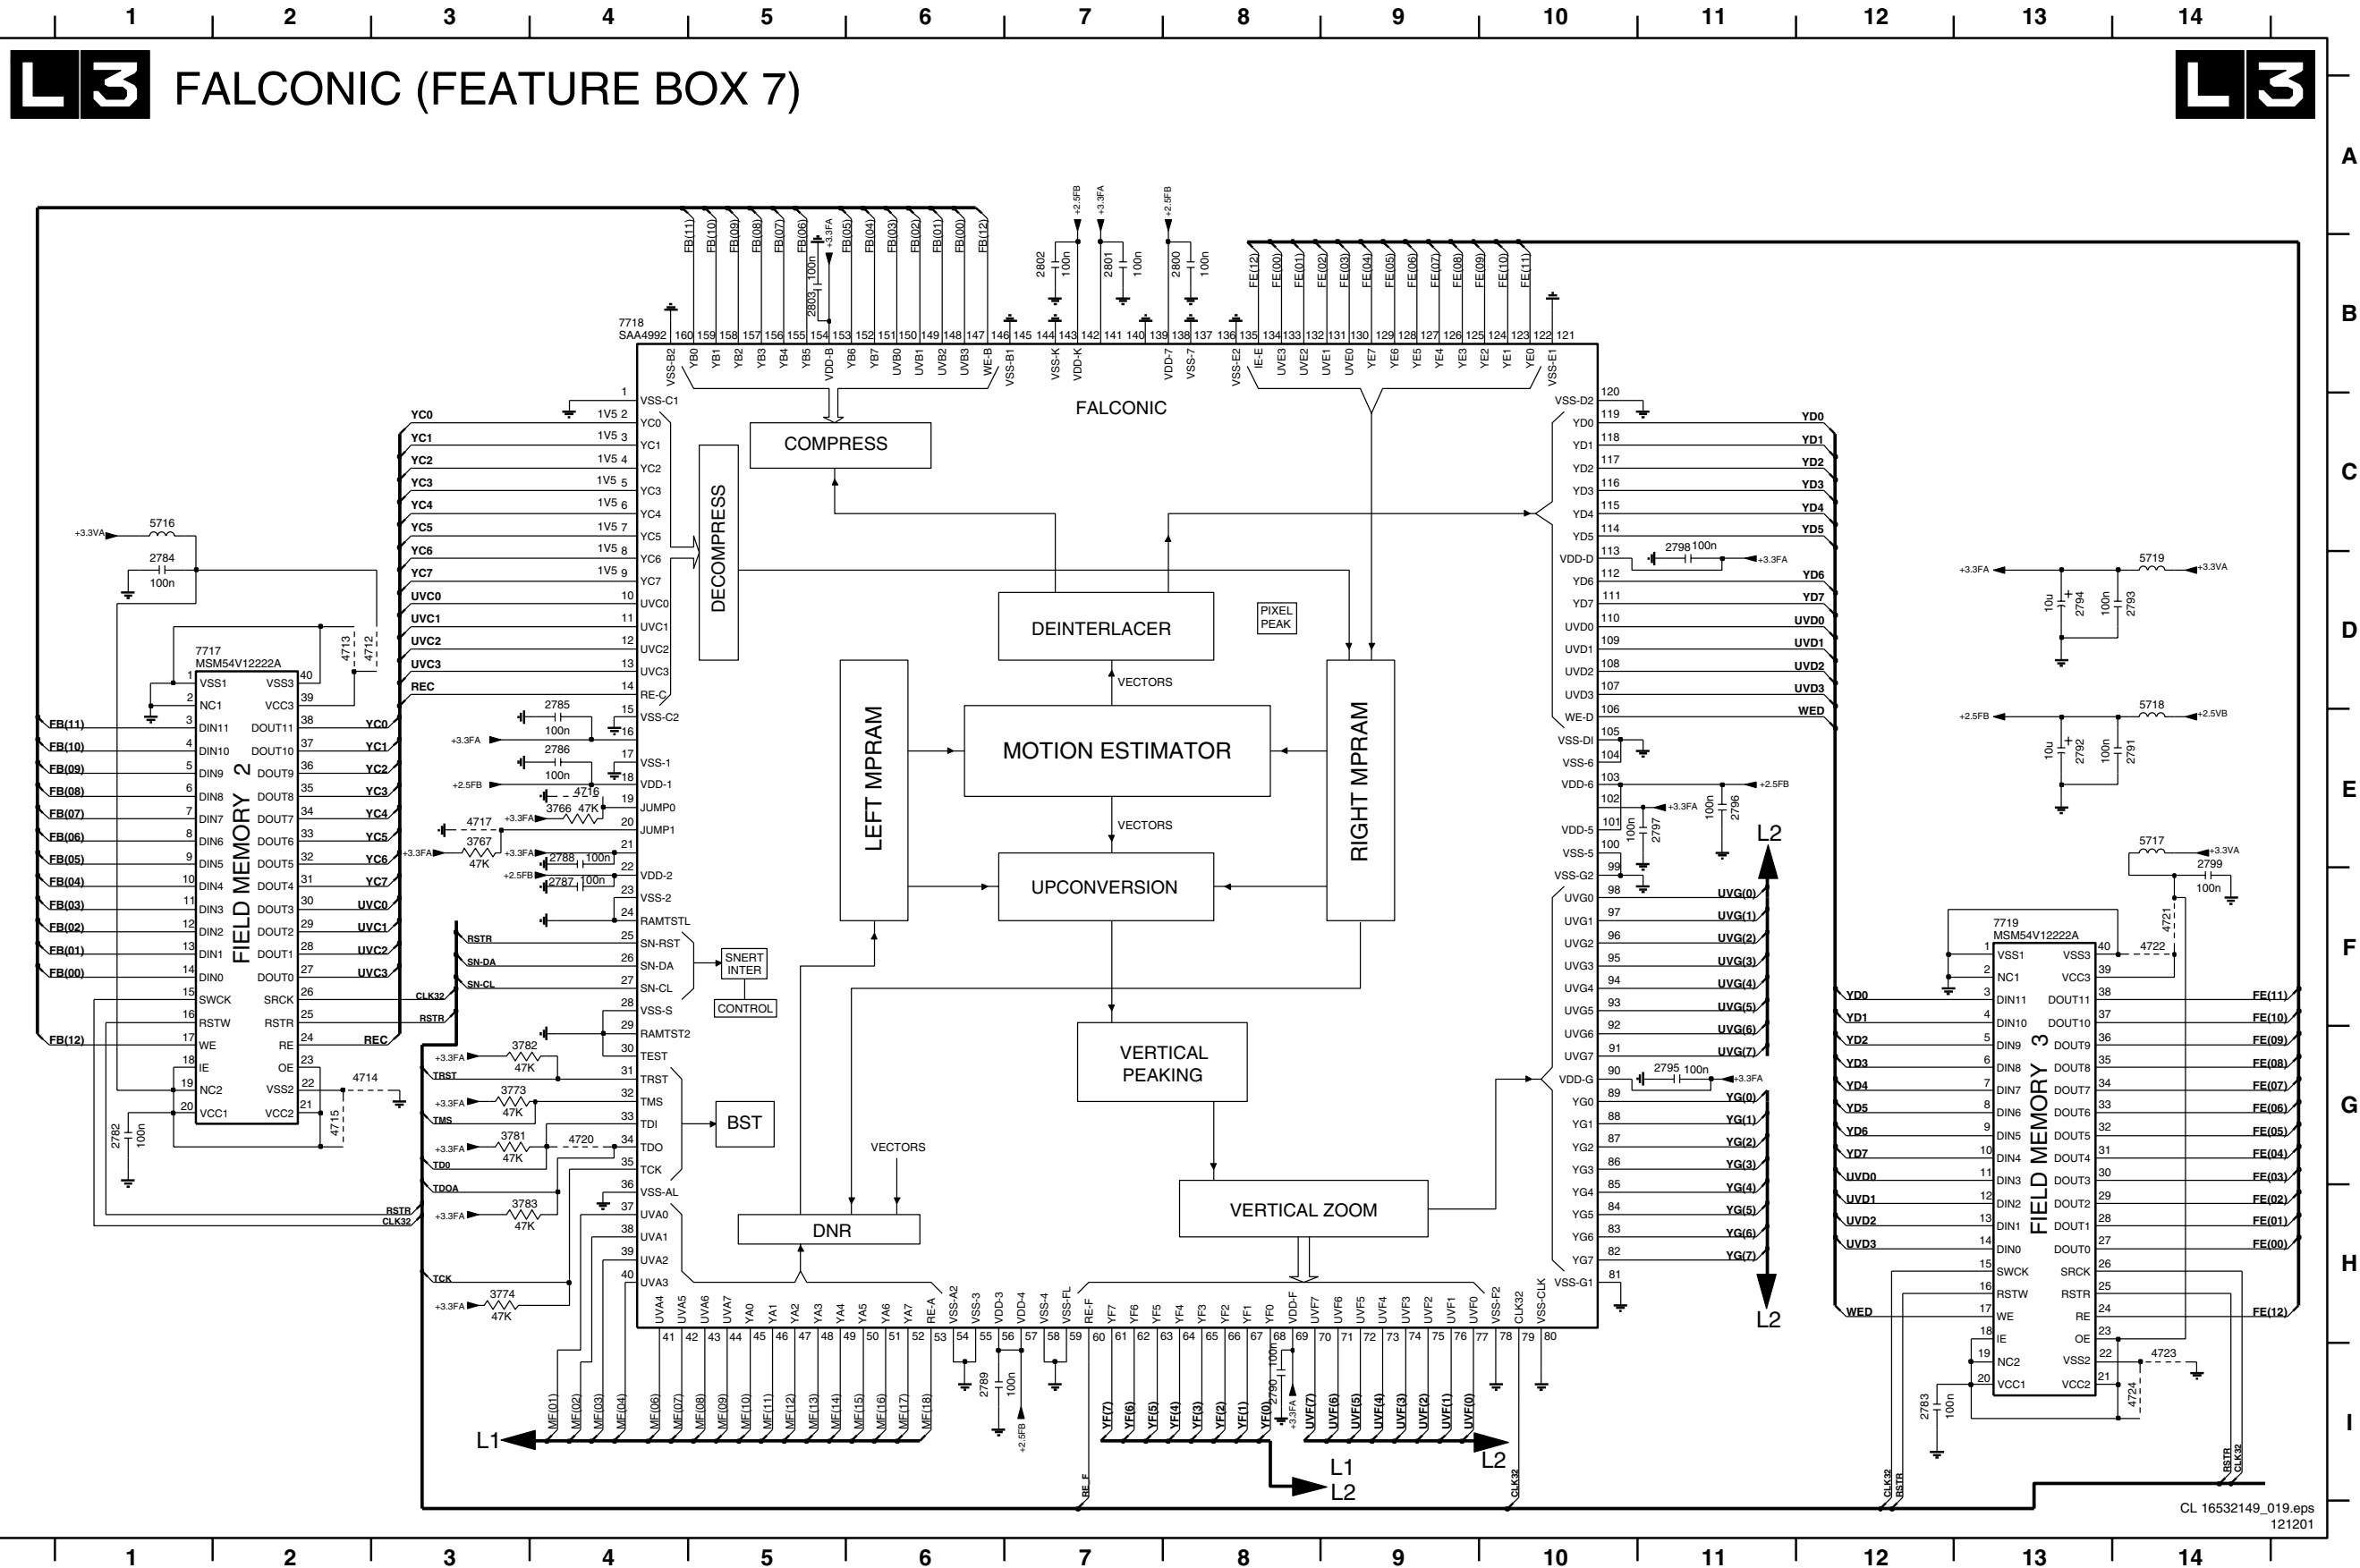

- 2782 G1
- 2783 I12
- 2784 D1
- 2785 D4
- 2786 E4
- 2787 F4
- 2788 E4
- 2789 I6
- 2790 I8
- 2791 E14
- 2792 E13
- 2793 D14
- 2794 D13
- 2795 G11
- 2796 E11
- 2797 E11
- 2798 C11
- 2799 E14
- 2800 B8
- 2801 B7
- 2802 B7
- 2803 B5
- 3766 E4
- 3767 E3
- 3773 G3
- 3774 H3
- 3781 G3
- 3782 G3
- 3783 H3
- 4712 D3
- 4713 D2
- 4714 G2
- 4715 G2
- 4716 E4
- 4717 E3
- 4720 G4
- 4721 F14
- 4722 F14
- 4723 I14
- 4724 I14
- 5716 C1
- 5717 E14
- 5718 D14
- 5719 D14
- 7717 D1
- 7718 B4
- 7719 F13

Layout Feature Box 7 Panel (Bottom View)


2719 C3	2738 C4	2758 C3	2779 A4	2791 A2	2799 A2	2845 A2	2862 B2	2896 A1	2904 C2	3717 C3	3741 C3	3763 B3	3784 C4
2721 C2	2741 C4	2759 C3	2781 A4	2793 A4	2801 A3	2846 A2	2863 B2	2898 B2	2905 C2	3720 C3	3744 C3	3765 B4	3803 C2
2729 A5	2746 B5	2766 B4	2782 A4	2795 A3	2803 A3	2848 B1	2869 C3	2901 C2	2925 C2	3724 C3	3759 C4	3766 A4	3804 C2
2732 C3	2755 B3	2777 A4	2784 A4	2797 A3	2804 C2	2853 B1	2886 B2	2902 C2	2929 B4	3725 C2	3760 C3	3773 A4	3805 C1
2735 C4	2757 C4	2778 A4	2789 A3	2798 A3	2833 B3	2854 C1	2888 B2	2903 C2	3714 C3	3727 C2	3762 B2	3781 A4	3811 C2

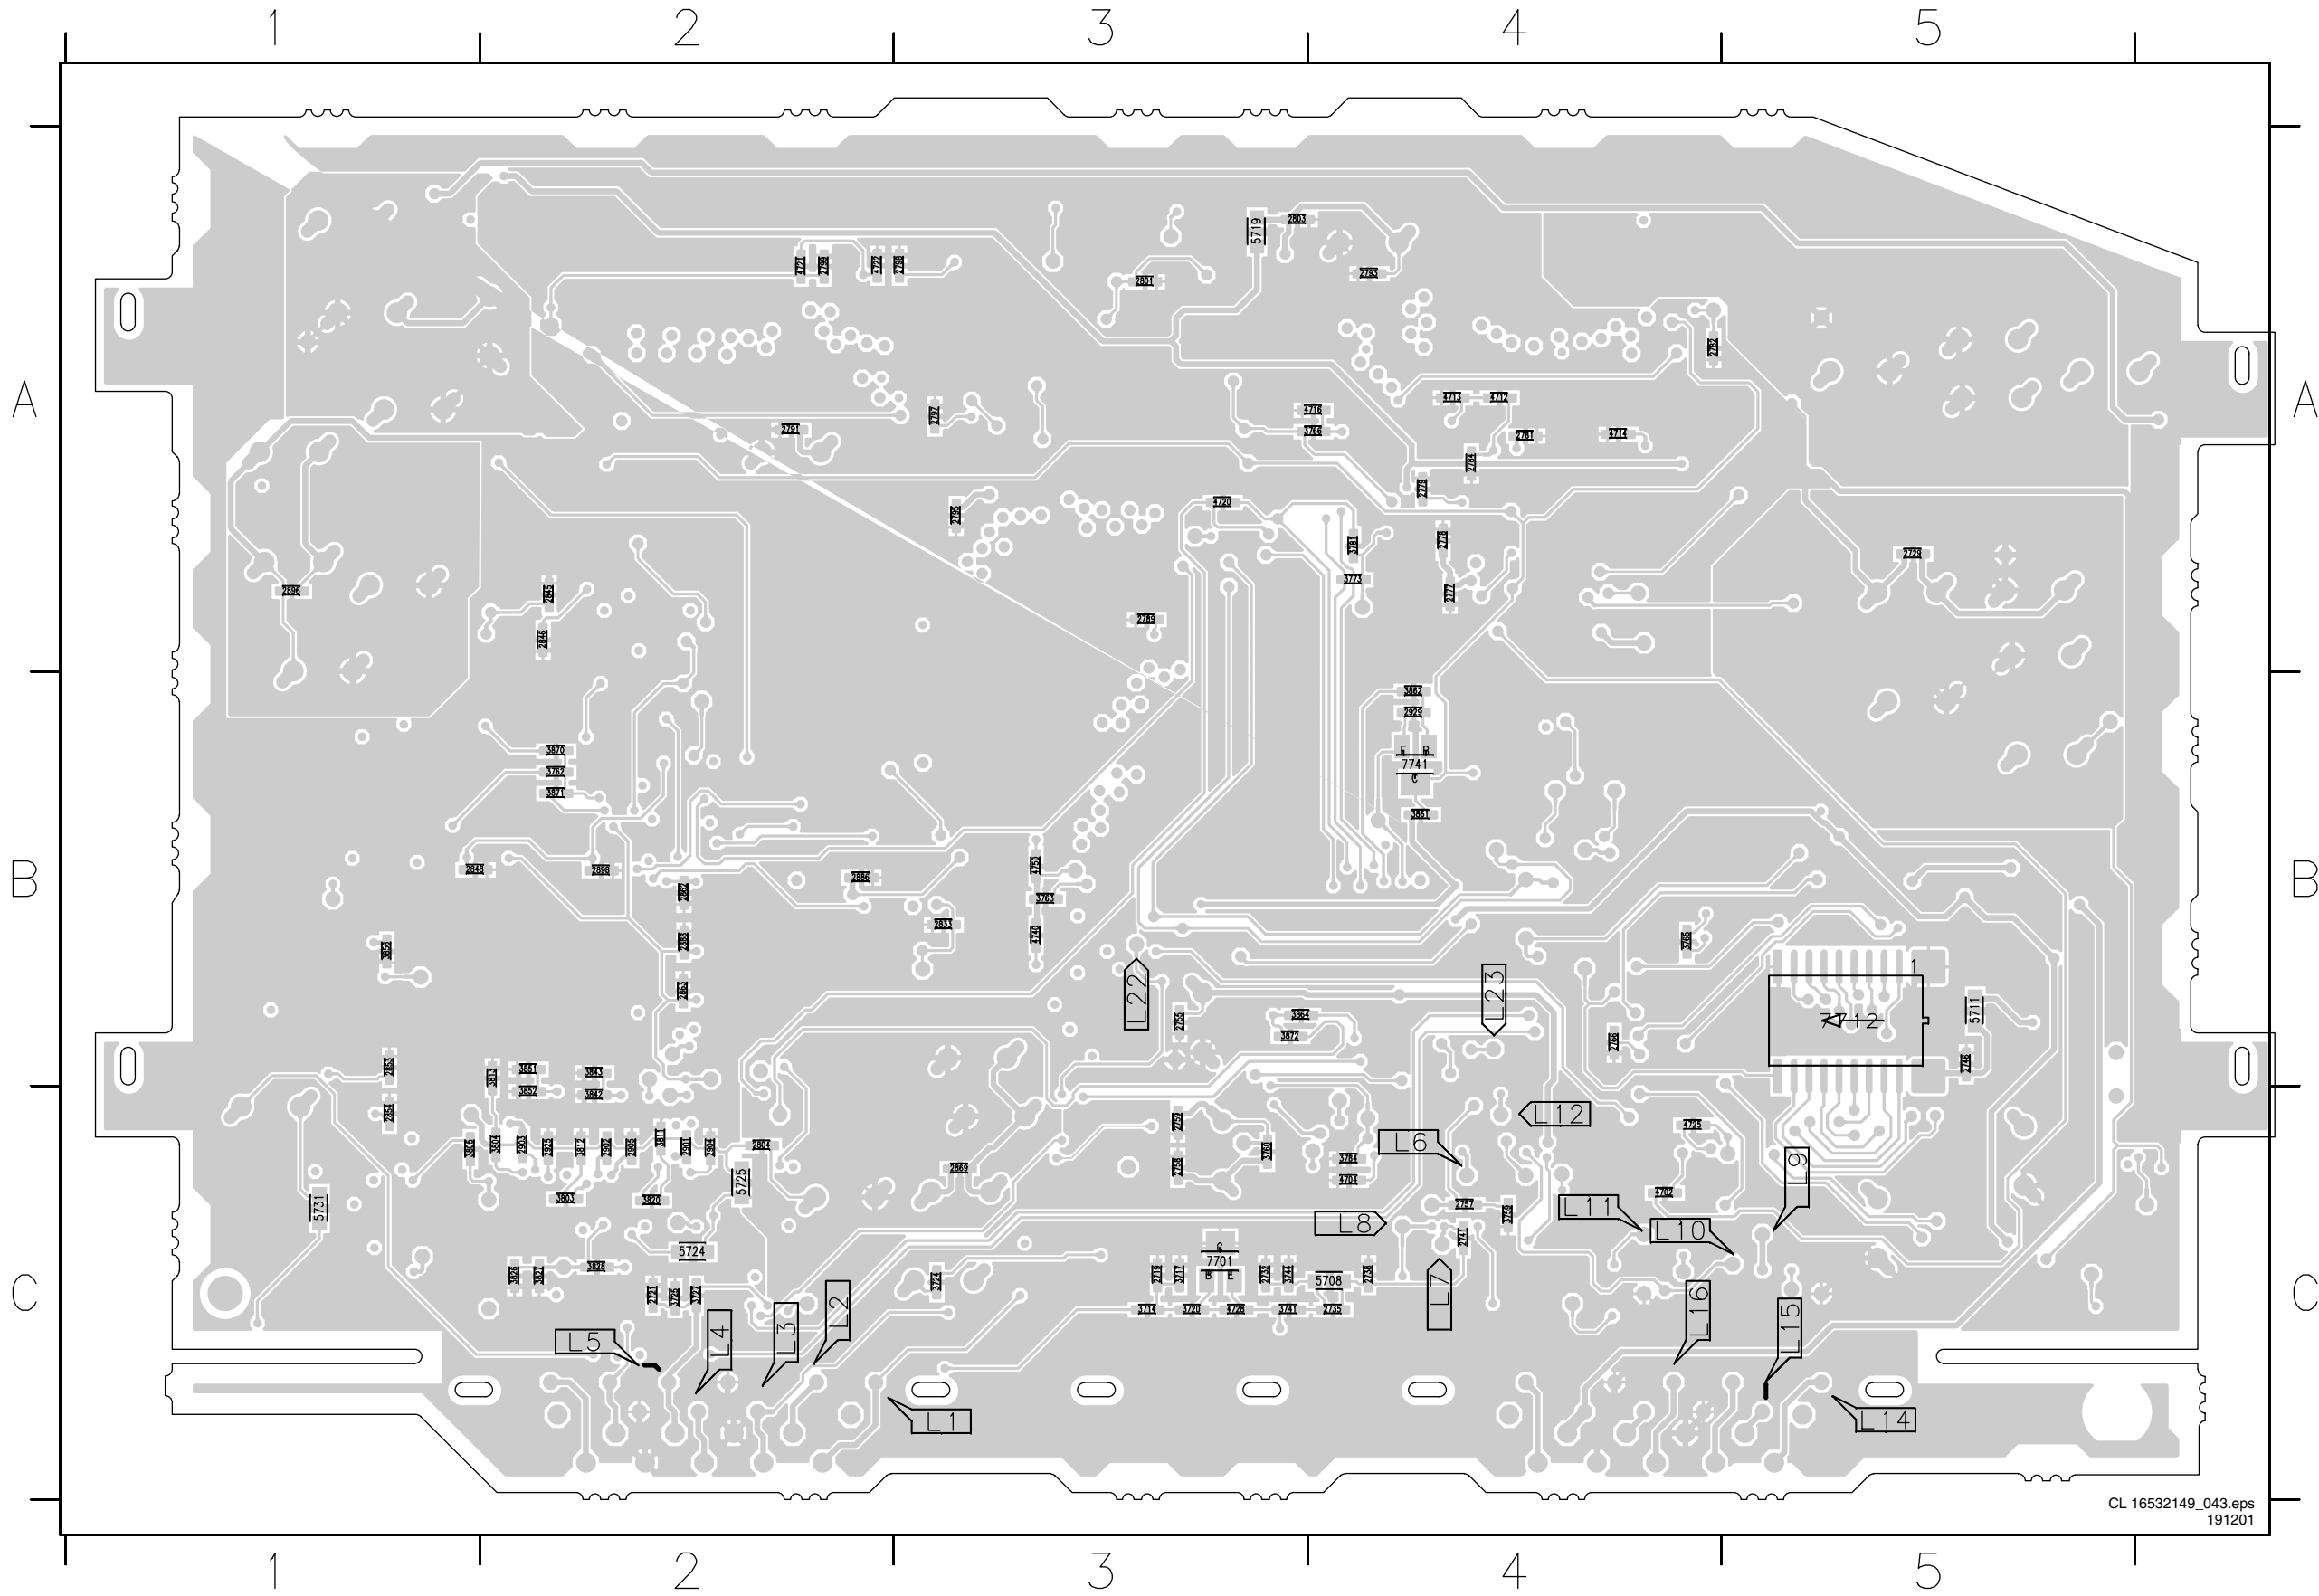

3812 C2	3813 B2	3820 C2	3826 C2	3827 C2	3828 C2	3842 C2	3843 B2	3851 B2	3852 C2	3856 B1	3861 B4	3862 B4	3864 B3	3870 B2	3871 B2	3872 B3	4702 C4	4704 C4	4712 A4	4713 A4	4714 A4	4716 A4	4720 A3	4721 A2	4722 A2	4725 C4	4728 C3	4740 B3	4750 B3	5708 C4	5711 B5	5719 A3	5724 C2	5725 C2	5731 C1	7701 C3	7712 C5	7741 B4
---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------	---------


FDS Module: Tuner and IF (Full Dual Screen)

0351 D2	1109 C5	2104 C2	2111 C8	2122 B8	2506 F10	2520 F12	2532 B13	2541 A8	3103 C1	3112 F4	3119 E7	3135 G7	3143 A10	3152 F10	3531 B11	4101 E3	4110 E7	5103 D3	6102 E3	7102 E5	7109 E7
1102 C2	1525 E13	2105 C3	2112 A10	2140 B10	2507 C12	2521 F12	2534 B12	2545 F9	3104 C1	3113 G4	3121 G7	3136 E7	3144 B8	3153 G11	3532 B12	4102 E7	4111 G8	5104 C4	6103 F3	7103 G4	7111 E7
1104 E6	1526 E13	2106 C4	2116 A1	2501 F9	2508 C13	2522 F13	2536 B10	2553 F11	3106 C3	3114 G5	3122 G6	3137 D8	3145 H8	3154 G11	3538 A8	4104 B2	4113 F7	5105 E7	6104 F3	7104 F4	7112 G10
1105 F6	1527 E13	2107 C4	2117 D8	2502 F9	2509 C12	2525 F13	2537 B10	2554 F11	3107 D5	3115 G5	3123 G6	3138 D8	3146 A3	3501 F9	3545 F8	4105 G5	4115 H12	5106 E7	6105 D5	7105 G6	7501 B9
1106 F7	1528 E14	2108 D4	2118 D7	2503 F10	2510 C12	2526 F13	2538 A8	3100 C1	3109 D3	3116 E4	3124 A5	3139 E8	3147 G7	3504 G9	3546 F8	4106 B2	4116 A2	5108 D7	6106 A3	7106 G7	7502 E8
1107 F7	2101 B2	2109 C8	2119 A9	2504 F9	2511 C13	2527 F13	2539 A7	3101 C1	3110 E4	3117 E4	3133 C3	3140 A4	3148 D7	3521 E12	3550 A12	4108 H7	5101 B2	5501 A8	6107 A3	7107 G7	7991 F12
1108 D5	2102 B3	2110 C8	2120 B1	2505 F10	2512 C12	2528 F14	2540 B8	3102 A4	3111 F4	3118 C8	3134 D5	3142 A10	3151 A2	3530 A11	3880 G12	4109 H7	5102 C3	5502 A8	7101 D5	7108 F6	c001 F1

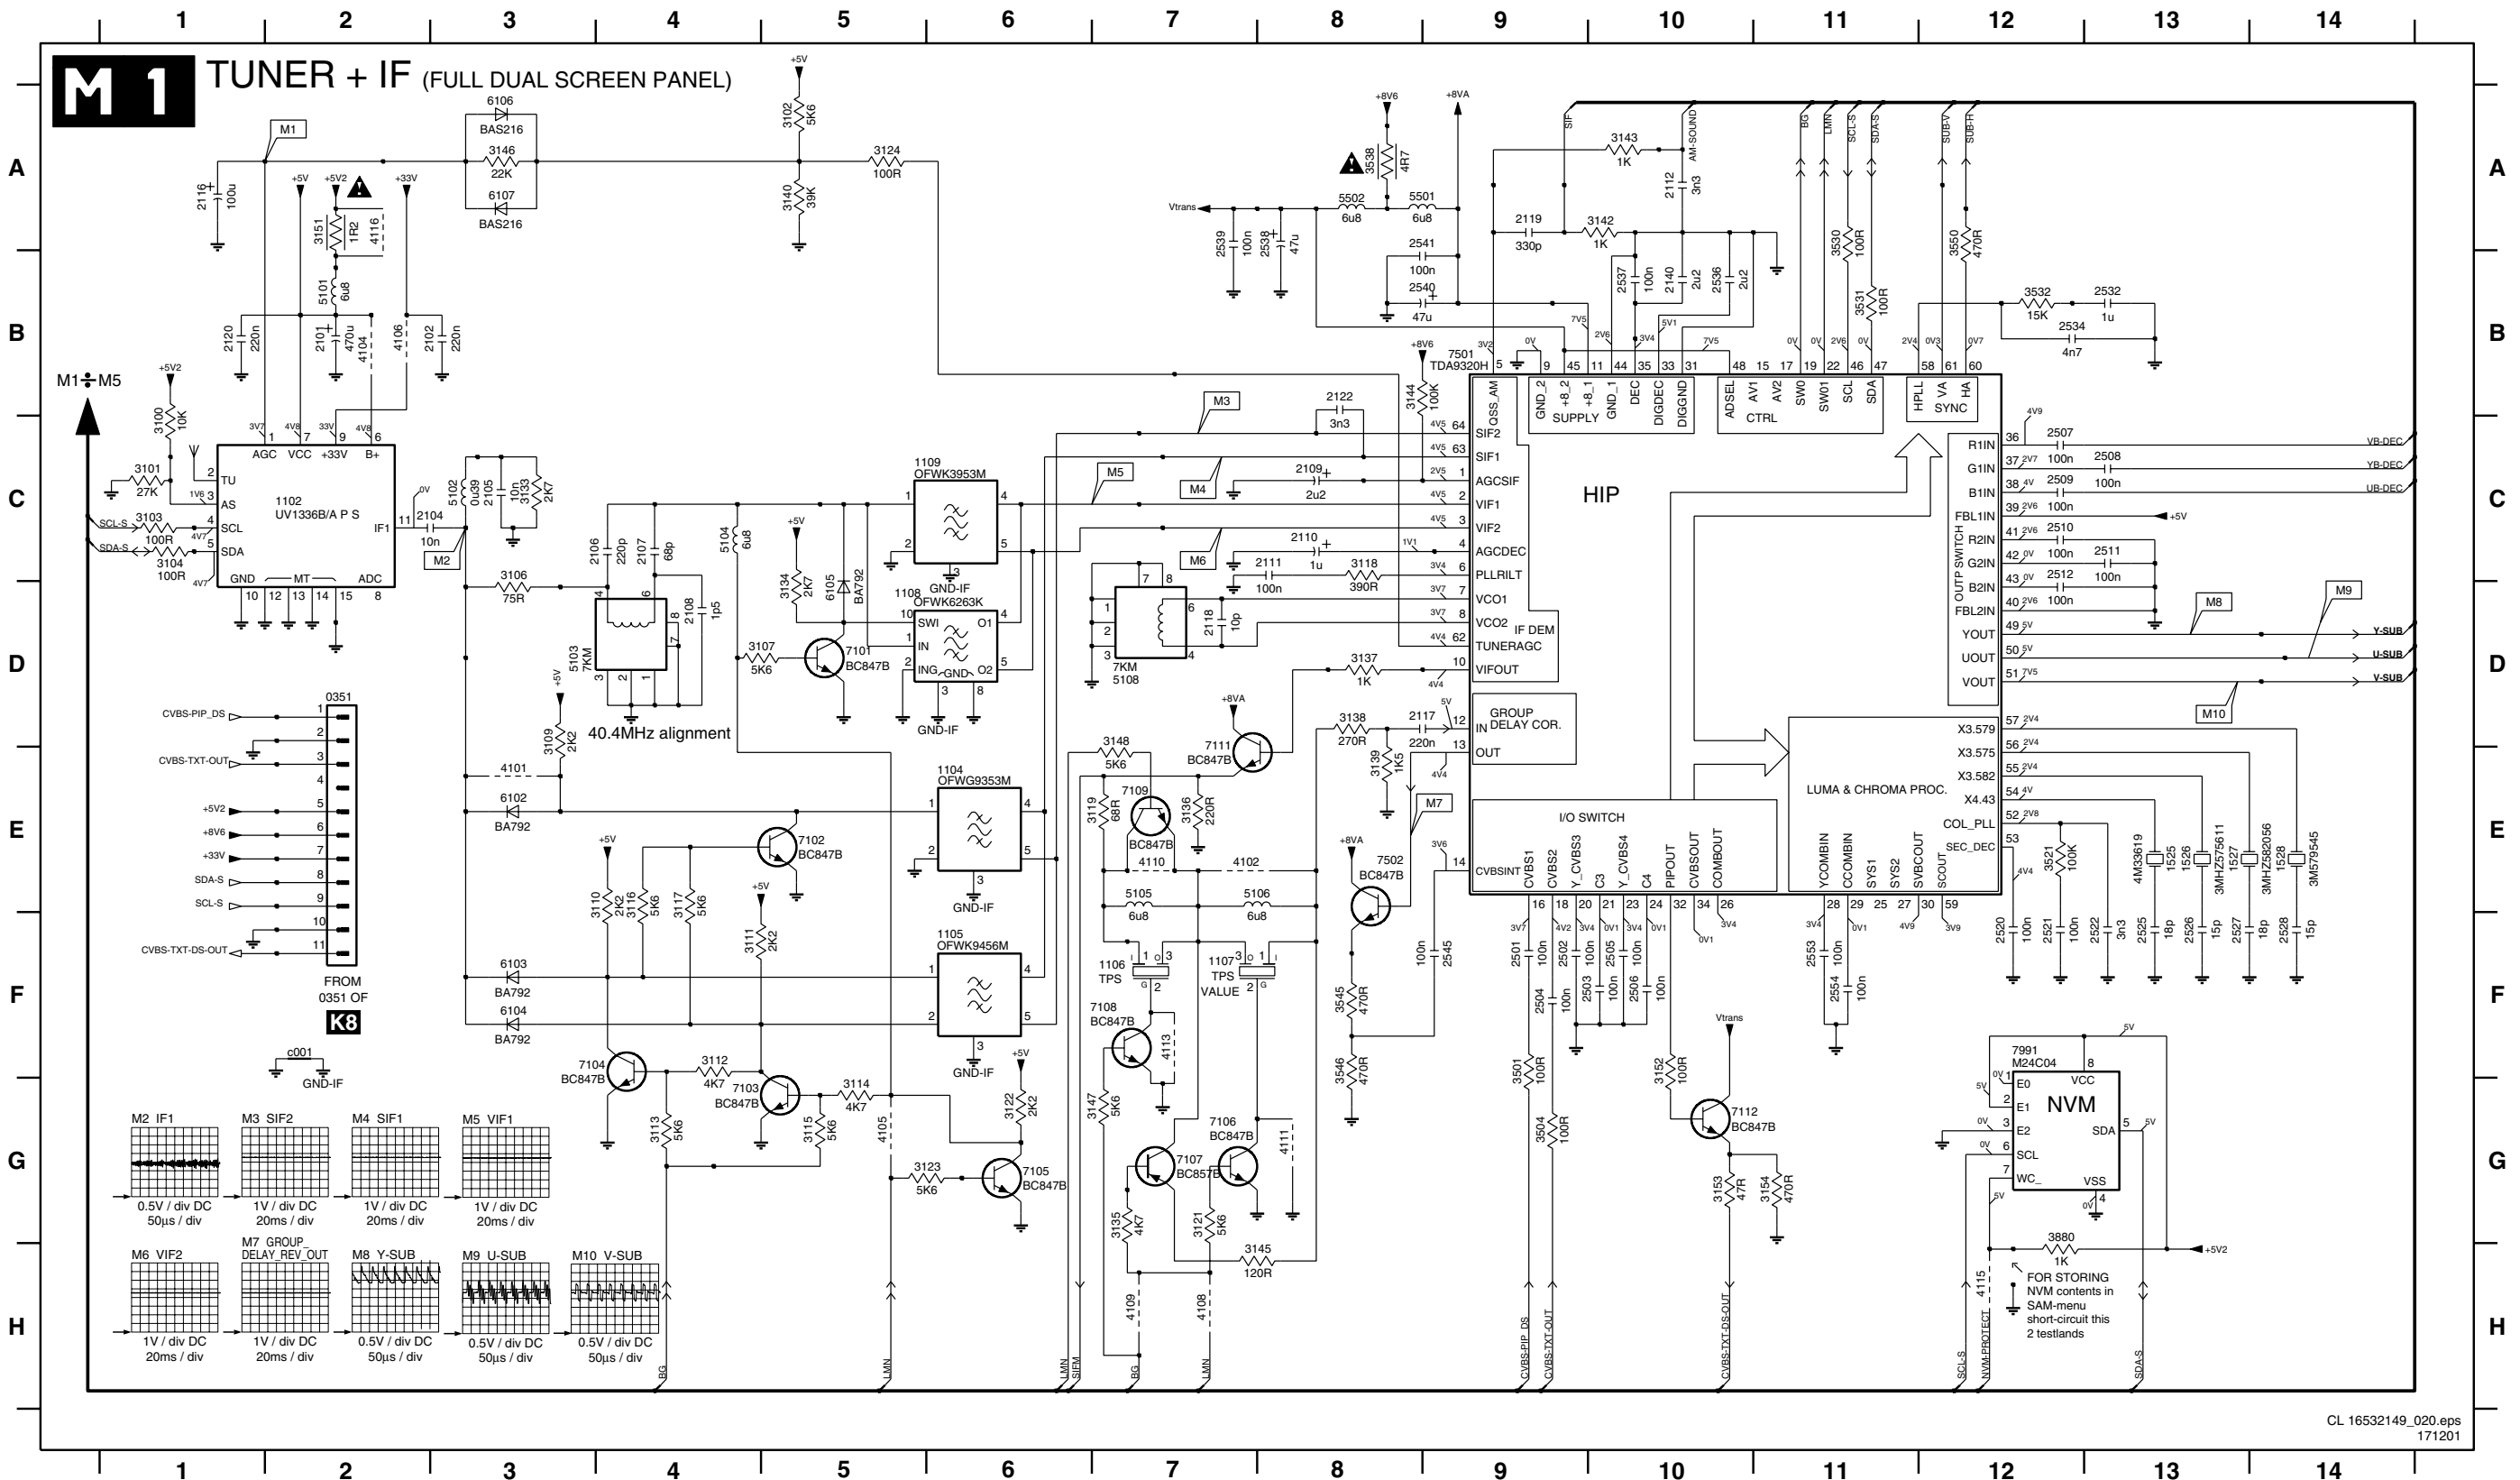


FDS Module: Selector Switches

0352 B3	2800 D6	2803 C6	2807 E10	2860 F12	2882 G2	2890 H2	3841 F4	3844 H12	3847 E4	4843 H8	5880 F1	6850 H12	6883 C11	7821 E6	7845 E4	7860 E12
0353 D3	2801 C6	2804 C6	2840 F8	2880 H4	2883 G1	2891 G2	3842 C4	3845 G12	3999 B2	4844 G8	5881 I2	6880 G4	6884 C11	7840-B G8	7850 H13	7880 G3
1800 G2	2802 C6	2805 B6	2845 G12	2881 G4	2884 I2	3840 E4	3843 C4	3846 E3	4842 G8	4845 H8	5882 F3	6881 G4	7800 B7	7840-C F8	7851 G13	7881 F3

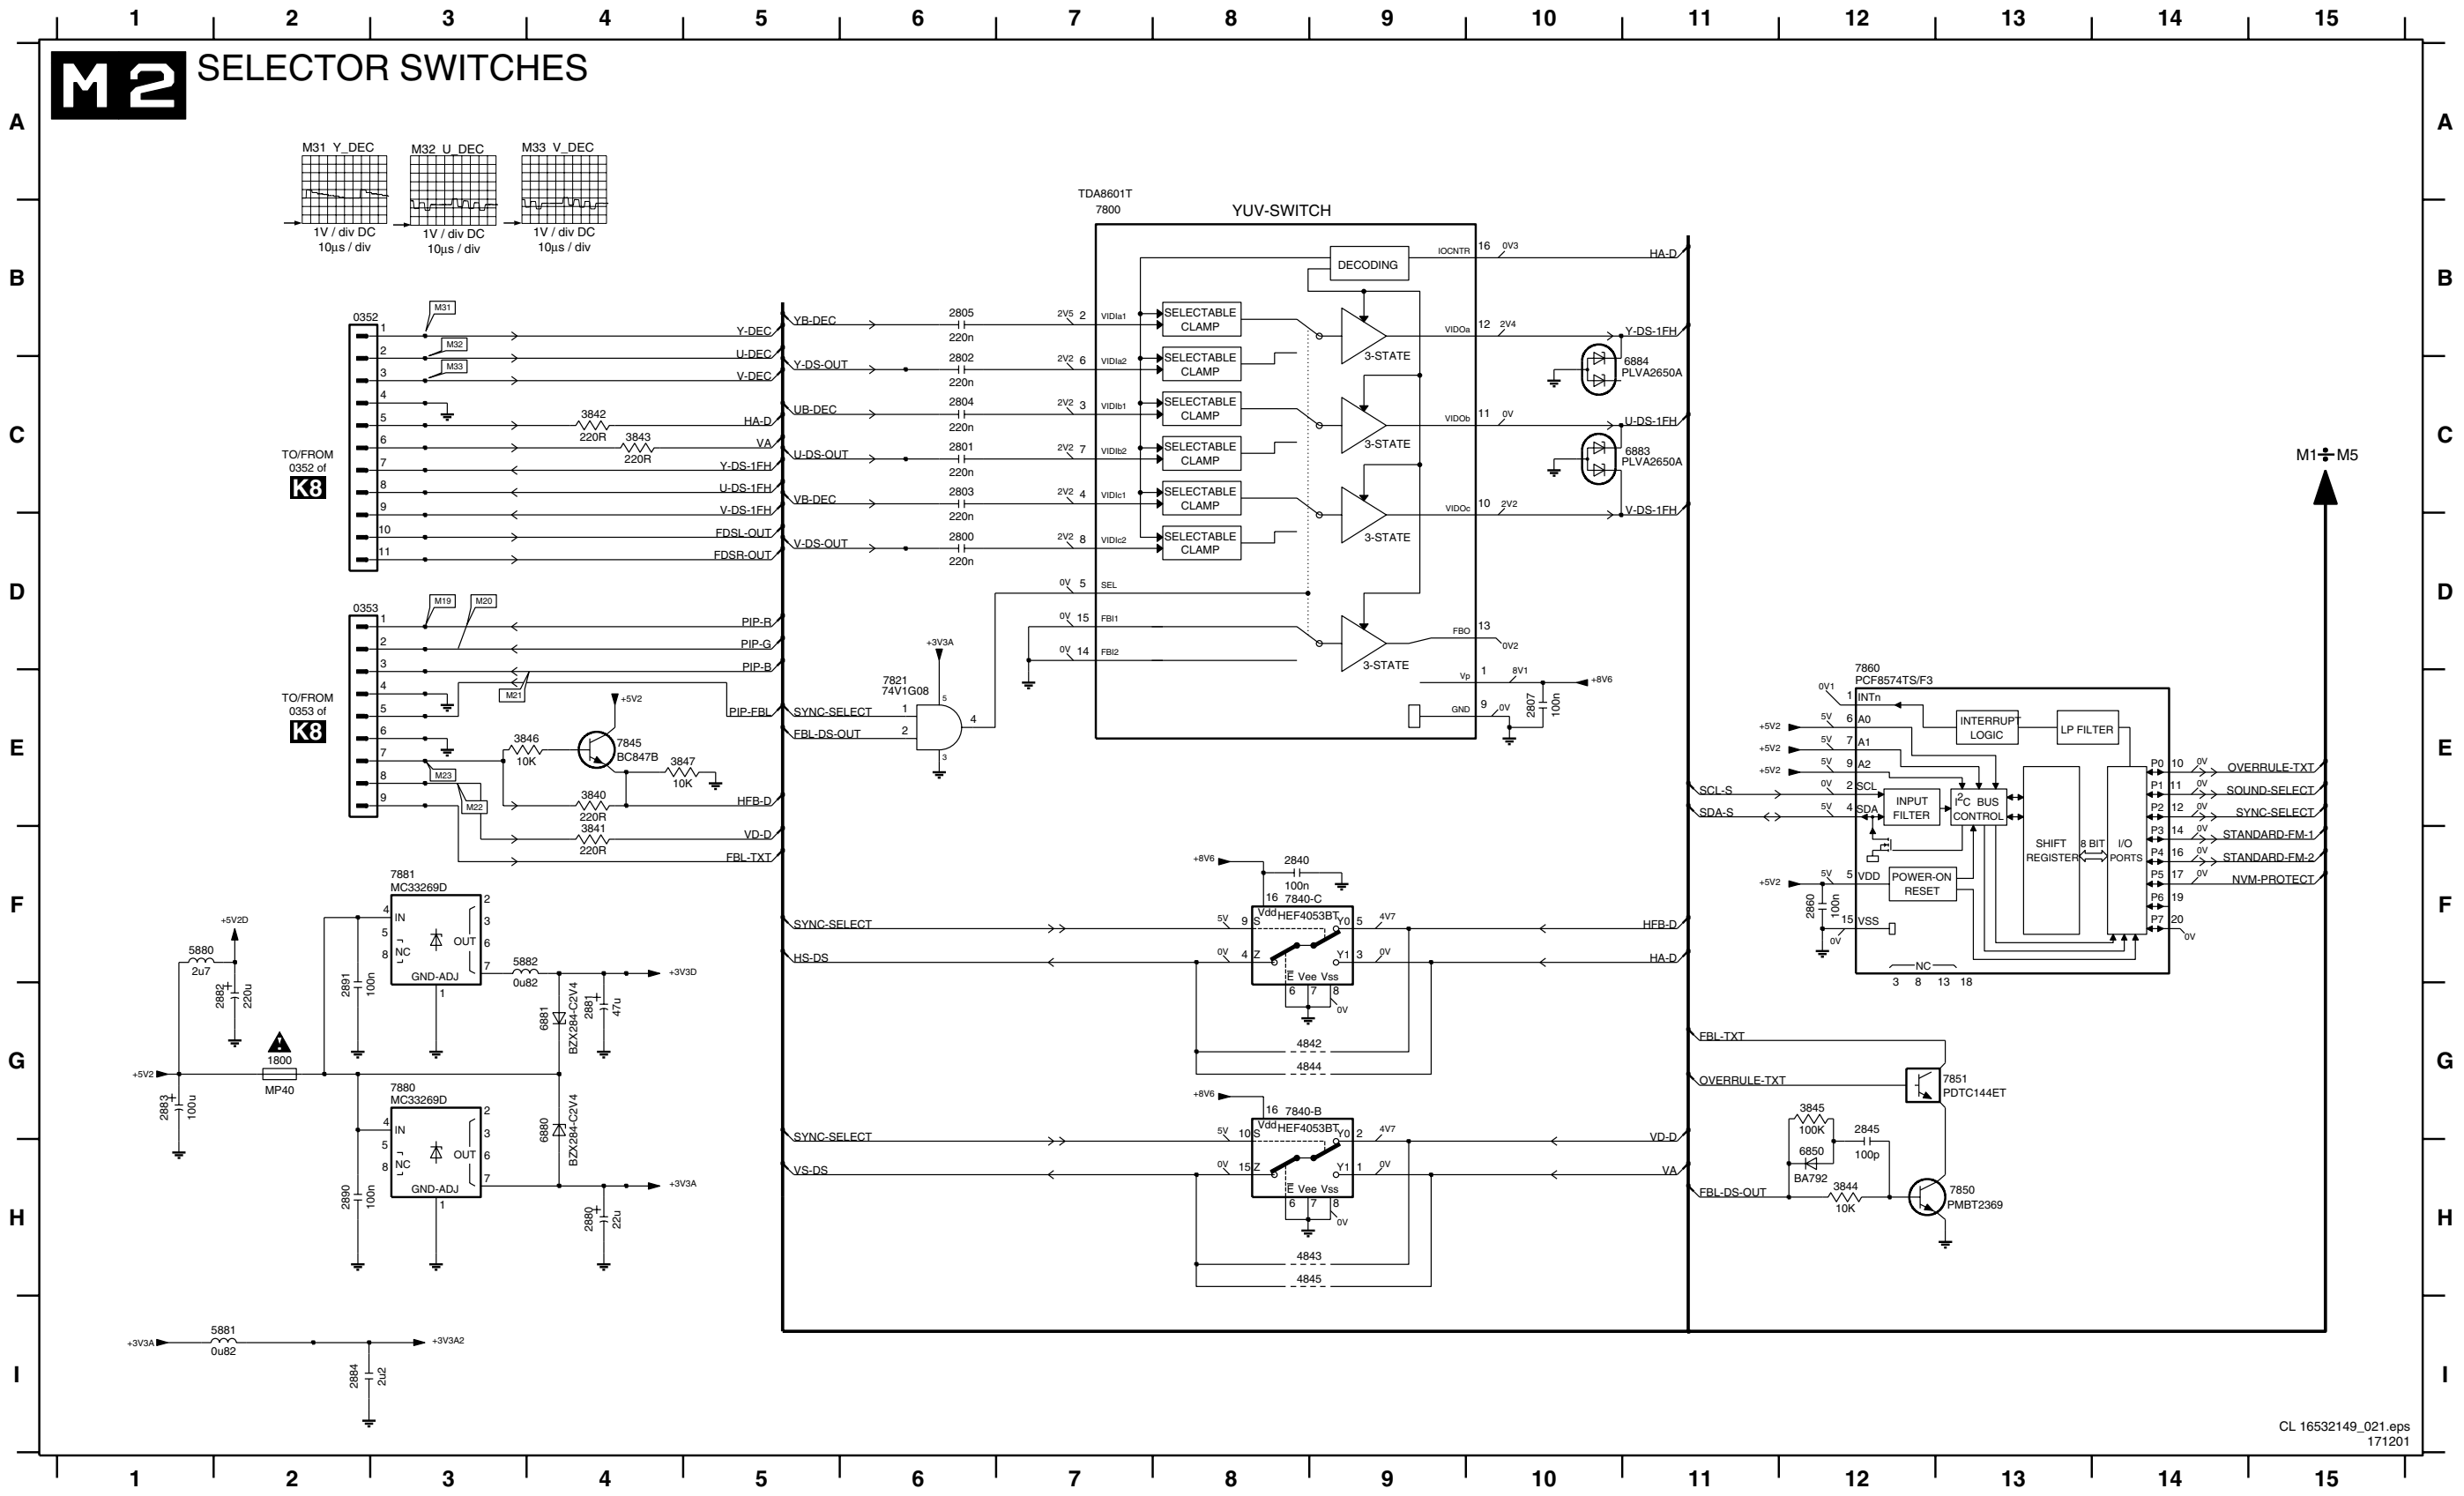

FDS Module: Filters and Buffers


M3 FILTERS + BUFFERS

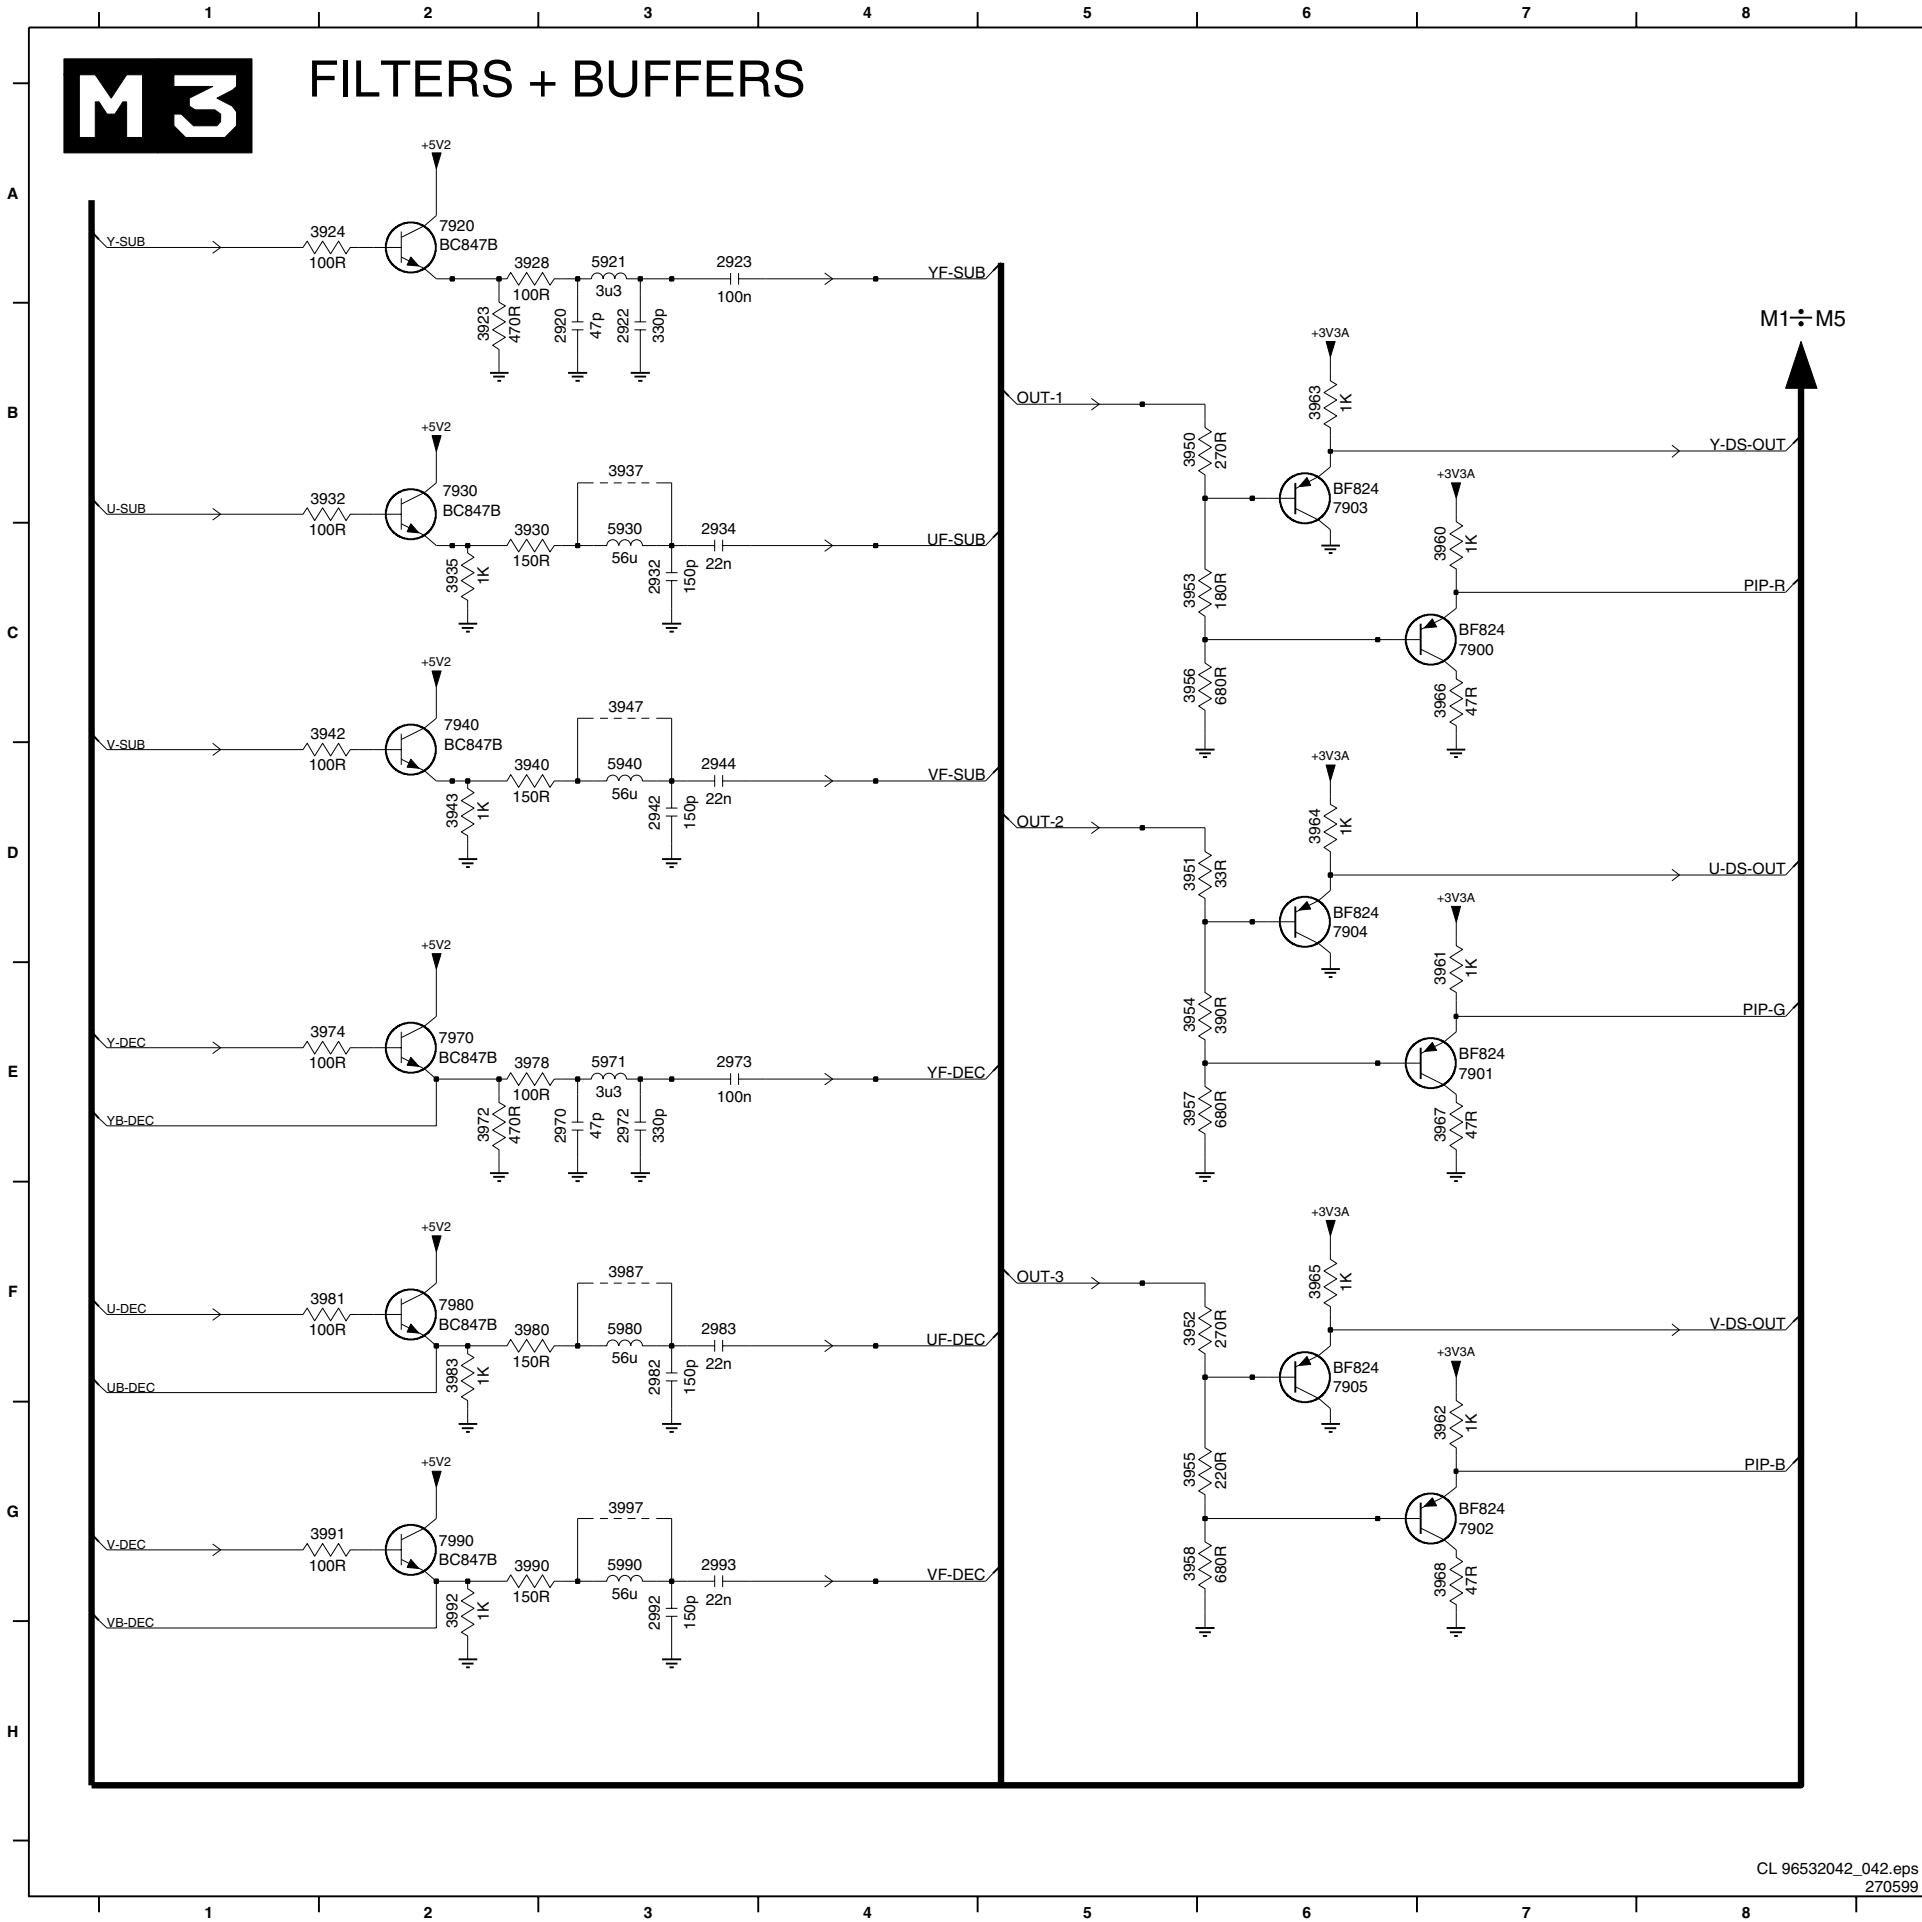


- 2920 B3
- 2922 B3
- 2923 A3
- 2932 C3
- 2934 C3
- 2942 D3
- 2944 D3
- 2970 E3
- 2972 E3
- 2973 E3
- 2982 F3
- 2983 F3
- 2992 G3
- 2993 G3
- 3923 B2
- 3924 A2
- 3928 A2
- 3930 C2
- 3932 B2
- 3935 C2
- 3937 B3
- 3940 D2
- 3942 C2
- 3943 D2
- 3947 C3
- 3950 B5
- 3951 D5
- 3952 F5
- 3953 C5
- 3954 E5
- 3955 G5
- 3956 C5
- 3957 E5
- 3958 G5
- 3960 C7
- 3961 E7
- 3962 G7
- 3963 B6
- 3964 D6
- 3965 F6
- 3966 C7
- 3967 E7
- 3968 G7
- 3972 E2
- 3974 E2
- 3978 E2
- 3980 F2
- 3981 F2
- 3983 F2
- 3987 F3
- 3990 G2
- 3991 G2
- 3992 G2
- 3997 G3
- 5921 A3
- 5930 C3
- 5940 D3
- 5971 E3
- 5980 F3
- 5990 G3
- 7900 C7
- 7901 E7
- 7902 G7
- 7903 B6
- 7904 D6
- 7905 F6
- 7920 A2
- 7930 B2
- 7940 C2
- 7970 E2
- 7980 F2
- 7990 G2

FDS Module: Dual Screen IC and Memory

2748 B2 2750 C9 2752 F9 2754 F9 2756 B2 2758 G5 2760 F2 2762 E3 2764 C11 2766 C1 2768 D3 2770 G4 2772 D9 2774 D9 2776 A12 2778 A13 2780 A11 2782 B2 2788 G2 2797 F1 3750 B2 3752 F5 3754 G10 3756 G5 4700 C2 6753 F11 7750 A11
 2749 E2 2751 C9 2753 F9 2755 B1 2757 C2 2759 F2 2761 G4 2763 E2 2765 C2 2767 D2 2769 F3 2771 F8 2773 D9 2775 D9 2777 A13 2779 A13 2781 A11 2787 F2 2789 C1 2798 G11 3751 F2 3753 G10 3755 F11 3757 G5 5752 E1 7700 A3

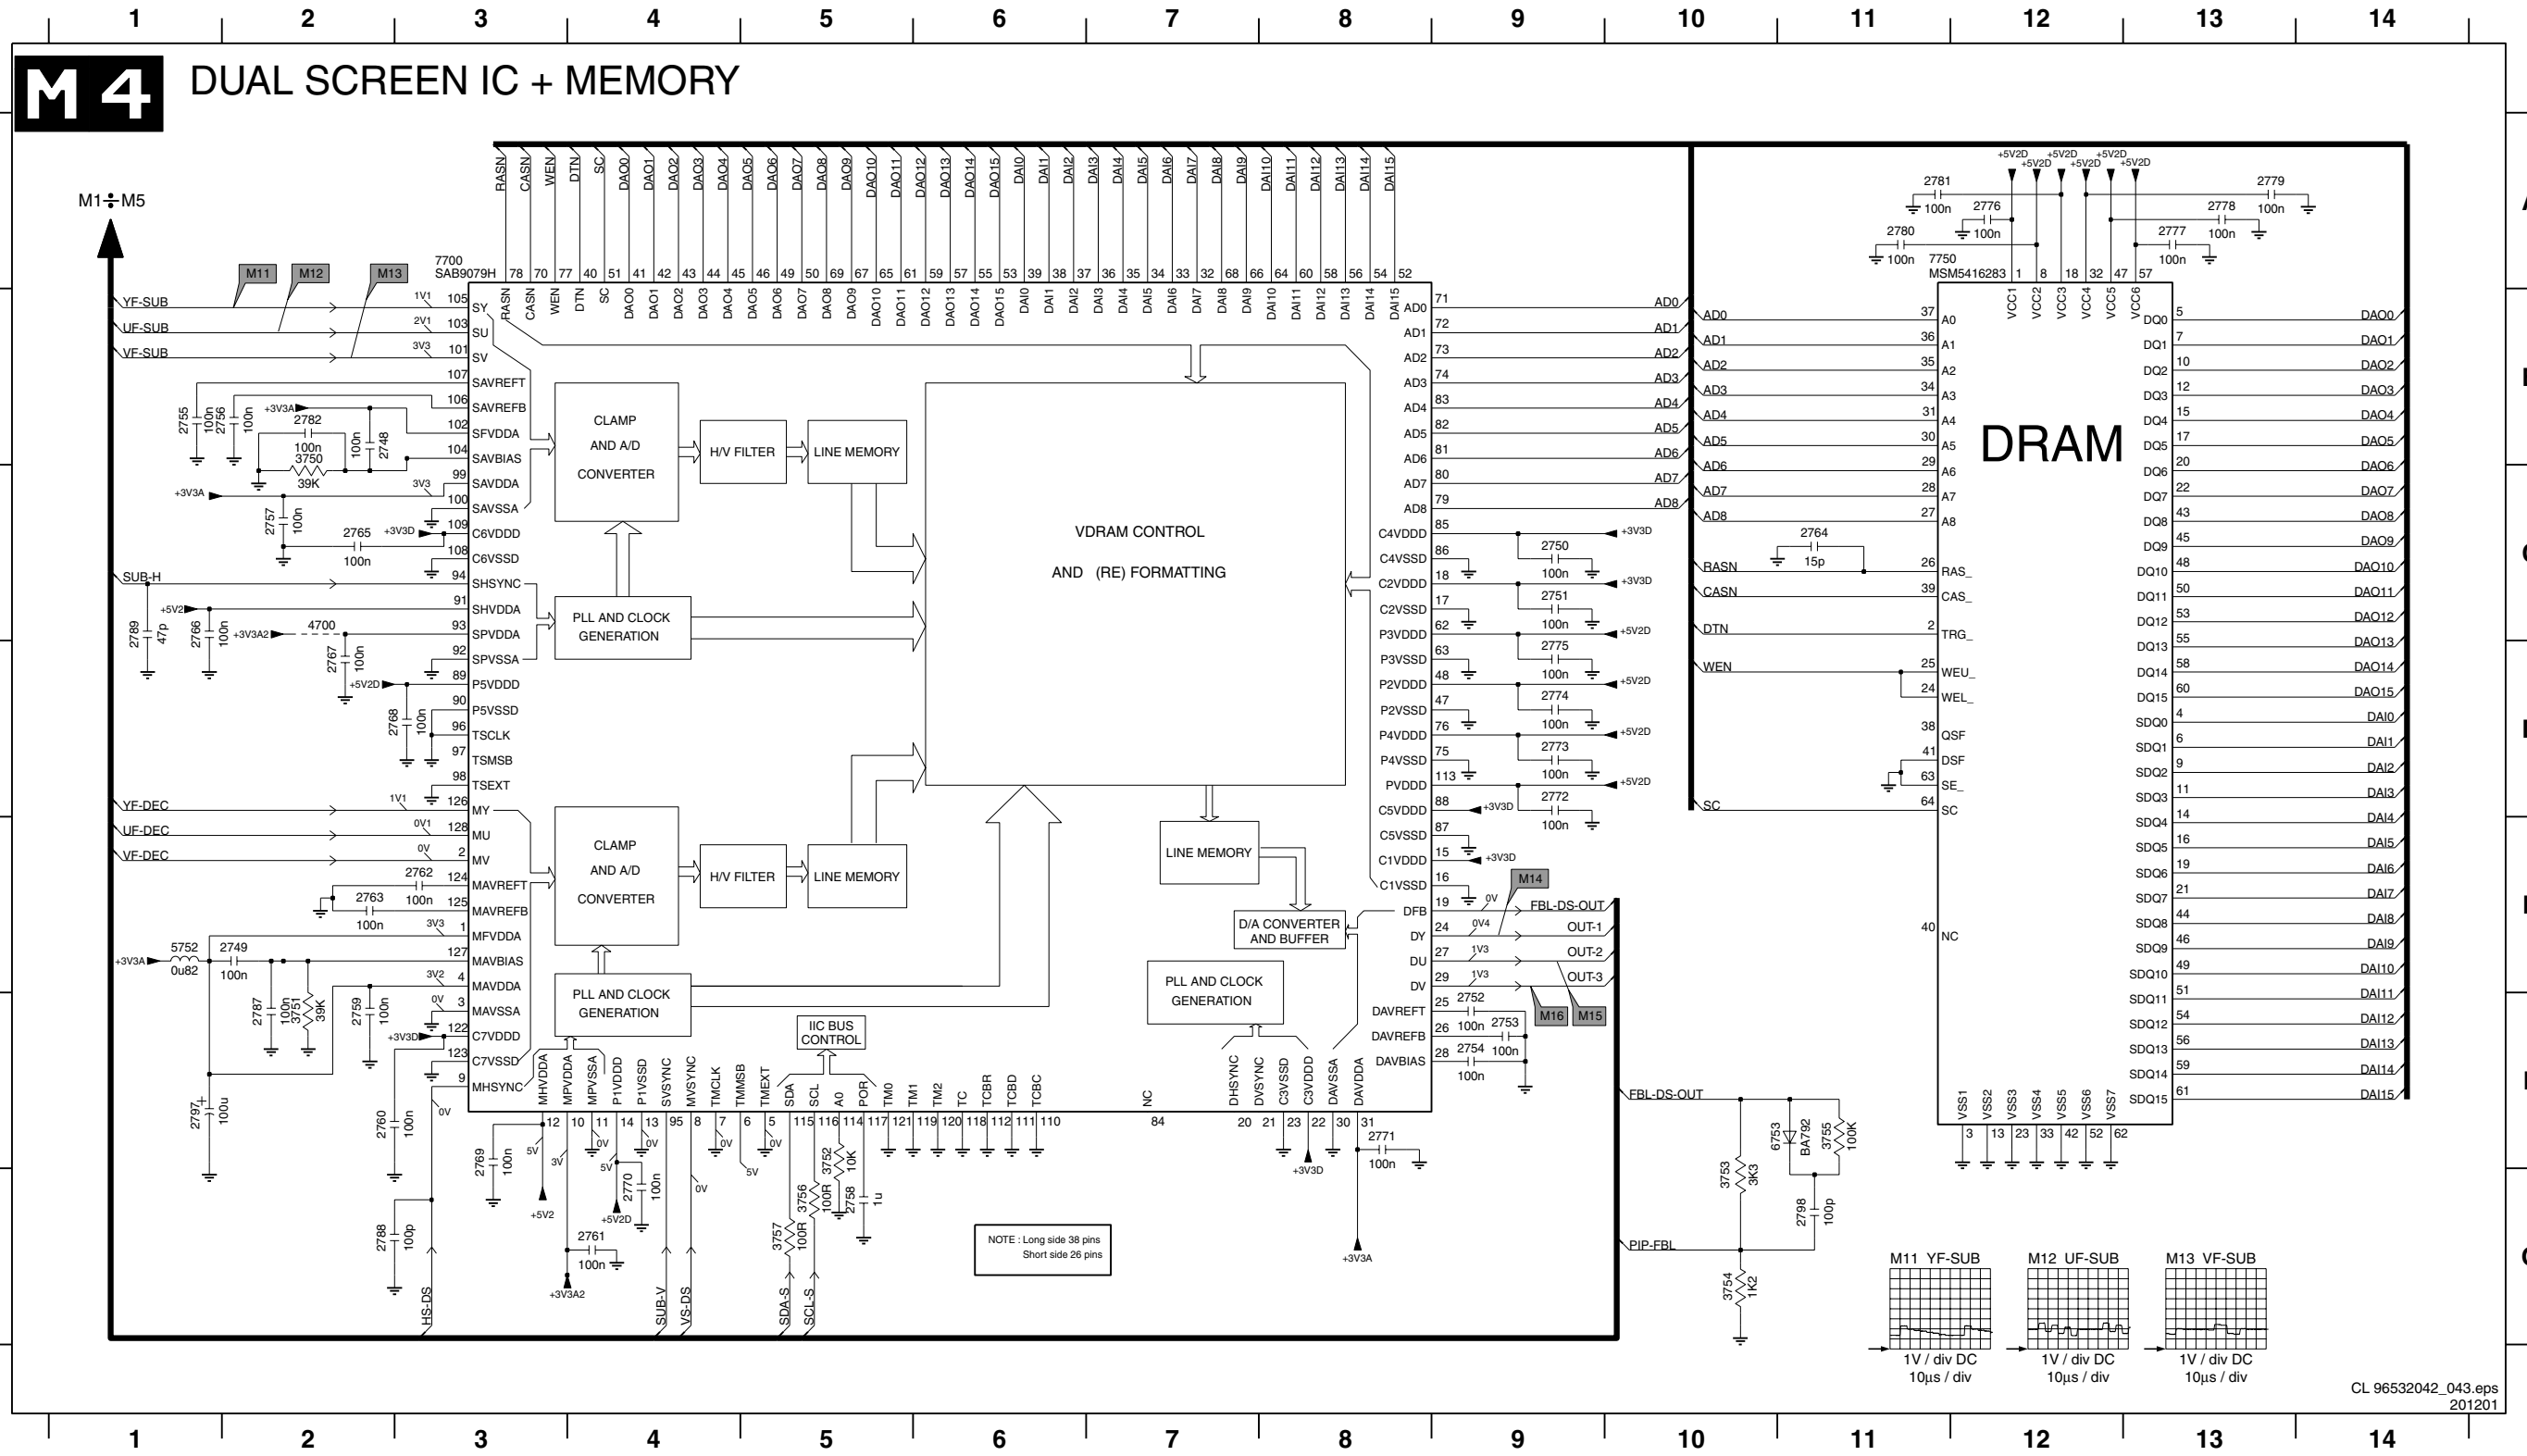


FDS Module: Audio

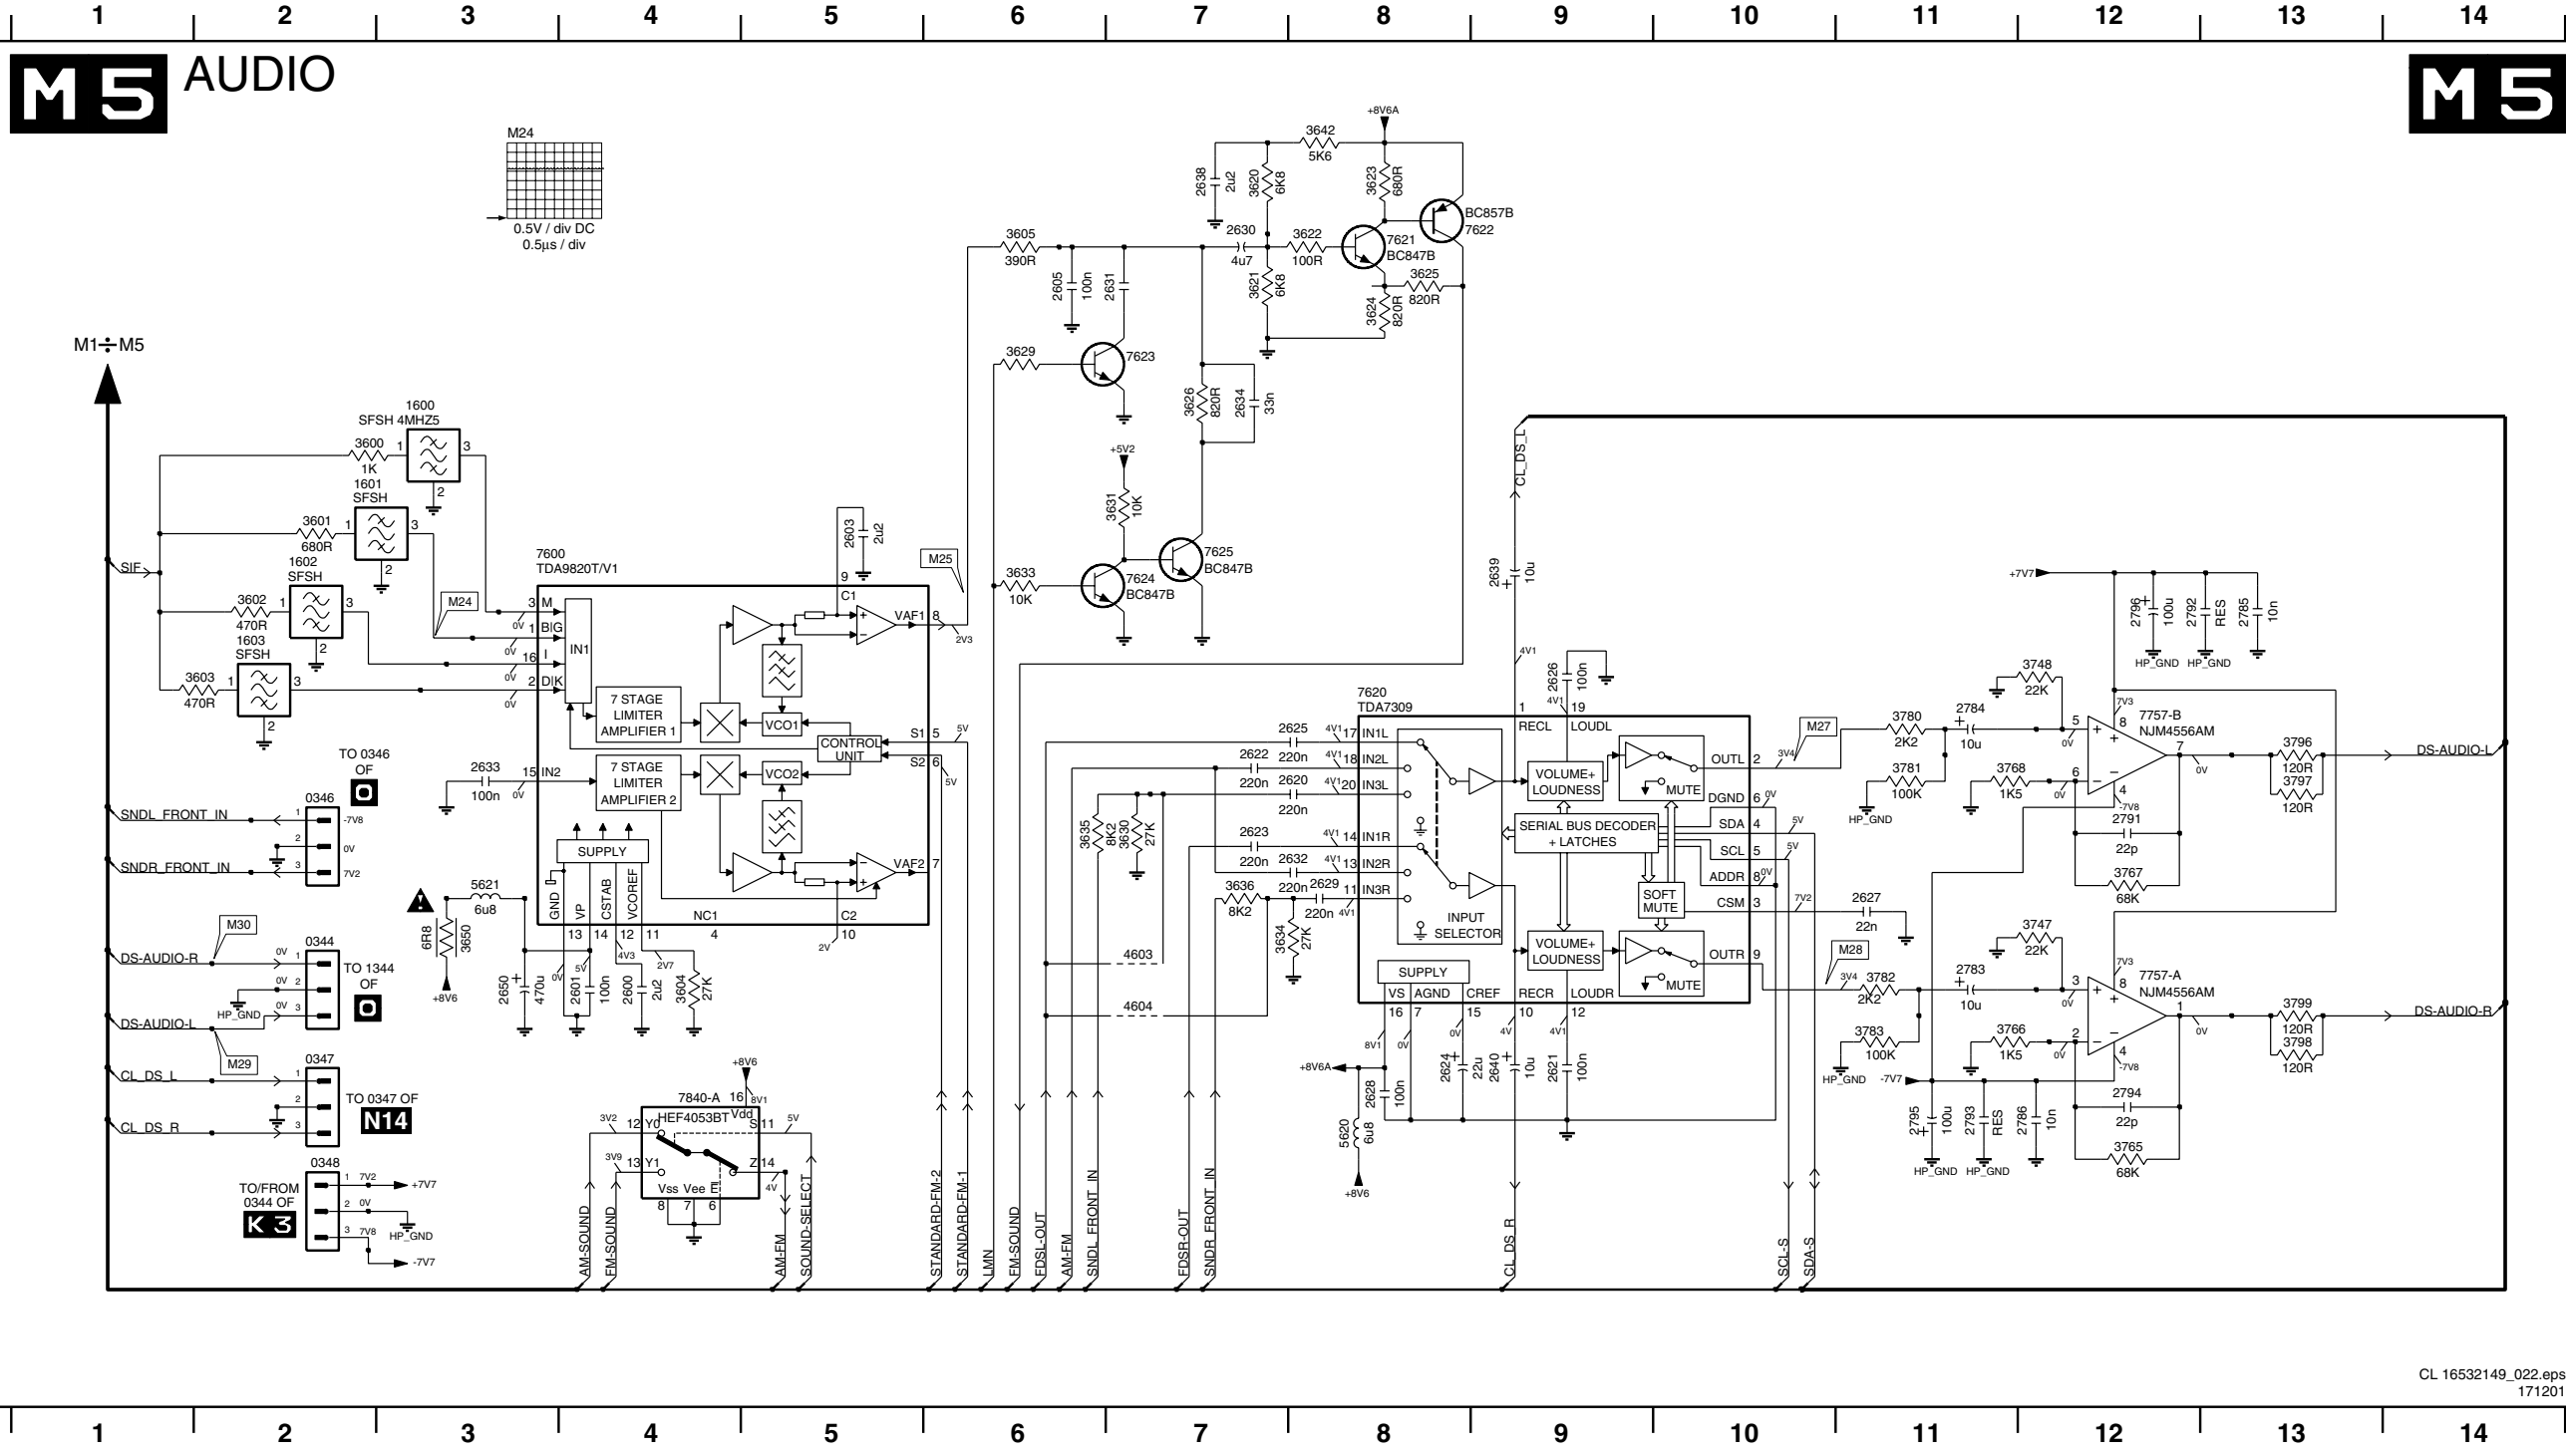


- 0344 E2
- 0346 D2
- 0347 F2
- 0348 F2
- 1600 B3
- 1601 C2
- 1602 C2
- 1603 D2
- 2600 E4
- 2601 E4
- 2603 C5
- 2605 B6
- 2620 D8
- 2621 F9
- 2622 D7
- 2623 E7
- 2624 F8
- 2625 D8
- 2626 D9
- 2627 E11
- 2628 F8
- 2629 E8
- 2630 A7
- 2631 B7
- 2632 E8
- 2633 D3
- 2634 B7
- 2638 A7
- 2639 C9
- 2640 F9
- 2650 E3
- 2783 E11
- 2784 D11
- 2785 C13
- 2786 F12
- 2791 E12
- 2792 C11
- 2793 F11
- 2794 F12
- 2795 F11
- 2796 C12
- 3600 B2
- 3601 C2
- 3602 C2
- 3603 D2
- 3604 E4
- 3605 A6
- 3620 A7
- 3621 B7
- 3622 A8
- 3623 A8
- 3624 B8
- 3625 B8
- 3626 B7
- 3629 B6
- 3630 E7
- 3631 C7
- 3633 C6
- 3634 E7
- 3635 E6
- 3636 E7
- 3642 A8
- 3650 E3
- 3747 E12
- 3748 D12
- 3765 F11
- 3766 F11
- 3767 E12
- 3768 D11
- 3780 D11
- 3781 D11
- 3782 E11
- 3783 F11
- 3796 D13
- 3797 D13
- 3798 F13
- 3799 F13
- 4603 E7
- 4604 F7
- 5620 F8
- 5621 E3
- 7600 C3
- 7620 D8
- 7621 A8
- 7622 A8
- 7623 B7
- 7624 C7
- 7625 C7
- 7757-A E12
- 7757-B D12
- 7840-A F4

Layout FDS Module (Bottom View)

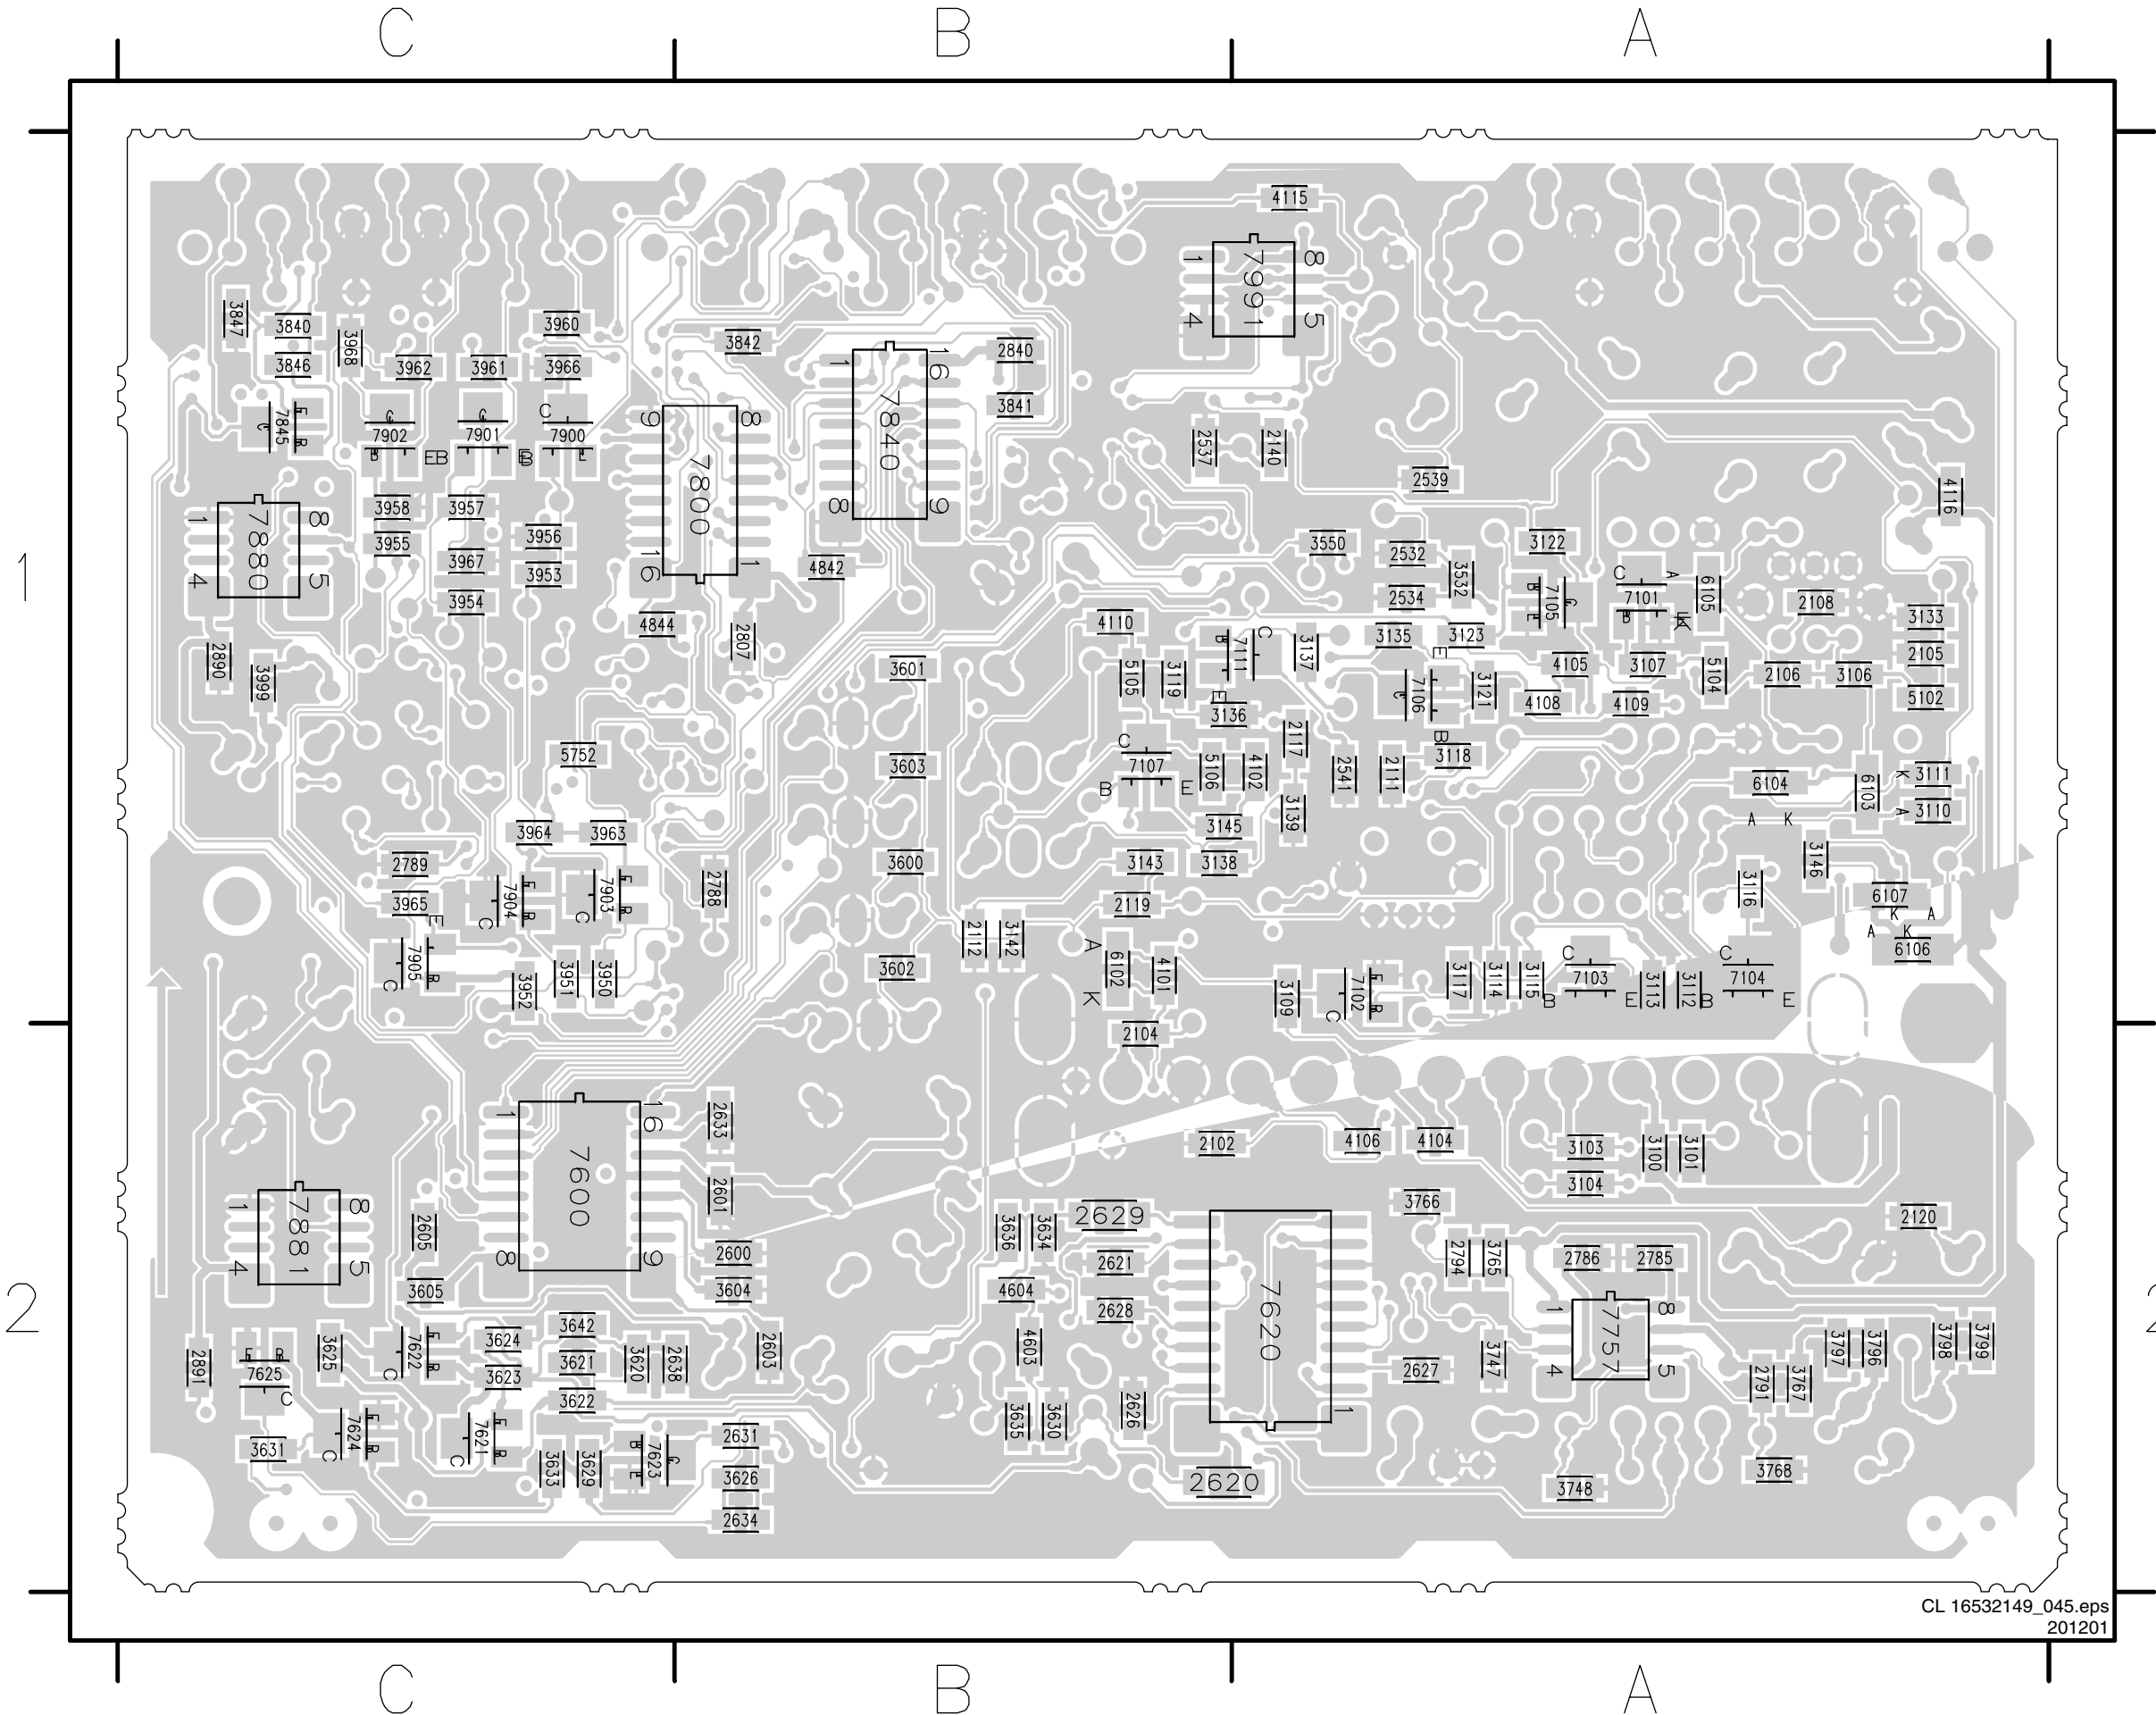

- 2102 B2 3602 B1 6104 A1
- 2104 B2 3603 B1 6105 A1
- 2105 A1 3604 B2 6106 A1
- 2106 A1 3605 C2 6107 A1
- 2108 A1 3620 C2 7101 A1
- 2111 A1 3621 C2 7102 A1
- 2112 B1 3622 C2 7103 A2
- 2117 A1 3623 C2 7104 A2
- 2119 B1 3624 C2 7105 A1
- 2120 A2 3625 C2 7106 A1
- 2140 A1 3626 B2 7107 B1
- 2532 A1 3629 C2 7111 A1
- 2534 A1 3630 B2 7600 C2
- 2537 B1 3631 C2 7620 A2
- 2539 A1 3633 C2 7621 C2
- 2541 A1 3634 B2 7622 C2
- 2600 B2 3635 B2 7623 C2
- 2601 B2 3636 B2 7624 C2
- 2603 B2 3642 C2 7625 C2
- 2605 C2 3747 A2 7757 A2
- 2620 B2 3748 A2 7800 B1
- 2621 B2 3765 A2 7840 B1
- 2626 B2 3766 A2 7845 C1
- 2627 A2 3767 A2 7880 C1
- 2628 B2 3768 A2 7881 C2
- 2629 B2 3796 A2 7900 C1
- 2631 B2 3797 A2 7901 C1
- 2633 B2 3798 A2 7902 C1
- 2634 B2 3799 A2 7903 C1
- 2638 B2 3840 C1 7904 C1
- 2785 A2 3841 B1 7905 C1
- 2786 A2 3842 B1 7991 A1
- 2788 B1 3846 C1
- 2789 C1 3847 C1
- 2791 A2 3950 C1
- 2794 A2 3951 C1
- 2807 B1 3952 C1
- 2840 B1 3953 C1
- 2890 C1 3954 C1
- 2891 C2 3955 C1
- 3100 A2 3956 C1
- 3101 A2 3957 C1
- 3103 A2 3958 C1
- 3104 A2 3960 C1
- 3106 A1 3961 C1
- 3107 A1 3962 C1
- 3109 A1 3963 C1
- 3110 A1 3964 C1
- 3111 A1 3965 C1
- 3112 A1 3966 C1
- 3113 A1 3967 C1
- 3114 A1 3968 C1
- 3115 A1 3969 C1
- 3116 A1 4101 B1
- 3117 A1 4102 A1
- 3118 A1 4104 A2
- 3119 B1 4105 A1
- 3121 A1 4106 A2
- 3122 A1 4108 A1
- 3123 A1 4109 A1
- 3133 A1 4110 B1
- 3135 A1 4115 A1
- 3136 B1 4116 A1
- 3137 A1 4603 B2
- 3138 B1 4604 B2
- 3139 A1 4842 B1
- 3142 B1 4844 C1
- 3143 B1 5102 A1
- 3145 B1 5104 A1
- 3146 A1 5105 B1
- 3532 A1 5106 B1
- 3550 A1 5752 C1
- 3600 B1 6102 B1
- 3601 B1 6103 A1


Multi-Channel Sound Module: Core Top Level

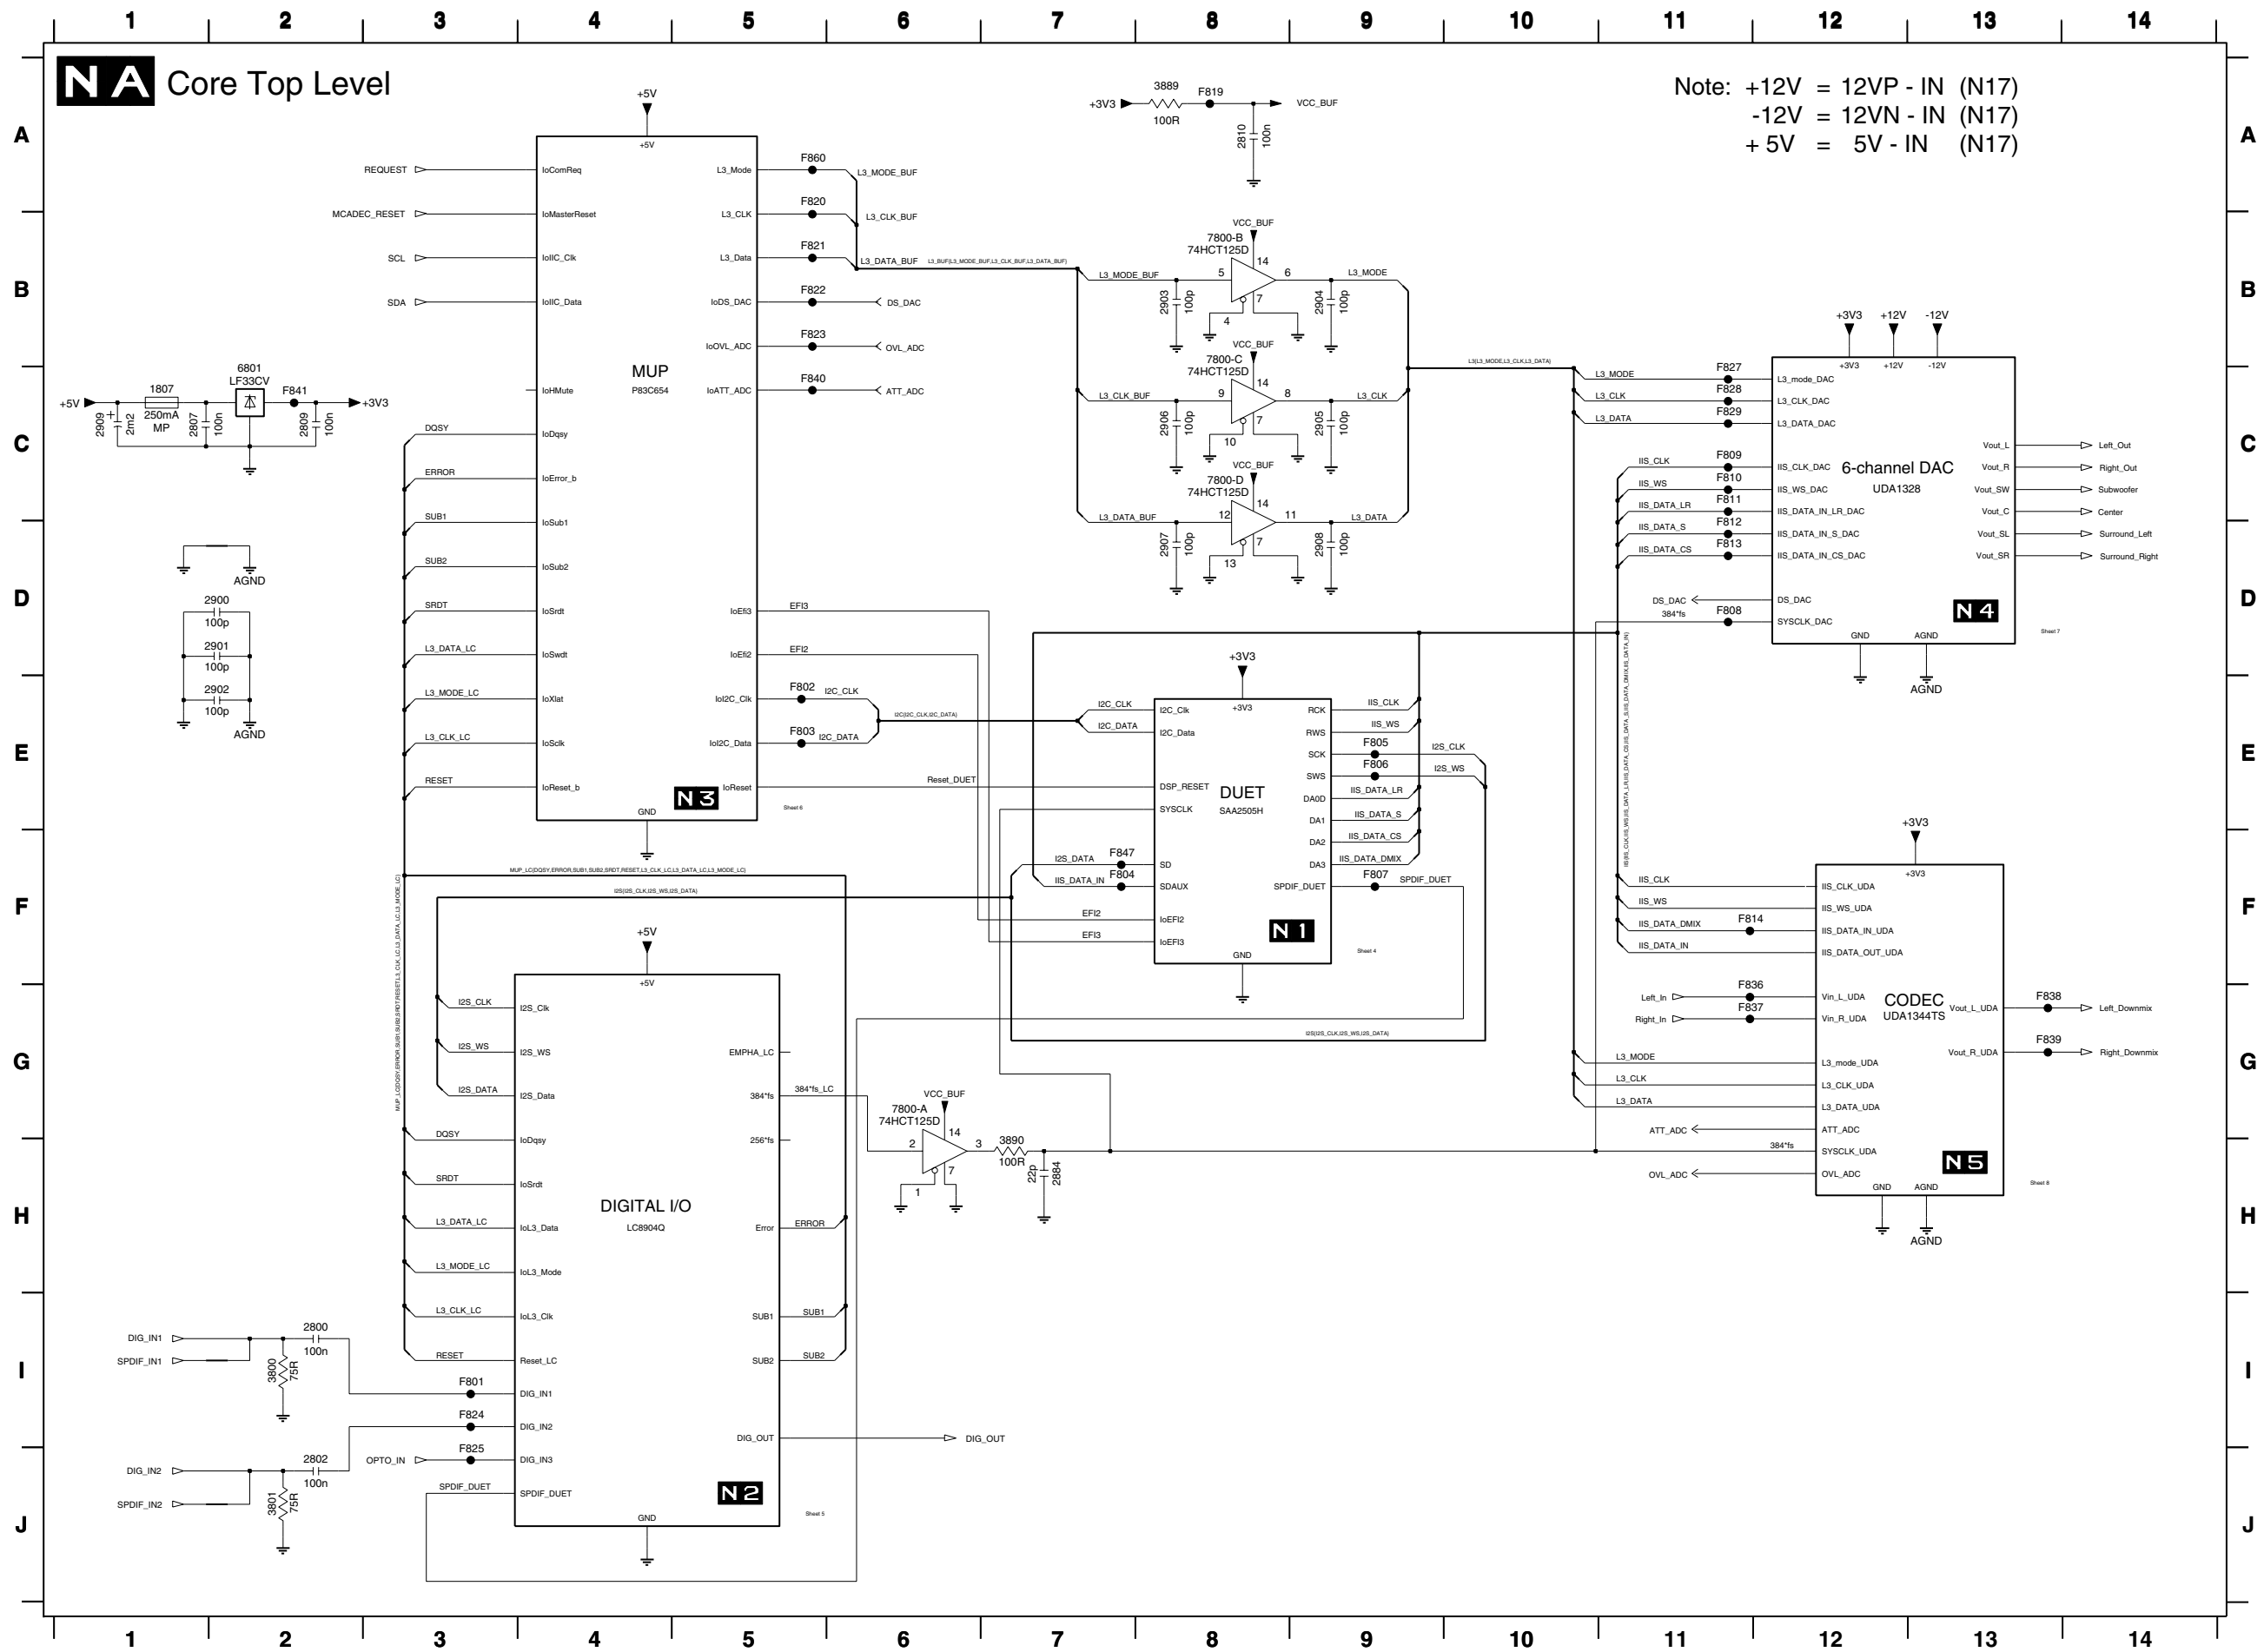


- 2800 I2
- 2802 J2
- 2807 C1
- 2809 C2
- 2810 A8
- 2884 H7
- 2900 D2
- 2901 D2
- 2902 E2
- 2903 B8
- 2904 B9
- 2905 C9
- 2906 C8
- 2907 D8
- 2908 D9
- 2909 C1
- 3800 I2
- 3801 J2
- 3889 A8
- 3890 H7
- 6801 C2
- 7800-A G6
- 7800-B B8
- 7800-C B8
- 7800-D C8
- F801 I3
- F802 E5
- F803 E5
- F804 F7
- F805 E9
- F806 E9
- F807 F9
- F808 D11
- F809 C11
- F810 C11
- F811 C11
- F812 D11
- F813 D11
- F814 F11
- F819 A8
- F820 A5
- F821 B5
- F822 B5
- F823 B5
- F824 I3
- F825 J3
- F827 C11
- F828 C11
- F829 C11
- F836 G11
- F837 G11
- F838 G13
- F839 G13
- F840 C5
- F841 A2
- F847 F7
- F860 A5

Multi-Channel Sound Module: Top Level

NB Top-level MCS module

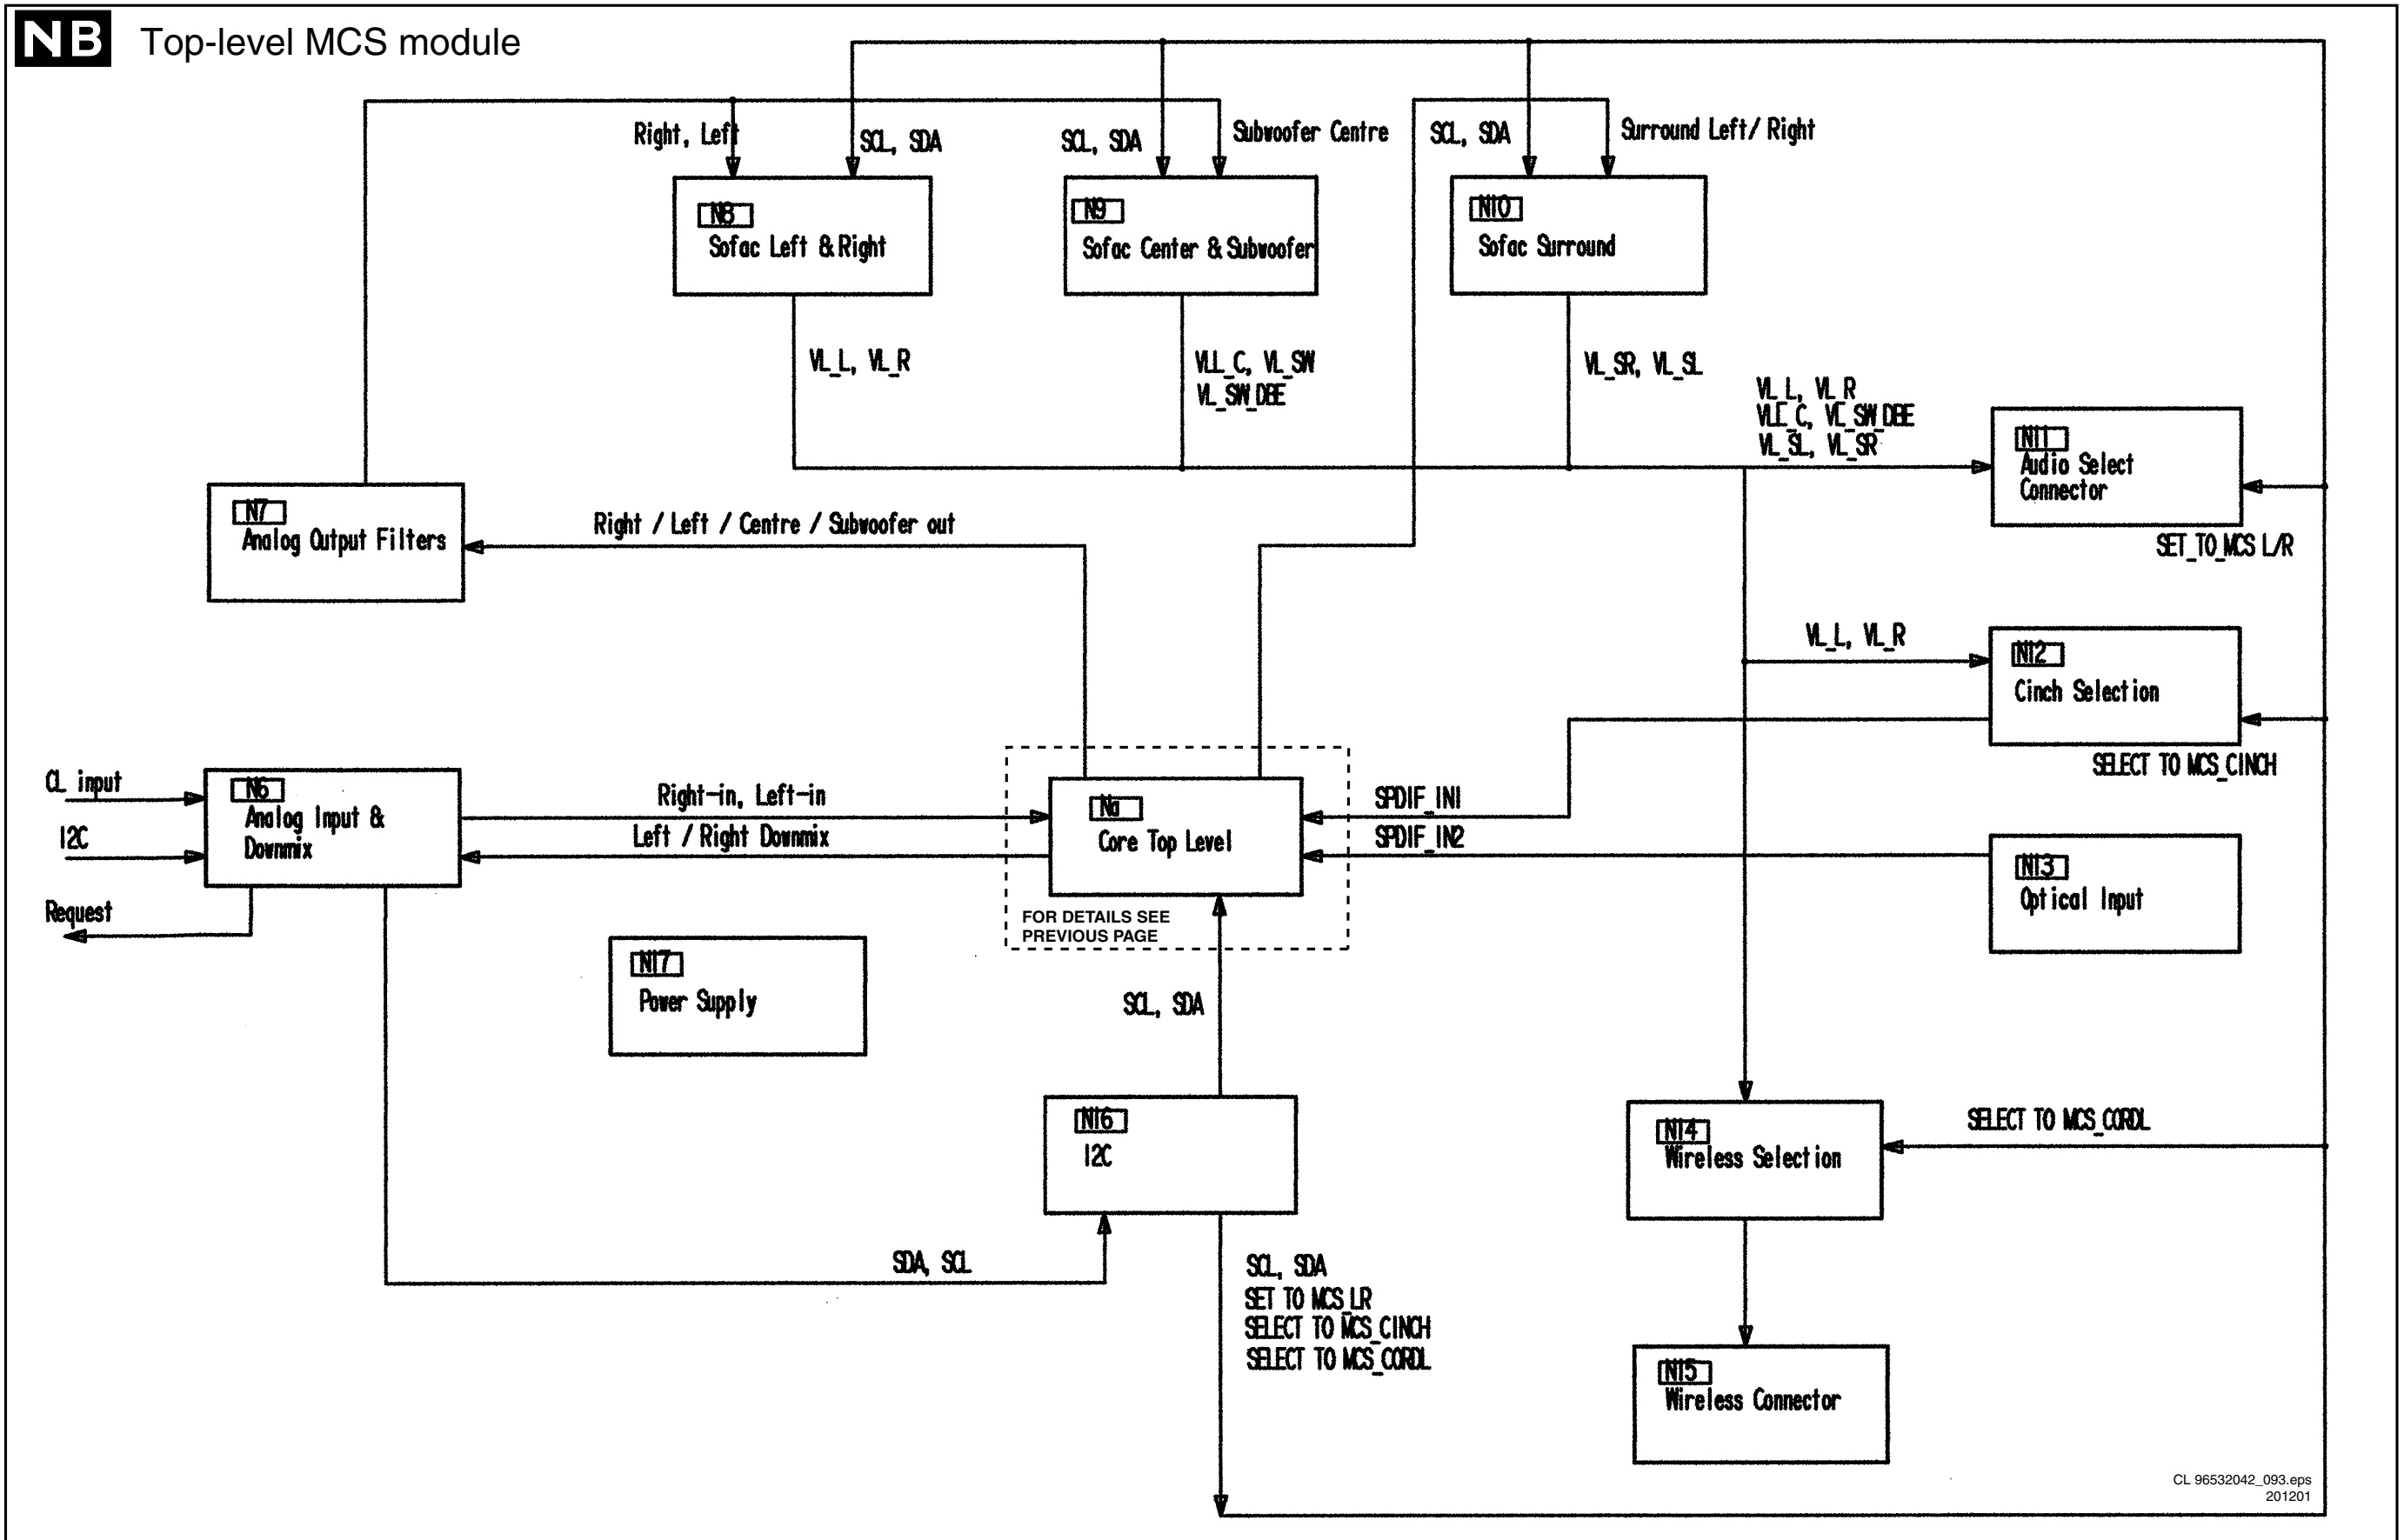

Multi-Channel Sound Module: Duet SAA2505H

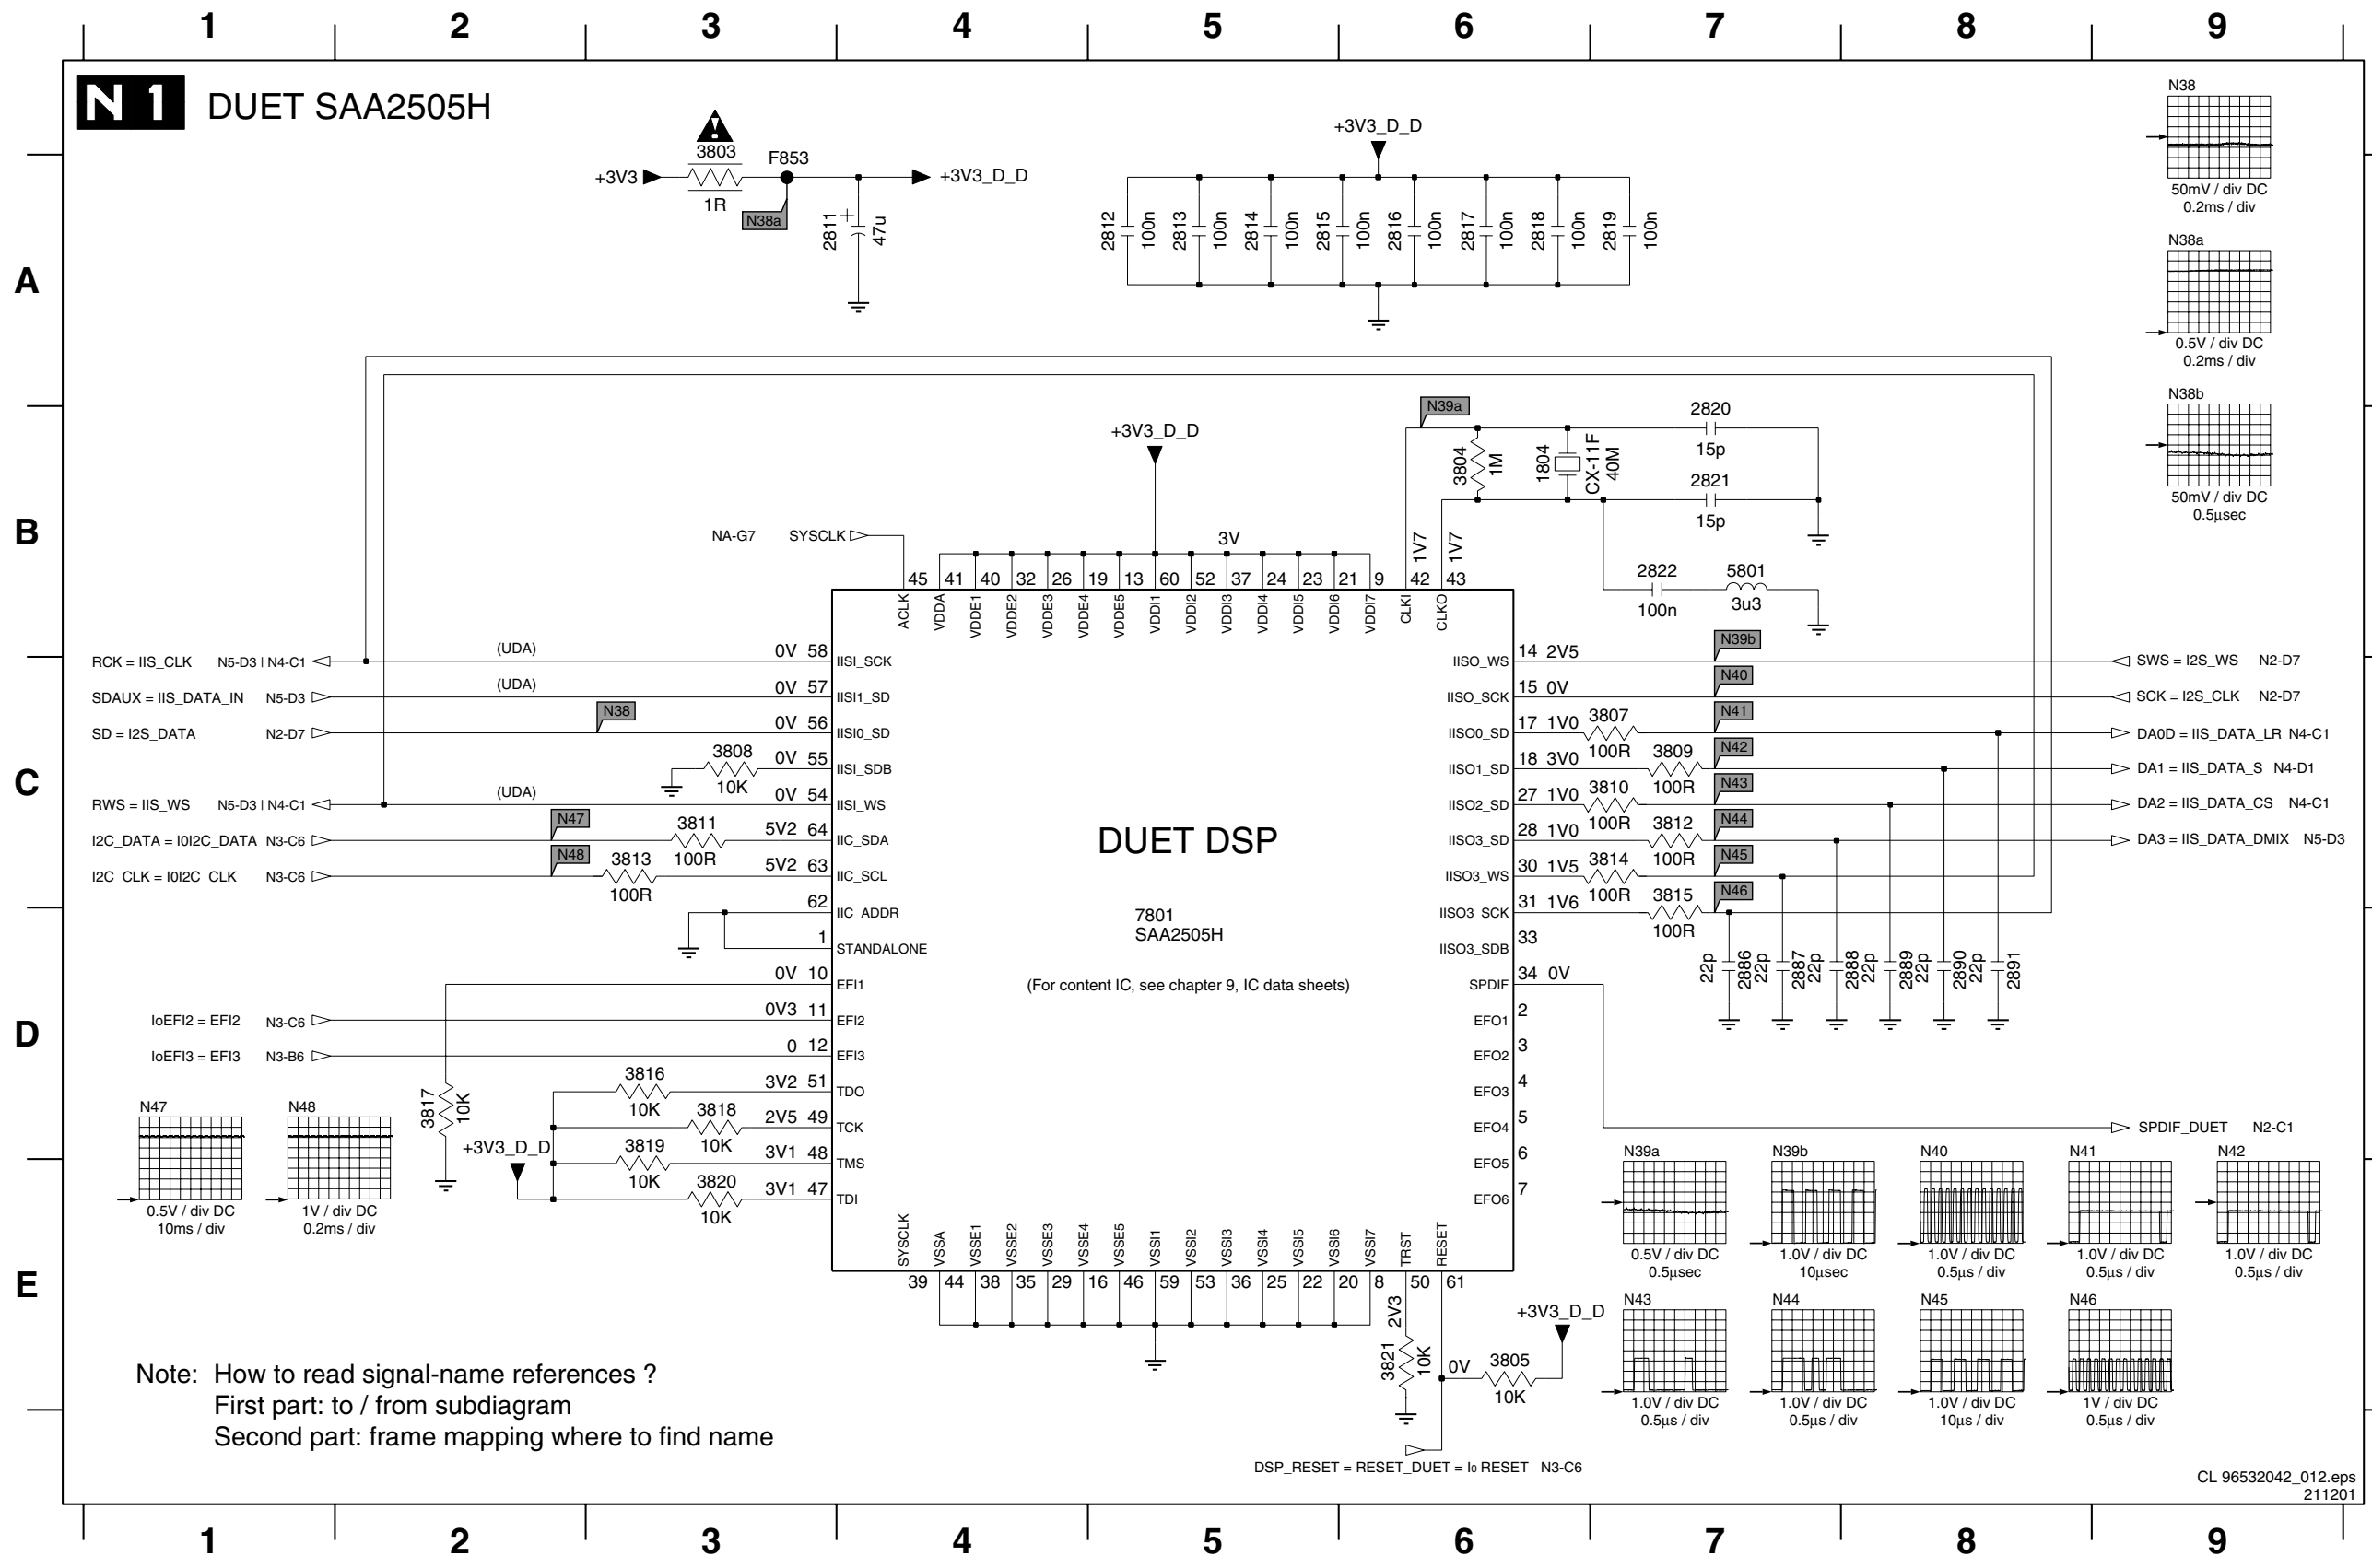

N1 DUET SAA2505H

DUET DSP


7801
SAA2505H

(For content IC, see chapter 9, IC data sheets)

Note: How to read signal-name references?
 First part: to / from subdiagram
 Second part: frame mapping where to find name

- 1804 B6
- 2811 A4
- 2812 A5
- 2813 A5
- 2814 A5
- 2815 A5
- 2816 A6
- 2817 A6
- 2818 A6
- 2819 A7
- 2820 B7
- 2821 B7
- 2822 B7
- 2886 D7
- 2887 D7
- 2888 D8
- 2889 D8
- 2890 D8
- 2891 D8
- 3803 A3
- 3804 B6
- 3805 E6
- 3807 C7
- 3808 C3
- 3809 C7
- 3810 C7
- 3811 C3
- 3812 C7
- 3813 C3
- 3814 C7
- 3815 C7
- 3817 D3
- 3818 D3
- 3819 D3
- 3820 E3
- 3821 E6
- 5801 B7
- 7801 D5
- F853 A1

Multi-Channel Sound Module: Digital I/O LC8904Q

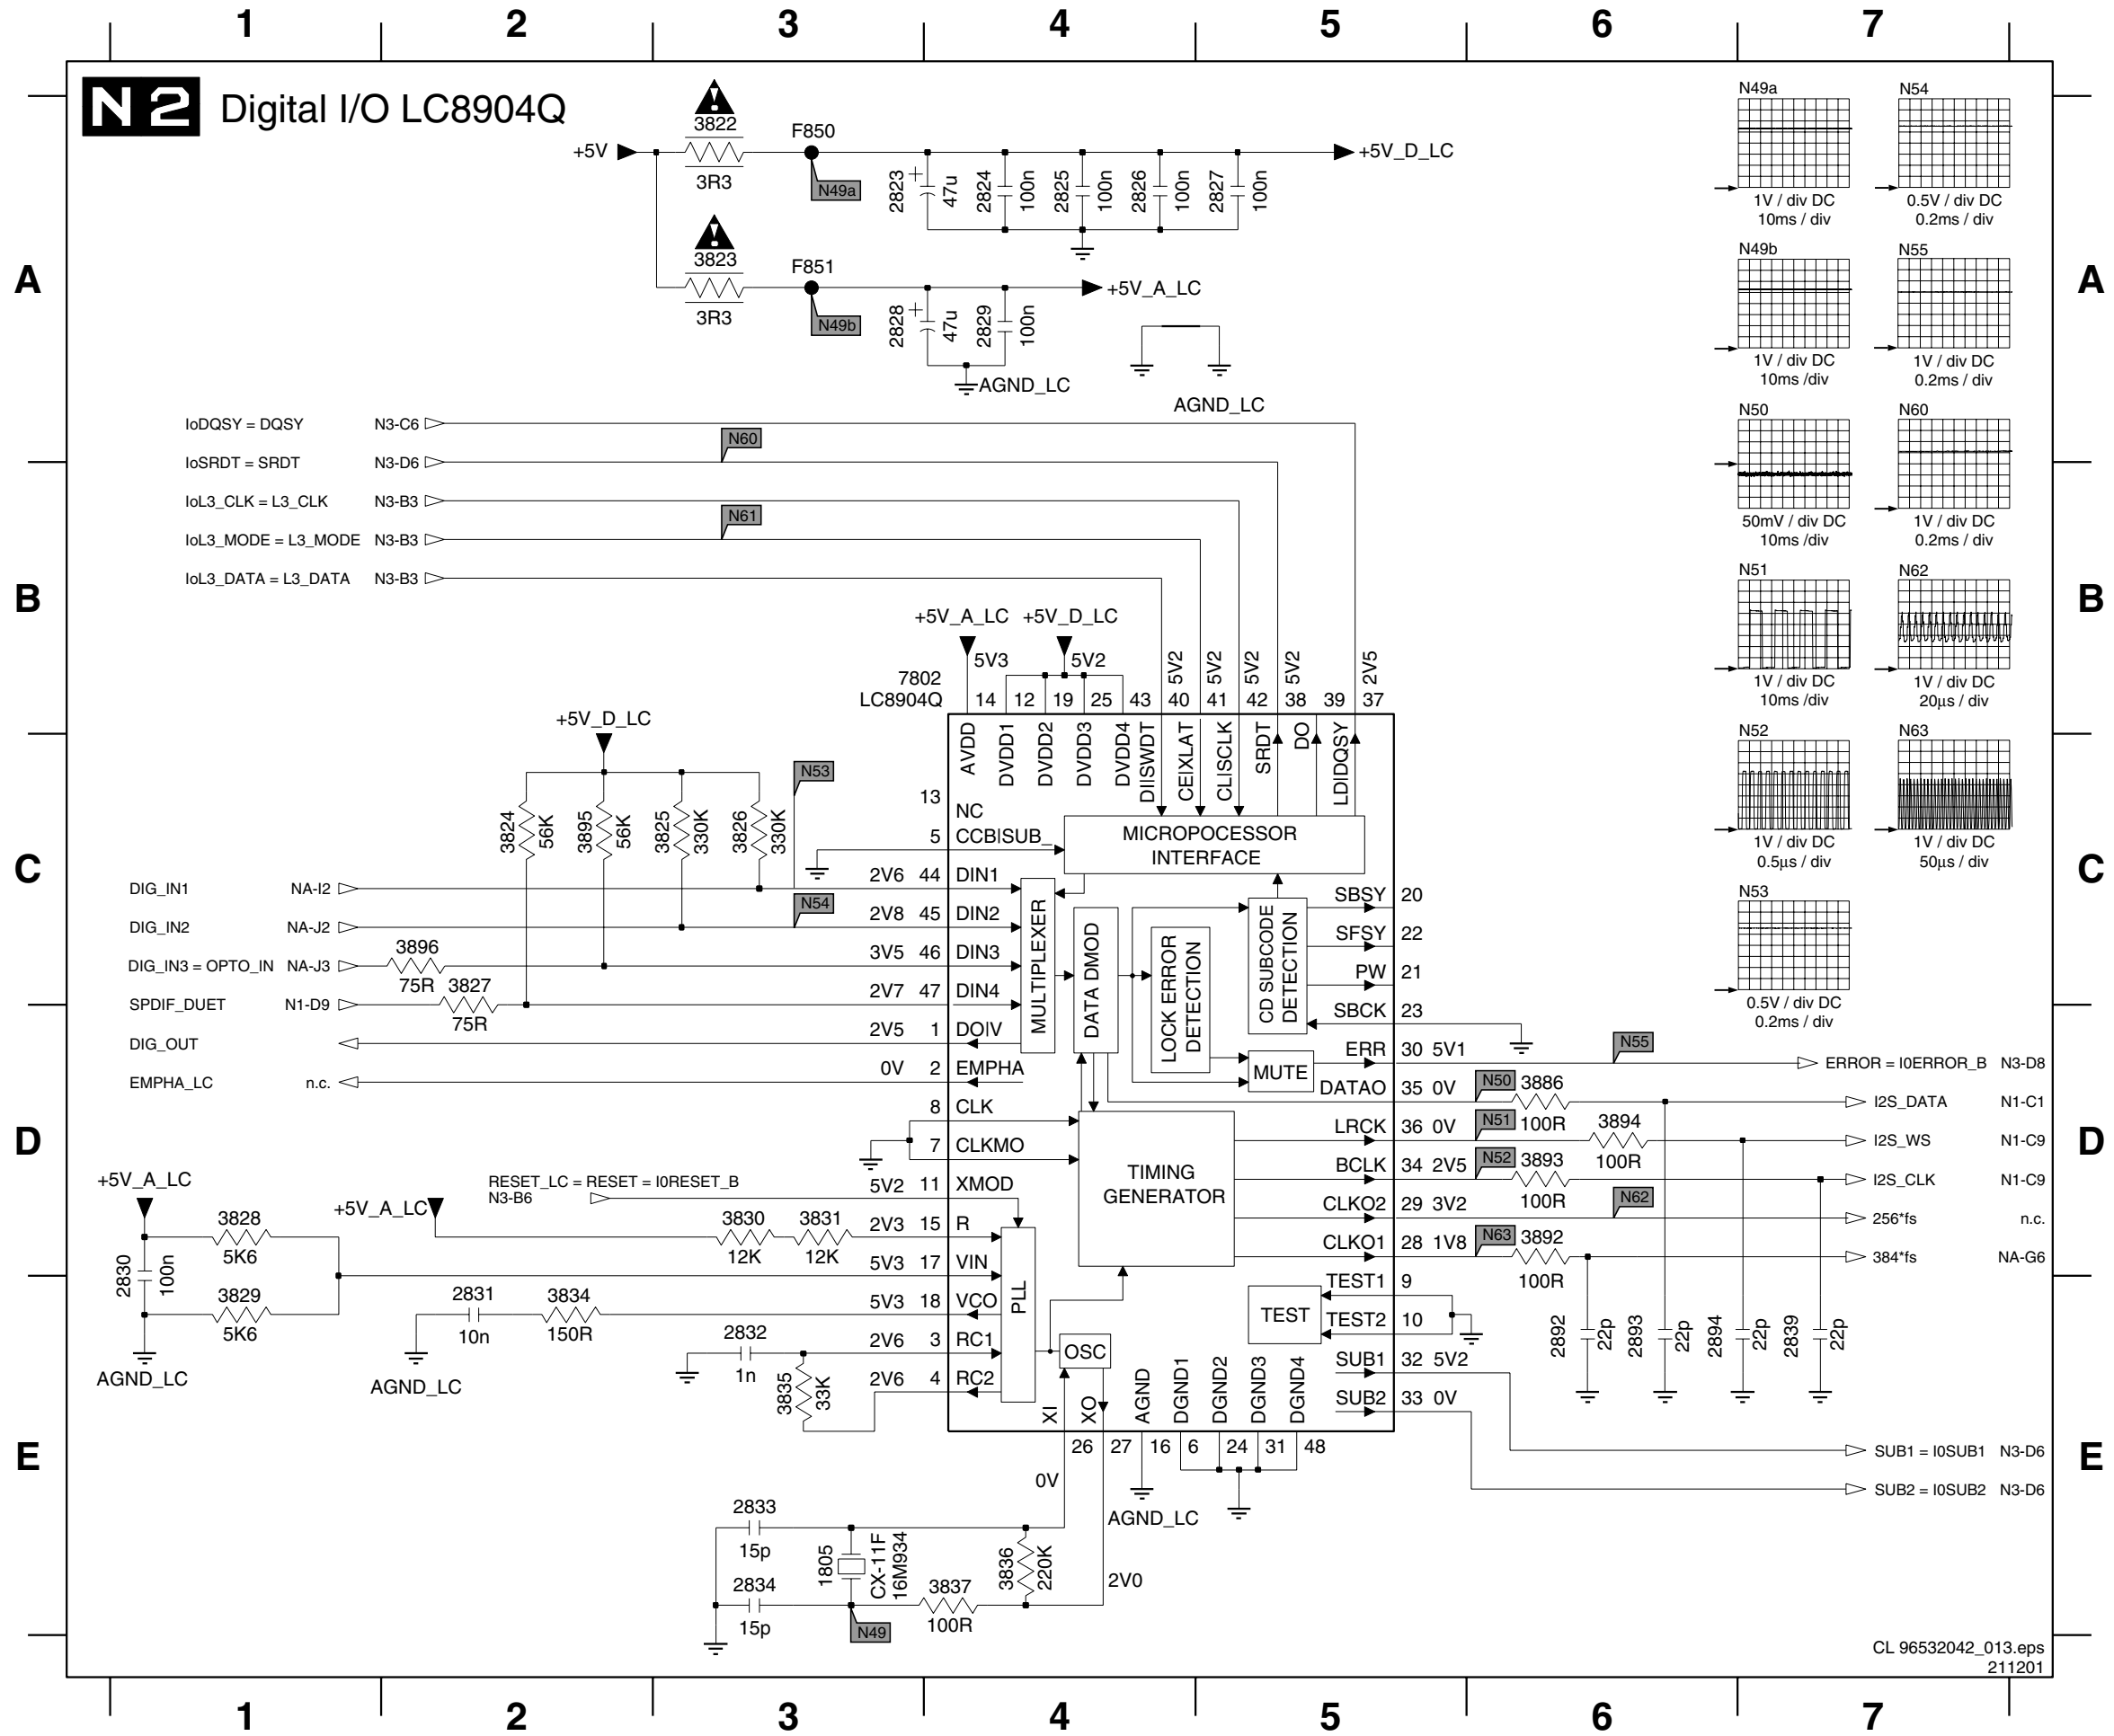

A

B


C

D

E


- 1805 E3
- 2823 A3
- 2824 A4
- 2825 A4
- 2826 A4
- 2827 A5
- 2828 A3
- 2829 A4
- 2830 D1
- 2831 E2
- 2832 E3
- 2833 E3
- 2834 E3
- 2839 E7
- 2892 E6
- 2893 E6
- 2894 E6
- 3822 A3
- 3823 A3
- 3824 C2
- 3825 C3
- 3826 C3
- 3827 C2
- 3828 D1
- 3829 E1
- 3830 D3
- 3831 D3
- 3834 E2
- 3835 E3
- 3836 E4
- 3837 E4
- 3886 D6
- 3892 D6
- 3893 D6
- 3894 D6
- 3895 C3
- 3896 C2
- 7802 B3
- F850 A2
- F851 A2

Multi-Channel Sound Module: Micro Controller P83C654

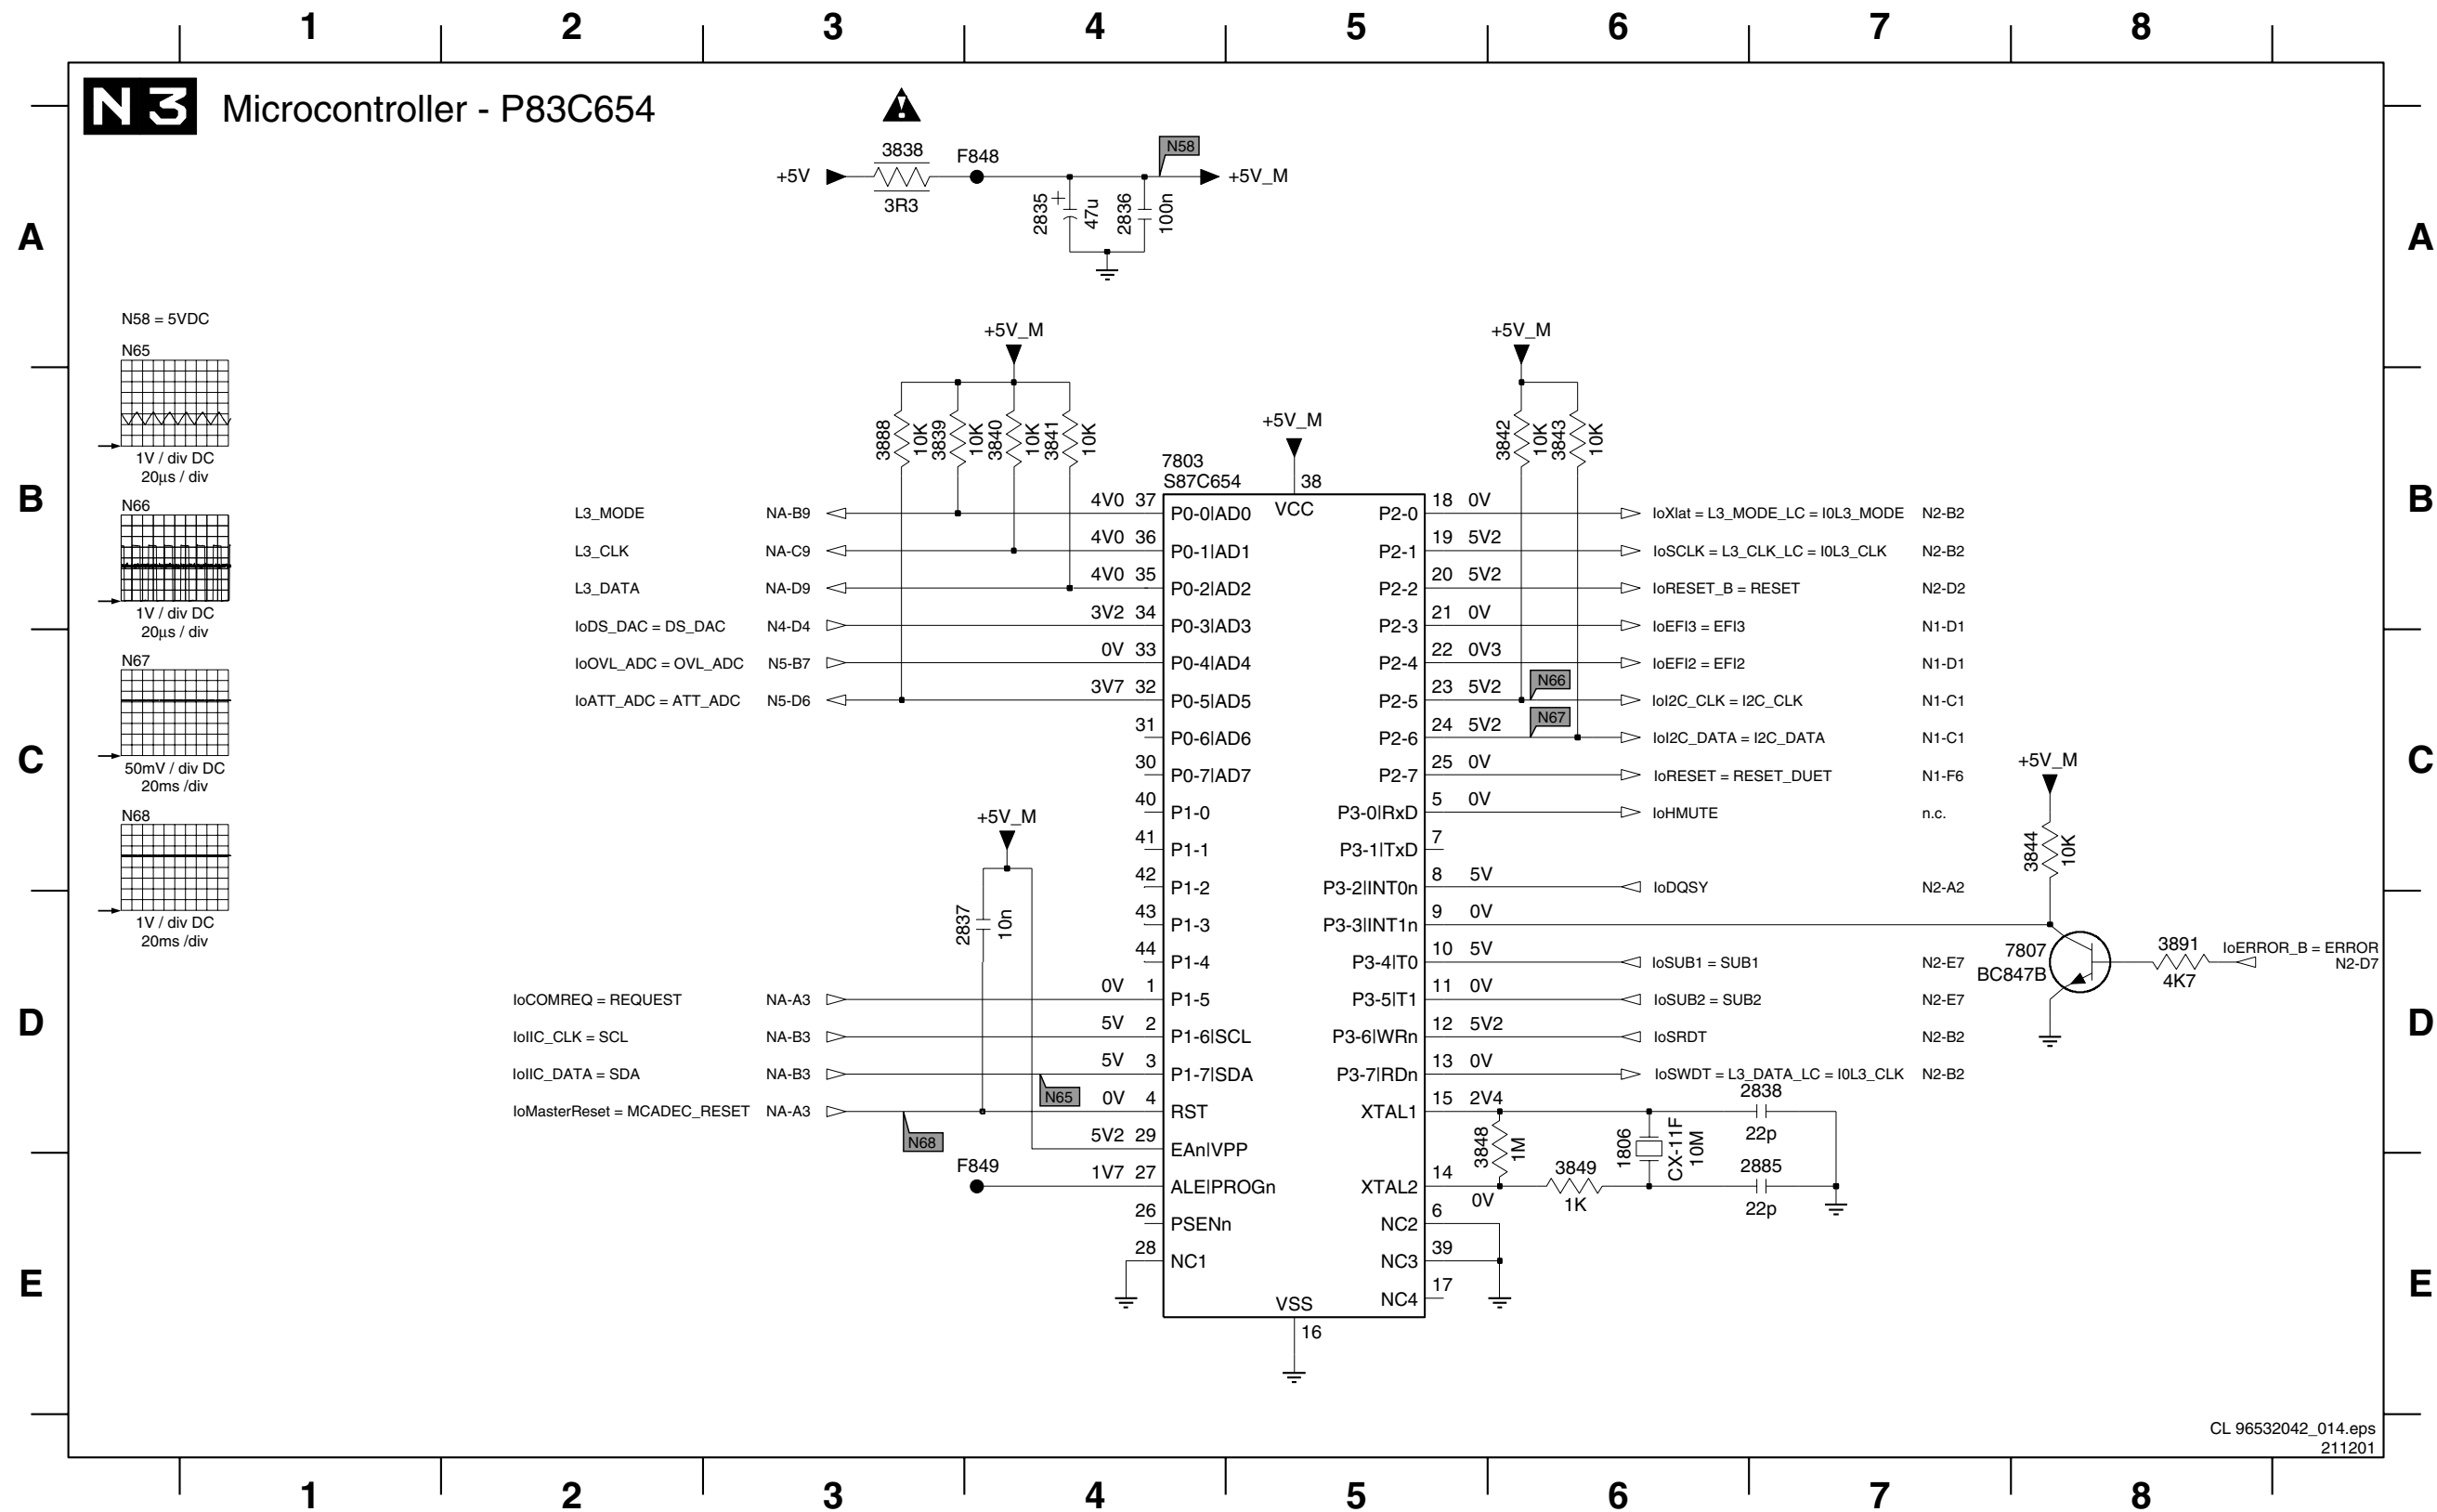


- 1806 D6
- 2835 A4
- 2836 A4
- 2837 D4
- 2838 D7
- 2885 E7
- 3838 A3
- 3839 B3
- 3840 B4
- 3841 B4
- 3842 B6
- 3843 B6
- 3844 C7
- 3848 D5
- 3849 E6
- 3888 B3
- 3891 D8
- 7803 B4
- 7807 D7
- F848 A4
- F849 E4

Multi-Channel Sound Module: 6-Channel DAC - UDA1328T

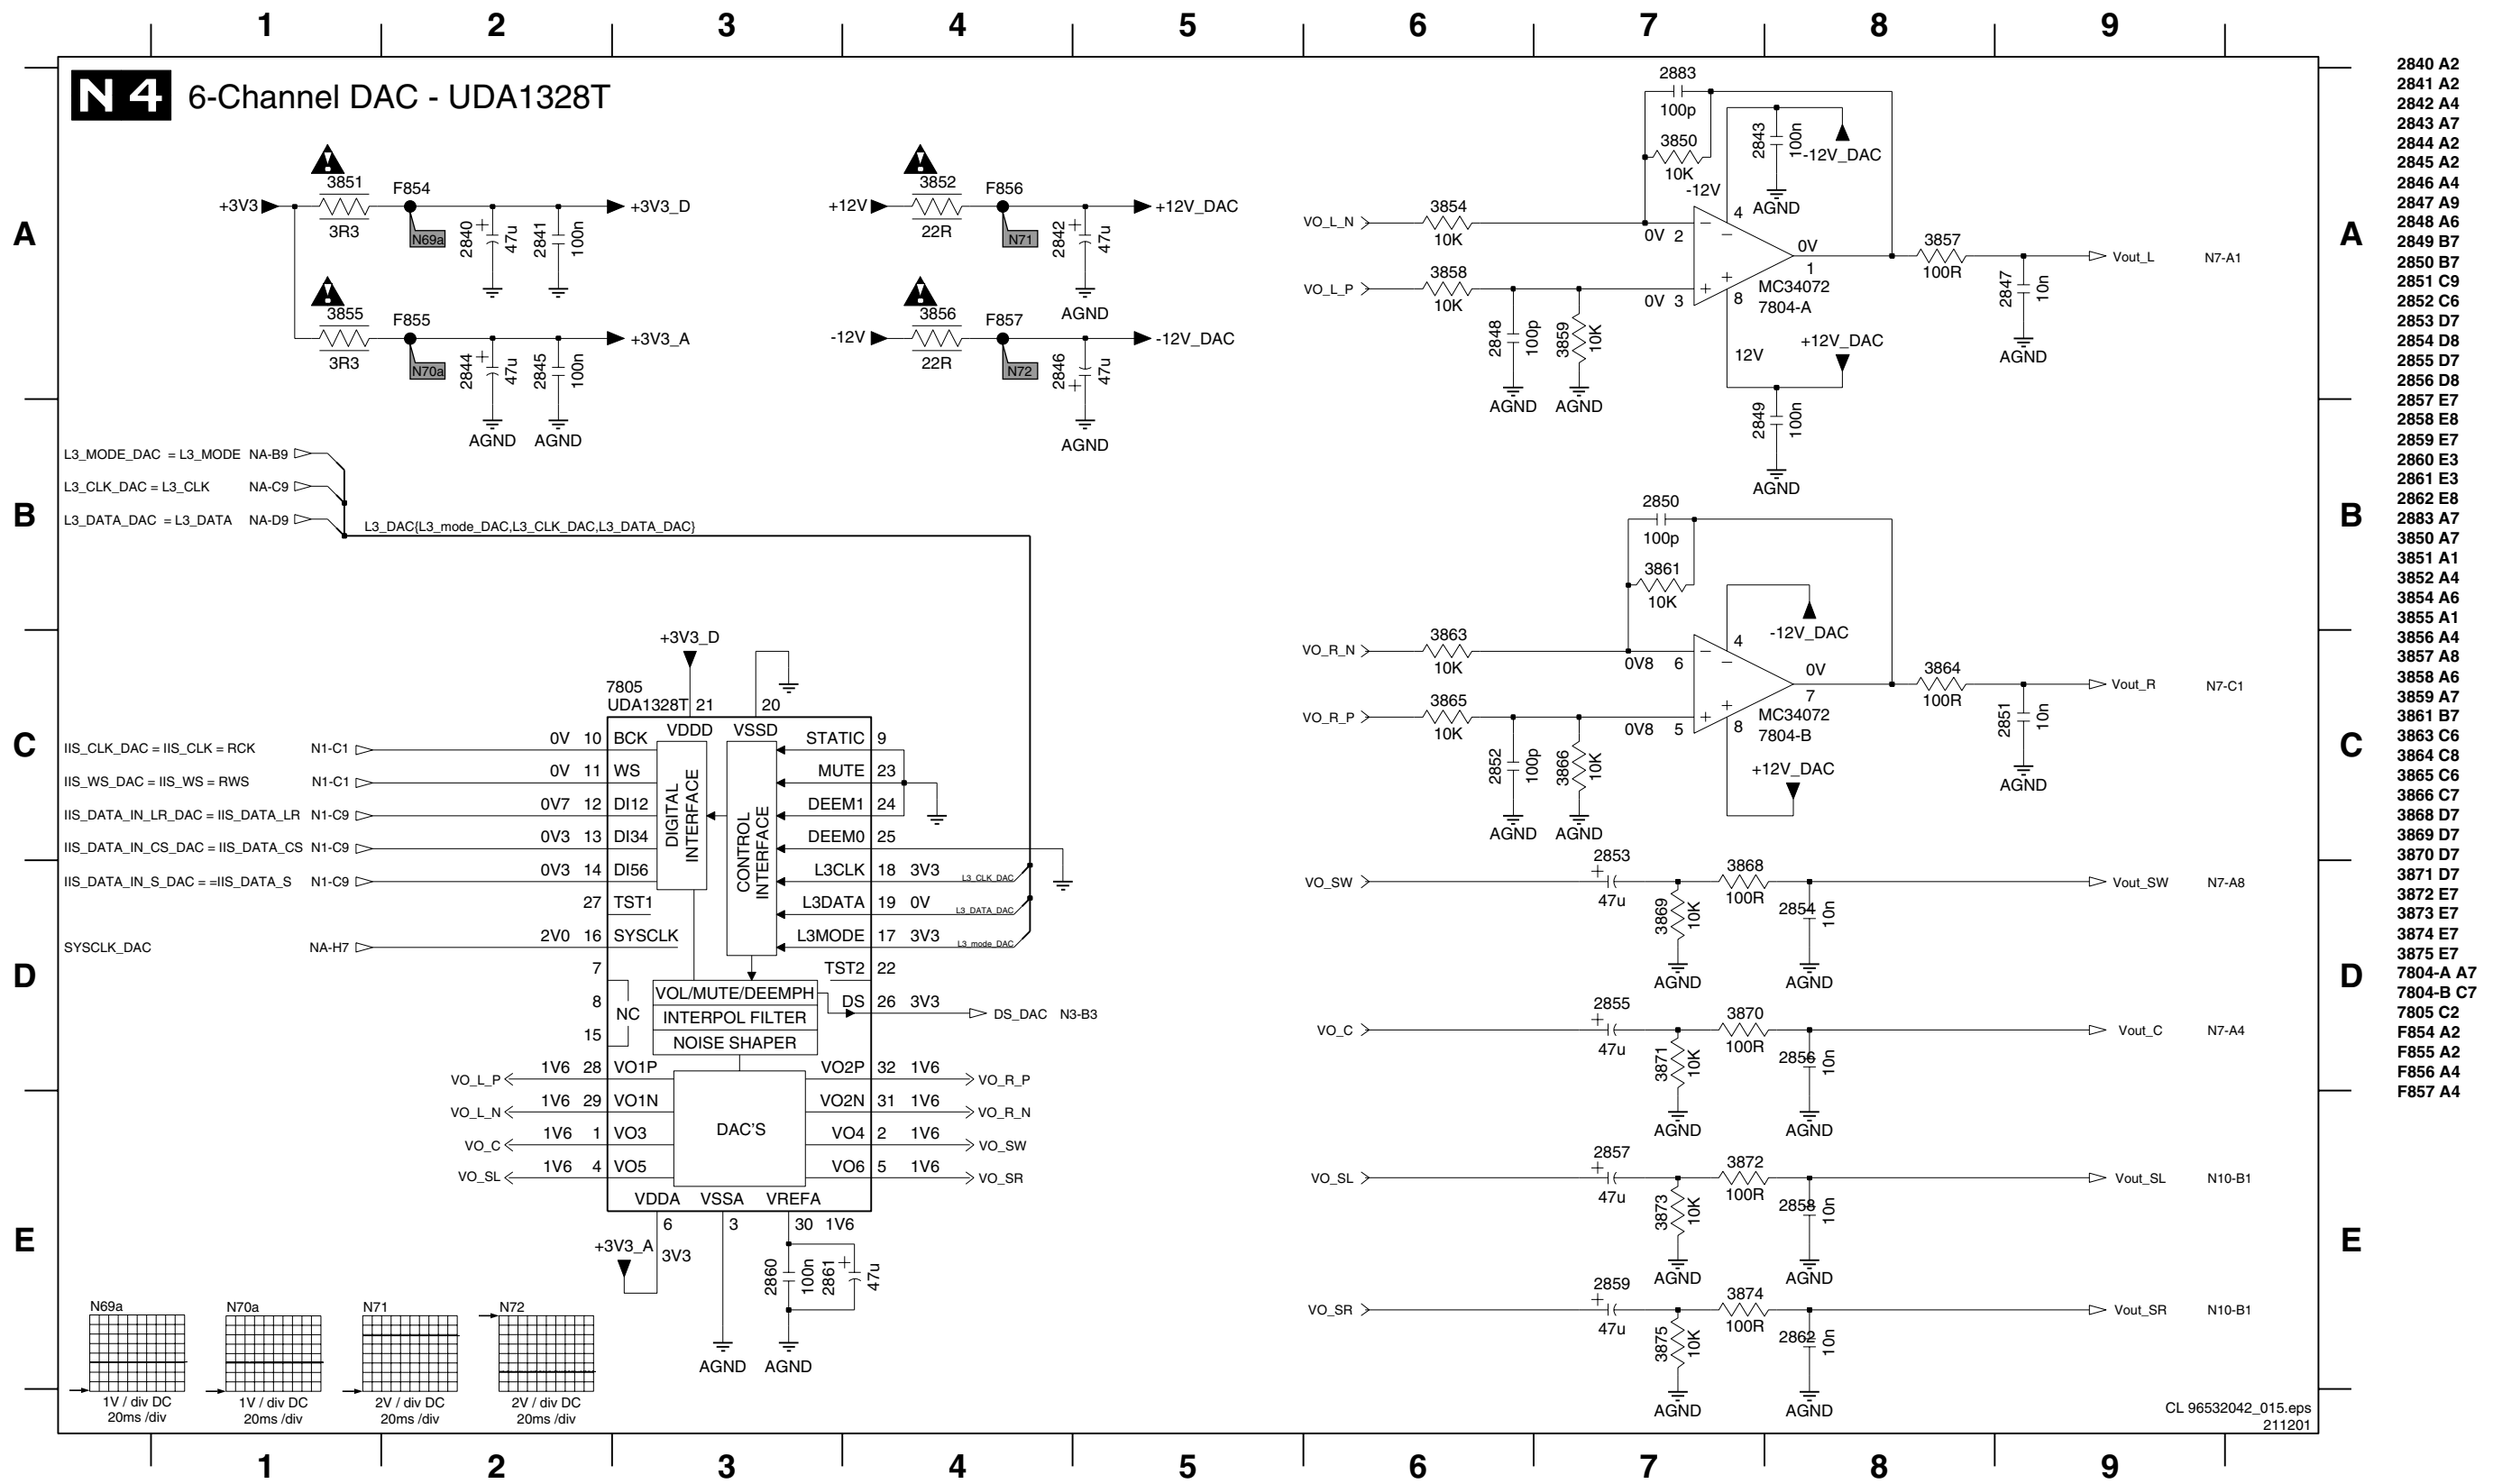


Multi-Channel Sound Module: Stereo CODEC - UDA 1344TS

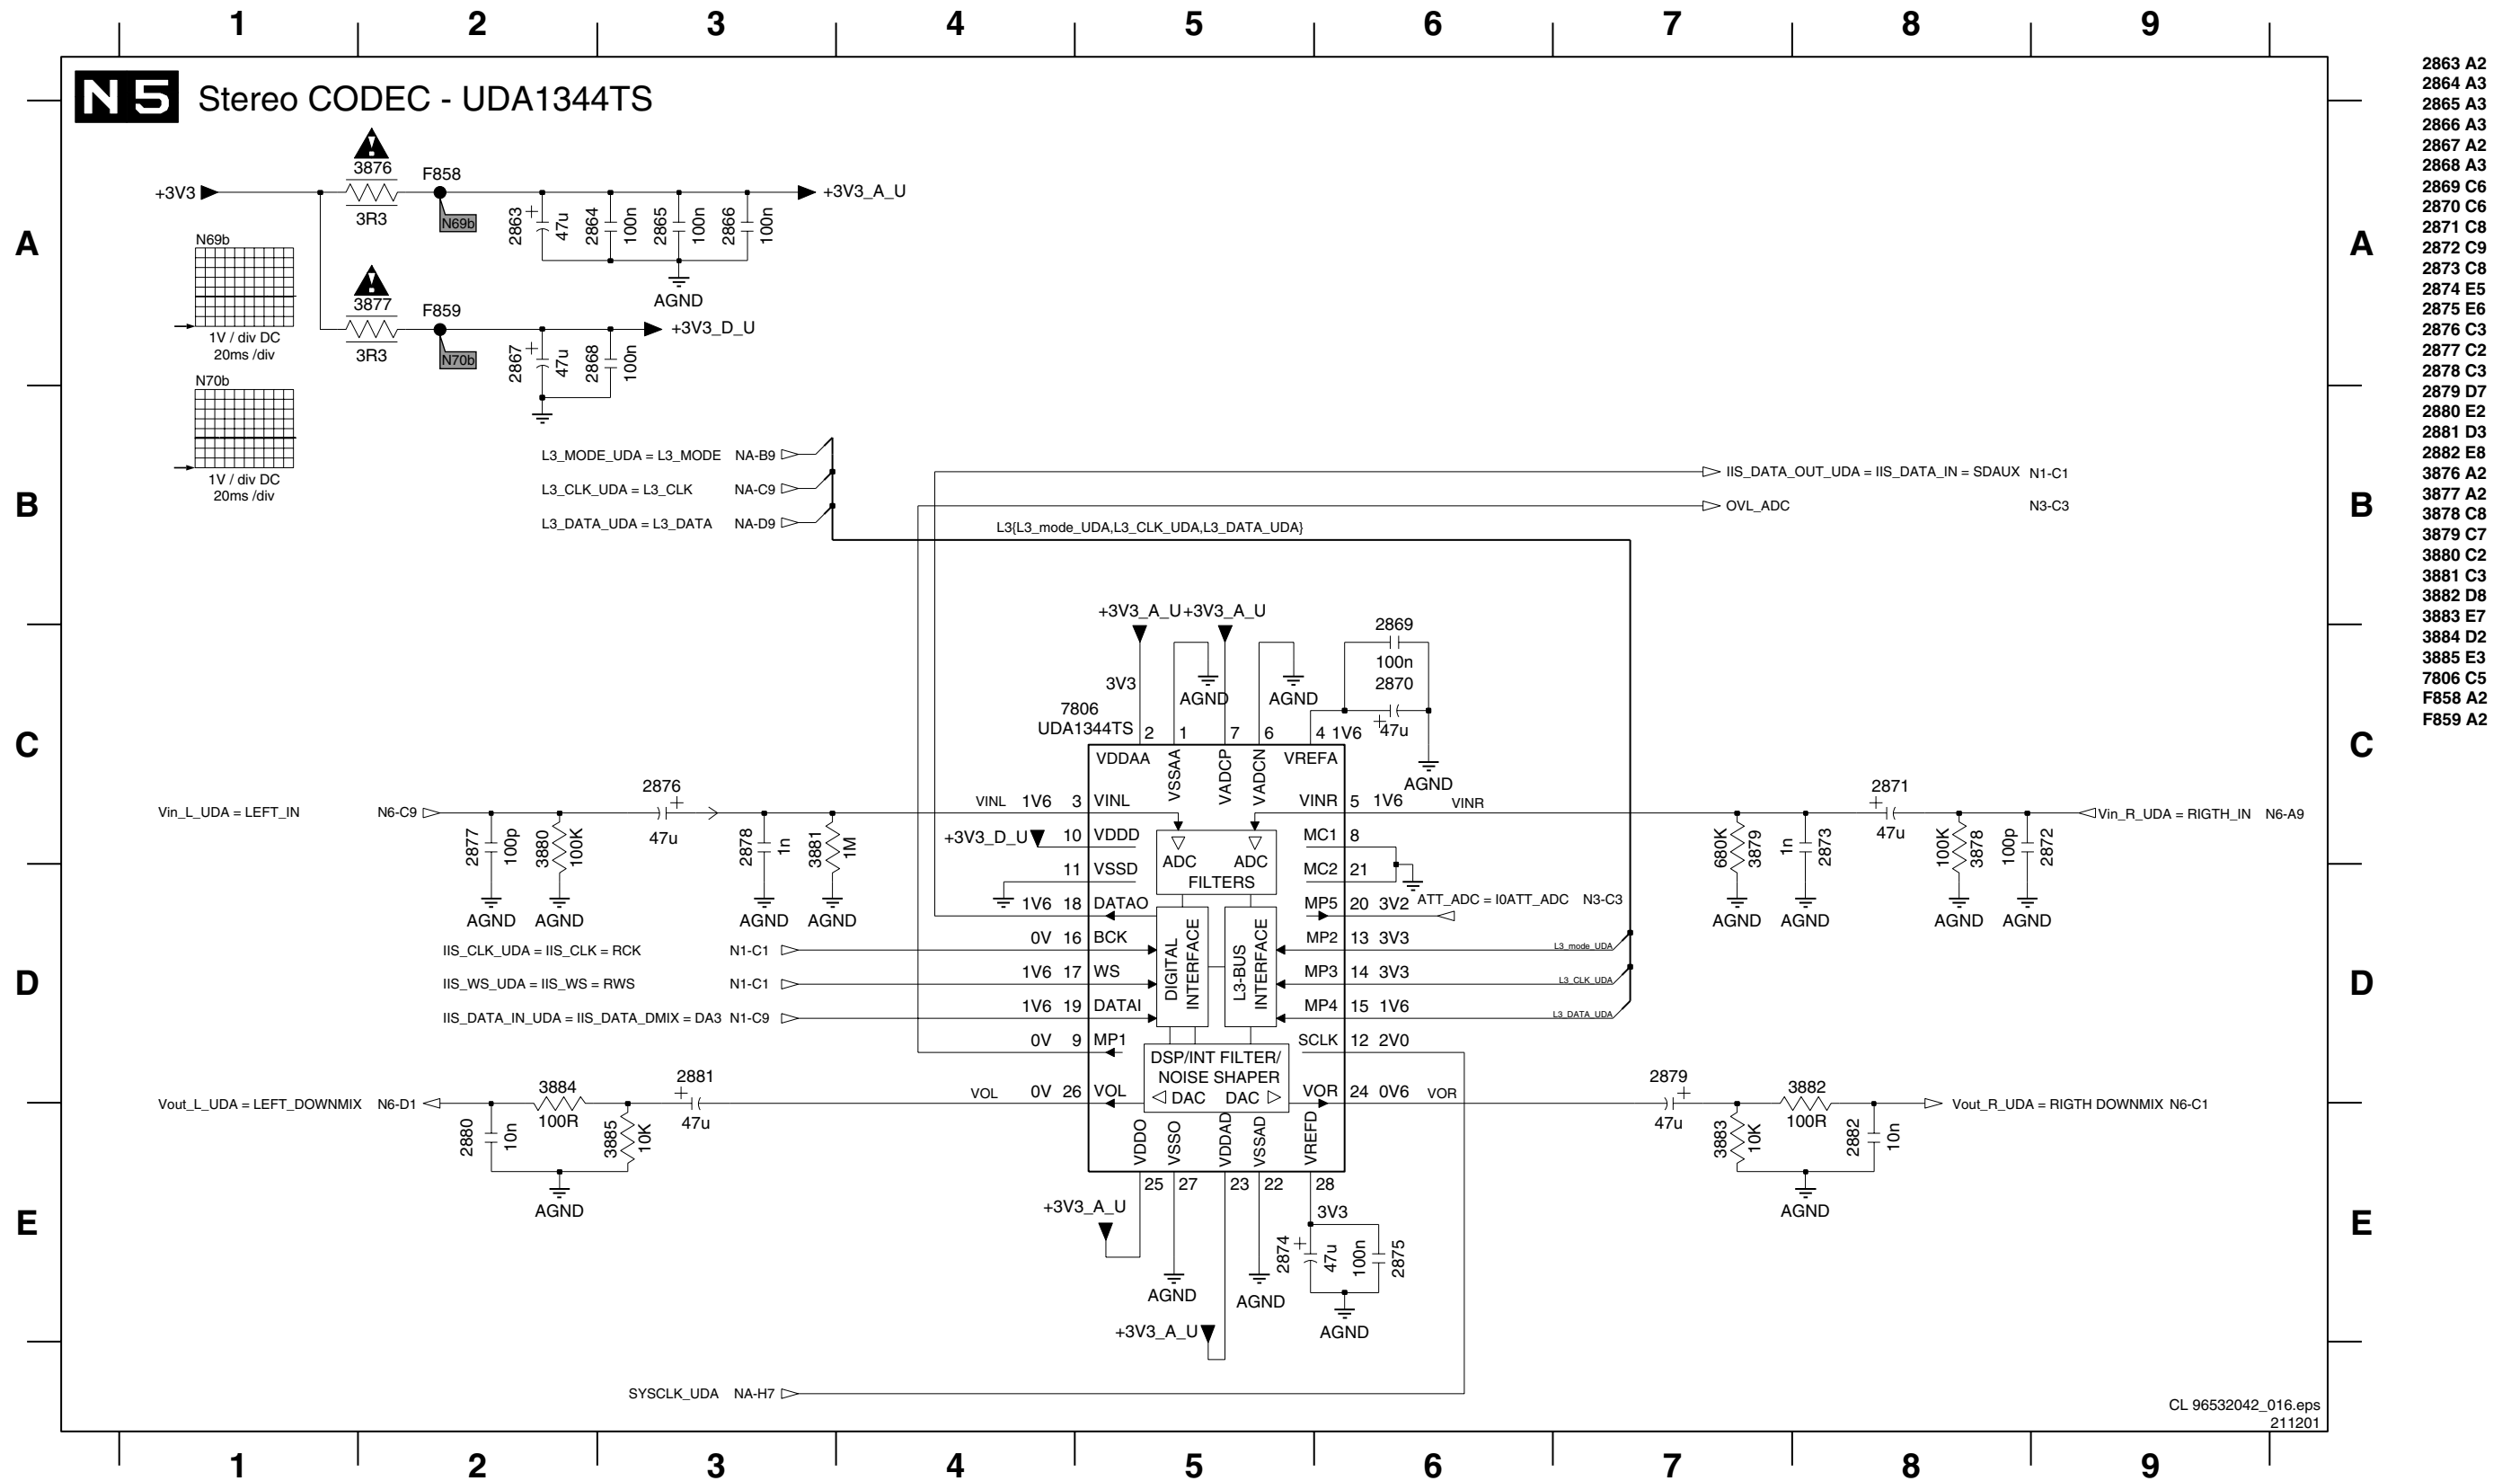

- 2863 A2
- 2864 A3
- 2865 A3
- 2866 A3
- 2867 A2
- 2868 A3
- 2869 C6
- 2870 C6
- 2871 C8
- 2872 C9
- 2873 C8
- 2874 E5
- 2875 E6
- 2876 C3
- 2877 C2
- 2878 C3
- 2879 D7
- 2880 E2
- 2881 D3
- 2882 E8
- 3876 A2
- 3877 A2
- 3878 C8
- 3879 C7
- 3880 C2
- 3881 C3
- 3882 D8
- 3883 E7
- 3884 D2
- 3885 E3
- 7806 C5
- F858 A2
- F859 A2


Multi-Channel Sound Module: Analog Input and Downmix

0373 D9	2505 A8	2512 D6	2524 C1	2537 D4	3501 B6	3506 A9	3511 B8	3516 A9	3521 D2	3526 C1	3533 C7	3538 D4	3549 C6	3579 E5	4500 E8	4520 C3	4529 D8	7512 C9	7713 E8
0381 A6	2506 C8	2520 C2	2525 E1	2538 E4	3502 A7	3507 C8	3512 D6	3517 B9	3522 E1	3527 D1	3534 B6	3539 D3	3570 E6	3598 D4	4501 E8	4522 E3	6525 E8	7520-A C2	
2500 A6	2507 B8	2521 E2	2534 C7	2539 A9	3503 C7	3508 C9	3513 C7	3518 C9	3523 E2	3530 A7	3535 C4	3542 E4	3572 D4	3599 E4	4505 A8	4526 B4	7505-A A8	7520-B D2	
2501 C6	2508 D8	2522 D2	2535 C4	2793 C9	3504 B6	3509 B7	3514 C8	3519 D5	3524 C1	3531 A7	3536 C3	3544 A9	3577 D8	3600 E4	4506 B8	4527 E3	7505-B B8	7535-A C4	
2504 B6	2511 E6	2523 E2	2536 E4	3500 A6	3505 A8	3510 B7	3515 A9	3520 C1	3525 D1	3532 B7	3537 C4	3545 B9	3578 D8	3799 E7	4507 B6	4528 D7	7510 A9	7535-B D4	

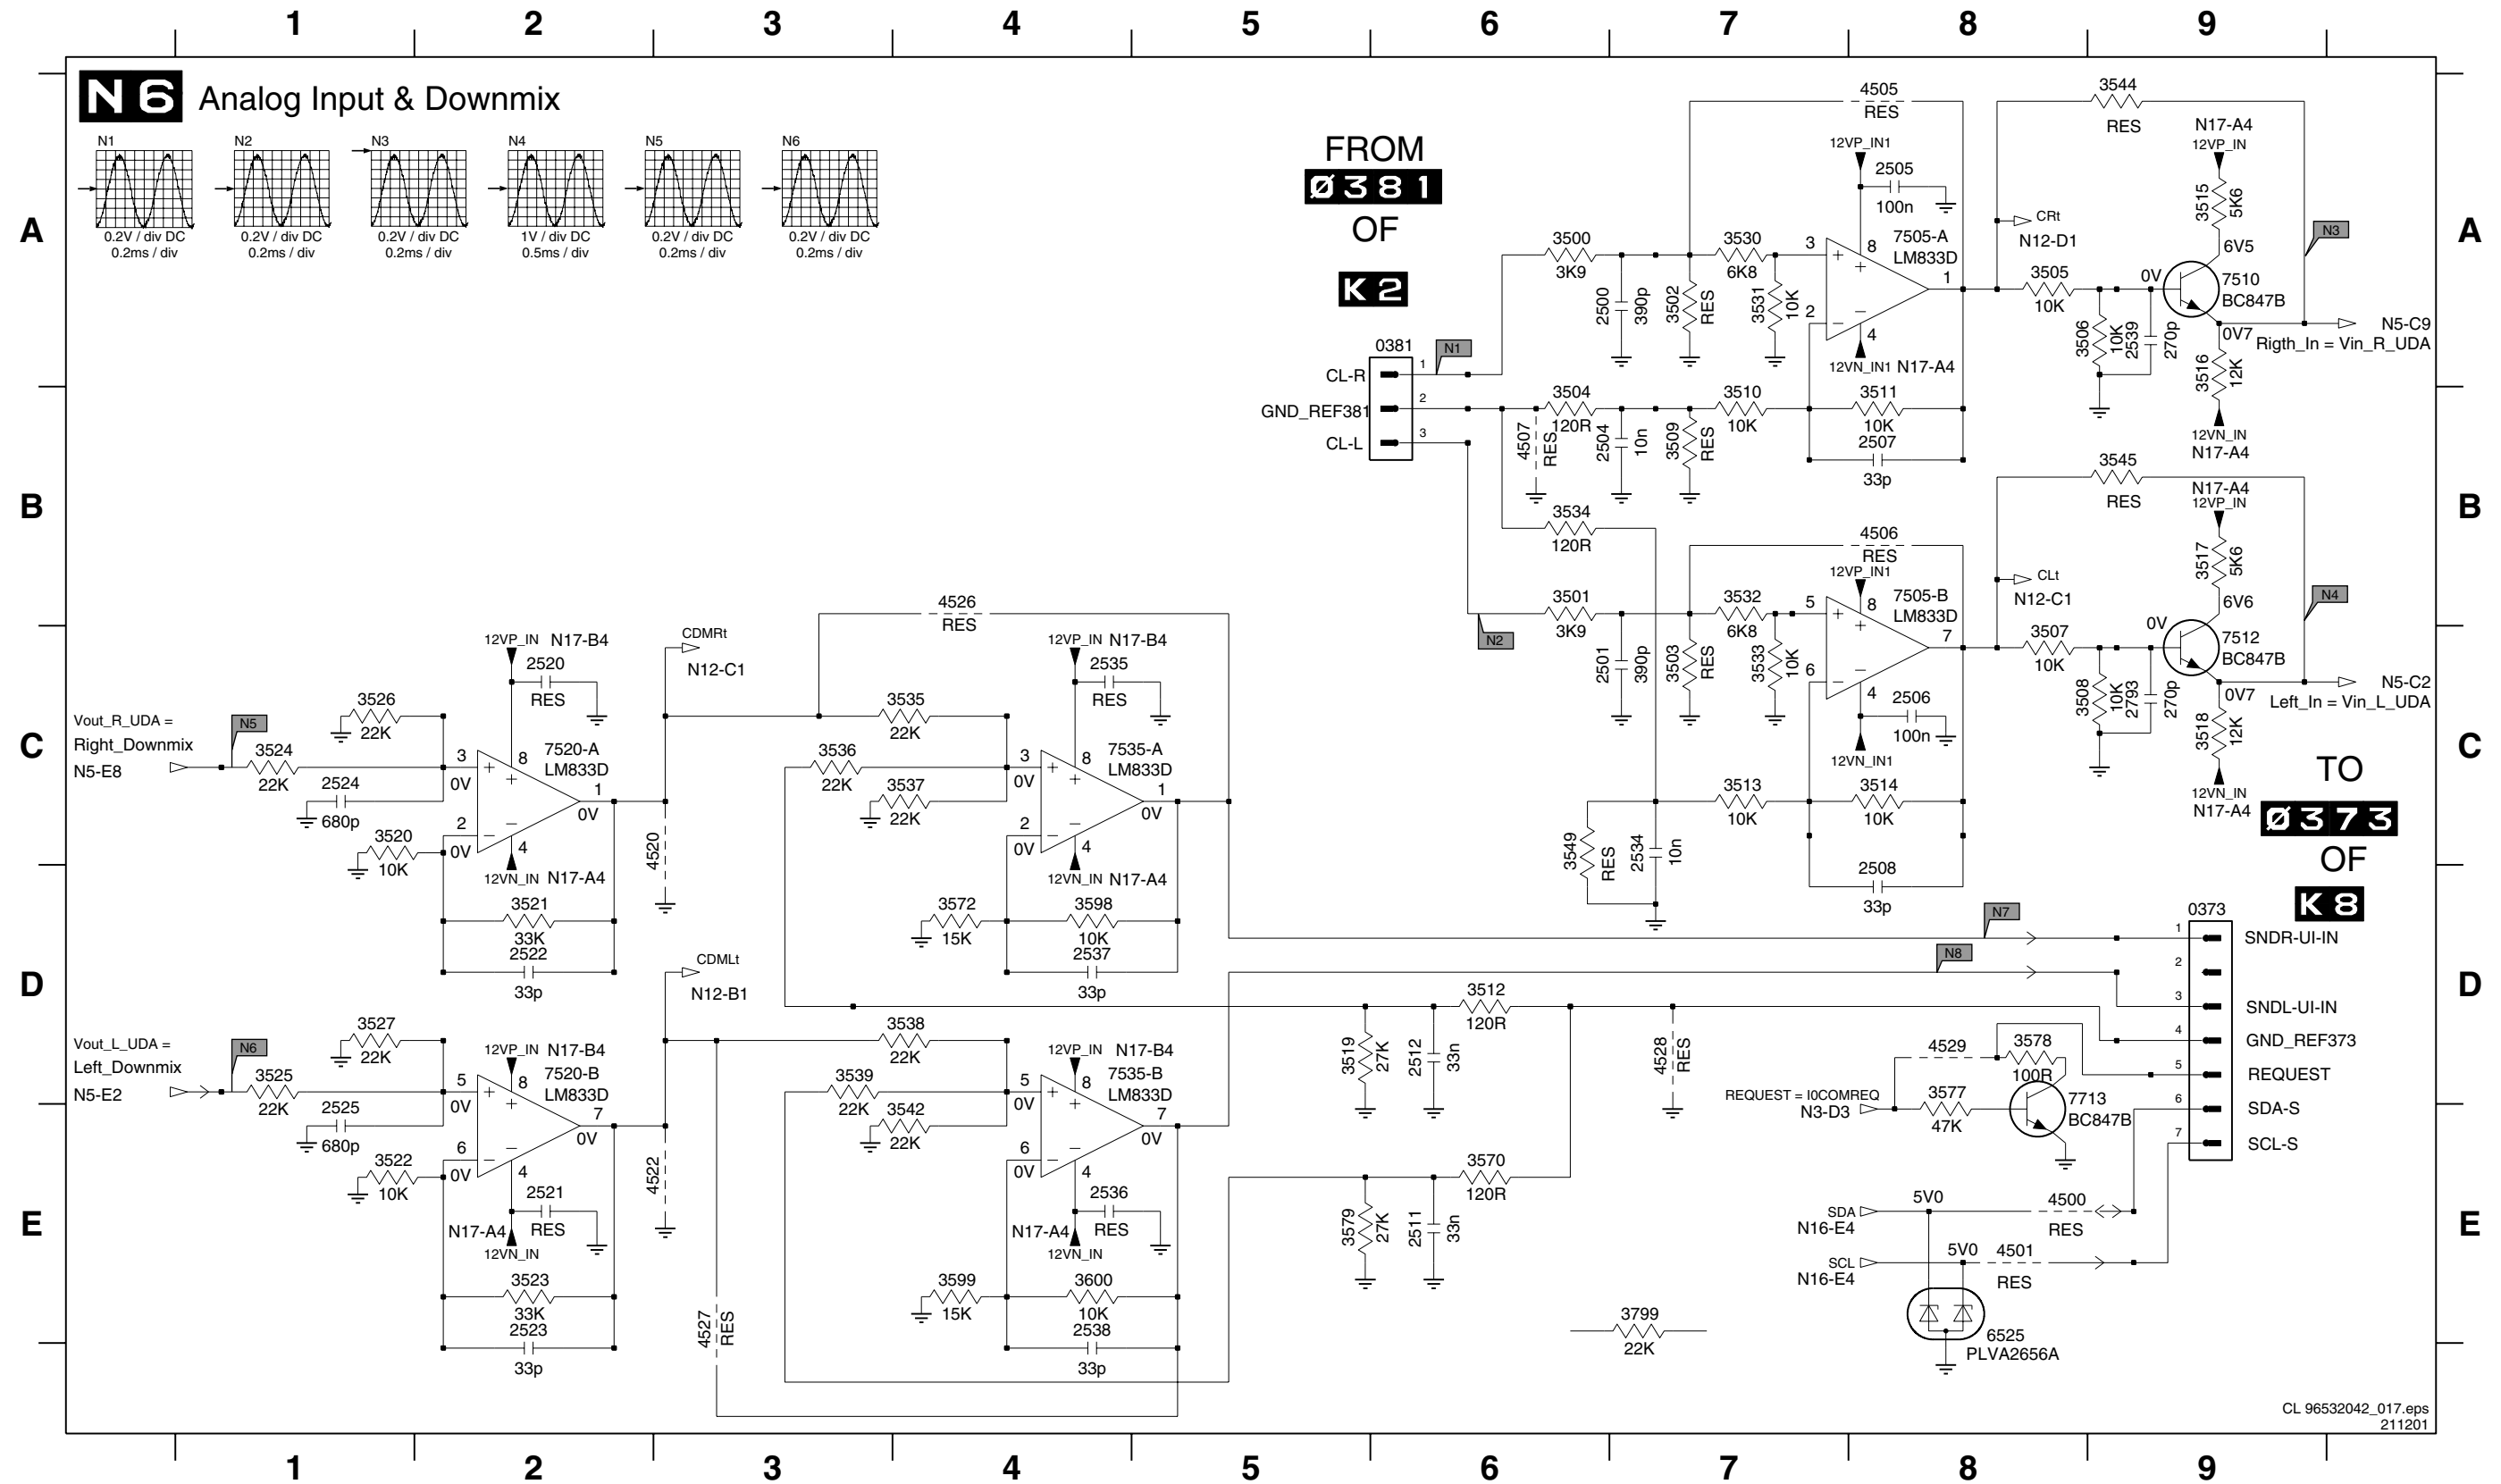


Multi-Channel Sound Module: Analog Output Filters

2548 A1	2557 C2	2578 A5	2587 C5	2610 D6	2667 C8	3540 A8	3548 A8	3552 D2	3558 A5	3567 B6	3574 D6	3592 D9	3728 B9	3792 B2	7541-A A3	7543-B C6
2551 A2	2558 A3	2580 A5	2599 D5	2629 A9	2668 D9	3546 B2	3550 C2	3554 D3	3562 A5	3568 C5	3575 D6	3596 D9	3729 C8	3793 A2	7541-B C3	7544-A A9
2552 C1	2559 D3	2585 B9	2608 A6	2632 D9	2669 D9	3547 B3	3551 D2	3555 A8	3566 B6	3569 C5	3576 A9	3727 B9	3737 C8	3794 A8	7543-A A6	7544-B C9

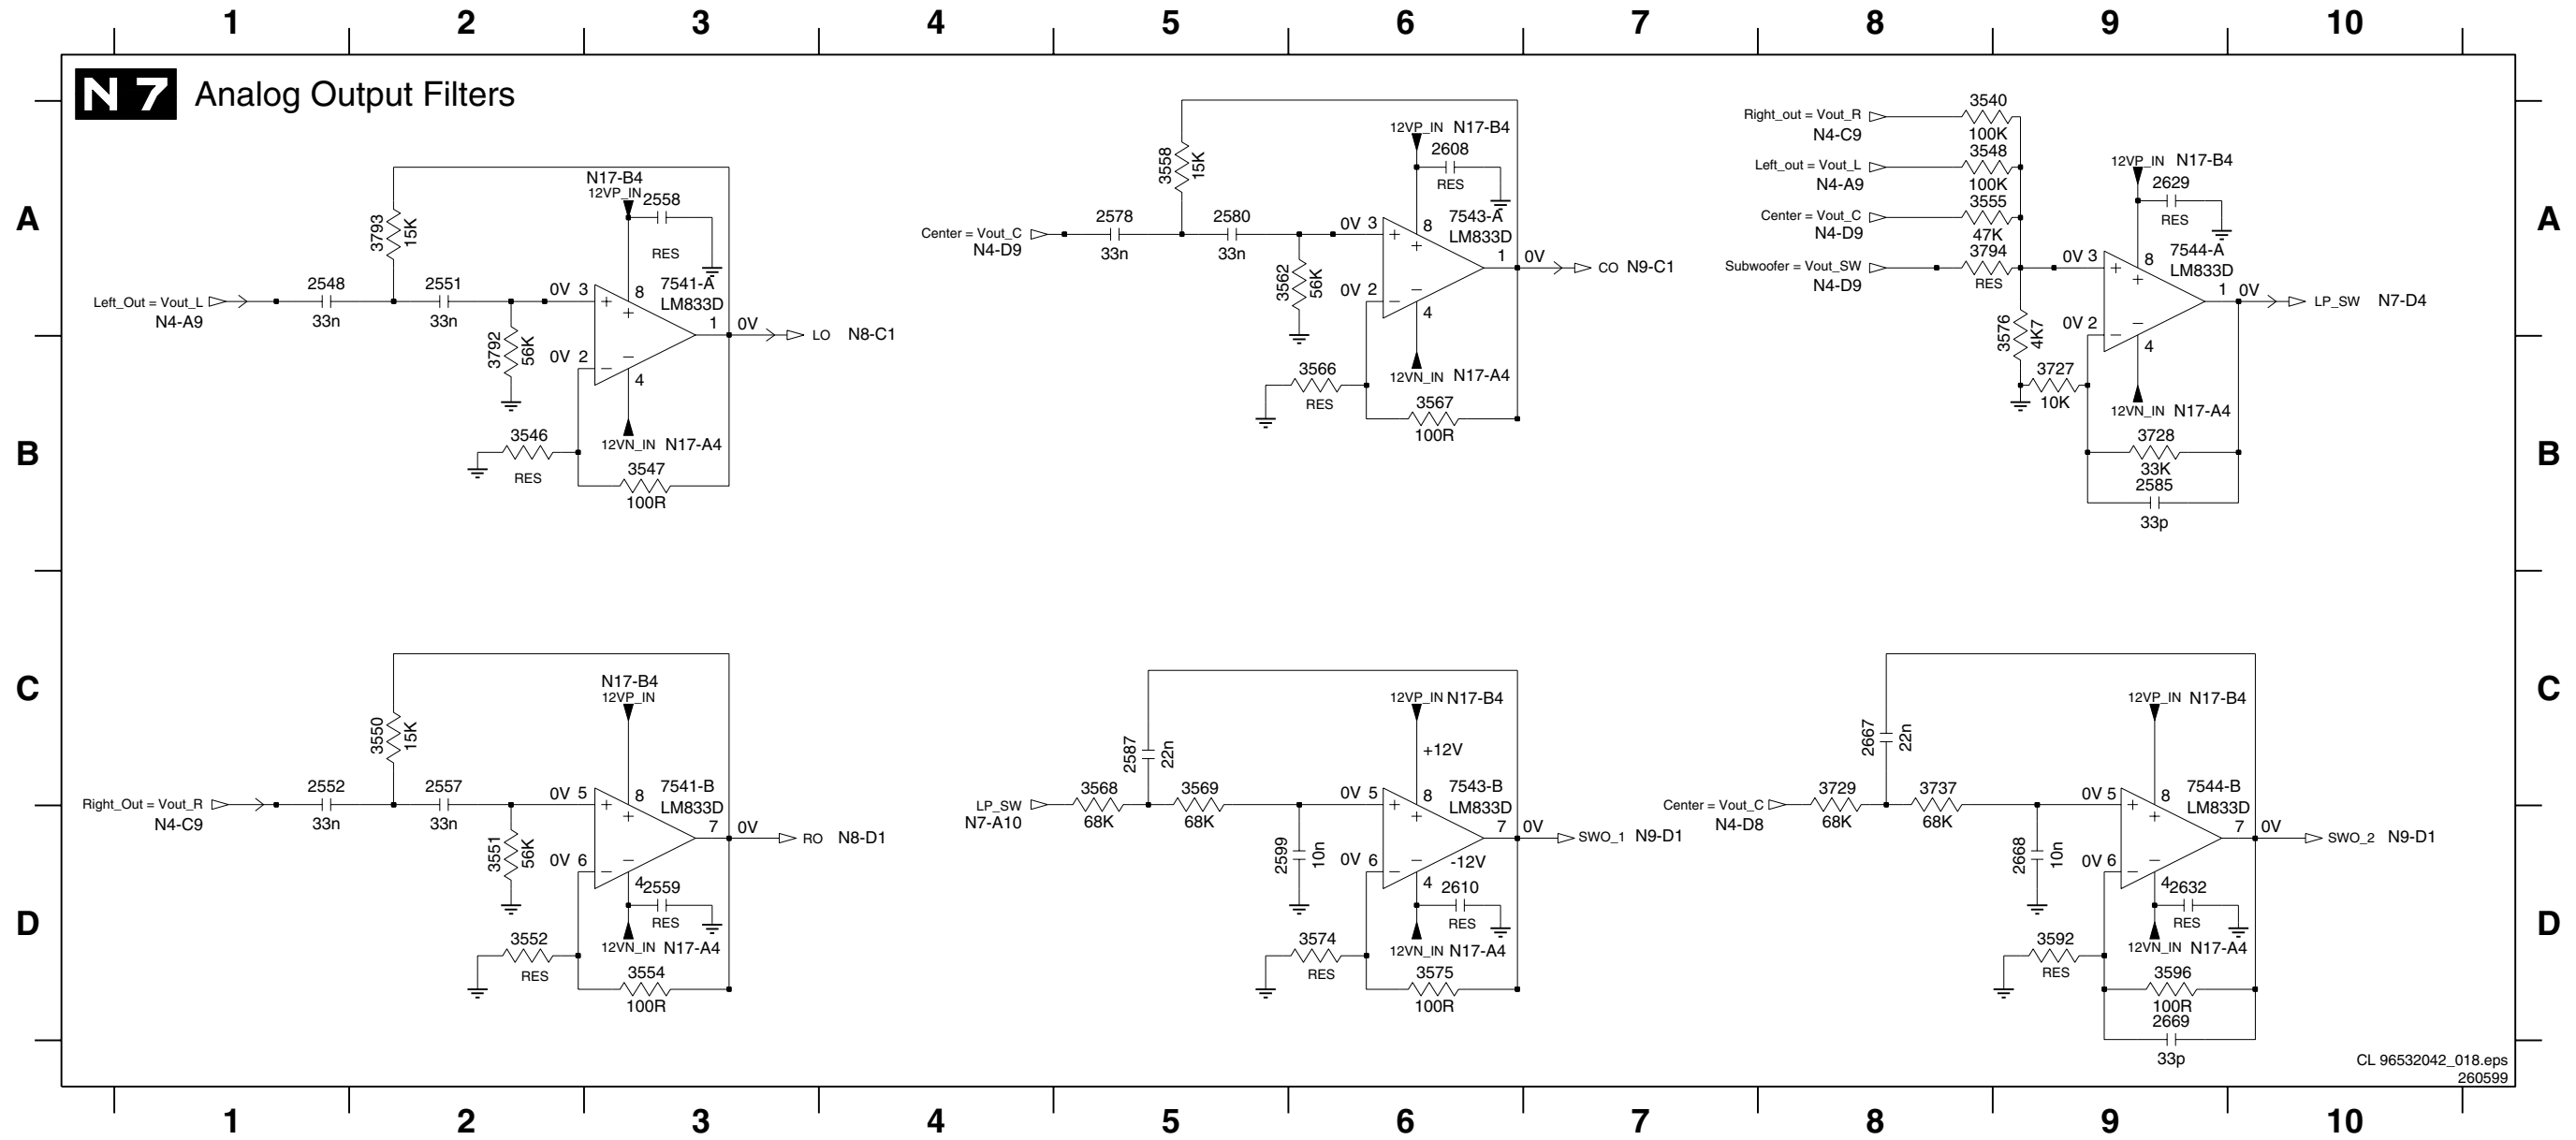


Multi-Channel Sound Module: Sofac Left and Right

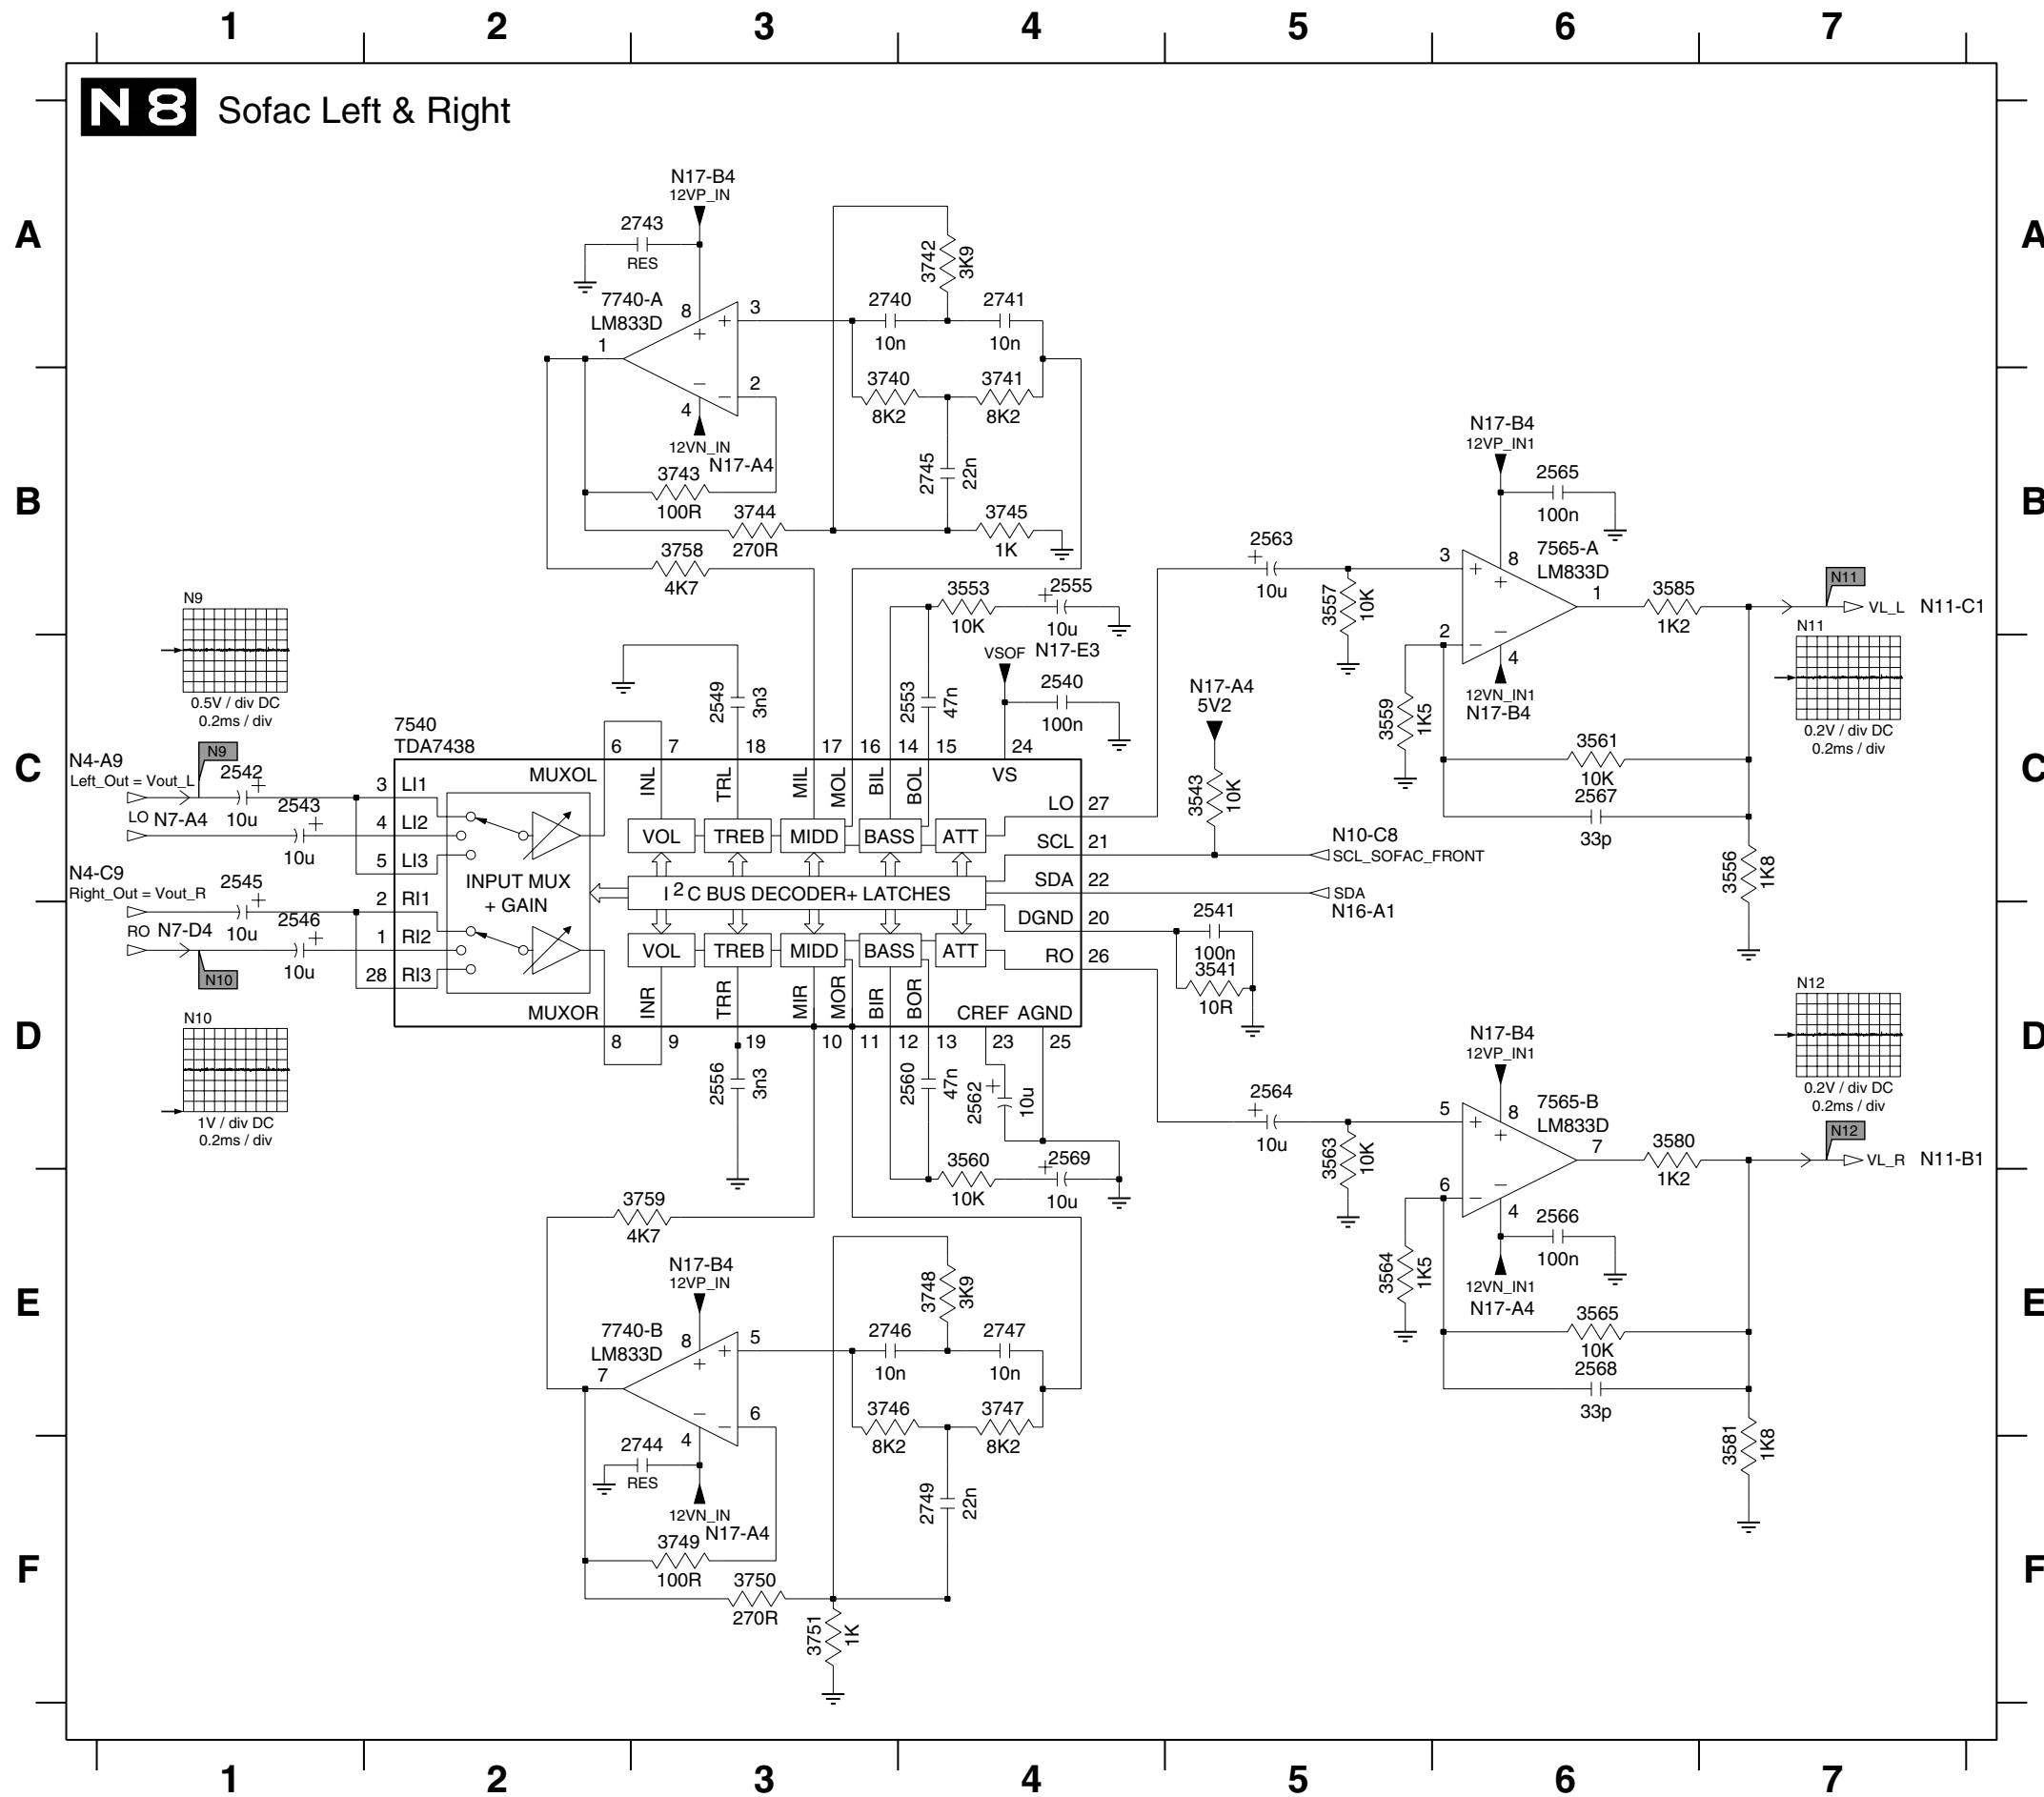

- 2540 C4
- 2541 D5
- 2542 C1
- 2543 C1
- 2545 C1
- 2546 D1
- 2549 C3
- 2553 C4
- 2555 B4
- 2556 D3
- 2560 D4
- 2562 D4
- 2563 B5
- 2564 D5
- 2565 B6
- 2566 E6
- 2567 C6
- 2568 E6
- 2569 D4
- 2740 A3
- 2741 A4
- 2743 A3
- 2744 F3
- 2745 B4
- 2746 E3
- 2747 E4
- 2749 F4
- 3541 D5
- 3543 C5
- 3553 B4
- 3556 C7
- 3559 C5
- 3560 D4
- 3561 C6
- 3563 D5
- 3564 E5
- 3565 E6
- 3580 D6
- 3581 F7
- 3585 B6
- 3740 B3
- 3741 B4
- 3742 A4
- 3743 B3
- 3744 B3
- 3745 B4
- 3746 E3
- 3747 E4
- 3748 E4
- 3749 F3
- 3750 F3
- 3751 F3
- 3758 B3
- 3759 E3
- 7540 C2
- 7565-A B6
- 7565-B D6
- 7740-A A3
- 7740-B E3


Multi-Channel Sound Module: Sofac Center and Subwoofer

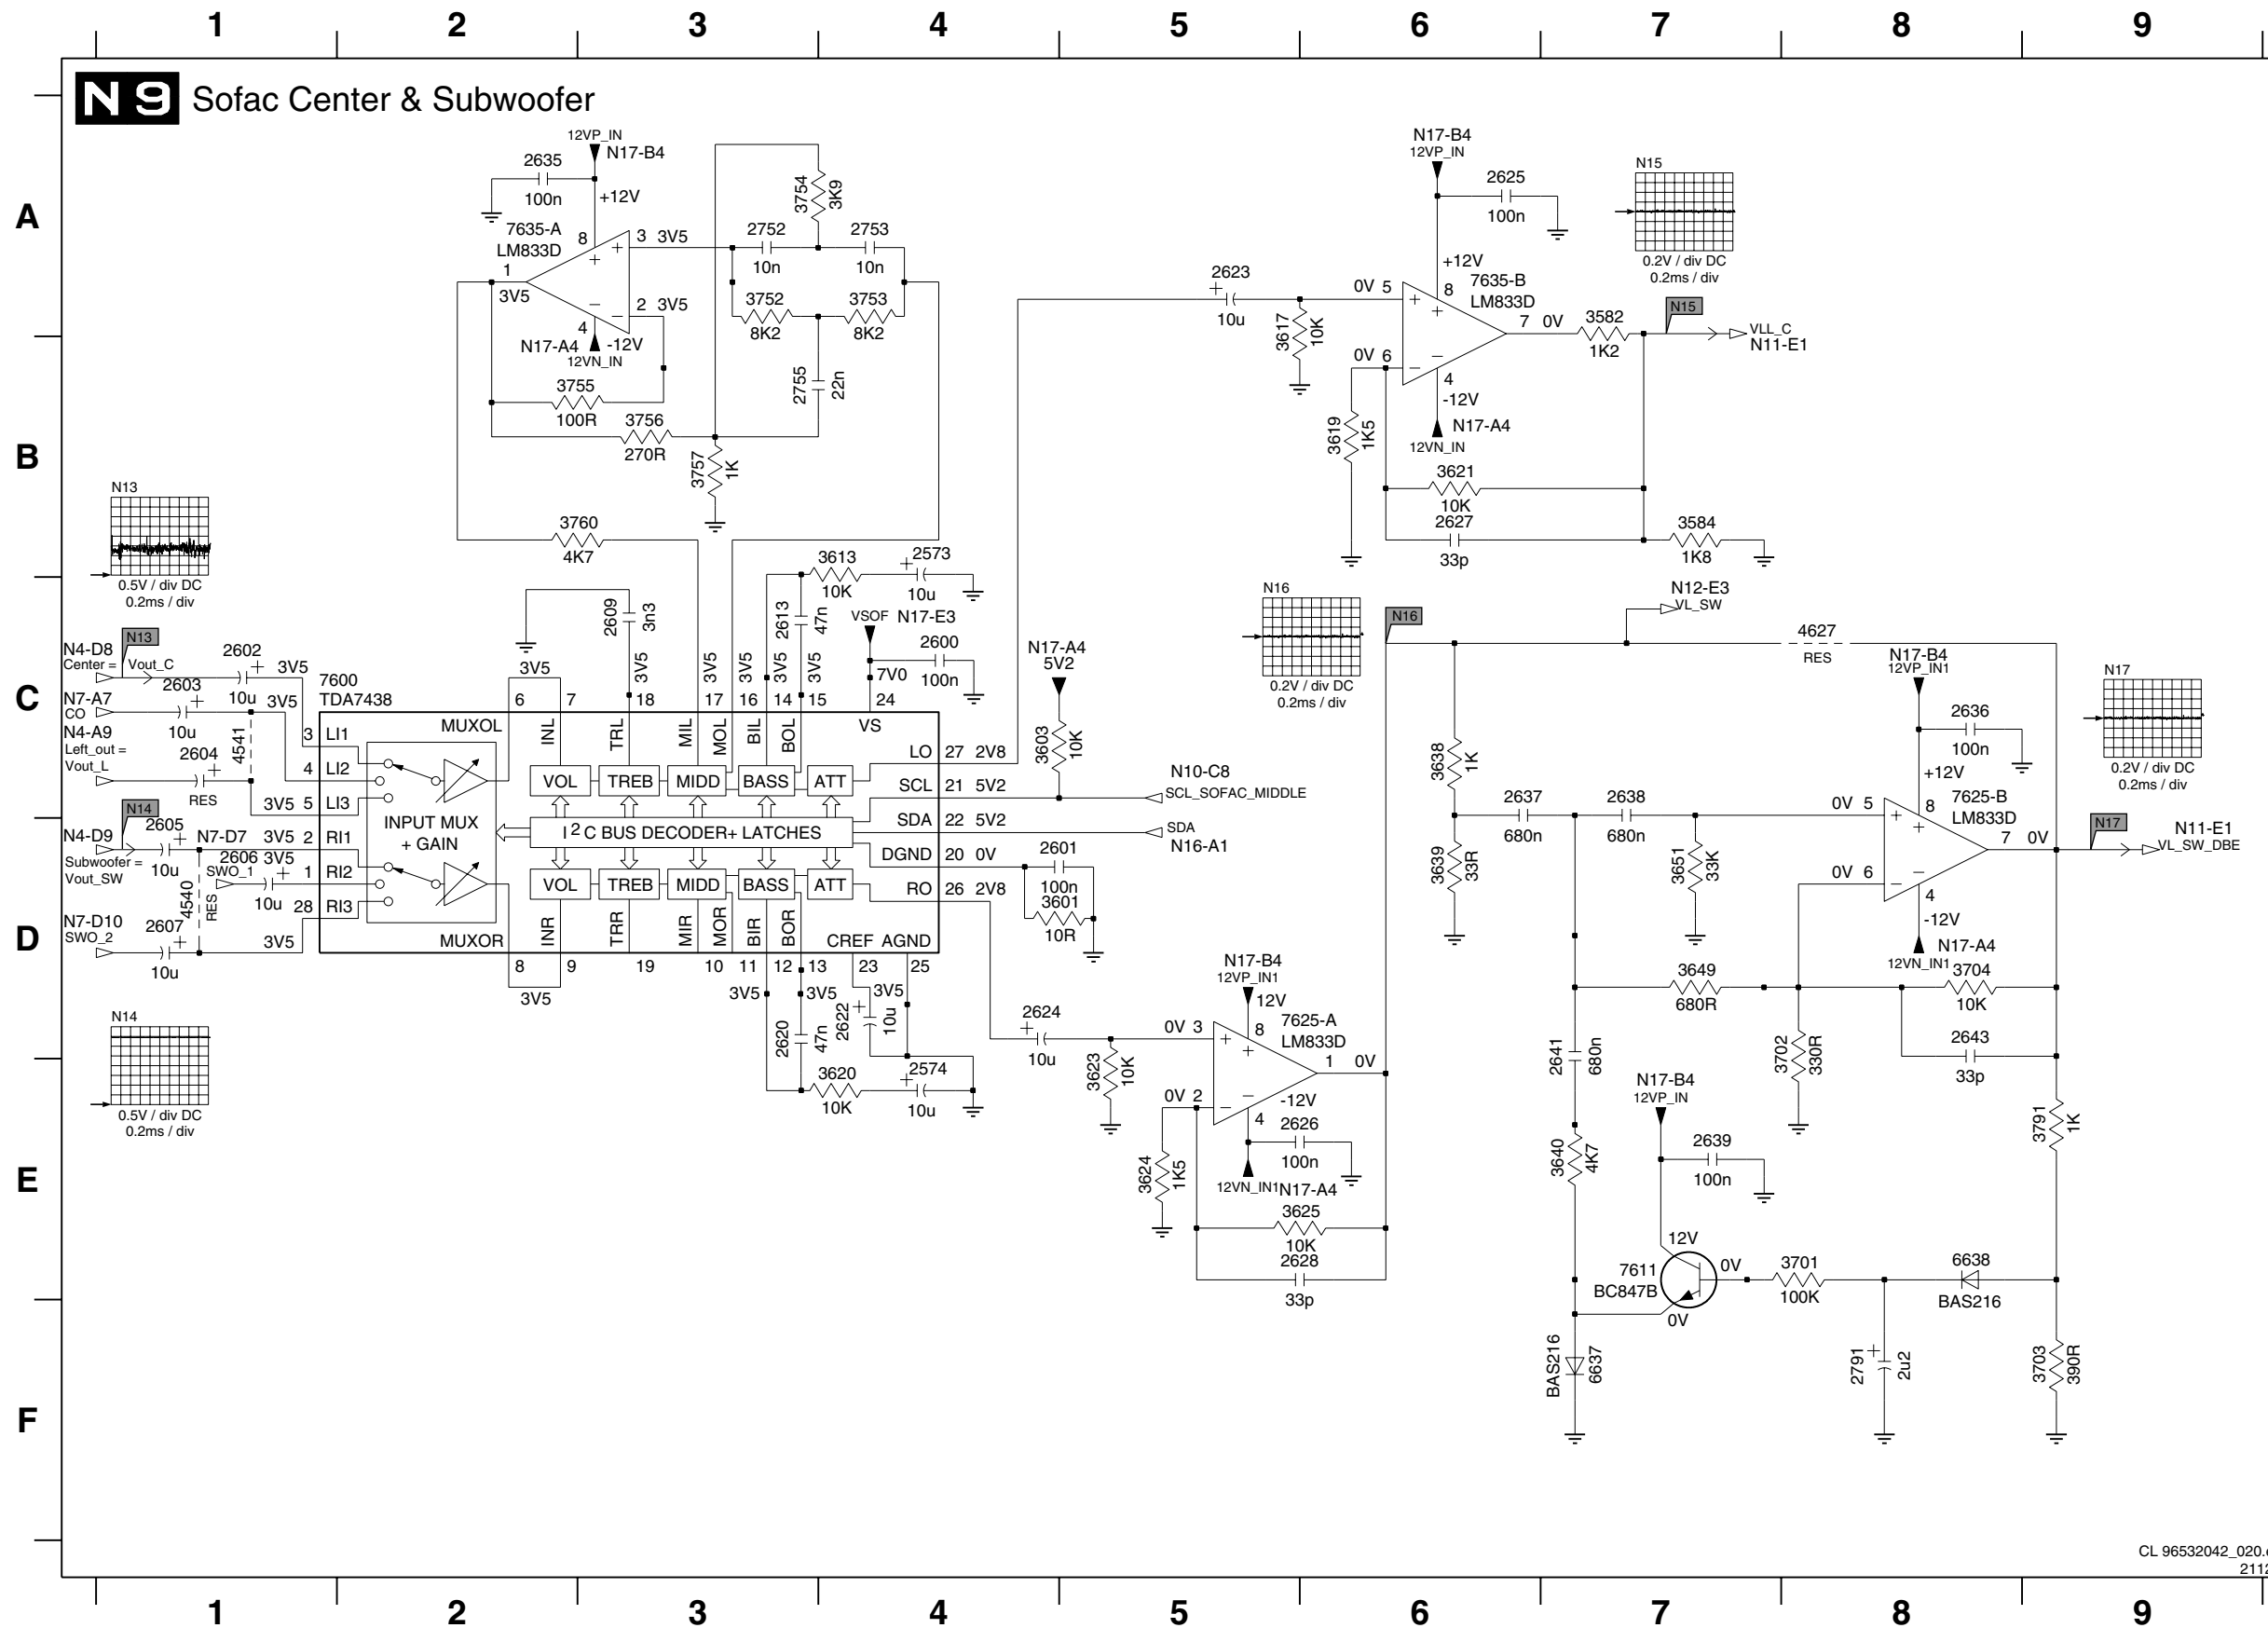

- 2573 B4
- 2574 E4
- 2600 C4
- 2601 D4
- 2602 C1
- 2603 C1
- 2604 C1
- 2605 D1
- 2606 D1
- 2607 D1
- 2609 C3
- 2613 C3
- 2620 D3
- 2622 D4
- 2623 A5
- 2624 D4
- 2625 A6
- 2626 E5
- 2627 B6
- 2628 E5
- 2635 A2
- 2636 C8
- 2637 C6
- 2638 C7
- 2639 E7
- 2641 D7
- 2643 D8
- 2752 A3
- 2753 A4
- 2755 B3
- 2791 F8
- 3582 A7
- 3584 B7
- 3601 D5
- 3603 C4
- 3613 B4
- 3617 A5
- 3619 B6
- 3623 E5
- 3624 E5
- 3625 E6
- 3638 C6
- 3639 D6
- 3640 E7
- 3649 D7
- 3651 D7
- 3701 E8
- 3702 D8
- 3703 F9
- 3704 D8
- 3752 A3
- 3753 A4
- 3754 A3
- 3755 B2
- 3756 B3
- 3757 B3
- 3760 B3
- 3791 E9
- 4540 D1
- 4541 C1
- 4627 C8
- 6637 F7
- 6638 E8
- 7600 C1
- 7611 E7
- 7625-A D5
- 7625-B C8
- 7635-A A2
- 7635-B A6


Multi-Channel Sound Module: Sofac Surround

2570 B4	2572 B1	2576 A4	2579 B3	2586 C3	2592 C4	2594 C5	2596 D6	2598 D6	3571 C5	3583 A4	3589 B6	3591 B6	3594 D6	3671 B9	3795 C10	7595-A A6	7695 C8
2571 B5	2575 B1	2577 C4	2583 B3	2590 C3	2593 A5	2595 A6	2597 B6	2695 B8	3573 B5	3587 A6	3590 C4	3593 C6	3595 D6	3673 B9	7570 B2	7595-B C6	7696 D10


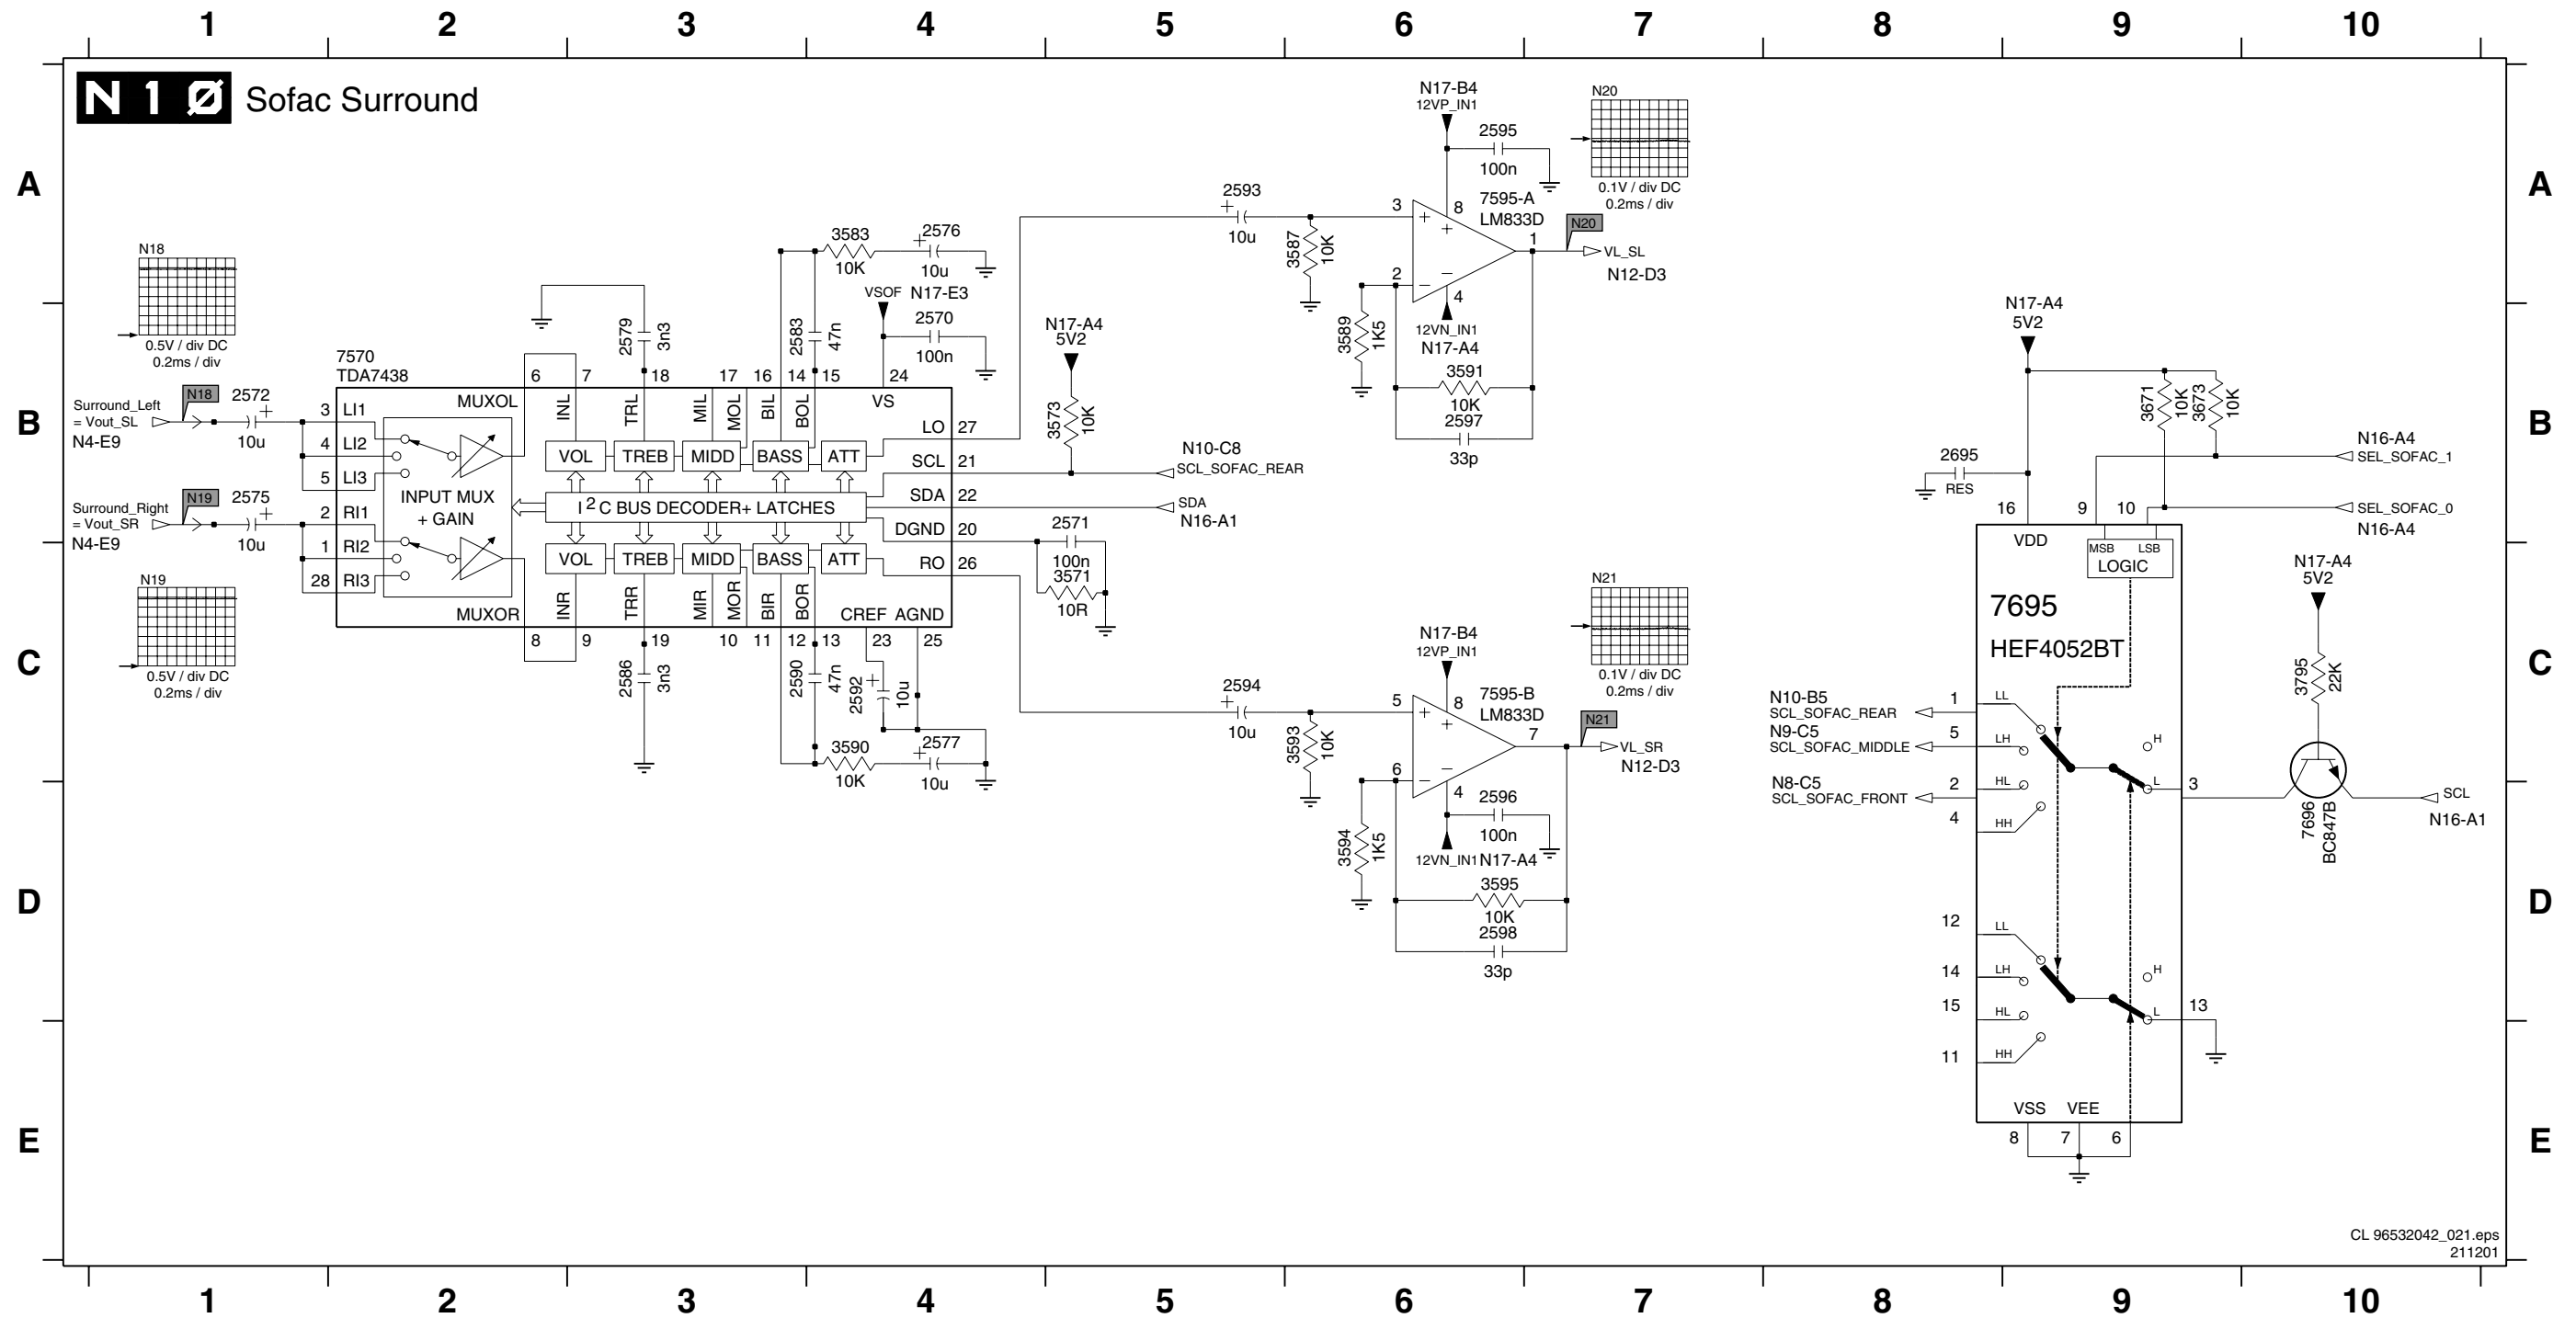


Multi-Channel Sound Module: Audio Out Select and Connector


0328 B4	2514 D2	2517 E2	2631 D2	4633 E3	4701 C3	4704 E2	4716 B3	4719 B4	5701 D3	5704 E2	7630 B1
0329 D4	2515 D2	2518 E2	3610 A3	4634 E2	4702 D2	4705 E2	4717 B4	4720 C4	5702 D2	5705 E2	
2513 C2	2516 E1	2630 A1	3611 A2	4700 B3	4703 E2	4715 B3	4718 B3	5700 C3	5703 E2	7610 A3	

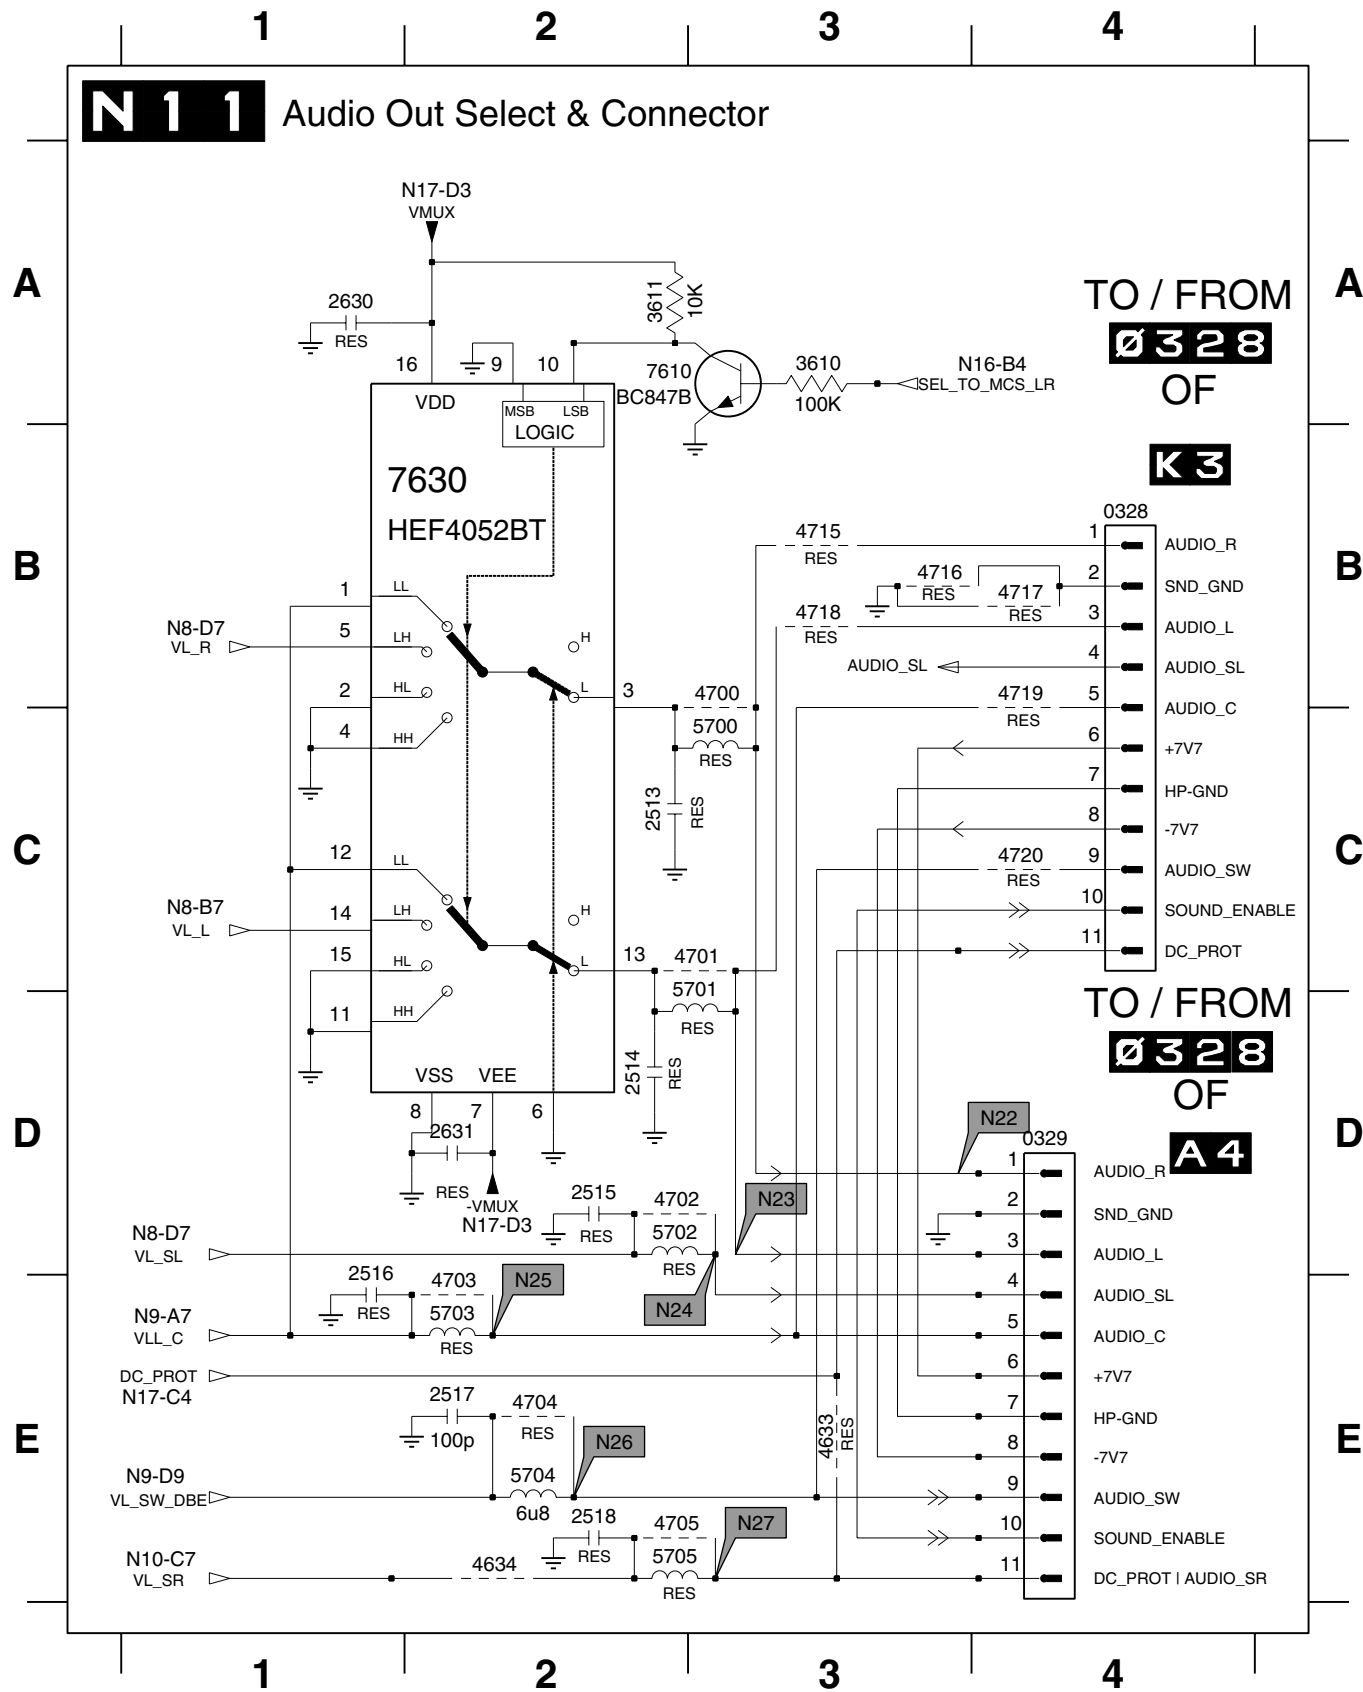

Multi-Channel Sound Module: Optical Input

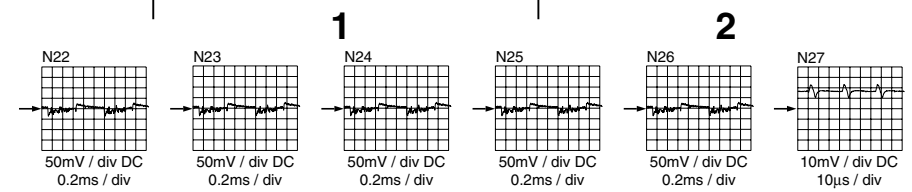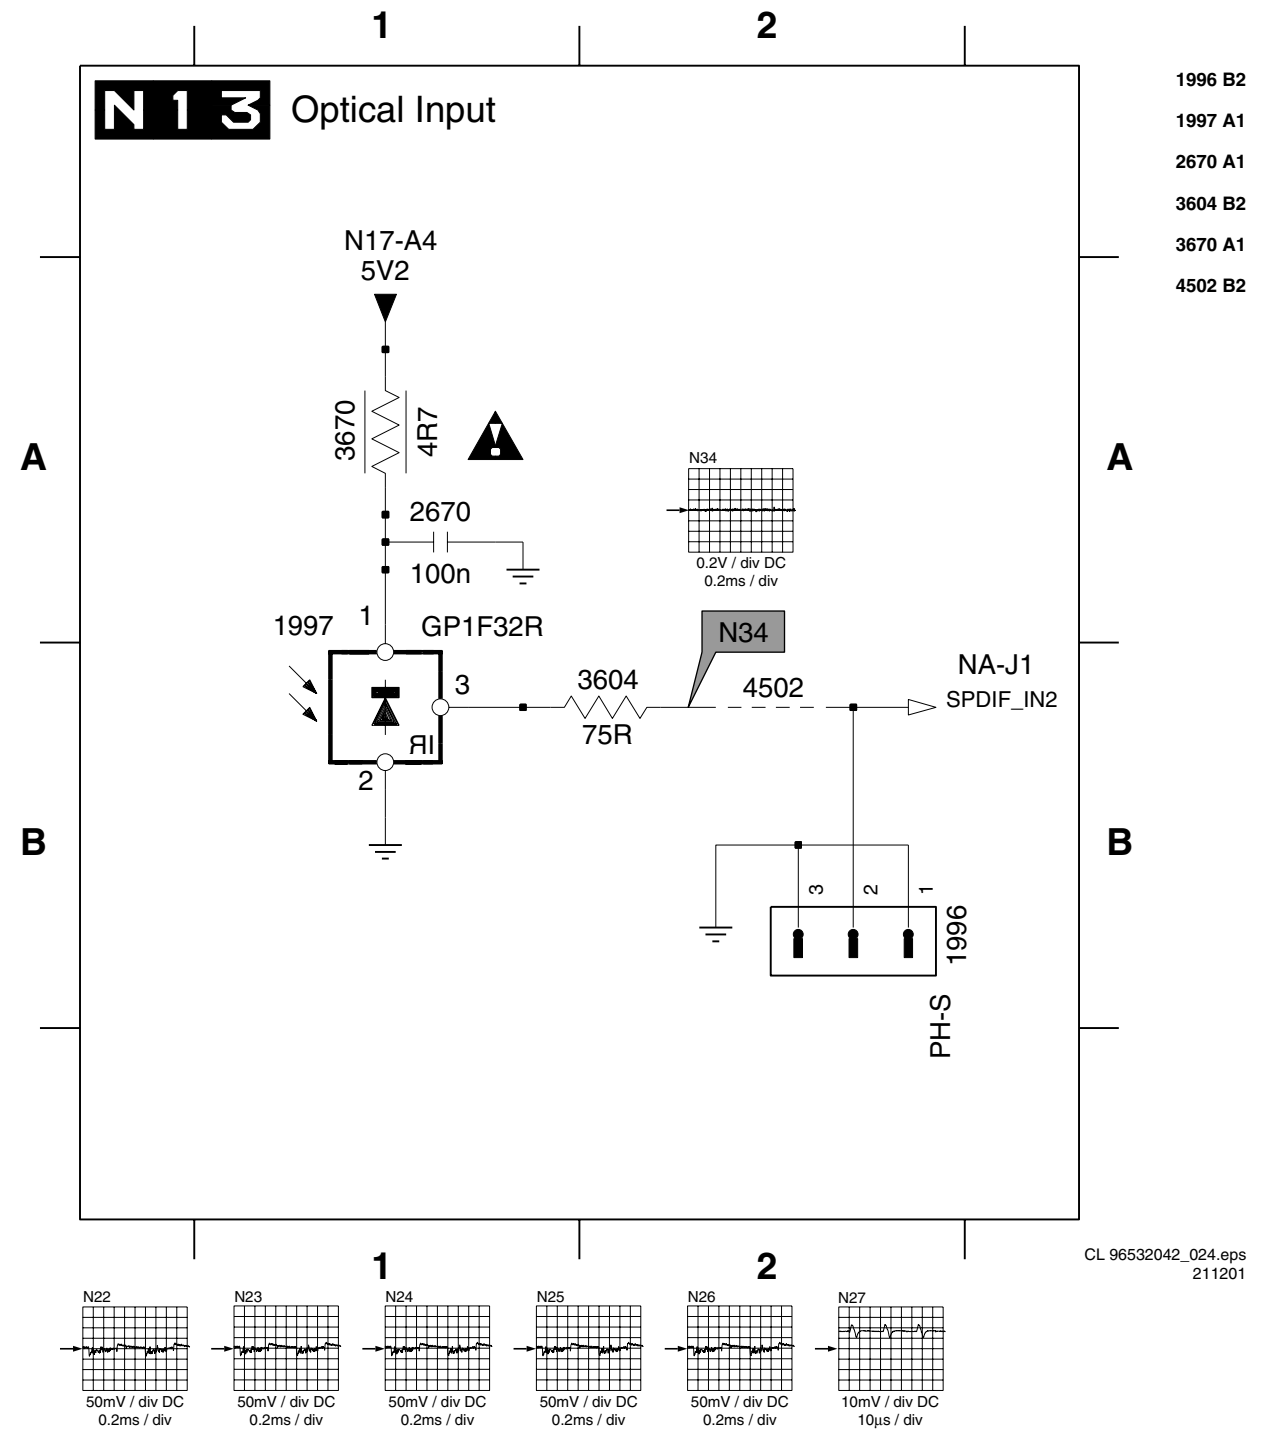


Multi-Channel Sound Module: Cinch Selection

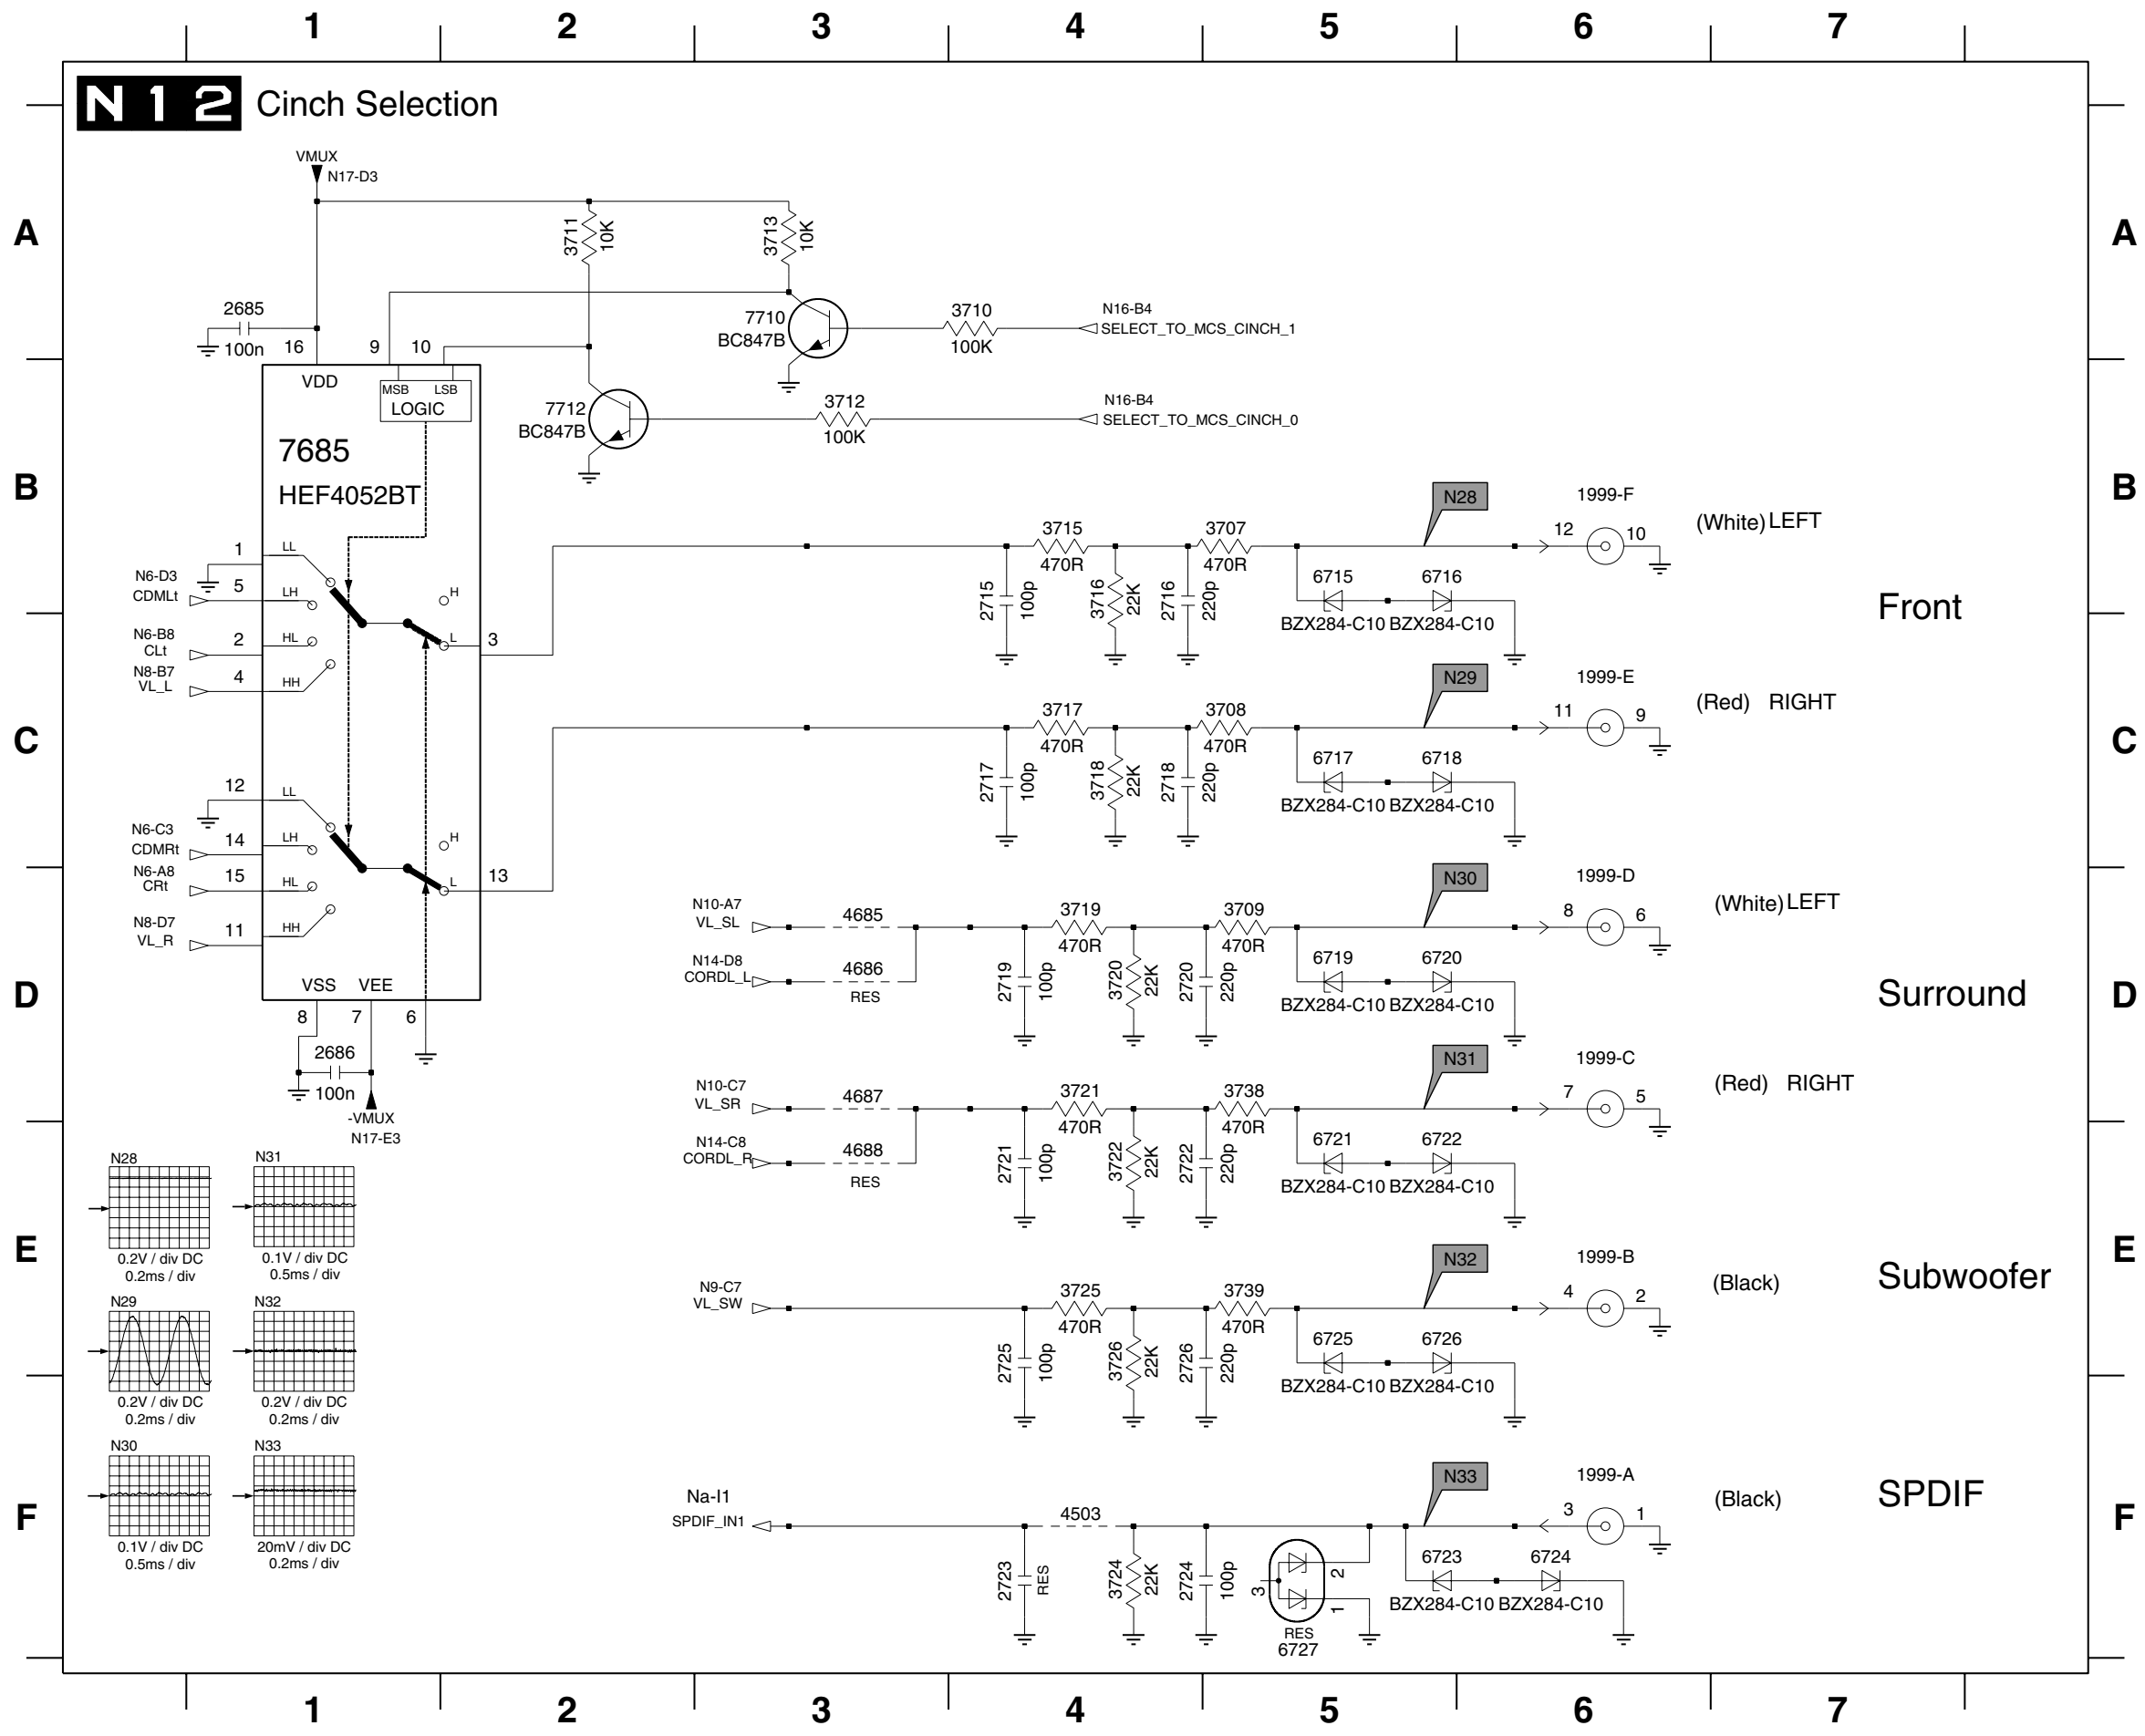

- 1999-A F6
- 1999-B E6
- 1999-C D6
- 1999-D D6
- 1999-E C6
- 1999-F B6
- 2685 A1
- 2686 D1
- 2715 B4
- 2716 B4
- 2717 C4
- 2718 C4
- 2719 D4
- 2720 D4
- 2721 E4
- 2722 E4
- 2723 F4
- 2724 F4
- 2725 E4
- 2726 E4
- 3707 B5
- 3708 C5
- 3709 D5
- 3710 A4
- 3711 A2
- 3712 B3
- 3713 A3
- 3715 B4
- 3716 B4
- 3717 C4
- 3718 C4
- 3719 D4
- 3720 D4
- 3721 D4
- 3722 E4
- 3723 F4
- 3724 F4
- 3725 E4
- 3726 E4
- 3738 D5
- 3739 E5
- 4503 F4
- 4685 D3
- 4686 D3
- 4687 D3
- 4688 E3
- 6715 B5
- 6716 B5
- 6717 C5
- 6718 C5
- 6719 D5
- 6720 D5
- 6721 E5
- 6722 E5
- 6723 F5
- 6724 F6
- 6725 E5
- 6726 E5
- 6727 F5
- 7685 B1
- 7710 A3
- 7712 B2


Multi-Channel Sound Module: Wireless Selection

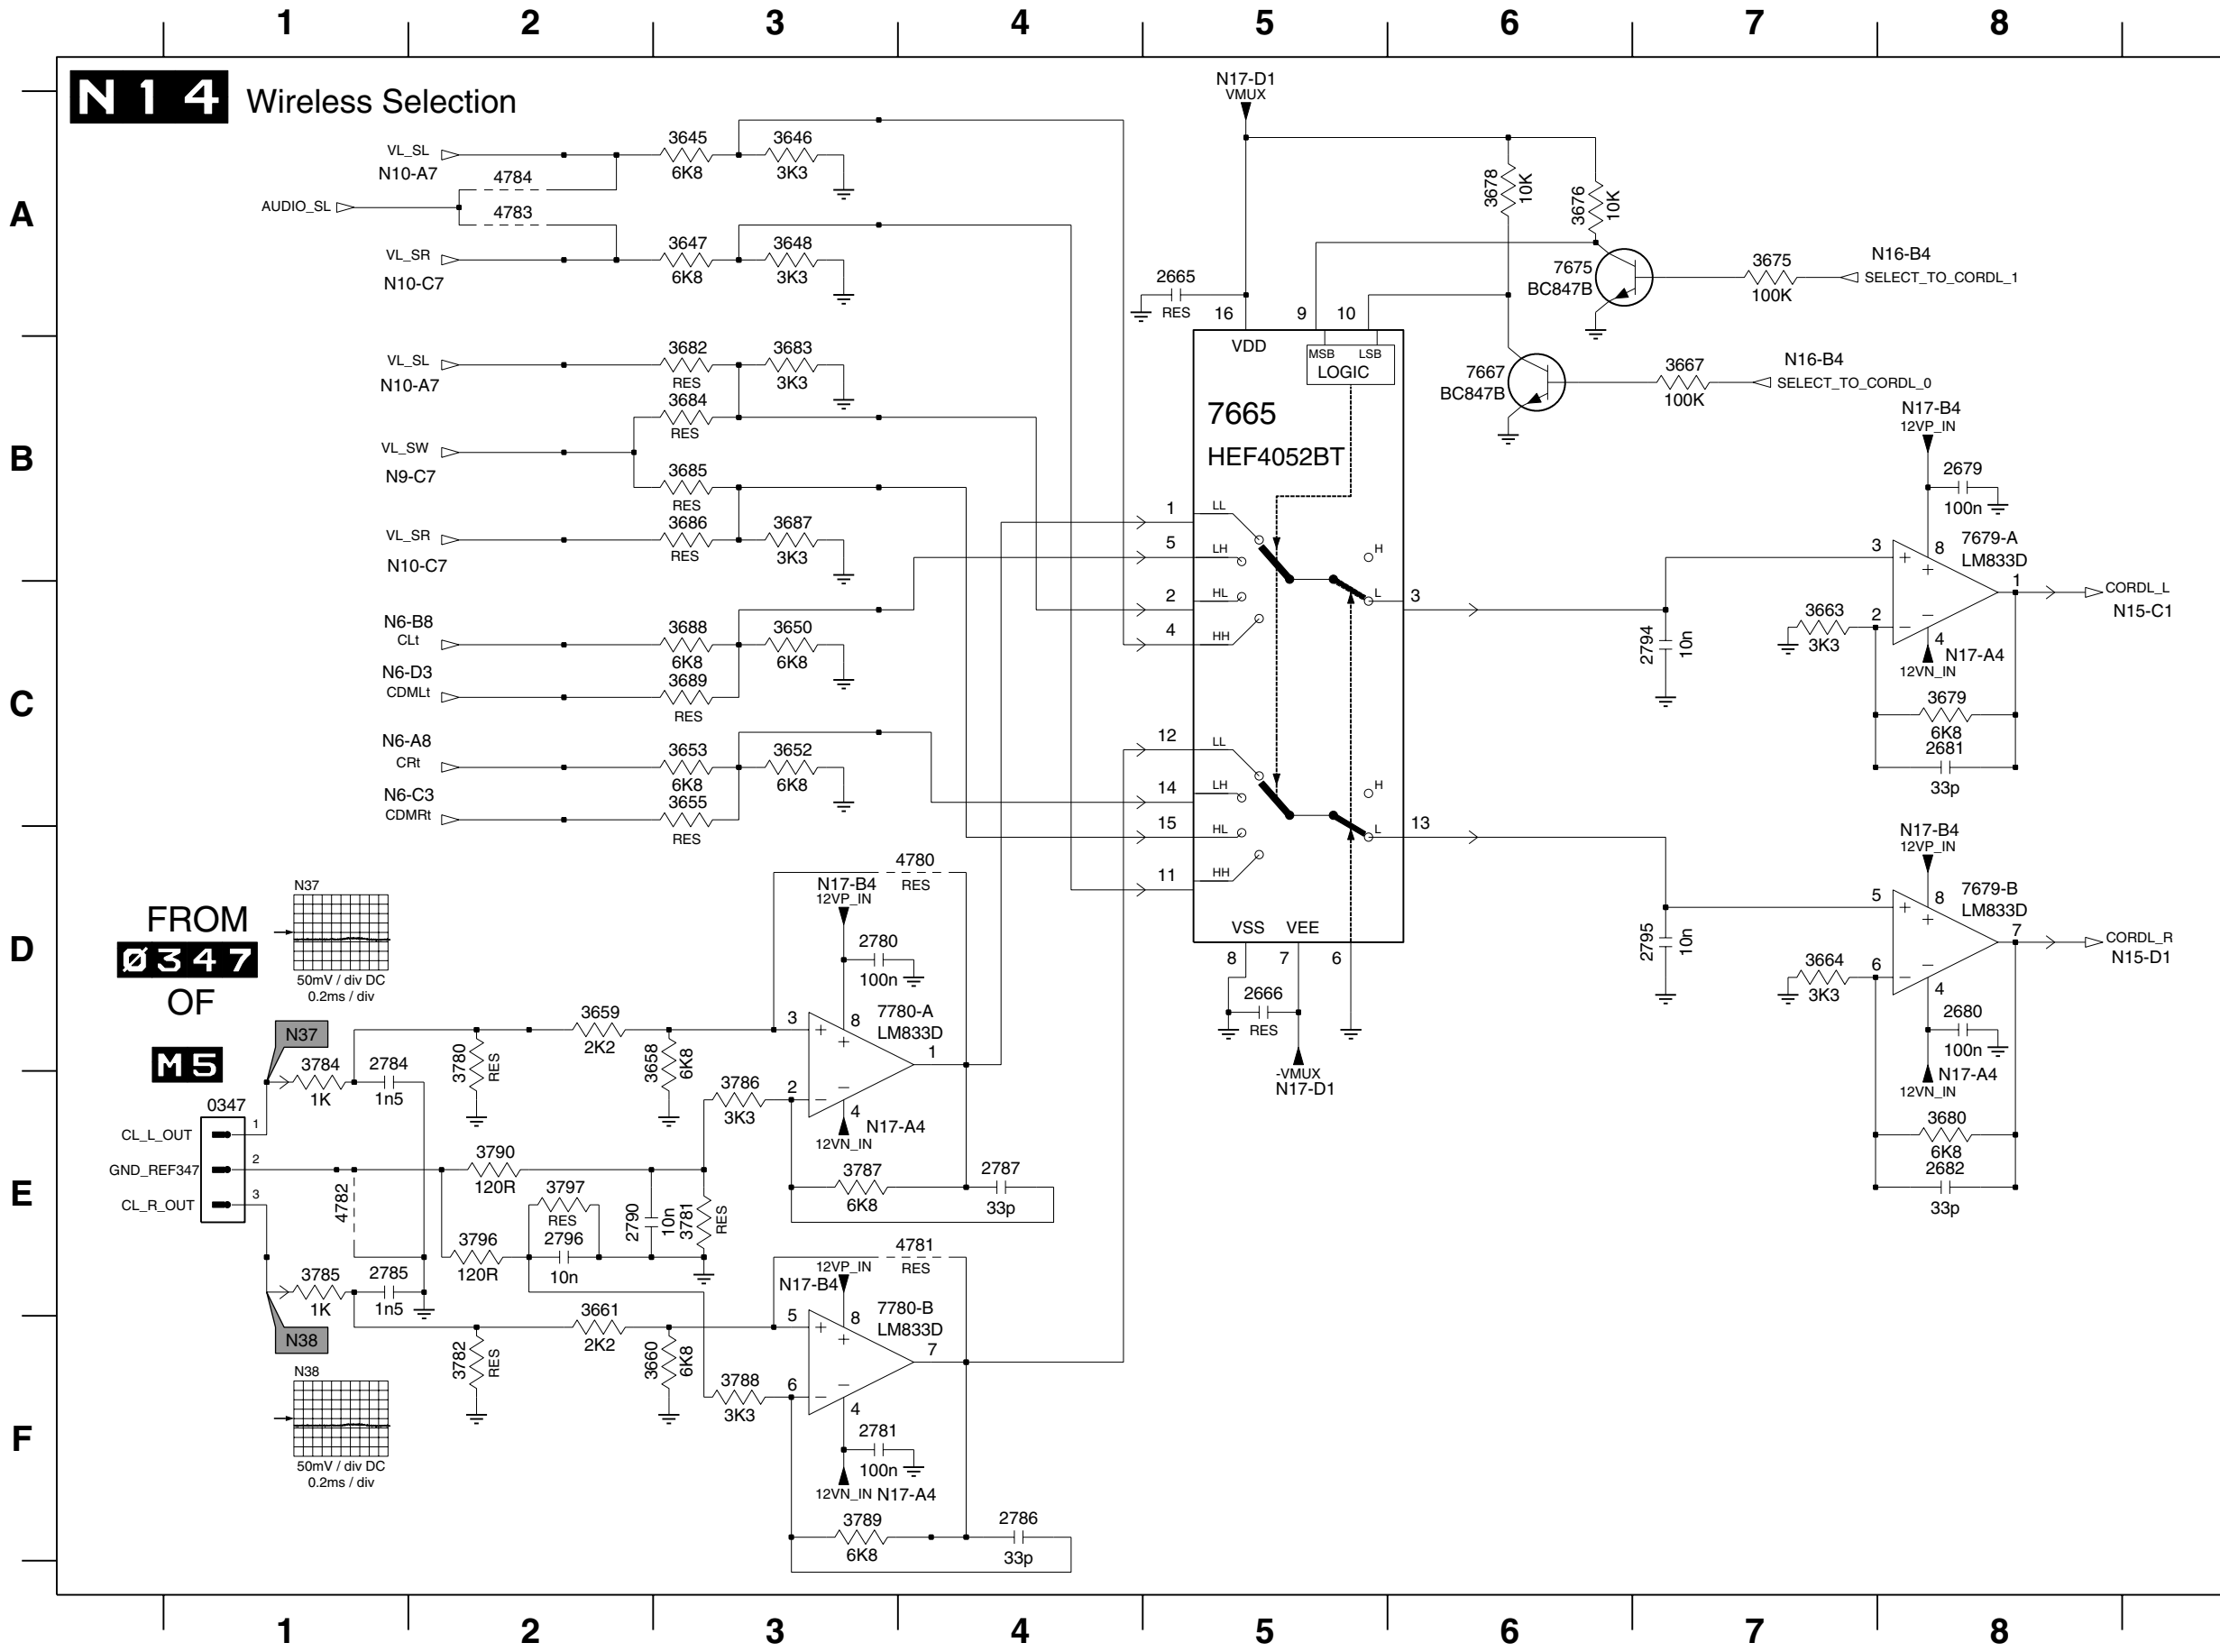

- 0347 E1
- 2665 A5
- 2666 D5
- 2679 B8
- 2680 D8
- 2681 C8
- 2682 E8
- 2780 D3
- 2781 F3
- 2784 D1
- 2785 E1
- 2786 F4
- 2787 E4
- 2790 E2
- 2794 C7
- 2795 D7
- 2796 E2
- 3645 A3
- 3646 A3
- 3647 A3
- 3648 A3
- 3650 C3
- 3652 C3
- 3653 C3
- 3655 C3
- 3658 D3
- 3659 D2
- 3660 F3
- 3661 E2
- 3663 C7
- 3664 D7
- 3667 B7
- 3675 A7
- 3676 A6
- 3678 A6
- 3679 C8
- 3680 E8
- 3682 B3
- 3683 B3
- 3684 B3
- 3685 B3
- 3686 B3
- 3687 B3
- 3688 C3
- 3689 C3
- 3780 D2
- 3781 E3
- 3782 F2
- 3784 D1
- 3785 E1
- 3786 E3
- 3787 E3
- 3788 F3
- 3789 F3
- 3790 E2
- 3796 E2
- 3797 E2
- 4780 D4
- 4781 E4
- 4782 E1
- 4783 A2
- 4784 A2
- 7665 B5
- 7667 B6
- 7675 A6
- 7679-A B8
- 7679-B D8
- 7780-A D3
- 7780-B E3

Multi-Channel Sound Module: Wireless Connector


1998 C3 2731 C2 2733 D2 2735 B2 3731 C1 3733 D1 3735 B2 6731 C3 6733 D3 6735 A3
 2730 C1 2732 D1 2734 A2 3730 C1 3732 D1 3734 A2 6730 C2 6732 D2 6734 A3 6736 B2

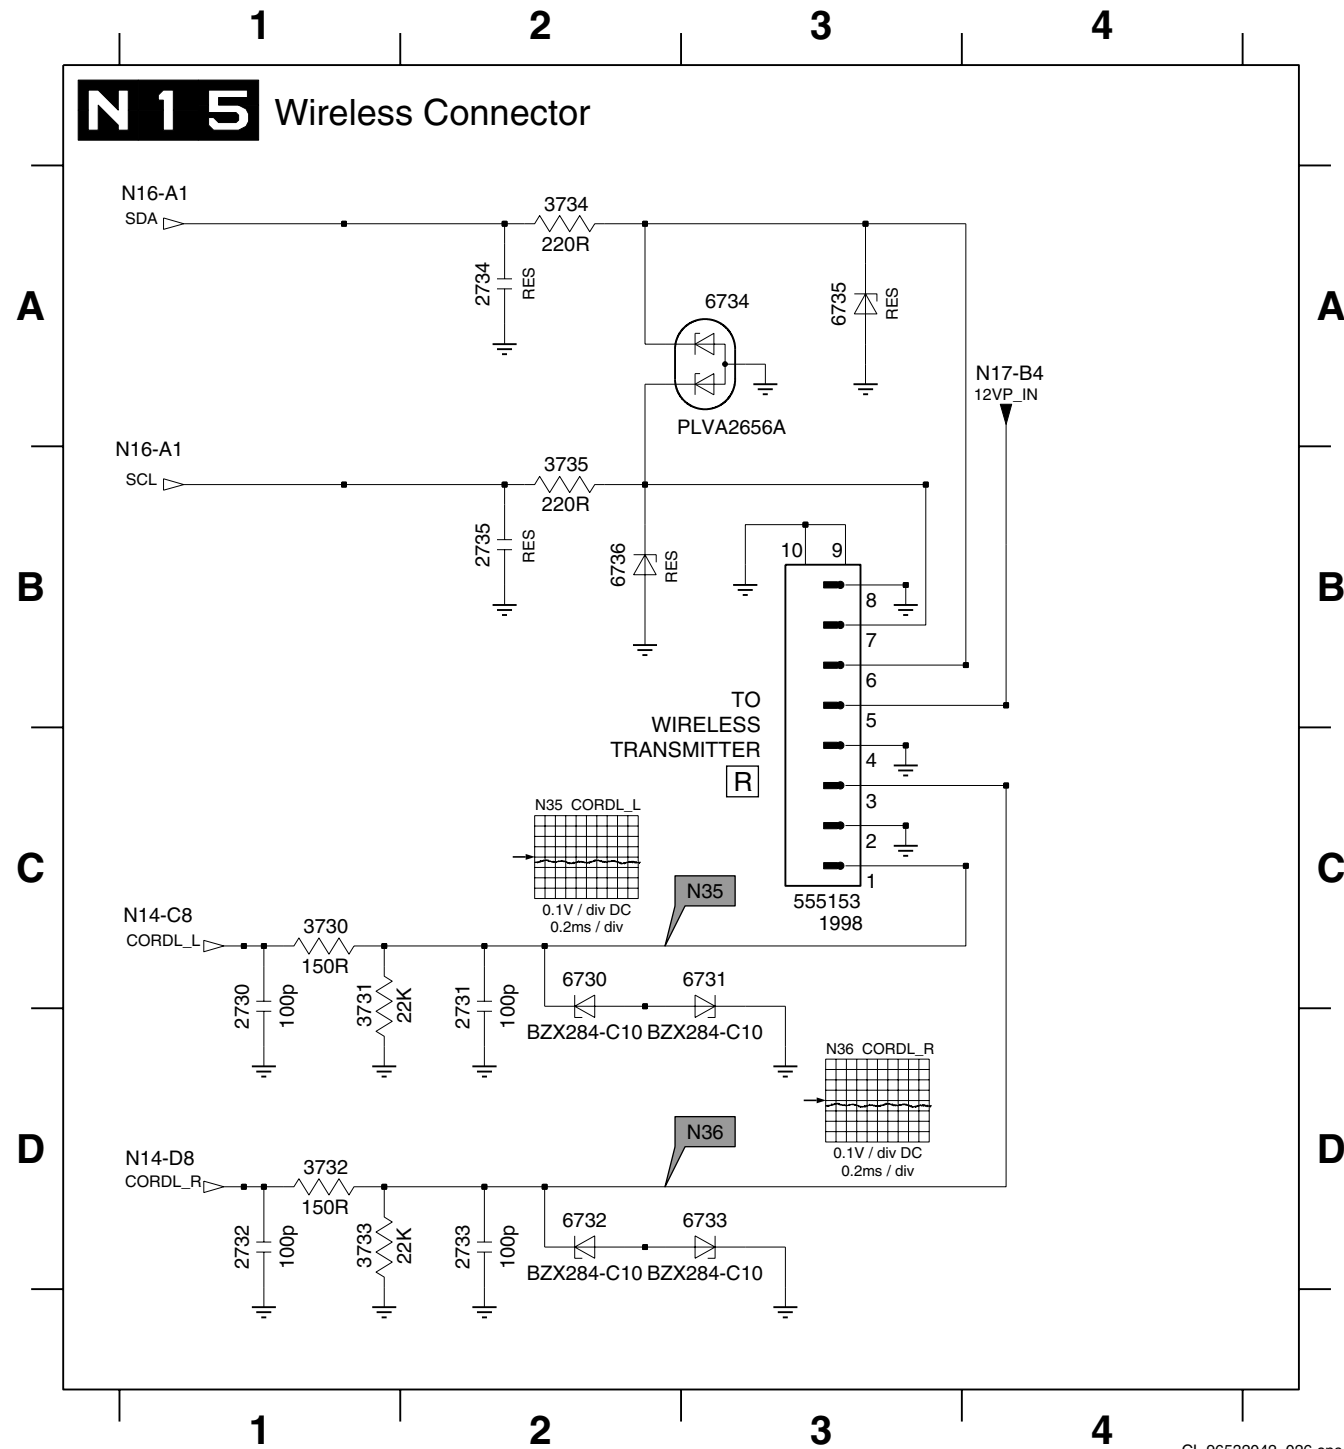

CL 96532042_026.eps
211201


Multi-Channel Sound Module: I²C

2690 B1 3699 E4 3700 E4 7690 A1

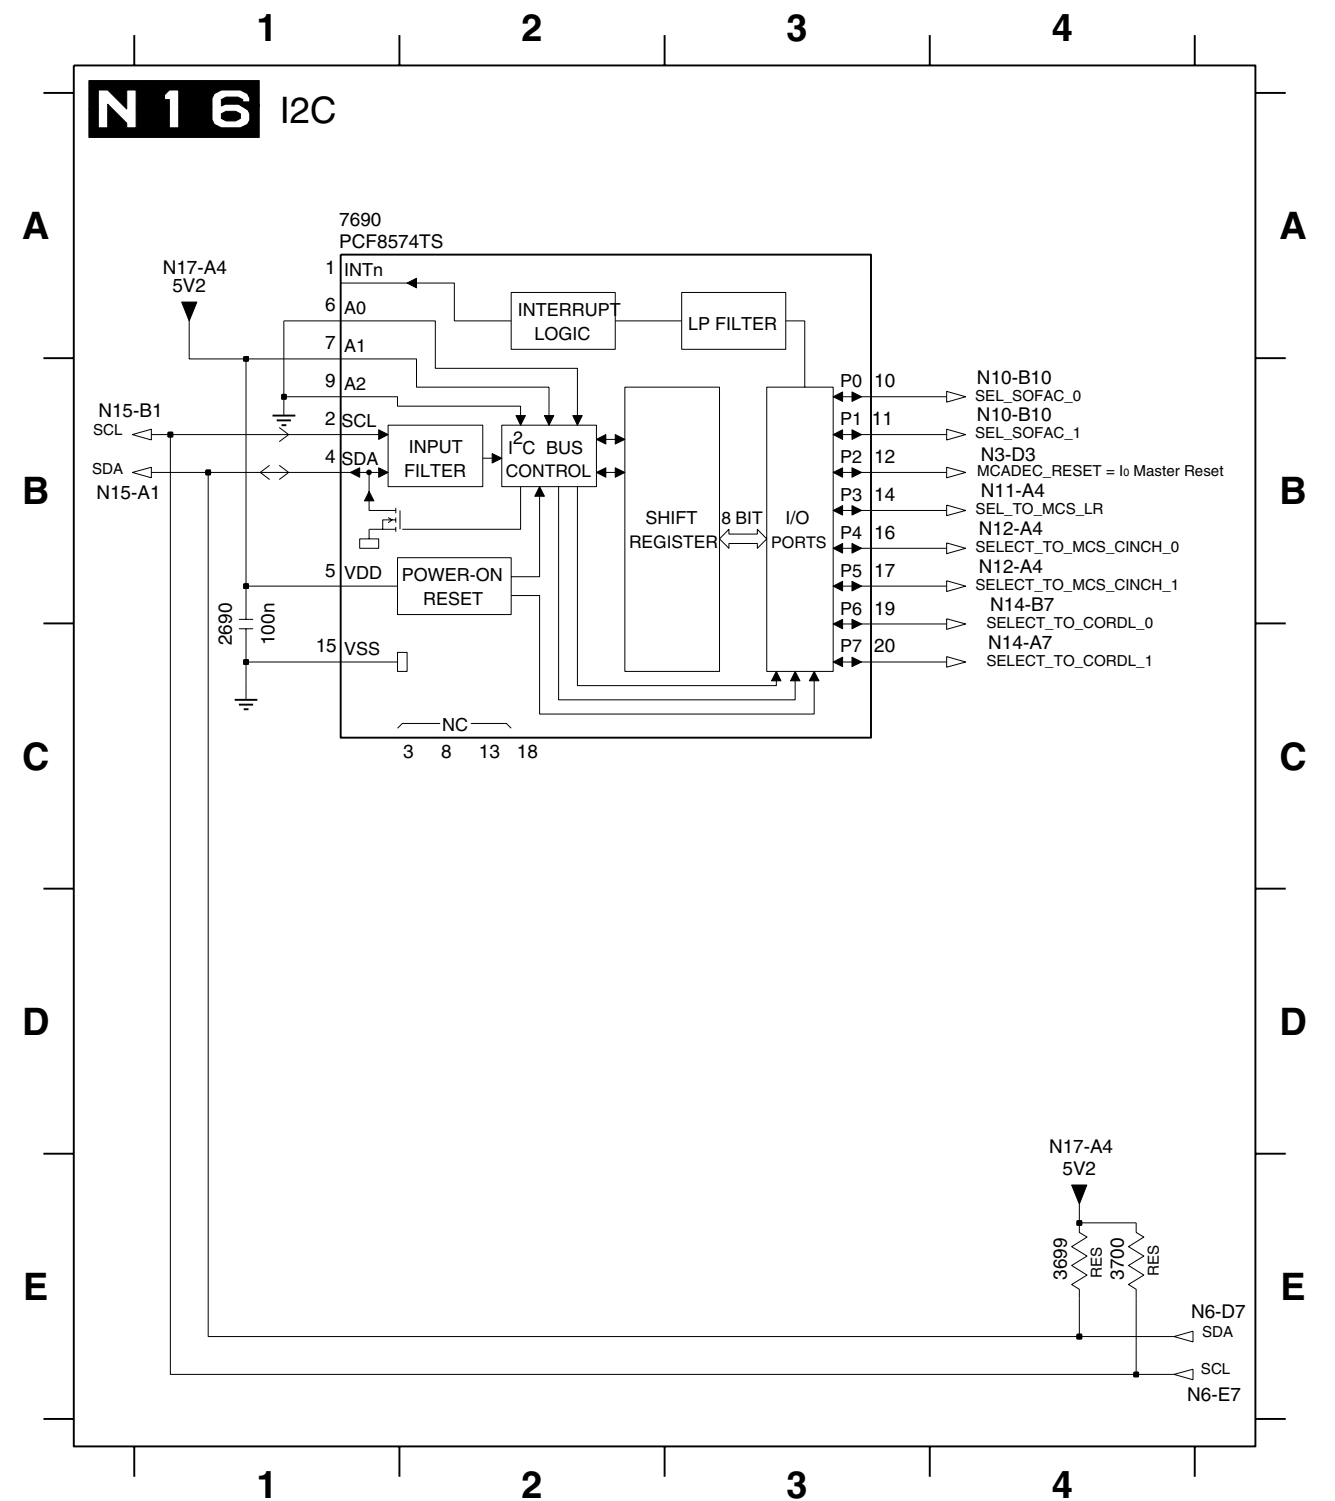

CL 96532042_027.eps
180599

Multi-Channel Sound Module: Power Supply

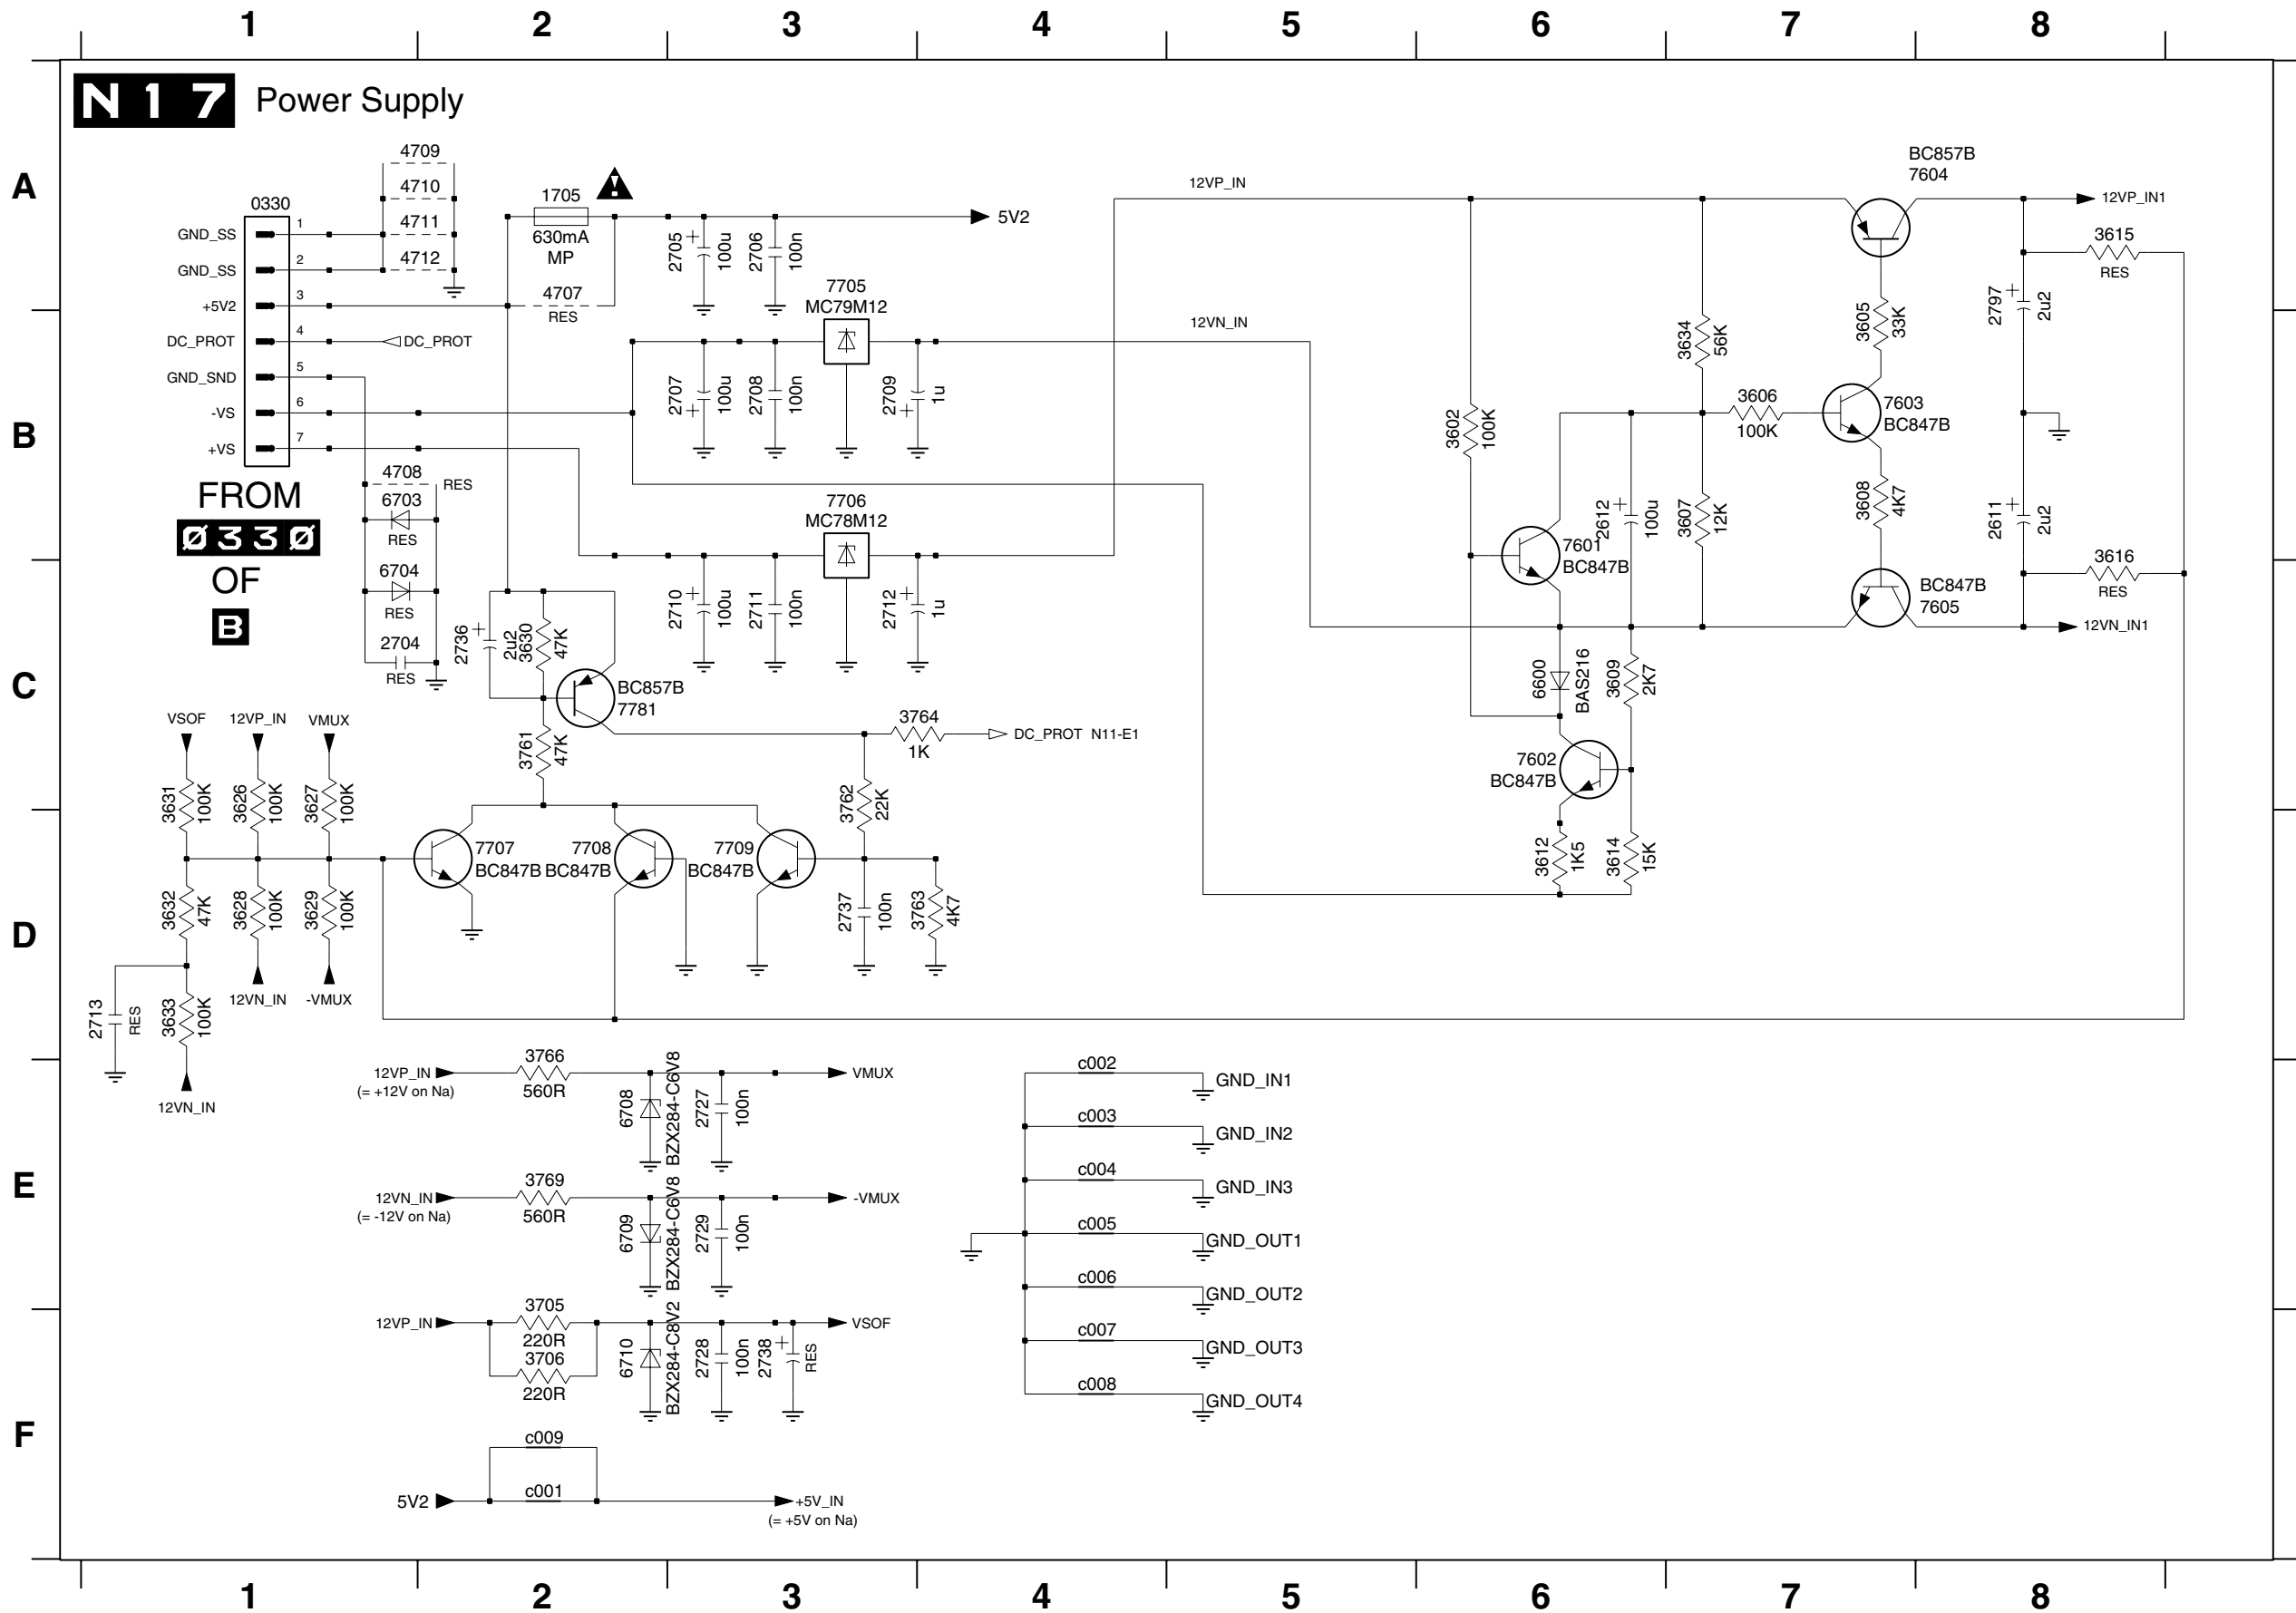

- 0330 A1
- 1705 A2
- 2611 B8
- 2612 B6
- 2704 C1
- 2705 A3
- 2706 A3
- 2707 B3
- 2708 B3
- 2709 B3
- 2710 C3
- 2711 C3
- 2712 C3
- 2713 D1
- 2727 E3
- 2728 F3
- 2729 E3
- 2736 C2
- 2737 D3
- 2738 F3
- 2797 A8
- 3602 B6
- 3605 B7
- 3606 B7
- 3607 B7
- 3608 B7
- 3609 C6
- 3612 D6
- 3614 D6
- 3615 A8
- 3616 C8
- 3626 C1
- 3627 C1
- 3628 D1
- 3629 D1
- 3630 C2
- 3631 C1
- 3632 D1
- 3633 D1
- 3634 B7
- 3705 F2
- 3706 F2
- 3761 C2
- 3762 C3
- 3763 D4
- 3764 C4
- 3766 E2
- 3769 E2
- 4707 A2
- 4708 B1
- 4709 A2
- 4710 A2
- 4711 A2
- 4712 A2
- 6600 C6
- 6703 B1
- 6704 C1
- 6708 E2
- 6710 F2
- 7601 B6
- 7602 C6
- 7603 B7
- 7604 A8
- 7605 C8
- 7705 A3
- 7706 B3
- 7707 D2
- 7708 D2
- 7709 D3
- 7781 C2
- c001 F2
- c002 E4
- c003 E4
- c004 E4
- c005 E4
- c006 E4
- c007 F4
- c008 F4
- c009 F2

Layout MCS Module (Inner Side)


0328	A3	1805	B5	2504	A1	2515	A5	2542	A2	2553	A1	2563	A2	2571	B1	2579	B1	2593	B2	2601	B2	2609	B2	2624	B2	2636	B2	2669	A3	2713	A5	2741	A1	2753	B1	2794	C2	2815	B4	2829	A5	2840	B3	2857	A3	2876	B4	2889	B4	3582	B1	3751	A1	4705	A5
0329	A5	1806	B5	2505	A1	2516	A5	2543	A2	2555	A1	2564	A2	2572	A2	2580	A3	2594	A2	2602	B2	2610	A3	2625	B1	2637	A2	2690	A5	2727	A4	2743	A1	2755	B1	2795	B2	2816	B4	2830	A5	2842	A4	2859	A3	2879	A3	2890	B4	3583	A1	3752	B1	4708	A4
0330	A4	1807	B5	2506	A1	2517	A5	2545	A2	2556	A2	2565	A2	2573	B1	2583	A1	2595	A2	2603	B2	2611	A3	2626	B2	2638	B3	2704	A4	2728	A4	2744	A1	2780	A2	2797	A4	2818	B4	2831	B5	2843	A4	2861	A3	2881	A3	2891	B4	3584	B1	3753	B1	4718	A5
0347	A3	1996	A5	2507	A2	2518	A5	2546	A2	2557	A4	2566	A2	2574	B1	2585	A3	2596	B2	2604	B1	2612	A4	2627	B1	2639	B2	2705	A4	2729	A5	2745	A1	2781	A3	2807	B5	2819	B4	2832	A5	2844	B3	2863	B4	2884	B4	2892	B5	3585	A2	3754	B1	4719	A5
0373	A2	1997	B1	2508	A1	2534	A1	2548	A4	2558	A4	2567	A2	2575	A2	2586	B1	2597	B2	2605	B2	2613	B1	2628	B2	2641	B3	2707	A4	2736	A4	2746	A1	2786	A2	2811	C4	2823	A5	2835	B4	2846	A3	2867	B4	2885	B5	2893	B5	3587	B2	3755	B1	4720	A5
0381	A1	1998	B1	2511	A2	2539	A2	2549	A2	2559	A4	2568	A2	2576	B1	2587	A3	2598	A2	2606	B2	2620	B2	2629	A3	2643	B2	2709	A5	2737	A5	2747	A1	2787	A3	2812	B4	2826	A5	2836	A5	2848	A4	2870	B4	2886	C4	2894	B5	3589	B2	3756	B1	4780	A3
1705	A4	2500	A1	2513	A5	2540	A2	2551	A4	2560	A2	2569	A1	2577	A1	2590	A1	2599	A3	2607	B2	2622	B2	2632	A3	2667	A3	2710	A4	2738	A5	2749	A1	2791	B3	2813	C4	2827	B5	2838	B5	2853	A3	2871	A4	2887	C4	2901	B3	3590	A1	3757	C1	4781	A2
1804	B4	2501	A1	2514	A5	2541	A2	2552	A4	2562	A2	2570	B2	2578	A3	2592	B1	2600	B2	2608	A3	2623	B1	2635	B1	2668	A3	2712	A3	2740	A1	2752	B1	2793	A2	2814	C4	2828	B5	2839	B5	2855	A4	2874	B4	2888	B4	2903	B4	3591	B2	3758	A1	4782	A3



2906	B3	3592	A3	3759	A1	5700	A5	2907	B3	3593	A2	3760	B1	5701	A5	2908	B3	3594	A2	3761	A5	5702	A5	2909	B5	3595	A2	3762	A5	5703	A5	3500	A1	3596	A3	3763	A5	5704	A5	3501	A1	3601	B2	3764	A5	5705	A5	3502	A1	3602	A3	3766	A5	6600	A3	3503	A1	3603	C2	3769	A5	6637	B2	3504	A1	3604	B1	3786	A3	6638	B2	3505	A2	3605	A3	3787	A3	6703	A4	3506	A2	3606	A4	3788	A2	6704	A4	3507	A2	3607	A3	3789	A2	6708	A5	3508	A2	3608	A3	3791	B2	6709	A5	3509	A1	3609	A3	3792	A4	6710	A4	3510	A1	3612	A3	3793	A4	6801	C5	3511	A2	3613	B1	3794	A3	7505	A1	3513	A1	3614	A3	3795	A2	7510	A2	3514	A1	3615	A4	3803	B5	7512	A2	3515	A2	3616	A4	3807	B4	7540	A2	3516	A2	3617	B1	3808	C4	7541	A4	3517	A2	3619	B1	3809	B4	7543	A3	3518	A2	3620	B2	3811	C4	7544	A3	3530	A1	3621	B1	3813	C4	7565	A2	3531	A1	3623	B2	3816	C4	7570	B1	3532	A1	3624	B2	3817	B5	7595	A2	3533	A1	3625	B2	3818	C4	7600	B2	3534	A1	3626	A5	3819	C4	7601	A3	3540	A3	3627	A5	3820	B4	7602	A3	3541	A2	3628	A5	3821	C4	7603	A4	3542	A2	3629	A5	3822	A5	7604	A4	3544	A2	3630	A5	3823	A5	7605	A3	3545	A2	3631	A5	3828	A5	7611	B2	3546	A4	3632	A5	3829	A5	7625	B2	3547	A4	3633	A5	3830	A5	7635	B1	3548	A3	3634	A4	3831	A5	7690	A5	3549	A1	3638	B2	3834	B5	7696	A2	3550	A4	3639	B2	3838	A5	7705	A4	3551	A4	3640	B2	3839	A5	7706	A4	3552	A4	3649	B2	3840	A5	7707	A5	3553	A2	3651	B2	3841	A4	7708	A5	3554	A4	3658	A3	3842	B5	7709	A5	3555	A3	3659	A3	3843	B5	7713	A5	3556	A2	3660	A2	3849	B5	7740	A1	3557	A2	3661	A2	3858	A4	7780	A2	3558	A3	3699	A5	3859	A4	7781	A5	3559	A2	3700	A5	3865	A4	7800	B3	3560	A2	3701	B2	3886	B5	7801	B4	3561	A2	3702	B2	3888	B5	7802	A5	3562	A3	3703	B2	3890	B4	7804	A4	3563	A2	3704	B2	3892	B5	7805	A3	3564	A2	3705	A4	3893	B5	7806	B4	3565	A2	3706	A4	3894	B5	3566	A3	3727	A3	4502	A5	3567	A3	3728	A3	4505	A2	3568	A3	3729	A3	4506	A1	3569	A3	3737	A3	4507	A1	3570	A2	3740	A1	4527	A2	3571	B1	3741	A1	4528	A2	3573	B1	3742	A1	4529	A5	3574	A3	3743	A1	4540	B2	3575	A3	3744	A1	4541	B2	3576	A3	3745	A1	4627	B2	3577	A5	3746	A1	4700	A5	3578	A5	3747	A1	4701	A5	3579	A2	3748	A1	4702	A5	3580	A2	3749	A1	4703	A5	3581	A2	3750	A1	4704	A5
------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----


Layout MCS Module (Outer Side)

2512 A4	2536 A4	2679 B4	2708 A2	2721 A5	2732 C5	2800 B1	2824 B1	2849 B2	2862 A3	2875 A2	2905 B3	3525 A3	3542 A4	3646 C4	3664 B4	3679 C4	3688 C4	3713 B4	3891 B1
2520 A3	2537 A4	2680 C4	2711 A2	2722 A5	2733 B5	2802 B1	2825 B1	2850 A2	2864 B2	2877 A2	3512 A4	3526 A3	3572 A4	3647 C4	3667 B4	3680 B4	3689 C4	3715 A5	3895 A1
2521 A3	2538 A4	2681 C4	2715 A5	2723 A5	2734 B5	2809 B1	2833 B1	2851 A2	2865 B2	2878 B2	3519 A4	3527 A3	3598 A4	3648 C4	3670 B5	3682 C4	3707 A5	3716 A5	3896 A1
2522 A3	2630 A1	2682 B4	2716 A5	2724 A5	2735 B5	2810 B2	2834 B1	2852 A2	2866 B2	2880 B3	3520 A3	3535 A4	3599 A4	3650 C4	3671 A4	3683 C4	3708 A5	3717 A5	4500 A4
2523 A3	2631 A1	2685 B4	2717 A5	2725 A5	2784 A3	2817 B2	2837 A1	2854 A3	2868 B2	2882 A3	3521 A3	3536 A4	3600 A4	3652 C4	3673 A4	3684 C4	3709 A5	3718 A5	4501 A4
2524 A3	2665 B4	2686 B5	2718 A5	2726 A5	2785 A4	2820 B2	2841 B3	2856 A2	2869 B2	2883 A2	3522 A3	3537 A4	3610 A1	3653 B4	3675 B4	3685 C4	3710 B5	3719 A5	4503 A5
2525 A3	2666 C4	2695 A4	2719 A5	2730 C5	2790 A4	2821 B2	2845 B3	2858 A2	2872 A1	2900 B3	3523 A3	3538 A4	3611 A1	3655 B4	3676 B4	3686 C4	3711 B4	3720 A5	4520 A3
2535 A4	2670 B5	2706 A1	2720 A5	2731 C5	2796 A3	2822 B2	2847 A2	2860 B3	2873 B2	2904 B3	3524 A3	3539 A4	3645 C4	3663 C4	3678 B4	3687 B4	3712 B5	3721 A5	4522 A3

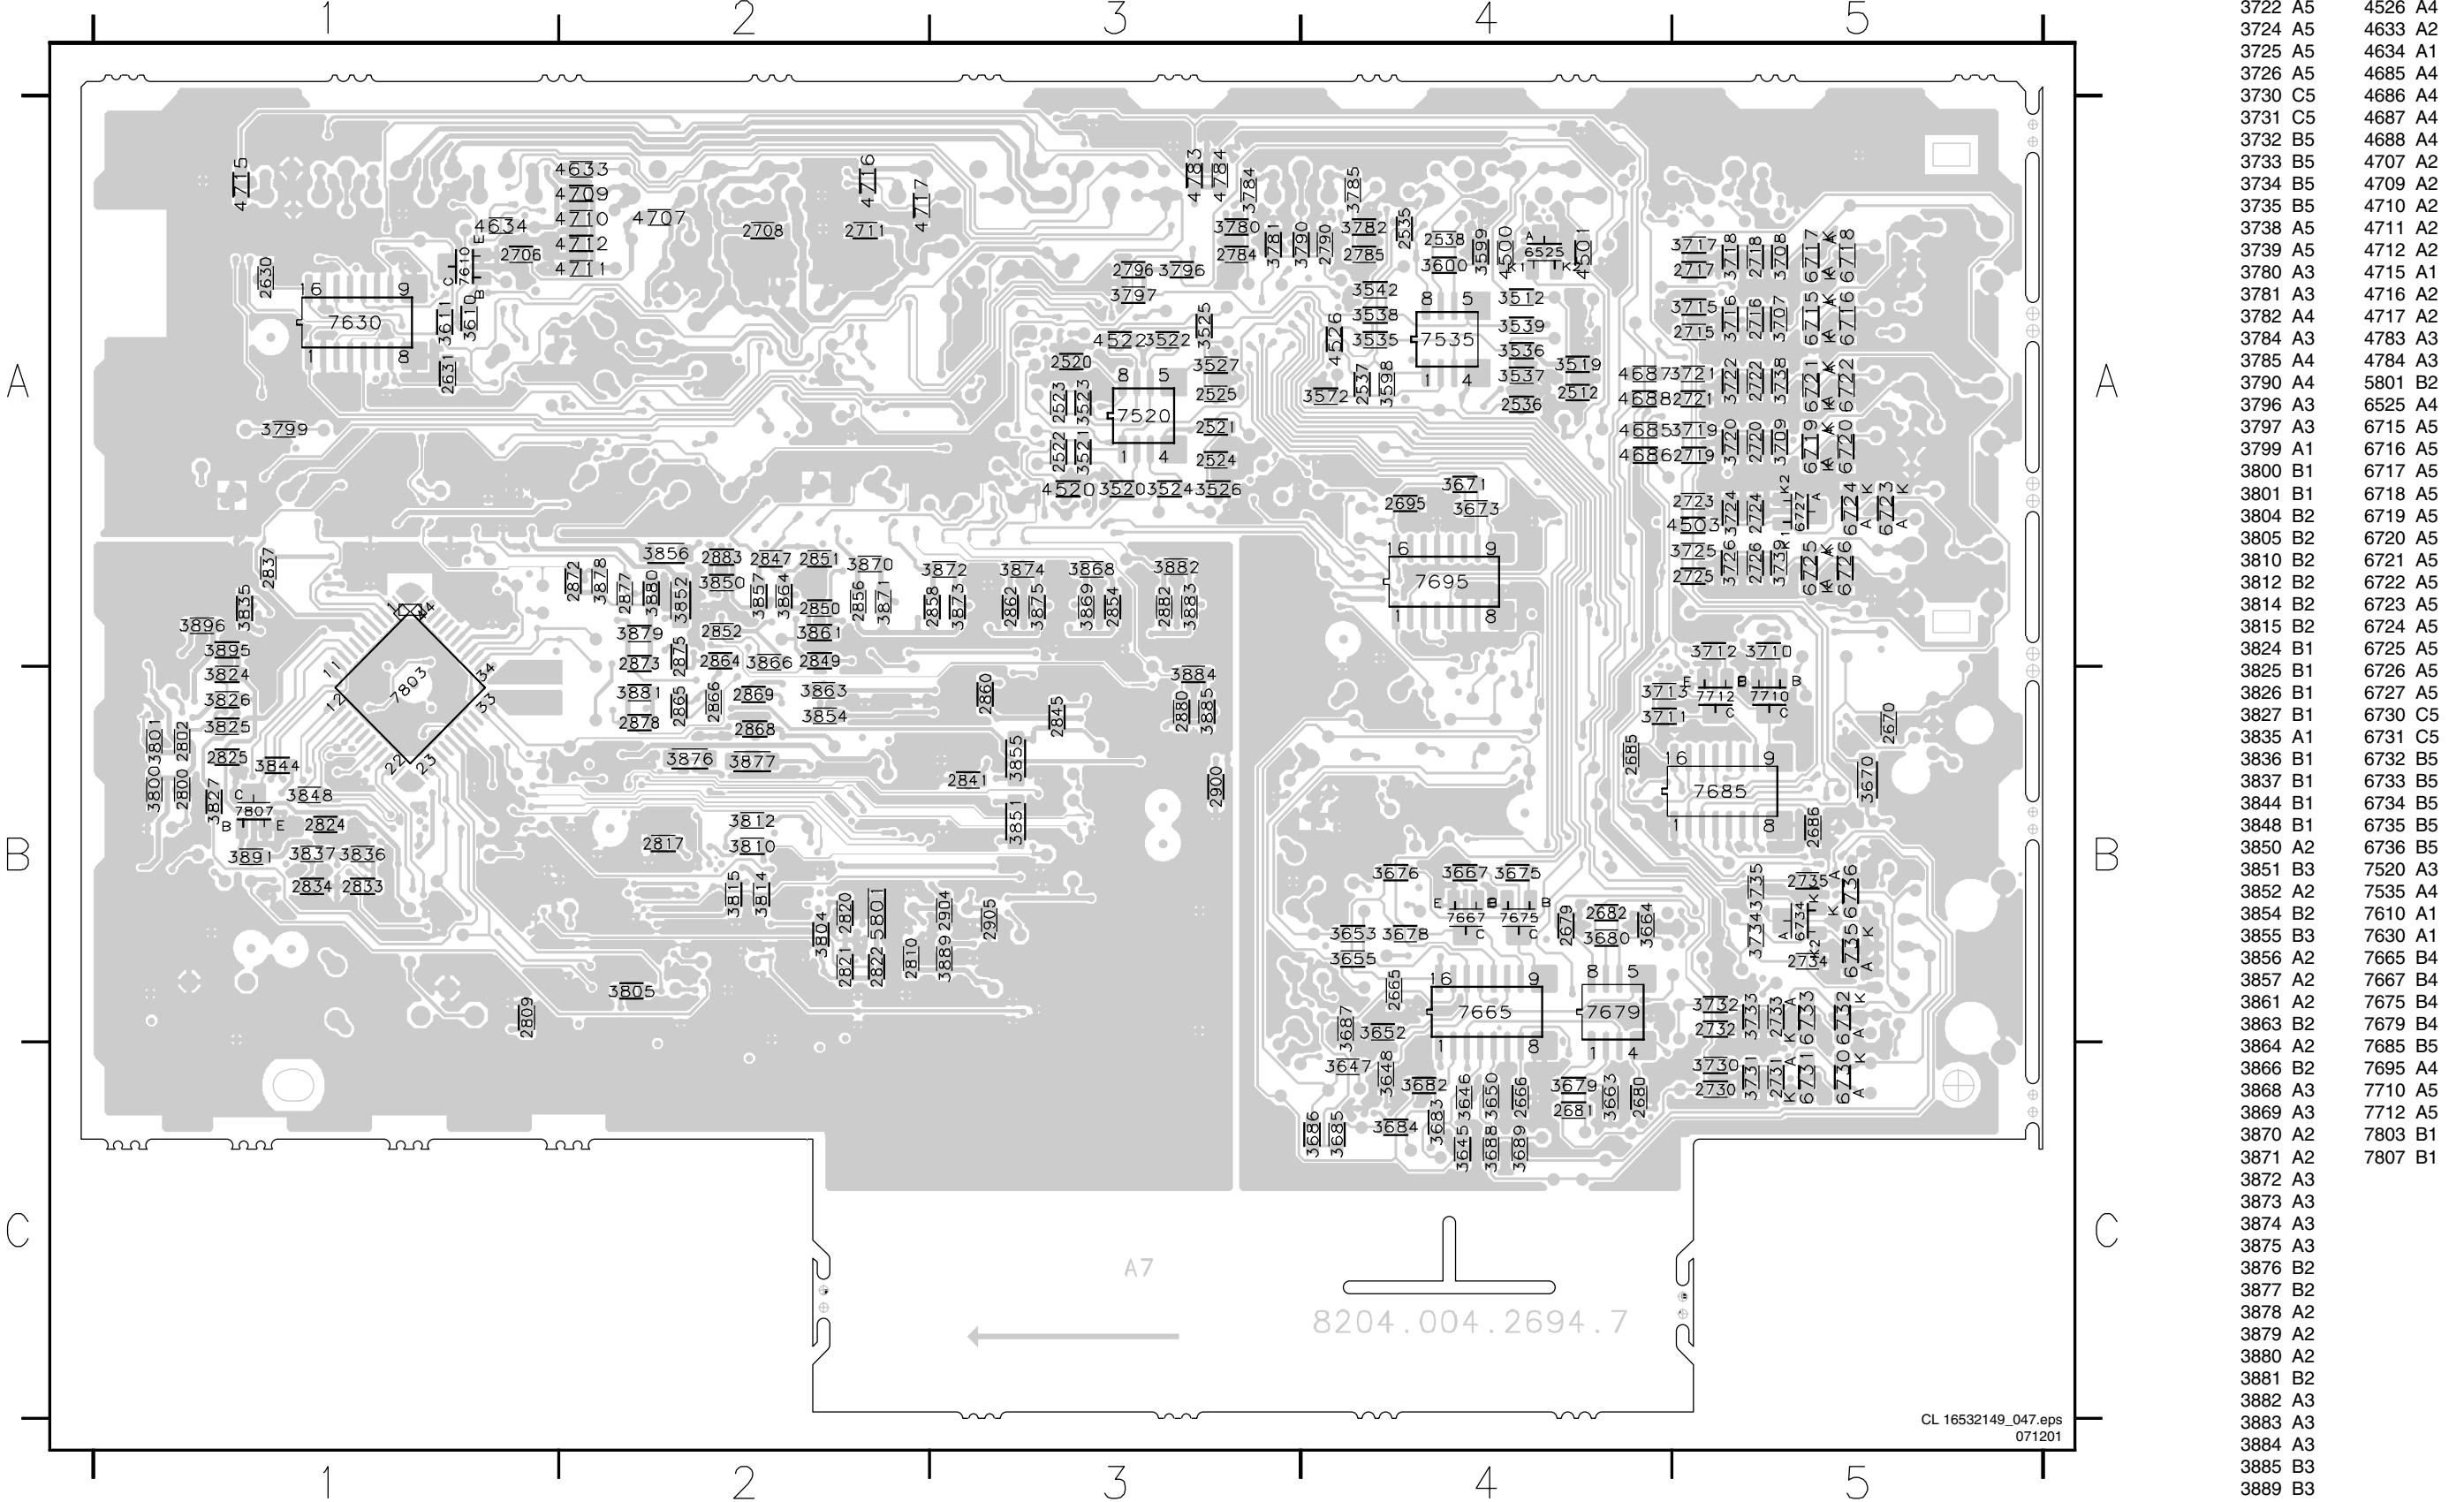

3722 A5	4526 A4
3724 A5	4633 A2
3725 A5	4634 A1
3726 A5	4685 A4
3730 C5	4686 A4
3731 C5	4687 A4
3732 B5	4688 A4
3733 B5	4707 A2
3734 B5	4709 A2
3735 B5	4710 A2
3738 A5	4711 A2
3739 A5	4712 A2
3780 A3	4715 A1
3781 A3	4716 A2
3782 A4	4717 A2
3784 A3	4783 A3
3785 A4	4784 A3
3790 A4	5801 B2
3796 A3	6525 A4
3797 A3	6715 A5
3799 A1	6716 A5
3800 B1	6717 A5
3801 B1	6718 A5
3804 B2	6719 A5
3805 B2	6720 A5
3810 B2	6721 A5
3812 B2	6722 A5
3814 B2	6723 A5
3815 B2	6724 A5
3824 B1	6725 A5
3825 B1	6726 A5
3826 B1	6727 A5
3827 B1	6730 C5
3835 A1	6731 C5
3836 B1	6732 B5
3837 B1	6733 B5
3844 B1	6734 B5
3848 B1	6735 B5
3850 A2	6736 B5
3851 B3	7520 A3
3852 A2	7535 A4
3854 B2	7610 A1
3855 B3	7630 A1
3856 A2	7665 B4
3857 A2	7667 B4
3861 A2	7675 B4
3863 B2	7679 B4
3864 A2	7685 B5
3866 B2	7695 A4
3868 A3	7710 A5
3869 A3	7712 A5
3870 A2	7803 B1
3871 A2	7807 B1
3872 A3	
3873 A3	
3874 A3	
3875 A3	
3876 B2	
3877 B2	
3878 A2	
3879 A2	
3880 A2	
3881 B2	
3882 A3	
3883 A3	
3884 A3	
3885 B3	
3889 B3	


Side I/O Panel: FL11

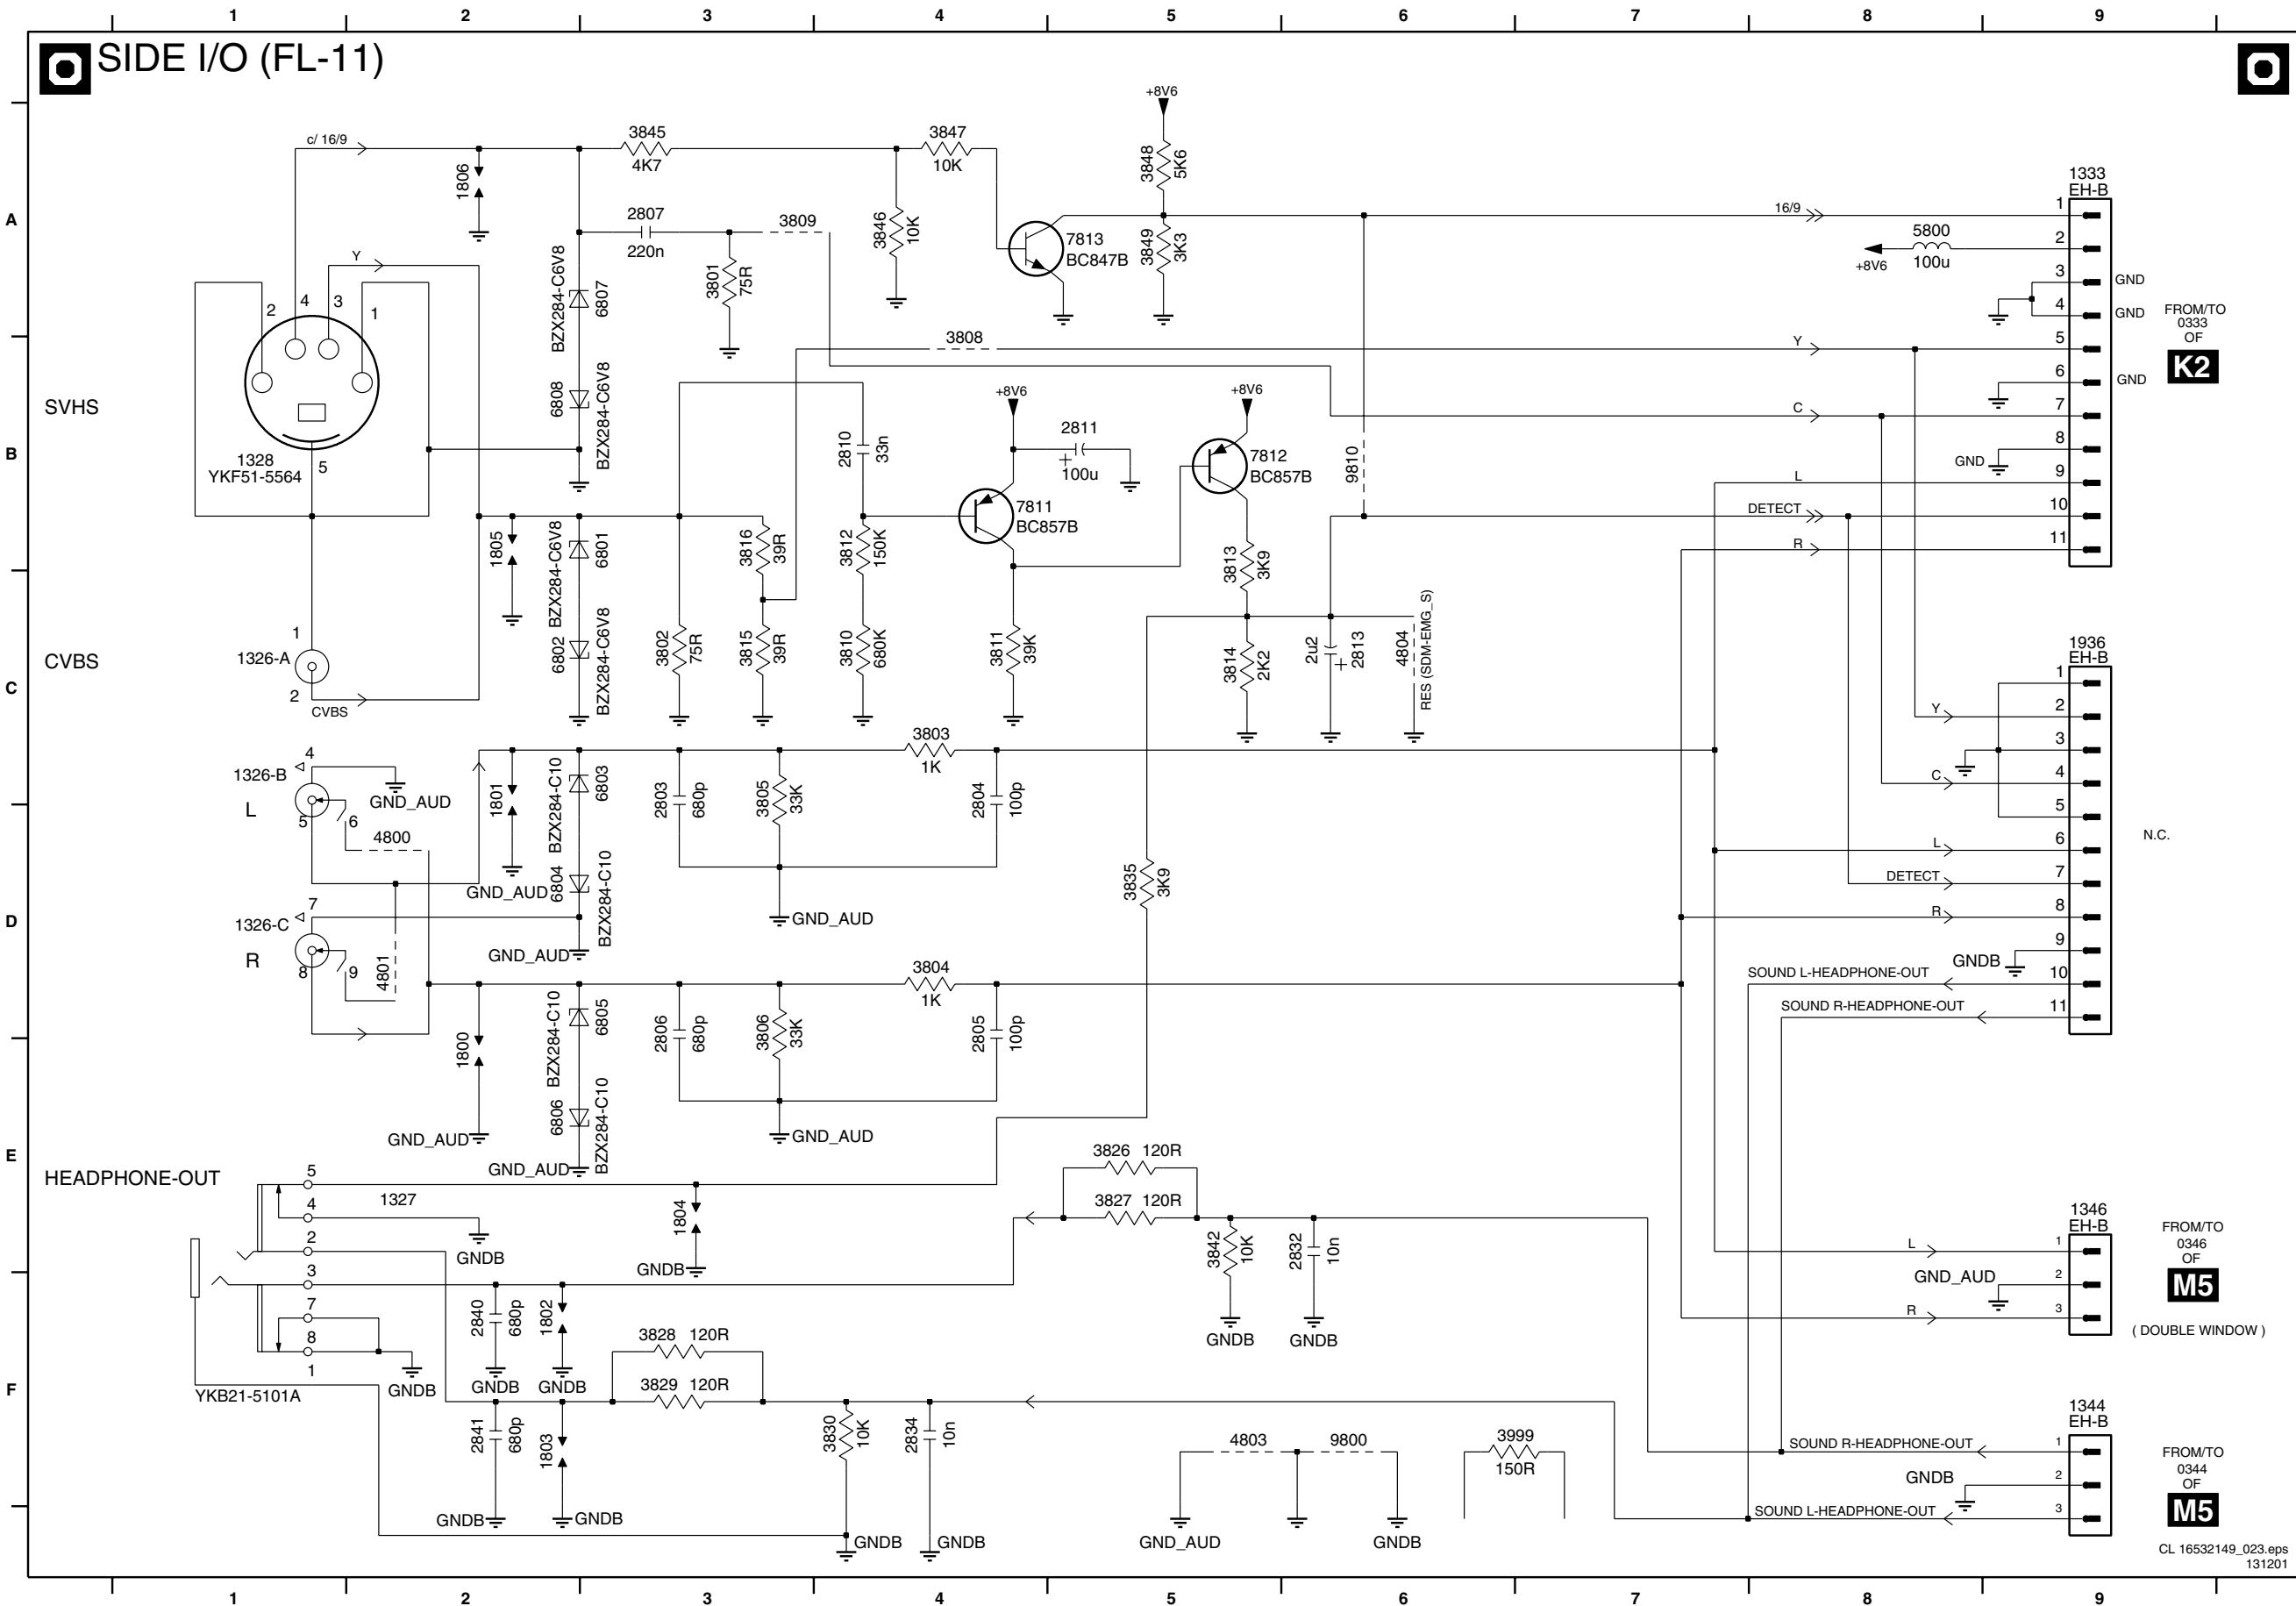

- 1326-A C1
- 1326-B C1
- 1326-C D1
- 1327 E2
- 1328 B1
- 1333 A9
- 1344 F9
- 1346 E9
- 1800 E2
- 1801 C2
- 1802 F2
- 1803 F2
- 1804 E3
- 1805 B2
- 1806 A2
- 1936 C9
- 2803 C3
- 2804 C4
- 2805 D4
- 2806 D3
- 2807 A3
- 2810 B4
- 2811 B5
- 2813 C6
- 2832 E6
- 2834 F4
- 2840 F2
- 2841 F2
- 3801 A3
- 3802 C3
- 3803 C4
- 3804 D4
- 3805 C3
- 3806 D3
- 3808 B4
- 3809 A3
- 3810 C4
- 3811 C4
- 3812 B4
- 3813 B5
- 3814 C5
- 3815 C3
- 3816 B3
- 3826 E5
- 3827 E5
- 3828 F3
- 3829 F3
- 3830 F4
- 3835 D5
- 3842 E5
- 3845 A3
- 3846 A4
- 3847 A4
- 3848 A5
- 3849 A5
- 3999 F7
- 4800 D2
- 4801 D2
- 4803 F5
- 4804 C6
- 5800 A8
- 6801 B3
- 6802 C2
- 6803 C3
- 6804 D2
- 6805 D3
- 6806 E2
- 6807 A3
- 6808 B2
- 7811 B4
- 7812 B5
- 7813 A5
- 9800 F6
- 9810 B6


Layout Side I/O Panel

Top View

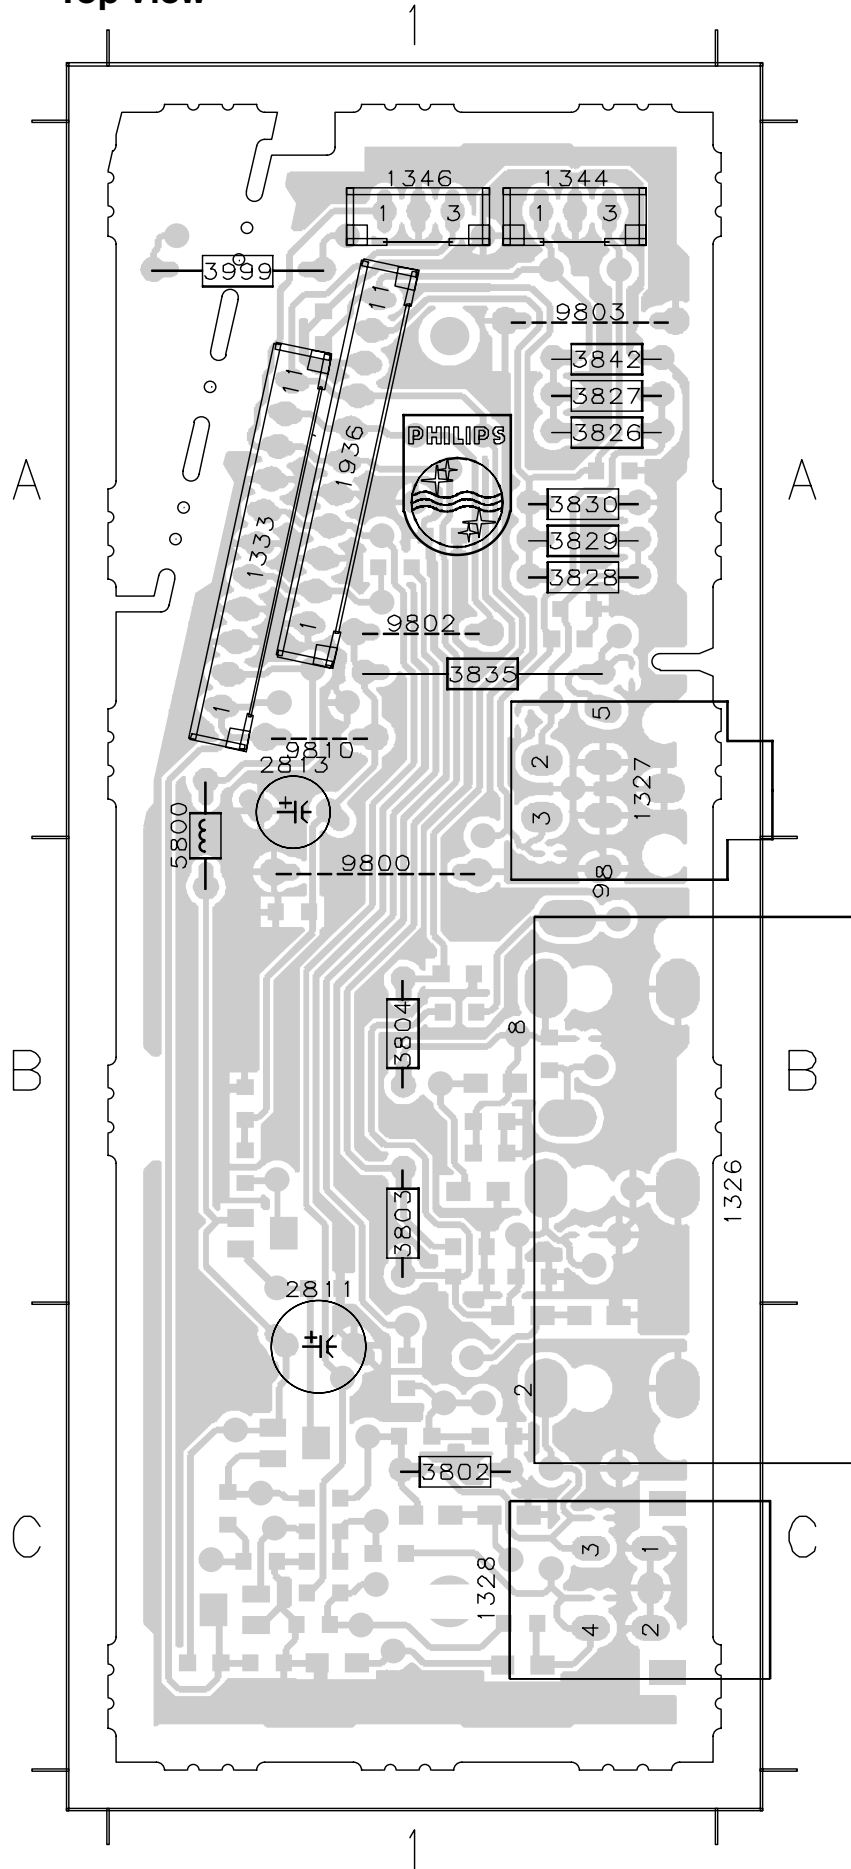

- 1326 B1
- 1327 A1
- 1328 C1
- 1344 A1
- 1346 A1
- 1936 A1
- 2811 B1
- 2813 A1
- 3802 C1
- 3803 B1
- 3804 B1
- 3826 A1
- 3827 A1
- 3828 A1
- 3829 A1
- 3830 A1
- 3835 A1
- 3842 A1
- 3828 A1
- 3999 A1
- 5800 A1
- 9800 B1
- 9802 A1
- 9803 A1
- 9810 A1


Bottom View

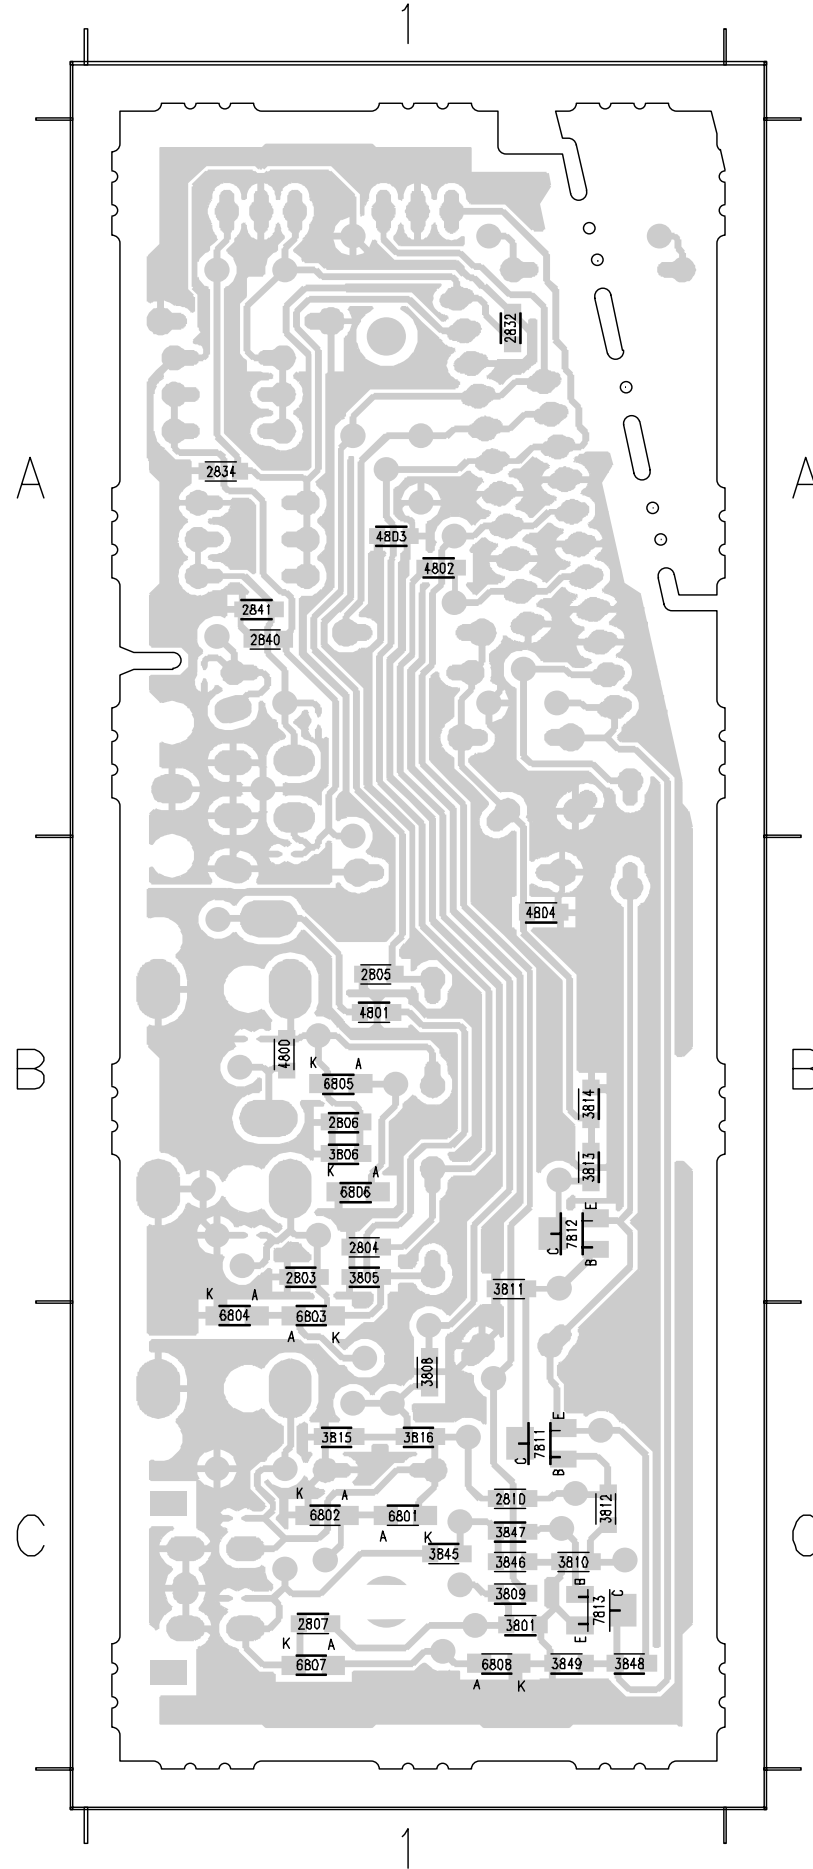


- 2803 B1
- 2804 B1
- 2805 B1
- 2806 B1
- 2807 C1
- 2810 C1
- 2832 A1
- 2834 A1
- 2840 A1
- 2841 A1
- 3801 C1
- 3805 B1
- 3806 B1
- 3808 C1
- 3809 C1
- 3810 C1
- 3811 B1
- 3812 C1
- 3813 B1
- 3814 B1
- 3815 C1
- 3816 C1
- 3845 C1
- 3846 C1
- 3847 C1
- 3848 C1
- 3849 C1
- 4800 B1
- 4801 B1
- 4802 A1
- 4803 A1
- 4804 B1
- 6801 C1
- 6802 C1
- 6803 B1
- 6804 C1
- 6805 B1
- 6806 B1
- 6807 C1
- 6808 C1
- 7811 C1
- 7812 B1
- 7813 C1

Top Control Panel

0345 A4	1703 D3	3002 E1	3006 E2	3010 D3	3999 D4	4004 E3
0346 B4	1704 D3	3003 E1	3007 E2	3011 E3	4001 D2	4005 C3
1701 D1	1705 D2	3004 E1	3008 D2	3012 C3	4002 E3	4006 C3
1702 D1	3001 E1	3005 E2	3009 E3	3013 C3	4003 D3	6005 E2

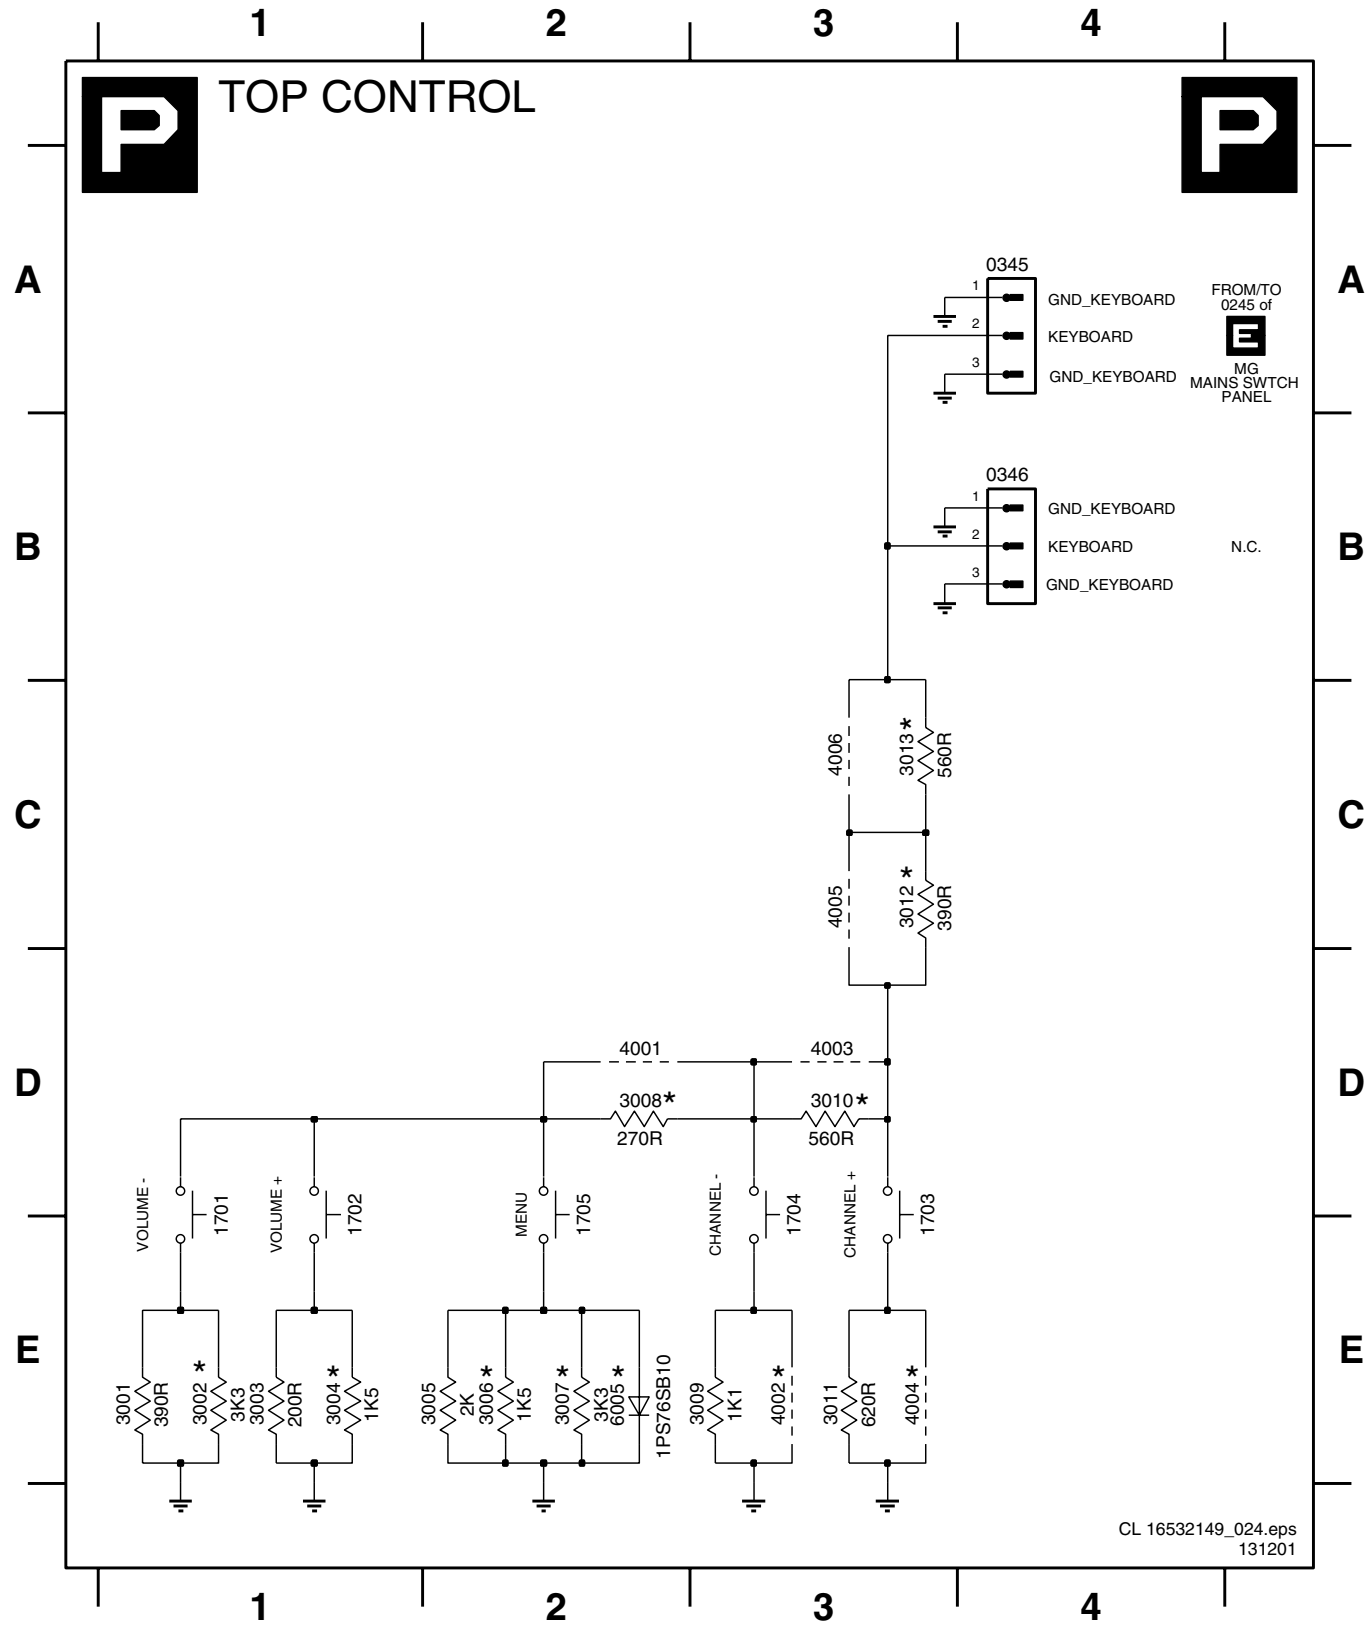

Layout Top Control Panel

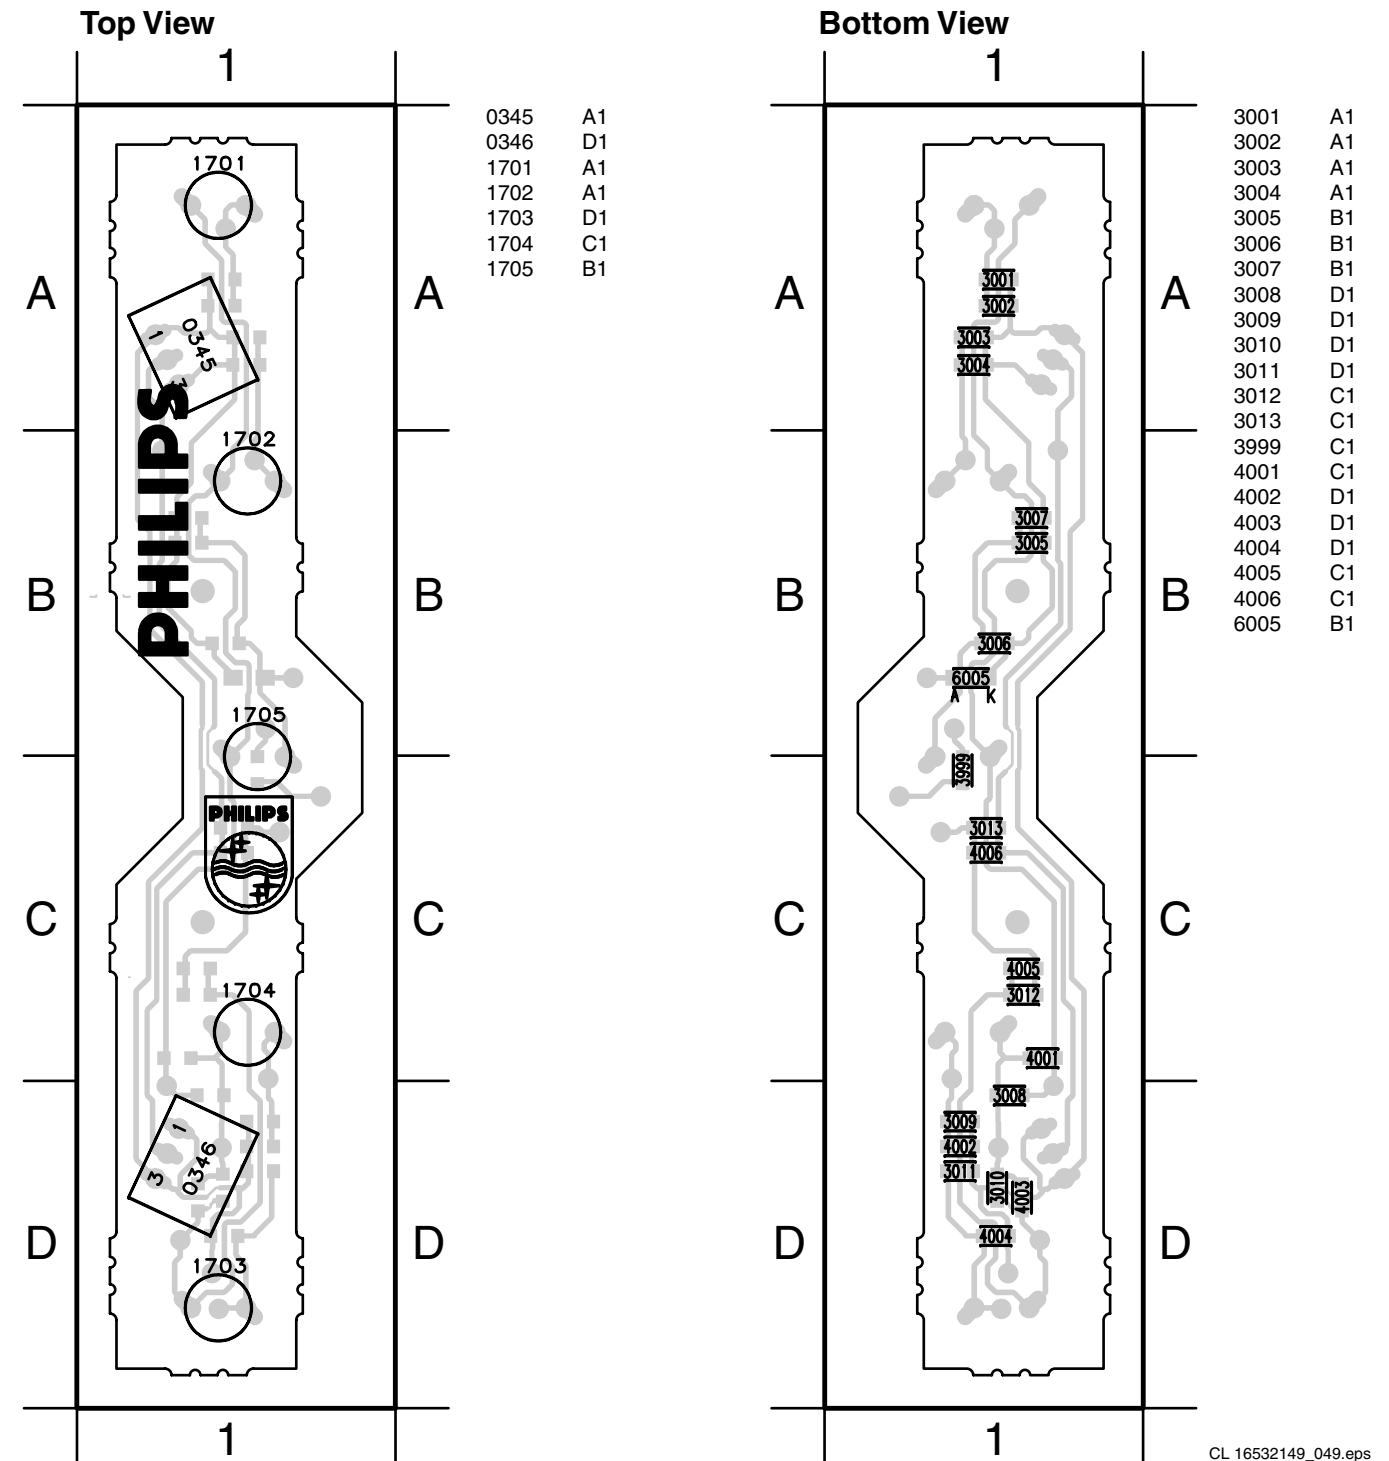


0345	A1
0346	D1
1701	A1
1702	A1
1703	D1
1704	C1
1705	B1

3001	A1
3002	A1
3003	A1
3004	A1
3005	B1
3006	B1
3007	B1
3008	D1
3009	D1
3010	D1
3011	D1
3012	C1
3013	C1
3999	C1
4001	C1
4002	D1
4003	D1
4004	D1
4005	C1
4006	C1
6005	B1

Wireless Transmitter


1002 A15	2106 B3	2115 C7	2124 A9	2133 C10	2143 E12	2156 E9	2167 H3	2179 G15	2189 H4	3104 A3	3113 B4	3122 A8	3131 D8	3140 A11	3152 D12	3161 G4	3171 E8	3189 G14	3200 G7	3211 H9	5106 A15	7101-B A6	7109-A E13	7115-B G12	F103 A1	F113 D11	F125 B15	F151 C15
1101 A1	2107 D3	2116 A4	2125 C9	2134 B10	2144 E13	2157 E9	2168 D14	2180 H8	2190 A15	3105 C3	3114 A5	3123 C8	3132 D10	3141 C11	3153 E12	3162 F5	3172 E8	3190 G8	3201 C6	3212 G10	5107 E9	7101-C A4	7109-B D12	7116 G14	F105 B1	F114 D9	F127 G7	F152 D11
1102 A13	2108 B3	2117 B8	2126 C7	2135 D10	2144 E14	2158 E8	2169 D14	2181 A10	2191 D12	3106 A3	3115 C5	3124 A8	3133 D10	3142 E10	3154 E12	3163 G5	3173 G3	3191 G8	3202 A6	3213 G10	5108 E7	7101-D C4	7109-E D12	7117 E11	F107 B1	F116 G7	F128 E14	F153 H12
2100 A2	2109 D3	2118 B8	2127 D8	2136 A10	2145 F6	2161 H11	2170 D11	2182 C10	2192 G11	3107 C3	3116 A5	3125 C8	3134 B10	3143 E11	3155 E13	3164 G5	3174 H3	3192 H2	3203 H10	4133 B15	6102 E7	7102 B8	7112 F1	7118 E12	F108 B1	F117 G8	F129 C13	F154 H11
2101 C2	2110 B5	2119 D8	2128 B7	2137 C9	2146 H4	2162 H12	2172 E10	2183 G10	2193 H10	3108 B3	3117 C5	3126 A9	3135 C10	3144 C11	3156 E13	3165 G5	3175 H3	3193 H2	3204 G10	5101 H5	6106 G4	7103-A A10	7113-A B12	7119 G8	F109 G15	F118 G8	F130 C13	F155 F2
2102 A3	2111 D5	2120 B7	2129 B7	2138 E11	2147 H5	2163 H14	2173 E10	2185 G13	3100 A2	3109 D3	3118 B6	3127 C9	3136 B10	3145 E11	3157 D13	3166 G5	3182 H11	3196 F7	3205 G15	5102 A15	6107 G13	7103-B B10	7113-B C12	7120 H10	F109 C4	F120 E7	F131 H7	F156 E5
2103 C3	2112 A6	2121 C7	2130 B7	2139 D12	2148 E7	2164 H3	2175 D2	2186 G13	3101 C2	3110 B3	3119 D6	3128 C7	3137 C10	3146 D10	3158 C13	3168 F7	3184 G11	3197 F7	3206 G12	5103 C15	6108 B15	7105 F5	7113-C A12	F100 A11	F110 C6	F122 E4	F132 H7	F157 E10
2104 A3	2113 C6	2122 C7	2131 C7	2141 D11	2150 F8	2165 H4	2176 B2	2187 H13	3102 B2	3111 C3	3120 B6	3129 D9	3138 A11	3147 E11	3159 C13	3169 F7	3185 H12	3198 C14	3207 H13	5104 A15	6109 B15	7106 D8	7114 F8	F101 A6	F111 B10	F123 E4	F133 H4	F158 G3
2105 C3	2114 A7	2123 C7	2132 A10	2142 D13	2155 E8	2166 F2	2178 E9	2188 E7	3103 D2	3112 B3	3121 D6	3130 C7	3139 C11	3151 D12	3160 G4	3170 E8	3188 G14	3199 E5	3210 H9	5105 C15	7101-A C6	7108 G3	7115-A G11	F102 A9	F112 D14	F124 A14	F134 H4	F150 A15

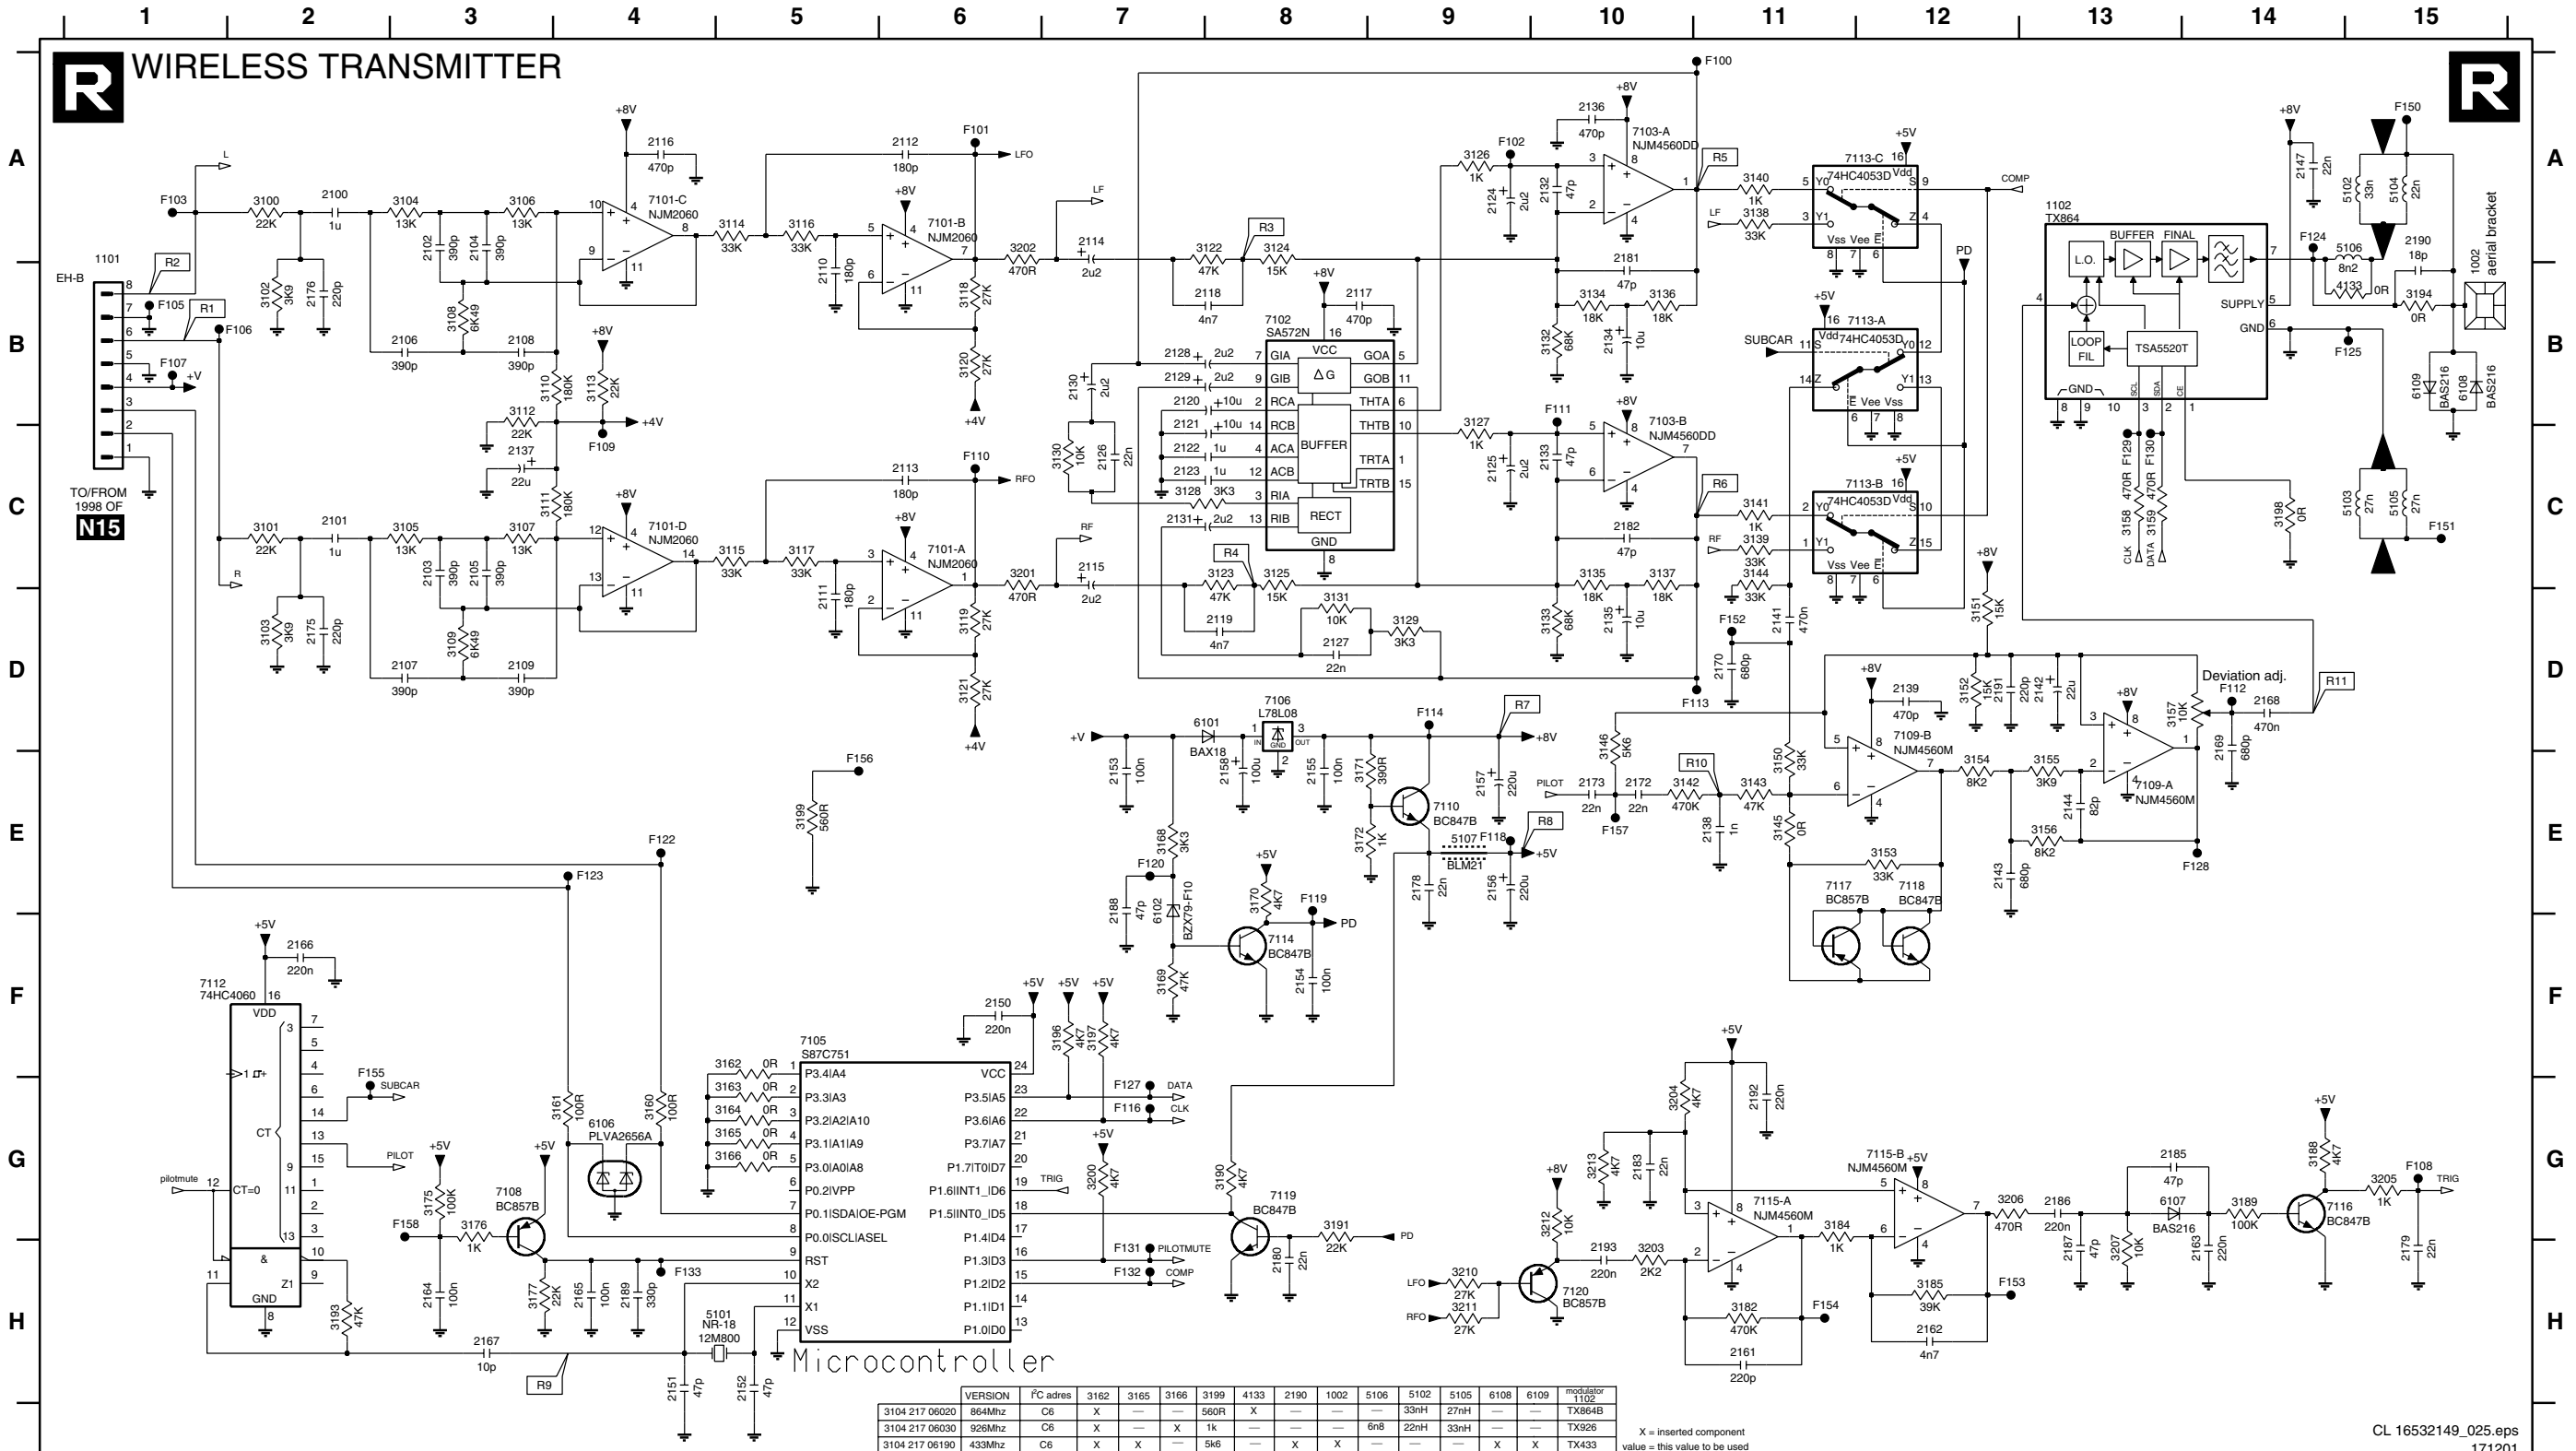

VERSION	FC adres	3162	3165	3166	3199	4133	2190	1002	5106	5102	5105	6108	6109	modulator
3104 217 06020	864Mhz	C6	X	-	-	560R	X	-	-	33nH	27nH	-	-	TX864B
3104 217 06030	926Mhz	C6	X	-	X	1k	-	-	6n8	22nH	33nH	-	-	TX926
3104 217 06190	433Mhz	C6	X	X	-	5k6	-	X	-	-	-	X	X	TX433


X = inserted component
value = this value to be used

CL 16532149_025.eps
171201

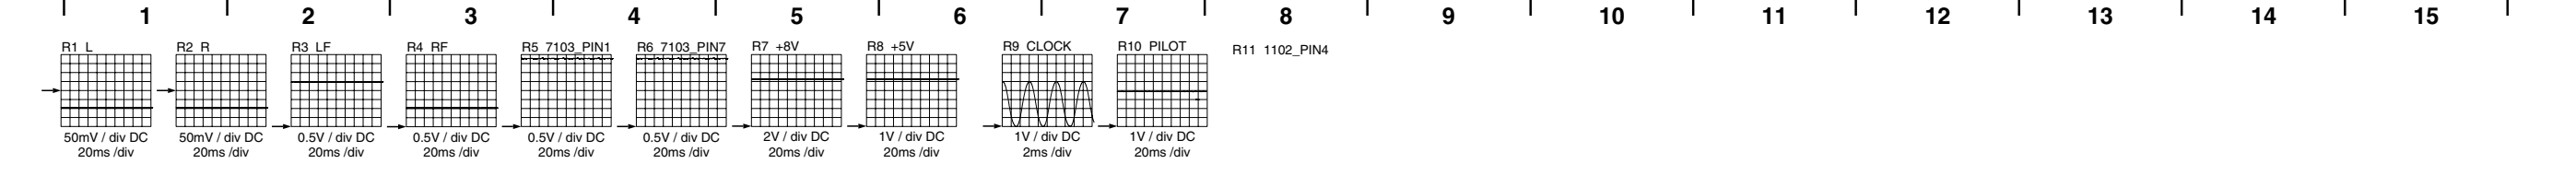


Layout Wireless Transmitter

Top View

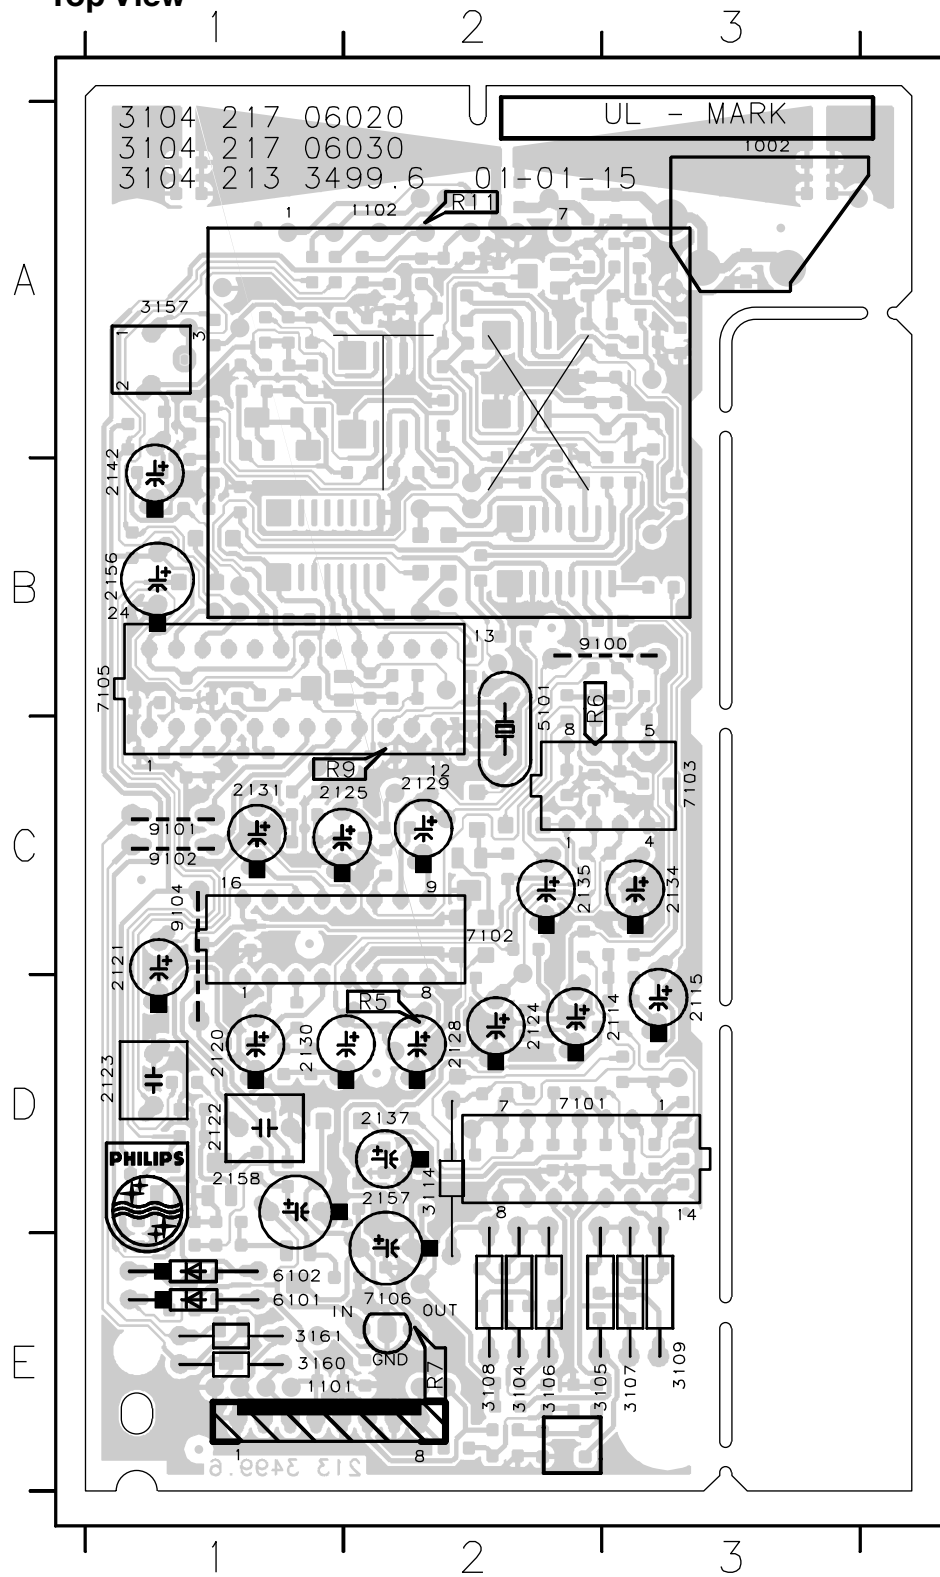


- 1002 A3
- 1101 E1
- 1102 A2
- 2114 D3
- 2115 D3
- 2120 D1
- 2121 C1
- 2122 D1
- 2123 D1
- 2124 D2
- 2125 C1
- 2128 D2
- 2129 C2
- 2130 D1
- 2131 C1
- 2134 C3
- 2135 C2
- 2137 D2
- 2142 B1
- 2156 B1
- 2157 D2
- 2158 D1
- 3104 E2
- 3105 E2
- 3106 E2
- 3107 E3
- 3108 E2
- 3109 E3
- 3114 D2
- 3157 A1
- 3160 E1
- 3161 E1
- 5101 B2
- 6101 E1
- 6102 E1
- 7101 D2
- 7102 C2
- 7103 C3
- 7105 B1
- 7106 E2
- 9100 B3
- 9101 C1
- 9102 C1
- 9104 C1

Bottom View

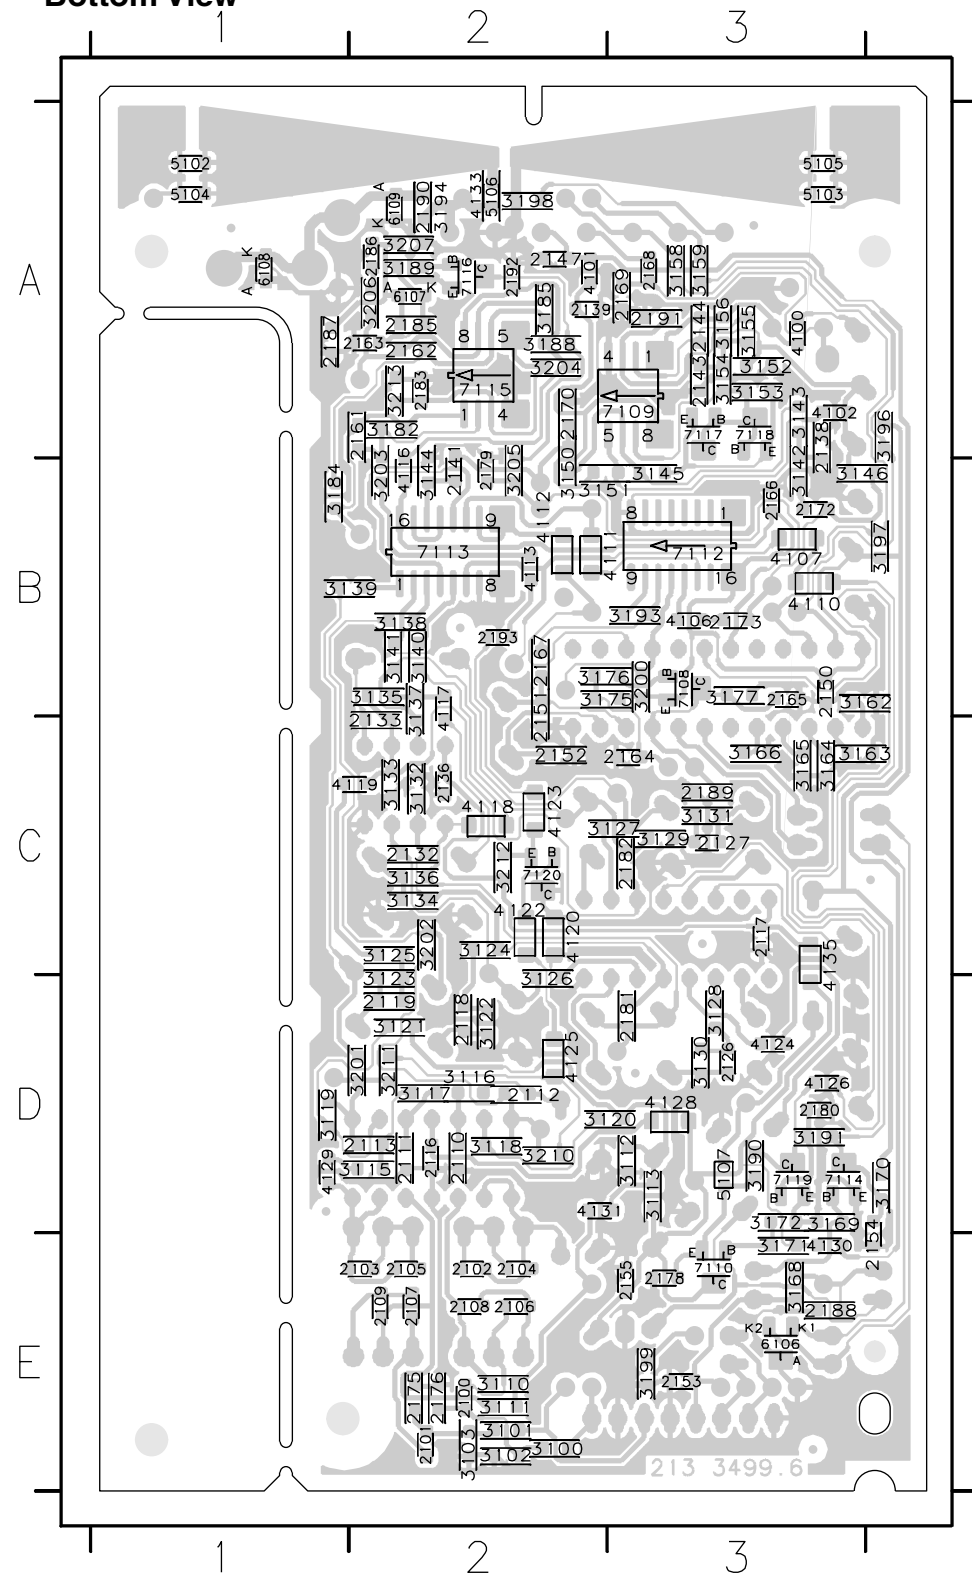

- 2100 E2
- 2101 E2
- 2102 E2
- 2103 E1
- 2104 E2
- 2105 E1
- 2106 E2
- 2107 E2
- 2108 E2
- 2109 E1
- 2110 D2
- 2111 D1
- 2112 D2
- 2113 D1
- 2116 D2
- 2117 C3
- 2118 D2
- 2119 D1
- 2126 D3
- 2127 C3
- 2132 C2
- 2133 C1
- 2136 C2
- 2138 A3
- 2139 A2
- 2141 B2
- 2143 A3
- 2144 A3
- 2147 A2
- 2150 B3
- 2151 B2
- 2152 C2
- 2153 E3
- 2154 E3
- 2155 E2
- 2161 A1
- 2162 A2
- 2163 A1
- 2164 C2
- 2165 B3
- 2166 B3
- 2167 B2
- 2168 A2
- 2169 A2
- 2170 A2
- 2172 B3
- 2173 B3
- 2175 E2
- 2176 E2
- 2178 E2
- 2179 B2
- 2180 D3
- 2181 D2
- 2182 C2
- 2183 A2
- 2185 A2
- 2186 A1
- 2187 A1
- 2188 E3
- 2189 C3
- 2190 A2
- 2191 A2
- 2192 A2
- 2193 B2
- 3100 E2
- 3101 E2
- 3102 E2
- 3103 E2
- 3110 E2
- 3111 E2
- 3112 D2
- 3113 D2
- 3115 D1
- 3116 D2
- 3117 D2
- 3118 D2
- 3119 D1
- 3121 D1
- 3122 D2
- 3123 D1
- 3124 C2
- 3125 C1
- 3126 D2
- 3127 C2
- 3128 D3
- 3129 C2
- 3130 D3
- 3131 C3
- 3132 C2
- 3133 C1
- 3134 C2
- 3135 B1
- 3136 C2
- 3137 B2
- 3138 B1
- 3139 B1
- 3140 B2
- 3141 B1
- 3142 B3
- 3143 A3
- 3144 B2
- 3145 B2
- 3146 B3
- 3150 B2
- 3151 B2
- 3152 A3
- 3153 A3
- 3154 A3
- 3155 A3
- 3156 A3
- 3158 A3
- 3159 A3
- 3162 B3
- 3163 C3
- 3164 C3
- 3165 C3
- 3166 C3
- 3168 E3
- 3169 D3
- 3170 D3
- 3171 E3
- 3172 D3
- 3175 B2
- 3176 B2
- 3177 B3
- 3182 A1
- 3184 B1
- 3185 A2
- 3188 A2
- 3189 A1
- 3190 D3
- 3191 D3
- 3193 B2
- 3194 A2
- 3196 A3
- 3197 B3
- 3198 A2
- 3199 E2
- 3201 D1
- 3202 C2
- 3203 B1
- 3204 A2
- 3205 B2
- 3206 A1
- 3207 A1
- 3210 D2
- 3211 D1
- 3212 C2
- 3213 A1
- 3200 B2
- 4100 A3
- 4101 A2
- 4102 A3
- 4106 B3
- 4107 B3
- 4110 B3
- 4112 B2
- 4117 B2
- 4118 C2
- 4119 C1
- 4120 C2
- 4122 C2
- 4123 C2
- 4124 D3
- 4125 D2
- 4126 D3
- 4128 D3
- 4129 D1
- 4130 E3
- 4131 D2
- 4133 A2
- 4135 C3
- 4111 B2
- 4113 B2
- 4116 B1
- 5102 A1
- 5103 A3
- 5104 A1
- 5105 A3
- 5106 A2
- 5107 D3
- 6106 E3
- 6107 A1
- 6108 A1
- 6109 A1
- 7108 B3
- 7109 A2
- 7110 E3
- 7113 B2
- 7114 D3
- 7115 A2
- 7116 A2
- 7117 A3
- 7118 A3
- 7119 D3
- 7120 C2
- 7112 B3
- F100 D2
- F101 D2
- F102 C2
- F103 E2
- F105 E3
- F106 E2
- F107 E3
- F108 B2
- F109 E2
- F110 D1
- F111 C2
- F112 A3
- F113 C2
- F114 D3
- F116 B3
- F118 D3
- F119 B2
- F120 E3
- F122 E3
- F123 E3
- F124 A2
- F125 A2
- F127 B3
- F128 A3
- F129 A2
- F130 A2
- F131 B2
- F132 B2
- F133 C3
- F150 A1
- F151 A3
- F152 B2
- F153 A1
- F154 B1
- F155 B2
- F156 E3
- F157 B3
- F158 C2

Auto SCAVEM

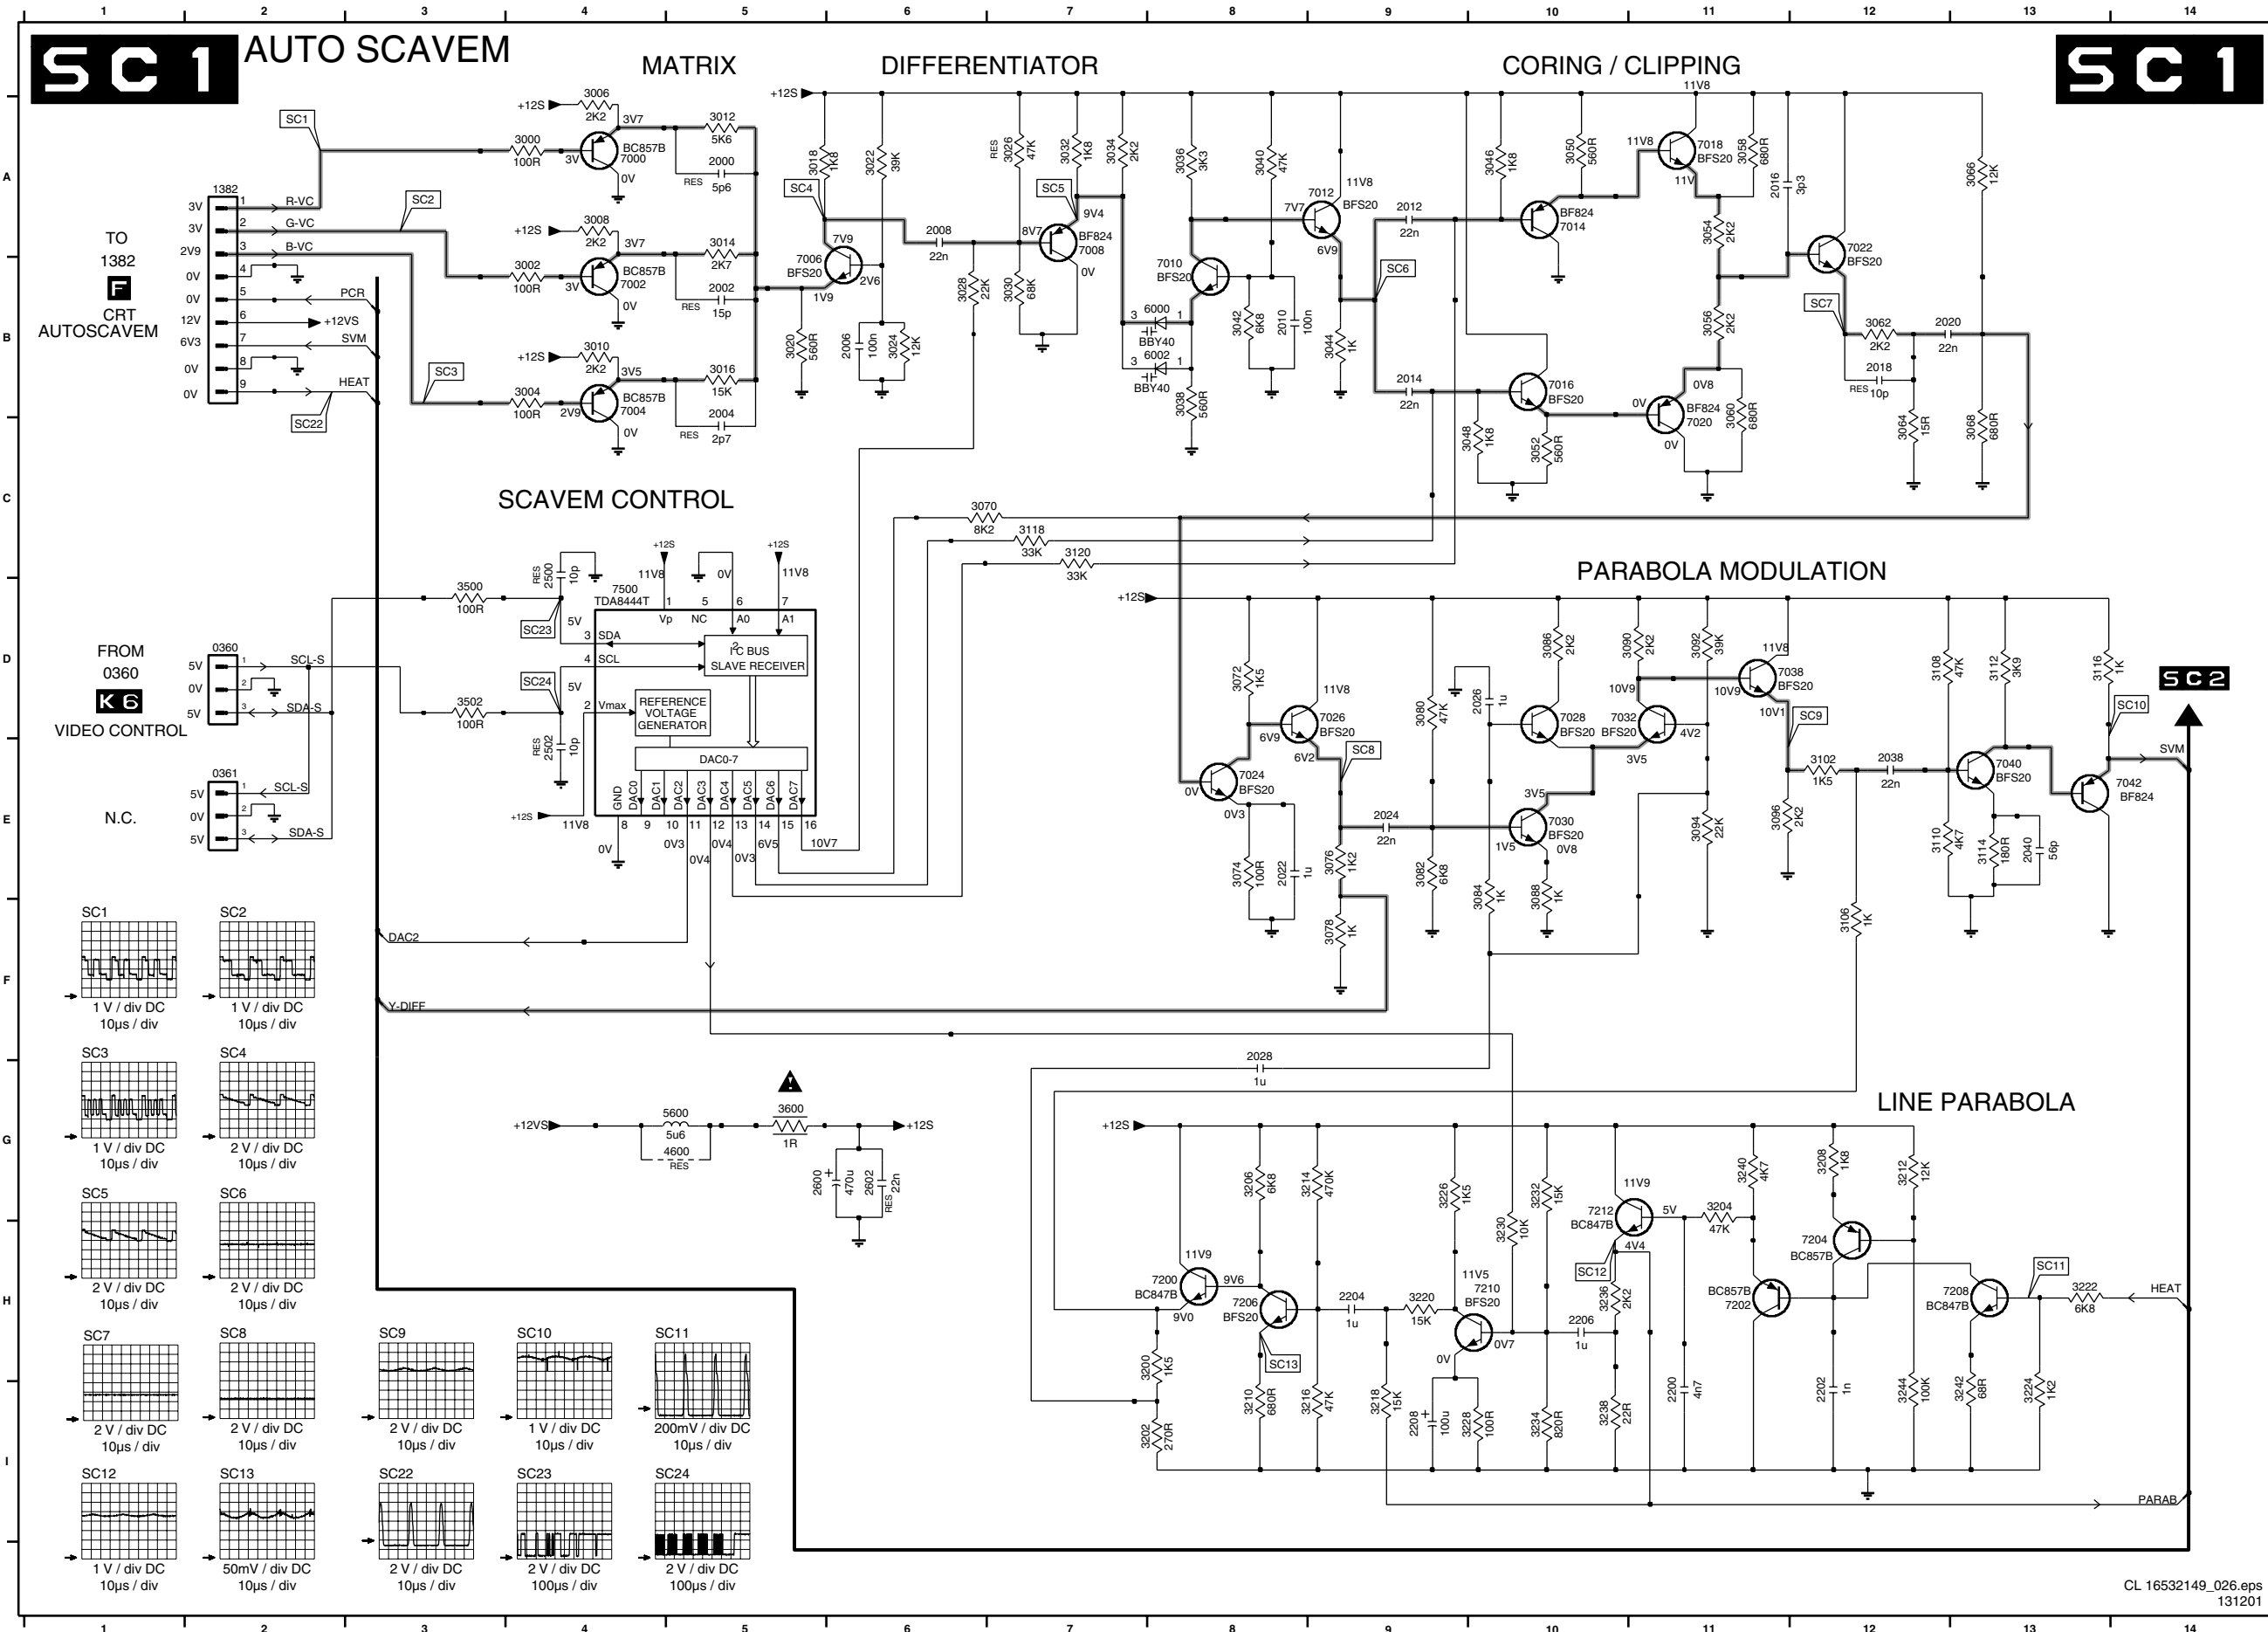

SC1

















SC2

SC1

TO
1382
CRT
AUTOSCAVEM

FROM
0360
VIDEO CONTROL


N.C.

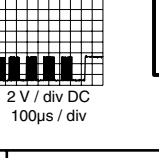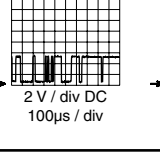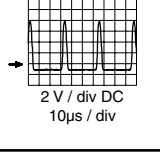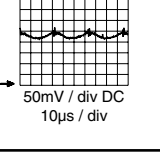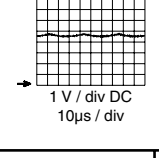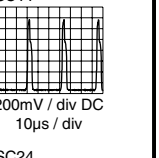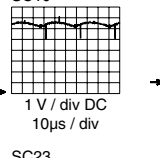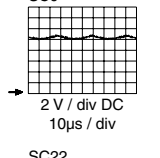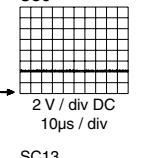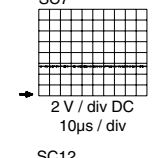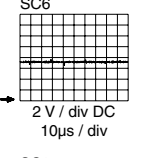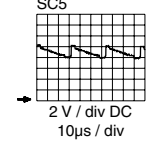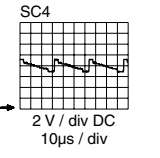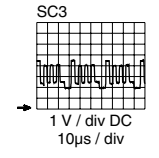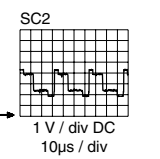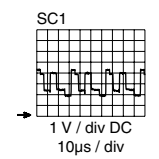


- 0360 D2
- 0361 E2
- 1382 A2
- 2000 A5
- 2002 B5
- 2004 B5
- 2006 B6
- 2008 A6
- 2010 B8
- 2012 A9
- 2014 B9
- 2016 A11
- 2018 B12
- 2020 B12
- 2022 E8
- 2024 E9
- 2026 D10
- 2028 F8
- 2038 E12
- 2040 E13
- 2200 I11
- 2202 I12
- 2204 H9
- 2206 H10
- 2208 I9
- 2500 C4
- 2502 E4
- 2600 G5
- 2602 G6
- 3000 A4
- 3002 B4
- 3004 B4
- 3006 A4
- 3010 B4
- 3012 A5
- 3014 A5
- 3016 B5
- 3018 A5
- 3020 B5
- 3022 A6
- 3024 B6
- 3026 A7
- 3028 B6
- 3030 B7
- 3032 A7
- 3034 A7
- 3036 A8
- 3038 B8
- 3040 A8
- 3042 B8
- 3044 B9
- 3046 A10
- 3048 C10
- 3050 A10
- 3052 C10
- 3054 A11
- 3056 B11
- 3058 A11
- 3060 B11
- 3062 B12
- 3064 C12
- 3066 A13
- 3068 C13
- 3070 C6
- 3072 D8
- 3074 E8
- 3076 E9
- 3078 F9
- 3080 D9
- 3082 E9
- 3084 E10
- 3086 D10
- 3088 E10
- 3090 D11
- 3092 D11
- 3094 E11
- 3096 E11
- 3102 E12
- 3106 F12
- 3108 D12
- 3110 E12
- 3112 D13
- 3114 E13
- 3116 D13
- 3118 C7
- 3120 C7
- 3200 H8
- 3202 I8
- 3204 G11
- 3206 G8
- 3208 G12
- 3210 I8
- 3212 G12
- 3214 G9
- 3216 I9
- 3218 I9
- 3220 H9
- 3222 H13
- 3224 I13
- 3226 G9
- 3228 I10
- 3230 H10
- 3232 G10
- 3234 I10
- 3236 H10
- 3238 I10
- 3240 G11
- 3242 H13
- 3244 I12
- 3500 D3
- 3502 D3
- 3600 G5
- 3999 H5
- 4600 G5
- 5600 G5
- 6000 B8
- 6002 B8
- 7000 A4
- 7002 B4
- 7004 B4
- 7006 B5
- 7008 A7
- 7010 B8
- 7012 A9
- 7014 A10
- 7016 B10
- 7018 A11
- 7020 B11
- 7022 A12
- 7024 E8
- 7026 D9
- 7028 D10
- 7030 E10
- 7032 D11
- 7038 D11
- 7040 E13
- 7042 E14
- 7200 H8
- 7202 H11
- 7204 H12
- 7206 H8
- 7208 H13
- 7210 H10
- 7212 G10
- 7500 D4

Auto SCAVEM

2300 B5	2410 E5	2420 E8	3304 A6	3316 A7	3326 B8	3404 E2	3420 E4	3430 D5	3440 D7	3450 E8	3460 E9	7402 D3	7416 E6
2302 B6	2412 E5	2422 E9	3306 B6	3318 B7	3328 B9	3406 D3	3422 D4	3432 E5	3442 E7	3452 D8	7300 A5	7408 D4	7418 D7
2304 B7	2414 E6	2424 D9	3308 A6	3320 B7	3330 A9	3408 E3	3424 D4	3434 E5	3444 D7	3454 E8	7302 B6	7410 D5	7420 D8
2306 A8	2416 E7	3300 B5	3310 B6	3322 A8	3400 E2	3410 D3	3426 E4	3436 D6	3446 E7	3456 E9	7304 A8	7412 E4	7422 D9
2400 D2	2418 D8	3302 B5	3312 B7	3324 A8	3402 D2	3418 D4	3428 C5	3438 E6	3448 D8	3458 D9	7400 D2	7414 D6	

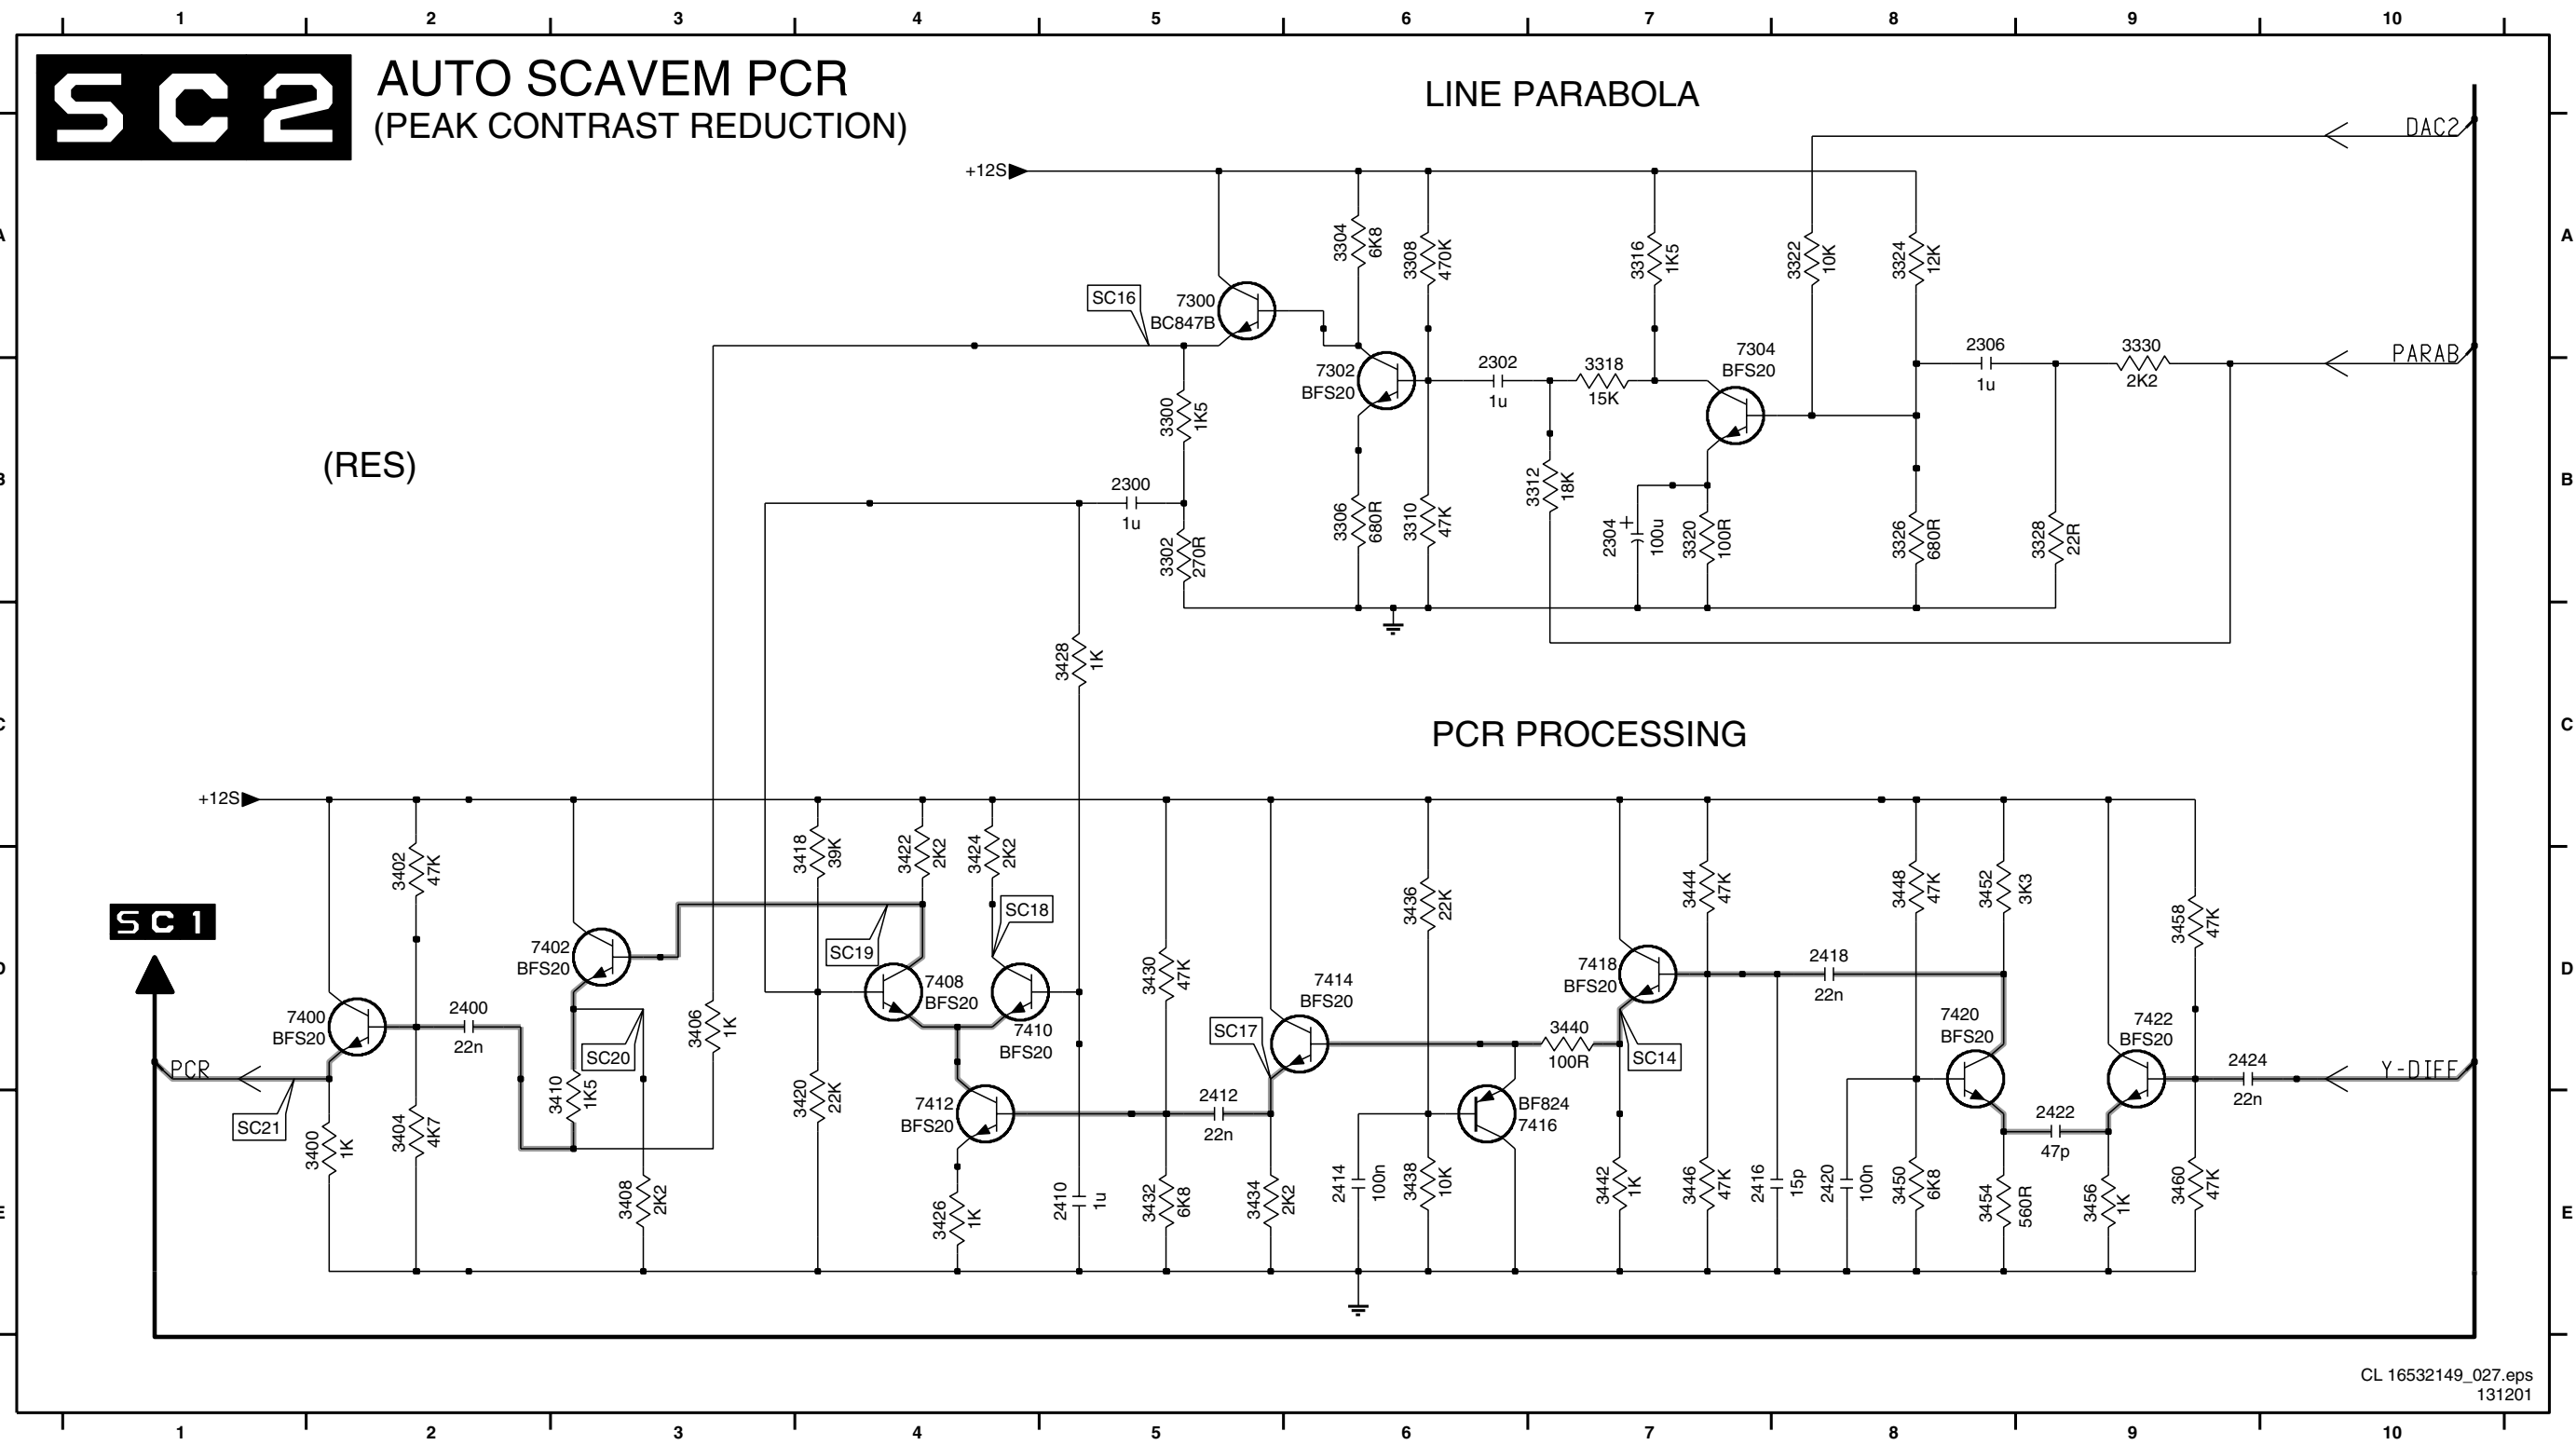


Layout Auto SCAVEM (Top View)

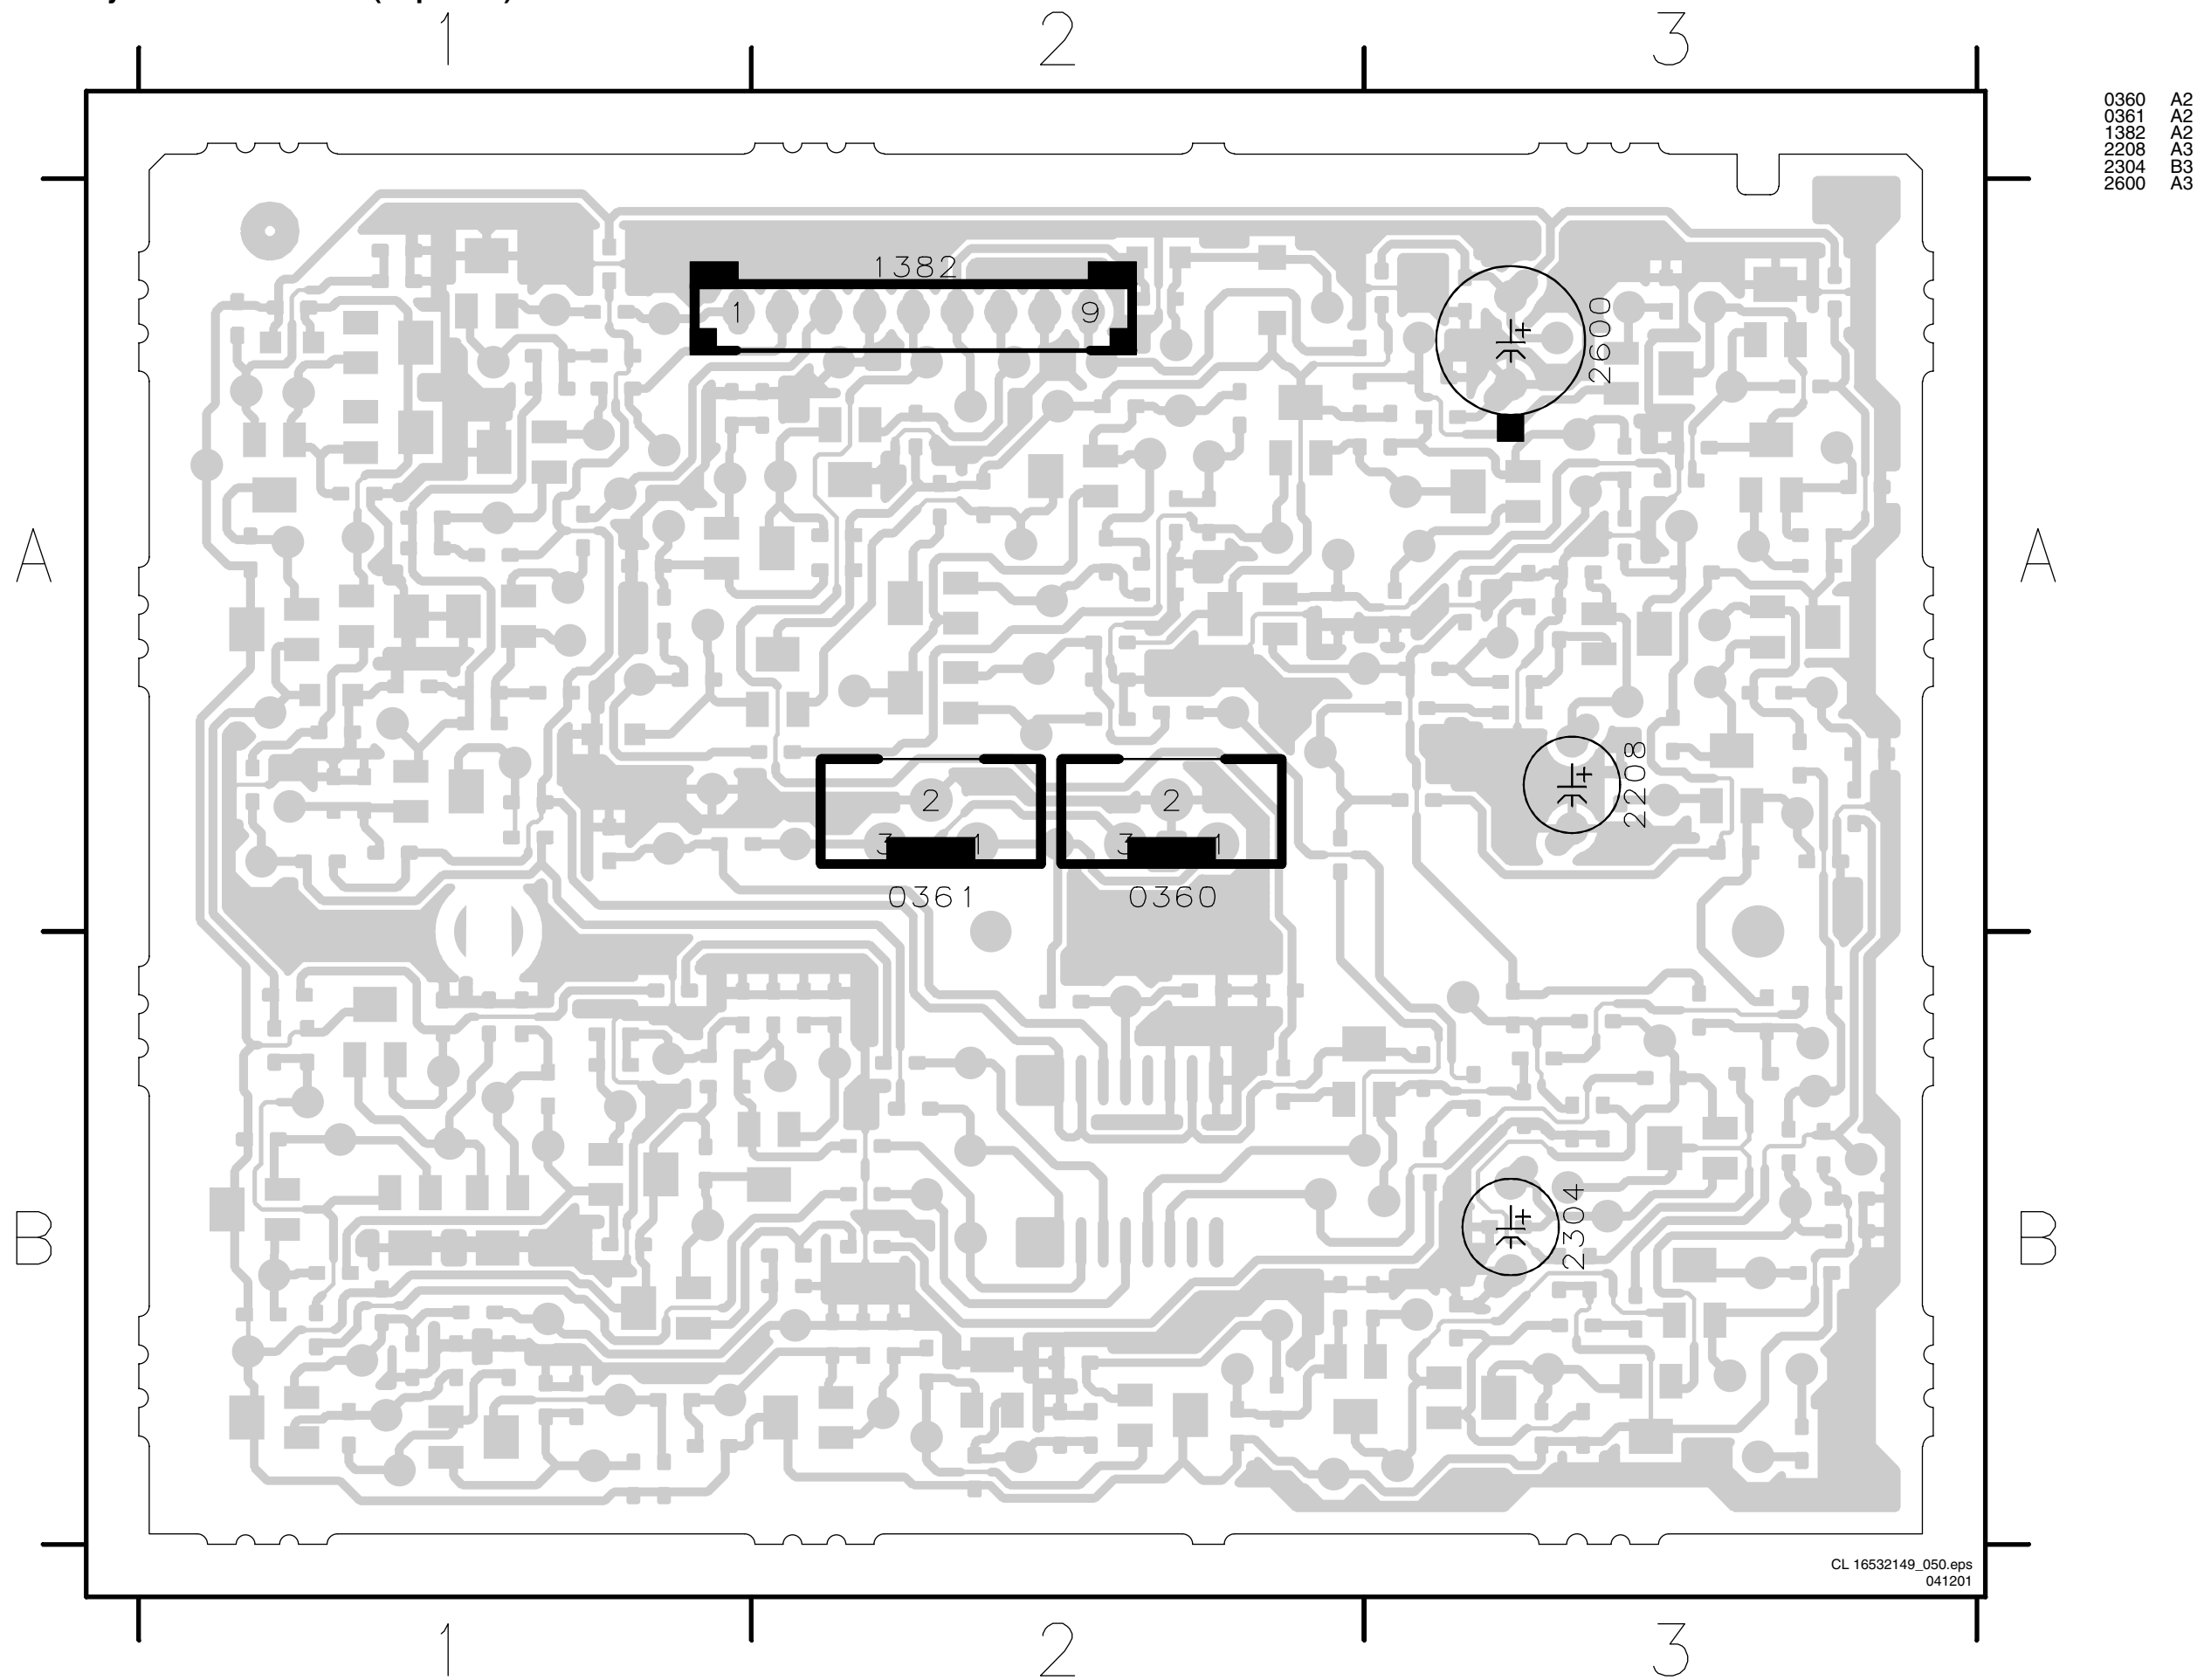


- 0360 A2
- 0361 A2
- 1382 A2
- 2208 A3
- 2304 B3
- 2600 A3

Layout Auto SCAVEM (Bottom View)

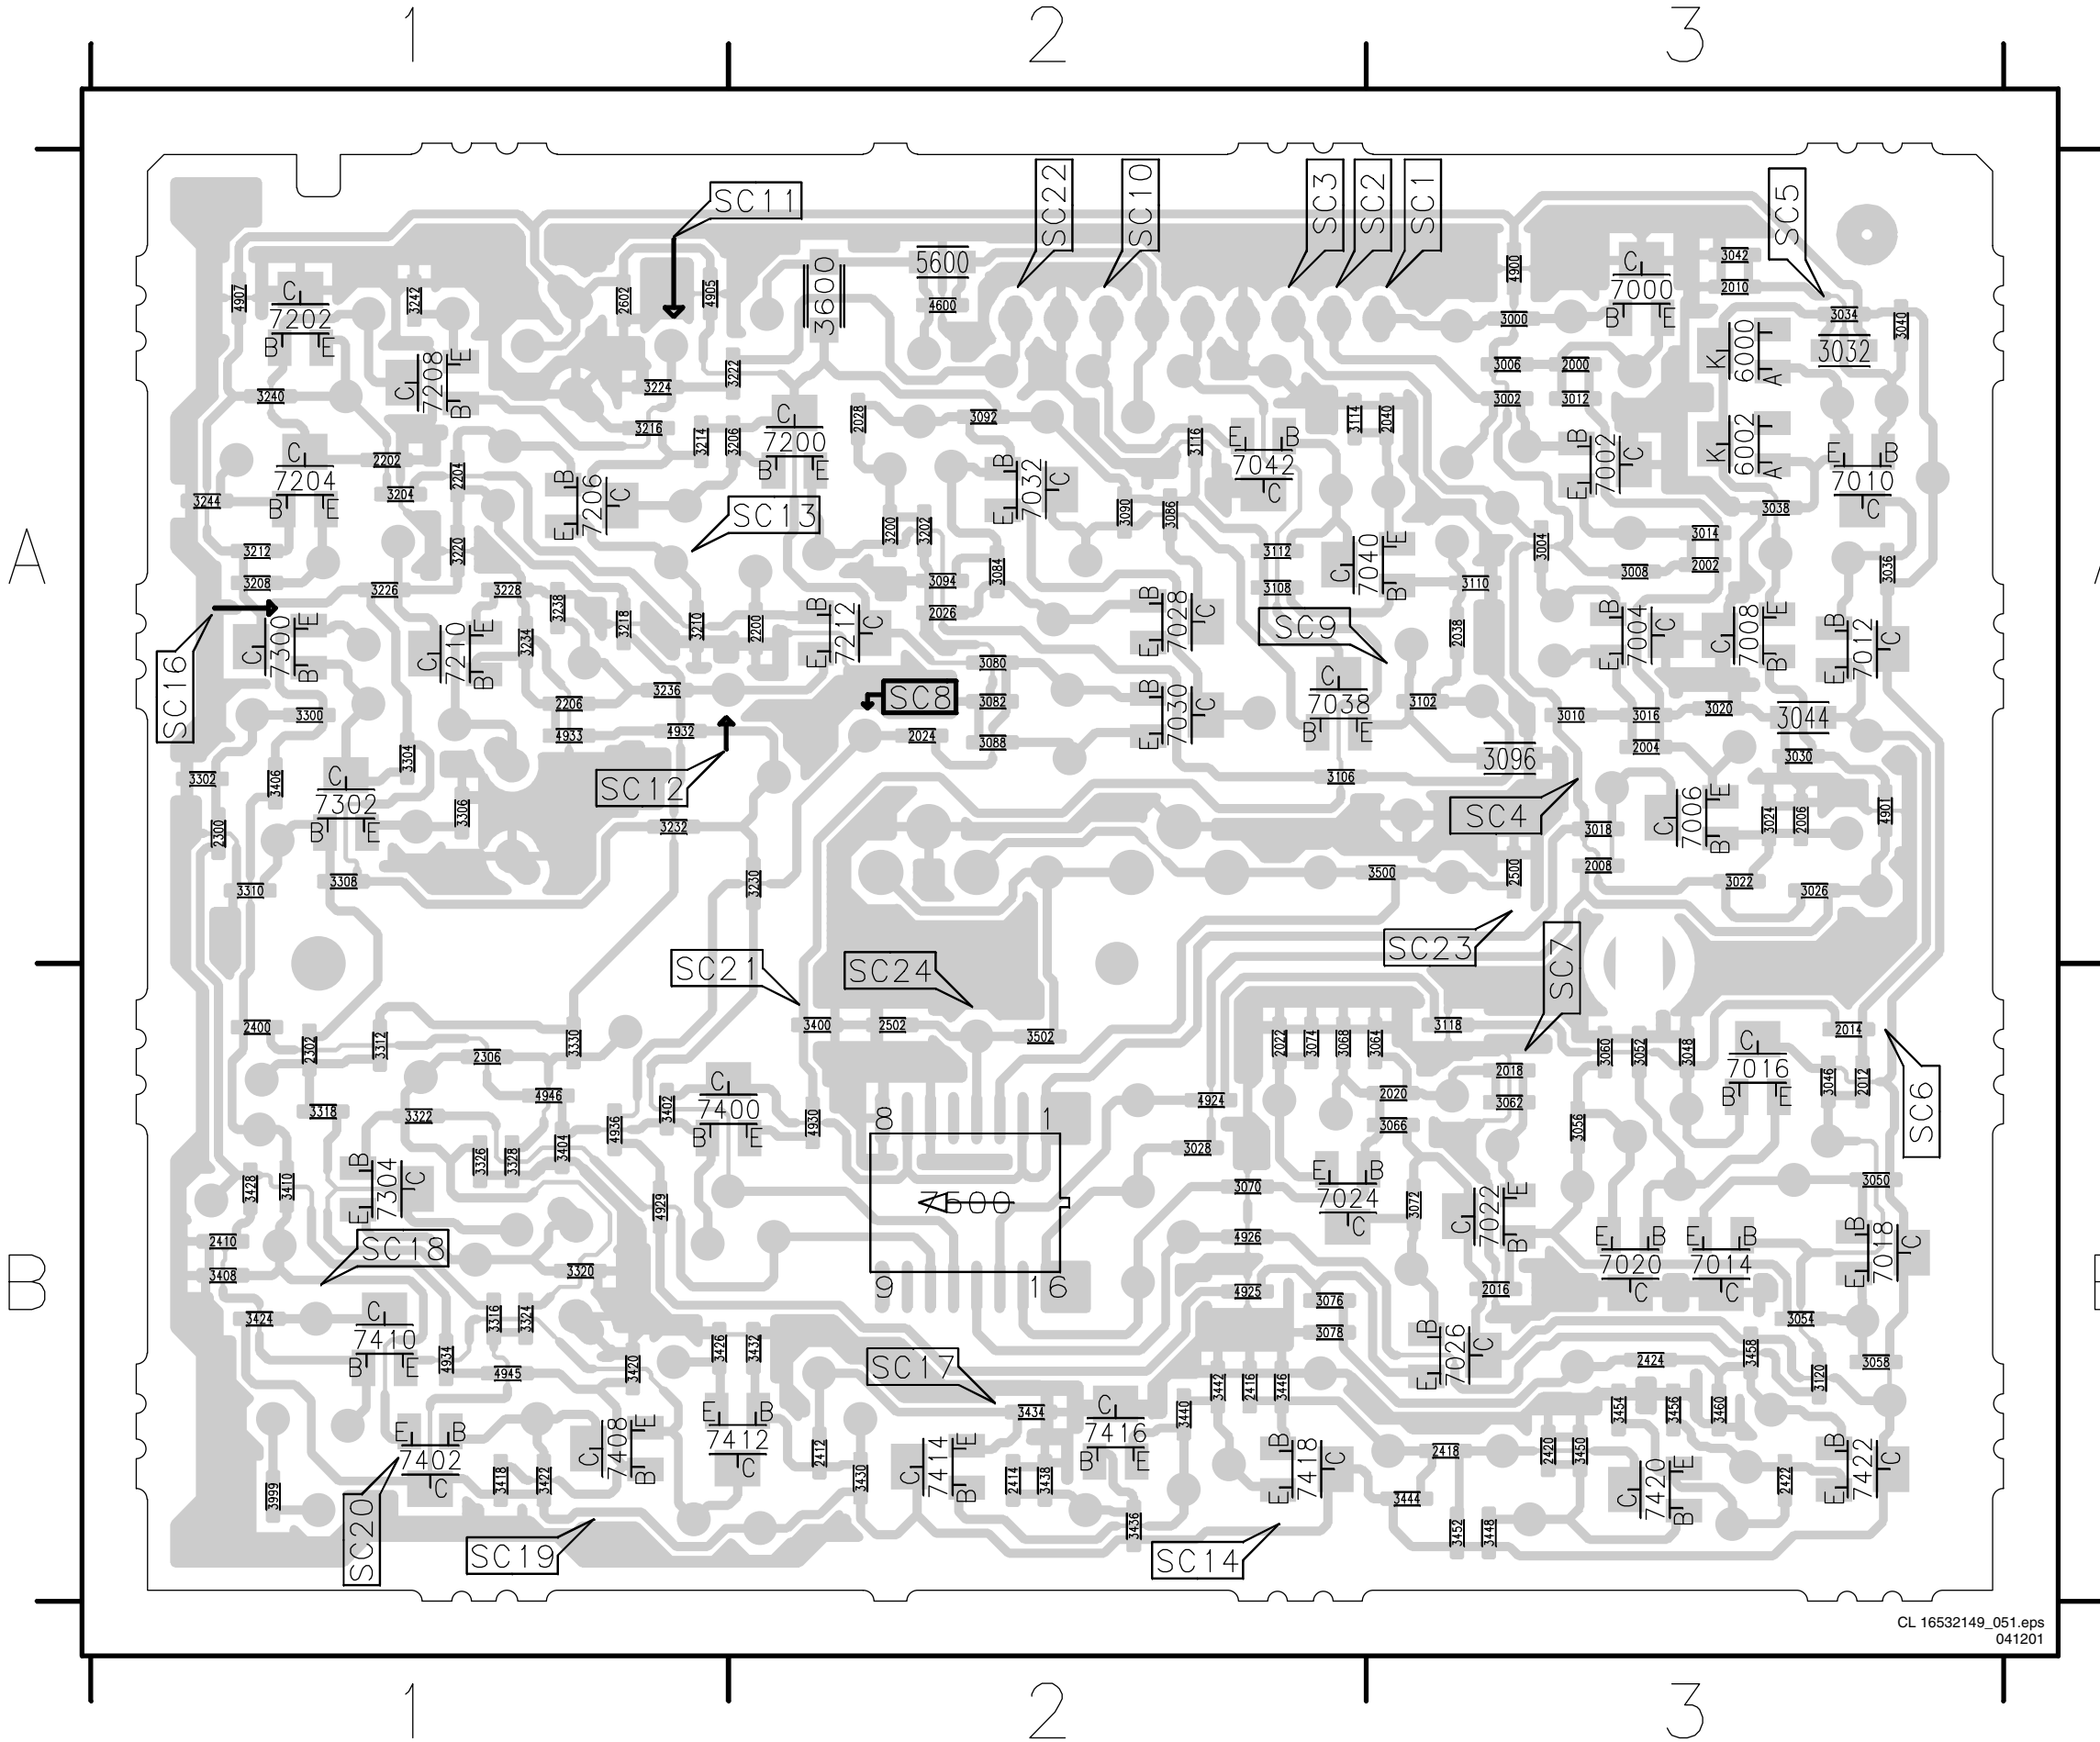

2000	A3	3078	B2	3442	B2
2002	A3	3080	A2	3444	B3
2004	A3	3082	A2	3446	B2
2006	A3	3084	A2	3448	B3
2008	A3	3086	A2	3450	B3
2010	A3	3088	A2	3452	B3
2012	B3	3090	A2	3454	B3
2014	B3	3092	A2	3456	B3
2016	B3	3094	A2	3458	B3
2018	B3	3096	A3	3460	B3
2020	B3	3102	A3	3500	A3
2022	B2	3106	A2	3502	B2
2024	A2	3108	A2	3600	A2
2026	A2	3110	A3	3999	B1
2028	A2	3112	A2	4600	A2
2038	A3	3114	A2	4900	A3
2040	A3	3116	A2	4901	A3
2200	A2	3118	B3	4905	A1
2202	A1	3120	B3	4907	A1
2204	A1	3200	A2	4924	B2
2206	A1	3202	A2	4925	B2
2300	A1	3204	A1	4926	B2
2302	B1	3206	A2	4929	B1
2306	B1	3208	A1	4930	B2
2400	B1	3210	A1	4932	A1
2410	B1	3212	A1	4933	A1
2412	B2	3214	A1	4934	B1
2414	B2	3216	A1	4936	B1
2416	B2	3218	A1	4945	B1
2418	B3	3220	A1	4946	B1
2420	B3	3222	A2	5600	A2
2422	B3	3224	A1	6000	A3
2424	B3	3226	A1	6002	A3
2500	A3	3228	A1	7000	A3
2502	B2	3230	A2	7002	A3
2602	A1	3232	A1	7004	A3
3000	A3	3234	A1	7006	A3
3002	A3	3236	A1	7008	A3
3004	A3	3238	A1	7010	A3
3006	A3	3240	A1	7012	A3
3008	A3	3242	A1	7014	B3
3010	A3	3244	A1	7016	B3
3012	A3	3300	A1	7018	B3
3014	A3	3302	A1	7020	B3
3016	A3	3304	A1	7022	B3
3018	A3	3306	A1	7024	B2
3020	A3	3308	A1	7026	B3
3022	A3	3310	A1	7028	A2
3024	A3	3312	B1	7030	A2
3026	A3	3316	B1	7032	A2
3028	B2	3318	B1	7038	A2
3030	A3	3320	B1	7040	A3
3032	A3	3322	B1	7042	A2
3034	A3	3324	B1	7200	A2
3036	A3	3326	B1	7202	A1
3038	A3	3328	B1	7204	A1
3040	A3	3330	B1	7206	A1
3042	A3	3400	B2	7208	A1
3044	A3	3402	B1	7210	A1
3046	B3	3404	B1	7212	A2
3048	B3	3406	A1	7300	A1
3050	B3	3408	B1	7302	A1
3052	B3	3410	B1	7304	B1
3054	B3	3418	B1	7400	B1
3056	B3	3420	B1	7402	B1
3058	B3	3422	B1	7408	B1
3060	B3	3424	B1	7410	B1
3062	B3	3426	B1	7412	B2
3064	B3	3428	B1	7414	B2
3066	B3	3430	B2	7416	B2
3068	B2	3432	B2	7418	B2
3070	B2	3434	B2	7420	B3
3072	B3	3436	B2	7422	B3
3074	B2	3438	B2	7500	B2
3076	B2	3440	B2		


Wireless Surround Receiver

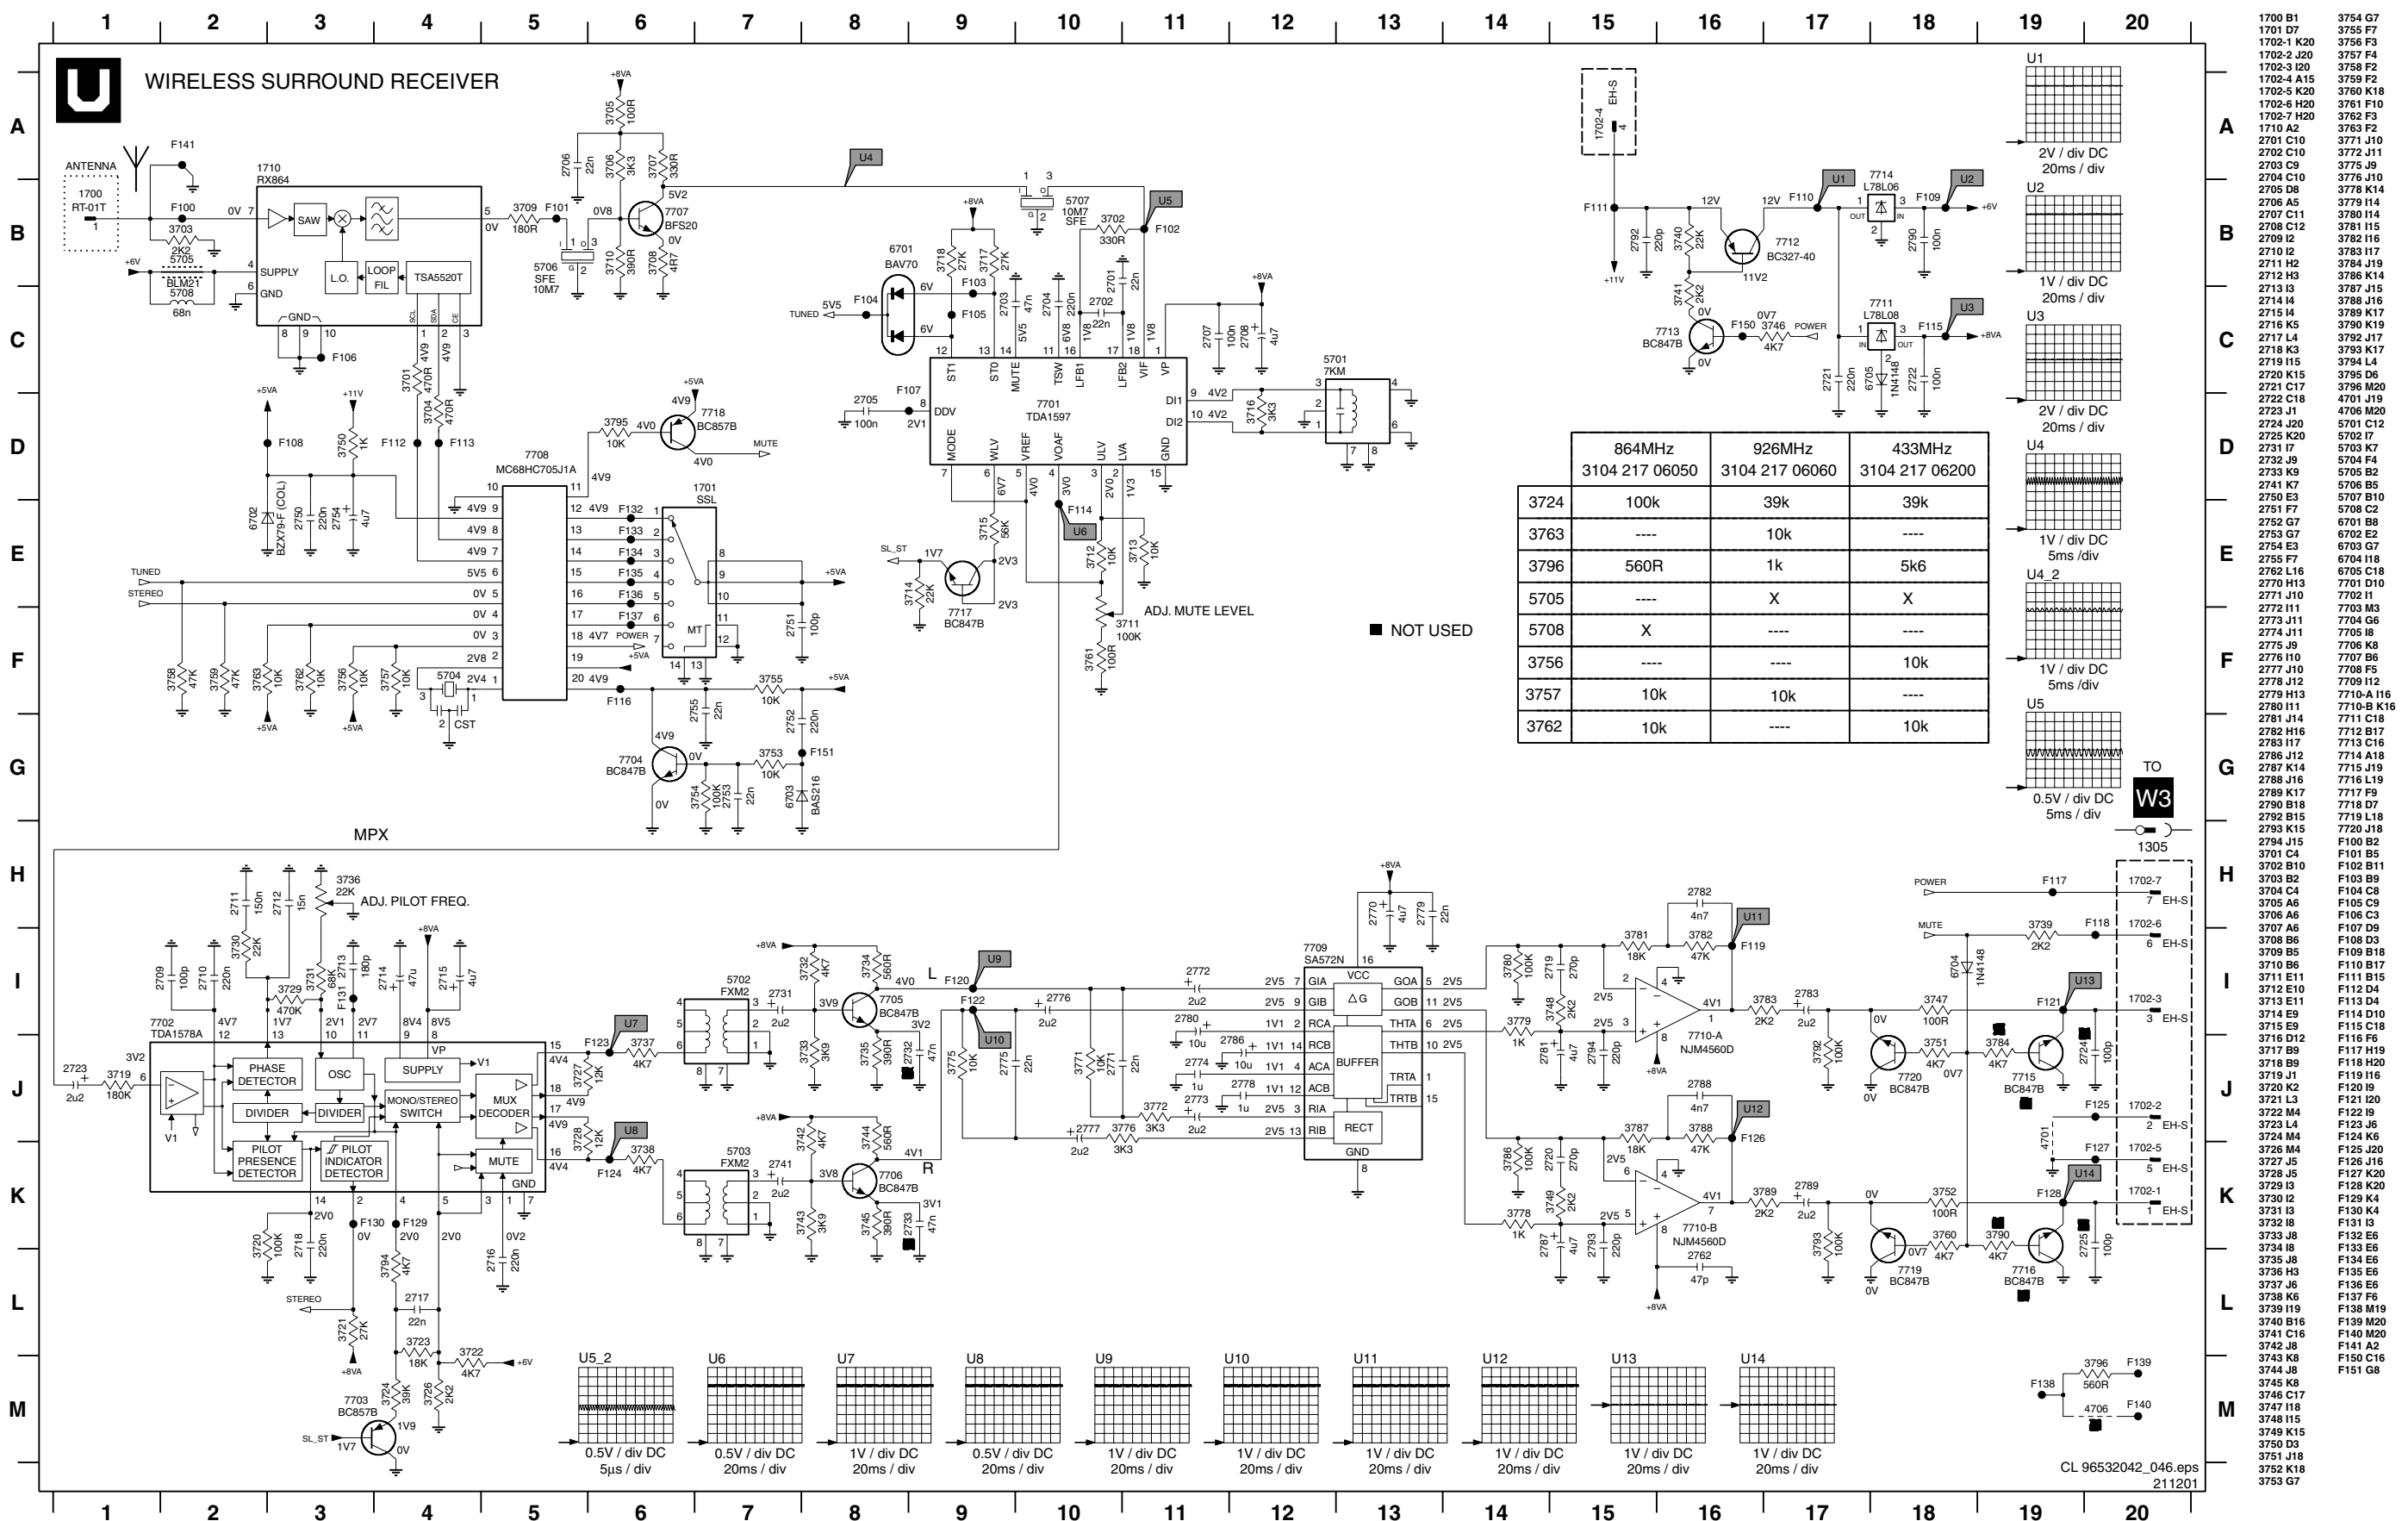

	864MHz 3104 217 06050	926MHz 3104 217 06060	433MHz 3104 217 06200
3724	100k	39k	39k
3763	---	10k	---
3796	560R	1k	5k6
5705	---	X	X
5708	X	---	---
3757	10k	10k	---
3762	10k	---	10k

- 1700 B1
- 1701 D7
- 1702-1 K20
- 1702-2 J20
- 1702-3 I20
- 1702-4 A15
- 1702-5 K20
- 1702-6 H20
- 1702-7 H20
- 1710 A2
- 1710 C10
- 1710 C10
- 1702 C9
- 1704 C10
- 1705 D8
- 1706 A5
- 1707 C11
- 1708 C12
- 1709 I2
- 1710 I2
- 1711 H2
- 1712 H3
- 1713 I3
- 1714 I4
- 1715 I4
- 1716 K5
- 1717 L4
- 1718 K3
- 1719 I5
- 1720 K15
- 1721 C17
- 1722 C18
- 1723 J1
- 1724 J20
- 1725 K20
- 1731 I7
- 1732 J9
- 1733 K9
- 1741 K7
- 1750 E3
- 1751 F7
- 1752 F7
- 1753 G7
- 1754 E3
- 1755 F7
- 1762 L16
- 1770 H13
- 1771 J10
- 1772 I11
- 1773 J11
- 1774 J11
- 1775 J9
- 1776 I10
- 1777 J10
- 1778 J12
- 1779 H13
- 1780 I11
- 1781 J14
- 1782 H16
- 1783 I17
- 1784 A18
- 1787 K14
- 1788 J16
- 1789 K17
- 1790 B18
- 1792 B15
- 1793 K15
- 1794 J15
- 1701 B5
- 1702 B11
- 1703 B2
- 1704 C8
- 1705 C9
- 1706 A6
- 1707 A6
- 1708 D3
- 1709 B5
- 1710 B6
- 1711 B15
- 1712 E10
- 1713 E11
- 1714 D10
- 1715 C18
- 1716 F6
- 1717 B9
- 1718 B9
- 1719 H10
- 1720 I9
- 1721 I20
- 1722 M4
- 1723 L4
- 1724 M4
- 1725 M4
- 1727 J5
- 1728 J5
- 1729 I3
- 1728 K20
- 1730 I2
- 1731 I3
- 1732 I8
- 1733 J8
- 1734 I8
- 1735 J8
- 1736 H3
- 1737 J6
- 1738 K6
- 1739 I19
- 1740 B16
- 1741 C16
- 1742 J8
- 1743 K8
- 1744 J8
- 1745 K8
- 1746 C17
- 1747 I18
- 1748 I15
- 1749 K15
- 1750 D9
- 1751 J18
- 1752 K18
- 1753 G7
- 3754 G7
- 3755 F7
- 3756 F3
- 3757 F4
- 3758 F2
- 3759 F2
- 3760 K18
- 3761 F10
- 3762 F3
- 3763 F2
- 3771 J10
- 3772 J11
- 3773 J9
- 3774 J10
- 3775 J9
- 3776 J10
- 3777 J10
- 3778 J10
- 3779 J10
- 3780 J10
- 3781 J10
- 3782 I16
- 3783 I16
- 3784 J14
- 3785 J14
- 3786 B5
- 3787 B10
- 3788 J16
- 3789 J17
- 3790 B18
- 3791 B5
- 3792 B15
- 3793 K15
- 3794 J15
- 3795 B18
- 3796 F3
- 3797 B10
- 3798 C2
- 3799 I12
- 3800 B18
- 3801 B5
- 3802 B10
- 3803 B2
- 3804 C8
- 3805 C9
- 3806 A6
- 3807 A6
- 3808 D3
- 3809 B5
- 3810 B6
- 3811 B15
- 3812 E10
- 3813 E11
- 3814 D10
- 3815 C18
- 3816 F6
- 3817 B9
- 3818 B9
- 3819 H10
- 3820 K2
- 3821 L2
- 3822 M4
- 3823 L4
- 3824 M4
- 3825 M4
- 3827 J5
- 3828 J5
- 3829 I3
- 3828 K20
- 3830 I2
- 3831 I3
- 3832 I8
- 3833 J8
- 3834 I8
- 3835 J8
- 3836 H3
- 3837 J6
- 3838 K6
- 3839 I19
- 3840 B16
- 3841 C16
- 3842 J8
- 3843 K8
- 3844 J8
- 3845 K8
- 3846 C17
- 3847 I18
- 3848 I15
- 3849 K15
- 3850 D9
- 3851 J18
- 3852 K18
- 3853 G7


Layout Wireless Surround Receiver (Top View)

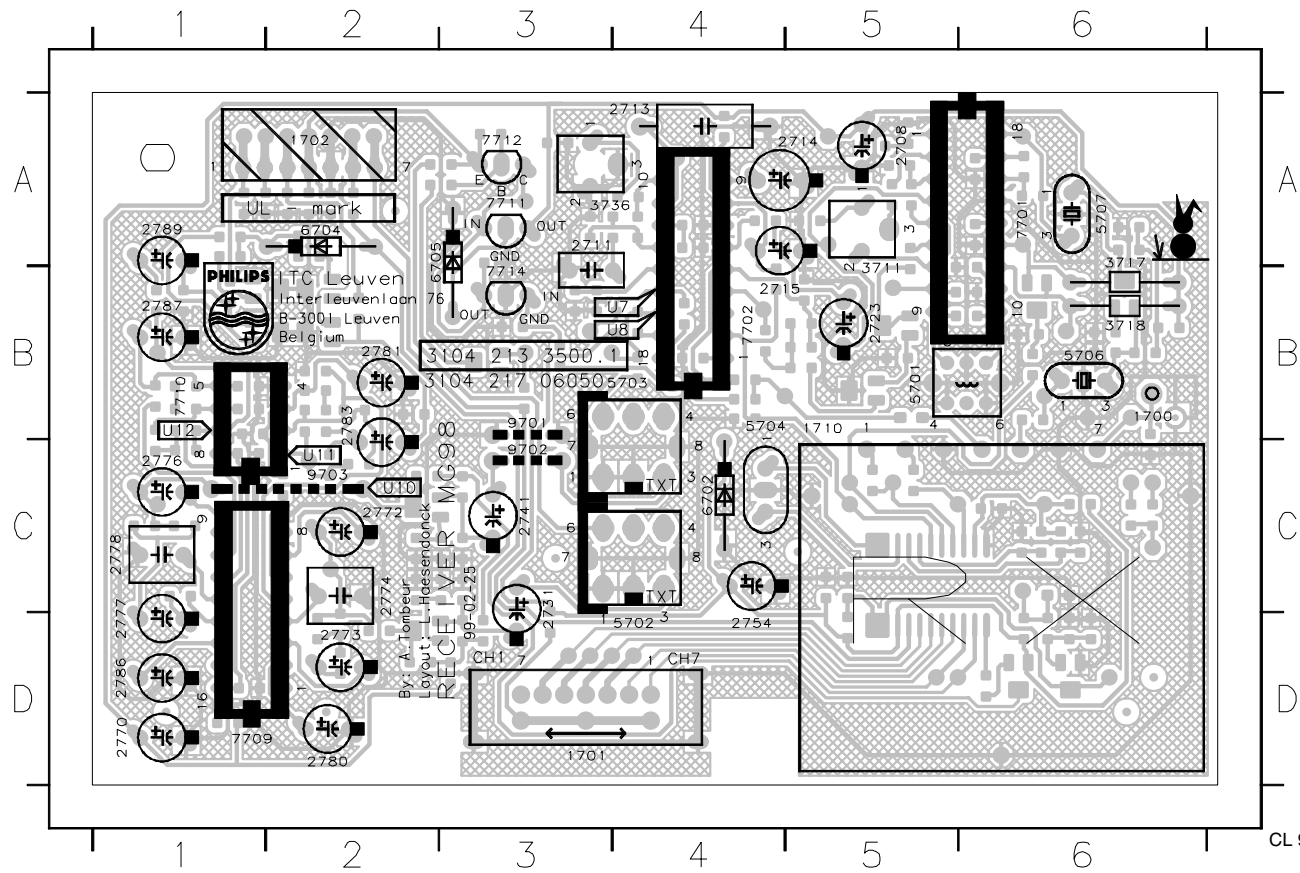

1700
1701
1702
1703
1704
1705
1706
1707
1708
1709
1710
1711
1712
1713
1714
1715
1716
1717
1718
1719
1720
1721
1722
1723
1724
1725
1726
1727
1728
1729
1730
1731
1732
1733
1734
1735
1736
1737
1738
1739
1740
1741
1742
1743
1744
1745
1746
1747
1748
1749
1750
1751
1752
1753
1754
1755
1756
1757
1758
1759
1760
1761
1762
1763
1764
1765
1766
1767
1768
1769
1770
1771
1772
1773
1774
1775
1776
1777
1778
1779
1780
1781
1782
1783
1784
1785
1786
1787
1788
1789
1790
1791
1792
1793
1794
1795
1796
1797
1798
1799
1800

CL 96532042_051.eps
020699


Layout Wireless Surround Receiver (Bottom View)

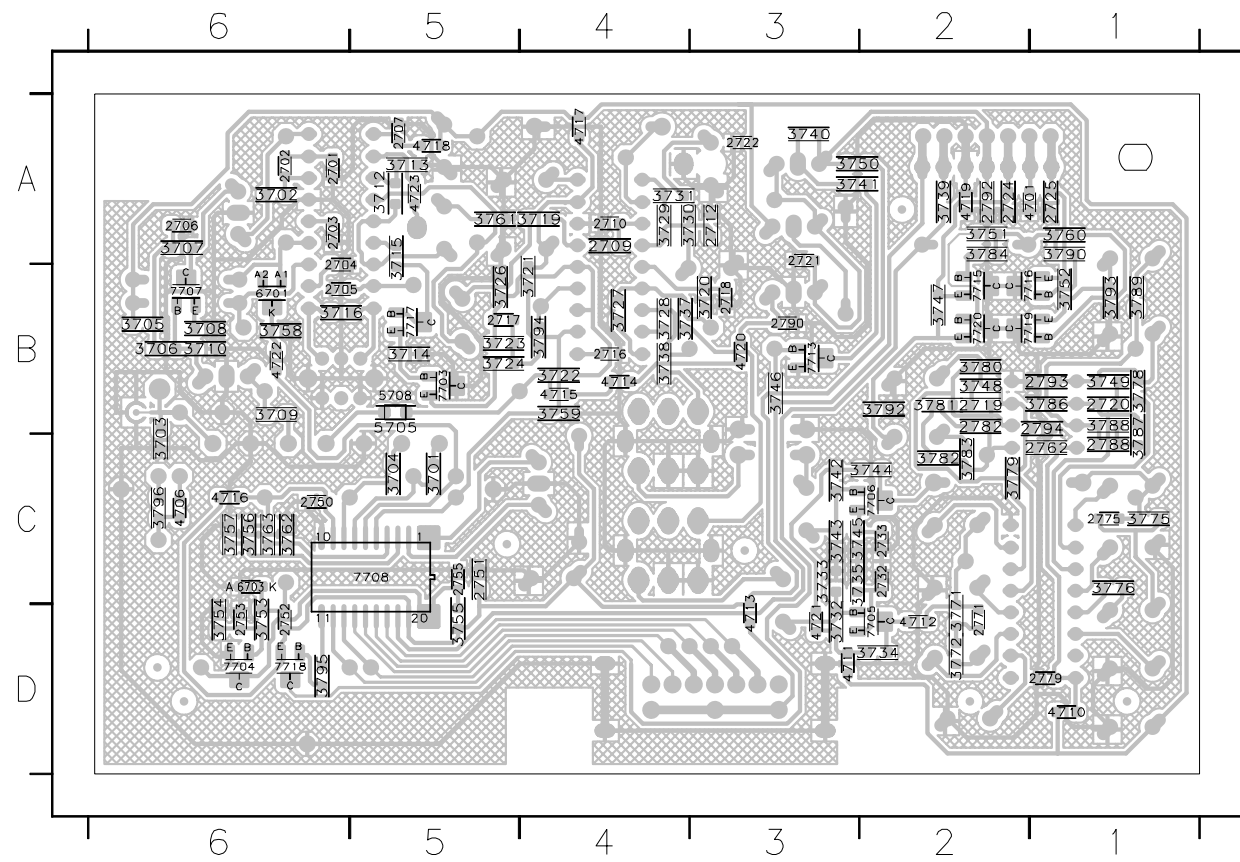

2701
2702
2703
2704
2705
2706
2707
2708
2709
2710
2711
2712
2713
2714
2715
2716
2717
2718
2719
2720
2721
2722
2723
2724
2725
2726
2727
2728
2729
2730
2731
2732
2733
2734
2735
2736
2737
2738
2739
2740
2741
2742
2743
2744
2745
2746
2747
2748
2749
2750
2751
2752
2753
2754
2755
2756
2757
2758
2759
2760
2761
2762
2763
2764
2765
2766
2767
2768
2769
2770
2771
2772
2773
2774
2775
2776
2777
2778
2779
2780
2781
2782
2783
2784
2785
2786
2787
2788
2789
2790
2791
2792
2793
2794
2795
2796
2797
2798
2799
2800
2801
2802
2803
2804
2805
2806
2807
2808
2809
2810
2811
2812
2813
2814
2815
2816
2817
2818
2819
2820
2821
2822
2823
2824
2825
2826
2827
2828
2829
2830
2831
2832
2833
2834
2835
2836
2837
2838
2839
2840
2841
2842
2843
2844
2845
2846
2847
2848
2849
2850
2851
2852
2853
2854
2855
2856
2857
2858
2859
2860
2861
2862
2863
2864
2865
2866
2867
2868
2869
2870
2871
2872
2873
2874
2875
2876
2877
2878
2879
2880
2881
2882
2883
2884
2885
2886
2887
2888
2889
2890
2891
2892
2893
2894
2895
2896
2897
2898
2899
2900
2901
2902
2903
2904
2905
2906
2907
2908
2909
2910
2911
2912
2913
2914
2915
2916
2917
2918
2919
2920
2921
2922
2923
2924
2925
2926
2927
2928
2929
2930
2931
2932
2933
2934
2935
2936
2937
2938
2939
2940
2941
2942
2943
2944
2945
2946
2947
2948
2949
2950
2951
2952
2953
2954
2955
2956
2957
2958
2959
2960
2961
2962
2963
2964
2965
2966
2967
2968
2969
2970
2971
2972
2973
2974
2975
2976
2977
2978
2979
2980
2981
2982
2983
2984
2985
2986
2987
2988
2989
2990
2991
2992
2993
2994
2995
2996
2997
2998
2999
3000

CL 96532042_052.eps
191201

Active Speaker Box: Amplifier

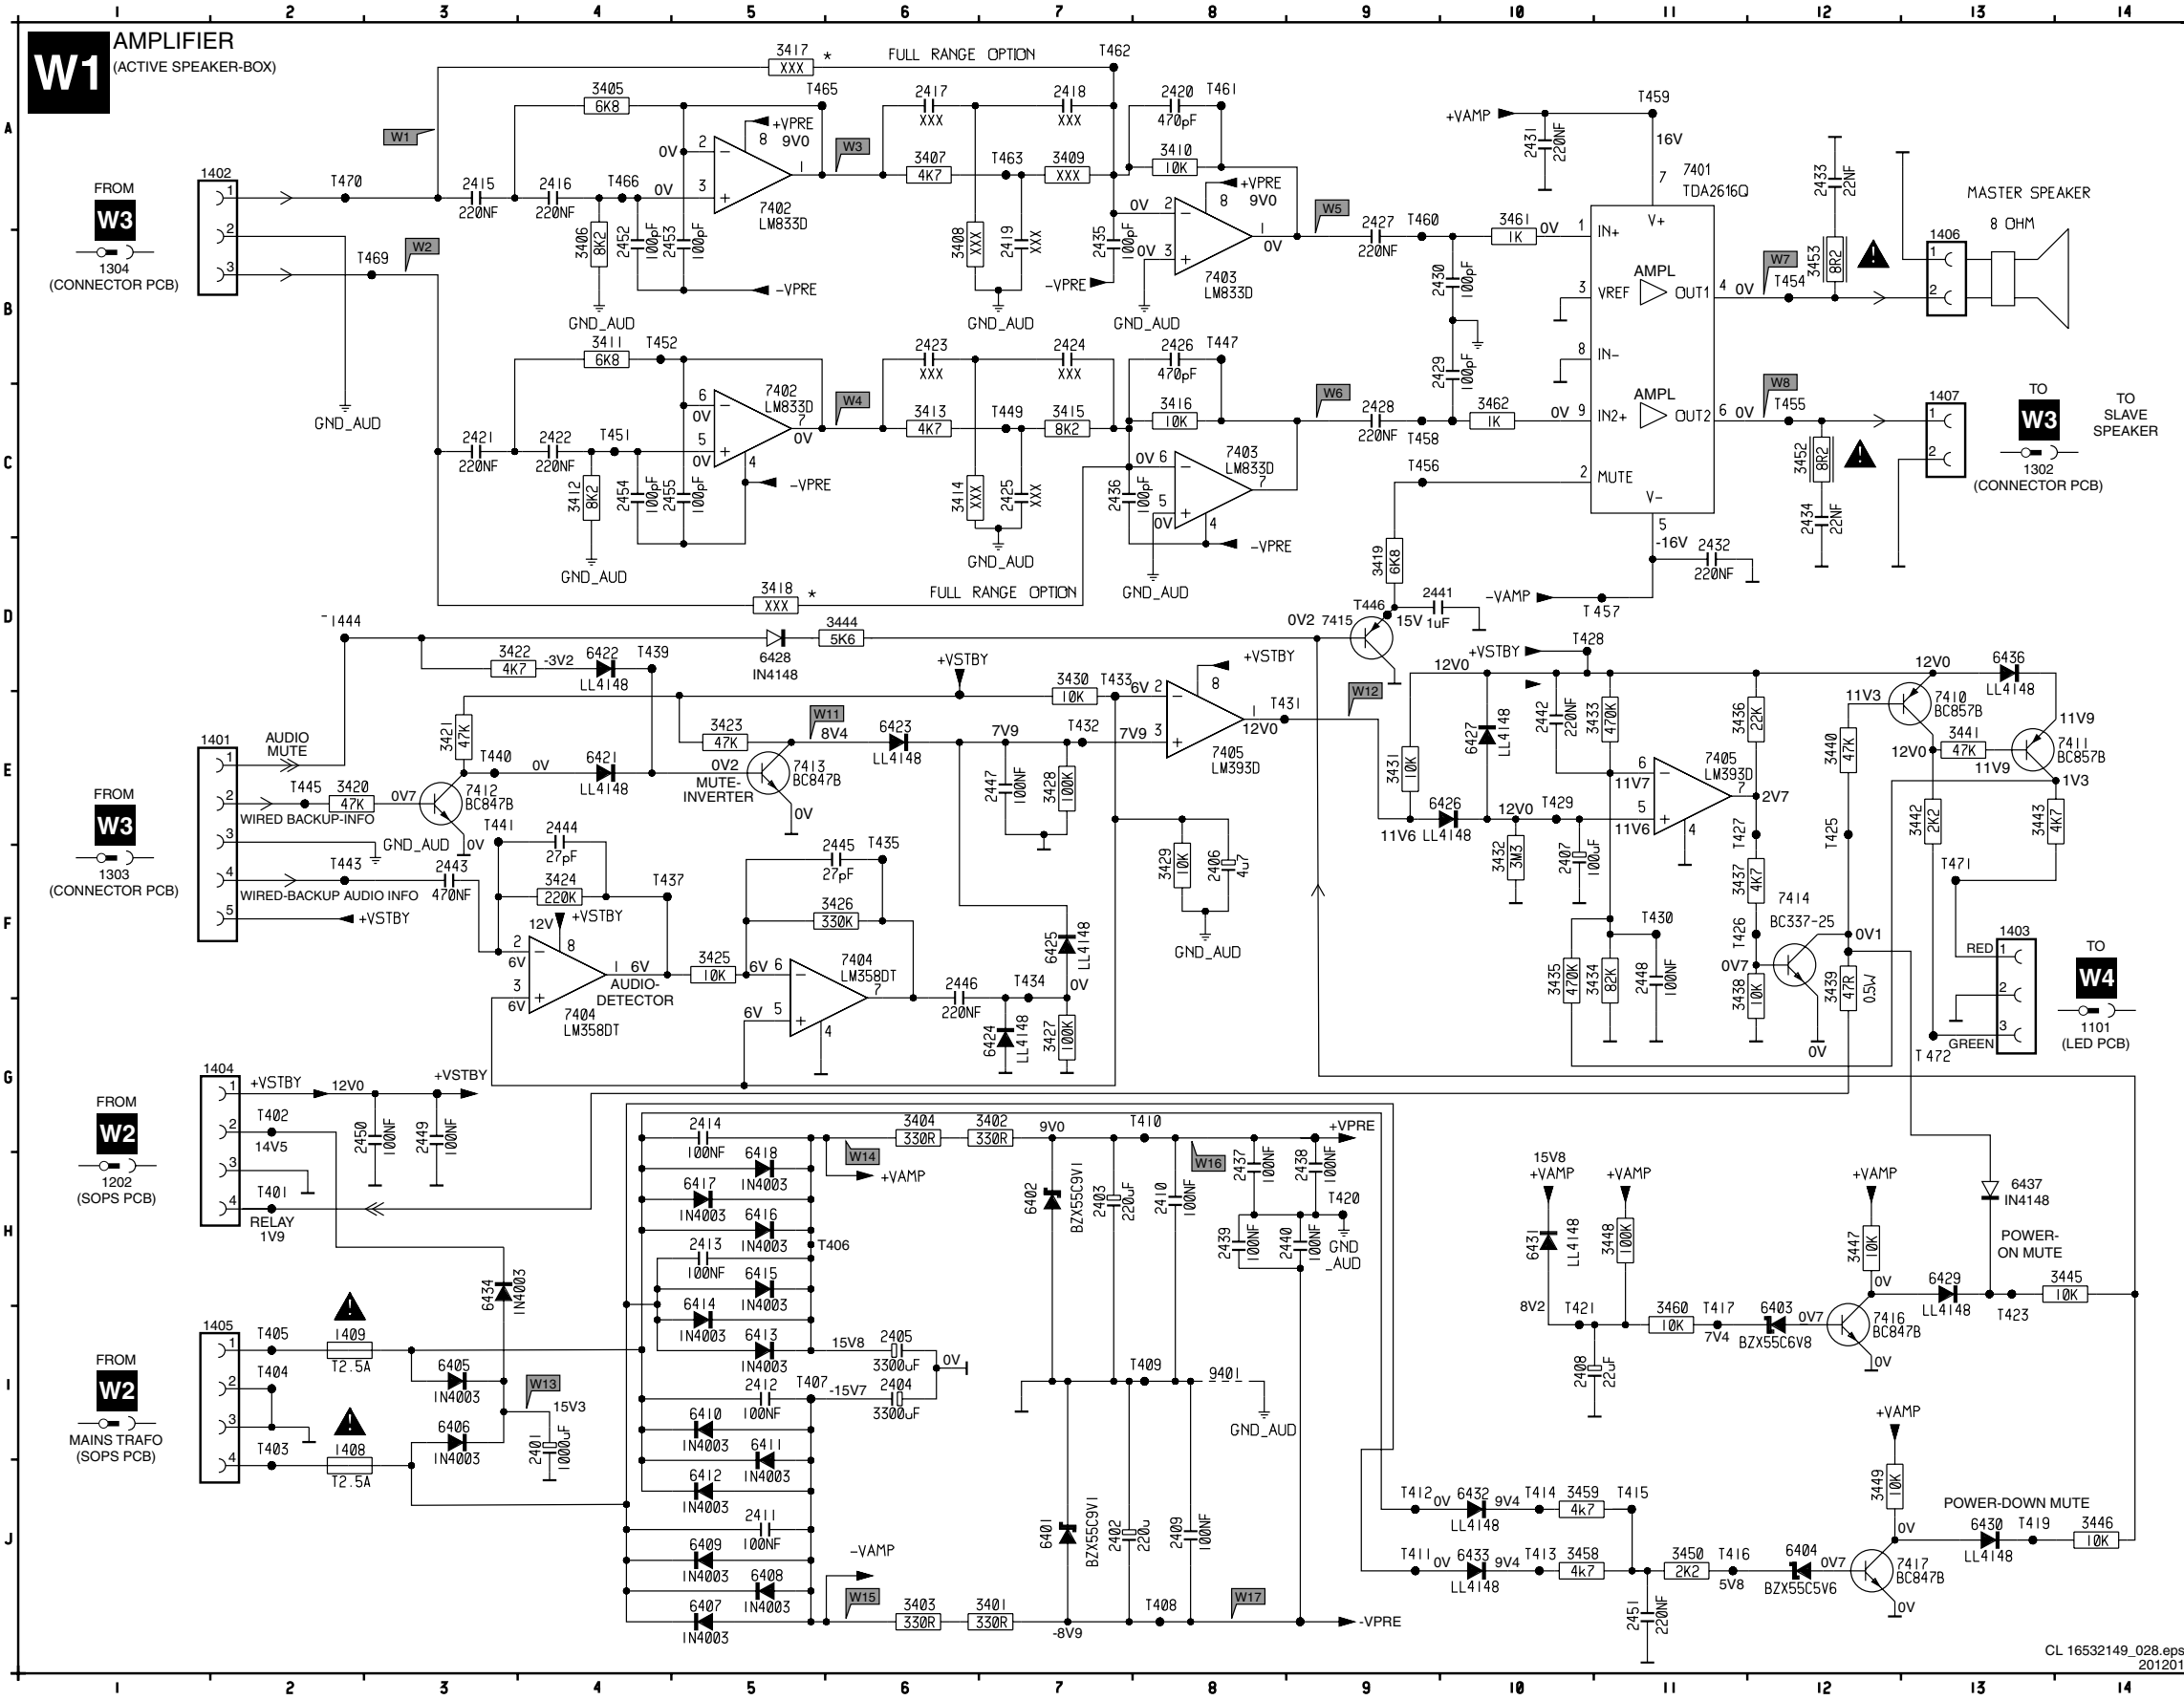

1401	E2	6410	I5	W1 1402_PIN1	W15 3403
1402	A2	6411	I5		
1403	F1	6412	I5		
1404	G2	6413	I5		
1405	I2	6414	I5		
1406	B13	6415	H5		
1407	C13	6416	H5		
1408	H7	6417	J2		
1409	I2	6418	H5		
2401	I4	6421	E4		
2402	J6	6422	D4		
2403	H7	6423	E8		
2404	I6	6424	G7		
2405	I6	6425	F7		
2406	F8	6426	E10		
2407	F10	6427	E10		
2408	H11	6429	H10		
2409	J8	6430	J13		
2410	H8	6431	H10		
2411	J5	6432	J10		
2412	I5	6433	J10		
2413	H5	6434	H13		
2414	G5	6436	D13		
2415	A3	7401	A11		
2416	A4	7401	A5		
2417	A6	7403	C8		
2418	A7	7404	F4		
2419	B7	7405	E11		
2420	A8	7410	E13		
2421	C8	7411	E13		
2422	C4	7412	E3		
2423	B6	7413	E5		
2424	B7	7414	E12		
2425	C7	7415	F12		
2426	B8	7416	J12		
2427	B9	7417	J12		
2428	C9	9401	I8		
2429	C10	T401	H2		
2430	F12	T402	G2		
2431	A10	T403	J2		
2432	D11	T404	I2		
2433	A12	T405	I2		
2434	C12	T406	I2		
2435	B7	T407	I5		
2436	C7	T408	J8		
2437	H8	T409	I8		
2438	H9	T410	G8		
2439	H8	T411	J9		
2440	H9	T412	J9		
2441	D10	T413	J10		
2442	E10	T414	J10		
2443	F3	T415	J11		
2444	F3	T416	J11		
2445	F6	T417	I11		
2446	E7	T419	J13		
2447	F7	T420	H9		
2448	F10	T421	I10		
2449	G3	T423	H13		
2450	G3	T425	E12		
2451	J11	T426	F12		
2452	B4	T427	E12		
2453	B4	T428	E12		
2454	C4	T429	E10		
2455	C5	T430	F11		
3401	J7	T431	E7		
3402	C7	T432	E7		
3403	G7	T433	D7		
3404	G6	T434	F7		
3405	A4	T435	F6		
3406	B4	T437	F4		
3407	A4	T439	D4		
3408	B6	T440	E3		
3409	A7	T441	F3		
3410	A8	T443	E2		
3411	B4	T444	D2		
3412	C4	T445	D5		
3413	C6	T446	D9		
3414	C6	T447	B8		
3415	C7	T449	C7		
3416	C8	T451	C4		
3417	A5	T452	B4		
3418	D5	T454	B12		
3420	E2	T455	C12		
3421	E3	T456	C9		
3422	D3	T457	D11		
3423	E5	T458	C9		
3424	F4	T459	A11		
3425	F5	T460	B8		
3426	F6	T461	A8		
3427	G7	T462	A7		
3428	E7	T463	A7		
3429	F8	T465	A5		
3430	D7	T466	A4		
3431	E9	T469	B3		
3432	F10	T470	A2		
3433	E11	T471	F13		
3434	F11	T472	G13		
3435	F10				
3436	E12				
3437	F12				
3438	F12				
3439	F12				
3440	E12				
3441	E13				
3442	E13				
3443	E13				
3444	H14				
3445	J14				
3446	J14				
3447	H12				
3448	H11				
3449	J12				
3450	J11				
3452	C12				
3453	B12				
3458	J11				
3459	J11				
3460	H11				
3461	B10				
6401	J7				
6402	H7				
6403	I12				
6404	I3				
6406	I3				
6407	J5				
6408	J5				
6409	J5				



Layout Speaker Box: Amplifier (W1)

Top View

1401 B4	2401 A3	3402 B1	6401 B2	6410 A2	6428 B3	9409 C3
1402 C4	2402 B2	3403 B1	6402 B1	6411 A2	6434 A3	9410 B2
1403 A4	2403 B1	3404 B1	6403 B2	6412 A2	6437 B3	9411 A3
1404 A4	2404 B2	3417 C4	6404 B3	6413 A1	7401 C2	
1405 B2	2405 B1	3419 C2	6405 A2	6414 A1	7414 A3	
1406 C1	2406 B3	3425 B3	6406 A2	6415 A1	9405 C3	
1407 C1	2407 A3	3439 A3	6407 A2	6416 A1	9406 C2	
1408 A3	2408 B2	3452 C1	6408 A2	6417 A1	9407 C2	
1409 A2	3401 B1	3453 C1	6409 A2	6418 A2	9408 A4	


Bottom View

2409 B2	2428 C3	2447 B4	3415 C3	3437 A4	4402 B4	6431 B3
2410 B1	2429 C2	2448 A4	3416 C3	3438 A3	4403 C1	6432 A3
2411 A2	2430 C2	2449 B4	3418 C3	3440 A4	4404 C2	6433 A3
2412 A2	2431 C2	2450 B3	3420 B4	3441 A4	4405 C4	6436 A4
2413 A1	2432 C2	2451 A3	3421 B4	3442 A4	4406 B2	7402 C4
2414 A1	2433 C1	2452 C4	3422 B4	3443 A4	4407 C2	7403 C3
2415 C4	2434 C1	2453 C4	3423 B4	3444 B2	4408 B3	7404 B3
2416 C4	2435 C3	2454 C4	3424 B4	3445 B2	4409 B3	7405 A4
2417 C3	2436 C3	2455 C4	3426 B3	3446 B2	4410 C3	7410 A4
2418 C3	2437 C3	3405 C4	3427 B3	3447 B3	4411 A2	7411 A4
2419 C3	2438 C3	3406 C4	3428 B4	3448 B2	6421 B4	7412 B4
2420 C3	2439 C4	3407 B3	3429 B3	3449 B3	6422 B4	7413 B4
2421 C4	2440 C3	3408 C3	3430 B3	3450 B3	6423 B4	7415 B2
2422 C4	2441 B2	3409 C3	3431 B4	3458 A3	6424 B3	7416 B2
2423 C3	2442 A4	3410 C3	3432 B3	3459 A3	6425 B3	7417 B3
2424 C3	2443 B4	3411 C4	3433 A4	3460 B2	6426 B3	9401 C3
2425 C3	2444 B4	3412 C4	3434 A4	3461 C2	6427 A3	
2426 C3	2445 B3	3413 C3	3435 A4	3462 C3	6429 B3	
2427 C3	2446 B3	3414 C3	3436 A4	4401 B4	6430 B3	

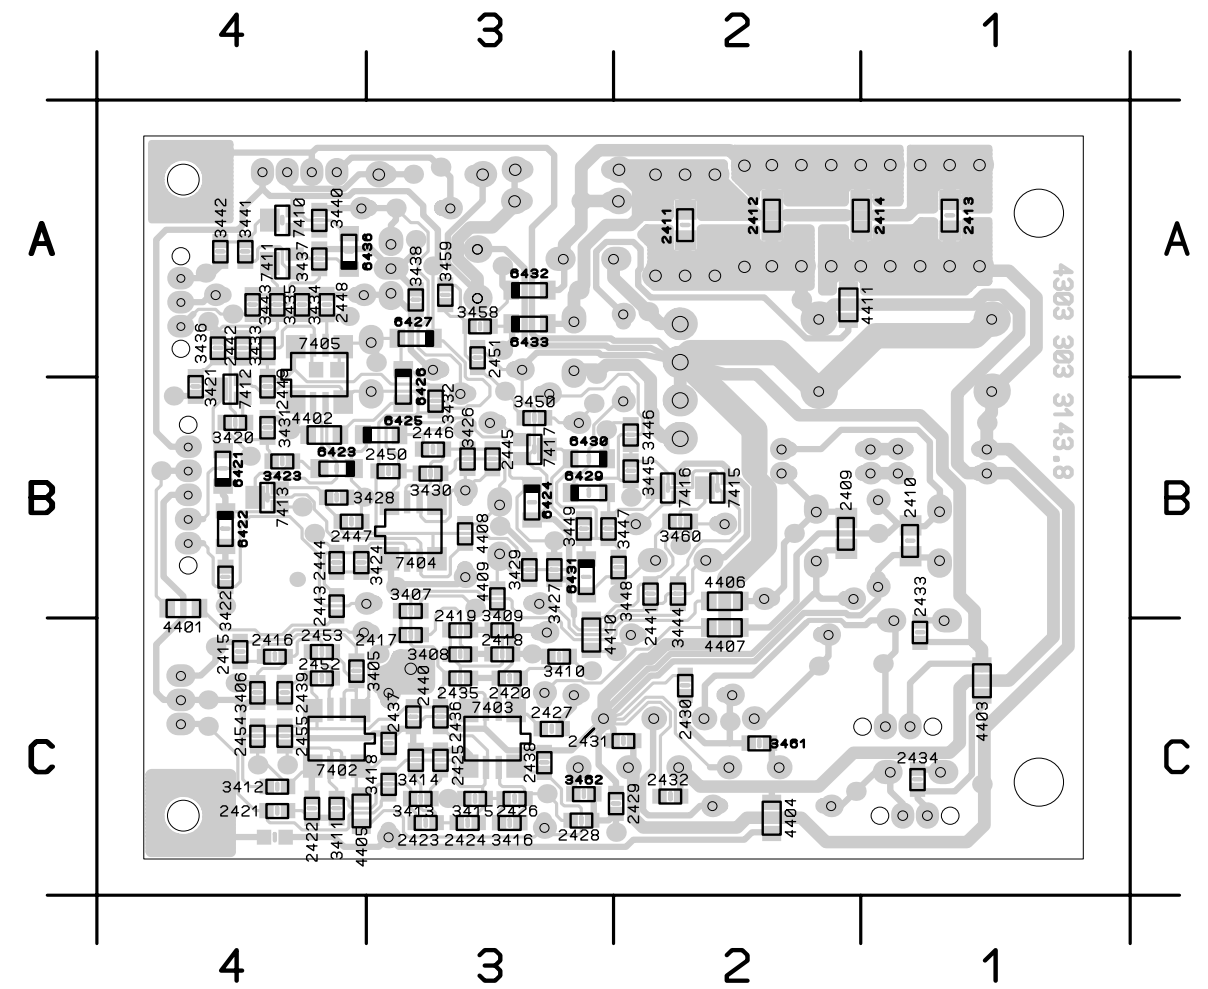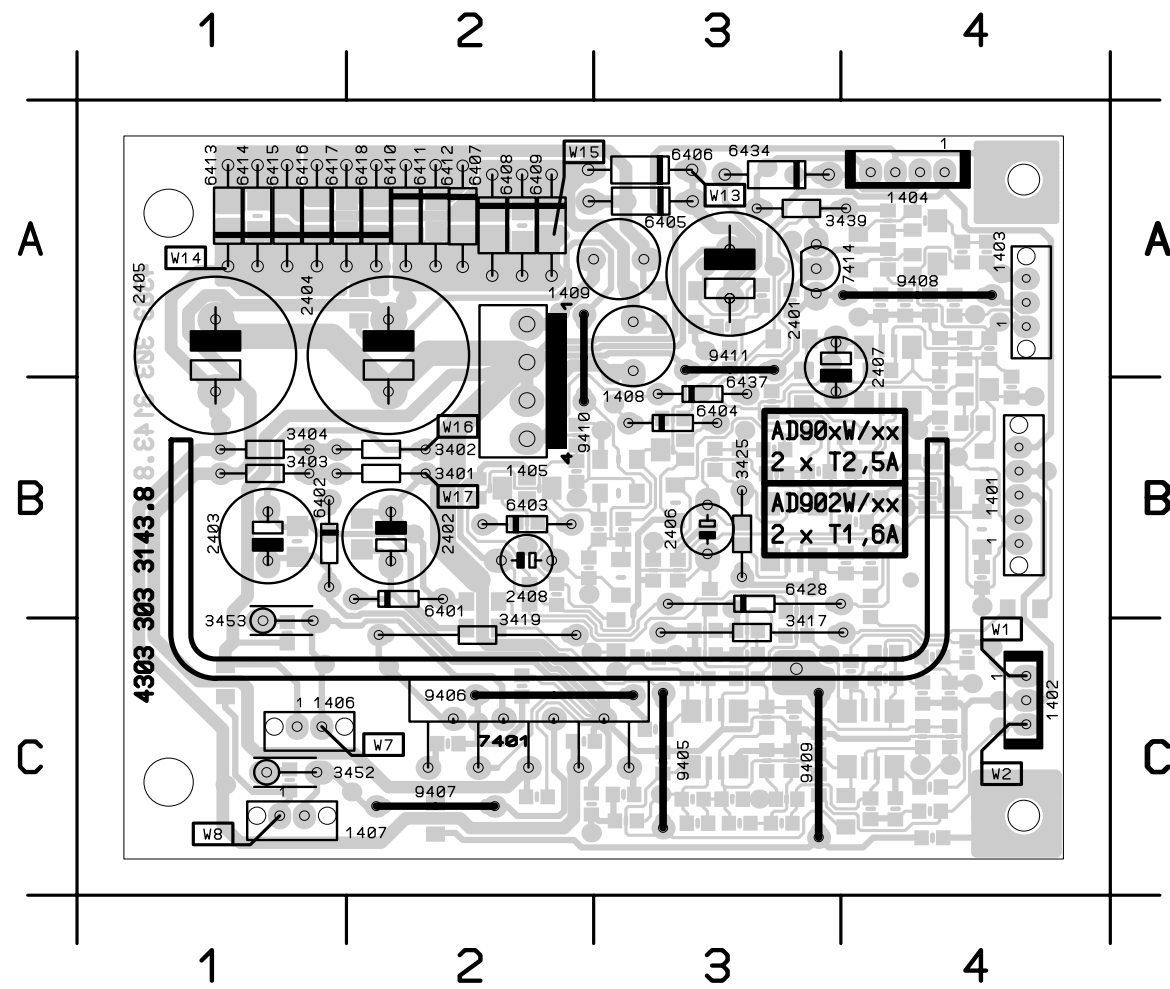


Active Speaker Box: SOPS Supply

1201 F11	2201 B11	2207 A5	3202 B2	3208 B7	3215 B7	3222 C6	5204 A8	6204 E11	6210 C6	7205 D6	9204 G10	T206 A4	T212 B12	T218 T218	T224 B5
1202 B13	2202 A9	2208 B4	3203 B2	3209 D6	3216 C6	3223 B10	5205 B8	6205 B6	6211 B10	7206 B6	T201 G10	T207 A1	T213 B10	T219 B8	T225 D6
1203 A1	2203 B9	2209 B9	3204 C9	3210 C6	3217 C6	0086 F12	5206 E10	6206 A5	6212 B10	7207 B6	T202 G10	T208 A1	T214 C9	T220 B8	T226 C5
1204 B3	2204 B8	2210 B12	3205 D9	3211 D7	3219 B5	5201 B3	6201 A10	6207 D7	7201 A11	9201 G10	T203 G10	T209 B12	T215 A9	T221 A8	
1206 B2	2205 D8	2211 C10	3206 D9	3212 D8	3220 B5	5202 C5	6202 A9	6208 B7	7203 D8	9202 G10	T204 F10	T210 B12	T216 D9	T222 A7	
1209 B10	2206 B6	3201 C9	3207 A7	3214 B8	3221 A8	5203 C5	6203 E11	6209 B8	7204 B8	9203 G10	T205 F10	T211 B12	T217 E7	T223 B6	

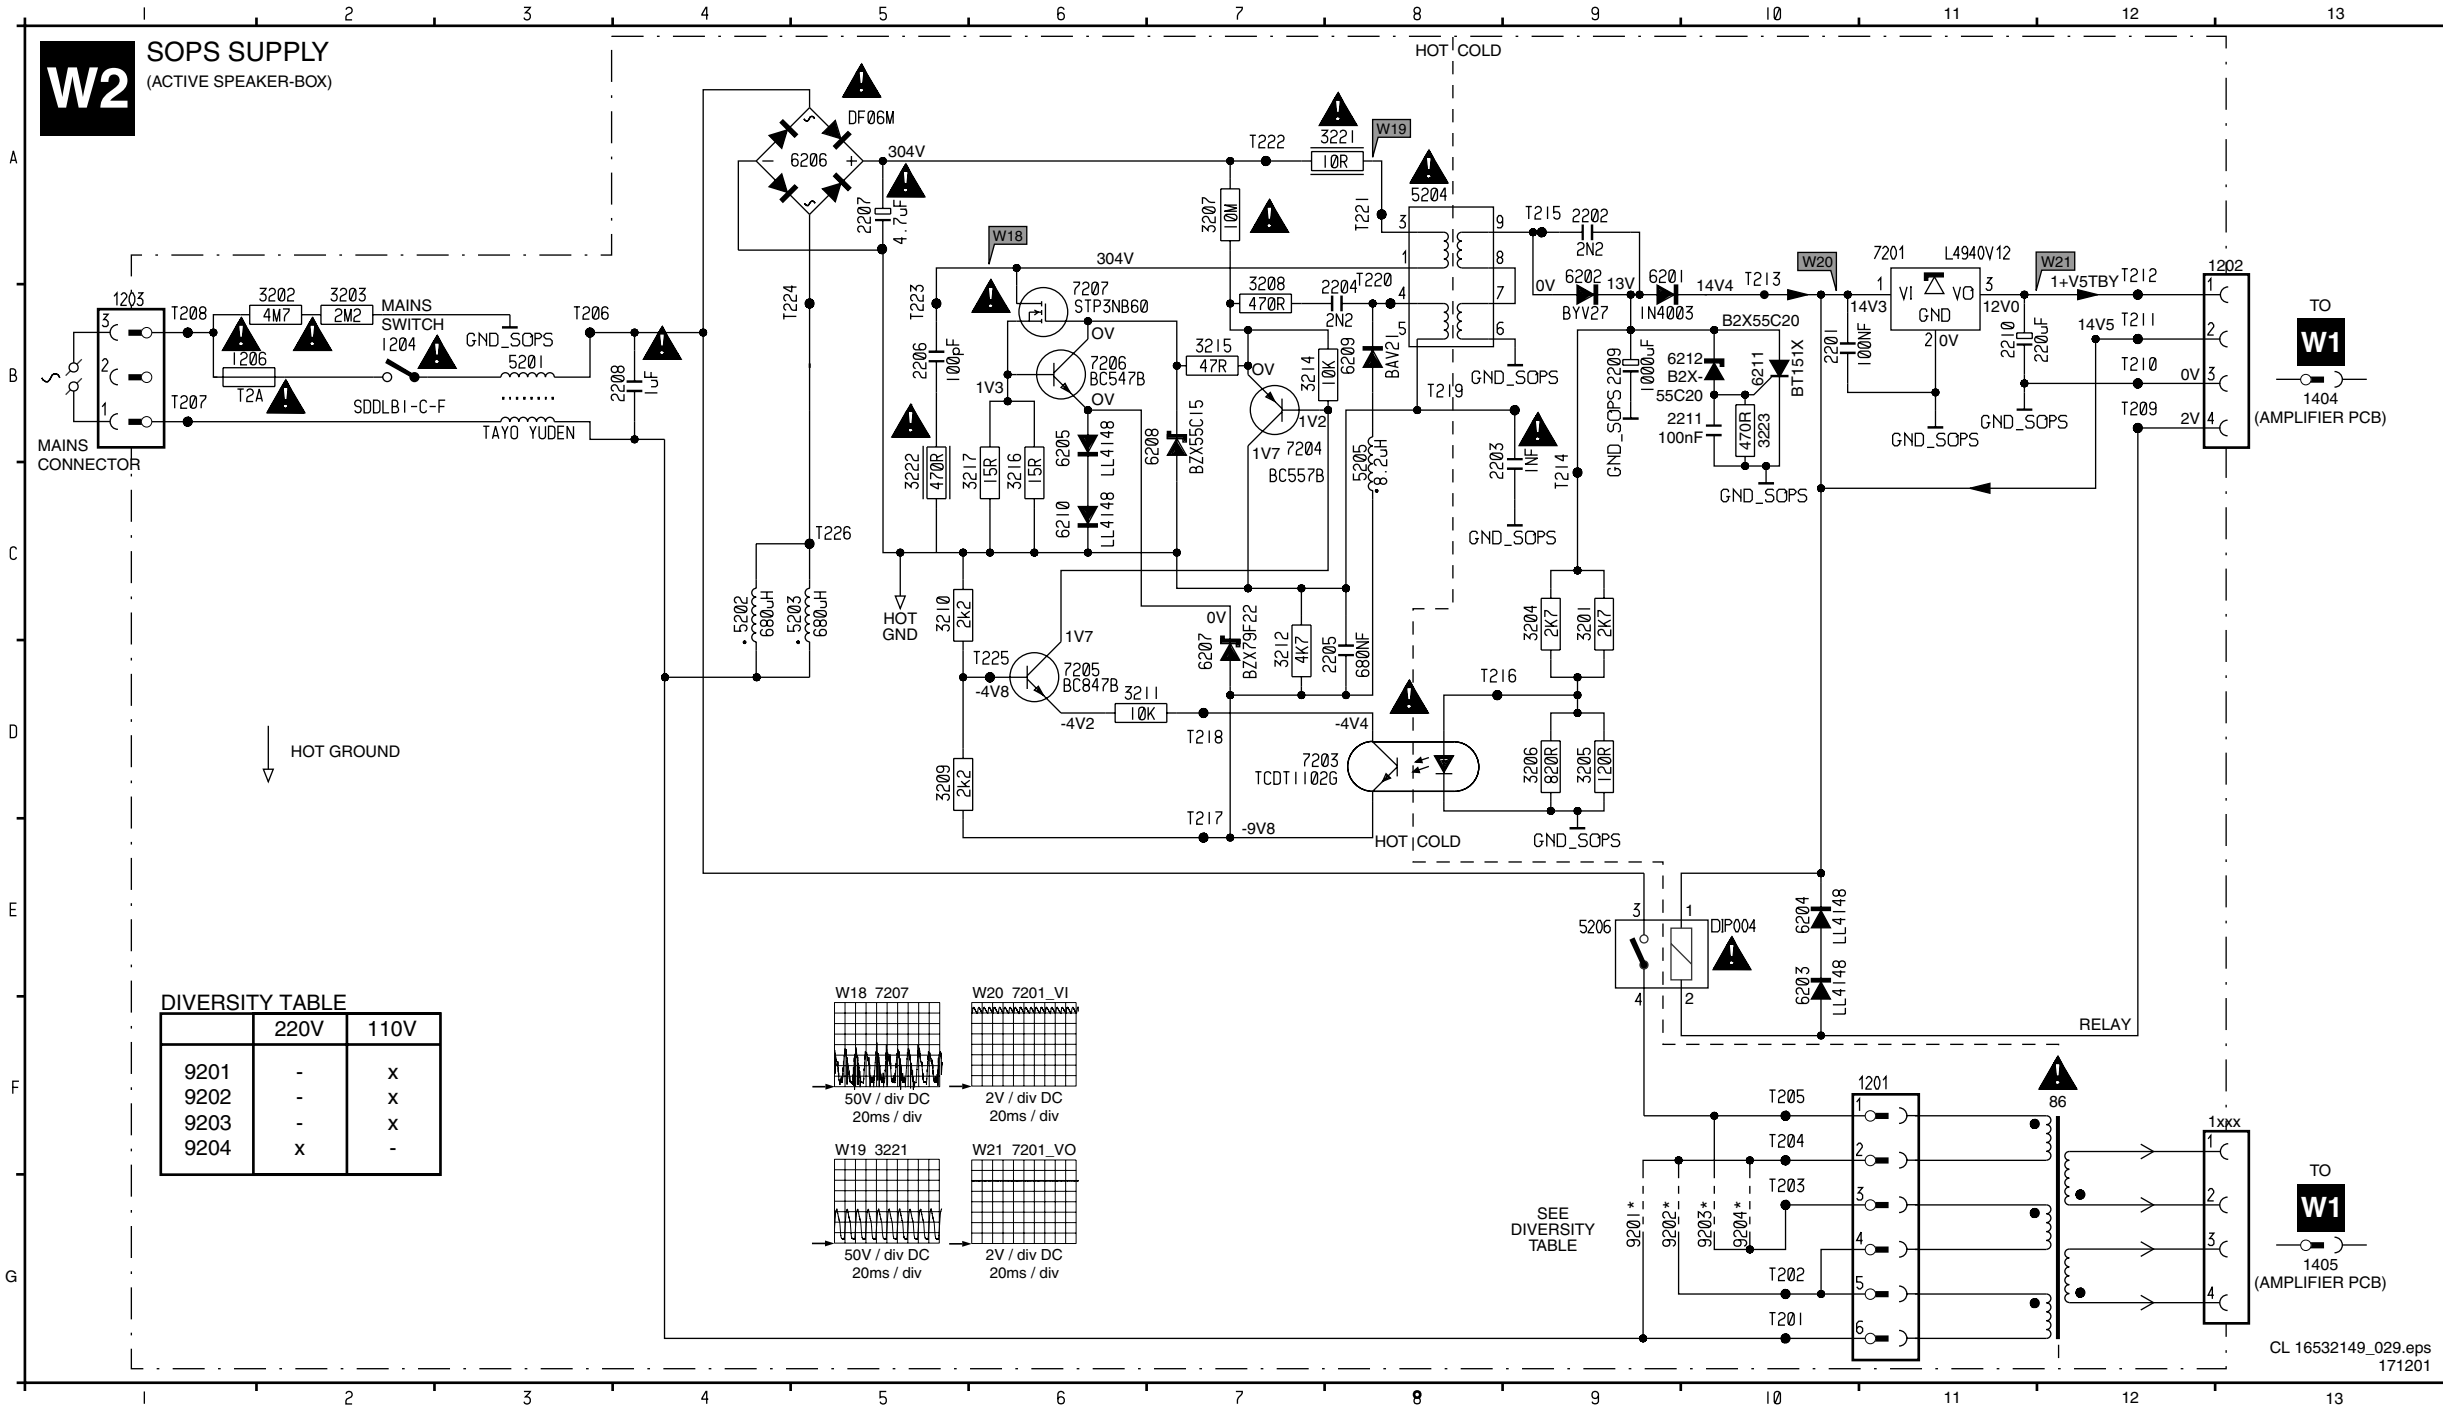

DIVERSITY TABLE

	220V	110V
9201	-	x
9202	-	x
9203	-	x
9204	x	-

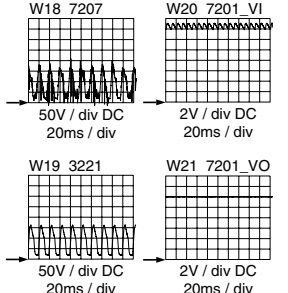

SEE DIVERSITY TABLE



Layout Speaker Box: SOPS Supply (W2)

Top View

1201 B1	2208 C3	3219 C3	6201 A1	7206 A3
1202 A1	2209 A1	3220 B3	6202 A2	7207 A3
1203 C1	2210 A1	3221 B2	6206 B3	9201 C1
1204 C2	3202 C1	3222 A3	6207 A3	9202 B1
1206 C1	3203 B1	5201 C2	6208 A3	9203 B1
2202 A2	3207 B3	5202 C3	6209 B3	9204 B1
2203 A2	3208 B3	5203 C3	6211 A1	9205 B3
2205 B2	3215 B3	5204 A2	7201 A1	
2206 A3	3216 A3	5205 B2	7203 A2	
2207 B3	3217 A3	5206 B1	7204 B2	

Bottom View

2201 A1	3205 A2	3212 B2	4203 B2	6212 A1
2204 B2	3206 A2	3214 B2	6203 A1	7205 B2
2211 A1	3209 B2	3223 A1	6204 A1	
3201 A2	3210 B2	4201 A3	6205 A3	
3204 A2	3211 B2	4202 A1	6210 A3	

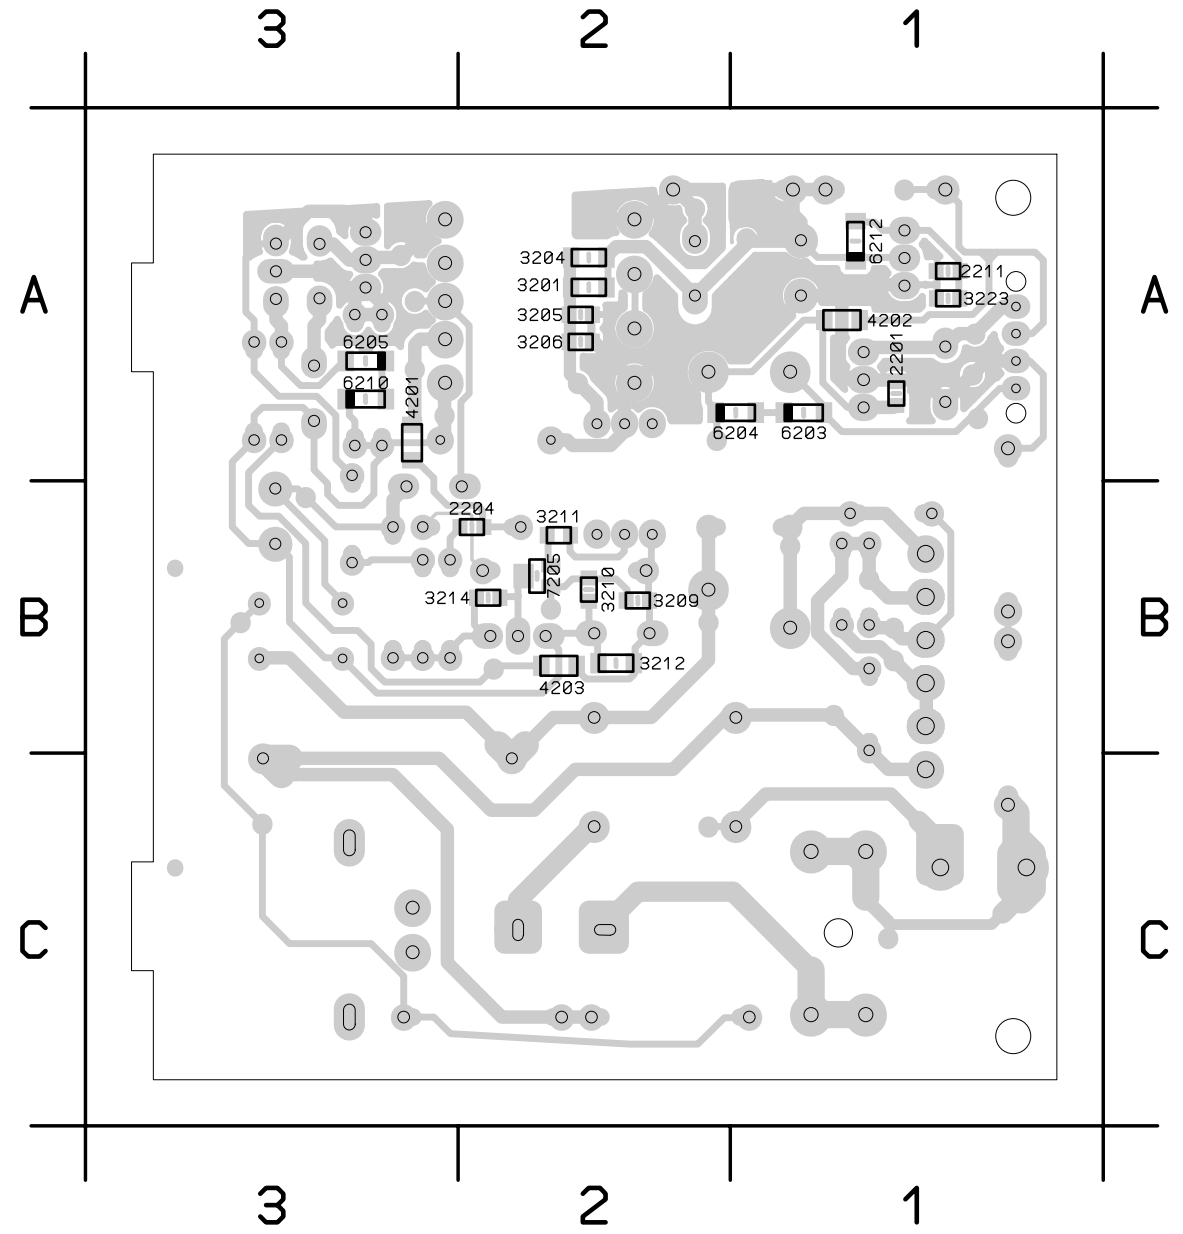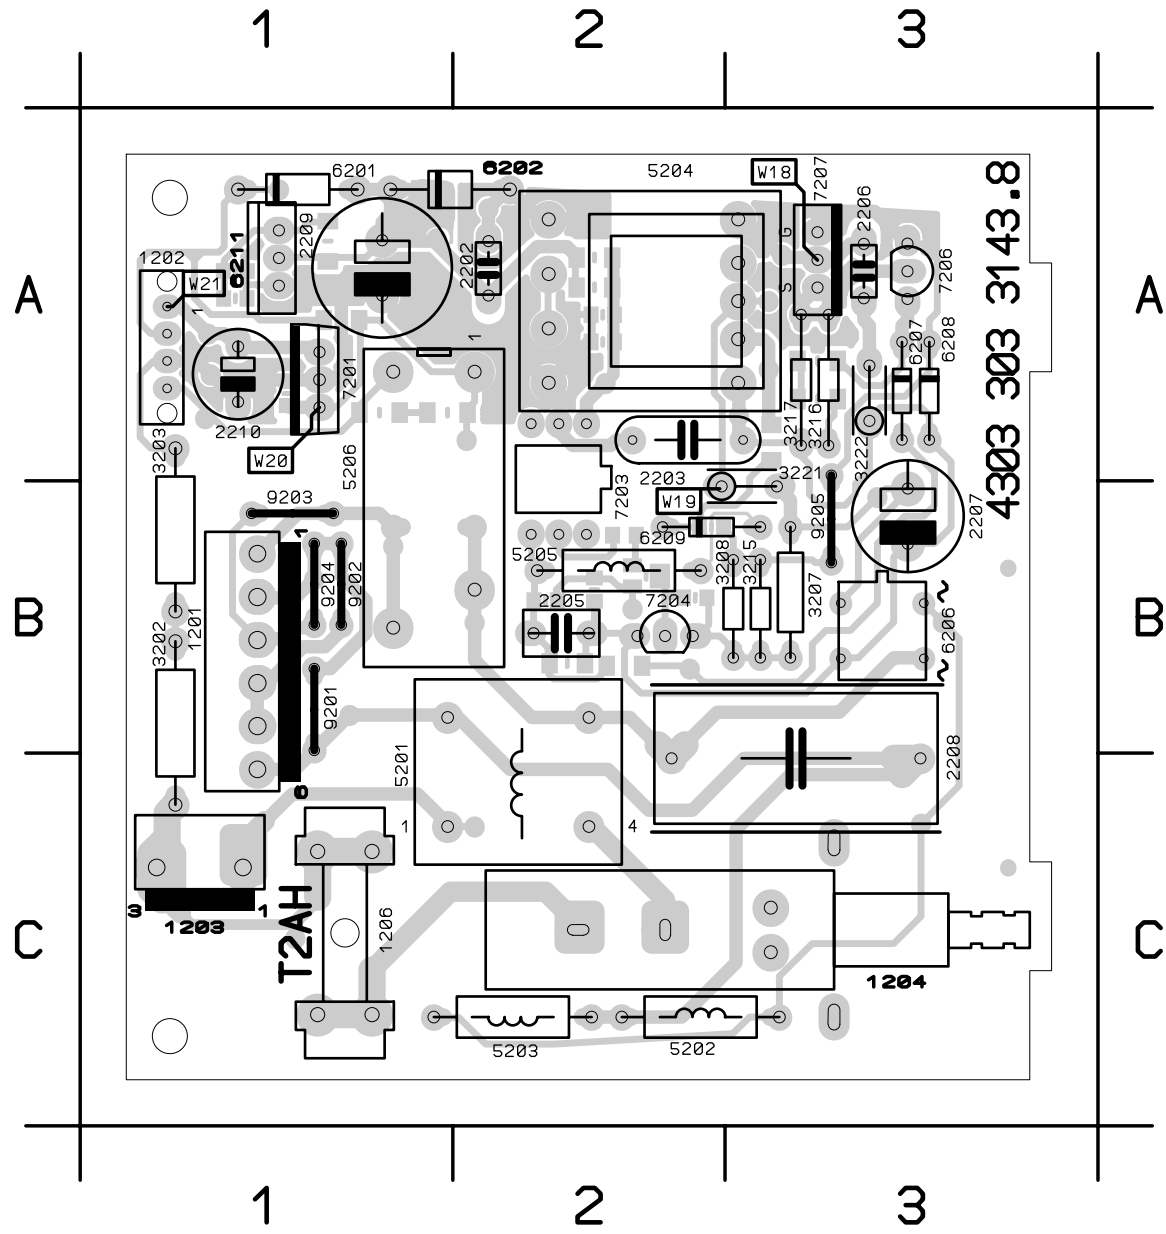

8. Electrical Alignments

Index of this chapter:

1. Introduction.
2. Option settings.
3. Hardware alignments.
4. Software alignments.

Notes: The Service Default Mode (SDM) and Service Alignment Mode (SAM) are described in chapter 5. Menu navigation is done with the 'CURSOR UP, DOWN, LEFT or RIGHT' keys of the remote control transmitter.

8.1 Introduction

8.1.1 Start Conditions

Perform all electrical adjustments under the following conditions:

- Power supply voltage: 230 V_{AC}/50 Hz (± 10 %).
- Connect the set to the mains via an isolation transformer with low internal resistance.
- Allow the set to warm up for approximately 20 minutes.
- Measure the voltages and waveforms in relation to chassis ground (with the exception of the voltages on the primary side of the power supply).
- Caution: never use the cooling fins/plates as ground.
- Test probe: R_i > 10 MΩ, C_i < 20 pF.
- Use an isolated trimmer/screwdriver to perform the alignments.

Perform all electrical adjustments with the following start settings (for all CRTs):

- Set LIGHT SENSOR 'off' (set ACTIVE CONTROL to 'off' with the remote control).
- Set BRIGHTNESS to '23' (via PICTURE menu, set indicator somewhat below the centre (= 32) point).
- Set COLOUR ENHANCEMENT to 'off' (via PICTURE menu).
- **Set DIGITAL OPTIONS to 'Pixel Plus' (via PICTURE menu), unless otherwise stated.**
- Set DYNAMIC CONTRAST to 'off' (via PICTURE menu).
- Set CATHODE DRIVE at '15' (via SAM - Alignments - General - Drive - Cathode).

8.1.2 Adjustment Sequence

Use the following adjustment sequence:

1. Modules, units and PWBs.
2. Set the correct TV-set 'options'.
3. Rough adjustment of 'Vg2' and 'Focus'.
4. Rough adjustment of 'Geometry'.
5. Accurate adjustment of 'Vg2' and 'Focus'.
6. Rough adjustment of 'Geometry'.
7. Software alignments (cut-off, cathode drive, peak white, white drive, etc).

8.1.3 Factory Default Settings

In case something goes wrong during the alignments, use the following **factory default** settings:

- Contrast = 48 (≈ 3/4 of scale).
- Colour = 33 (28"), 32 (32"), or 31 (36").
- Sharpness = 3.
- Colour Enhancement = On.
- Tint = Normal.
- Digital Options = Pixel Plus.
- Dynamic Contrast = Medium.

8.2 Option settings

The microprocessor communicates with a large number of I²C ICs in the set. To ensure good communication and to make digital diagnosis possible, the microprocessor has to know which ICs to address. The presence/absence of these specific ICs (or functions) is made known via the option codes.

You can set the 'hardware related' options via the SAM: 'Alignments - Options' or 'Option Numbers' menu. You can set the 'software related' options via the SAM: 'Dealer Options' menu .

Important:

- After you have changed the option(s), save them via the 'Store' command.
- The new option setting is only active after the TV is switched 'off' and 'on' again via the mains switch (the NVM is then read out again).

8.2.1 Options

Select this sub-menu to set the initialisation codes (= options) of the TV via text menu's.

Table 8-1

Menu-item	Subjects	Options	Physically in the set
Dual screen/PIP	Aux type	None	Dual Screen/PIP module not present.
		Video Dual Screen	Dual Screen module present
		PIP	PIP module present
	Text Dual Screen	Yes	Text Dual Screen present (only for 16:9 sets)
		No	Text Dual Screen not present
	Aux Headph. Sound(optional)	Yes	
	No		
Teletext/EPG	TXT	Yes	Feature enabled
		No	Feature disabled
	NextView present	Yes	Feature enabled
		No	Feature disabled
	NextView type	Flashram	Flash-RAM (IC7013 on SSP) present
No Flashram		Flash-RAM (IC7013 on SSP) not present	
Communication	Easylink Plus	Yes	Feature enabled
		No	Feature disabled
Picture Tube	CRT Type	4:3	4:3 picture tube
		16:9	16:9 picture tube
	CRT size	28 / 32 / 36 / 29 / 34	Screen size in inches
	Picture Rotation(only for 16:9)	Yes	Frame rotation circuitry (IC7440 on LSP) present
		No	Frame rotation circuitry (IC7440 on LSP) not present
	Dynamic focus	Yes	Dynamic focus picture tube present
		No	Dynamic focus picture tube not present
	One point control	Yes	Feature enabled
		No	Feature disabled
Anti-moirE filter	Yes	Not used	
	No	Not used	
Video repro	Featurebox type	Eco	PROZONIC not present
		Prozonic	PROZONIC present
		Falcons	FALCONIC present
		1050i/1250i	Progressive scan mode
		Eagle	Pixel plus mode
	Split Screen	Yes	
		No	
	Field memories	2	
		3	
	Lightsensor	Yes	Feature enabled
		No	Feature disabled
	Combfiler	Yes	Feature enabled
		No	Feature disabled
	Auto scavem	Yes	Feature enabled
		No	Feature disabled
	Picnic AGC	Yes	In 'Normal' operation: Yes
No		During 'Drive' alignments: No	
Signalling bits	Yes	Format recognised	
	No	Format not recognised	
Audio Repro	Dolby	None	
		Pro Logic	
		Digital	MCS panel present
	Rear speakers	Corded	Not valid
		Virtual	Not valid
		Cordless	Active surroundbox present
	Acoustic system	FL7	Not valid
		FL8	Not valid
		FL9 Monitor	Not valid
		FL9 DAS	Not valid
FL11		Soft design with full range speakers at both sides	
Miscellaneous	Heatsink Present	Yes	Heatsink present on CRT panel (diagram F)
		No	Heatsink not present on CRT panel (diagram F)

8.2.2 Option numbers

Select this sub-menu to set all options at once (expressed in two long numbers).

An option number (or 'option byte') represents several options. When you change these numbers directly, you can set all options very fast. All options are controlled via eight option numbers.

Example: Option numbers 32PW9767/12:

1. **05984 12568 03840 00016**
2. **12326 00001 00000 04358**

The first line indicates the hardware related options 1 to 4, the second line is reserved for the software related options. Every 5-digit number represents 16 bits (so maximum number is 65536, if all options are set).

Table 8-2

Option Byte	Bit	Option name	Settings (given in decimal values)		Option number		
Hardware Option 1	0	Feature Box	0 = Eco	1 = PROZONIC	Sum of HW Option 1		
	1		3 = FALCONIC (bit 0+1)	2 = 1050i/1250i			
	2			4 = Eagle			
	3		Comb Filter	0 = Off		8 = On	
	4	Auto Scavem	0 = Off	16 = On			
	5	Field Memory	0 = 2 Memories	32 = 3 Memories			
	6	Light Sensor	0 = Off	64 = On			
	8	PICNIC	0 = Off	256 = On			
	9	PICNIC AGC	0 = Off	512 = On			
	10	FALCONIC	0 = FALCONIC v1	1024 = FALCONIC v2			
	11	LNA	0 = Off	2048 = On			
	12	WSS	0 = Off	4096 = On			
	13	Time Constant	0 = Normal	8192 = Fast			
	Hardware Option 2	1	Dolby ProLogic	0 = Off		2 = On	Sum of HW Option 2
2		Virtual Rear Speakers	0 = Off	4 = On			
3		Cordless Rear Speakers	0 = Off	8 = On			
4		Dolby Digital	0 = Off	16 = On			
8		P50 (Easylink +)	0 = Off	256 = On			
12		EPG	0 = Off	4096 = On			
13		EPG type	0 = Type 2	8192 = Type 2C3			
Hardware Option 3	0	EXT3	0 = Off	1 = On	Sum of HW Option 3		
	1	EXT4	0 = Off	2 = On			
	4	Dual Screen	0 = Off	16 = PIP			
	5			32 = Dual Screen			
	6	TXT/EPG Dual Screen	0 = Off	64 = On			
	7	AUX Headph. Sound	0 = Off	128 = On			
	8	Aspect Ratio	0 = 4:3	256 = 16:9			
	9	Tilt	0 = Off	512 = On			
	10	DAF	0 = Off	1024 = On			
	11	One Point Control	0 = Off	2048 = On			
	12	Heat Sink	0 = Off	4096 = On			
	14	Home Cinema	0 = Off	16384 = On			
	Hardware Option 4	2	China IF	0 = Off		4 = On	Sum of HW Option 4
		4	Teletext	0 = Off		16 = On	
5		China Text	0 = Off	32 = On			
Software Option 1	0	Auto TV	0 = Off	1 = On	Sum of SW Option 1		
	1	Auto Store Mode	0 = None	2 = PDC/VPS			
	2		6 = PDC/VPS/TXT Page	4 = TXT Page			
	4	Picture Mute	0 = Off	16 = On			
	5	Demo Mode	0 = Off	32 = On			
	6	Virgin Mode	0 = Off	64 = On			
	12	TXT Preference	0 = TOP	4096 = FLOF			
	13	TXT Region	0 = East	8192 = West			
Software Option 2	0	CTI	0 = Off	1 = On	Sum of SW Option 2		
Software Option 3					Sum of SW Option 3		
Software Option 4	0	Cabinet		1 = FL7	Sum of SW Option 4		
	1		3 = FL9 DAS (bit 0+1)	2 = FL8			
	2		6 = FL11 (bit 1+2)	4 = FL9 Monitor			
	3						
	8	Picture Tube Size	0 = 28"	256 = 32"			
	9		768 = 29" (bit 8+9)	512 = 36"			
	10			1024 = 34"			
	11						

When all the correct options are set, the sum of the decimal values of each Option Byte (OB) will give the option number.

Note: When the EAROM is replaced, all options will require a re-setting. To be certain that the factory settings are reproduced exactly, you must set both option number lines. You can find the correct option numbers on a CRT sticker inside the TV set.

8.2.3 Dealer Options

Table 8-3


Name	Subjects	Options	Physically in set
Picture	CTI	Yes	CTI enabled
		No	CTI disabled
Personal	Blue Mute	Yes	Blue mute active, in case no picture detected
		No	Noise, in case of no picture detected
	Virgin Mode	Yes	TV starts up once with language selection menu, after mains switch on for the first time (virgin mode)
		No	TV does not starts up once with language selection menu, after mains switch on for the first time (virgin mode)
	Auto Store Mode	None	Autostore mode disabled (not in installation menu)
		PDC-VPS	Autostore mode via ATS (PDC/VPS) enabled
TXT page		Autostore mode via ACI enabled	
PDC-VPS-TXT		Autostore mode via ACI or ATS enabled	
Demo Menu Enable	Yes	Demo menu enable	
	No	Demo menu disable	
Auto TV	Yes	Auto TV mode enabled	
	No	Auto TV mode disabled	
Teletext	TXT Preference	TOP	Preference to TOP Teletext
		FLOF	Preference to FLOF Teletext
	East/West TXT	West	TXT characters for non -/58 sets
		East	TXT characters for -/58 sets

8.3 Hardware Alignments

8.3.1 Alignments on the Top Supply Panel (TSP)

+141 V (V_{BAT}) Supply Voltage

TSP (component side)

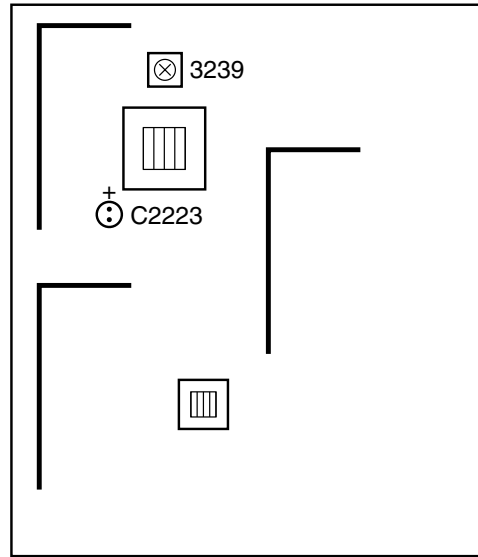

CL 16532149_075.eps
061201

Figure 8-1


1. Switch the set 'off'.
2. Connect a voltmeter across C2223 (see also diagram B, + V_{BAT}).
3. Switch the set 'on'.
4. Use potentiometer R3239 (see figure above) to adjust the V_{BAT} supply voltage to $+141 \pm 0.5$ V.

8.3.2 Alignments on the Large Signal Panel (LSP)

For the Focus and Vg2 alignment, see paragraph 8.3.3.

8.3.3 Alignments on the Double Astigmatic Focus (DAF) Panel

DAF Module

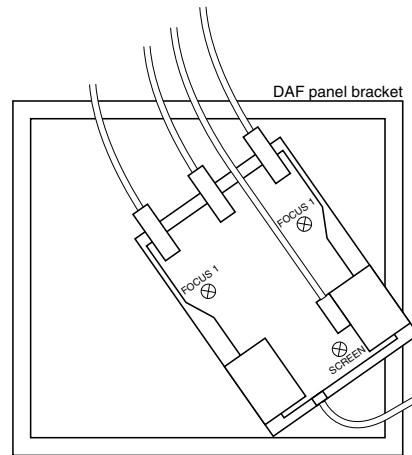

CL 06532016_017.eps
030300

Figure 8-2

Vg2 Adjustment

Method 1 (without oscilloscope)

1. Activate the SAM.
2. Select 'Alignments'.

3. Select the 'General' sub-menu.
4. Set 'Vg2 Test Pattern' to 'On'.
5. You will now get OSD feedback during Vg2 alignment.
6. First turn the Vg2 (= SCREEN) potmeter on the DAF-module (or LOT) to the left (see figure above)
7. OSD feedback will show 'Out high'.
8. Turn the Vg2 potmeter slowly clockwise until you read 'In low'. This is the correct value.

Method 2 (with oscilloscope)

Waveform Vg2 alignment

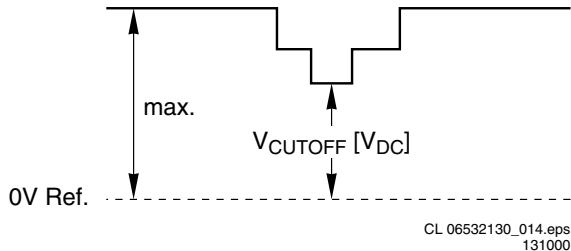


Figure 8-3

In the frame-blanking period of the R, G and B signals (applied to the CRT), the 'HOP' video processor (IC7300) inserts a measuring pulse as reference for the Vg2 adjustment. See figure above.

Measure all three signals, and use the pulse with the highest DC-level for the Vg2 adjustment.

1. Go, via the MENU key, to the PICTURE menu, and set CONTRAST and BRIGHTNESS to '0'
 - Service tip:** First, write down the actual values so you can restore them after the alignment.
2. Activate the SDM (see chapter 5).
3. Connect the RF output of a pattern generator to the antenna input. Test pattern is a 'black' picture (blank screen on CRT without any OSD info) with a carrier frequency of 425.25 MHz.
4. Set the channel of the oscilloscope to 50 V/div and the time base to 0.2 ms. Trigger the scope external via a CVBS signal (e.g. via pin 19 of the SCART1 connection).
5. Ground the scope at the CRT panel ('cold' side) and connect a 10:1 probe to one of the cathodes of the picture tube socket (see diagram F).
6. Measure the 'cut off' pulse during the first full line after the frame blanking (see figure above). You will see two pulses, one being the 'cut off' pulse and the other being the 'white drive' pulse (measure the pulse with the lowest value, this is the cut-off pulse).
7. Measure all three cathodes, and select the one with the highest V_{DC} value for the alignment. Adjust the $V_{CUT\ OFF}$ of this gun with the SCREEN potentiometer on the LOT (see figure 8-5) to the correct value:
 - for 28" CRTs: $160 \pm 3 V_{DC}$.
 - for 32" CRTs: $170 \pm 5 V_{DC}$.
 - for 36" CRTs: $170 \pm 3 V_{DC}$.
8. Restore CONTRAST and BRIGHTNESS to the normal settings (see point 1).

Focus Alignment

Tune the set to a 'circle' or 'crosshatch' test pattern (use an external video pattern generator), and set BRIGHTNESS, COLOUR and SHARPNESS to nominal, and CONTRAST to maximum.

Now there are three set executions:

1. **For picture tubes with potmeters on the DAF module.** Align the focus, by means of the 2 focus potentiometers on the DAF-module (above the LOT, see figure 8.2) until the horizontal and vertical lines at 1/4 from east and west, at the height of the centre line, are of minimum width without introducing a visible haze. First, align the FOCUS1 (green) and then the FOCUS2 (black) potentiometer.

2. **For picture tubes with potmeters in the LOT.** Adjustment is identical.
 3. **For 32" Real Flat picture tubes.** First, align the 'static' focus potmeter (black) until the vertical lines, at the height of the centre line, are of minimum width without introducing a visible haze. Then, align the 'dynamic' focus potmeter (green) until the vertical lines, at the height of the centre line, are of minimum width without introducing a visible haze.
- Repeat steps if necessary.

8.3.4 Alignments on the Small Signal Panel (SSP)

40.4 MHz Neighbour-channel Sound Trap

SSP (component side)



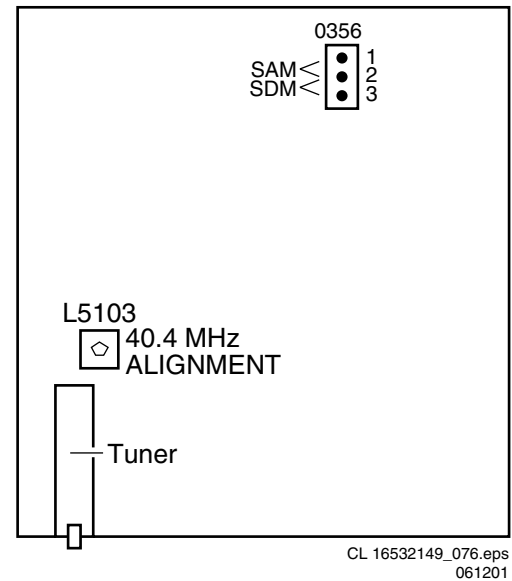


Figure 8-4

1. Tune to a checker board test-pattern (system BG - and with a carrier frequency of 475.25 MHz).
2. Connect an oscilloscope (trigger line frequent) to pin 19 (CVBS out) of the SCART1 connection.
3. Align coil L5103 (on SSP, diagram K1) completely downwards (see figure above).
4. Align the coil upwards till under- and overshoot arise at the black/white and white/black transitions in the video signal (see figure below).
5. Align the coil downwards again until above mentioned under- and overshoot is just disappeared.

Waveform 40.4 MHz Alignment

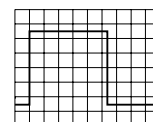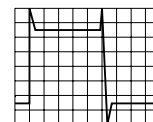

CL 86532057_006.AI
170798

Figure 8-5

8.3.5 Alignments on the Full Dual Screen (FDS) Panel

These alignments are of interest when ICs, e.g. HIP (IC7501-TDA9320H) or EAROM (IC7991-M24C04), are exchanged on the FDS-module, or if the FDS Tuner (UV1316) has been exchanged.

40.4 MHz Neighbour-Channel Sound Trap

1. Tune the FDS-module to a checker board test-pattern (system BG - and with a carrier frequency of 475.25 MHz). See to it that the main program of the set is tuned to another channel.
2. Connect an oscilloscope (trigger line frequent) to pin 19 (CVBS out) of the SCART2 connection. This output is WYSIWYR (what you see is what you record)
3. Align the coil L5103 (on FDS, just below the tuner) completely downwards.
4. Align the coil upwards till under- and overshoot arise at the black/white and white/black transitions in the video signal (see figure above).
5. Align the coil downwards again till above mentioned under- and overshoot is just disappeared.

IF AFC

See paragraph 'Software Alignments - General - VDS/PIP - IF AFC' below.

Tuner AGC

See paragraph 'Software Alignments - General - VDS/PIP - Tuner AGC' below.

8.3.6 Alignments on the Surround Transmitter Module (diagr. R)

This alignment can only be performed when having mentioned (in alignment instructions) equipment.

Limited repair can be exercised if defective circuit is in the area that no alignment is needed.

If defective part is in circuitry where alignments are necessary, two things can be done:

- Swap panel by a new one.
- If alignment equipment is available, module can be aligned according described alignment-instructions.

Frequency Deviation Level of Transmitter

1. Insert on test points R1 (= F103) and R2 (=F106) a sine wave signal of 400 Hz with a amplitude of $3 V_{RMS}$.
2. Align potmeter 3157 such, that the frequency-deviation is 75 kHz (+/- 5 kHz). This corresponds with a amplitude of 80 mV_{RMS} (230 mV_{PP}) on testpoint R11 (=F112).

8.3.7 Alignments on the Surround Receiver Module (diagram U)

Surround Receiver Component Side

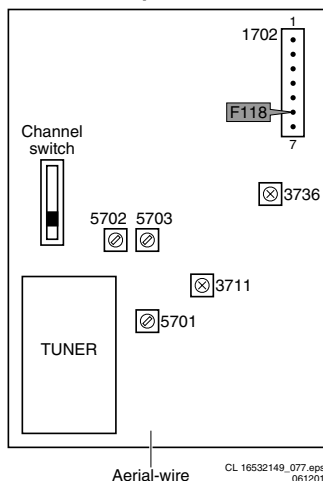


Figure 8-6

This alignment can only be performed when having mentioned (in alignment instructions) equipment.

Limited repair can be exercised if defective circuit is in the area that no alignment is needed.

If defective part is in circuitry where alignments are necessary, two things can be done:

- Swap panel by a new one.
- If alignment equipment is available, module can be aligned according described alignment-instructions.

Note: the aligned components are lacquered, so clean them first.

Alignment of FM-Detection Coil

Use a RF-generator as source: 1 mV, modulation 75 kHz.

1. Dependent of the receiver-version, place receiver on channel 4 (433, 926, or 864 MHz).
2. Align coil 5701 such, that a maximal audio frequency is detected at test point U6 (= F114).
3. Now swap the generator from frequency -150 kHz to +150 kHz, with the same amplitude and modulation.
4. Align 5107 such, that the 'stop' pulse (at F104, cathode of 6701) is symmetrical around 10.7 MHz (low value is < 0.3 V, high value is > 3.5 V).

Alignment of Tuned/Mute Level

Use a RF-generator as source: 3 to 7 μ V, modulation 75 kHz.

1. Dependent of the receiver-version, place receiver on channel 4 (433, 926, or 864 MHz)
2. Align potmeter 3711 such, that mute-level is down at 3 μ V and high at 7 μ V at pin 6 of connector 1702 (=F118).

Alignment of VCO-Demodulator

Use a RF-generator as source: 1 mV, unmodulated.

1. Dependent of the receiver-version, place receiver on channel 4 (433, 926, or 864 MHz).
2. Align potmeter 3736 such, that you measure 100 kHz (+/- 300 Hz) at test point F131 (pin 11 of TDA1578A).

8.4 Software Alignments

Put the set in the SAM mode (see chapter 5). The Service Alignment Menu will now appear on the screen.

Via 'Alignments' the following submenu's can be selected:

1. **General:** all non-geometry related adjustments.
2. **Normal Geometry:** General geometry alignments.
3. **Super Wide Geometry:** Geometry alignments for the 'Panorama' position in 16:9 sets.
4. **Options:** Setting the initialisation codes in the TV via menu's.
5. **Option Numbers:** All options together, expressed in two long numbers. The original factory setting for these numbers can be found on the picture tube sticker on the inside of the set.
6. **Store:** Store all alignments.

Notes:

- **Important:** Once you have completed the alignments/settings, select the item 'Store' (in main Alignment menu) to save all the values in the permanent memory of the set.
- If you changed and stored the Option codes, switch the set 'off' and 'on' with the mains switch. This, to activate the new settings. When switching via Stand-by, the option code settings are NOT read by the microprocessor.
- If an empty EAROM (permanent memory) is detected, all settings are set to pre-programmed default values.
- A built-in test pattern can be called up in some sub-menus. You can activate this pattern via the 'Test pattern on/off' item. The test pattern only appears AFTER the specific alignment is selected. The test patterns are generated by the Teletext-IC (OTC).

The alignments are explained now in the sequence of the sub-menu.

8.4.1 General

Drive*Method 1 (with colour analyser)*

1. Go to the SAM 'Alignments - General - Drive' menu
2. Switch the 'Test pattern' to 'on' (you get a white block in middle of the image now).
3. Set 'Tint' to 'Normal'.
4. First, align the 'Cathode parameter'. This value is dependent of the picture tube size (see table 'Cathode parameter' for the colour-analyser readings).
5. Now, set the white levels for the three Tint-settings 'Normal', 'Warm' and 'Cool'. Align to the next values (see table 'White levels').

Table 8-4

CRT size/type	Light output (cd/m ²)
28" RF WS	390
32" RF WS	370
36" RF WS	330

Table 8-5

	Cool	Normal	Warm
X	280	289	314
Y	287	299	329
Temp. (K)	10200	8700	6500

Method 2 (without colour analyser)

1. Even without having a colour-analyser you can set some parameters. This is the next best solution. These parameters are average values coming from production (statistics).
2. Set 'Tint' to 'Normal'.
3. First, set the 'Cathode parameter' to the value '5'.
4. Now set the R-, G- and B-parameters for the three tint-settings 'Cool', 'Normal' and 'Warm'. See table 'Tint-settings' below for the values.
Note: These values are only for the 32" CRT. At the moment of writing, the information for the 28 and 36" CRTs was not yet available. As soon as they are available, we will publish a 'Service Information'.
5. **Red BL offset:** herewith the Black Level can be aligned very precise. Default value is '7'.
6. **Green BL offset:** herewith the Black Level can be aligned very precise. Default value is '7'.

Table 8-6

32" CRT	δ Cool	Normal	δ Warm
R	-1	40	+ 2
G	0	29	0
B	+ 4	34	- 10

Luminance Delays

With the 'Luminance delays' alignment the luminance information is placed on the chrominance information (brightness is pushed onto the colour). Use a colour bar/grey scale pattern as test signal.

- **Lum. Delay PAL:** Apply a PAL colour bar/grey scale pattern as a test signal. Adjust 'Lum. Delay PAL' until the transients of the colour part and black and white part of the test pattern are at the same position.
- **Lum. Delay SECAM:** Apply a SECAM colour bar/grey scale pattern as a test signal. Adjust 'Lum. Delay SECAM' until the transients of the colour part and black and white part of the test pattern are at the same position.

- **Lum. Delay Bypass:** apply a NTSC colour bar/grey scale pattern as a test signal. Adjust value until the transients of the colour and black & white part of the test area are at the same position.

EHT Compensation

Fixed setting: 0

Soft Clipper

Fixed setting: Pwl + 0%

Luma Gain

Fixed setting: 1

IF AFC

The SAM-mode is needed to make alignment, a test generator to make signal and the Installation-menu to check the 'Fine Tune' value.

Supply, via a video generator (e.g. PM5518), a TV-signal with a signal-strength of at least 1 mV and a frequency of 475.25 MHz. Use BG if possible, otherwise match the system of your generator with the received signal in the set.

Alignment procedure:

1. Go to the 'Installation' menu.
2. Select 'Manual installation'.
3. Tune the TV-set to the system and frequency described above via 'Search - 475 - OK'.
4. If the frequency showed in the line 'Fine tune' is between 475.18 MHz and 475.31 MHz, you don't need to re-adjust the IF-AFC.
5. If not, adjust the frequency in the 'Fine tune' line to 475.25 MHz and 'Store' the program (this is very important because this will disable the AFC algorithm).
6. Now go to the SAM and select 'Alignments - General - IF AFC'.
7. During the 'IF AFC'-parameter adjustment, one can see OSD feedback in the top of the screen. The OSD feedback can give 4 kind of messages:

Table 8-7

AFC-window	AFC-frequency vs. reference
Out	High
In	High
In	Low
Out	Low

The first item ('In' or 'Out') informs you whether you are in or out the AFC-window.

The second item ('High' or 'Low') informs you about whether the AFC-frequency is too high or too low.

1. First you must align the 'IF AFC'-parameter such that you come into the AFC-window (= 'In')
2. Then you must look for the point where the 'IF AFC'-parameter changes from High to Low. This level is the value you are looking for.
3. After adjustment 'Store' the value.
4. Now return to the 'Installation' menu.
5. Select 'Manual Installation - Search - 475 - OK' and 'Store'. This will set the AFC 'on' again.

Service-Tip: If you do not trust the accuracy of the frequency of your Service-generator, first 'measure' with 'Fine tune'-line (manual install-menu) of a good set your video generator.

Tuner AGC

1. Supply a TV-signal, with a frequency of 475.25 MHz and a signal-strength of about 2 mV.
2. Measure the DC-voltage on pin 1 of the Tuner (position 1200). With the 'Tuner AGC'-alignment in the SAM-menu, this voltage can be aligned.

- Alignment is correct when the DC-voltage is just below 3.8 V.

Blend Intensity

Use this alignment when the micro controller or HOP-IC has been replaced.

It aligns the level of transparency of the menu-picture blended into the main-picture.

- Position the BRIGHTNESS-, CONTRAST- and COLOUR setting in the middle position (picture-menu).
- Apply a signal with a 100 % white video-pattern.
- Connect an oscilloscope to pin 7 of connector 0340 of the CRT panel and measure the Red output level.
- Align 'blending intensity'-parameter such, that the blended signal is 65 % of the black-white amplitude. Practically this will be about 1.3 V (blended signal) versus 2 V (full white signal). The parameter is adjustable between 0 and 31.

Adjust Peak White Limiter

Enter for all picture tubes the value '4'.

Vg2 Test Pattern

Here, you can activate the Vg2 Test pattern. See paragraph 'Hardware Alignments' for a description.

VDS/PIP (optional)

With this adjustment, you can set the following parameters (which are stored in the local memory IC7991):

- IF AFC.** This alignment is identical to the one described above.
- Tuner AGC.** See description below:
 - Supply a video signal, with a frequency of 475.25 MHz and a signal-strength of about 2 mV to the set.
 - Measure the DC-voltage on pin 1 of the tuner 1102 (easiest way is to measure on SMD capacitor C2116, just underneath the tuner).
 - Align the voltage via the menu. The alignment is correct when the DC-voltage is just below 3.8 V

8.4.2 Normal Geometry

Note: Use for all geometry alignments an **external** pattern generator with a geometry pattern (e.g. crosshatch).

Geometry Alignments

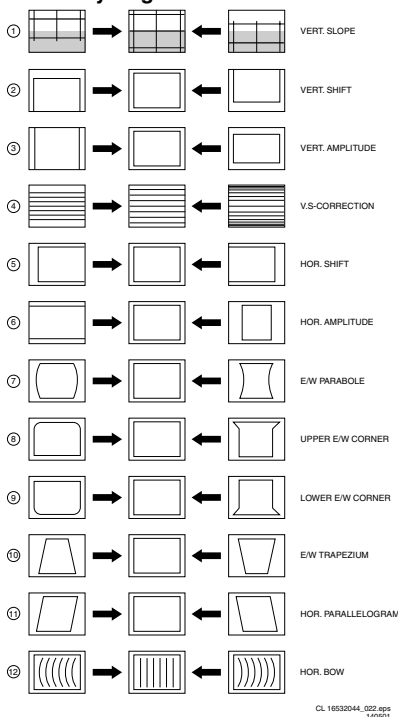


Figure 8-7

Vertical Slope

This alignment is meant to align the zero crossing of the frame-deflection to the mechanical middle of the picture tube.

- First set the start conditions for 16:9 sets: '**V. S-correction**' value on '0' for the 28" sets, and '9' for the 32" and 36" sets. Position the boundary-stripes of the test pattern on the edges of the picture tube.
- Align '**V. slope**' (during alignment the below-half of the picture is blanked). Match the middle line of the test pattern with the upper edge of this blanking picture. Push the MENU button again, to return to the previous menu.

Service tip: When the set is equipped with a rotation coil, use this menu item to check its correct alignment. If alignment is not correct, go to the INSTALLATION menu, choose SETUP, press OK, and choose PICTURE TILT. With the use of a crosshatch test pattern, align it to a correct horizontal picture.

Vertical Amplitude and Centring

- Use '**V. amplitude**' to align the vertical amplitude so that the entire test pattern is visible.
- Use '**V. shift**' to align the picture vertically in the middle.
- Repeat the '**V. amplitude**' alignment if necessary.

Vertical S-correction

Align '**V. S-correction**' such that a block at the top of the picture has the same height as a block in the middle of the picture.

Horizontal amplitude and centring

- Use '**H. amplitude**' to align the horizontal amplitude so that the entire test pattern is visible.
- Use '**H. shift**' to align the picture horizontally in the middle.
- Repeat the '**H. amplitude**' alignment if necessary.

Note: If you cannot compensate the drift in the horizontal shift, go to the next subject 'DC-shift'.


DC-shift

In case the horizontal linearity in wide-screen mode is out of tolerance, add a 'DC-shift correction' panel (3104 328 00641) to connector 0393 on the LSP (see figure below).

Caution: Be sure to switch 'off' the set first. On this DC-shift panel, cut position 9031 for correction to the right or cut position 9030 for correction to the left.

Caution: never plug in a not pre-aligned module in a set !!!

DC-shift Connector

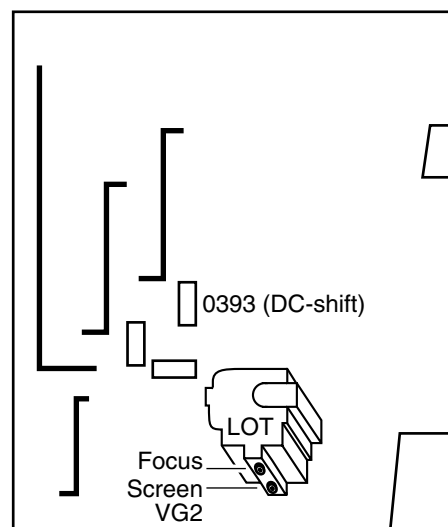

CL 16532149_078.eps
201201

Figure 8-8

In 32" and 36" sets, an **adjustable** DC-shift feature is always present. This is located on the DAF panel (potentiometer 3050). How to align:

1. Increase BRIGHTNESS to '45' (3/4 of scale).
2. Set DC-shift potmeter (item 3050 on DAF module) at midway. Maybe it is necessary to unhook the DAF module first, in order to access this potmeter (see chapter 4).
3. Apply a circle as test pattern.
4. Enter the SAM, choose ALIGNMENTS, and NORMAL GEOMETRY.
5. Write down the H. AMPLITUDE value.
6. Reduce H. AMPLITUDE until overscan and grey zones at the left and right are well visible.
7. Adjust H. SHIFT until picture is positioned symmetrically in the grey zone.
8. Recall the H. AMPLITUDE value.
9. Turn potmeter 3050 on the DAF module, until the picture edges are just visible.
10. Store the new value for H. SHIFT into the NVM (via the main Alignment menu).

East/west alignment

1. Use '**East/West Parabola**' to align the vertical lines until straight.
2. Use '**Upper East/West corner**' to align the vertical lines in the upper corners until straight.
3. Use '**Lower East/West corner**' to align the vertical lines in the lower corners until straight.
4. Use '**East/West Trapezium**' to align for a rectangular.
5. Use '**Horizontal Parallelogram**' to align for straight vertical lines if necessary.
6. Use '**Horizontal Bow**' to correct the E/W parabola such that it becomes symmetrical.

Repeat steps 1 to 6 if necessary.

8.4.3 Super wide geometry

You only need to set the following values (if the normal geometry alignment has been performed correctly):

- **V. shift:** enter here the value of the 'normal geometry' alignment.
- **V. amplitude:** adjust image such that the outer vertical lines are just visible.
- **V. S-Correction:** enter here the value of the 'normal geometry' alignment.
- **H. amplitude:** enter here the value of the 'normal geometry' alignment subtracted by 2.
- **E/W Parabola:** enter here the value of the 'normal geometry' alignment.

8.4.4 100Hz Geometry

As all alignments are done in Pixel Plus mode @ 75 Hz, the 100 Hz mode needs an extra alignment:

- Select '**100Hz Geometry**'. The set automatically switches to 100 Hz mode.
- **V. slope:** Match the middle line of the test pattern with the upper edge of this blanking picture. Push the MENU button again, to return to the previous menu.
- After the alignment, return to the previous menu. The set automatically returns to 'Pixel Plus' mode.

9. Circuit Descriptions, Abbreviation List and Data Sheets

Index of this chapter:

1. Introduction
2. Power Supply
3. Video Path
4. Feature Box 7
5. Auto Scavem
6. Wireless Surround Amplifier
7. Abbreviation List
8. IC Data Sheets

Note:

- Only **new** circuits (compared to the MG3.1E) are described. For the other circuit descriptions, see the training manual of the MG3.1E. This manual is available in different languages:
 - 3122 785 10007 = English (GB)
 - 3122 785 10008 = Dutch (NL)
 - 3122 785 10009 = German (D)
 - 3122 785 10011 = French (F)
 - 3122 785 10012 = Italian (I)
 - 3122 785 10013 = Spanish (E)
- Figures can deviate slightly from the actual situation, due to different set executions.
- For a good understanding of the following circuit descriptions, please use the diagrams in chapter 6 and 7. Where necessary, you will find a separate drawing for clarification.

9.1 Introduction

In the MG3.2E, a high-resolution mode is introduced, in order to obtain a sharper picture. This feature is called 'Pixel Plus'. It includes the following changes:

- A new 'Feature Box version 7' (FBX7), which contains the 'Eagle' IC. This IC is responsible for the definition improvement.
- With 'Pixel Plus', the pixels in horizontal direction are doubled.
- The number of vertical lines per picture is increased to 833, which improves the vertical definition.
- The frame deflection works on 75 Hz (which is the best compromise without introducing flicker).
- The signal bandwidth from FBX7 to picture tube is increased, in order to be able to cope with these high definition signals.
- A new Scavem circuit is necessary for the higher definition. This Scavem is dependent of the used picture tube and the picture content, and is controlled by the AutoTV algorithm. That is why it is called 'Auto Scavem'.

In addition, the Top Power Supply is adapted, so it can deliver more power.

In the 'Digital Options' menu, you now have three options:

- Digital Scan (100 Hz)
- Pixel Plus (75 Hz)
- Double Lines (50 Hz).

In all modes, the line frequency is 31250 Hz. Pixel Plus is the preferred mode. That is why the optimal geometry of this chassis is set for 75 Hz.

Standard OSD is developed for 625 lines. Therefore, in 833 lines mode, this will give smaller fonts and a different screen position. To solve this, larger fonts are used.

In 'TXT' and 'TXT Double Window' mode, the set is switched to 'Natural Motion'. For subtitles 'Pixel Plus' is used, this will result however in somewhat smaller fonts. In 'Full Double Window' mode, the set is in 'Pixel Plus' mode.

9.2 Power Supply (Diagram B)

There are two important changes on the Top Supply Panel (TSP):

The mains harmonic coil (item 5280) is now mounted directly on the supply board, i.s.o. using an external 'Mains Harmonic' unit.

The 8V6 and 5V2 supplies have to deliver more power. This is accomplished in the following way. The existing DC/DC converter MC34167 was not able to deliver a higher output current and had a rather high working temperature. Therefore, it is replaced by another type, the L4977A (item IC7211). This IC uses the same working principle, but has a higher maximum output current, and works at a lower temperature. However, it needs a higher supply voltage of 24 V_{DC} (i.s.o. 16 V_{DC}). This higher supply voltage is achieved by changing transformer T5202. The output voltage of the converter is determined by the value of R3230 and 3231. A disadvantage of the new DC/DC converter is that it needs more external components, and therefore needs more space. This extra space is found by changing the Standby Supply circuitry. This change involves the replacement of items TS7100 to 7103 by a single TNY256 IC (pos. 7103). This IC generates drive-pulses for transformer T5101. The maximum frequency is 132 kHz at full load, and decreases with smaller loads. The working principle of this IC is called 'cycle skipping'. It implies that the IC supplies a pulse train, to which cycles are removed or added, hereby changing the output frequency. One disadvantage of using this IC is the increased chance of introducing picture spook. Therefore, capacitors 2101 and 2106 are added, to minimise this effect. Regulation of the 5 V Standby voltage happens as before (via opto-coupler 7104). If this feedback circuit is interrupted, the IC starts to work in an open loop configuration, and the output voltage will rise rapidly to 12 V. To prevent this, an Over Voltage Protection (OVP) circuit is added (thyristor T106 and zener 6108). If the 5 V Standby voltage exceeds the zener voltage (6.8 V), the thyristor is triggered, and will limit the output voltage.


9.3 Video Path

9.3.1 Power Supply Tuner (Diagram K1)

The power supply of the Tuner is now controlled with a voltage stabiliser (item IC7113). This is done, to assure a more accurate power supply to the tuner.

9.3.2 Anti-Plop Circuit (Diagram K3)

Anti-plop

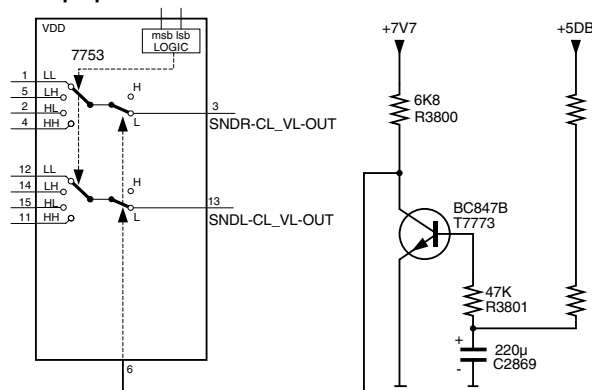

CL 16532149_079.eps
131201

Figure 9-1

As capacitor C2869 is not charged at power start-up, transistor TS7773 will block and pin 6 of audio switch IC7753 is 'high'. This means that the sound is muted. After charge-up, TS7773 will conduct and the audio signals are passed.

9.3.3 RGB Path (Diagram F)

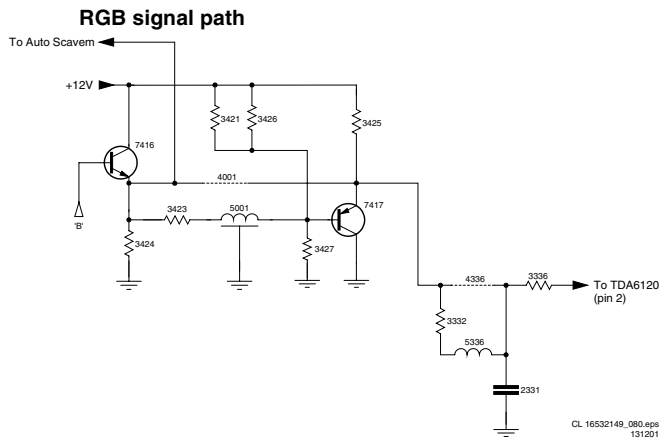


Figure 9-2

The RGB signals from the HOP are fed to three identical amplifiers (TDA6120). We take one of them (B, item 7330) as example for the description. After emitter follower TS7416, the signal is tapped for the Auto Scavem circuitry, and is fed to TS7417. This emitter follower sends the signal, with the same DC-voltage, to the amplifier. In order to cope with the higher definition, this IC has a larger bandwidth (20 MHz) as the one used in the MG3.1E.

9.4 Feature Box 7 (Diagram L)

The objective for this chassis is was, to reach a sharper picture by means of a higher definition. This is achieved via the so-called 'Pixel Plus' feature. So, what is Pixel Plus?

9.4.1 Introduction

In the Feature Box 7 (FBX7), a new IC is used, called the 'Eagle'. This IC does the following picture improvements:

- Horizontal: increases from 840 to 1680 pixels per line (the number of pixels is doubled per line). This, by itself, does not mean an improvement in definition however. To achieve that, the new pixels are digitally processed inside the Eagle with Luminance Transient Improvement (LTI) and Peaking. This will give the new pixels extra picture information, which results in steeper slopes and contrast improvement at details.
- Vertical: increases from 625 lines (PAL) to 833 lines. Also, those new lines are processed inside the Eagle with LTI and Peaking, again resulting in lines with extra picture information.
- The line frequency is fixed on 31250 Hz and the frame frequency at 75 Hz (this will give no frame-flicker). Also, other modes, like 'Digital Scan' are still possible.
- The colour enhancement features of the TOPIC are done by the Eagle.

9.4.2 Block diagram

FBX7

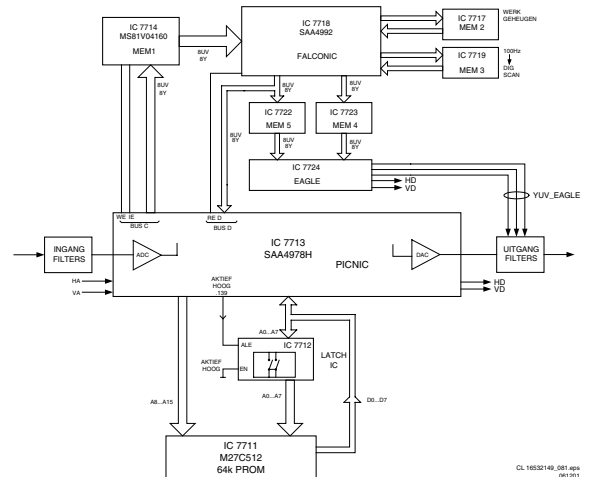


Figure 9-3

The 50 Hz YUV signals, coming from the HIP, are fed to the PICNIC via an anti-aliasing filter.

The (AABB) frame frequency doubling is done by the PICNIC (SAA4978, 160 pins QFP) together with a field memory (MEM1). This IC can handle most 100 Hz functions (except Progressive Scan).

This PICNIC has an internal CPU and a (small) integrated ROM. The actual FBX7 software is located in an external ROM (item 7711). In order to limit the number of connections between the PICNIC and the external ROM, a number of lines are used twice. The lines A8 to A15 are fixed lines, while the lines A0 to A7 are made switchable with the eight data lines of the ROM. This is done via a Latch (item 7712), which is controlled by pin 139 of the PICNIC (the ALE signal). Via bus 'C', a digitalised signal is presented to MEM1, which is used for the 50 to 100 Hz conversion. The signal goes further via the data-bus to the FALCONIC. This IC has the following functions:

- Line flicker reduction.
- Digital Noise Reduction (DNR).
- Progressive scan (262.5 - 525 or 312.5 - 625 lines per frame).

At the end, the digital YUV signals enter, via MEM4 and MEM5, the Eagle IC.

This IC has the following functions:

- Luminance Transient Improvement (LTI).
- Peaking.
- Programmable number of lines.
- Programmable number of pixels per line.
- Demo mode (split screen).
- Improved colour transients (CTI) and colour enhancement (TOPIC).
- Improved vertical zoom.

The digital YUV-signals from the Eagle go, via a passive output filter, to the HOP.

As only the Eagle IC is new, it is described below in more detail. For a detailed description of the other ICs, please check the training manual of the MG3.1E.

9.4.3 Eagle (Diagram L2)

Introduction

Some strong picture improvements are carried out inside the Eagle, which all contribute to the excellent picture quality. These improvements are:

- LTI (both horizontal and vertical).
- CTI (only horizontal).

- Peaking (both horizontal and vertical).
- More pixels per line.
- More lines per frame.
- Better colour transitions.

By means of over sampling, the video signals get a sample frequency of 64 MHz, a bandwidth of 20 MHz, and 1680 pixels per line (was 32 MHz, 10 MHz and 840 pixels/line). This requires two extra field memories (MEM4 and MEM5).

The Eagle can handle four different modes:

- **Digital Natural Motion (PAL):**
100 Hz, 2fH, 2:1 Interlace (1680 pixels x 625 lines)
- **Pixel Plus (PAL):**
75 Hz, 2fH, 2:1 Interlace (1680 pixels x 833 lines)
- **Double Lines (PAL):**
50 Hz, 2fH, 2:1 Interlace (1680 pixels x 1250 lines)
- **Pixel Plus (NTSC):**
60 Hz, 2fH, 2:1 Interlace (1680 pixels x 1050 lines)

LTI (Luminance Transient Improvement)

The main objective of LTI is a steeper slope at contrast transitions (e.g. from 10 mV to 900 mV within 3 pixels i.s.o. 5 pixels for one detail). It is based on waveform altering around a signal jump.

Important: The LTI, as used in the Eagle, is designed for interpolated picture contents. This means that for pixel/line doubling, one of the two pixels/lines is an interpolated value. When a picture jump is interpolated, you will get extra room to make it steeper (you get extra pixels to describe the slope).

Without interpolation, you cannot use this kind of LTI.

- LTI can add 'ears' to the waveform at the jump (a kind of controlled overshoot).
- LTI 'estimates' the frequency of the jump and will adapt the amplification to this frequency.
- LTI is applied both horizontal as vertical.
- LTI is amplitude dependent. This means that only 'big' jumps are processed. It works with a threshold, which is coupled to the noise meter via the Auto TV software.
- LTI is also frequency dependent. This means that it is distributed over the slopes. When there are many steep slopes in the signal, LTI will only process the steepest ones. If there are only a few slopes, LTI will process all of them. This is fully hardware implemented.

Horizontal LTI

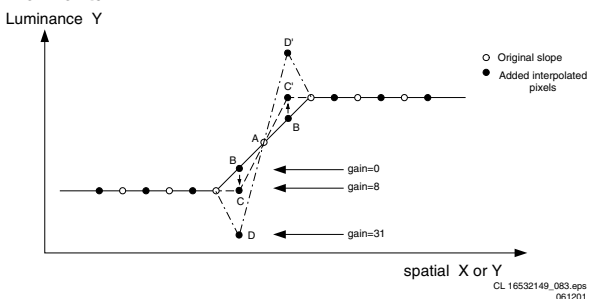


Figure 9-4

For horizontal LTI, the number of pixels is doubled (64 MHz) by means of interpolation. Pixel A at the transition will keep its luminance value, while the (new) pixels B can have a luminance value of zero to max. 31. For example:

- Pixels B can keep the same value (gain = 0)
- Pixels B can get the value of C and C' (gain = 8), which will give a steeper slope.
- Pixels B can also get the value of D and D' (gain = 31), which will give an even steeper slope with the so-called 'ears'. These 'ears' will give a **contrast** improvement.

For CTI, the same principle is used, in order to get better **colour** transitions.

Vertical LTI

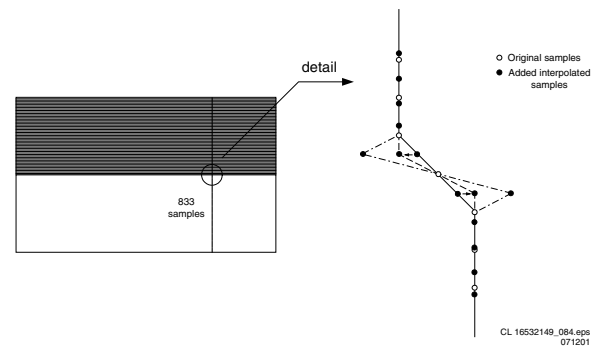


Figure 9-5

The principle for vertical LTI is the same as for horizontal LTI. The shift from 625 to 833 lines is done by means of a scaler. With these extra interpolated samples, it is possible to create steeper slopes, possibly with 'ears'.

Peaking/Coring

The objective of 'peaking' is contrast improvement (e.g. from 50 to 70 mV_{PP} for one detail).

It uses a noise threshold (coring = non-linear filtering around zero-level), thus it works everywhere in the picture (except below the threshold level).

The added difference signal is frequency dependent, which results in frequency dependent contrast improvement. When the difference signal becomes too large, the peaking is reduced (smartness).

Peaking

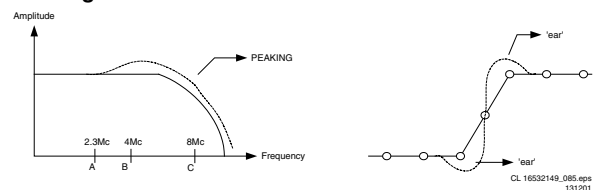


Figure 9-6

To obtain above shown filter characteristic, filters are set at three parameters (A, B, and C). In this way, only the higher frequencies are 'lifted'. After sending the luminance signal through these filters, the filter output is added to the original signal. In this way, the so-called 'ears' are created, together with the steeper slopes. These 'ears' will give a **contrast** improvement at details.

Both horizontal and vertical peaking is **amplitude dependent**: the higher the signal jump, the lower the peaking. This is done to avoid that high jumps get big 'ears', because this will introduce nasty contouring. To avoid peaking on noise levels, coring is used. The coring threshold is set via the Auto TV software, by means of the noise meter.

Therefore, the result is that **only details** are processed by the peaking.

The horizontal peaking is also **frequency dependent**: it is possible to perform peaking around three frequencies (when combined, it is even possible to peak at variable frequencies). In Auto TV, this feature is software coupled to the sharpness meter, in order to get the most optimal filter characteristic. The vertical peaking works on a fixed frequency.

Colour Enhancements

In the FBX6 (as used in the MG3.1E), the TOPIC handled the colour enhancement features, such as: 'skin tone correction', 'blue stretch', and 'green enhancement'. In the new FBX7, all this is done by the Eagle IC.

Power Supply and POR

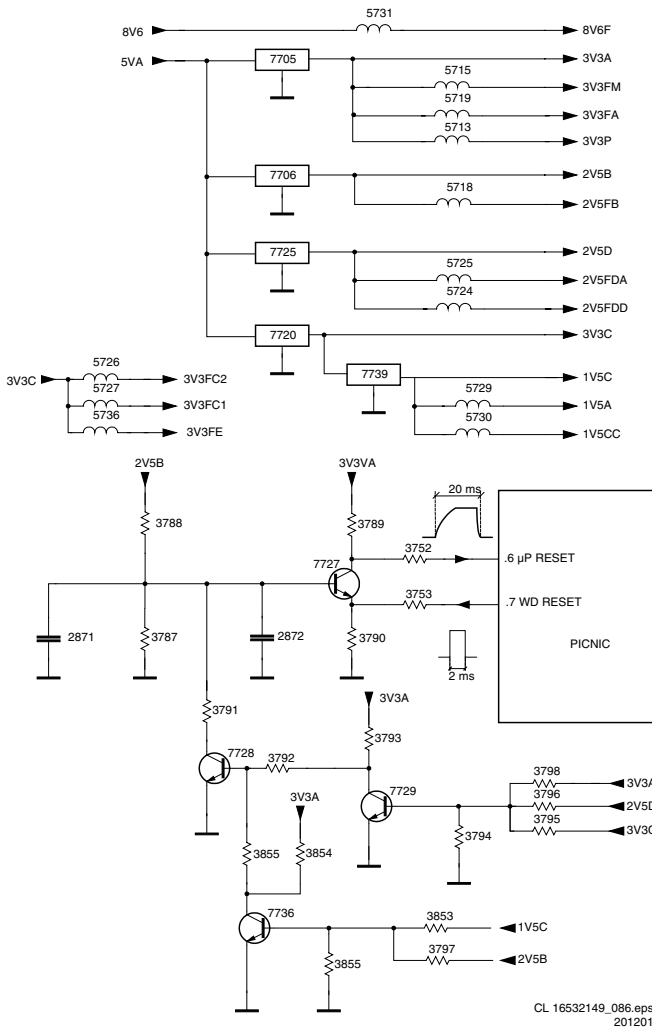


Figure 9-7

Besides the two incoming voltages 8V6 and 5V2, also five voltage stabilisers are used to derive the necessary voltages. This is done for power consumption reasons.

Via a reset circuit (TS7727) a reset pulse (POR) of 20 ms is generated for the μ P inside the PICNIC and for the ROM. After 'power on', the 3V3 is built up (derived from the 5V2). Transistor TS7727 blocks and pin 6 of the PICNIC will follow the rising slope of the power supply. As soon as the power supply is stabilised, capacitor C2872 will charge (via R3788). When this voltage reaches 0.6 V (after 20 ms), TS7727 starts to conduct, and the voltage at pin 6 goes low again. The μ P is reset now. If the PICNIC cannot communicate with the ROM, the 'watchdog' will generate a reset pulse (on pin 7), which will re-start the cycle again.

If one of the power supplies is absent (or too low), then a safety problem can occur in some cases (e.g. a too high temperature of the stabiliser). To prevent this from happening, the voltage dividers at the bases of the transistors TS7729 and TS7736, are calculated such that they will block when above described situations occurs. In this case, the base of TS7727 is kept 'low' by the conducting TS7728, until the problem is solved. The μ P receives no POR pulse, and cannot be reset.

Output

The YUV signals presented to the HOP come from the Eagle. These three signals have all the same circuitry so it is explained once (for Y).

YUV Output Filter

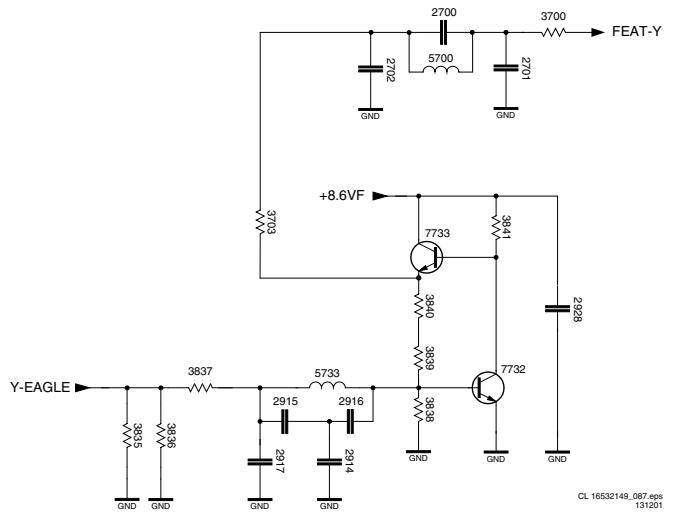


Figure 9-8

The YUV signals are first filtered by a 64 MHz passive filter (L5733 and C2914-2917). Because the output signals from the Eagle are too small to drive the HOP directly, they are amplified by the circuit around TS7732 and TS7733. The gain is determined by R3839, R3840, and R3837. For the Y-signal the gain is 2, for the U-signal it is 1.33, and for the V-signal it is 1.05.

9.5 Auto Scavem

9.5.1 Introduction

To improve the sharpness, the Scan Velocity Modulation (Scavem) circuit modulates the deflection speed as a function of the picture contents. This feature uses a separate Scavem deflection coil.

Auto Scavem is introduced, to be able to display the high definition signal from the FBX7. As the Scavem circuit is now controlled by the Auto TV software, it is called Auto Scavem. The circuit, with the Scavem amplifier, is located on a separate PWB (in front of the SSP), and is connected to the picture tube panel.

9.5.2 Normal Scavem

Block diagram

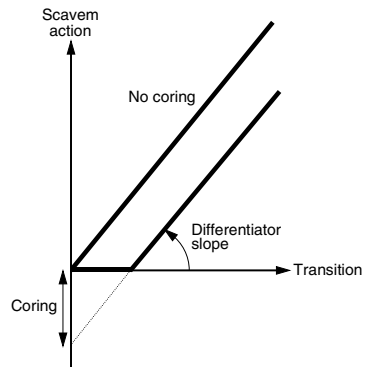
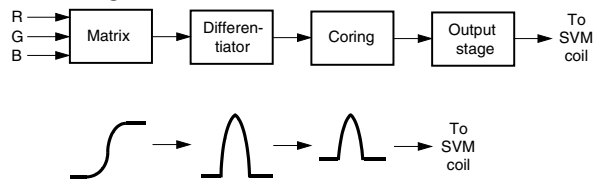


Figure 9-9

With normal Scavem (as used in the MG3.1E), the RGB signals are added together and differentiated before they drive the Scavem coil. The coring block prevents that Scavem processing is done on low signal levels.

9.5.3 Auto Scavem (Diagram SC)

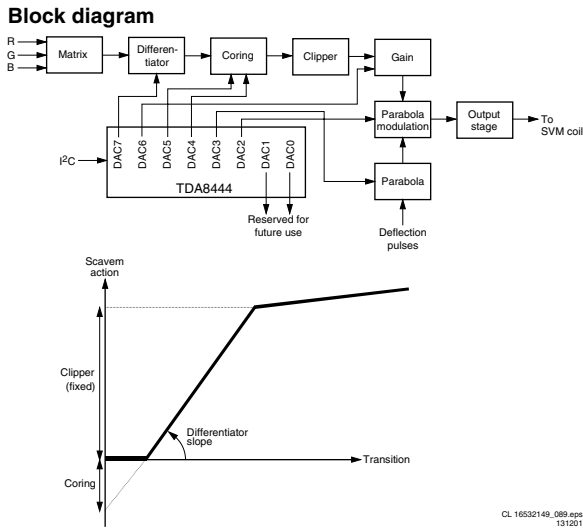


Figure 9-10

This new Auto Scavem circuit include some extra blocks:

- Clipper
- Parabola modulation

Auto Scavem is fully software controlled, by means of I²C. The speed, at which Auto Scavem is adapted, is controlled by the Auto TV algorithm. This adaptation takes place together with the FBX initialisation, and takes about 1 second. The different circuit stages are controlled via a DAC (item 7500, TDA8444). The new Auto Scavem circuitry also produces higher Scavem currents, which results in sharper pictures. For the circuit description, we splitted the circuit in eight stages.

Matrix and Differentiator

Stage 1 and 2

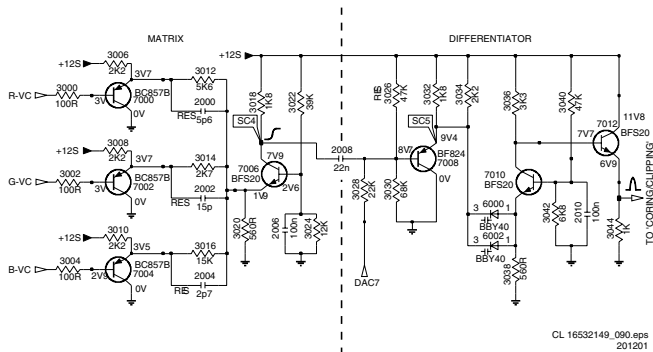


Figure 9-11

The RGB signals are added via transistors 7000, 7002 and 7004, on the emitter of transistor 7006. This is done via resistors 3012, 3014, and 3016, which have a different 'weight' factor. This, to regain the luminance signal.

The next circuit is the differentiator. The combined signal enters this circuit at the base of transistor 7008. The DC-level of this transistor is controlled by the DAC7 line, which is dependent of the 'sharpness meter' reading in the Auto TV algorithm. By means of this control signal, the voltage and capacity of varicap diode 6000 is altered, which will adapt the differentiator.

The slope of the differentiator is controlled by this DC-level. The differentiation itself is done by varicap diode 6000. Output signal goes from the collector of transistor 7010 via emitter follower (= buffer) 7012, to the next stage.

Coring/Clipping and Gain

Stage 3 and 4

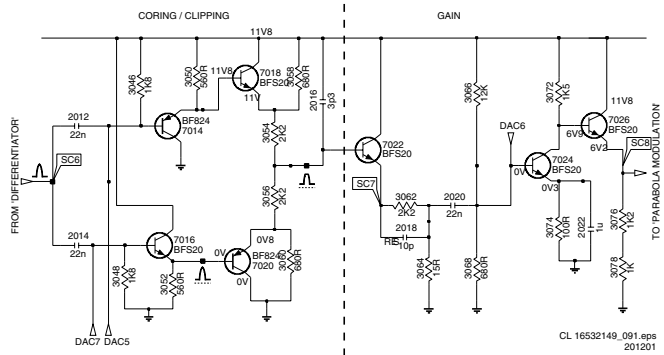


Figure 9-12

The coring circuit (items 7014 and 7016) prevent Auto Scavem on the lowest signal levels (= noise), while the clipper circuit (items 7018 and 7020) always give the same amount of Scavem above a certain level.

The levels at which this must happen, are controlled by the DAC4 and DAC5 lines, and are dependent of the 'noise meter' reading in the Auto TV program.

The input signal enters this circuit at emitter follower 7022, and is strongly attenuated via voltage divider R3062 and R3064. This, because the gain of transistor 7024 is set with the adjustable voltage divider of R3066, R3068 and R3070. The level at which this happen, is controlled by the DAC6 line, and is dependent of the 'sharpness meter' reading in the Auto TV program, the picture tube size, and the sharpness setting by the customer.

Parabola Generation

Stage 5

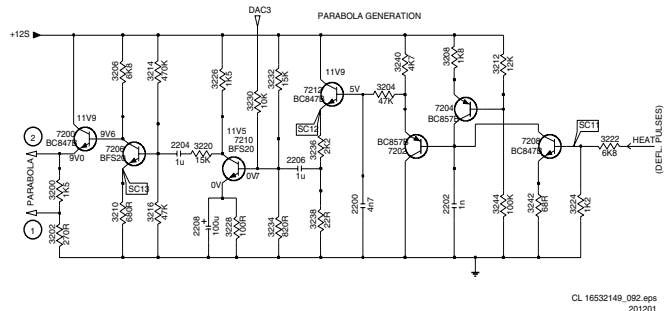
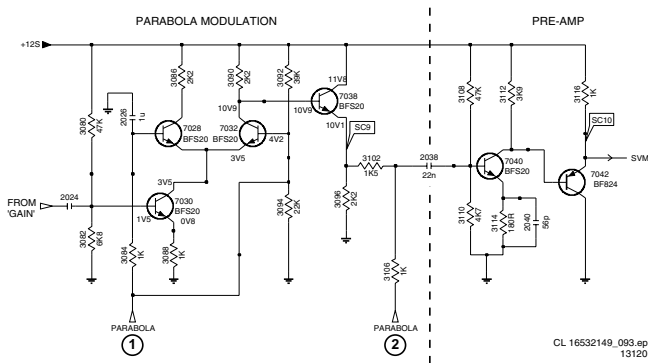


Figure 9-13

In addition, the Scavem signal is modulated with a parabola. This is necessary, because the picture tube is less sensitive for Scavem in the centre as on both sides.


On the CRT-panel, the 'heater' pulses are used to create a parabola on line frequency. This parabola is made with transistors 7204 and 7206. The DC-level of these transistors is controlled via the DAC3 line. In this way, you can control the parabola via software. The level is dependent of the 'sharpness meter' reading in the Auto TV program, the picture tube size, and the sharpness setting by the customer.

Parabola Modulation and Pre-amplifier**Stage 6 and 7****Figure 9-14**

The Scavem signal enters at the base of transistor 7030. Transistors 7028 and 7032 are complementary. Normally, the same current goes through both components, but because on one of them (7028) the parabola signal is offered, the Scavem signal is now modulated and inverted.

After buffer 7038, the parabola signal is again added to the (now inverted) signal, so that only the modulated signal is available on the input of the pre-amplifier (items 7040 and 7042).

Pre-amplification is done via a voltage amplifier (7040) and an emitter follower (7042).

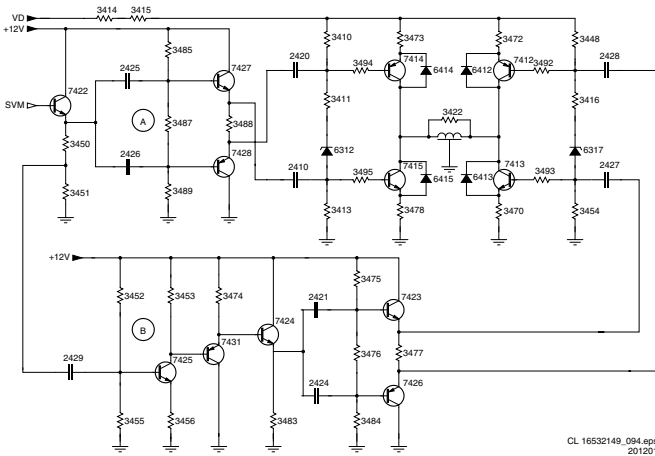
Final Amplifier (Diagram F)**Stage 8****Figure 9-15**

Finally, the Auto Scavem signal arrives, via emitter follower 7422, at stage [A] on the CRT panel. Transistors 7427 and 7428, together with power transistors 7414 and 7415, form the power amplifier, which can deliver the high Scavem currents. From the emitter of 7422, a signal is taken for stage [B]. This signal is **inverted** by transistor 7425 and buffered by 7431 and 7424. The next stage is identical to that of stage [A]. At a positive alteration of the Scavem signal, transistors 7427 and 7415 in stage [A] will conduct, while 7428 and 7414 are blocked. In stage 'B', the positive pulse is inverted, so transistors 7426 and 7412 will conduct, while both 7423 and 7413 are blocked. The Scavem current will flow now, via transistor 7412, through the Scavem coil and then through 7415.

During negative alterations, the current will flow through transistor 7414, the Scavem coil, and transistor 7413.

9.6 Wireless Surround Amplifier (Diagram W)

This module is also used in the MG3.1E, but the circuit was not described yet.

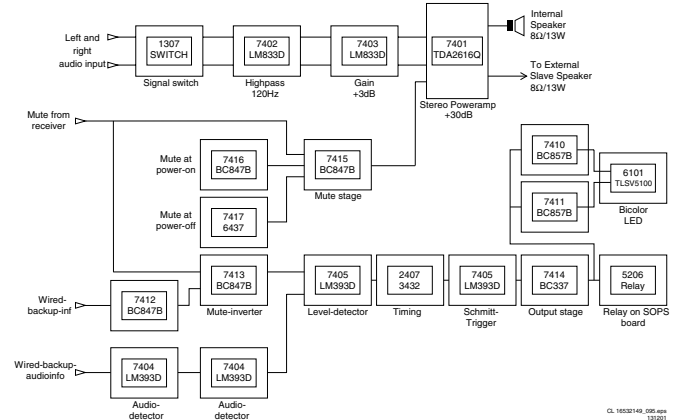9.6.1 Block Diagram**Wireless Surround Amplifier****Figure 9-16****9.6.2 Amplifier (Diagram W1)**

The used amplifier, TDA2616Q, is a stereo power amplifier with voltage gain of 30 dB. This power amp can deliver 2 x 12.5 W into 8 Ω load. Here the amplifier is used with a symmetrical power supply, therefore no output capacitors are necessary. To avoid oscillations, a so-called 'Boucherot network' (R3453-C2433, and R3452-C2434) is placed on both outputs.

The amplifier is powered by a symmetrical power supply. Main components are: the mains transformer, diodes 6407-6418, and capacitors 2404-2405. The measured output voltage varies between: +/- 14.5 and 19 V_{DC}. This depends of the delivered output power in both speakers (at nominal mains voltage).

IC7402 and all passive components around this part, form a high pass filter (-3 dB/120 Hz). This filter is implemented because the used box and speaker are not intended to reproduce low frequencies. A pre-amp, IC7403, gives an additional 3 dB gain to give the whole system the correct sensitivity.

The pre-amplifier and filter-part, work on a symmetrical power supply +/- 9 V_{DC}. These voltages are derived from the main supply with zenerdiodes 6401-6402, resistors 3401-3404, and capacitors 2402-2403

Mute

To ensure 'plop' free operation, some additional circuits are required. The power amp can be muted in three different ways by transistor 7415:

- **At 'power on'**. The circuit around 7416 gives a delayed at start-up, to allow the power supplies to become stable.
- **At 'power down'**. In normal operation, transistor 7417 is 'on', 7415 is 'off', and amplifier 7401 is enabled. At power down, the transistor 7417 is fast switched 'off', 7415 is 'on', and the amplifier is muted before the power supplies become instable. Diode 6437 gives an additional mute when the relay switches off.
- **Mute from the receiver**. When there are perturbations and interferences during the transmission, the mute output line of the receiver (connector 1401 - pin 1) becomes 'high' (4 V_{DC}), and turns 'on' transistor 7415. This will mute the output amplifier.

Timing

When the transmission of AC3 surround signals is ended (e.g. television 'off'), the mute line from the receiver becomes 'high' and mutes the amplifier via TS7415. At the same moment, the output of 7405 becomes 'low'. Now, capacitor 2407 starts discharging into R3432. When the voltage on the positive input of the comparator becomes lower than the voltage on the negative input, the output of the comparator turns from 'high' to 'low' and the relay is switched 'off' by 7414. The established time is 11 until 15 minutes (RC-time R3432/C2407). If the mute line turns 'low' during this discharge period, the capacitor 2407 is charged again and the complete timing is reset.

Wired Backup

When there is no possibility to use the **wireless** link (due to perturbations or interferences), it is possible to use a 'wired' backup solution. On the rear of the box is a backup input. By plugging in a cable with 3.5 mm stereo jack (order under nr. 3104 311 02251), the power supply for the receiver is interrupted. The audio signal enters the amplifier now via this backup input. An audio detector (7404) is added on the amplifier board, to obtain the same functionality when we use the wired backup.

The level detector (7405) is then triggered by the output of the audio detector, i.s.o. the mute line coming from the receiver.

LED control

TS7410 and 7411 control the red or green part of a bicolour LED, according to the voltage on the collector of TS7414.

9.6.3 Power Supply (Diagram W2)

The box can operate in two different modes: 'standby' and 'active' mode.

- In the standby mode all power is delivered by a so-called standby SOPS. This is a self-oscillating power supply, which can deliver 12 V_{DC} for the receiver board and the timing circuitry. The delivered current in the standby mode is rather low, mainly because the receiver board has a 'sleep' period of 3 seconds, and a 'listen' period of 0.2 s.
- In active mode (relay 'on'), the main transformer bypasses the standby supply, and all the needed power is now delivered by this transformer (via diodes 6405-6406 and capacitor 2401). This is done to reduce dissipation in standby mode.

SOPS standby supply: a stable output voltage of 12 V_{DC} is obtained by use of a low-drop voltage regulator L4940V12. The feedback is formed with components R3201, 3204, 3205, 3206, and an optocoupler.

At primary side, there is a rectifier part that produces 350 V_{DC} (items 6206 and 2207). The SOPS is formed by the FET 7207, transformer 5204, current-limiter 7206, 6205, and 6210, a control circuit (7204, 7205, and 6207) and an optocoupler (7203). The whole system works always in 'burst' mode. When a higher current is necessary, the burst period becomes larger, and the burst-repeat frequency increases. The SOPS can operate on mains voltages between 90 and 264V_{AC}. When the output voltage rises above 20 V_{DC}, (e.g. caused by a fault in the feedback system of the SOPS), the circuit around thyristor 6211 short-circuits the SOPS output. This gives a reliable protection for the whole circuit.

9.7 Abbreviation List

16:9-ARFRONT	16:9 aspect ratio input from side I/O
50Hz/60Hz	50Hz/60Hz mains frequency
6-CHANNEL DAC	6- Channel DAC
ADC	Analogue to Digital Converter
AFC	Automatic Frequency Control
AGC	Automatic Gain Control
AM/FM	Amplitude Modulation/Frequency Modulation
AM-SOUND	Amplitude modulated sound signal
AUDIO_C	Audio Centre
AUDIO_L	Audio Left
AUDIO_R	Audio Right
AUDIO_SL	Audio Surround Left
AUDIO_SW	Audio Subwoofer
AUDIO-L-PROC	Audio Left Processed
AUDIO-R-PROC	Audio Right Processed
AUDIO-SR	Audio Surround Right
AUX-SUPPLY	Auxiliary supply
BC-PROT	Beam Current Protection
BG	System B and G
BLC-INFO	Black Current Information
B-SC1-IN	Blue SCART1 in
B-SC2-IN	Blue SCART2 in
B-TXT	Blue teletext
B-vc	Blue from video-controller
C	Centre
C/16/9	Chrominance input
C-7-OUT	Chrominance on pin 7 SCART (variant)
CENTER	Centre speaker
C-FRONT	Chrominance front input
CL_DS_L	Constant Level Dual Screen Left
CL_DS_R	Constant Level Dual Screen Right
CL_L	Constant Level Left
CL_L_OUT	Constant Level Left out
CL_R	Constant Level Right
CL-R-OUT	Constant Level Right out
CODEC	Coding/Decoding
COMP	Comander ON/OFF
ComPair	Computer aided rePair
CORDL_L	Cordless Left
CORDL_R	Cordless Right
CORE TOP LEVEL	Core Top Level
CRT	Cathode ray tube
CSM	Customer Service Mode
C-UI	Chrominance UI
CVBS	Composite Video Blanking and Synchronisation
CVBS_Y-UI	CVBS Y UI
CVBS-PIP-DS	CVBS Picture In Picture dual Screen
CVBS-SC1-IN	CVBS SCART1 in
CVBS-SC2 OUT	CVBS SCART2 out
CVBS-SC2-IN	CVBS SCART2 in
CVBS-SC3-IN	CVBS SCART3 in
CVBS-SC4-IN	CVBS SCART4 IN
CVBS-TER	CVBS terrestrial
CVBS-TXT-DS-OUT	CBVBS Teletext Dual Screen out
CVBS-TXT-OUT	CVBS Teletext out
CVBS-Y-FRONT	CVBS Luminance front input
D/K	Monochrome TV system. Sound carrier distance is 6.5 MHz
DAC	Digital Analogue Converter
DAC-HOP	Digital Analogue Converter HOP IC
DC_PROT/	
AUDIO_SR	DC protection (for supply)
DC-filament	Filament supply voltage
DC-PROT	DC protection
DETECT	Detect signal side I/O input
DFU	Directions For Use: description for the end user
DIG_IN1	Digital In 1
DIG_IN2	Digital In 2

DIGITAL I/O	Digital In/Out	IN-SC2-B	In SCART2 Blue
DIG-OUT	Digital Out	IN-SC2-CVBS_Y	In SCART2 CVBS or Luminance (SVHS)
DNR	Dynamic Noise Reduction	IN-SC2-FBL	In SCART2 Fast Blanking
DS-AUDIO-L	Dual Sound Audio Left	IN-SC2-G	In SCART2 Green
DS-AUDIO-R	Dual Sound Audio Right	IN-UI-B	B input from UI
DSP	Digital Signal Processing	IN-UI-FBL	Fast Blanking input from UI
DST	Dealer Service Tool	IN-UI-G	G input from UI
DUET	SAA2505H DUET IC	IN-UI-R	R input from UI
DVD	Digital Versatile Disc	IO-BUS	In/Out bus
DYN-FASE-COR	Dynamic phase correction	IR-LED	Drive signal for the Service Infra Red LED
EHT-INFO	Extra High Tension information	IRQ	Interrupt ReQuest
EPG	Electronic Programme Guide (= NextView)	KEYBOARD	Top Control
EW-DRIVE	East-West drive signal	L	Left Audio
FALCONIC	Field And Line rate CONvertor IC	L/L'	Monochrome TV system. Sound carrier distance is 6.5 MHz. L' is Band I, L' are all other Bands
FBCSO	Fixed Beam Current Switch Off	LDP	Line Deflection Protection
FBL-DS-OUT	Fast Blanking Dual Screen out	LED	Light Emitting Diode
FBL-FDS	Fast Blanking Full Dual Screen	LEFT	Left
FBL-PIP	Fast Blanking PIP	LEFT_DOWNMIX	LEFT Down mix
FBL-SC1-IN	Fast Blanking signal for SCART1 in	LEFT_IN	Left In
FBL-SC2-IN	Fast Blanking signal for SCART2 in	LEFT_OUT	Left out
FBL-TXT	Fast Blanking Teletext	LF	Left output
FDSL-OUT	Full Dual Screen - Left out	LIGHT SENSOR	Light sensor
FDSR-OUT	Full Dual Screen - Right out	LINE-DRIVE	Line drive signal
FEAT-U	U from Feature Box	LMN	System L, M, N
FEAT-V	V from Feature Box	LNA	Low Noise Adapter
FEAT-Y	Y from Feature Box	LS CORRECTION	Picture with corrections
FILAMENT	Filament of CRT	LSP	Large Signal Panel
FILAMENT-PROT	Filament protection	LV-	Frame coil sink signal to the N/S correction circuitry
FLASH	Flash memory	LV+	Frame coil drive signal from the frame output stage
FM SOUND	Frequency Modulation Sound	MCADDEC_RESET	Reset signal (Master reset)
FRAME ROTATION	Frame rotation	MCS-MPEG	Multi channel sound - MPEG
FRAME-ROT +	Frame rotation +	MSP-CLOCK	Clock signal Multi-standard Sound Processor
FRONT-C	Front input chrominance (SVHS)	MUP	Micro Processor
FRONT-DETECT	Front input detection	MUTE	Mute line
FRONT-Y_CVBS	Front input luminance or CVBS (SVHS)	M/N	Monochrome TV system. Sound carrier distance is 4.5 MHz
GHOST-IN	Signal Ghost cancellation in	N52502	CAD-naming referring to other sub-schedule
G-SC1-IN	Green SCART1 in	NC	Not Connected
G-SC2-IN	Green SCART2 in	NTSC	National Television Standard Committee. Colour system mainly used in the USA and Japan. Colour carrier is at 3.579545 MHz
G-TXT	Green Teletext	NVM	Non Volatile Memory
G-vc	Green from video-controller	O/C	Open Circuit
HA	Horizontal Acquisition	ON/OFF LED	On/Off control signal for the LED
HA1	Horizontal Sync (diversity)	OSD	On Screen Display
HA-D	Horizontal Sync from HIP-IC to FDS	OTC	OSD, Teletext, and Controller
HD	Horizontal drive coming from PICNIC	OUT-1	Y-output POPOV IC
Hdefl-1in	Horizontal deflection signal needed for DC-shift circuitry	OUT-2	V-output POPOV IC
Hdefl-1in	Horizontal deflection linearity	OUT-3	U-output POPOV IC
HEATER	Heater (Filament)	OVERRULE-TXT	Overrule Teletext
HFB	Horizontal flyback	P2-5	For MG3.1E, status 4 (SCART 4)
HFB+13V	Non-rectified output 13V-winding LOT	P2-6	For MG3.1E, status 3 (SCART 3)
HFB-D	Horizontal Fly Back to FDS	P2-7	In MG3.1E, RGB 1FH/Front UI
HIP	High-end Input Processor	P50_OUT	Easy link (= Project 50) data line from SCART2
HOP	High-end Output Processor	PAL	Phase Alternating Line. Colour system mainly used in West Europe (colour carrier = 4.433619 MHz) and South America (colour carrier PAL M = 3.575612 MHz and PAL N = 3.582056 MHz)
HOSD PIP	Horizontal OSD PIP	PCB	Printed Circuit Board
HP	Headphone	PD	Power Down
HS-DS	Main, Horizontal sync input POPOV IC	PICNIC	Picture Improved Combined Network IC
I2C	Integrated IC bus	PILOT	Pilot Signal
I2S	Integrated IC Sound bus		
I2S-CL	I2S bus clock		
I2S-DSP-IN	I2S digital signal processor in		
I2S-DSP-OUT	I2S digital signal processor out		
I2S-DSP-OUT1	Serial-DSP-bus-out1		
I2S-WS	I2S bus Word Stroke		
IF	Intermediate Frequency		
IN-C_IN-R-SC2	Either Chrominance-in SCART2 or Red-in SCART pin 15		
IN-FRONT-SNDL	Sound Left front in		
IN-FRONT-SNDR	Sound Right front in		
IN-SC1-B	In SCART1 Blue		
IN-SC1-G	In SCART1 Green		
IN-SC1-R	In SCART1 Red		
IN-SC1-SNDL	In SCART1 Sound Left		
IN-SC1-SNDR	In SCART1 Sound Right		

PILOTMUTE	Pilot Mute signal	SL	Surround Left
PIP	Picture In Picture	SL-ST	Sliding stereo of the Stereo Demodulator IC TDA1578A
PIP-B	Picture In picture Blue		
PIP-FBL	PIP Fast Blanking	SNDL-CL-VL-OUT	Sound Left constant level, variable level out
PIP-G	Picture In Picture Green	SNDL-FRONT-IN	Sound Left front in
PIP-R	Picture In Picture Red	SNDL-HEADPH-OUT	Sound Left headphone out
PLL	Phase Locked Loop. Used for e.g. FST tuning systems.	SNDL-SC1-IN	Sound L SCART1 in
POPOV	Double Window/PIP IC	SNDL-SC1-OUT	Sound Left SCART1 out
POR	Power On Reset, signal to reset the uP	SNDL-SC2-IN	Sound Left SCART2 in
POWER-DOWN MUTE	Power Down Mute	SNDL-SC2-OUT	Sound Left SCART2 out
POWER-ON MUTE	Power On Mute	SNDL-SC3-IN	Sound Left SCART3 in
R	Right Audio	SNDL-SC4-IN	Sound Left SCART4 in
RAM	Random Access Memory	SNDL-UI-IN	Sound Left UI IN
RC5	RC5 signal from the remote control	SNDR-CL-VL-OUT	Sound Right constant level, variable level out
RESET	Reset signal	SNDR-FRONT-IN	Sound Right front in
RESET-AUDIO	Reset signal for Audio IC MSP3410	SNDR-HEADPH-OUT	Sound Right headphone out
RESET-AUDIO-INV	Inverted Reset signal for Audio IC MSP3410	SNDR-SC1-IN	Sound Right SCART1 in
RESET-FLASH	Reset signal flash memory	SNDR-SC1-OUT	Sound Right SCART1 out
RF	Right output (no companding)	SNDR-SC2-IN	Sound Right SCART2 in
RGB	Red Green Blue colour signals	SNDR-SC2-OUT	Sound Right SCART2 out
RIGHT	Right	SNDR-SC3-IN	Sound Right SCART3 in
RIGHT_DOWNMIX	Right Down mix	SNDR-SC4-IN	Sound Right SCART4 in
RIGHT_IN	Right In	SNDS-CL-VL-OUT	Sound surround constant level, variable level out
RIGHT_OUT	Right out	SNDS-VL-OUT	Surround sound Left variable level out
ROM	Read Only Memory	SNDS-VR-OUT	Surround sound Right variable level out
R-SC1-IN	Red SCART1 in		
R-TXT	Red Teletext	SOFAC	Sound and Fading Control
R-vc	Red from video-controller	SOUND L-HEADPHONE-OUT	Sound Left headphone out
S/C	Short Circuit	SOUND R-HEADPHONE-OUT	Sound Right headphone out
SAM	Service Alignment Mode	SOUND-ENABLE	Sound Enable
SC2-B-IN	SCART2 Blue in	SOUND-SELECT	Sound signal Selection
SC2-C-IN	SCART2 Chrominance in	SOPS	Self Oscillating Power Supply
SC2FH_IFH	Sand-castle 1fH/2fH	SPDIF	Sony Philips Digital Interface Format
SC2-G-IN	SCART2 Green in	SPDIF_IN1	SPDIF In 1
SC2-R-IN C-IN	Red in SCART2 or Chrominance in	SPDIF_IN2	SPDIF In 2
SCART	Syndicat des Constructeurs d'Appareils Radiorecepteurs et Televisieurs	SS LEFT	Surround Left
Scavem	Scan Velocity Modulation	SS RIGHT	Surround Right
SCAVEM-SW	Scavem- switch	SSP	Small Signal Panel
SCL	Serial clock line of the I2C bus	STANDARD-FM-1	Standard Frequency Modulation 1
SCL-F	Clock line of the I2C-bus fast (for TXT)	STANDARD-FM-2	Standard Frequency Modulation 2
SCL-S	Clock line of the I2C-bus slow	STANDBY	Standby
SDA	Serial Data line of the I2C bus	STATUS1/2/3	Status signal from Euro-connector 1, 2, or 3 to the P (1.29 - 3.31 V is 16:9 signal, 3.32 - 5 V is 4:3 signal)
SDA-F	Data line of the I2C-bus fast (for TXT)	STBY	Standby
SDA-S	Data line of the I2C-bus slow	STEREO	Stereo
SDM	Service Default Mode	SUBCAR	Sub Carrier
SECAM	Sequence Couleur Avec Memoire. Colour system mainly used in France and East Europe. Colour carriers are 4.406250 MHz and 4.250000 MHz	SUB-H	Horizontal Sync Sub-TV-Program (via FDS)
SEL_SOFAC_0	Selection-signal for SOFAC 0	SUB-V	Vertical Sync Sub-TV-Program (via FDS)
SEL_SOFAC_1	Selection-signal for SOFAC 1	SUBWOOFER	Subwoofer speaker
SEL_TO-MCS_LR	Selection switch MCS Left Right	SURROUND-LEFT	Surround Left
SELECT TO EXT2	Selection of Extern 2 input	SURROUND-RIGHT	Surround Right
SELECT_TO_CORDL_1	Selection signal for Cordless 1	SW	Subwoofer
SELECT_TO_MCS_CINCH_0	Selection signal for MCS Cinch 0	SYNC-SELECT	Synchronisation selection
SELECT_TO_MCS_CINCH_1	Selection signal for MCS Cinch 1	TOPIC	The Outmost Picture Improvement IC
SELECT-AUDIO CINCH1	Selection of audio via cinch input 1	TRIG	Triggering
SELECT-AUDIO-CINCH2	Selection of audio via cinch input 2	TUNED	Tuned-flag coming from the IF-IC TDA1597
SELECT-AUDIO-LR	Selection of Audio Left and Right	UB-DEC	U-input for FDS
SELECT-TO_CORDL_0	Selection signal for Cordless 0	U-DEC	U-dec (input signal for PICNIC)
SERVICE-DEFAULT	Service pin to activate SDM	U-DS-1FH	U Dual Screen 1 x Horizontal Frequency
SERVICE-MODE	Service pin to activate SAM	U-DS-2FH	U Dual Sound 2 x Horizontal Frequency
SIF	Sound Intermediate Frequency	U-DS-OUT	U Dual Screen out
SIFM	Sound Intermediate Frequency Mono	UF-DEC	U-MAIN input POPOV IC


U-FEAT	U-feature-box (output signal from PICNIC)	YF-SUB	Y-SUB input POPOV IC
UF-SUB	U-SUB input POPOV IC	Y-OUT	Luminance-signal to HOP-IC
UI	Universal Interface	Y-SUB	Y-output of HIP-IC on FDS
U-OUT	U-signal to HOP IC	YUV	Component video
U-SUB	U-output of HIP-IC on FDS	YUV-SELECT-2FH	YUV selection 2 x Horizontal Frequency
VA	Vertical Acquisition	uP	Micro Processor
VA1	Vertical Sync (diversity)		
VB-DEC	V input for FDS		
VD	Vertical Drive coming from PICNIC		
VD-D	Vertical sync to FDS		
V-DEC	V-dec (input signal for PICNIC)		
VDEFL-1	Vertical deflection connection 1		
VDEFL-2	Vertical deflection connection 2		
VDNEG	Negative vertical drive signal		
VDPOS	Positive vertical drive signal		
+VD-switched	Only for VGA sets (VD switched i.s.o. V_bat).		
V-DS-1FH	V Dual Screen 1 x Horizontal Frequency		
V-DS-2FH	V Dual Screen 2 x Horizontal Frequency		
V-DS-OUT	V Dual Screen out		
VFB	Vertical Flyback Pulse		
VF-DEC	V-MAIN input POPOV IC		
V-FEAT	V-Feature box (output signal from PICNIC)		
VF-SUB	V-SUB input POPOV IC		
VGA-B	VGA Blue		
VGA-FBL	VGA Fast-blanking		
VGA-G	VGA Green		
VGA-R	VGA Red		
VL_L	Variable level Left		
VL_R	Variable level Right		
VL_SL	Variable level Surround Left		
VL_SR	Variable level Surround Right		
VL_SW	Variable Level Sub-Woofer		
VL_SW_DBE	Variable Level Subwoofer Dynamic Bass Enhancement		
VLL_C	Variable level Centre		
V-OUT	V-signal to HOP-IC		
VOUT_C	V-out Centre		
VOUT_L	V-out Left		
VOUT_R	V-out Right		
VOUT_SL	V-out Surround Left		
VOUT_SR	V-out Surround Right		
VOUT-SW	V-out Subwoofer		
VREG	Opto-coupler feedback signal		
VS-DS	Main, vertical sync input POPOV IC		
V-SUB	V-output of HIP-IC on FDS		
WIRED BACKUP-INFO	Wired back up information		
WIRED-BACKUP AUDIO INFO	Audio signal (surround)		
WIRELESS SURROUND RECEIVER	Wireless Surround receiver		
WIRELESS TRANSMITTER	Wireless Transmitter		
X-RAY-PROT	X-Ray Protection		
X-tal	Quartz crystal		
Y/C	Luminance (Y) / Chrominance (C) signal		
Y_CVBS-SC2-IN	Luminance or CVBS SCART2 in		
YB-DEC	Y input for FDS		
Y-DEC	Luminance-dec (input signal for PICNIC)		
Y-DS-1FH	Y Dual Screen 1 x Horizontal Frequency		
Y-DS-2FH	Y-Dual Screen 2 x Horizontal Frequency		
Y-DS-OUT	Y Dual Screen out		
YF-DEC	Y-Main input POPOV IC		
Y-FEAT	Luminance Feature box (output signal from PICNIC)		

9.8 IC Data Sheets

In this paragraph, the internal block diagrams and pinning are given of ICs that are drawn as a 'black box' in the electrical diagrams (with the exception of 'memory' and 'logic' ICs).

9.8.1 Diagram B, TNY256 (IC7103)

Internal Block Diagram and Pinning

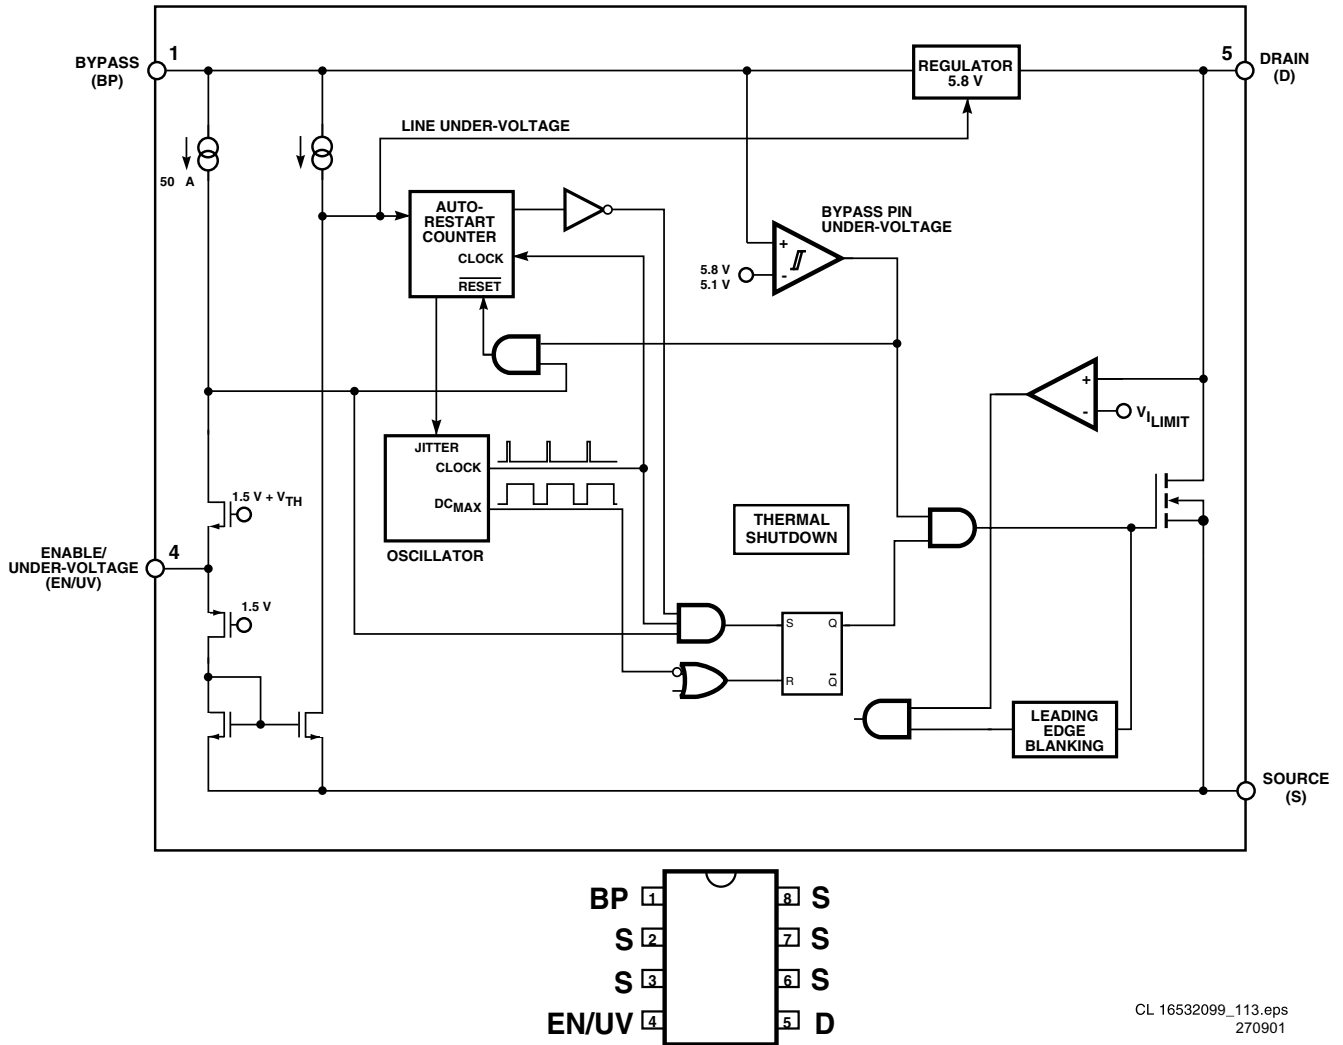

CL 16532099_113.eps
270901


Figure 9-17

9.8.2 Diagram K8, TEA6415 (IC7208)

Internal Block Diagram and Pinning

TEA6415C

BLOCK DIAGRAM

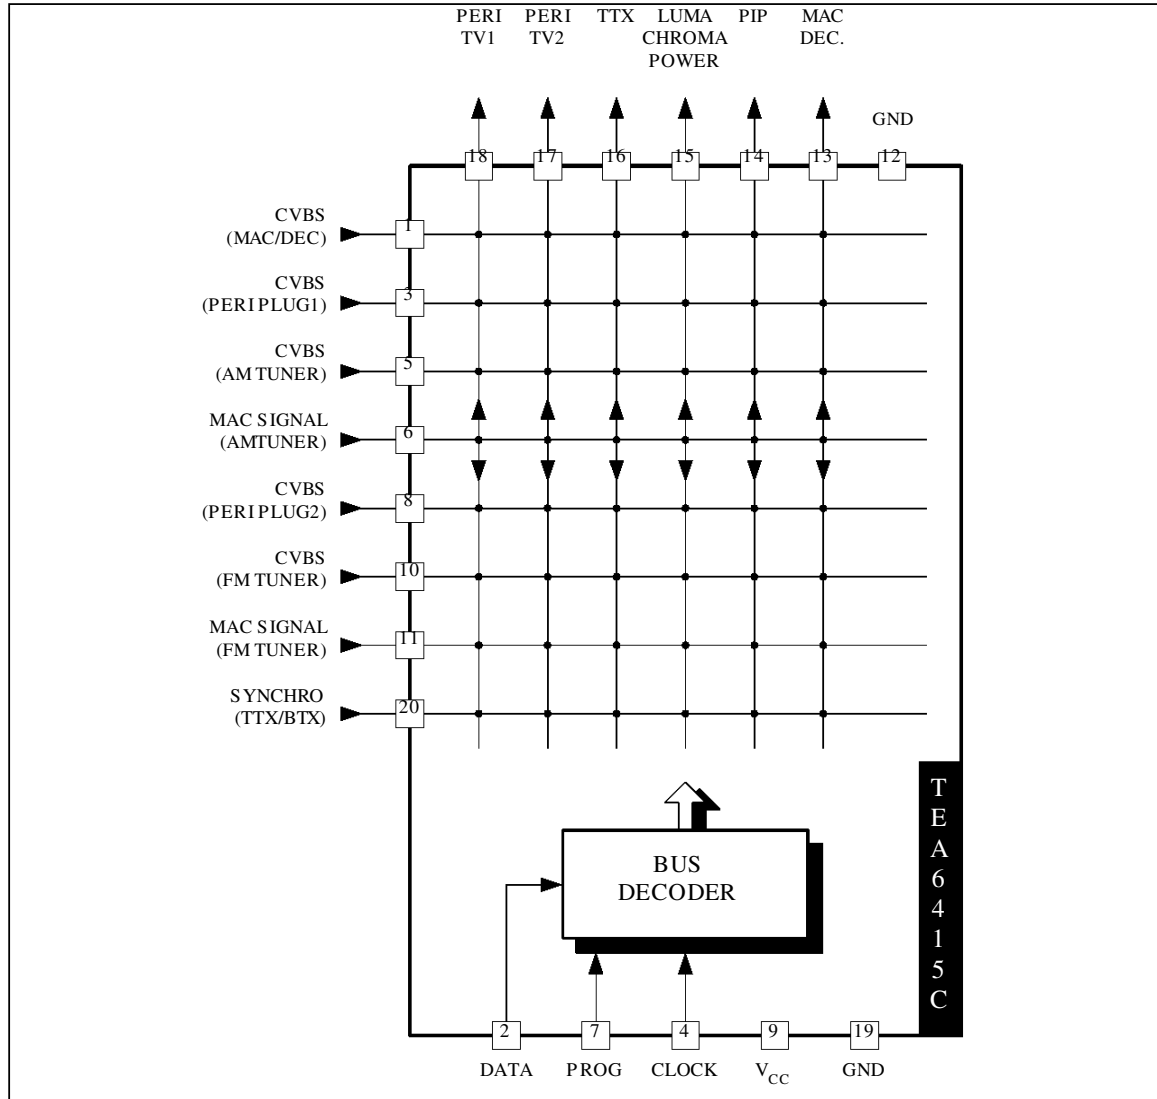



PIN CONNECTIONS

INPUT	1	20	INPUT
DATA	2	19	GROUND
INPUT	3	18	OUTPUT
CLOCK	4	17	OUTPUT
INPUT	5	16	OUTPUT
INPUT	6	15	OUTPUT
PROG	7	14	OUTPUT
INPUT	8	13	OUTPUT
VCC	9	12	GROUND
INPUT	10	11	INPUT

Figure 9-18

9.8.3 Diagram L2, T8F24EF (IC7724)

Internal Block Diagram and Pinning

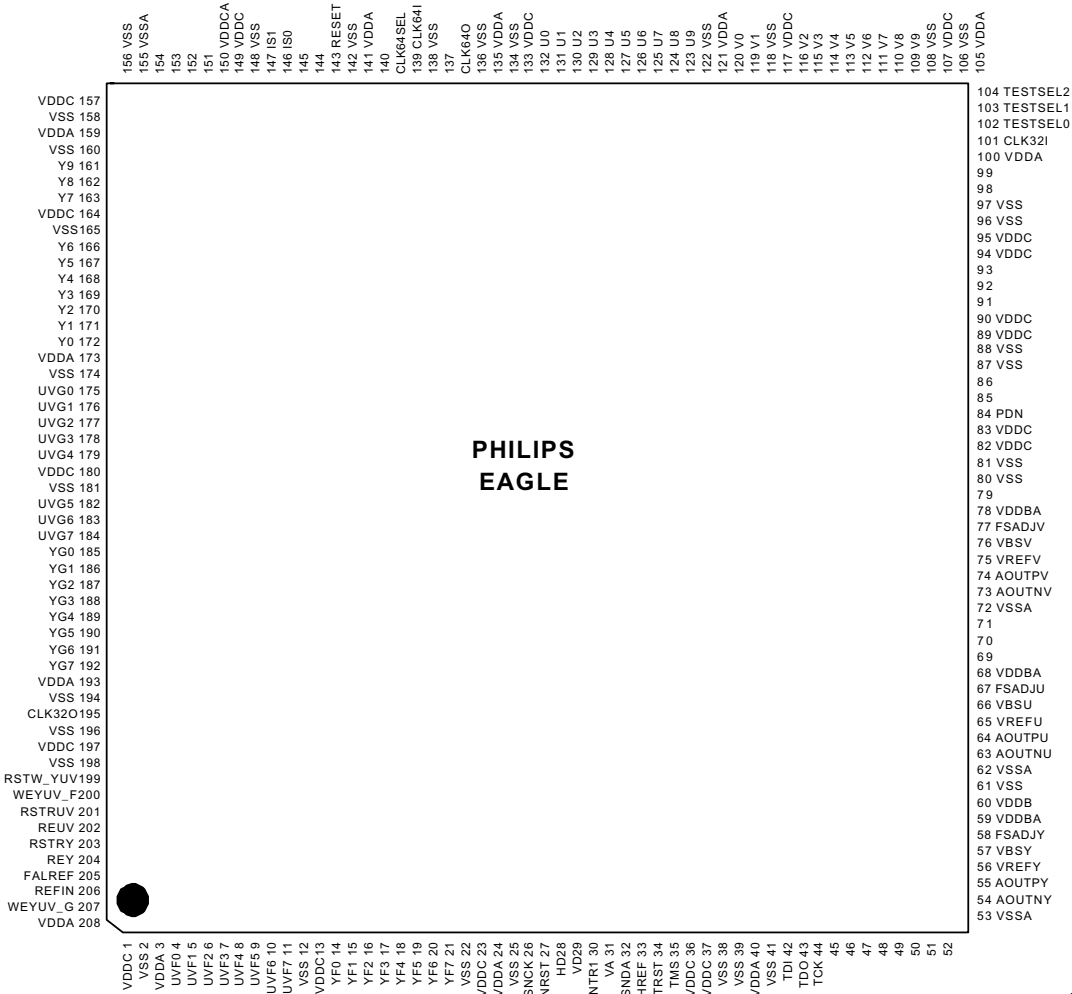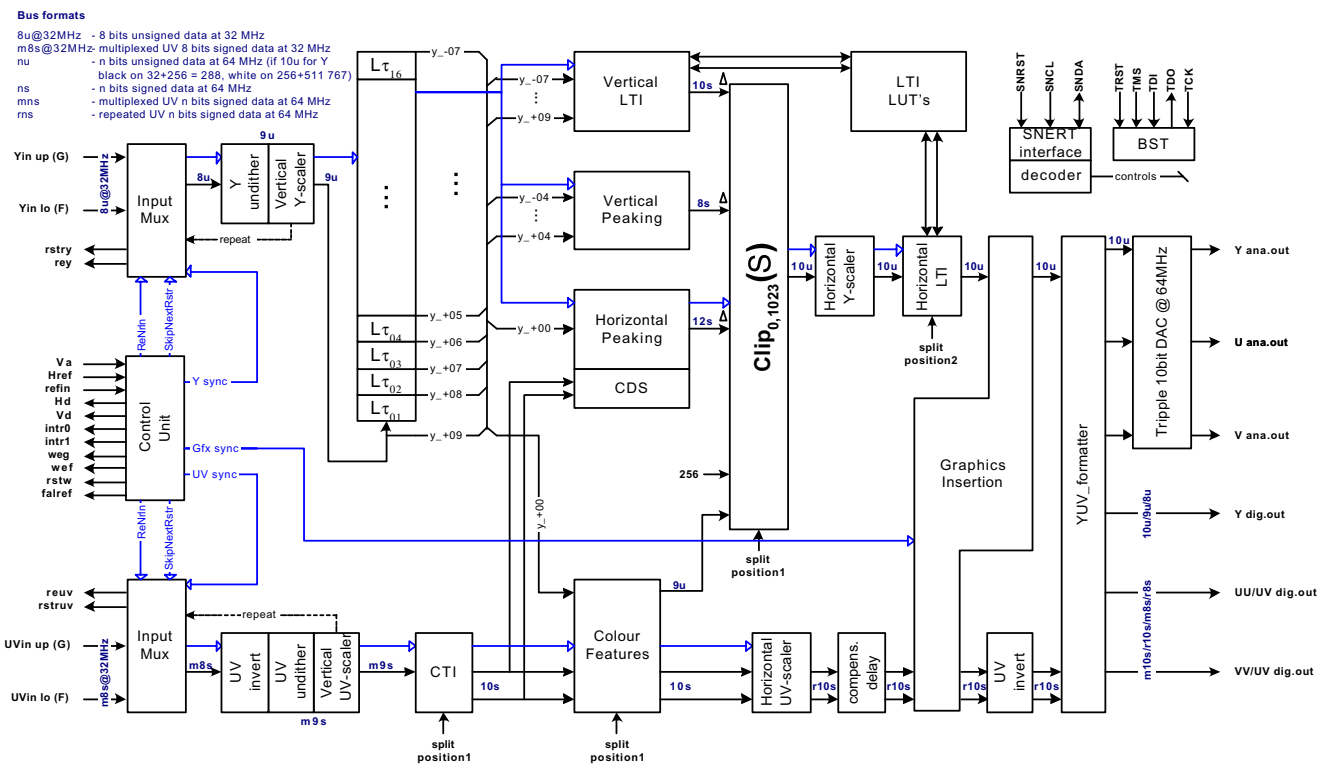


CL 16532149_110.eps
201201


Figure 9-19

9.8.4 Diagram N1, SAA2505 (IC7801)

Internal Block Diagram and Pinning

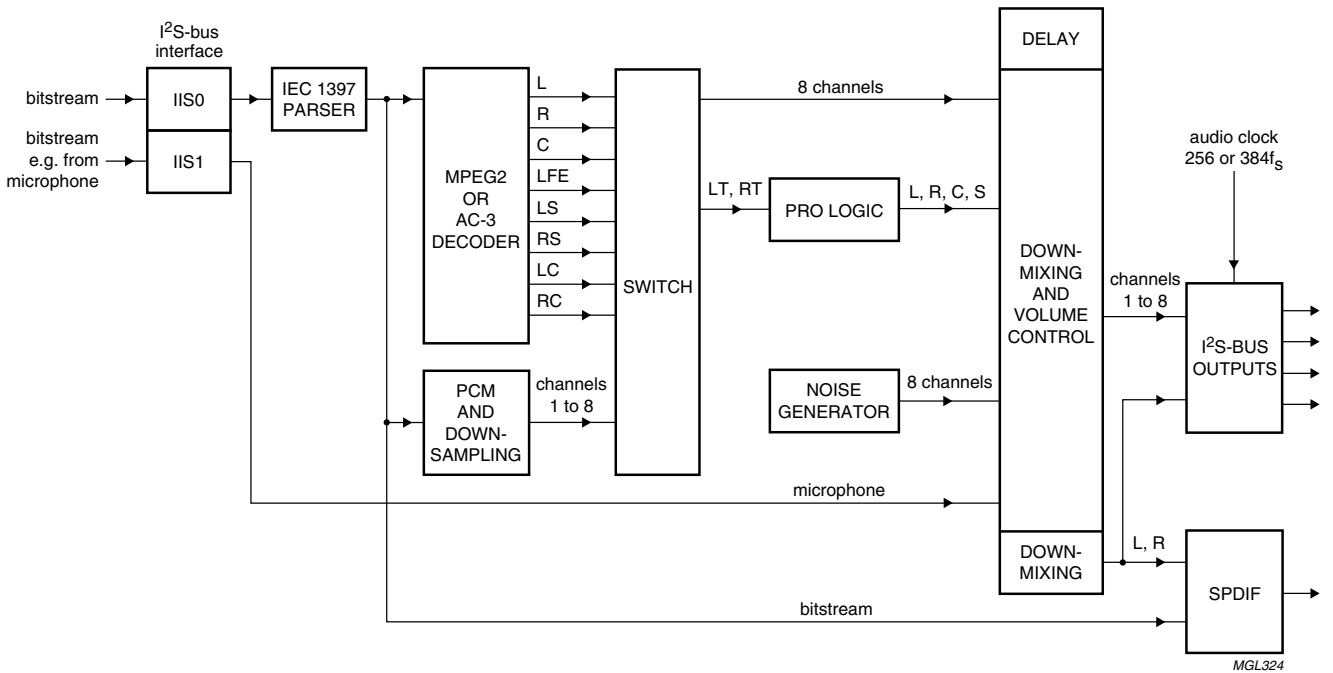

Simplified block diagram.

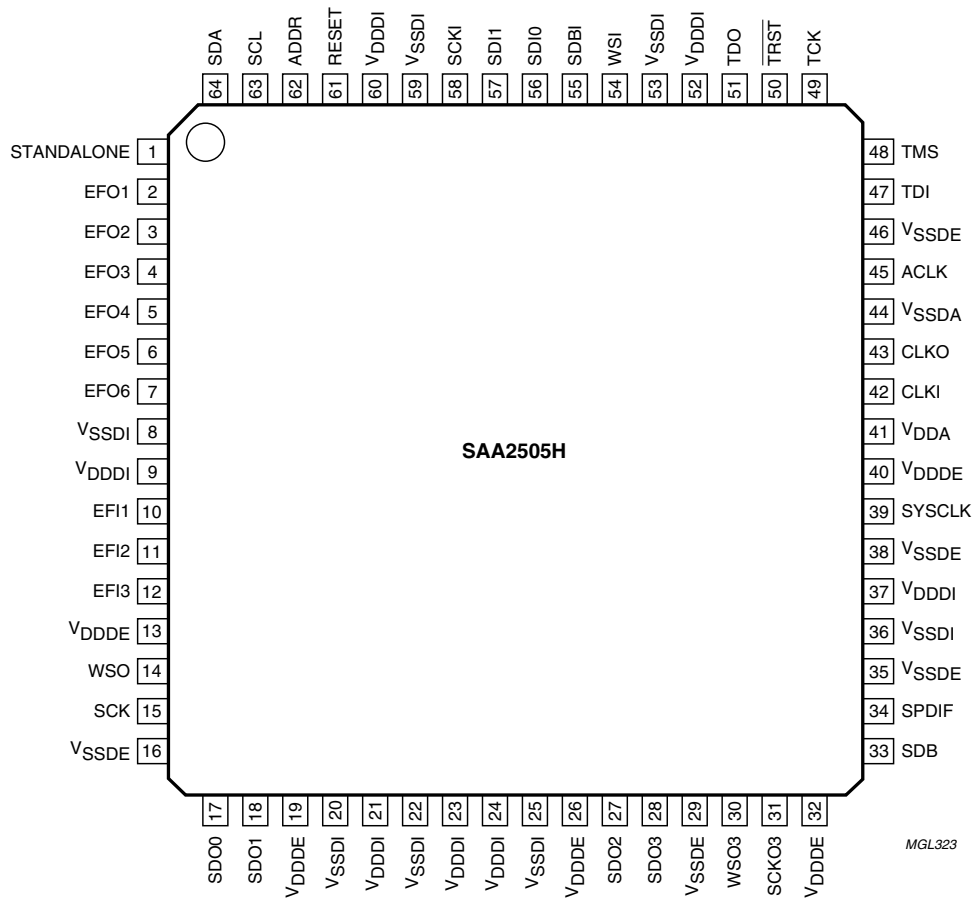

Pin configuration.

CL 16532149_112.eps
201201

Figure 9-20

9.8.5 Diagram U, MC68HC705J1A (IC7708)

Internal Block Diagram and Pinning

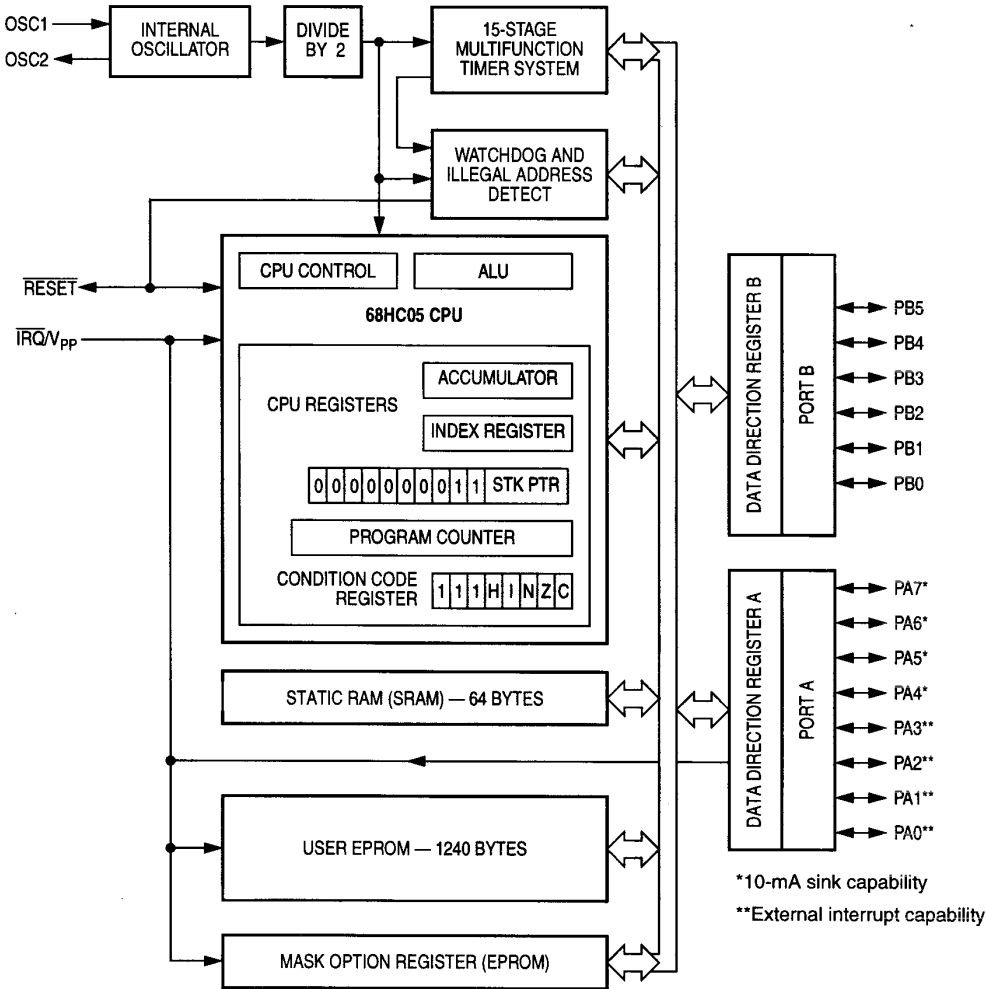


Figure 1-1. Block Diagram


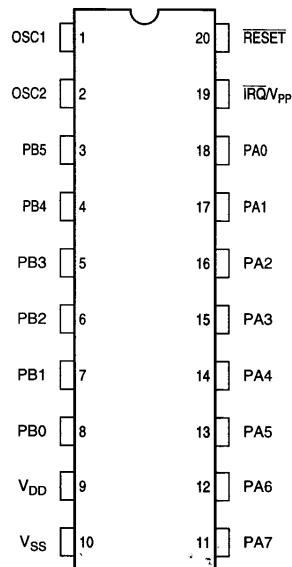


Figure 1-2. Pin Assignments

CL 16532149_114.eps
201201

9.8.6 Diagram U, TDA1597 (IC7701)

Internal Block Diagram and Pinning

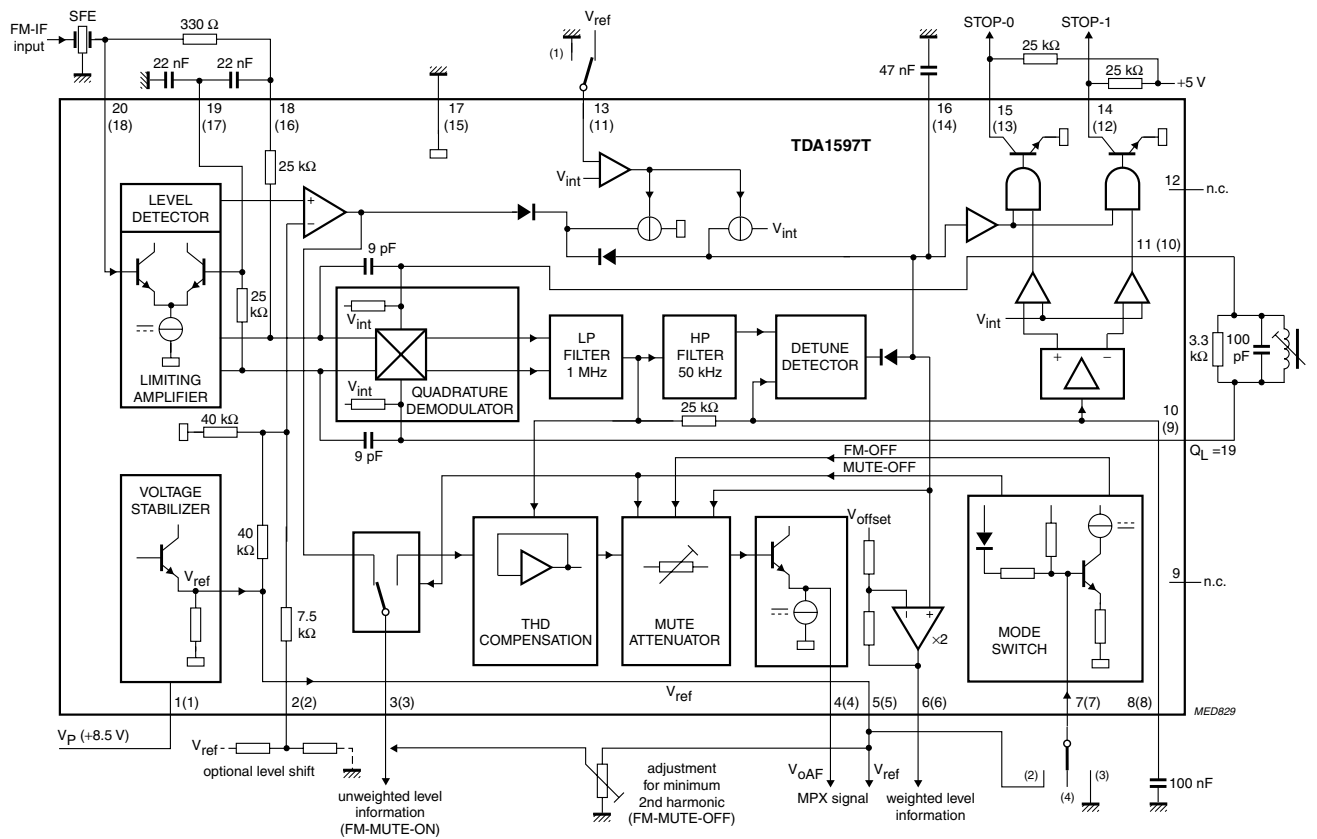

The pin numbers given in parenthesis refer to the TDA1597.

- (1) Connecting pin 13 (11) to ground is only allowed to measure the current on pin 16 (14).
- (2) FM-MUTE-OFF.
- (3) FM-OFF.
- (4) FM-MUTE-ON.

Block diagram and application circuit.

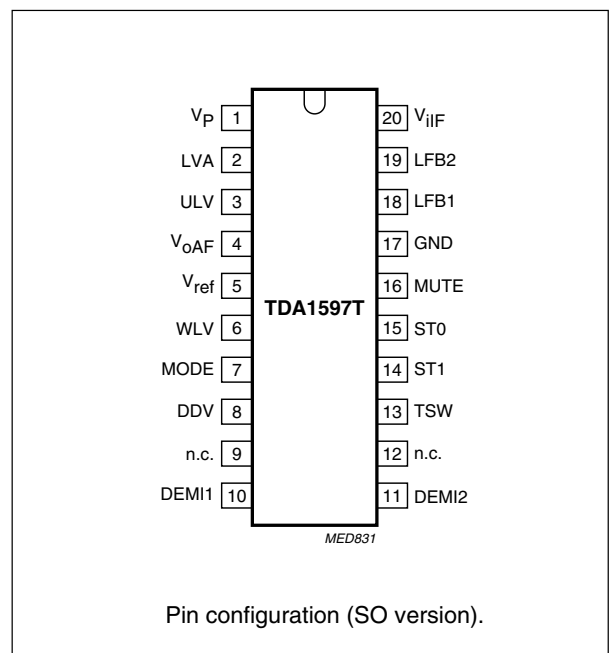
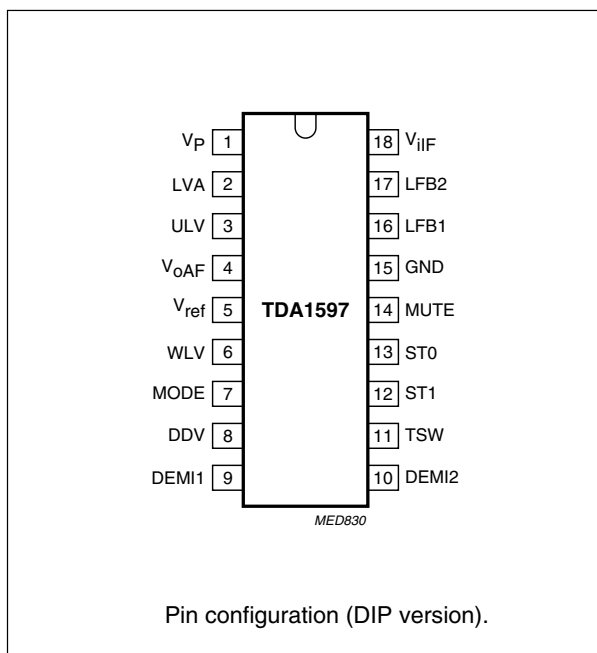


Figure 9-22

10. Spare Parts List

Large Signal Panel [A]

Various

S001	3122 785 90420	28"/32"/36" line repair kit
0030	3104 304 19583	LSP Bracket
0037	3104 304 20264	LOT support bracket
0050	4822 255 41371	Spring line deflection
0051	4822 492 70789	Spring fix transistor
0052	4822 492 70789	Spring fix transistor
0053	3122 121 24785	Spring fix transistor
0054	3122 121 24785	Spring fix transistor
0061	4822 492 70789	Spring fix transistor
0062	4822 492 70789	Spring fix transistor
0065	3104 304 24821	Spacer LOT bracket
0303	4822 267 10774	2P male red
0304	4822 265 20723	2P male black
0311	4822 267 10978	7P male black
0315	4822 267 10979	9P male black
0317	4822 265 20723	2P male
0320	4822 267 10974	9P male
0321	4822 267 10978	7P male black
0324	4822 267 10972	5P male black
0325	4822 267 10967	3P male black
0328	4822 267 10962	11P male v
0335	4822 267 10969	3P male red
0336	4822 267 10967	3P male black
0337	4822 267 10967	3P male black
0338	4822 267 11043	3P male yellow
0390	4822 267 10963	3P male
0391	4822 267 10973	1P male
0393	2422 025 16583	5P female
0394	4822 267 10969	3P male
0395	4822 267 11043	3P male yellow
1460	4822 252 51186	Fuse 2A
8000	3104 311 03272	Eht cable 640 mm
8000	3104 311 03721	Eht cable 820 mm
8015	3104 308 77981	Focus cable 360mm
8300	4822 320 20216	Focus cable 364mm
8301	4822 320 20216	Focus cable 364mm
8304	3104 301 08671	Cable 3P 220 mm
8311	3104 301 08332	Cable 7P 340 mm
8315	3104 301 09611	Cable 9P 340 mm
8317	3104 311 00331	Cable 3P 340 mm
8320	3104 301 08752	Cable 9P 560 mm
8321	3104 301 08682	Cable 7P 180 mm
8324	3104 301 08762	Cable 5P 400 mm
8325	3104 311 00131	Cable 3P 560 mm
8325	3104 311 01971	Cable 3P 140 mm
8328	3104 311 01161	Cable 11P 340 mm
8337	4822 320 12671	Cable 3P 560 mm
8394	3104 311 00421	Cable 3P 480 mm
8395	3104 311 01991	Cable 3P 560 mm
8400	2422 025 16691	3P male

-II-

2400	4822 124 11575	47µF 20% 160V
2401	4822 121 43343	4.7nF 10% 400V
2409	4822 126 12726	47pF 5% 50V
2410	2222 462 90009	4.7nF 2% 250V
2412	5322 121 42489	33nF 5% 250V
2413	4822 124 12255	10µF 20% 50V
2414	5322 121 42489	33nF 5% 250V
2415	5322 122 32334	220pF 10% 100V
2417	4822 121 42408	220nF 5% 63V
2418	4822 126 12263	220pF 10% 1kV
2419	5322 121 44151	33nF 10% 400V
2420	4822 121 70581	1.5nF 5% 2kV
2420	4822 121 70594	1nF 5% 2kV
2420	4822 121 70595	1.2nF 5% 2kV
2422	2038 301 00312	1.2µF 5% 250V
2425	4822 121 10526	9.1nF 5% 2kV
2425	4822 121 70435	10nF 5% 2kV
2426	4822 121 10551	27nF 5% 1600V
2431	5322 122 32331	1nF 10% 100V
2431	5322 122 32818	2.2nF 10% 100V
2433	2022 333 00086	470nF 5% 250V
2433	2022 333 00163	360nF 5% 250V
2433	4822 121 10518	390nF 5% 250V
2436	4822 124 41584	100µF 20% 10V
2437	4822 124 41741	2.2µF 20% 350V
2438	4822 122 33449	47nF 30% 50V
2439	5322 122 32331	1nF 10% 100V
2439	5322 122 32818	2.2nF 10% 100V
2442	4822 124 12297	4.7µF 20% 350V
2448	2020 300 90572	8.2nF 10% 50V
2448	4822 121 41857	10nF 5% 250V

2450	4822 121 40518	100nF 10% 250V
2454	4822 121 42408	220nF 5% 63V
2455	4822 121 43897	1nF 5% 400V
2455	4822 126 12451	820pF 10% 50V
2457	4822 121 70386	47nF 10% 250V
2460	4822 126 13185	680pF 10% 500V
2461	4822 124 11767	470pF 10% 25V
2462	4822 124 81039	3300µF 20% 25V
2463	4822 126 13185	680pF 10% 500V
2465	4822 122 31177	470pF 10% 500V
2466	4822 124 11767	470µF 20% 25V
2480	4822 121 43913	470nF 10% 100V
2480	4822 124 40763	2.2µF 100V
2481	5322 122 32311	470pF 10% 100V
2482	4822 124 22466	1µF 20% 50V
2484	4822 124 40769	4.7µF 10% 100V
2487	4822 124 40248	10µF 20% 63V
2493	2222 479 90166	68nF 5% 400V
2494	4822 124 81144	1000µF 16V
2506	4822 121 10711	100nF 20% 275V
2520	4822 121 43396	120nF 5% 63V
2520	4822 121 43526	47nF 5% 250V
2530	4822 124 21913	1µF 20% 63V
2612	5322 122 32311	470pF 10% 100V
2613	5322 122 32311	470pF 10% 100V
2615	2020 021 91513	100µF 20% 50V
2616	5322 121 42386	100nF 5% 63V
2617	4822 121 42408	220nF 5% 63V
2618	4822 121 51252	470nF 5% 63V
2620	5322 124 40641	10µF 20% 100V
2625	4822 121 43526	47nF 5% 250V
2714	4822 122 10182	100pF 5% 50V
2716	4822 122 10182	100pF 5% 50V
2730	4822 124 40248	10µF 20% 63V
2732	4822 124 12392	47µF 20% 16V
2733	5322 121 42386	100nF 5% 63V
2738	4822 122 10182	100pF 5% 50V
2739	4822 122 10182	100pF 5% 50V
2740	4822 122 30103	22nF 80% 63V
2741	4822 122 30103	22nF 80% 63V
2742	5322 121 42386	100nF 5% 63V
2743	4822 126 12638	6.8nF 10% 50V
2748	4822 121 43526	47nF 5% 250V
2749	4822 121 43526	47nF 5% 250V
2750	4822 122 30103	22nF 80% 63V
2751	4822 122 30103	22nF 80% 63V
2755	4822 126 12638	6.8nF 10% 50V
2756	4822 121 43526	47nF 5% 250V
2757	4822 121 43526	47nF 5% 250V
2760	4822 122 30103	22nF 80% 63V
2761	4822 122 30103	22nF 80% 63V
2762	4822 124 12392	47µF 20% 16V
2763	4822 124 80408	4.7µF 20% 50V
2768	4822 121 43526	47nF 5% 250V
2769	4822 121 43526	47nF 5% 250V
2770	4822 122 30103	22nF 80% 63V
2771	4822 122 30103	22nF 80% 63V
2772	5322 121 42386	100nF 5% 63V
2774	5322 121 42386	100nF 5% 63V
2775	4822 126 12638	6.8nF 10% 50V
2776	4822 121 43526	47nF 5% 250V
2777	4822 121 43526	47nF 5% 250V
2780	4822 124 21913	1µF 20% 63V
2790	4822 124 80061	1000µF 20% 25V
2791	4822 124 80061	1000µF 20% 25V
2792	5322 121 42386	100nF 5% 63V
2793	5322 121 42386	100nF 5% 63V
2794	4822 124 40248	10µF 20% 63V
2795	4822 124 40248	10µF 20% 63V



3401	4822 053 12479	47Ω 5% 3W
3404	4822 116 83883	470Ω 5% 0.5W
3406	4822 116 52175	100Ω 5% 0.5W
3407	4822 050 21003	10k 1% 0.6W
3411	4822 116 52195	47Ω 5% 0.5W
3413	4822 116 83883	470Ω 5% 0.5W
3414	4822 116 52226	560Ω 5% 0.5W
3415	4822 053 12229	22Ω 5% 3W
3417	4822 116 52176	10Ω 5% 0.5W
3423	4822 053 10688	608Ω 5% 1W
3425	4822 116 52176	10Ω 5% 0.5W
3426	4822 116 52176	10Ω 5% 0.5W
3428	4822 116 52245	150k 5% 0.5W
3429	4822 116 83884	47k 5% 0.5W
3431	4822 052 10221	220Ω 5% 0.33W
3431	4822 052 11471	470Ω 5% 0.5W
3432	4822 116 83884	47k 5% 0.5W

3436	4822 116 52269	3k3 5% 0.5W
3437	4822 116 52245	150k 5% 0.5W
3438	4822 050 23303	33k 1% 0.6W
3440	4822 050 23303	33k 1% 0.6W
3441	4822 116 52272	330k 5% 0.5W
3442	4822 116 83874	220k 5% 0.5W
3443	4822 052 11688	608Ω 5% 0.5W
3444	4822 050 23303	33k 1% 0.6W
3445	4822 116 52256	2k2 5% 0.5W
3446	4822 050 11002	1k 1% 0.4W
3447	4822 052 10229	22Ω 5% 0.33W
3448	4822 116 52252	180k 5% 0.5W
3448	4822 116 52291	56k 5% 0.5W
3449	4822 050 21003	10k 1% 0.6W
3449	4822 116 52176	10Ω 5% 0.5W
3450	4822 116 83884	47k 5% 0.5W
3451	4822 050 23303	33k 1% 0.6W
3451	4822 116 52264	27k 5% 0.5W
3452	4822 116 52257	22k 5% 0.5W
3452	4822 116 52264	27k 5% 0.5W
3453	4822 116 80176	1Ω 5% 0.5W
3454	4822 116 52291	56k 5% 0.5W
3454	4822 116 83882	39k 5% 0.5W
3454	4822 116 83884	47k 5% 0.5W
3455	4822 116 83874	220k 5% 0.5W
3457	4822 050 12704	270k 1% 0.4W
3457	4822 116 52292	560k 5% 0.5W
3457	4822 116 52298	680k 5% 0.5W
3458	4822 116 52252	180k 5% 0.5W
3458	4822 116 52272	330k 5% 0.5W
3458	4822 116 52304	82k 5% 0.5W
3459	4822 116 83883	470Ω 5% 0.5W
3462	4822 052 11108	1Ω 5% 0.5W
3463	4822 052 11108	1Ω 5% 0.5W
3464	4822 050 11002	1k 1% 0.4W
3465	4822 052 10151	150Ω 5% 0.33W
3466	4822 052 11108	1Ω 5% 0.5W
3467	4822 052 11108	1Ω 5% 0.5W
3468	4822 052 10151	150Ω 5% 0.33W
3478	4822 116 83872	220Ω 5% 0.5W
3480	4822 116 52291	56k 5% 0.5W
3481	4822 052 10102	1k 5% 0.33W
3482	4822 116 52272	330k 5% 0.5W
3483	4822 052 10478	407Ω 5% 0.33W
3484	4822 052 10338	303Ω 5% 0.33W
3484	4822 052 10478	407Ω 5% 0.33W
3484	4822 052 10688	608Ω 5% 0.33W
3485	4822 050 21006	10M 1% 0.6W
3485	4822 050 27505	7M5 1% 0.6W
3486	4822 116 52234	100k 5% 0.5W
3487	4822 052 10133	13k 5% 0.33W
3488	4822 050 11002	1k 1% 0.4W
3489	4822 116 52191	33Ω 5% 0.5W
3490	4822 116 83874	220k 5% 0.5W
3491	4822 116 83874	220k 5% 0.5W
3492	4822 050 23303	33k 1% 0.6W
3493	4822 050 11002	1k 1% 0.4W
3498	4822 116 83872	220Ω 5% 0.5W
3506	4822 117 12027	PTC 18Ω-3k 25%
3507	4822 117 12027	PTC 18Ω-3k 25%
3509	4822 052 10472	4k7 5% 0.33W
3510	4822 050 21003	10k 1% 0.6W
3511	4822 116 52263	2k7 5% 0.5W
3512	4822 116 52191	33Ω 5% 0.5W
3520	2138 101 13753	75k 5% 0.5W
3520	4822 116 52234	100k 5% 0.5W
3521	4822 050 18204	820k 1% 0.4W
3521	4822 116 83866	1M 5% 0.5W
3530	4822 050 21003	10k 1% 0.6W
3531	4822 116 52257	22k 5% 0.5W
3531	4822 116 83884	47k 5% 0.5W
3532	4822 050 18204	820k 1% 0.4W
3532	4822 116 52298	680k 5% 0.5W
3601	4822 116 80676	1Ω 5% 0.5W
3602	4822 116 80176	1Ω 5% 0.5W
3602	4822 116 80676	1Ω 5% 0.5W
3603	4822 116 80176	1Ω 5% 0.5W
3610	4822 050 11002	1k 1% 0.4W
3611	4822 050 2	

3630	4822 116 52289	5k6 5% 0.5W
3703	4822 116 80176	1Ω 5% 0.5W
3721	4822 116 52234	100k 5% 0.5W
3722	4822 116 52234	100k 5% 0.5W
3725	4822 116 52234	100k 5% 0.5W
3726	4822 116 52234	100k 5% 0.5W
3728	4822 116 52234	100k 5% 0.5W
3729	4822 116 52234	100k 5% 0.5W
3730	4822 116 83883	470Ω 5% 0.5W
3731	4822 116 83884	47k 5% 0.5W
3732	4822 116 83884	47k 5% 0.5W
3733	4822 116 52207	1k2 5% 0.5W
3734	4822 116 52257	22k 5% 0.5W
3735	4822 116 83961	6k8 5%
3740	4822 116 52256	2k2 5% 0.5W
3741	4822 116 52226	560Ω 5% 0.5W
3743	4822 116 80176	1Ω 5% 0.5W
3745	4822 117 12798	8Ω 5% 0.25W
3751	4822 116 80176	1Ω 5% 0.5W
3752	4822 116 52256	2k2 5% 0.5W
3753	4822 116 52226	560Ω 5% 0.5W
3754	4822 117 12798	8Ω 5% 0.25W
3760	4822 116 52256	2k2 5% 0.5W
3761	4822 116 52226	560Ω 5% 0.5W
3763	4822 116 80176	1Ω 5% 0.5W
3765	4822 117 12798	8Ω 5% 0.25W
3772	4822 116 52256	2k2 5% 0.5W
3773	4822 116 52226	560Ω 5% 0.5W
3774	4822 117 12798	8Ω 5% 0.25W
3780	4822 116 52289	5k6 5% 0.5W
3781	4822 116 52289	5k6 5% 0.5W
3782	4822 116 52289	5k6 5% 0.5W
3783	4822 116 52289	5k6 5% 0.5W
3785	4822 116 52263	2k7 5% 0.5W
3786	4822 116 52269	3k3 5% 0.5W
3787	4822 050 21003	10k 1% 0.6W
3790	4822 116 52234	100k 5% 0.5W
3791	4822 116 52234	100k 5% 0.5W

5400	4822 157 71467	39μH 10%
5401	4822 157 71452	18μH 10%
5410	4822 146 11066	Line driver transf.
5421	3128 138 55611	Linearity coil (36")
5421	3128 138 56152	Linearity coil (28")
5421	3128 138 57411	Linearity coil (32")
5422	4822 146 11137	Bridge coil
5423	4822 157 71097	0.56μH
5425	4822 157 11411	Bead 100mHz
5426	4822 157 11771	0.09μH 10%
5430	3128 138 20931	LOT CML16 (32"/36")
5430	8204 000 75001	LOT (28")
5460	4822 157 71466	2.2μH 20%
5462	4822 157 71466	2.2μH 20%
5466	4822 157 71441	15μH 10%
5466	4822 157 71452	18μH 10%
5468	4822 157 10452	10μH 10%
5468	4822 157 71452	18μH 10%
5480	4822 157 63253	Choke
5490	4822 526 10704	Bead 100mHz
5491	4822 526 10704	Bead 100mHz
5493	8228 001 34391	Driver Transformer CU15
5501	4822 157 11422	12μH 10%
5502	4822 157 11422	12μH 10%
5617	4822 157 11771	0.09μH 10%
5701	4822 157 11299	10μH 5%
5702	4822 157 11299	10μH 5%



6407	4822 130 42488	BYD33D
6408	4822 130 42488	BYD33D
6410	4822 130 30621	1N4148
6421	9322 165 72687	DTV1500MFP
6422	4822 130 10218	BY229X-800
6437	4822 130 30621	1N4148
6441	4822 130 42488	BYD33D
6451	4822 130 34382	BZX79-B8V2
6452	4822 130 30621	1N4148
6453	4822 130 34142	BZX79-B33
6454	4822 130 30842	BAV21
6480	4822 130 61219	BZX79-B10
6483	4822 130 30842	BAV21
6484	4822 130 30621	1N4148
6485	4822 130 30621	1N4148
6486	4822 130 30621	1N4148
6489	3139 120 52021	BYV29X-500
6490	3139 120 52021	BYV29X-500
6491	3139 120 52021	BYV29X-500
6495	4822 130 30621	1N4148
6496	4822 130 30621	1N4148

6530	4822 130 30621	1N4148
6608	4822 130 34174	BZX79-B4V7
6609	4822 130 31983	BAT85
6610	4822 130 30621	1N4148
6614	5322 130 31938	BYV27-200
6617	4822 130 42488	BYD33D
6618	5322 130 32296	BZV85-C10
6618	5322 130 33635	BZV85-C8V2
6620	4822 130 42488	BYD33D
6790	5322 130 34563	BZX79-C2V7
6791	5322 130 34563	BZX79-C2V7



7409	4822 130 40959	BC547B
7411	5322 130 44349	BC635
7421	9340 210 30127	BU2520DX
7437	4822 130 44568	BC557B
7440	4822 209 70672	LM358N Selected
7441	4822 130 40959	BC547B
7442	4822 130 44568	BC557B
7480	4822 130 11336	STP16NE06FP
7484	4822 209 70672	LM358N Selected
7490	4822 130 44568	BC557B
7600	4822 209 90009	TDA8177
7710	5322 209 86445	LM7805CT
7720	4822 209 11079	LM79M05CT
7730	4822 130 44568	BC557B
7731	4822 130 40959	BC547B
7732	4822 130 40959	BC547B
7733	4822 130 40959	BC547B
7740	4822 209 32641	TDA2616Q
7750	4822 209 32641	TDA2616Q
7760	4822 209 32641	TDA2616Q
7770	4822 209 32641	TDA2616Q
7780	4822 130 40959	BC547B

Top Supply Panel [B]

Various

S002	3122 785 90440	Standby supply repair kit
S003	3122 785 90430	Main supply repair kit
0001	3104 304 19652	Power supply frame
0052	3122 121 24785	Spring fix transistor
0053	3122 121 24785	Spring fix transistor
0056	3122 121 24785	Spring fix transistor
0057	3122 121 24785	Spring fix transistor
0066	3122 121 24785	Spring fix transistor
0067	3122 121 24785	Spring fix transistor
0072	4822 466 93461	Insulator 20 X 25
0150	4822 265 11253	Fuse holder
0151	4822 265 11253	Fuse holder
0302	2422 025 16374	2P Male
0304	4822 265 20723	3P Male
0310	4822 267 10964	9P Male red
0320	4822 267 10974	9P Male
0321	4822 267 10978	7P Male black
0330	2422 025 14904	7P Male
1001	4822 253 30467	Fuse 6,3A
1002	2422 132 07411	Relay 1P 5V 5A
1003	4822 070 33152	Fuse 3,15A
1005	4822 252 60151	Surge Protect
1006	4822 252 51173	Fuse 1,0A
1007	2422 132 07409	Relay 2P 12V 5A



2000	4822 126 13589	470nF 275V
2001	4822 124 11913	22nF 20% 275V
2002	4822 124 11913	22nF 20% 275V
2007	4822 121 41857	10nF 5% 250V
2009	4822 121 41857	10nF 5% 250V
2100	2020 024 90718	10μF 20% 450V
2101	2252 561 55609	68pF 5% 1kV
2102	5322 121 42386	100nF 5% 63V
2103	5322 121 42386	100nF 5% 63V
2104	2020 012 93057	2200μF 20% 16V
2105	5322 122 32818	2.2nF 10% 100V
2106	4822 126 14208	220pF 20% 250V
2111	5322 121 42386	100nF 5% 63V
2201	4822 124 42159	330μF 20% 400V
2202	4822 124 11767	470μF 20% 25V
2203	4822 124 80144	220μF 20% 25V
2204	5322 121 51214	680pF 1% 400V
2205	4822 121 51288	100pF 630V
2207	4822 121 41854	150nF 5% 63V
2208	5322 121 42386	100nF 5% 63V
2210	4822 126 13451	2.2nF 10% 2kV
2211	2222 375 90224	39nF 5% 1kV
2212	4822 126 13862	1.5nF 10% 2kV

2213	4822 126 13862	1.5nF 10% 2kV
2214	4822 126 14504	3.3nF 20% 250V
2215	4822 122 30043	10nF 80% 63V
2216	5322 121 42386	100nF 5% 63V
2217	4822 124 40207	100μF 20% 25V
2219	4822 122 30043	10nF 80% 63V
2220	4822 124 12417	2200μF 20% 25V
2221	4822 124 12417	2200μF 20% 25V
2222	2020 021 91503	1000μF 5% 35V
2223	4822 121 11572	47μF 20% 160V
2225	5322 122 32331	1nF 10% 100V
2226	5322 121 42386	100nF 5% 63V
2227	4822 121 43897	1nF 5% 400V
2228	4822 124 81151	22μF 50V
2230	4822 124 11878	4700μF 16V
2231	4822 121 41854	150nF 5% 63V
2232	4822 122 30043	10nF 80% 63V
2233	4822 122 30043	10nF 80% 63V
2234	2020 021 91503	1000μF 5% 35V
2235	5322 122 32331	1nF 10% 100V
2236	4822 124 11767	470μF 20% 25V
2237	4822 122 31175	1nF 10% 500V
2238	5322 121 42386	100nF 5% 63V
2239	4822 121 42062	150 nF 10% 400V
2240	5322 122 32261	4.7nF 10% 100V
2241	4822 122 30043	10nF 80% 63V
2242	4822 122 33449	47nF 30% 50V
2244	4822 126 12263	220pF 10% 1kV
2245	4822 126 10206	2.2nF 10% 500V
2246	4822 126 10206	2.2nF 10% 500V
2250	5322 122 32331	1nF 10% 100V
2251	4822 121 51305	15nF 10% 50V
2252	5322 122 32818	2.2nF 10% 100V
2253	4822 121 51252	470nF 5% 63V
2260	4822 122 30103	22nF 80% 63V
2261	4822 126 10206	2.2nF 10% 500V
2262	4822 126 10206	2.2nF 10% 500V
2263	5322 122 32311	470pF 10% 100V
2264	5322 122 32311	470pF 10% 100V
2265	2020 300 90565	2.7nF 10% 50V
2266	4822 121 10766	390pF 1% 630V
2267	4822 124 22652	2.2μF 20% 50V
2268	4822 124 22652	2.2μF 20% 50V
2269	5322 121 42386	100nF 5% 63V
2271	5322 122 32331	1nF 10% 100V
2272	5322 122 32331	1nF 10% 100V
2274	4822 122 33799	1nF 10% 1kV
2275	4822 122 31175	1nF 10% 500V
2276	5322 122 32331	1nF 10% 100V
2277	5322 122 32818	2.2nF 10% 100V
2279	4822 121 70654	2.2nF 10% 50V
2280	4822 124 22652	2.2μF 20% 50V
2281	4822 124 22652	2.2μF 20% 50V



3001	2322 595 90022	VDR 1mA/612V max 1120V
3002	3198 013 04710	470Ω 20% 0.5W
3003	4822 116 52256	2k2 5% 0.5W
3004	4822 116 52234	100k 5% 0.5W
3007	4822 116 52283	4k7 5% 0.5W
3008	4822 116 52256	2k2 5% 0.5W
3009	4822 050 21003	10k 1% 0.6W
3108	4822 116 52176	10Ω 5% 0.5W
3110	4822 052 10688	6Ω 5% 0.33W
3112	4822 050 11002	1k 1% 0.4W
3113	4822 116 52256	2k2 5% 0.5W
3114	4822 050 24702	4k7 1% 0.6W
3115	4822 050 24702	4k7 1% 0.6W
3118	4822 116 52257	22k 5% 0.5W
3120	4822 116 52175	100Ω 5% 0.5W
3121	4822 050 11002	1k 1% 0.4W
3122	4822 116 52175	100Ω 5% 0.5W
3200	4822 052 10569	56Ω 5% 0.33W
3201	4822 116 52175	100Ω 5% 0.5W
3202	4822 116 52303	8k2 5% 0.5W
3203	4822 050 23903	39k 1% 0.6W
3204	4822 116 52264	27k 5% 0.5W
3205	4822 116 52289	5k6 5% 0.5W
3206	4822 050 21003	10k 1% 0.6W
3207	4822 050 21003	10k 1% 0.6W
3208	4822 116 83883	470Ω 5% 0.5W
3209	4822 116 52269	3k3 5% 0.5W

3223	4822 116 52249	1k8 5% 0.5W
3224	4822 116 52249	1k8 5% 0.5W
3227	4822 052 10129	12Ω 5% 0.33W
3228	2322 257 41123	12k 5% 5W
3229	4822 116 52175	100Ω 5% 0.5W
3230	4822 050 11002	1k 1% 0.4W
3231	4822 050 21002	1k 1% 0.6W
3232	4822 050 21503	15k 1% 0.6W
3233	4822 050 11002	1k 1% 0.4W
3234	4822 116 52175	100Ω 5% 0.5W
3235	4822 116 52207	1k2 5% 0.5W
3236	4822 116 52303	8k2 5% 0.5W
3237	4822 050 21604	160k 1% 0.6W
3238	4822 050 22702	2k7 1% 0.6W
3239	4822 101 11186	470Ω 30% 0.1W
3240	4822 116 52226	560Ω 5% 0.5W
3241	4822 116 52226	560Ω 5% 0.5W
3242	4822 050 25603	56k 1% 0.6W
3243	4822 050 25603	56k 1% 0.6W
3244	4822 050 21003	10k 1% 0.6W
3245	4822 116 83882	39k 5% 0.5W
3246	4822 116 83961	6k8 5%
3247	4822 116 52175	100Ω 5% 0.5W
3248	4822 050 21002	1k 1% 0.6W
3249	4822 050 21003	10k 1% 0.6W
3250	4822 050 28204	820k 1% 0.6W
3251	4822 050 26804	680k 1% 0.6W
3252	4822 050 21003	10k 1% 0.6W
3253	4822 116 52244	15k 5% 0.5W
3254	4822 050 21003	10k 1% 0.6W
3255	4822 116 83961	6k8 5%
3256	4822 050 21003	10k 1% 0.6W
3257	4822 116 52213	180Ω 5% 0.5W
3258	4822 053 20565	5M6 5% 0.25W
3259	4822 116 52244	15k 5% 0.5W
3260	4822 050 24708	4Ω7 1% 0.6W
3261	4822 116 52297	68k 5% 0.5W
3262	4822 116 52234	100k 5% 0.5W
3263	4822 050 26808	6Ω8 1% 0.6W
3264	4822 050 11002	1k 1% 0.4W
3265	4822 050 11002	1k 1% 0.4W
3266	4822 050 21003	10k 1% 0.6W
3267	4822 116 52256	2k2 5% 0.5W
3268	4822 050 24708	4Ω7 1% 0.6W
3269	4822 050 24708	4Ω7 1% 0.6W
3274	4822 116 52195	47Ω 5% 0.5W
3275	4822 116 80176	1Ω 5% 0.5W
3277	4822 050 11002	1k 1% 0.4W
3278	4822 050 21003	10k 1% 0.6W
3279	4822 116 52264	27k 5% 0.5W
3280	4822 116 83884	47k 5% 0.5W
3998	4822 050 21003	10k 1% 0.6W

5000	2422 549 44911	Mainsfilter
5101	8228 001 37422	Standby transf. CE165T
5103	4822 157 71466	2.2μH 20%
5104	4822 157 71466	2.2μH 20%
5105	4822 526 10704	Bead 100mHz
5106	4822 526 10704	Bead 100mHz
5201	8222 289 53691	Driver transf. CE136H
5202	8228 001 37502	Transformer CE423D
5204	8228 001 37404	DC-DC convertor transf.
5205	2422 535 94637	4.7μH 20%
5206	4822 157 11411	Bead 100mHz
5207	4822 157 11411	Bead 100mHz
5208	4822 157 63985	33μH 5%
5209	4822 157 11411	Bead 100mHz
5210	4822 157 51462	10μH 10%
5212	4822 157 11411	Bead 100mHz
5213	4822 157 11411	Bead 100mHz
5215	4822 157 11411	Bead 100mHz
5216	4822 157 11411	Bead 100mHz
5217	4822 526 10704	Bead 100mHz
5219	4822 157 11411	Bead 100mHz
5222	4822 157 71453	27μH 10%
5223	4822 157 71453	27μH 10%
5224	4822 157 71453	27μH 10%
5225	4822 157 11411	Bead 100mHz
5226	4822 157 11411	Bead 100mHz
5227	4822 157 11411	Bead 100mHz
5228	4822 157 11411	Bead 100mHz
5229	4822 157 11411	Bead 100mHz
5230	4822 157 11411	Bead 100mHz
5231	4822 157 11411	Bead 100mHz
5232	4822 157 11771	0.09μH 10%
5240	4822 157 11411	Bead 100mHz
5241	4822 526 10704	Bead 100mHz
5242	4822 526 10704	Bead 100mHz
5243	4822 157 11411	Bead 100mHz
5244	4822 157 11411	Bead 100mHz
5271	4822 157 71453	27μH 10%

5272	2422 535 94637	4.7μH 20%
5273	4822 157 71453	27μH 10%
5274	4822 157 11869	33μH 10%
5275	4822 157 11411	Bead 100mHz
5280	2422 549 44872	Mainsfilter



6008	3198 010 10640	Bridge cell GBU4K
6009	4822 130 30621	1N4148
6101	4822 130 83147	DF06M
6104	9336 018 60133	BZT03-C300
6105	9336 018 60133	BZT03-C300
6106	9322 161 77682	SB540L-7024
6108	4822 130 34278	BZX79-B6V8
6200	4822 130 30621	1N4148
6201	4822 130 30621	1N4148
6202	9337 534 30133	BZD23-C15
6203	9337 534 30133	BZD23-C15
6204	4822 130 30621	1N4148
6205	4822 130 30621	1N4148
6206	4822 130 34441	BZX79-B22
6207	4822 130 30621	1N4148
6208	4822 130 30621	1N4148
6209	4822 130 31024	BZX79-B18
6210	4822 130 42488	BYD33D
6211	4822 130 30621	1N4148
6212	4822 130 30621	1N4148
6213	4822 130 31983	BAT85
6214	4822 130 30621	1N4148
6216	4822 130 30621	1N4148
6217	4822 130 30621	1N4148
6218	9322 131 78682	D4SBL20
6219	4822 130 30621	1N4148
6220	4822 130 30621	1N4148
6221	4822 130 34174	BZX79-B4V7
6222	9322 129 53687	G10DCT
6224	9322 131 78682	D4SBL20
6230	4822 130 83801	PBYR745F
6234	4822 130 34197	BZX79-B12
6235	4822 130 30621	1N4148
6237	9322 161 77682	SB540L-7024
6238	4822 130 34278	BZX79-B6V8
6239	4822 130 34197	BZX79-B12
6270	4822 130 30621	1N4148
6271	4822 130 30621	1N4148



7000	4822 130 40981	BC337-25
7001	4822 130 40959	BC547B
7103	9322 037 99682	TNY256P
7104	9322 149 04682	TCET1102
7105	4822 209 81397	TL431CLPST
7106	4822 130 11421	BT151X-500R
7200	9322 149 04682	TCET1102
7201	4822 130 40959	BC547B
7202	4822 130 44568	BC557B
7203	4822 130 44568	BC557B
7204	4822 130 44568	BC557B
7205	9322 108 21682	MC34067P
7206	9322 132 14687	STP11NB40FP
7207	9322 132 14687	STP11NB40FP
7211	9322 129 22687	L4977A
7212	4822 209 81397	TL431CLPST
7213	4822 209 12334	L4940V85
7230	4822 130 44568	BC557B
7231	4822 130 40959	BC547B
7232	4822 130 11421	BT151X-500R

Mains Switch Panel [E]

Various

0040	3104 307 97621	Mainsknob FL11
0046	3104 304 23471	Bracket mains unit FL11
0151	4822 256 91766	Led holder
0152	4822 256 91766	Led holder
0170	4822 256 10562	Photo diode holder
0201	2422 025 16268	7P Male
0202	2422 025 16268	2P Male
0241	2422 025 06354	9P Male
0245	4822 267 10748	3P Male
1050	9322 154 48667	IR Receiver TSOP2236
1051	2422 128 02972	Mains switch 2P 8/128A
8202	3104 301 08291	Cable 2P3 560mm black
8241	3104 301 09381	Cable 9P 680mm white



2051	4822 124 41584	100μF 20% 10V
2070	4822 126 13879	220nF 20% 16V
2071	4822 124 40248	10μF 20% 63V



3050	4822 117 13577	330Ω 1% 1.25W
3051	4822 051 30471	470Ω 5% 0.062W
3054	4822 051 20471	470Ω 5% 0.1W
3057	4822 053 21335	3M3 5% 0.5W
3061	4822 051 30332	3k3 5% 0.062W
3063	4822 052 10478	4Ω7 5% 0.33W
3064	4822 052 10478	4Ω7 5% 0.33W
3066	4822 053 21335	3M3 5% 0.5W
3070	4822 051 30334	330k 5% 0.062W
3071	4822 051 30334	330k 5% 0.062W
3072	4822 051 30102	1k 5% 0.062W
3073	4822 051 30103	10k 5% 0.062W
3074	4822 051 30472	4k7 5% 0.062W
3075	4822 051 30472	4k7 5% 0.062W
3076	4822 051 30682	6k8 5% 0.062W
3077	4822 051 30103	10k 5% 0.062W
3078	4822 051 30102	1k 5% 0.062W
3079	4822 051 30332	3k3 5% 0.062W
3082	4822 051 30008	Jumper 0603
3998	4822 116 52206	120Ω 5% 0.5W



6051	4822 209 72895	TLUV5320
6052	9322 150 78676	LED IR TSAL6400
6053	4822 130 10838	UDZ3.3B
6070	4822 130 11595	BPW46



7050	4822 130 41246	BC327-25
7070	4822 209 70672	LM358N Selected

Picture Tube Panel [F]

Various

0041	3122 121 24785	SPRING fix IC
0042	3122 121 24785	SPRING fix IC
0043	3122 121 24785	SPRING fix IC
0297	2422 500 80036	CRT socket 9P
0324	4822 267 10972	5P
0334	4822 267 10973	1P
0340	4822 267 10974	9P
0383	4822 267 10967	3P
1382	2422 025 17408	9P male



2330	2020 552 93645	39pF 5% 50V
2332	5322 126 10223	4.7nF 10% 63V
2336	4822 126 14585	100nF 10% 50V
2337	5322 121 42489	33nF 5% 250V
2340	2020 552 93645	39pF 5% 50V
2342	5322 126 10223	4.7nF 10% 63V
2346	4822 126 14585	100nF 10% 50V
2347	5322 121 42489	33nF 5% 250V
2350	2020 552 93645	39pF 5% 50V
2352	5322 126 10223	4.7nF 10% 63V
2356	4822 126 14585	100nF 10% 50V
2357	5322 121 42489	33nF 5% 250V
2360	5322 122 31863	330pF 5% 63V
2370	4822 124 11565	10μF 20% 250V
2372	4822 124 40784	3300μF 20% 16V
2374	5322 122 34098	10nF 10% 63V
2381	4822 126 13599	3.3nF 10% 500V
2382	4822 122 31177	470pF 10% 500V
2383	4822 124 41584	100μF 20% 10V
2384	4822 124 41584	100μF 20% 10V
2393	5322 122 32654	22nF 10% 63V
2397	4822 121 70594	1nF 5% 2kV
2398	4822 121 70383	6.8nF 5% 2kV
2410	2020 552 93683	1.2nF 10% 50V
2411	4822 124 40764	22μF 100V
2420	4822 126 14238	2.2nF 50V
2421	4822 126 14494	22nF 10% 25V
2422	2238 586 15628	2.7nF 10% 50V
2423	2238 586 15628	2.7nF 10% 50V
2424	4822 126 14494	22nF 10% 25V
2425	4822 126 14494	22nF 10% 25V
2426	4822 126 14494	22nF 10% 25V

2427	2020 552 93683	1.2nF 10% 50V
2428	4822 126 14238	2.2nF 50V
2429	4822 126 14494	22nF 10% 25V
2440	4822 126 14043	1µF 20% 16V
2475	4822 122 33761	22pF 5% 50V
2484	4822 122 33761	22pF 5% 50V
2485	4822 122 33761	22pF 5% 50V
2489	4822 122 33761	22pF 5% 50V



3325	4822 051 20332	3k3 5% 0.1W
3329	4822 116 52283	4k7 5% 0.5W
3330	4822 051 30181	180Ω 5% 0.062W
3331	4822 117 12968	820Ω 5% 0.62W
3333	2120 105 93438	33k 2W
3334	4822 116 83881	390Ω 5% 0.5W
3335	4822 116 83872	220Ω 5% 0.5W
3336	4822 117 11373	100Ω 1%
3339	4822 051 10102	1k 2% 0.25W
3340	4822 051 30181	180Ω 5% 0.062W
3341	4822 117 12968	820Ω 5% 0.62W
3343	2120 105 93438	33k 2W
3344	4822 116 83881	390Ω 5% 0.5W
3345	4822 116 83872	220Ω 5% 0.5W
3346	4822 117 11373	100Ω 1%
3349	4822 051 10102	1k 2% 0.25W
3350	4822 051 30181	180Ω 5% 0.062W
3351	4822 117 12968	820Ω 5% 0.62W
3353	2120 105 93438	33k 2W
3354	4822 116 83881	390Ω 5% 0.5W
3355	4822 116 83872	220Ω 5% 0.5W
3356	4822 117 11373	100Ω 1%
3359	4822 051 10102	1k 2% 0.25W
3360	4822 050 11002	1k 1% 0.4W
3363	4822 051 20008	Jumper 0805
3364	4822 051 20008	Jumper 0805
3365	4822 117 12925	47k 1% 0.063W
3372	4822 052 10108	1Ω 5% 0.33W
3373	4822 052 10151	150Ω 5% 0.33W
3374	4822 052 10151	150Ω 5% 0.33W
3382	4822 116 52191	33Ω 5% 0.5W
3383	4822 117 13016	VDR 1mA/50V MAX 115V
3385	4822 117 13016	VDR 1mA/50V MAX 115V
3386	4822 116 52191	33Ω 5% 0.5W
3396	3198 013 01520	1k5 2% 0.5W
3397	3198 013 01520	1k5 2% 0.5W
3401	4822 051 30101	100Ω 5% 0.062W
3402	4822 051 30101	100Ω 5% 0.062W
3403	4822 051 30101	100Ω 5% 0.062W
3404	4822 116 52238	12k 5% 0.5W
3404	4822 116 52291	56k 5% 0.5W
3410	4822 117 12968	820Ω 5% 0.62W
3411	4822 117 13632	100k 1% 0.62W 0603
3413	4822 117 12968	820Ω 5% 0.62W
3414	4822 117 12077	2k7 5% 5W
3416	4822 117 13632	100k 1% 0.62W
3421	4822 051 30273	27k 5% 0.062W
3422	4822 116 52226	560Ω 5% 0.5W
3423	4822 051 30471	470Ω 5% 0.062W
3424	4822 117 10361	680Ω 1% 0.1W
3425	4822 051 10102	1k 2% 0.25W
3426	4822 051 30332	3k3 5% 0.062W
3427	4822 051 30561	560Ω 5% 0.062W
3431	4822 051 30273	27k 5% 0.062W
3433	4822 051 30471	470Ω 5% 0.062W
3434	4822 117 10361	680Ω 1% 0.1W
3435	4822 051 30102	1k 5% 0.062W
3436	4822 051 30332	3k3 5% 0.062W
3437	4822 051 30561	560Ω 5% 0.062W
3441	4822 051 30273	27k 5% 0.062W
3443	4822 051 30471	470Ω 5% 0.062W
3444	4822 117 10361	680Ω 1% 0.1W
3445	4822 051 10102	1k 2% 0.25W
3446	4822 051 30332	3k3 5% 0.062W
3447	4822 051 30561	560Ω 5% 0.062W
3448	4822 117 12968	820Ω 5% 0.62W
3450	4822 051 30102	1k 5% 0.062W
3451	4822 051 30689	68Ω 5% 0.063W
3452	4822 117 12925	47k 1% 0.063W
3453	4822 051 30392	3k9 5% 0.063W
3454	4822 117 12968	820Ω 5% 0.62W
3455	4822 051 30472	4k7 5% 0.062W
3456	4822 051 30181	180Ω 5% 0.062W
3460	3198 021 32250	2M2 5%
3462	3198 021 32250	2M2 5%
3463	3198 021 32250	2M2 5%
3468	3198 021 32250	2M2 5%
3470	4822 116 81154	2Ω 5% 0.5W
3472	4822 116 81154	2Ω 5% 0.5W
3473	4822 116 81154	2Ω 5% 0.5W
3474	4822 051 30102	1k 5% 0.062W
3475	4822 117 12925	47k 1% 0.063W

3476	4822 051 30103	10k 5% 0.062W
3477	4822 051 30109	10Ω 5% 0.062W
3478	4822 116 81154	2Ω 5% 0.5W
3483	4822 051 30102	1k 5% 0.062W
3484	4822 117 12925	47k 1% 0.063W
3485	4822 117 12925	47k 1% 0.063W
3487	4822 051 30103	10k 5% 0.062W
3488	4822 051 30109	10Ω 5% 0.062W
3489	4822 117 12925	47k 1% 0.063W
3492	4822 051 30101	100Ω 5% 0.062W
3493	4822 116 52191	33Ω 5% 0.5W
3494	4822 051 30101	100Ω 5% 0.062W
3495	4822 051 20479	47Ω 5% 0.1W
3999	4822 117 10353	150Ω 1% 0.1W
3999	4822 117 11503	220Ω 1% 0.1W
3999	4822 117 13577	330Ω 1% 1.25W
4xxx	4822 051 10008	Jumper 1206
4xxx	4822 051 20008	Jumper 0805

5372	4822 157 51216	5.6µH 10%
5373	4822 157 51216	5.6µH 10%
5400	4822 157 11778	5.6µH 10%
5401	2722 122 00334	Del line 90nS SDL-5127
5402	2722 122 00334	Del line 90nS SDL-5127
5403	2722 122 00334	Del line 90nS SDL-5127

6325	4822 130 10838	UDZ3.3B
6335	9340 553 52115	BAS321
6336	9340 553 52115	BAS321
6345	9340 553 52115	BAS321
6346	9340 553 52115	BAS321
6355	9340 553 52115	BAS321
6356	9340 553 52115	BAS321
6373	4822 130 42488	BYD33D
6374	4822 130 82512	BYV29F-400
6412	4822 130 11397	BAS316
6413	4822 130 11397	BAS316
6414	4822 130 11397	BAS316
6415	4822 130 11397	BAS316



7330	9352 626 34112	TDA6120Q/N2
7340	9352 626 34112	TDA6120Q/N2
7350	9352 626 34112	TDA6120Q/N2
7412	4822 130 40824	BD140
7413	4822 130 40823	BD139
7414	4822 130 40824	BD140
7415	4822 130 40823	BD139
7416	4822 130 60511	BC847B
7417	4822 130 60373	BC856B
7418	4822 130 60511	BC847B
7419	4822 130 60373	BC856B
7420	4822 130 60511	BC847B
7421	4822 130 60373	BC856B
7422	5322 130 42718	BFS20
7423	4822 130 60511	BC847B
7424	5322 130 42718	BFS20
7425	5322 130 42718	BFS20
7426	4822 130 60373	BC856B
7427	4822 130 60511	BC847B
7428	4822 130 60373	BC856B
7431	4822 130 60383	BF824

DC-shift Panel [G]

Various

0393	2422 025 16218	5P male
0398	4822 267 11043	3P male



2030	4822 122 31177	470pF 10% 500V
2031	4822 124 40207	100µF 20% 25V
2032	4822 124 40207	100µF 20% 25V
2033	4822 122 31177	470pF 10% 500V
2034	4822 121 42408	220nF 10% 50V



3030	4822 117 12159	150Ω 5% 2W
3030	4822 053 11159	15Ω 5% 2W
3031	4822 052 10108	1Ω 5% 0.33W
3032	4822 052 10108	1Ω 5% 0.33W

3033	4822 053 11159	15Ω 5% 2W
3034	4822 116 83872	220Ω 5% 0.33W
3040	4822 053 11101	100Ω 5% 2W

5030	4822 157 70006	DC-shift coil
------	----------------	---------------



6030	4822 130 42488	BYD33D
6033	4822 130 42488	BYD33D



7030	4822 130 41109	BD135-16
7031	4822 130 41194	BD136-16

DAF Panel [I]

Various

0001	3104 304 20301	DAF bracket
0317	4822 265 20723	3P male
0391	4822 267 10973	1P
0396	2422 025 16374	2P male
0397	4822 267 10774	2P male red
0398	4822 267 11043	3P male
1010	2322 460 91631	DAF potmeter 36" RF
1016	2322 460 91641	DAF potmeter 32" RF
8300	4822 320 20216	Focus cable 364 mm
8301	4822 320 20216	Focus cable 364 mm
8396	3104 311 01951	CableH 2P3/560mm/2P4



2800	2222 375 90188	390pF 5% 2kV
2800	2222 375 90498	470pF 5% 2kV
2890	2222 375 90188	390pF 5% 2kV
2890	2222 375 90276	220pF 5% 2kV



3050	4822 101 11191	10k 30% LIN 0.1W
3898	4822 116 21211	VDR 420V
3899	4822 116 21211	VDR 420V
3998	4822 116 52219	330Ω 5% 0.5W



5800	4822 148 81242	Coil CU20C2
------	----------------	-------------

Small Signal Panel [K]

Various

0002	2422 486 80873	IC socket 42P DIL
0008	2422 486 80928	IC socket 8P DIL
0031	3104 304 22851	SSP bracket
0032	3104 304 19646	Module support bracket
0310	4822 267 10964	9P male red
0311	4822 267 10978	7P male black
0315	4822 267 10979	9P male black
0328	4822 267 10981	11P male black
0333	4822 267 10962	11P
0340	4822 267 10974	9P male
0341	4822 267 10974	9P male
0344	4822 267 10963	3P male
0348	4822 267 11043	3P
0351	4822 267 10962	11P male
0352	4822 267 10962	11P male
0353	4822 267 10974	9P male
0356	4822 267 10963	3P male
0360	4822 267 10967	3P male
0361	4822 267 10974	9P male
0362	4822 267 10974	9P male
0373	4822 267 10978	7P male
0375	4822 267 10676	1P
0381	4822 267 10963	3P male
1001	4822 242 10972	Crystal 6MHz
1101	3139 147 14591	Splitter PS1311/I
1102	3139 147 18831	Tuner UV1316/A I X-3
1102	3139 147 18841	Tuner UV1316/A P X-3
1105	4822 242 10688	Filter OFWK9456M
1107	4822 242 72211	Filter 5.5MHz
1109	4822 242 81436	Filter OFWK3953M
1198	3104 301 08351	Cable phono-phono 120mm

1201	4822 267 10771	Socket 2 x scart
1202	4822 267 10771	Socket 2 x scart
1305	5322 242 73686	Crystal 12 MHz
1525	4822 242 10695	Crystal 4.433 619 MHz
1528	4822 242 10697	Crystal 3.579 545 MHz
1751	4822 242 10434	Crystal 18.432 MHz
8310	3104 301 08303	Cable 9P 680m red
8340	4822 320 12508	Cable 9P 400mm White
8360	3119 107 17071	Cable 3P 220mm Black
8382	3104 311 00340	Service cable 9P SSP-PTP

-II-

2001	4822 126 14585	100nF 10% 50V
2002	4822 126 14305	100nF 10% 16V 0603
2003	4822 126 14305	100nF 10% 16V 0603
2005	4822 126 14305	100nF 10% 16V 0603
2006	4822 126 14305	100nF 10% 16V 0603
2007	4822 126 14305	100nF 10% 16V 0603
2008	4822 126 14305	100nF 10% 16V 0603
2009	4822 126 14305	100nF 10% 16V 0603
2010	4822 126 14305	100nF 10% 16V 0603
2011	4822 126 14305	100nF 10% 16V 0603
2012	4822 126 14305	100nF 10% 16V 0603
2013	4822 126 14076	220nF 20-80% 25V
2014	4822 126 11669	27pF
2015	4822 126 14585	100nF 10% 50V
2016	5322 122 32659	33pF 5% 50V
2021	4822 126 14585	100nF 10% 50V
2022	4822 126 14076	220nF 20-80% 25V
2023	4822 126 14305	100nF 10% 16V 0603
2024	5322 126 11578	1nF 10% 50V 0603
2025	4822 126 14305	100nF 10% 16V 0603
2026	4822 126 14305	100nF 10% 16V 0603
2027	4822 126 14305	100nF 10% 16V 0603
2028	4822 126 14305	100nF 10% 16V 0603
2029	4822 124 40433	47µF 20% 25V
2030	4822 124 40433	47µF 20% 25V
2031	4822 126 14305	100nF 10% 16V 0603
2032	4822 126 14305	100nF 10% 16V 0603
2035	4822 126 14585	100nF 10% 50V
2037	4822 126 14585	100nF 10% 50V
2038	4822 126 14585	100nF 10% 50V
2039	4822 126 13883	220pF 5% 50V
2040	4822 122 33177	10nF 20% 50V
2042	4822 122 33777	47pF 5% 63V
2043	4822 122 33777	47pF 5% 63V
2044	4822 122 33777	47pF 5% 63V
2045	4822 124 14584	100µF 20% 10V
2046	4822 126 14585	100nF 10% 50V
2049	4822 126 14226	82pF 5% 50V 0603
2050	4822 126 14226	82pF 5% 50V 0603
2051	4822 126 14226	82pF 5% 50V 0603
2052	4822 126 14226	82pF 5% 50V 0603
2053	4822 126 14226	82pF 5% 50V 0603
2054	4822 126 14226	82pF 5% 50V 0603
2101	4822 124 40196	220µF 20% 16V
2102	4822 126 13473	220nF 80-20% 50V
2104	4822 122 33177	10nF 20% 50V
2105	4822 122 33177	10nF 20% 50V
2106	4822 122 33575	220pF 5% 63V
2107	4822 126 13694	68pF 1% 63V
2108	5322 122 31873	2.7pF 5% 100V
2109	4822 124 22652	2.2µF 20% 50V
2110	4822 124 21913	1µF 20% 63V
2111	4822 126 14585	100nF 10% 50V
2112	4822 122 33891	3.3nF 10% 63V
2116	4822 124 81044	470µF 20% 6.3V
2117	4822 126 13482	470nF 80/20% 16V
2118	5322 122 32967	5.6pF 10% 63V
2119	5322 122 31863	330pF 5% 63V
2120	4822 126 14076	220nF 20-80% 25V
2121	4822 124 40248	10µF 20% 63V
2125	4822 122 33177	10nF 20% 50V
2126	4822 124 40433	47µF 20% 25V
2127	4822 126 14076	220nF 20-80% 25V
2202	5322 122 31863	330pF 5% 63V
2203	5322 122 31863	330pF 5% 63V
2204	4822 126 14305	100nF 10% 16V 0603
2205	4822 124 40248	10µF 20% 63V
2206	5322 122 32531	100pF 5% 50V
2209	5322 122 31863	330pF 5% 63V
2210	5322 122 32531	100pF 5% 50V
2212	4822 124 40248	10µF 20% 63V
2213	4822 126 14305	100nF 10% 16V 0603
2215	5322 122 31863	330pF 5% 63V
2216	5322 122 31863	330pF 5% 63V
2217	5322 122 32531	100pF 5% 50V
2218	5322 122 31647	1nF 10% 63V
2219	5322 122 31863	330pF 5% 63V
2220	5322 122 32531	100pF 5% 50V
2221	4822 126 14076	220nF 20-80% 25V
2222	4822 124 81286	47µF 20% 16V

2224	5322 122 32531	100pF 5% 50V
2226	5322 122 32531	100pF 5% 50V
2240	5322 122 32531	100pF 5% 50V
2241	5322 122 32531	100pF 5% 50V
2242	4822 124 23002	10µF 16V
2243	4822 126 14076	220nF 20-80% 25V
2244	4822 126 14076	220nF 20-80% 25V
2245	4822 126 14076	220nF 20-80% 25V
2246	4822 126 14076	220nF 20-80% 25V
2247	4822 126 14076	220nF 20-80% 25V
2248	4822 126 14076	220nF 20-80% 25V
2249	4822 126 14076	220nF 20-80% 25V
2250	4822 126 14076	220nF 20-80% 25V
2251	4822 124 80151	47µF 16V
2258	4822 126 14076	220nF 20-80% 25V
2300	4822 124 40196	220µF 20% 16V
2301	4822 126 14585	100nF 10% 50V
2302	4822 126 14585	100nF 10% 50V
2303	4822 124 22652	2.2µF 20% 50V
2304	4822 126 14305	100nF 10% 16V 0603
2307	4822 122 33741	10pF 10% 50V
2308	4822 122 33741	10pF 10% 50V
2311	4822 124 40196	220µF 20% 16V
2312	4822 126 14305	100nF 10% 16V 0603
2313	4822 126 13694	68pF 1% 63V
2315	5322 122 34098	10nF 10% 63V
2321	4822 126 13881	470pF 5% 50V
2322	4822 126 13881	470pF 5% 50V
2323	4822 121 70661	100nF 5% 63V
2324	2222 396 05333	33nF 5% 50V
2331	5322 126 11583	10nF 10% 50V 0603
2340	4822 126 13881	470pF 5% 50V
2343	5322 122 32448	10pF 5% 63V
2344	4822 126 14305	100nF 10% 16V 0603
2351	2020 552 96326	220nF 10% 16V
2403	4822 126 14585	100nF 10% 50V
2404	4822 126 14585	100nF 10% 50V
2405	4822 126 14585	100nF 10% 50V
2406	4822 126 14305	100nF 10% 16V 0603
2407	4822 126 14305	100nF 10% 16V 0603
2408	4822 126 14305	100nF 10% 16V 0603
2422	4822 124 22652	2.2µF 20% 50V
2423	4822 124 40769	4.7µF 20% 100V
2425	4822 122 33761	22pF 5% 50V
2427	5322 126 10511	1nF 5% 50V
2436	4822 124 80151	47µF 16V
2501	4822 126 14305	100nF 10% 16V 0603
2502	4822 126 14305	100nF 10% 16V 0603
2503	4822 126 14305	100nF 10% 16V 0603
2504	4822 126 14305	100nF 10% 16V 0603
2505	4822 126 14305	100nF 10% 16V 0603
2506	4822 126 14305	100nF 10% 16V 0603
2507	4822 126 14305	100nF 10% 16V 0603
2508	4822 126 14305	100nF 10% 16V 0603
2509	4822 126 14305	100nF 10% 16V 0603
2510	4822 126 14305	100nF 10% 16V 0603
2511	4822 126 14305	100nF 10% 16V 0603
2512	4822 126 14305	100nF 10% 16V 0603
2520	4822 126 14305	100nF 10% 16V 0603
2521	4822 126 14305	100nF 10% 16V 0603
2522	5322 126 11579	3.3nF 10% 63V
2525	4822 126 14507	18pF 5% 50V 0603
2528	4822 122 33752	15pF 5% 50V
2532	4822 126 14043	1µF 20% 16V
2534	5322 126 10223	4.7nF 10% 63V
2535	4822 126 14491	2.2µF 10V
2536	4822 126 14585	100nF 10% 50V
2537	4822 126 14585	100nF 10% 50V
2538	4822 124 40433	47µF 20% 25V
2539	4822 126 14305	100nF 10% 16V 0603
2540	4822 124 40433	47µF 20% 25V
2541	5322 122 32654	22nF 10% 63V
2545	4822 126 14305	100nF 10% 16V 0603
2550	4822 126 14305	100nF 10% 16V 0603
2553	4822 126 14585	100nF 10% 50V
2554	4822 126 14585	100nF 10% 50V
2555	4822 126 14305	100nF 10% 16V 0603
2556	4822 126 14305	100nF 10% 16V 0603
2557	4822 126 14305	100nF 10% 16V 0603
2558	4822 126 14305	100nF 10% 16V 0603
2559	4822 124 40207	100µF 20% 25V
2560	4822 126 14305	100nF 10% 16V 0603
2561	4822 124 81286	47µF 20% 16V
2562	4822 126 14305	100nF 10% 16V 0603
2564	4822 122 33177	10nF 20% 50V
2567	5322 126 10733	680pF 5% 50V
2568	4822 122 31765	100pF 2% 63V
2569	4822 122 33177	10nF 20% 50V
2570	4822 122 31765	100pF 2% 63V
2751	4822 126 14305	100nF 10% 16V 0603
2752	4822 126 13692	47pF 1% 63V
2753	4822 122 32927	220nF 20% 50V
2754	5322 122 32268	470pF 5% 63V
2755	5322 122 32268	470pF 5% 63V

2756	5322 122 32268	470pF 5% 63V
2757	5322 122 32268	470pF 5% 63V
2758	5322 122 32268	470pF 5% 63V
2759	5322 122 32268	470pF 5% 63V
2760	5322 122 32268	470pF 5% 63V
2761	4822 122 32927	220nF 20% 50V
2762	4822 122 32927	220nF 20% 50V
2763	5322 122 32268	470pF 5% 63V
2764	5322 122 32268	470pF 5% 63V
2765	4822 124 12095	100µF 20% 16V
2766	4822 124 12095	100µF 20% 16V
2767	5322 122 32286	3.3pF 5% 50V
2768	5322 122 32286	3.3pF 5% 50V
2773	5322 122 31647	1nF 10% 63V
2774	5322 122 31647	1nF 10% 63V
2777	4822 124 23002	10µF 16V
2778	4822 124 23002	10µF 16V
2779	4822 126 14585	100nF 10% 50V
2780	4822 124 23002	10µF 16V
2781	4822 126 14585	100nF 10% 50V
2782	4822 124 23002	10µF 16V
2783	4822 126 13482	470nF 80/20% 16V
2784	4822 126 13482	470nF 80/20% 16V
2785	5322 122 31647	1nF 10% 63V
2786	5322 122 31647	1nF 10% 63V
2787	5322 126 10223	4.7nF 10% 63V
2788	5322 126 10223	4.7nF 10% 63V
2790	4822 122 33761	22pF 5% 50V
2791	4822 122 33761	22pF 5% 50V
2792	5322 126 11583	10nF 10% 50V 0603
2793	4822 122 33177	10nF 20% 50V
2801	4822 122 33761	22pF 5% 50V
2802	4822 124 12398	4.7µF 20% 25V
2803	4822 124 12398	4.7µF 20% 25V
2804	4822 122 32927	220nF 20% 50V
2805	4822 122 32927	220nF 20% 50V
2808	4822 124 12095	100µF 20% 16V
2809	5322 126 10511	1nF 5% 50V
2810	5322 126 10511	1nF 5% 50V
2811	5322 126 10511	1nF 5% 50V
2842	4822 124 23002	10µF 16V
2843	4822 126 14491	2.2µF 10V
2846	4822 124 23002	10µF 16V
2847	4822 124 23002	10µF 16V
2848	4822 124 23002	10µF 16V
2849	4822 124 23002	10µF 16V
2852	4822 122 32927	220nF 20% 50V
2853	4822 122 32927	220nF 20% 50V
2854	4822 122 32927	220nF 20% 50V
2855	4822 122 32927	220nF 20% 50V
2856	4822 122 32	

3045	4822 051 20273	27k 5% 0.1W	3246	4822 051 10102	1k 2% 0.25W	3439	4822 117 10833	10k 1% 0.1W
3047	4822 117 13525	24k 1% 0.62W 0603	3248	4822 117 13577	330Ω 1% 1.25W	3440	4822 051 20393	39k 5% 0.1W
3048	4822 117 13526	150Ω 5% 0.63W	3249	4822 117 12955	2k7 1% 0.1W 0805	3441	4822 117 10833	10k 1% 0.1W
3059	4822 051 30331	330Ω 5% 0.062W	3250	4822 117 11139	1k5 1% 0.1W	3454	4822 051 20008	Jumper 0805
3062	4822 117 12925	47k 1% 0.063W 0603	3252	4822 051 20339	33Ω 5% 0.1W	3460	4822 051 30103	10k 5% 0.062W
3063	4822 051 30472	4k7 5% 0.062W	3253	4822 051 20391	390Ω 5% 0.1W	3461	4822 051 30223	22k 5% 0.062W
3066	4822 117 10833	10k 1% 0.1W	3254	4822 051 10102	1k 2% 0.25W	3521	4822 117 13632	100k 1% 0.62W 0603
3067	4822 051 30472	4k7 5% 0.062W	3255	4822 051 10102	1k 2% 0.25W	3530	4822 051 30101	100Ω 5% 0.062W
3068	4822 051 30103	10k 5% 0.062W	3256	4822 117 11927	75Ω 1% 0.1W	3531	4822 051 30101	100Ω 5% 0.062W
3069	4822 051 30689	68Ω 5% 0.063W 0603	3259	4822 051 30273	27k 5% 0.062W	3532	4822 116 83933	15k 1% 0.1W
3070	4822 051 30103	10k 5% 0.062W	3262	4822 117 12925	47k 1% 0.063W 0603	3538	4822 052 10228	2Ω 5% 0.33W
3071	4822 051 30472	4k7 5% 0.062W	3263	4822 051 30221	220Ω 5% 0.062W	3545	4822 051 30471	470Ω 5% 0.062W
3072	4822 117 10834	47k 1% 0.1W	3264	4822 051 20822	8k2 5% 0.1W	3546	4822 051 30471	470Ω 5% 0.062W
3073	4822 051 20472	4k7 5% 0.1W	3265	4822 117 12955	2k7 1% 0.1W 0805	3551	4822 051 30271	270Ω 5% 0.062W
3075	4822 051 30472	4k7 5% 0.062W	3266	4822 117 10833	10k 1% 0.1W	3554	4822 051 10102	1k 2% 0.25W
3076	4822 051 30472	4k7 5% 0.062W	3269	4822 051 30561	560Ω 5% 0.062W	3556	4822 117 10833	10k 1% 0.1W
3080	3198 031 11010	4X100Ω 5% 0.63W network	3270	4822 051 10102	1k 2% 0.25W	3557	4822 051 30479	47Ω 5% 0.062W
3086	4822 051 30101	100Ω 5% 0.062W	3271	4822 051 10102	1k 2% 0.25W	3558	4822 051 20105	1M 5% 0.1W
3090	3198 031 11010	4X100Ω 5% 0.63W network	3273	4822 051 20822	8k2 5% 0.1W	3565	4822 051 30101	100Ω 5% 0.062W
3091	3198 031 11010	4X100Ω 5% 0.63W network	3274	4822 117 12955	2k7 1% 0.1W 0805	3566	4822 051 30101	100Ω 5% 0.062W
3092	3198 031 11010	4X100Ω 5% 0.63W network	3275	4822 051 30339	33Ω 5% 0.062W	3567	4822 117 11373	100Ω 1% 0805
3093	3198 031 11010	4X100Ω 5% 0.63W network	3276	4822 051 30391	390Ω 5% 0.062W	3568	4822 051 20471	470Ω 5% 0.1W
3094	3198 031 11010	4X100Ω 5% 0.63W network	3277	4822 051 30222	2k2 5% 0.062W	3569	4822 051 30479	47Ω 5% 0.062W
3095	3198 031 11010	4X100Ω 5% 0.63W network	3278	4822 051 30331	330Ω 5% 0.062W	3570	3198 031 11010	4X100Ω 5% 0.63W network
3096	3198 031 11010	4X100Ω 5% 0.63W network	3279	4822 051 30151	150Ω 5% 0.062W	3583	4822 051 30101	100Ω 5% 0.062W
3097	3198 031 11010	4X100Ω 5% 0.63W network	3281	4822 117 12903	1k8 1% 0.063W 0603	3584	4822 051 30471	470Ω 5% 0.062W
3098	3198 031 11010	4X100Ω 5% 0.63W network	3282	4822 117 13632	100k 1% 0.62W 0603	3585	4822 051 30479	47Ω 5% 0.062W
3099	3198 031 11010	4X100Ω 5% 0.63W network	3283	4822 051 30683	68k 5% 0.062W	3590	4822 117 11454	820Ω 1% 0.1W
3102	4822 117 10833	10k 1% 0.1W	3284	4822 117 13632	100k 1% 0.62W 0603	3750	4822 052 10228	2Ω 5% 0.33W
3103	4822 051 20008	Jumper 0805	3285	4822 051 30683	68k 5% 0.062W	3751	4822 051 30223	22k 5% 0.062W
3104	4822 051 20008	Jumper 0805	3286	4822 117 13632	100k 1% 0.62W 0603	3752	4822 051 30223	22k 5% 0.062W
3106	4822 051 20479	47Ω 5% 0.1W	3287	4822 051 30683	68k 5% 0.062W	3753	4822 051 30682	6k8 5% 0.062W
3110	4822 117 11449	2k2 5% 0.1W 0805	3288	4822 051 30101	100Ω 5% 0.062W	3754	4822 051 30682	6k8 5% 0.062W
3111	4822 117 11449	2k2 5% 0.1W 0805	3289	4822 051 30101	100Ω 5% 0.062W	3755	4822 051 30101	100Ω 5% 0.062W
3112	4822 051 20472	4k7 5% 0.1W	3290	4822 052 10478	4Ω 7 5% 0.33W	3756	4822 051 30101	100Ω 5% 0.062W
3114	4822 051 20472	4k7 5% 0.1W	3291	4822 051 30561	560Ω 5% 0.062W	3762	4822 051 20472	4k7 5% 0.1W
3118	4822 051 20391	390Ω 5% 0.1W	3292	4822 051 30103	10k 5% 0.062W	3765	4822 051 30683	68k 5% 0.062W
3119	4822 051 20479	47Ω 5% 0.1W	3293	4822 051 30471	470Ω 5% 0.062W	3766	4822 051 30103	10k 5% 0.062W
3124	4822 051 30101	100Ω 5% 0.062W	3294	4822 051 30103	10k 5% 0.062W	3767	4822 051 30683	68k 5% 0.062W
3133	4822 117 12955	4k7 1% 0.1W 0805	3295	4822 051 30471	470Ω 5% 0.062W	3768	4822 051 30103	10k 5% 0.062W
3135	4822 051 20472	4k7 5% 0.1W	3296	4822 051 30103	10k 5% 0.062W	3769	4822 117 11507	6k8 1% 0.1W
3136	4822 117 11503	220Ω 1% 0.1W	3297	4822 051 30103	10k 5% 0.062W	3770	4822 117 11507	6k8 1% 0.1W
3137	4822 051 10102	1k 2% 0.25W	3298	4822 117 13632	100k 1% 0.62W 0603	3771	4822 116 83933	15k 1% 0.1W
3138	4822 117 11448	180Ω 1% 0.1W	3299	4822 051 30683	68k 5% 0.062W	3772	4822 116 83933	15k 1% 0.1W
3139	4822 117 11139	1k5 1% 0.1W	3300	4822 052 10688	6Ω 8 5% 0.33W	3773	4822 051 20472	4k7 5% 0.1W
3140	4822 116 83933	15k 1% 0.1W	3302	4822 051 30101	100Ω 5% 0.062W	3781	4822 051 30561	560Ω 5% 0.062W
3141	4822 051 30333	33k 5% 0.062W	3303	4822 051 30101	100Ω 5% 0.062W	3783	4822 117 11373	100Ω 1% 0805
3142	4822 051 30102	1k 5% 0.062W	3304	4822 051 30101	100Ω 5% 0.062W	3784	4822 051 30008	Jumper 0603
3143	4822 051 30102	1k 5% 0.062W	3307	4822 051 30102	1k 5% 0.062W	3785	4822 051 30008	Jumper 0603
3145	4822 051 30101	100Ω 5% 0.062W	3308	4822 051 30102	1k 5% 0.062W	3796	4822 051 20121	120Ω 5% 0.1W
3146	4822 051 20223	22k 5% 0.1W	3309	4822 051 30333	33k 5% 0.062W	3797	4822 051 20121	120Ω 5% 0.1W
3147	4822 052 10109	10Ω 5% 0.33W	3310	4822 051 20332	3k3 5% 0.1W	3798	4822 117 10834	47k 1% 0.1W
3152	4822 051 20471	470Ω 5% 0.1W	3311	4822 051 30102	1k 5% 0.062W	3799	4822 117 12925	47k 1% 0.063W 0603
3153	4822 051 10102	1k 2% 0.25W	3312	4822 117 13632	100k 1% 0.62W 0603	3800	4822 051 30682	6k8 5% 0.062W
3154	4822 117 11503	220Ω 1% 0.1W	3315	4822 051 20182	1k8 5% 0.1W	3801	4822 051 30103	10k 5% 0.062W
3155	4822 117 11503	220Ω 1% 0.1W	3316	4822 051 10102	1k 2% 0.25W	3802	4822 117 12891	220k 1%
3200	4822 117 10353	150Ω 1% 0.1W	3317	4822 051 30102	1k 5% 0.062W	3828	4822 051 30008	Jumper 0603
3201	4822 117 10353	150Ω 1% 0.1W	3318	4822 051 30102	1k 5% 0.062W	3829	4822 051 30008	Jumper 0603
3202	4822 117 10353	150Ω 1% 0.1W	3320	4822 051 30102	1k 5% 0.062W	3830	4822 051 20121	120Ω 5% 0.1W
3203	4822 117 10353	150Ω 1% 0.1W	3321	4822 051 30102	1k 5% 0.062W	3831	4822 051 20121	120Ω 5% 0.1W
3204	4822 052 10688	6Ω 8 5% 0.33W	3322	4822 051 30102	1k 5% 0.062W	3832	4822 051 10102	1k 2% 0.25W
3205	4822 051 20471	470Ω 5% 0.1W	3323	4822 051 20393	39k 5% 0.1W	3833	4822 051 30103	10k 5% 0.062W
3206	4822 117 12521	68Ω 1% 0.1W	3325	4822 051 30102	1k 5% 0.062W	3840	4822 051 30103	10k 5% 0.062W
3207	4822 051 20561	560Ω 5% 0.1W	3326	4822 051 30221	220Ω 5% 0.062W	3846	4822 117 12925	47k 1% 0.063W 0603
3208	4822 051 20399	39Ω 5% 0.1W	3330	4822 051 30684	680k 5% 0.062W	3847	4822 117 12925	47k 1% 0.063W 0603
3209	4822 117 11927	75Ω 1% 0.1W	3331	4822 117 12925	47k 1% 0.063W 0603	3850	4822 051 20332	3k3 5% 0.1W
3210	4822 117 11927	75Ω 1% 0.1W	3332	4822 051 30183	18k 5% 0.062W	3851	4822 051 20332	3k3 5% 0.1W
3211	4822 117 11927	75Ω 1% 0.1W	3340	4822 051 30123	12k 5% 0.062W	3852	4822 051 30223	22k 5% 0.062W
3212	4822 051 20399	39Ω 5% 0.1W	3341	4822 051 10102	1k 2% 0.25W	3853	4822 051 30223	22k 5% 0.062W
3213	4822 117 11927	75Ω 1% 0.1W	3342	4822 051 30103	10k 5% 0.062W	3854	4822 117 10833	10k 1% 0.1W
3215	4822 117 11927	75Ω 1% 0.1W	3343	4822 117 10837	100k 1% 0.1W	3855	4822 117 10833	10k 1% 0.1W
3216	4822 051 20822	8k2 5% 0.1W	3344	4822 051 30103	10k 5% 0.062W	3856	4822 117 10833	10k 1% 0.1W
3218	4822 051 20392	3k9 5% 0.1W	3350	4822 051 30474	470k 5% 0.062W	3857	4822 117 10833	10k 1% 0.1W
3219	4822 051 10102	1k 2% 0.25W	3351	4822 117 12891	220k 1%	3858	4822 117 10833	10k 1% 0.1W
3220	4822 051 10102	1k 2% 0.25W	3352	4822 051 30332	3k3 5% 0.062W	3859	4822 117 10833	10k 1% 0.1W
3221	4822 117 10353	150Ω 1% 0.1W	3353	4822 117 12903	1k8 1% 0.063W 0603	3860	4822 117 10833	10k 1% 0.1W
3222	4822 117 10353	150Ω 1% 0.1W	3369	4822 051 30103	10k 5% 0.062W	3861	4822 117 10833	10k 1% 0.1W
3223	4822 117 10353	150Ω 1% 0.1W	3370	4822 051 30103	10k 5% 0.062W	3862	4822 117 11507	6k8 1% 0.1W
3224	4822 117 10353	150Ω 1% 0.1W	3400	4822 117 11454	820Ω 1% 0.1W	3864	4822 051 20223	22k 5% 0.1W
3225	4822 052 10688	6Ω 8 5% 0.33W	3401	4822 117 11454	820Ω 1% 0.1W	3865	4822 051 20223	22k 5% 0.1W
3227	4822 051 20399	39Ω 5% 0.1W	3402	4822 117 11454	820Ω 1% 0.1W	3866	4822 117 11373	100Ω 1% 0805
3228	4822 051 30101	100Ω 5% 0.062W	3404	4822 051 20479	47Ω 5% 0.1W	3867	4822 117 11373	100Ω 1% 0805
3229	4822 051 30103	10k 5% 0.062W	3405	4822 051 20479	47Ω 5% 0.1W	3877	4822 051 20332	3k3 5% 0.1W
3230	4822 051 20561	560Ω 5% 0.1W	3406	4822 051 20479	47Ω 5% 0.1W	3878	4822 051 20332	3k3 5% 0.1W
3231	4822 051 20399	39Ω 5% 0.1W	3407	4822 117 10361	680Ω 1% 0.1W	3879	4822 051 20332	3k3 5% 0.1W
3232	4822 117 12521	68Ω 1% 0.1W	3408	4822 117 10361	680Ω 1% 0.1W	3880	4822 051 20332	3k3 5% 0.1W
3235	4822 117							

3895	4822 051 30103	10k 5% 0.062W
3899	4822 051 20008	Jumper 0805
4xxx	4822 051 10008	Jumper 1206
4xxx	4822 051 20008	Jumper 0805

5002	4822 157 11775	6.8µH 5%
5101	4822 157 11775	6.8µH 5%
5102	4822 157 71303	0.39µH 10%
5103	4822 157 11776	Coil var. 40.4MHz
5106	4822 157 10977	4.7µH 10%
5108	2422 549 44811	Coil var.78MHz
5301	4822 157 11876	6.8µH 10% 0805
5302	4822 157 11876	6.8µH 10% 0805
5305	4822 051 20008	Jumper 0805
5306	4822 051 20008	Jumper 0805
5307	4822 051 20008	Jumper 0805
5501	4822 157 11775	6.8µH 5% 5X3
5502	4822 157 11775	6.8µH 5% 5X3
5540	4822 157 71304	1µH
5559	4822 157 11775	6.8µH 5% 5X3
5560	4822 157 11775	6.8µH 5% 5X3
5562	4822 157 11775	6.8µH 5% 5X3
5751	4822 157 11775	6.8µH 5% 5X3
5752	4822 157 11775	6.8µH 5% 5X3
5753	4822 157 11775	6.8µH 5% 5X3
5757	4822 157 11876	6.8µH 10% 0805
5759	4822 157 70503	4.7µH



6001	4822 130 11422	PLVA2650A
6002	4822 130 11422	PLVA2650A
6003	4822 130 11422	PLVA2650A
6004	4822 130 11422	PLVA2650A
6006	4822 130 11422	PLVA2650A
6008	4822 130 11422	PLVA2650A
6009	4822 130 11422	PLVA2650A
6012	4822 130 11422	PLVA2650A
6013	4822 130 11422	PLVA2650A
6017	4822 130 11422	PLVA2650A
6019	4822 130 11422	PLVA2650A
6021	4822 130 11422	PLVA2650A
6023	4822 130 11422	PLVA2650A
6025	4822 130 11423	PLVA2656A
6026	4822 130 11423	PLVA2656A
6037	9322 129 34685	BZM55-C3V9
6039	4822 130 83757	MCL4148
6040	9322 129 37685	BZM55-C5V6
6101	9322 149 10685	BZM55-C33
6103	4822 130 11525	1SS356
6104	4822 130 11525	1SS356
6106	4822 130 83757	MCL4148
6107	4822 130 83757	MCL4148
6200	9322 129 40685	BZM55-C10
6201	9322 129 38685	BZM55-C6V8
6202	9322 129 40685	BZM55-C10
6203	9322 129 40685	BZM55-C10
6204	9322 129 38685	BZM55-C6V8
6205	9322 129 40685	BZM55-C10
6206	9322 129 40685	BZM55-C10
6207	9322 129 38685	BZM55-C6V8
6208	9322 129 40685	BZM55-C10
6209	9322 129 40685	BZM55-C10
6210	9322 129 38685	BZM55-C6V8
6211	9322 129 38685	BZM55-C6V8
6212	9322 129 38685	BZM55-C6V8
6213	9322 129 38685	BZM55-C6V8
6214	9322 129 40685	BZM55-C10
6215	9322 129 40685	BZM55-C10
6216	9322 129 40685	BZM55-C10
6217	9322 129 40685	BZM55-C10
6218	9340 548 61115	PDZ12B
6219	9322 129 38685	BZM55-C6V8
6220	9322 129 40685	BZM55-C10
6221	9322 129 40685	BZM55-C10
6222	9322 129 38685	BZM55-C6V8
6223	9322 129 40685	BZM55-C10
6224	9322 129 40685	BZM55-C10
6225	9322 129 38685	BZM55-C6V8
6226	9322 129 38685	BZM55-C6V8
6227	9322 129 38685	BZM55-C6V8
6228	9322 129 38685	BZM55-C6V8
6229	9322 129 40685	BZM55-C10
6230	9322 129 40685	BZM55-C10
6231	9322 129 40685	BZM55-C10
6232	9322 129 40685	BZM55-C10
6233	9322 129 38685	BZM55-C6V8
6238	4822 130 11528	1PS76SB10
6240	9322 129 40685	BZM55-C10
6241	9322 129 40685	BZM55-C10

6242	9322 129 40685	BZM55-C10
6243	9322 129 40685	BZM55-C10
6244	9322 129 38685	BZM55-C6V8
6250	4822 130 11528	1PS76SB10
6340	4822 130 83757	MCL4148
6341	4822 130 11594	BZX284-C47
6344	4822 130 83757	MCL4148
6350	4822 130 82346	BZV55-C27
6420	9322 129 37685	BZM55-C5V6
6422	4822 130 83757	MCL4148
6424	4822 130 83757	MCL4148
6429	9322 129 37685	BZM55-C5V6
6430	4822 130 83757	MCL4148
6431	4822 130 83757	MCL4148
6750	4822 051 20008	Jumper 0805
6751	9322 129 40685	BZM55-C10
6752	9322 129 40685	BZM55-C10
6755	9322 129 40685	BZM55-C10
6756	9322 129 40685	BZM55-C10
6757	4822 051 20008	Jumper 0805
6759	4822 130 83757	MCL4148



7001	9322 157 20668	MSM51V18165F-60J
7002	4822 816 11247	M27V160-100B1
7003	9352 629 88557	SAA5801H/011
7006	4822 130 60373	BC856B
7007	4822 130 60511	BC847B
7008	4822 209 16977	M24C32-WBN6
7009	4822 209 16978	LF33CV
7010	4822 209 73852	PMBT2369
7011	4822 130 11155	PDTC114ET
7012	3198 010 44010	PDTA114ET
7013	9322 149 03668	M29W400BT-90M1
7014	4822 130 60511	BC847B
7015	4822 130 60373	BC856B
7016	4822 130 60511	BC847B
7019	4822 130 10255	MUN2213
7103	4822 130 60511	BC847B
7104	4822 130 60511	BC847B
7107	4822 130 60373	BC856B
7111	4822 130 60511	BC847B
7112	4822 130 60511	BC847B
7113	4822 209 72042	L78L05ACZ
7200	4822 130 40959	BC547B
7201	4822 130 40959	BC547B
7203	4822 130 44568	BC557B
7204	4822 130 60511	BC847B
7205	4822 130 60511	BC847B
7206	4822 130 60511	BC847B
7207	4822 130 60373	BC856B
7208	9322 105 08668	TEA6415CD
7216	4822 130 60511	BC847B
7300	9352 625 23518	TDA9330H/N2
7341	4822 130 60373	BC856B
7351	4822 130 60373	BC856B
7417	4822 130 10255	MUN2213
7418	4822 130 60373	BC856B
7419	4822 130 60373	BC856B
7420	4822 130 60373	BC856B
7424	4822 130 60373	BC856B
7501	9352 625 24518	TDA9321H/N2
7502	4822 130 60511	BC847B
7555	4822 130 60373	BC856B
7560	4822 209 12998	SAA4961/V3/S1
7561	4822 130 60511	BC847B
7575	4822 130 60511	BC847B
7701	4822 130 60511	BC847B
7751	9322 148 35668	MSP3410D-PS-C5
7752	5322 209 11102	HEF4052BT
7753	5322 209 11102	HEF4052BT
7757	4822 209 31378	NJM4556MB
7773	4822 130 60511	BC847B
7774	4822 130 60511	BC847B
7777	9322 116 87668	TEA6422D

Feature Box [L]

Various

0025	3104 301 23824	FBX-shield top
0026	3104 301 23834	FBX-shield botom
0361	2422 025 15389	9P male
0362	2422 025 15389	9P male
1701	4822 242 10685	Crystal 12MHz



2701	4822 126 11663	12pF
2704	4822 126 11663	12pF

2707	4822 126 11663	12pF
2709	4822 126 14305	100nF 10% 16V 0603
2710	4822 124 80791	470µF 16V 20%
2712	4822 126 13881	470pF 5% 50V
2713	4822 122 33761	22pF 5% 50V
2714	4822 122 33761	22pF 5% 50V
2718	4822 122 33752	15pF 5% 50V
2719	4822 122 33752	15pF 5% 50V
2720	4822 122 33752	15pF 5% 50V
2721	4822 122 31765	100pF 2% 63V
2722	4822 122 31765	100pF 2% 63V
2723	4822 126 14225	56pF 5% 50V 0603
2724	4822 126 14225	56pF 5% 50V 0603
2725	4822 124 40248	10µF 20% 63V
2726	4822 126 14305	100nF 10% 16V 0603
2727	4822 124 40255	100µF 20% 63V
2728	4822 124 40248	10µF 20% 63V
2729	4822 126 14305	100nF 10% 16V 0603
2730	4822 124 40255	100µF 20% 63V
2740	4822 126 14494	22nF 10% 25V 0603
2741	4822 126 14494	22nF 10% 25V 0603
2742	4822 126 14494	22nF 10% 25V 0603
2745	4822 126 14305	100nF 10% 16V 0603
2746	4822 126 14305	100nF 10% 16V 0603
2747	4822 124 40769	4.7µF 20% 100V
2748	4822 126 14305	100nF 10% 16V 0603
2749	4822 124 40255	100µF 20% 63V
2750	4822 126 14305	100nF 10% 16V 0603
2751	4822 126 14305	100nF 10% 16V 0603
2752	4822 126 14305	100nF 10% 16V 0603
2753	4822 126 14305	100nF 10% 16V 0603
2754	4822 124 40769	4.7µF 20% 100V
2755	4822 126 14305	100nF 10% 16V 0603
2756	4822 126 14305	100nF 10% 16V 0603
2757	4822 126 14494	22nF 10% 25V 0603
2758	4822 126 14507	18pF 5% 50V 0603
2759	4822 126 14507	18pF 5% 50V 0603
2760	4822 126 14305	100nF 10% 16V 0603
2761	4822 126 14305	100nF 10% 16V 0603
2762	4822 126 14305	100nF 10% 16V 0603
2763	4822 126 14305	100nF 10% 16V 0603
2764	4822 126 14305	100nF 10% 16V 0603
2765	4822 126 14305	100nF 10% 16V 0603
2766	4822 126 14305	100nF 10% 16V 0603
2767	4822 126 14305	100nF 10% 16V 0603
2769	4822 126 14305	100nF 10% 16V 0603
2773	4822 126 14305	100nF 10% 16V 0603
2775	4822 126 14305	100nF 10% 16V 0603
2777	4822 126 14305	100nF 10% 16V 0603
2779	4822 126 14305	100nF 10% 16V 0603
2781	4822 126 14305	100nF 10% 16V 0603
2782	4822 126 14305	100nF 10% 16V 0603
2783	4822 126 14305	100nF 10% 16V 0603
2784	4822 126 14305	100nF 10% 16V 0603
2785	4822 126 14305	100nF 10% 16V 0603
2786	4822 126 14305	100nF 10% 16V 0603
2787	4822 126 14305	100nF 10% 16V 0603
2788	4822 126 14305	100nF 10% 16V 0603
2789	4822 126 14305	100nF 10% 16V 0603
2790	4822 126 14305	100nF 10% 16V 0603
2791	4822 126 14305	100nF 10% 16V 0603
2792	4822 124 40248	10µF 20% 63V
2793	4822 126 14305	100nF 10% 16V 0603
2794	4822 124 40248	10µF 20% 63V
2795	4822 126 14305	100nF 10% 16V 0603
2796	4822 126 14305	100nF 10% 16V 0603
2797	4822 126 14305	100nF 10% 16V 0603
2798	4822 126 14305	100nF 10% 16V 0603
2799	4822 126 14305	100nF 10% 16V 0603
2800	4822 126 14305	100nF 10% 16V 0603
2801	4822 126 14305	100nF 10% 16V 0603
2802	4822 126 14305	100nF 10% 16V 0603
2803	4822 126 14305	100nF 10% 16V 0603
2804	4822 126 14305	100nF 10% 16V 0603
2805	4822 126 14305	100nF 10% 16V 0603
2806	4822 124 40255	100µF 20% 63V
2807	4822 126 14305	100nF 10% 16V 0603
2808	4822 124 40248	10µF 20% 63V
2809	4822 126 14305	100nF 10% 16V 0603
2813	4822 126 14305	100nF

2851	4822 126 14305	100nF 10% 16V 0603
2852	4822 126 14305	100nF 10% 16V 0603
2853	4822 126 14305	100nF 10% 16V 0603
2854	4822 126 14305	100nF 10% 16V 0603
2855	4822 126 14305	100nF 10% 16V 0603
2856	4822 126 14305	100nF 10% 16V 0603
2858	4822 126 14305	100nF 10% 16V 0603
2859	4822 126 14305	100nF 10% 16V 0603
2860	4822 126 14305	100nF 10% 16V 0603
2861	4822 126 14305	100nF 10% 16V 0603
2862	4822 126 14305	100nF 10% 16V 0603
2863	4822 126 14305	100nF 10% 16V 0603
2864	4822 126 14305	100nF 10% 16V 0603
2865	4822 126 14305	100nF 10% 16V 0603
2866	4822 126 14305	100nF 10% 16V 0603
2867	4822 126 14305	100nF 10% 16V 0603
2868	4822 124 40248	10µF 20% 63V
2869	4822 126 14305	100nF 10% 16V 0603
2870	4822 124 40255	100µF 20% 63V
2871	4822 126 14305	100nF 10% 16V 0603
2872	4822 126 14305	100nF 10% 16V 0603
2885	4822 126 14305	100nF 10% 16V 0603
2888	4822 126 14305	100nF 10% 16V 0603
2889	4822 126 14305	100nF 10% 16V 0603
2890	4822 126 14305	100nF 10% 16V 0603
2891	4822 126 14305	100nF 10% 16V 0603
2892	4822 126 14305	100nF 10% 16V 0603
2893	4822 126 14305	100nF 10% 16V 0603
2894	4822 126 14305	100nF 10% 16V 0603
2895	4822 126 14305	100nF 10% 16V 0603
2896	4822 126 14305	100nF 10% 16V 0603
2897	4822 124 40248	10µF 20% 63V
2898	4822 126 14305	100nF 10% 16V 0603
2899	4822 126 14305	100nF 10% 16V 0603
2901	4822 126 14305	100nF 10% 16V 0603
2902	4822 126 14305	100nF 10% 16V 0603
2903	4822 126 14305	100nF 10% 16V 0603
2904	4822 126 14305	100nF 10% 16V 0603
2905	4822 126 14305	100nF 10% 16V 0603
2906	4822 126 14305	100nF 10% 16V 0603
2907	4822 126 14305	100nF 10% 16V 0603
2908	4822 126 14305	100nF 10% 16V 0603
2909	4822 124 40255	100µF 20% 63V
2910	4822 126 11669	27pF
2911	4822 126 14223	2.2pF +-0.25pF 50V 0603
2912	4822 126 11663	12pF
2913	4822 126 11663	12pF
2914	4822 126 11669	27pF
2915	4822 126 11663	12pF
2916	4822 126 11663	12pF
2917	4822 126 14223	2.2pF +-0.25pF 50V 0603
2918	4822 126 14223	2.2pF +-0.25pF 50V 0603
2920	4822 126 11669	27pF
2921	4822 126 11663	12pF
2922	4822 126 11663	12pF
2923	4822 126 14305	100nF 10% 16V 0603
2924	4822 126 14305	100nF 10% 16V 0603
2925	4822 126 14305	100nF 10% 16V 0603
2926	4822 126 14305	100nF 10% 16V 0603
2927	4822 126 14305	100nF 10% 16V 0603
2928	4822 126 14305	100nF 10% 16V 0603
2929	4822 126 13956	68pF 5% 63V 0603



3700	4822 051 30008	Jumper 0603
3701	4822 051 30008	Jumper 0603
3702	4822 051 30008	Jumper 0603
3703	4822 051 30221	220Ω 5% 0.062W
3704	4822 051 30221	220Ω 5% 0.062W
3705	4822 051 30221	220Ω 5% 0.062W
3709	4822 051 30101	100Ω 5% 0.062W
3710	4822 051 30101	100Ω 5% 0.062W
3713	4822 051 30181	180Ω 5% 0.062W
3714	4822 051 30181	180Ω 5% 0.062W
3715	4822 051 30181	180Ω 5% 0.062W
3716	4822 117 13632	100k 1% 0.62W 0603
3717	4822 117 13632	100k 1% 0.62W 0603
3718	4822 117 13632	100k 1% 0.62W 0603
3719	4822 051 30008	Jumper 0603
3720	4822 051 30008	Jumper 0603
3721	4822 051 30008	Jumper 0603
3725	4822 051 30332	3k3 5% 0.062W
3726	4822 117 11817	1k2 1% 1/16W
3727	4822 051 30151	150Ω 5% 0.062W
3728	4822 051 30151	150Ω 5% 0.062W
3729	4822 051 30689	68Ω 5% 0.063W 0603
3730	4822 051 30689	68Ω 5% 0.063W 0603
3731	4822 051 30472	4k7 5% 0.062W
3732	4822 051 30472	4k7 5% 0.062W
3733	4822 051 30472	4k7 5% 0.062W
3735	4822 051 30472	4k7 5% 0.062W
3740	4822 051 30008	Jumper 0603

3741	4822 051 30008	Jumper 0603
3742	4822 051 30008	Jumper 0603
3752	4822 117 12917	1Ω 5% 0.062W 0603
3753	4822 117 12917	1Ω 5% 0.062W 0603
3758	4822 051 30472	4k7 5% 0.062W
3759	4822 051 30221	220Ω 5% 0.062W
3760	4822 051 30105	1M 5% 0.062W
3762	4822 051 30339	33Ω 5% 0.062W
3763	4822 117 12139	22Ω 5% 0.062W
3764	4822 051 30109	10Ω 5% 0.062W
3773	4822 117 12925	47k 1% 0.063W 0603
3774	4822 117 12925	47k 1% 0.063W 0603
3781	4822 117 12925	47k 1% 0.063W 0603
3782	4822 117 12925	47k 1% 0.063W 0603
3783	4822 117 12925	47k 1% 0.063W 0603
3784	4822 051 30102	1k 5% 0.062W
3787	4822 051 30154	150k 5% 0.062W
3788	4822 117 12891	220k 1%
3789	4822 051 30472	4k7 5% 0.062W
3790	4822 051 30101	100Ω 5% 0.062W
3791	4822 051 30101	100Ω 5% 0.062W
3792	4822 051 30102	1k 5% 0.062W
3793	4822 051 30392	3k9 5% 0.063W 0603
3794	4822 117 12903	1k8 1% 0.063W 0603
3795	4822 051 30183	18k 5% 0.062W
3796	4822 051 30123	12k 5% 0.062W
3797	4822 051 30153	15k 5% 0.062W
3798	4822 051 30183	18k 5% 0.062W
3803	5322 117 13058	150Ω 1% 0.063W 0603
3804	5322 117 13058	150Ω 1% 0.063W 0603
3805	4822 051 30102	1k 5% 0.062W
3806	4822 051 30102	1k 5% 0.062W
3811	5322 117 13058	150Ω 1% 0.063W 0603
3812	5322 117 13058	150Ω 1% 0.063W 0603
3813	5322 117 13058	150Ω 1% 0.063W 0603
3820	5322 117 13058	150Ω 1% 0.063W 0603
3826	4822 051 30759	75Ω 5% 0.062W
3827	4822 051 30759	75Ω 5% 0.062W
3828	4822 051 30471	470Ω 5% 0.062W
3829	4822 051 30391	390Ω 5% 0.062W
3830	4822 051 30271	270Ω 5% 0.062W
3831	4822 051 30681	680Ω 5% 0.062W
3832	4822 117 13577	330Ω 1% 1.25W 0805
3833	4822 051 30759	75Ω 5% 0.062W
3834	4822 051 30759	75Ω 5% 0.062W
3835	4822 051 30759	75Ω 5% 0.062W
3836	4822 051 30759	75Ω 5% 0.062W
3837	4822 051 30471	470Ω 5% 0.062W
3838	4822 051 30391	390Ω 5% 0.062W
3839	4822 051 30471	470Ω 5% 0.062W
3840	4822 051 30102	1k 5% 0.062W
3841	4822 117 13577	330Ω 1% 1.25W 0805
3842	4822 051 30759	75Ω 5% 0.062W
3843	4822 051 30759	75Ω 5% 0.062W
3844	4822 051 30759	75Ω 5% 0.062W
3845	4822 051 30759	75Ω 5% 0.062W
3846	4822 051 30471	470Ω 5% 0.062W
3847	4822 051 30391	390Ω 5% 0.062W
3848	4822 051 30391	390Ω 5% 0.062W
3849	4822 051 30331	330Ω 5% 0.062W
3850	4822 117 13577	330Ω 1% 1.25W 0805
3851	4822 051 30759	75Ω 5% 0.062W
3852	4822 051 30759	75Ω 5% 0.062W
3853	4822 117 12902	8k2 1% 0.063W 0603
3854	4822 051 30392	3k9 5% 0.063W 0603
3855	4822 051 30102	1k 5% 0.062W
3856	4822 051 30102	1k 5% 0.062W
3857	4822 052 10109	10Ω 5% 0.33W
3858	4822 051 30222	2k2 5% 0.062W
3859	4822 051 30222	2k2 5% 0.062W
3860	4822 051 30102	1k 5% 0.062W
3861	4822 051 30332	3k3 5% 0.062W
3862	4822 051 30103	10k 5% 0.062W
3863	4822 051 30681	680Ω 5% 0.062W
3864	4822 117 12925	47k 1% 0.063W 0603
3865	4822 051 30472	4k7 5% 0.062W
3870	4822 051 30109	10Ω 5% 0.062W
3871	4822 117 12971	15Ω 5% 0.62W 0603
3872	4822 117 12925	47k 1% 0.063W 0603
3999	4822 051 30102	1k 5% 0.062W



5700	4822 157 71304	1µH 10%
5701	4822 157 71304	1µH 10%
5702	4822 157 71304	1µH 10%
5703	4822 157 11716	Bead 100MHz 30Ω
5704	4822 157 11716	Bead 100MHz 30Ω
5705	4822 157 11716	Bead 100MHz 30Ω
5706	4822 157 11716	Bead 100MHz 30Ω
5707	4822 051 20008	Jumper 0805
5708	4822 051 20008	Jumper 0805
5709	4822 051 20008	Jumper 0805

5710	4822 156 21729	Bead 100MHz 1k
5711	4822 156 21729	Bead 100MHz 1k
5712	4822 156 21729	Bead 100MHz 1k
5713	4822 157 11716	Bead 100MHz 30Ω
5714	4822 157 71206	Bead 100MHz 600Ω
5715	4822 156 21729	Bead 100MHz 1k
5716	4822 156 21729	Bead 100MHz 1k
5717	4822 156 21729	Bead 100MHz 1k
5718	4822 157 11716	Bead 100MHz 30Ω
5719	4822 156 21729	Bead 100MHz 1k
5723	4822 157 11716	Bead 100MHz 30Ω
5724	4822 157 71206	Bead 100MHz 600Ω
5725	4822 157 71206	Bead 100MHz 600Ω
5726	4822 156 21729	Bead 100MHz 1k
5727	4822 156 21729	Bead 100MHz 1k
5728	4822 157 71206	Bead 100MHz 600Ω
5729	4822 156 21729	Bead 100MHz 1k
5730	4822 157 11716	Bead 100MHz 30Ω
5731	4822 156 21729	Bead 100MHz 1k
5732	4822 157 10586	2.2µH 10% 0805
5733	4822 157 10586	2.2µH 10% 0805
5734	4822 157 10586	2.2µH 10% 0805
5736	4822 156 21729	Bead 100MHz 1k



7703	4822 209 73852	PMBT2369
7704	4822 209 73852	PMBT2369
7705	4822 209 17398	LD1117DT33
7706	9322 160 50668	LD1117DT25
7711	3104 317 43531	Software RE1F2_04
7712	5322 209 60424	74HC573D
7713	9352 688 09557	SAA4978H/V204
7714	9965 000 02179	MS81V04160-25TB
7717	9322 146 01668	MSM54V12222A-23JS
7718	9352 695 58557	SAA4993H/V1
7719	9322 146 01668	MSM54V12222A-23JS
7720	4822 209 17398	LD1117DT33
7722	9965 000 02179	MS81V04160-25TB
7723	9965 000 02179	MS81V04160-25TB
7724	9322 174 33702	T8F24EF EAGLE
7725	9322 160 50668	LD1117DT25
7727	4822 130 60511	BC847B
7728	4822 130 60511	BC847B
7729	4822 130 60511	BC847B
7730	5322 130 42718	BFS20
7731	5322 130 42718	BFS20
7732	5322 130 42718	BFS20
7733	5322 130 42718	BFS20
7734	5322 130 42718	BFS20
7735	5322 130 42718	BFS20
7736	4822 130 60511	BC847B
7739	9322 170 14668	LF15ABDT
7740	4822 209 73852	PMBT2369
7741	4822 209 73852	PMBT2369

Full Dual Screen Panel [M]

Various

</

2111	4822 126 14585	100nF 10% 50V	2840	4822 126 14585	100nF 10% 50V	3798	4822 051 20121	120Ω 5% 0.1W
2112	4822 122 33891	3.3nF 10% 63V	2860	4822 126 14305	100nF 10% 16V 0603	3799	4822 051 20121	120Ω 5% 0.1W
2116	4822 124 12095	100μF 20% 16V	2880	5322 124 41945	22μF 20% 35V	3842	4822 117 11503	220Ω 1% 0.1W
2117	4822 126 14076	220nF 20-80% 25V	2881	4822 124 40433	47μF 20% 25V	3843	4822 051 30221	220Ω 5% 0.062W
2118	4822 126 14487	8.2pF 0.5% 50V 0603	2882	4822 124 11912	220μF 20% 6.3V	3880	4822 051 30102	1k 5% 0.062W
2119	5322 122 31863	330pF 5% 63V	2883	4822 124 12095	100μF 20% 16V	3923	4822 051 30471	470Ω 5% 0.062W
2120	4822 126 14076	220nF 20-80% 25V	2884	4822 126 14491	2.2μF 10V	3924	4822 051 30101	100Ω 5% 0.062W
2140	4822 126 14491	2.2μF 10V	2890	4822 126 14585	100nF 10% 50V	3928	4822 051 30101	100Ω 5% 0.062W
2501	4822 126 14305	100nF 10% 16V 0603	2891	4822 126 14585	100nF 10% 50V	3932	4822 051 30101	100Ω 5% 0.062W
2504	4822 126 14305	100nF 10% 16V 0603	2922	4822 126 14241	330pF 50V 0603	3935	4822 051 30102	1k 5% 0.062W
2520	4822 126 14305	100nF 10% 16V 0603	2923	4822 126 14305	100nF 10% 16V 0603	3937	4822 051 30151	150Ω 5% 0.062W
2521	4822 126 14305	100nF 10% 16V 0603	2932	4822 122 33753	150pF 5% 50V	3942	4822 051 30101	100Ω 5% 0.062W
2522	5322 126 11579	3.3nF 10% 63V	2934	4822 126 14305	100nF 10% 16V 0603	3943	4822 051 30102	1k 5% 0.062W
2525	4822 126 14507	18pF 5% 50V 0603	2942	4822 122 33753	150pF 5% 50V	3947	4822 051 30151	150Ω 5% 0.062W
2528	4822 122 33752	15pF 5% 50V	2944	4822 126 14305	100nF 10% 16V 0603	3950	4822 117 11504	270Ω 1% 0.1W
2532	4822 126 14043	1μF 20% 16V	2972	4822 126 14305	330pF 50V 0603	3951	4822 051 20339	33Ω 5% 0.1W
2534	5322 126 10223	4.7nF 10% 63V	2973	4822 126 14305	100nF 10% 16V 0603	3952	4822 117 11504	270Ω 1% 0.1W
2536	4822 126 14491	2.2μF 10V	2982	4822 122 33753	150pF 5% 50V	3953	4822 117 11448	180Ω 1% 0.1W
2537	4822 126 14585	100nF 10% 50V	2983	4822 126 14305	100nF 10% 16V 0603	3954	4822 051 20391	390Ω 5% 0.1W
2538	4822 124 80151	47μF 16V	2992	4822 122 33753	150pF 5% 50V	3955	4822 117 11503	220Ω 1% 0.1W
2539	4822 126 14585	100nF 10% 50V	2993	4822 126 14305	100nF 10% 16V 0603	3956	4822 117 10361	680Ω 1% 0.1W
2540	4822 124 80151	47μF 16V				3957	4822 117 10361	680Ω 1% 0.1W
2541	4822 126 14585	100nF 10% 50V				3958	4822 117 10361	680Ω 1% 0.1W
2545	4822 126 14305	100nF 10% 16V 0603				3963	4822 051 10102	1k 2% 0.25W
2600	4822 126 14491	2.2μF 10V				3964	4822 051 10102	1k 2% 0.25W
2601	4822 126 14585	100nF 10% 50V	3100	4822 051 20273	27k 5% 0.1W	3965	4822 051 10102	1k 2% 0.25W
2603	4822 126 14491	2.2μF 10V	3101	4822 051 20273	27k 5% 0.1W	3972	4822 051 30471	470Ω 5% 0.062W
2605	4822 126 14585	100nF 10% 50V	3102	4822 051 30562	5k6 5% 0.063W 0603	3974	4822 051 30101	100Ω 5% 0.062W
2620	4822 122 32927	220nF 20% 50V	3103	4822 051 20008	Jumper 0805	3978	4822 051 30101	100Ω 5% 0.062W
2621	4822 126 14585	100nF 10% 50V	3104	4822 051 20008	Jumper 0805	3981	4822 051 30101	100Ω 5% 0.062W
2622	4822 122 32927	220nF 20% 50V	3106	4822 117 11927	75Ω 1% 0.1W	3983	4822 051 30102	1k 5% 0.062W
2623	4822 122 32927	220nF 20% 50V	3110	4822 117 11449	2k2 5% 0.1W 0805	3987	4822 051 30151	150Ω 5% 0.062W
2624	5322 124 41945	22μF 20% 35V	3111	4822 117 11449	2k2 5% 0.1W 0805	3991	4822 051 30101	100Ω 5% 0.062W
2625	4822 122 32927	220nF 20% 50V	3112	4822 051 20472	4k7 5% 0.1W	3992	4822 051 30102	1k 5% 0.062W
2626	4822 126 14585	100nF 10% 50V	3114	4822 051 20472	4k7 5% 0.1W	3997	4822 051 30151	150Ω 5% 0.062W
2627	5322 122 32654	22nF 10% 63V	3118	4822 051 20391	390Ω 5% 0.1W	3999	4822 051 10102	1k 2% 0.25W
2628	4822 126 14585	100nF 10% 50V	3119	4822 117 12521	68Ω 1% 0.1W	4xxx	4822 051 10008	Jumper 1206
2629	4822 122 32927	220nF 20% 50V	3124	4822 051 30101	100Ω 5% 0.062W	4xxx	4822 051 20008	Jumper 0805
2630	4822 124 80408	4.7μF 20% 50V	3133	4822 117 12955	2k7 1% 0.1W 0805			
2632	4822 122 32927	220nF 20% 50V	3135	4822 051 20472	4k7 5% 0.1W			
2633	4822 126 14585	100nF 10% 50V	3136	4822 117 11503	220Ω 1% 0.1W			
2638	4822 126 14491	2.2μF 10V	3137	4822 051 10102	1k 2% 0.25W			
2639	4822 124 23002	10μF 16V	3138	4822 117 11448	180Ω 1% 0.1W			
2640	4822 124 23002	10μF 16V	3139	4822 117 11139	1k5 1% 0.1W			
2650	4822 124 80195	470μF 20% 10V	3140	4822 051 30393	39k 5% 0.062W			
2748	4822 126 14305	100nF 10% 16V 0603	3142	4822 051 10102	1k 2% 0.25W			
2749	4822 126 14305	100nF 10% 16V 0603	3143	4822 051 10102	1k 2% 0.25W			
2752	4822 126 14305	100nF 10% 16V 0603	3145	4822 051 20121	120Ω 5% 0.1W			
2753	4822 126 14305	100nF 10% 16V 0603	3146	4822 051 20223	22k 5% 0.1W			
2754	4822 126 14305	100nF 10% 16V 0603	3151	4822 052 10128	1Ω 2% 0.33W			
2755	4822 126 14305	100nF 10% 16V 0603	3501	4822 051 30101	100Ω 5% 0.062W			
2756	4822 126 14305	100nF 10% 16V 0603	3504	4822 051 30101	100Ω 5% 0.062W			
2757	4822 126 14305	100nF 10% 16V 0603	3521	4822 117 13632	100k 1% 0.62W 0603			
2758	3198 017 41050	1μF 10V 0603	3530	4822 051 30101	100Ω 5% 0.062W			
2759	4822 126 14305	100nF 10% 16V 0603	3531	4822 051 30101	100Ω 5% 0.062W			
2761	4822 126 14305	100nF 10% 16V 0603	3532	4822 116 83933	15k 1% 0.1W			
2762	4822 126 14305	100nF 10% 16V 0603	3538	4822 052 10228	2Ω 2% 0.33W			
2763	4822 126 14305	100nF 10% 16V 0603	3545	4822 051 30471	470Ω 5% 0.062W			
2766	4822 126 14305	100nF 10% 16V 0603	3546	4822 051 30471	470Ω 5% 0.062W			
2767	4822 126 14305	100nF 10% 16V 0603	3550	4822 051 20471	470Ω 5% 0.1W			
2768	4822 126 14305	100nF 10% 16V 0603	3601	4822 117 10361	680Ω 1% 0.1W			
2769	4822 126 14305	100nF 10% 16V 0603	3602	4822 051 20471	470Ω 5% 0.1W			
2770	4822 126 14305	100nF 10% 16V 0603	3603	4822 051 20471	470Ω 5% 0.1W			
2771	4822 126 14305	100nF 10% 16V 0603	3604	4822 051 20273	27k 5% 0.1W			
2772	4822 126 14305	100nF 10% 16V 0603	3605	4822 051 20391	390Ω 5% 0.1W			
2773	4822 126 14305	100nF 10% 16V 0603	3620	4822 117 11507	6k8 1% 0.1W			
2774	4822 126 14305	100nF 10% 16V 0603	3621	4822 117 11507	6k8 1% 0.1W			
2775	4822 126 14305	100nF 10% 16V 0603	3622	4822 117 11373	100Ω 1% 0.0805			
2776	4822 126 14305	100nF 10% 16V 0603	3623	4822 117 10361	680Ω 1% 0.1W			
2777	4822 126 14305	100nF 10% 16V 0603	3624	4822 117 11454	820Ω 1% 0.1W			
2778	4822 126 14305	100nF 10% 16V 0603	3625	4822 117 11454	820Ω 1% 0.1W			
2779	4822 126 14305	100nF 10% 16V 0603	3630	4822 051 20273	27k 5% 0.1W			
2780	4822 126 14305	100nF 10% 16V 0603	3634	4822 051 20273	27k 5% 0.1W			
2781	4822 126 14305	100nF 10% 16V 0603	3635	4822 051 20822	8k2 5% 0.1W			
2782	4822 126 14305	100nF 10% 16V 0603	3636	4822 051 20822	8k2 5% 0.1W			
2783	4822 124 23002	10μF 16V	3642	4822 051 20562	5k6 5% 0.1W 0805			
2784	4822 124 23002	10μF 16V	3650	4822 052 10688	6Ω 2% 0.33W			
2785	4822 122 33177	10nF 20% 50V	3747	4822 051 20223	22k 5% 0.1W			
2786	4822 122 33177	10nF 20% 50V	3748	4822 051 20223	22k 5% 0.1W			
2787	4822 126 14305	100nF 10% 16V 0603	3750	4822 051 30393	39k 5% 0.062W			
2788	5322 122 32531	100pF 5% 50V	3751	4822 051 30393	39k 5% 0.062W			
2789	4822 126 13692	47pF 1% 63V	3752	4822 051 30103	10k 5% 0.062W			
2791	5322 122 32658	22pF 5% 50V	3756	4822 051 30101	100Ω 5% 0.062W			
2794	5322 122 32658	22pF 5% 50V	3757	4822 051 30101	100Ω 5% 0.062W			
2795	4822 124 12095	100μF 20% 16V	3765	4822 051 20683	68k 5% 0.1W			
2796	4822 124 12095	100μF 20% 16V	3766	4822 117 11139	1k5 1% 0.1W			
2797	4822 124 12095	100μF 20% 16V	3767	4822 051 20683	68k 5% 0.1W			
2800	4822 126 13879	220nF 20% 16V	3768	4822 117 11139	1k5 1% 0.1W			
2801	4822 126 13879	220nF 20% 16V	3780	4822 051 30222	2k2 5% 0.062W			
2802	4822 126 13879	220nF 20% 16V	3781	4822 117 13632	100k 1% 0.62W 0603			
2803	4822 126 13879	220nF 20% 16V	3782	4822 051 30222	2k2 5% 0.062W			
2804	4822 126 13879	220nF 20% 16V	3783	4822 117 13632	100k 1% 0.62W 0603			
2805	4822 126 13879	220nF 20% 16V	3796	4822 051 20121	120Ω 5% 0.1W			
2807	4822 126 14585	100nF 10% 50V	3797	4822 051 20121	120Ω 5% 0.1W			

7920	4822 130 60511	BC847B
7930	4822 130 60511	BC847B
7940	4822 130 60511	BC847B
7970	4822 130 60511	BC847B
7980	4822 130 60511	BC847B
7990	4822 130 60511	BC847B
7991	4822 209 16868	M24C04-WMN6

Multi Channel Sound Panel [N]**Various**

0328	4822 267 10981	11P male black
0329	4822 267 10962	11P male white
0330	2422 025 14904	7P male white
0347	4822 267 10969	3P male red
0373	4822 267 10978	7P male black
0381	4822 267 10963	3P male white
1705	2422 086 10581	Prot dev 65V 400mA
1804	2422 543 01217	Crystal 40 MHz
1805	2422 543 01025	Crystal 16.93 MHz
1806	2422 543 01015	Crystal 10 MHz
1807	4822 252 51169	Fuse 0,25A
1998	2422 025 16194	Socket 8P for transmitter
1999	2422 026 04961	Socket cinch 6P white/red/black
8328	3104 301 08912	Cable 11P 220mm black
8330	3104 301 08952	Cable 7P 820mm white
8373	3104 301 08922	Cable 7P 280mm black
8381	3104 301 08932	Cable 3P 140mm white

-II-

2500	4822 126 14315	390pF 5% 50V 0603
2501	4822 126 14315	390pF 5% 50V 0603
2504	5322 126 11583	10nF 10% 50V 0603
2505	4822 126 14305	100nF 10% 16V 0603
2506	4822 126 14305	100nF 10% 16V 0603
2507	2222 867 15339	33pF 5% 50V 0603
2508	2222 867 15339	33pF 5% 50V 0603
2511	4822 126 12105	33nF 5% 50V
2516	4822 122 31765	100pF 2% 63V
2517	4822 122 31765	100pF 2% 63V
2534	5322 126 11583	10nF 10% 50V 0603
2539	4822 126 14506	270pF 5% 50V 0603
2540	4822 126 14305	100nF 10% 16V 0603
2541	4822 126 14305	100nF 10% 16V 0603
2542	4822 124 23002	10µF 16V
2543	4822 124 23002	10µF 16V
2545	4822 124 23002	10µF 16V
2546	4822 124 23002	10µF 16V
2548	4822 126 14549	33nF 16V O6O3
2549	5322 126 11579	3.3nF 10% 63V
2551	4822 126 14549	33nF 16V O6O3
2552	4822 126 14549	33nF 16V O6O3
2553	3198 017 34730	47nF 16V 0603
2555	4822 124 23002	10µF 16V
2556	5322 126 11579	3.3nF 10% 63V
2557	4822 126 14549	33nF 16V O6O3
2560	3198 017 34730	47nF 16V 0603
2562	4822 124 23002	10µF 16V
2563	4822 124 23002	10µF 16V
2564	4822 124 23002	10µF 16V
2565	4822 126 14305	100nF 10% 16V 0603
2566	4822 126 14305	100nF 10% 16V 0603
2567	2222 867 15339	33pF 5% 50V 0603
2568	2222 867 15339	33pF 5% 50V 0603
2569	4822 124 23002	10µF 16V
2570	4822 126 14305	100nF 10% 16V 0603
2571	4822 126 14305	100nF 10% 16V 0603
2572	4822 124 23002	10µF 16V
2573	4822 124 23002	10µF 16V
2574	4822 124 23002	10µF 16V
2575	4822 124 23002	10µF 16V
2576	4822 124 23002	10µF 16V
2577	4822 124 23002	10µF 16V
2578	4822 126 14549	33nF 16V O6O3
2579	5322 126 11579	3.3nF 10% 63V
2580	4822 126 14549	33nF 16V O6O3
2583	3198 017 34730	47nF 16V 0603
2585	2222 867 15339	33pF 5% 50V 0603
2586	5322 126 11579	3.3nF 10% 63V
2587	4822 126 14494	22nF 10% 25V 0603
2590	3198 017 34730	47nF 16V 0603
2592	4822 124 23002	10µF 16V
2593	4822 124 23002	10µF 16V
2594	4822 124 23002	10µF 16V
2595	4822 126 14305	100nF 10% 16V 0603
2596	4822 126 14305	100nF 10% 16V 0603
2597	2222 867 15339	33pF 5% 50V 0603
2598	2222 867 15339	33pF 5% 50V 0603

2599	5322 126 11582	6.8nF 10% 63V
2600	4822 126 14305	100nF 10% 16V 0603
2601	4822 126 14305	100nF 10% 16V 0603
2602	4822 124 23002	10µF 16V
2603	4822 124 23002	10µF 16V
2605	4822 124 23002	10µF 16V
2606	4822 124 23002	10µF 16V
2607	4822 124 23002	10µF 16V
2609	5322 126 11579	3.3nF 10% 63V
2612	4822 124 40207	100µF 20% 25V
2613	3198 017 34730	47nF 16V 0603
2620	3198 017 34730	47nF 16V 0603
2622	4822 124 23002	10µF 16V
2623	4822 124 23002	10µF 16V
2624	4822 124 23002	10µF 16V
2625	4822 126 14305	100nF 10% 16V 0603
2626	4822 126 14305	100nF 10% 16V 0603
2627	2222 867 15339	33pF 5% 50V 0603
2628	2222 867 15339	33pF 5% 50V 0603
2635	4822 126 14305	100nF 10% 16V 0603
2636	4822 126 14305	100nF 10% 16V 0603
2637	5322 121 42498	680nF 5% 63V
2638	5322 121 42498	680nF 5% 63V
2639	4822 126 14305	100nF 10% 16V 0603
2641	5322 121 42498	680nF 5% 63V
2643	2222 867 15339	33pF 5% 50V 0603
2667	4822 126 14494	22nF 10% 25V 0603
2668	5322 126 11582	6.8nF 10% 63V
2669	2222 867 15339	33pF 5% 50V 0603
2679	4822 126 14585	100nF 10% 50V
2680	4822 126 14585	100nF 10% 50V
2681	5322 122 32659	33pF 5% 50V
2682	5322 122 32659	33pF 5% 50V
2690	4822 126 14305	100nF 10% 16V 0603
2704	4822 126 14305	100nF 10% 16V 0603
2705	4822 124 12095	100µF 20% 16V
2706	4822 126 14585	100nF 10% 50V
2707	4822 124 40248	10µF 20% 63V
2708	4822 126 14585	100nF 10% 50V
2709	4822 124 21913	1µF 20% 63V
2710	4822 124 40248	10µF 20% 63V
2711	4822 126 14585	100nF 10% 50V
2712	4822 124 21913	1µF 20% 63V
2713	4822 126 14585	100nF 10% 50V
2715	5322 122 32531	100pF 5% 50V
2716	4822 122 33575	220pF 5% 63V
2717	5322 122 32531	100pF 5% 50V
2718	4822 122 33575	220pF 5% 63V
2719	5322 122 32531	100pF 5% 50V
2720	4822 122 33575	220pF 5% 63V
2721	5322 122 32531	100pF 5% 50V
2722	4822 122 33575	220pF 5% 63V
2724	5322 122 32531	100pF 5% 50V
2725	5322 122 32531	100pF 5% 50V
2726	4822 122 33575	220pF 5% 63V
2727	4822 126 14585	100nF 10% 50V
2728	4822 126 14305	100nF 10% 16V 0603
2729	4822 126 14585	100nF 10% 50V
2730	5322 122 32531	100pF 5% 50V
2731	5322 122 32531	100pF 5% 50V
2732	5322 122 32531	100pF 5% 50V
2733	5322 122 32531	100pF 5% 50V
2736	4822 124 81151	22µF 50V
2737	4822 126 14585	100nF 10% 50V
2738	4822 124 40207	100µF 20% 25V
2740	5322 126 11583	10nF 10% 50V 0603
2741	5322 126 11583	10nF 10% 50V 0603
2745	4822 126 14494	22nF 10% 25V 0603
2746	5322 126 11583	10nF 10% 50V 0603
2747	5322 126 11583	10nF 10% 50V 0603
2749	4822 126 14494	22nF 10% 25V 0603
2752	5322 126 11583	10nF 10% 50V 0603
2753	5322 126 11583	10nF 10% 50V 0603
2755	4822 126 14494	22nF 10% 25V 0603
2780	4822 126 14305	100nF 10% 16V 0603
2781	4822 126 14305	100nF 10% 16V 0603
2784	4822 126 13344	1.5nF 5% 63V
2785	4822 126 13344	1.5nF 5% 63V
2786	2222 867 15339	33pF 5% 50V 0603
2787	2222 867 15339	33pF 5% 50V 0603
2790	4822 122 33177	10nF 20% 50V
2791	4822 124 22652	2.2µF 20% 50V
2793	4822 126 14506	270pF 5% 50V 0603
2794	5322 126 11583	10nF 10% 50V 0603
2795	5322 126 11583	10nF 10% 50V 0603
2796	4822 122 33177	10nF 20% 50V
2800	4822 126 14585	100nF 10% 50V
2802	4822 126 14585	100nF 10% 50V
2807	4822 126 14585	100nF 10% 50V
2809	4822 126 14585	100nF 10% 50V
2810	4822 126 14585	100nF 10% 50V
2811	4822 124 80151	47µF 16V
2812	4822 126 14305	100nF 10% 16V 0603
2813	4822 126 14305	100nF 10% 16V 0603

2814	4822 126 14305	100nF 10% 16V 0603
2815	4822 126 14305	100nF 10% 16V 0603
2816	4822 126 14305	100nF 10% 16V 0603
2817	4822 126 14585	100nF 10% 50V
2818	4822 126 14305	100nF 10% 16V 0603
2819	4822 126 14305	100nF 10% 16V 0603
2820	4822 126 13486	15pF 2% 63V
2821	4822 126 13486	15pF 2% 63V
2822	4822 126 14585	100nF 10% 50V
2823	4822 124 80151	47µF 16V
2824	4822 126 14585	100nF 10% 50V
2825	4822 126 14585	100nF 10% 50V
2826	4822 126 14305	100nF 10% 16V 0603
2827	4822 126 14305	100nF 10% 16V 0603
2828	4822 124 80151	47µF 16V
2829	4822 126 14305	100nF 10% 16V 0603
2830	4822 126 14305	100nF 10% 16V 0603
2831	5322 126 11583	10nF 10% 50V 0603
2832	3198 016 31020	0603 25V 1nF
2833	4822 126 13486	15pF 2% 63V
2834	4822 126 13486	15pF 2% 63V
2835	4822 124 80151	47µF 16V
2836	4822 126 14305	100nF 10% 16V 0603
2837	4822 122 33177	10nF 20% 50V
2838	4822 122 33761	22pF 5% 50V
2839	4822 122 33761	22pF 5% 50V
2840	4822 124 80151	47µF 16V
2841	4822 126 14585	100nF 10% 50V
2842	4822 124 80151	47µF 16V
2843	4822 126 14305	100nF 10% 16V 0603
2844	4822 124 80151	47µF 16V
2845	4822 126 14585	100nF 10% 50V
2846	4822 124 80151	47µF 16V
2847	5322 126 10511	1nF 5% 50V
2848	4822 122 31765	100pF 2% 63V
2849	4822 126 14585	100nF 10% 50V
2850	5322 122 32531	100pF 5% 50V
2851	5322 126 10511	1nF 5% 50V
2852	5322 122 32531	100pF 5% 50V
2853	4822 124 80151	47µF 16V
2854	5322 126 10511	1nF 5% 50V
2855	4822 124 80151	47µF 16V
2856	5322 126 10511	1nF 5% 50V
2857	4822 124 80151	47µF 16V
2858	5322 126 10511	1nF 5% 50V
2859	4822 124 80151	47µF 16V
2860	4822 126 14585	100nF 10% 50V
2861	4822 124 80151	47µF 16V
2862	5322 126 10511	1nF 5% 50V
2863	4822 124 80151	47µF 16V
2864	4822 126 14585	100nF 10% 50V
2865	4822 126 14585	100nF 10% 50V
2866	4822 126 14585	100nF 10% 50V
2867	4822 124 80151	47µF 16V
2868	4822 126 14585	100nF 10% 50V
2869	4822 126 14585	100nF 10% 50V
2870	4822 124 80151	47µF 16V
2871	4822 124 80151	47µF 16V
2872	5322 122 32531	100pF 5% 50V
2873	5322 126 10511	1nF 5% 50V
2874	4822 124 80151	47µF 16V
2875	4822 126	

3510	4822 051 30103	10k 5% 0.062W	3650	4822 117 11507	6k8 1% 0.1W	3788	4822 051 30332	3k3 5% 0.062W
3511	4822 051 30103	10k 5% 0.062W	3651	4822 051 30333	33k 5% 0.062W	3789	4822 051 30682	6k8 5% 0.062W
3513	4822 051 30103	10k 5% 0.062W	3652	4822 117 11507	6k8 1% 0.1W	3790	4822 051 20121	120Ω 5% 0.1W
3514	4822 051 30103	10k 5% 0.062W	3653	4822 117 11507	6k8 1% 0.1W	3791	4822 051 30102	1k 5% 0.062W
3515	4822 051 30562	5k6 5% 0.063W 0603	3658	4822 051 30682	6k8 5% 0.062W	3792	4822 051 30393	39k 5% 0.062W
3516	4822 051 30123	12k 5% 0.062W	3659	4822 051 30222	2k2 5% 0.062W	3793	4822 051 30103	10k 5% 0.062W
3517	4822 051 30562	5k6 5% 0.063W 0603	3660	4822 051 30682	6k8 5% 0.062W	3795	4822 051 30223	22k 5% 0.062W
3518	4822 051 30123	12k 5% 0.062W	3661	4822 051 30222	2k2 5% 0.062W	3796	4822 051 20121	120Ω 5% 0.1W
3530	4822 051 30682	6k8 5% 0.062W	3663	4822 051 20332	3k3 5% 0.1W	3799	4822 051 20223	22k 5% 0.1W
3531	4822 051 30103	10k 5% 0.062W	3664	4822 051 20332	3k3 5% 0.1W	3800	4822 117 11927	75Ω 1% 0.1W
3532	4822 051 30682	6k8 5% 0.062W	3667	4822 117 10837	100k 1% 0.1W	3801	4822 117 11927	75Ω 1% 0.1W
3533	4822 051 30103	10k 5% 0.062W	3671	4822 117 10833	10k 1% 0.1W	3803	4822 117 11151	1Ω 5%
3534	4822 051 30121	120Ω 5% 0.062W	3673	4822 117 10833	10k 1% 0.1W	3804	4822 051 20105	1M 5% 0.1W
3540	4822 117 13632	100k 1% 0.62W 0603	3675	4822 117 10837	100k 1% 0.1W	3805	4822 117 10833	10k 1% 0.1W
3541	4822 051 30109	10Ω 5% 0.062W	3676	4822 117 10833	10k 1% 0.1W	3807	4822 051 30101	100Ω 5% 0.062W
3543	4822 051 30103	10k 5% 0.062W	3678	4822 117 10833	10k 1% 0.1W	3808	4822 051 30103	10k 5% 0.062W
3547	4822 051 30101	100Ω 5% 0.062W	3679	4822 117 11507	6k8 1% 0.1W	3809	4822 051 30101	100Ω 5% 0.062W
3548	4822 117 13632	100k 1% 0.62W 0603	3680	4822 117 11507	6k8 1% 0.1W	3810	4822 117 11373	100Ω 1% 0805
3550	4822 051 30103	10k 5% 0.062W	3682	4822 117 10837	100k 1% 0.1W	3811	4822 051 30101	100Ω 5% 0.062W
3551	4822 051 30393	39k 5% 0.062W	3683	4822 051 20332	3k3 5% 0.1W	3812	4822 117 11373	100Ω 1% 0805
3553	4822 051 30103	10k 5% 0.062W	3684	4822 117 10837	100k 1% 0.1W	3813	4822 051 30101	100Ω 5% 0.062W
3554	4822 051 30101	100Ω 5% 0.062W	3685	4822 117 10837	100k 1% 0.1W	3814	4822 117 11373	100Ω 1% 0805
3555	4822 117 12925	47k 1% 0.063W 0603	3686	4822 117 10837	100k 1% 0.1W	3815	4822 117 11373	100Ω 1% 0805
3556	4822 117 12903	1k8 1% 0.063W 0603	3687	4822 051 20332	3k3 5% 0.1W	3816	4822 051 30103	10k 5% 0.062W
3557	4822 051 30103	10k 5% 0.062W	3688	4822 117 11507	6k8 1% 0.1W	3817	4822 051 30103	10k 5% 0.062W
3558	4822 051 30103	10k 5% 0.062W	3699	4822 117 10833	10k 1% 0.1W	3818	4822 051 30103	10k 5% 0.062W
3559	4822 051 30152	1k5 5% 0.062W	3700	4822 117 10833	10k 1% 0.1W	3819	4822 051 30103	10k 5% 0.062W
3560	4822 051 30103	10k 5% 0.062W	3701	4822 117 13632	100k 1% 0.62W 0603	3820	4822 051 30103	10k 5% 0.062W
3561	4822 051 30103	10k 5% 0.062W	3702	4822 051 30331	330Ω 5% 0.062W	3821	4822 051 30103	10k 5% 0.062W
3562	4822 051 30393	39k 5% 0.062W	3703	4822 051 30391	390Ω 5% 0.062W	3822	4822 117 12984	3Ω 5% 0.125W 1206
3563	4822 051 30103	10k 5% 0.062W	3704	4822 117 12902	8k2 1% 0.063W 0603	3823	4822 117 12984	3Ω 5% 0.125W 1206
3564	4822 051 30152	1k5 5% 0.062W	3705	4822 051 30221	220Ω 5% 0.062W	3824	4822 117 11148	56k 1% 0.1W
3565	4822 051 30103	10k 5% 0.062W	3706	4822 051 30221	220Ω 5% 0.062W	3825	4822 051 20334	330k 5% 0.1W
3567	4822 051 30101	100Ω 5% 0.062W	3707	4822 051 20471	470Ω 5% 0.1W	3826	4822 051 20334	330k 5% 0.1W
3568	4822 051 30683	68k 5% 0.062W	3708	4822 051 20471	470Ω 5% 0.1W	3827	4822 117 11927	75Ω 1% 0.1W
3569	4822 051 30683	68k 5% 0.062W	3709	4822 051 20471	470Ω 5% 0.1W	3828	4822 051 30562	5k6 5% 0.063W 0603
3571	4822 051 30109	10Ω 5% 0.062W	3710	4822 117 10837	100k 1% 0.1W	3829	4822 051 30562	5k6 5% 0.063W 0603
3573	4822 051 30103	10k 5% 0.062W	3711	4822 117 10833	10k 1% 0.1W	3830	4822 051 30123	12k 5% 0.062W
3575	4822 051 30101	100Ω 5% 0.062W	3712	4822 117 10837	100k 1% 0.1W	3831	4822 051 30123	12k 5% 0.062W
3576	4822 051 30472	4k7 5% 0.062W	3713	4822 117 10833	10k 1% 0.1W	3834	4822 051 30151	150Ω 5% 0.062W
3577	4822 117 10834	47k 1% 0.1W	3715	4822 051 20471	470Ω 5% 0.1W	3835	4822 051 20333	33k 5% 0.1W
3578	4822 117 11373	100Ω 1% 0805	3716	4822 051 20223	22k 5% 0.1W	3836	3198 021 52240	220k 5% 0805
3580	4822 117 11817	1k2 1% 1/16W	3717	4822 051 20471	470Ω 5% 0.1W	3837	4822 117 11373	100Ω 1% 0805
3581	4822 117 12903	1k8 1% 0.063W 0603	3718	4822 051 20223	22k 5% 0.1W	3838	4822 117 12984	3Ω 5% 0.125W 1206
3582	4822 117 11817	1k2 1% 1/16W	3719	4822 051 20471	470Ω 5% 0.1W	3839	4822 051 30103	10k 5% 0.062W
3583	4822 051 30103	10k 5% 0.062W	3720	4822 051 20223	22k 5% 0.1W	3840	4822 051 30103	10k 5% 0.062W
3584	4822 117 12903	1k8 1% 0.063W 0603	3721	4822 051 20471	470Ω 5% 0.1W	3841	4822 051 30103	10k 5% 0.062W
3585	4822 117 11817	1k2 1% 1/16W	3722	4822 051 20223	22k 5% 0.1W	3842	4822 051 30103	10k 5% 0.062W
3587	4822 051 30103	10k 5% 0.062W	3724	4822 051 20223	22k 5% 0.1W	3843	4822 051 30103	10k 5% 0.062W
3589	4822 051 30152	1k5 5% 0.062W	3725	4822 051 20471	470Ω 5% 0.1W	3844	4822 117 10833	10k 1% 0.1W
3590	4822 051 30103	10k 5% 0.062W	3726	4822 051 20223	22k 5% 0.1W	3848	4822 051 20105	1M 5% 0.1W
3591	4822 051 30103	10k 5% 0.062W	3727	4822 051 30103	10k 5% 0.062W	3849	4822 051 30102	1k 5% 0.062W
3593	4822 051 30103	10k 5% 0.062W	3728	4822 051 30333	33k 5% 0.062W	3850	4822 117 10833	10k 1% 0.1W
3594	4822 051 30152	1k5 5% 0.062W	3729	4822 051 30683	68k 5% 0.062W	3851	4822 117 12984	3Ω 5% 0.125W 1206
3595	4822 051 30103	10k 5% 0.062W	3730	4822 117 10353	150Ω 1% 0.1W	3852	4822 117 13572	22Ω 5% 1206
3596	4822 051 30101	100Ω 5% 0.062W	3731	4822 051 20223	22k 5% 0.1W	3854	4822 117 10833	10k 1% 0.1W
3601	4822 051 30109	10Ω 5% 0.062W	3732	4822 117 10353	150Ω 1% 0.1W	3855	4822 117 12984	3Ω 5% 0.125W 1206
3602	4822 117 13632	100k 1% 0.62W 0603	3733	4822 051 20223	22k 5% 0.1W	3856	4822 117 13572	22Ω 5% 1206
3603	4822 051 30103	10k 5% 0.062W	3734	4822 117 11503	220Ω 1% 0.1W	3857	4822 117 11373	100Ω 1% 0805
3605	4822 051 30333	33k 5% 0.062W	3735	4822 117 11503	220Ω 1% 0.1W	3858	4822 051 30103	10k 5% 0.062W
3606	4822 117 13632	100k 1% 0.62W 0603	3737	4822 051 30683	68k 5% 0.062W	3859	4822 051 30103	10k 5% 0.062W
3608	4822 051 30331	330Ω 5% 0.062W	3738	4822 051 20471	470Ω 5% 0.1W	3861	4822 117 10833	10k 1% 0.1W
3609	4822 051 30153	15k 5% 0.062W	3739	4822 051 20471	470Ω 5% 0.1W	3863	4822 117 10833	10k 1% 0.1W
3610	4822 117 10837	100k 1% 0.1W	3740	4822 117 12902	8k2 1% 0.063W 0603	3864	4822 117 11373	100Ω 1% 0805
3611	4822 117 10833	10k 1% 0.1W	3741	4822 117 12902	8k2 1% 0.063W 0603	3865	4822 051 30103	10k 5% 0.062W
3612	4822 051 30152	1k5 5% 0.062W	3742	4822 051 30392	3k9 5% 0.063W 0603	3866	4822 117 10833	10k 1% 0.1W
3613	4822 051 30103	10k 5% 0.062W	3743	4822 051 30101	100Ω 5% 0.062W	3868	4822 117 11373	100Ω 1% 0805
3614	4822 051 30153	15k 5% 0.062W	3744	4822 051 30271	270Ω 5% 0.062W	3869	4822 117 10833	10k 1% 0.1W
3615	4822 117 13632	100k 1% 0.62W 0603	3745	4822 051 30102	1k 5% 0.062W	3870	4822 117 11373	100Ω 1% 0805
3616	4822 117 13632	100k 1% 0.62W 0603	3746	4822 117 12902	8k2 1% 0.063W 0603	3871	4822 117 10833	10k 1% 0.1W
3617	4822 051 30103	10k 5% 0.062W	3747	4822 117 12902	8k2 1% 0.063W 0603	3872	4822 117 11373	100Ω 1% 0805
3619	4822 051 30152	1k5 5% 0.062W	3748	4822 051 30392	3k9 5% 0.063W 0603	3873	4822 117 10833	10k 1% 0.1W
3620	4822 051 30103	10k 5% 0.062W	3749	4822 051 30101	100Ω 5% 0.062W	3874	4822 117 11373	100Ω 1% 0805
3621	4822 051 30103	10k 5% 0.062W	3750	4822 051 30271	270Ω 5% 0.062W	3875	4822 117 10833	10k 1% 0.1W
3623	4822 051 30472	4k7 5% 0.062W	3751	4822 051 30102	1k 5% 0.062W	3876	4822 117 12984	3Ω 5% 0.125W 1206
3624	4822 051 30391	390Ω 5% 0.062W	3752	4822 117 12902	8k2 1% 0.063W 0603	3877	4822 117 12984	3Ω 5% 0.125W 1206
3625	4822 117 12902	8k2 1% 0.063W 0603	3753	4822 117 12902	8k2 1% 0.063W 0603	3878	4822 117 10837	100k 1% 0.1W
3626	4822 117 10837	100k 1% 0.1W	3754	4822 051 30392	3k9 5% 0.063W 0603	3879	4822 051 20684	680k 5% 0.1W
3627	4822 117 10837	100k 1% 0.1W	3755	4822 051 30101	100Ω 5% 0.062W	3880	4822 117 10837	100k 1% 0.1W
3628	4822 117 10837	100k 1% 0.1W	3756	4822 051 30271	270Ω 5% 0.062W	3881	4822 051 20105	1M 5% 0.1W
3629	4822 117 10837	100k 1% 0.1W	3757	4822 051 30102	1k 5% 0.062W	3882	4822 117 11373	100Ω 1% 0805
3630	4822 051 20223	22k 5% 0.1W	3758	4822 051 30472	4k7 5% 0.062W	3883	4822 117 10833	10k 1% 0.1W
3631	4822 117 13632	100k 1% 0.62W 0603	3759	4822 051 30472	4k7 5% 0.062W	3884	4822 117 11373	100Ω 1% 0805
3632	4822 117 12925	47k 1% 0.063W 0603	3760	4822 051 30472	4k7 5% 0.062W	3885	4822 117 10833	10k 1% 0.1W
3633	4822 117 13632	100k 1% 0.62W 0603	3761	4822 117 10837	100k 1% 0.1W	3886	4822 051 30101	100Ω 5% 0.062W
3634	4822 051 30474	470k						

5703	4822 157 11876	6.8μH 10% 0805
5704	4822 157 11876	6.8μH 10% 0805
5801	4822 157 71411	3.3μH 10%



6525	4822 130 11423	PLVA2656A
6600	4822 130 83757	MCL4148
6637	4822 130 83757	MCL4148
6638	4822 130 83757	MCL4148
6708	9322 129 38685	BZM55-C6V8
6709	9322 129 38685	BZM55-C6V8
6710	9322 129 39685	BZM55-C8V2
6715	9322 129 40685	BZM55-C10
6716	9322 129 40685	BZM55-C10
6717	9322 129 40685	BZM55-C10
6718	9322 129 40685	BZM55-C10
6719	9322 129 40685	BZM55-C10
6720	9322 129 40685	BZM55-C10
6721	9322 129 40685	BZM55-C10
6722	9322 129 40685	BZM55-C10
6723	9322 129 40685	BZM55-C10
6724	9322 129 40685	BZM55-C10
6725	9322 129 40685	BZM55-C10
6726	9322 129 40685	BZM55-C10
6730	9322 129 40685	BZM55-C10
6731	9322 129 40685	BZM55-C10
6732	9322 129 40685	BZM55-C10
6733	9322 129 40685	BZM55-C10
6734	4822 130 11423	PLVA2656A
6801	4822 209 16978	LF33CV



7505	4822 209 30095	LM833D
7510	4822 130 60511	BC847B
7512	4822 130 60511	BC847B
7540	9322 127 49668	TDA7438D
7541	4822 209 30095	LM833D
7543	4822 209 30095	LM833D
7544	4822 209 30095	LM833D
7565	4822 209 30095	LM833D
7570	9322 127 49668	TDA7438D
7595	4822 209 30095	LM833D
7600	9322 127 49668	TDA7438D
7601	4822 130 60511	BC847B
7602	4822 130 60511	BC847B
7603	4822 130 60511	BC847B
7604	4822 130 60373	BC856B
7605	4822 130 60511	BC847B
7610	4822 130 60511	BC847B
7611	4822 130 60511	BC847B
7625	4822 209 30095	LM833D
7630	5322 209 11102	HEF4052BT
7635	4822 209 30095	LM833D
7665	5322 209 11102	HEF4052BT
7667	4822 130 60511	BC847B
7675	4822 130 60511	BC847B
7679	4822 209 30095	LM833D
7685	5322 209 11102	HEF4052BT
7690	4822 209 13252	PCF8574TS/F3
7695	5322 209 11102	HEF4052BT
7696	4822 130 60511	BC847B
7705	5322 209 81856	LM7912CT
7706	4822 209 81726	MC7812CT
7707	4822 130 60511	BC847B
7708	4822 130 60511	BC847B
7709	4822 130 60511	BC847B
7710	4822 130 60511	BC847B
7712	4822 130 60511	BC847B
7713	4822 130 60511	BC847B
7740	4822 209 30095	LM833D
7780	4822 209 30095	LM833D
7781	4822 130 60373	BC856B
7800	9352 317 00118	74LVC125AD
7801	9352 629 51557	SAA2505H/M1 (PHSE)
7802	4822 209 14863	LC8904Q
7804	4822 209 30095	LM833D
7805	4822 209 17423	UAD1328T
7806	9352 617 90118	UDA1344TS
7807	4822 130 60511	BC847B

Side I/O Panel [O]

Various

0044	3104 304 23481	Bracket side I/O FL11
1326	4822 267 10975	3P male

1327	4822 267 31014	Socket headphone 3.5mm
1328	2422 026 05133	Socket SVHS
1333	2422 025 12485	11P male
1344	4822 267 10735	3P male
1346	2422 025 16382	03P male black
8333	4822 320 12505	Cable 11P 820mm
8344	3104 301 09451	Cable 3P 560mm white
8346	3104 311 00131	Cable 3P 560mm black



2804	5322 122 32531	100pF 5% 50V
2805	5322 122 32531	100pF 5% 50V
2807	4822 126 14076	220nF 20-80% 25V
2810	4822 126 12105	33nF 5% 50V
2811	4822 124 40207	100μF 20% 25V
2813	4822 124 22652	2.2μF 20% 50V
2832	4822 122 33177	10nF 20% 50V
2834	4822 122 33177	10nF 20% 50V



3801	4822 117 11927	75Ω 1% 0.1W
3803	4822 050 11002	1k 1% 0.4W
3804	4822 050 11002	1k 1% 0.4W
3808	4822 051 20008	Jumper 0805
3809	4822 051 20008	Jumper 0805
3810	4822 051 20684	680k 5% 0.1W
3811	4822 051 20393	39k 5% 0.1W
3812	4822 051 20154	150k 5% 0.1W
3813	4822 051 20392	3k9 5% 0.1W
3814	4822 117 11449	2k2 5% 0.1W 0805
3815	4822 051 20399	39Ω 5% 0.1W
3816	4822 051 20399	39Ω 5% 0.1W
3826	4822 116 52206	120Ω 5% 0.5W
3827	4822 116 52206	120Ω 5% 0.5W
3828	4822 116 52206	120Ω 5% 0.5W
3829	4822 116 52206	120Ω 5% 0.5W
3830	4822 050 21003	10k 1% 0.6W
3842	4822 050 21003	10k 1% 0.6W
3845	4822 051 20472	4k7 5% 0.1W
3846	4822 117 10833	10k 1% 0.1W
3847	4822 117 10833	10k 1% 0.1W
3848	4822 051 20562	5k6 5% 0.1W 0805
3849	4822 051 20332	3k3 5% 0.1W
4xxx	4822 051 10008	Jumper 1206
4xxx	4822 051 20008	Jumper 0805



5800	4822 157 11228	100μH 5%
------	----------------	----------



6801	9322 129 38685	BZM55-C6V8
6802	9322 129 38685	BZM55-C6V8
6803	9322 129 40685	BZM55-C10
6804	9322 129 40685	BZM55-C10
6805	9322 129 40685	BZM55-C10
6806	9322 129 40685	BZM55-C10
6807	9322 129 38685	BZM55-C6V8
6808	9322 129 38685	BZM55-C6V8



7811	4822 130 60373	BC856B
7812	4822 130 60373	BC856B
7813	4822 130 60511	BC847B

Top Control Panel [P]

Various

0055	3104 307 98241	Top control keypad FL11
0057	3104 304 23431	Topcontrol bottom FL11
0111	3104 304 24851	Topcontrol ESD foil
8345	3104 301 07771	Cable 3P 1200mm white
8345	3104 311 01101	Cable 3P 1000mm

Autoscaven Panel [SC]

Various

0360	4822 267 10967	3P
0361	4822 267 10967	3P
1382	2422 025 17408	9P male



2006	4822 126 14305	100nF 10% 16V 0603
2008	4822 126 14494	22nF 10% 25V 0603
2010	4822 126 14305	100nF 10% 16V 0603
2012	4822 126 14494	22nF 10% 25V 0603
2014	4822 126 14494	22nF 10% 25V 0603
2016	3198 016 33380	3.3pF 50V 0603
2020	4822 126 14494	22nF 10% 25V 0603
2022	3198 017 41050	1μF 10V 0603
2024	4822 126 14494	22nF 10% 25V 0603
2026	3198 017 41050	1μF 10V 0603
2028	3198 017 41050	1μF 10V 0603
2038	4822 126 14494	22nF 10% 25V 0603
2040	4822 126 14225	56pF 5% 50V 0603
2200	4822 126 13193	4.7nF 10% 63V
2202	5322 126 11578	1nF 10% 50V 0603
2204	3198 017 41050	1μF 10V 0603
2206	3198 017 41050	1μF 10V 0603
2208	4822 124 41584	100μF 20% 10V
2600	4822 124 80791	470μF 20% 16V



3000	4822 051 30101	100Ω 5% 0.062W
3002	4822 051 30101	100Ω 5% 0.062W
3004	4822 051 30101	100Ω 5% 0.062W
3006	4822 051 30222	2k2 5% 0.062W
3008	4822 051 30222	2k2 5% 0.062W
3010	4822 051 30222	2k2 5% 0.062W
3012	4822 051 30562	5k6 5% 0.063W 0603
3014	4822 051 30272	2k7 5% 0.062W
3016	4822 051 30153	15k 5% 0.062W
3018	4822 117 12903	1k8 1% 0.063W 0603
3020	4822 051 30561	560Ω 5% 0.062W
3022	4822 051 30393	39k 5% 0.062W
3024	4822 051 30123	12k 5% 0.062W
3028	4822 051 30223	22k 5% 0.062W
3030	4822 051 30683	68k 5% 0.062W
3032	4822 051 20182	1k8 5% 0.1W
3034	4822 051 30222	2k2 5% 0.062W
3036	4822 051 30332	3k3 5% 0.062W
3038	4822 051 30561	560Ω 5% 0.062W
3040	4822 117 12925	47k 1% 0.063W 0603
3042	4822 051 30682	6k8 5% 0.062W
3044	4822 051 10102	1k 2% 0.25W
3046	4822 117 12903	1k8 1% 0.063W 0603
3048	4822 117 12903	1k8 1% 0.063W 0603
3050	4822 051 30561	560Ω 5% 0.062W
3052	4822 051 30561	560Ω 5% 0.062W
3054	4822 051 30222	2k2 5% 0.062W
3056	4822 051 30222	2k2 5% 0.062W
3058	4822 051 30681	680Ω 5% 0.062W
3060	4822 051 30681	680Ω 5% 0.062W
3062	4822 051 30222	2k2 5% 0.062W
3064	4822 117 12971	15Ω 5% 0.62W 0603
3066	4822 051 30123	12k 5% 0.062W
3068	4822 051 30681	680Ω 5% 0.062W
3070	4822 117 12902	8k2 1% 0.063W 0603
3072	4822 051 30152	1k5 5% 0.062W
3074	4822 051 30101	100Ω 5% 0.062W
3076	4822 117 11817	1k2 1% 1/16W
3078	4822 051 30102	1k 5% 0.062W
3080	4822 117 12925	47k 1% 0.063W 0603
3082	4822 051 30682	6k8 5% 0.062W
3084	4822 051 30102	1k 5% 0.062W
3086	4822 051 30222	2k2 5% 0.062W
3088	4822 051 30102	1k 5% 0.062W
3090	4822 051 30222	2k2 5% 0.062W
3092	4822 051 30393	39k 5% 0.062W
3094	4822 051 30223	22k 5% 0.062W
3096	4822 117 11449	2k2 5% 0.1W 0805
3102	4822 051 30152	1k5 5% 0.062W
3106	4822 051 30102	1k 5% 0.062W
3108	4822 117 12925	47k 1% 0.063W 0603
3110	4822 051 30472	4k7 5% 0.062W
3112	4822 051 30392	3k9 5% 0.063W 0603
3114	4822 051 30181	180Ω 5% 0.062W
3116	4822 051 30102	1k 5% 0.062W
3118	4822 051 30333	33k 5% 0.062W
3120	4822 051 30333	33k 5% 0.062W
3200	4822 051 30152	1k5 5% 0.062W
3202	4822 051 30271	270Ω 5% 0.062W
3204	4822 117 12925	47k 1% 0.063W 0603
3206	4822 051 30682	6k8 5% 0.062W
3208	4822 117 12903	1k8 1% 0.063W 0603
3210	4822 051 30681	680Ω 5% 0.062W
3212	4822 051 30123	12k 5% 0.062W
3214	4822 051 30474	470k 5% 0.062W
3216	4822 117 12925	47k 1% 0.063W 0603
3218	4822 051 30153	15k 5% 0.062W
3220	4822 051 30153	15k 5% 0.062W

3222	4822 051 30682	6k8 5% 0.062W
3224	4822 117 11817	1k2 1% 1/16W
3226	4822 051 30152	1k5 5% 0.062W
3228	4822 051 30101	100Ω 5% 0.062W
3230	4822 051 30103	10k 5% 0.062W
3232	4822 051 30153	15k 5% 0.062W
3234	4822 117 12968	820Ω 5% 0.62W
3236	4822 051 30222	2k2 5% 0.062W
3238	4822 117 12139	22Ω 5% 0.062W
3240	4822 051 30472	4k7 5% 0.062W
3242	4822 051 30689	68Ω 5% 0.063W 0603
3244	4822 117 13632	100k 1% 0.62W 0603
3500	4822 051 30101	100Ω 5% 0.062W
3502	4822 051 30101	100Ω 5% 0.062W
3600	4822 117 11151	1Ω 5%

5600	4822 157 11778	5μH 6 10%
------	----------------	-----------

6000	5322 130 80119	BBY40
------	----------------	-------

7000	4822 130 60373	BC856B
7002	4822 130 60373	BC856B
7004	4822 130 60373	BC856B
7006	5322 130 42718	BFS20
7008	4822 130 60383	BF824
7010	5322 130 42718	BFS20
7012	5322 130 42718	BFS20
7014	4822 130 60383	BF824
7016	5322 130 42718	BFS20
7018	5322 130 42718	BFS20
7020	4822 130 60383	BF824
7022	5322 130 42718	BFS20
7024	5322 130 42718	BFS20
7026	5322 130 42718	BFS20
7028	5322 130 42718	BFS20
7030	5322 130 42718	BFS20
7032	5322 130 42718	BFS20
7038	5322 130 42718	BFS20
7040	5322 130 42718	BFS20
7042	4822 130 60383	BF824
7200	4822 130 60511	BC847B
7202	4822 130 60373	BC856B
7204	4822 130 60373	BC856B
7206	5322 130 42718	BFS20
7208	4822 130 60511	BC847B
7210	5322 130 42718	BFS20
7212	4822 130 60511	BC847B
7500	5322 209 90559	TDA8444T/N4

Wireless Transmitter [R]

Various

0320	4304 078 89100	Transmitter 433MHz
0320	4304 078 89110	Transmitter 864MHz

—II—

2100	4822 126 14043	1μF 20% 16V
2101	4822 126 14043	1μF 20% 16V
2102	4822 126 13222	390pF 2% 63V
2103	4822 126 13222	390pF 2% 63V
2104	4822 126 13222	390pF 2% 63V
2105	4822 126 13222	390pF 2% 63V
2106	4822 126 13222	390pF 2% 63V
2107	4822 126 13222	390pF 2% 63V
2108	4822 126 13222	390pF 2% 63V
2109	4822 126 13222	390pF 2% 63V
2110	4822 126 10326	180pF 5% 63V
2111	4822 126 10326	180pF 5% 63V
2112	4822 126 10326	180pF 5% 63V
2113	4822 126 10326	180pF 5% 63V
2114	4822 124 22652	2.2μF 20% 50V
2115	4822 124 22652	2.2μF 20% 50V
2116	5322 122 32268	470pF 10% 50V
2117	5322 122 32268	470pF 10% 50V
2118	5322 126 10223	4.7nF 10% 63V
2119	5322 126 10223	4.7nF 10% 63V
2120	4822 124 40248	10μF 20% 63V
2121	4822 124 40248	10μF 20% 63V
2122	4822 121 51319	1μF 10% 63V
2123	4822 121 51319	1μF 10% 63V
2124	4822 124 22652	2.2μF 20% 50V
2125	4822 124 22652	2.2μF 20% 50V

2126	5322 122 32654	22nF 10% 63V
2127	5322 122 32654	22nF 10% 63V
2128	4822 124 22652	2.2μF 20% 50V
2129	4822 124 22652	2.2μF 20% 50V
2130	4822 124 22652	2.2μF 20% 50V
2131	4822 124 22652	2.2μF 20% 50V
2132	4822 126 13692	47pF 1% 63V
2133	4822 126 13692	47pF 1% 63V
2134	4822 124 40248	10μF 20% 63V
2135	4822 124 40248	10μF 20% 63V
2136	5322 122 32268	470pF 10% 50V
2137	4822 124 81151	22μF 50V
2138	5322 122 31647	1nF 10% 63V
2139	5322 122 32268	470pF 10% 50V
2141	4822 126 13482	470nF 80/20% 16V
2142	4822 124 81151	22μF 50V
2143	4822 122 32535	680pF 10% 63V
2144	4822 126 13695	82pF 1% 63V
2147	5322 122 32654	22nF 10% 63V
2150	4822 126 13473	220nF 80-20% 50V
2151	4822 126 13692	47pF 1% 63V
2152	4822 126 13692	47pF 1% 63V
2153	4822 126 14585	100nF 10% 50V
2154	4822 126 14585	100nF 10% 50V
2155	4822 126 14585	100nF 10% 50V
2156	4822 124 40196	220μF 20% 16V
2157	4822 124 40196	220μF 20% 16V
2158	4822 124 40207	100μF 20% 25V
2162	5322 122 32654	22nF 10% 63V
2163	4822 126 13473	220nF 80-20% 50V
2164	4822 126 14585	100nF 10% 50V
2165	4822 126 14585	100nF 10% 50V
2166	5322 122 32654	22nF 10% 63V
2167	5322 122 32654	10pF 5% 63V
2168	4822 126 13482	470nF 80/20% 16V
2169	4822 122 32535	680pF 10% 63V
2170	4822 122 32535	680pF 10% 63V
2173	4822 122 33177	10nF 20% 50V
2174	4822 126 13473	220nF 80-20% 50V
2175	4822 122 33575	220pF 5% 63V
2176	4822 122 33575	220pF 5% 63V
2178	5322 122 32654	22nF 10% 63V
2179	5322 122 32654	22nF 10% 63V
2180	5322 122 32654	22nF 10% 63V
2181	4822 126 13692	47pF 1% 63V
2182	4822 126 13692	47pF 1% 63V
2183	5322 122 32654	22nF 10% 63V
2185	4822 126 13692	47pF 1% 63V
2186	4822 126 13473	220nF 80-20% 50V
2188	4822 126 13692	47pF 1% 63V
2189	5322 122 31863	330pF 5% 63V

—□—

3100	4822 117 10837	100k 1% 0.1W
3101	4822 117 10837	100k 1% 0.1W
3102	4822 051 20392	3k9 5% 0.1W
3103	4822 051 20392	3k9 5% 0.1W
3104	4822 050 21303	13k 1% 0.6W
3105	4822 050 21303	13k 1% 0.6W
3106	4822 050 21303	13k 1% 0.6W
3107	4822 050 21303	13k 1% 0.6W
3108	4822 050 26492	6k49 1% 0.6W
3109	4822 050 26492	6k49 1% 0.6W
3110	4822 051 20184	180k 5% 0.1W
3111	4822 051 20184	180k 5% 0.1W
3112	4822 051 20223	22k 5% 0.1W
3113	4822 051 20223	22k 5% 0.1W
3114	4822 050 23303	33k 1% 0.6W
3115	4822 051 20333	33k 5% 0.1W
3116	4822 051 20333	33k 5% 0.1W
3117	4822 051 20333	33k 5% 0.1W
3118	4822 051 20273	27k 5% 0.1W
3119	4822 051 20273	27k 5% 0.1W
3120	4822 051 20273	27k 5% 0.1W
3121	4822 051 20273	27k 5% 0.1W
3122	4822 117 10834	47k 1% 0.1W
3123	4822 117 10834	47k 1% 0.1W
3124	4822 116 83933	15k 1% 0.1W
3125	4822 116 83933	15k 1% 0.1W
3126	4822 051 10102	1k 2% 0.25W
3127	4822 051 10102	1k 2% 0.25W
3128	4822 051 20332	3k3 5% 0.1W
3129	4822 051 20332	3k3 5% 0.1W
3130	4822 117 10833	10k 1% 0.1W
3131	4822 117 10833	10k 1% 0.1W
3132	4822 051 20683	68k 5% 0.1W
3133	4822 051 20683	68k 5% 0.1W
3134	4822 117 10965	18k 1% 0.1W
3135	4822 117 10965	18k 1% 0.1W
3136	4822 117 10965	18k 1% 0.1W
3137	4822 117 10965	18k 1% 0.1W
3138	4822 117 11507	6k8 1% 0.1W

3139	4822 117 11507	6k8 1% 0.1W
3140	4822 051 10102	1k 2% 0.25W
3141	4822 051 10102	1k 2% 0.25W
3142	4822 051 20474	470k 5% 0.1W
3143	4822 117 10837	100k 1% 0.1W
3144	4822 051 20333	33k 5% 0.1W
3145	4822 116 83933	15k 1% 0.1W
3150	4822 051 20333	33k 5% 0.1W
3151	4822 116 83933	15k 1% 0.1W
3152	4822 116 83933	15k 1% 0.1W
3153	4822 051 20333	33k 5% 0.1W
3154	4822 051 20822	8k2 5% 0.1W
3155	4822 051 20392	3k9 5% 0.1W
3156	4822 051 20822	8k2 5% 0.1W
3157	4822 100 11676	10k 30% 0.2W
3158	4822 051 20471	470k 5% 0.1W
3159	4822 051 20471	470k 5% 0.1W
3160	4822 116 52175	100Ω 5% 0.5W
3161	4822 116 52175	100Ω 5% 0.5W
3162	4822 051 20008	jumper 0805
3165	4822 051 20008	jumper 0805
3168	4822 051 20332	3k3 5% 0.1W
3169	4822 117 10834	47k 1% 0.1W
3170	4822 051 20472	4k7 5% 0.1W
3171	4822 051 20391	390Ω 5% 0.1W
3172	4822 051 10102	1k 2% 0.25W
3175	4822 117 10837	100k 1% 0.1W
3176	4822 051 10102	1k 2% 0.25W
3177	4822 051 20223	22k 5% 0.1W
3180	4822 117 13579	220k 1% 0.1W
3181	4822 117 13579	220k 1% 0.1W
3182	4822 051 20474	470k 5% 0.1W
3184	4822 051 10102	1k 2% 0.25W
3185	4822 117 10833	10k 1% 0.1W
3188	4822 051 20472	4k7 5% 0.1W
3189	4822 117 10837	100k 1% 0.1W
3190	4822 051 20472	4k7 5% 0.1W
3191	4822 051 20223	22k 5% 0.1W
3193	4822 117 10834	47k 1% 0.1W
3194	4822 051 20008	Jumper 0805
3196	4822 051 20472	4k7 5% 0.1W
3197	4822 051 20472	4k7 5% 0.1W
3198	4822 051 20008	jumper 1206
3199	4822 051 20561	560Ω 5% 0.1W
3199	4822 051 20562	5k6 5% 0.1W
3200	4822 051 20472	4k7 5% 0.1W
3201	4822 051 20471	470Ω 5% 0.1W
3202	4822 051 20471	470Ω 5% 0.1W
3203	4822 051 10102	1k 2% 0.25W
3204	4822 051 10102	1k 2% 0.25W
3205	4822 051 10102	1k 2% 0.25W
3206	4822 051 20471	470Ω 5% 0.1W
3207	4822 117 10833	10k 1% 0.1W
4xxx	4822 051 10008	jumper 1206
4xxx	4822 051 20008	jumper 0805

5101	2422 543 01048	Crystal 12.8MHz
5102	2422 535 94915	33nH 5%
5105	2422 535 94828	27nH 5%
5107	4822 157 71206	Bead 100MHz 600Ω

—II—

6101	4822 130 34121	BAX18
6102	4822 130 61219	BZX79-B10
6106	4822 130 11423	PLVA2656A
6107	4822 130 83757	BAS216

—□—

7101	9322 137 78682	NJM2060D
7102	9338 436 90602	SA572N
7103	4822 209 70157	NJM4560DD
7105	3104 218 80310	μP S83C751-4N24
7106	4822 209 17338	L78L08ACZ
7108	4822 130 60373	BC856B
7109	4822 209 83357	NJM4560M
7110	4822 130 60511	BC847B
7112	9337 140 10653	74HC4060D
7113	4822 209 60792	74HC4053D
7114	4822 130 60511	BC847B
7115	4822 209 83357	NJM4560M
7116	4822 130 60511	BC847B
7117	4822 130 60373	BC856B

Wireless Receiver [U]**Various**

0438	3104 217 06200	Receiver panel 433MHz
0438	3104 217 06050	Receiver panel 864MHz
1701	4822 277 11671	Slide switch 1P 7pos

-II-

2701	5322 122 32654	22nF 10% 63V
2702	5322 122 32654	22nF 10% 63V
2703	4822 126 13751	47nF 10% 63V
2704	4822 126 13473	220nF 80-20% 50V
2705	4822 126 14585	100nF 10% 50V
2706	5322 122 32654	22nF 10% 63V
2707	4822 126 14585	100nF 10% 50V
2708	4822 124 40769	4.7µF 20% 100V
2709	5322 122 32531	100pF 5% 50V
2710	4822 126 13473	220nF 80-20% 50V
2711	4822 121 41854	150nF 5% 63V
2712	4822 126 13188	15nF 5% 63V
2713	2222 464 90014	180pF 2% 630V
2714	4822 124 41751	47µF 20% 50V
2715	4822 124 40769	4.7µF 20% 100V
2716	4822 126 13473	220nF 80-20% 50V
2717	5322 122 32654	22nF 10% 63V
2718	4822 126 13473	220nF 80-20% 50V
2719	4822 122 33216	270pF 5% 50V
2720	4822 122 33216	270pF 5% 50V
2721	4822 126 13473	220nF 80-20% 50V
2722	4822 126 14585	100nF 10% 50V
2723	4822 124 22652	2.2µF 20% 50V
2731	4822 124 22652	2.2µF 20% 50V
2741	4822 124 22652	2.2µF 20% 50V
2750	4822 126 13473	220nF 80-20% 50V
2751	5322 122 32531	100pF 5% 50V
2752	4822 126 13473	220nF 80-20% 50V
2753	5322 122 32654	22nF 10% 63V
2754	4822 124 40769	4.7µF 20% 100V
2755	5322 122 32654	22nF 10% 63V
2762	4822 126 13692	47pF 1% 63V
2770	4822 124 40769	4.7µF 20% 100V
2771	5322 122 32654	22nF 10% 63V
2772	4822 124 22652	2.2µF 20% 50V
2773	4822 124 22652	2.2µF 20% 50V
2774	4822 121 51319	1µF 10% 63V
2775	5322 122 32654	22nF 10% 63V
2776	4822 124 22652	2.2µF 20% 50V
2777	4822 124 22652	2.2µF 20% 50V
2778	4822 121 51319	1µF 10% 63V
2779	5322 122 32654	22nF 10% 63V
2780	4822 124 40248	10µF 20% 63V
2781	4822 124 40769	4.7µF 20% 100V
2782	5322 126 10223	4.7nF 10% 63V
2783	4822 124 22652	2.2µF 20% 50V
2786	4822 124 40248	10µF 20% 63V
2787	4822 124 40769	4.7µF 20% 100V
2788	5322 126 10223	4.7nF 10% 63V
2789	4822 124 22652	2.2µF 20% 50V
2790	4822 126 14585	100nF 10% 50V
2792	4822 122 33575	220pF 5% 63V
2793	4822 122 33575	220pF 5% 63V
2794	4822 122 33575	220pF 5% 63V

□

3701	4822 051 20471	470Ω 5% 0.1W
3702	4822 117 13577	330Ω 1% 1.25W
3703	4822 117 11449	2k2 1% 0.1W
3704	4822 051 20471	470Ω 5% 0.1W
3705	4822 051 20101	100Ω 5% 0.1W
3706	4822 051 20332	3k3 5% 0.1W
3707	4822 117 13577	330Ω 1% 1.25W
3708	4822 051 20478	407 5% 0.1W
3709	4822 117 11448	180Ω 1% 0.1W
3710	4822 051 20391	390Ω 5% 0.1W
3711	4822 100 12159	100k 30%
3712	4822 117 10833	10k 1% 0.1W
3713	4822 117 10833	10k 1% 0.1W
3714	4822 051 20223	22k 5% 0.1W
3715	4822 117 11148	56k 1% 0.1W
3716	4822 051 20332	3k3 5% 0.1W
3717	4822 116 52264	27k 5% 0.5W
3718	4822 116 52264	27k 5% 0.5W
3719	4822 117 10837	100k 1% 0.1W
3720	4822 117 10837	100k 1% 0.1W
3721	4822 051 20273	27k 5% 0.1W
3722	4822 051 20472	4k7 5% 0.1W
3723	4822 051 20273	27k 5% 0.1W
3723	4822 117 10965	18k 1% 0.1W

3724	4822 051 20393	39k 5% 0.1W
3724	4822 117 10837	100k 1% 0.1W
3726	4822 117 11449	2k2 1% 0.1W
3727	4822 051 20562	5k6 5% 0.1W
3728	4822 051 20562	5k6 5% 0.1W
3729	4822 051 20474	470k 5% 0.1W
3730	4822 051 20223	22k 5% 0.1W
3731	4822 051 20683	68k 5% 0.1W
3732	4822 051 20562	5k6 5% 0.1W
3733	4822 051 20392	3k9 5% 0.1W
3734	4822 051 20561	560Ω 5% 0.1W
3735	4822 051 20391	390Ω 5% 0.1W
3736	2120 363 90145	22K 30%
3737	4822 051 20472	4k7 5% 0.1W
3738	4822 051 20472	4k7 5% 0.1W
3739	4822 117 11449	2k2 1% 0.1W
3740	4822 051 20223	22k 5% 0.1W
3741	4822 117 11449	2k2 1% 0.1W
3742	4822 051 20562	5k6 5% 0.1W
3743	4822 051 20392	3k9 5% 0.1W
3744	4822 051 20561	560Ω 5% 0.1W
3745	4822 051 20391	390Ω 5% 0.1W
3746	4822 051 20472	4k7 5% 0.1W
3747	4822 051 20101	100Ω 5% 0.1W
3748	4822 117 11449	2k2 1% 0.1W
3749	4822 117 11449	2k2 1% 0.1W
3750	4822 051 10102	1k 2% 0.25W
3751	4822 051 20472	4k7 5% 0.1W
3752	4822 051 20101	100Ω 5% 0.1W
3753	4822 117 10833	10k 1% 0.1W
3754	4822 117 10837	100k 1% 0.1W
3755	4822 117 10833	10k 1% 0.1W
3756	4822 117 10833	10k 1% 0.1W
3757	4822 117 10833	10k 1% 0.1W
3758	4822 117 10834	47k 1% 0.1W
3759	4822 117 10834	47k 1% 0.1W
3760	4822 051 20472	4k7 5% 0.1W
3761	4822 051 20101	100Ω 5% 0.1W
3762	4822 117 10833	10k 1% 0.1W
3763	4822 117 10833	10k 1% 0.1W
3771	4822 117 10833	10k 1% 0.1W
3772	4822 051 20332	3k3 5% 0.1W
3775	4822 117 10833	10k 1% 0.1W
3776	4822 051 20332	3k3 5% 0.1W
3778	4822 051 10102	1k 2% 0.25W
3779	4822 051 10102	1k 2% 0.25W
3780	4822 117 10837	100k 1% 0.1W
3781	4822 117 10965	18k 1% 0.1W
3782	4822 117 10834	47k 1% 0.1W
3783	4822 117 11449	2k2 1% 0.1W
3786	4822 117 10837	100k 1% 0.1W
3787	4822 117 10965	18k 1% 0.1W
3788	4822 117 10834	47k 1% 0.1W
3789	4822 117 11449	2k2 1% 0.1W
3792	4822 117 10837	100k 1% 0.1W
3793	4822 117 10837	100k 1% 0.1W
3794	4822 051 20472	4k7 5% 0.1W
3795	4822 117 10833	10k 1% 0.1W
3796	4822 051 20561	560Ω 5% 0.1W
3796	4822 051 20562	5k6 5% 0.1W
42xx	4822 051 10008	Jumper 1206
43xx	4822 051 20008	Jumper 0805

~

5701	2422 549 43868	Coil var. 10.7MHz
5702	4822 157 11668	Filter MPX 20KHZ
5703	4822 157 11668	Filter MPX 20KHZ
5704	4822 242 72527	Crystal 4 MHz
5705	4822 157 71206	Bead 100MHz 600Ω
5706	4822 242 70665	Filter 10.7M
5707	4822 242 70665	Filter 10.7M
5708	4822 157 11172	68nH 10%

▶

6701	5322 130 34331	BAV70
6702	4822 130 34233	BZX79-B5V1
6703	4822 130 83757	BAS216
6704	4822 130 30621	1N4148
6705	4822 130 30621	1N4148

Ⓢ

7702	9350 394 00112	TDA1578A/V6
7703	4822 130 60373	BC856B
7704	4822 130 60511	BC847B
7705	4822 130 60511	BC847B
7706	4822 130 60511	BC847B
7707	5322 130 42718	BFS20
7708	3104 218 80290	µProcessor
7709	9338 436 90602	SA572N

7710	4822 209 70157	NJM4560DD
7711	4822 209 17338	L78L08ACZ
7712	4822 130 41327	BC327-40
7713	4822 130 60511	BC847B
7714	4822 209 15263	L78L06ACZ
7717	4822 130 60511	BC847B
7718	4822 130 60373	BC856B
7719	4822 130 60511	BC847B
7720	4822 130 60511	BC847B

Surround Sound Supply + Amplifier [W1] [W2] [W3] [W4]**Various**

0440	4303 308 35230	Amplifier board
0011	4303 308 76220	Led holder LU53-080
0012	9390 288 60112	Spring
0013	3104 214 34571	Power button
1101	4822 267 10748	3P Male
1201	2422 025 14044	3P Male
1202	4822 265 30734	4P
1203	4303 308 99380	2P
1204	3143 008 90671	Mains switch
1205	4822 265 11253	Fuse holder
1206	4822 070 32002	Fuse 2A
1301	2422 025 04849	2P Male
1302	4822 265 10872	2P Male
1303	4822 265 30735	5P Male
1304	4822 267 10735	3P Male
1305	4822 265 41392	7P Male
1306	4822 267 31014	Headphone socket
1307	4303 308 94460	Slide switch 2P
1401	4822 265 30735	5P Male
1402	4822 267 10735	3P Male
1403	2422 025 04851	3P Male
1404	4822 267 10565	4P Male
1405	2422 025 10647	1P Male
1406	2422 025 04849	2P Male
1407	2422 025 04849	2P Male
1408	4822 071 52502	Fuse 2.5A
1409	4822 071 52502	Fuse 2.5A
8000	3139 110 30840	Cable 180mm/description>
8002	4303 301 91570	Cable 7P shielded
8003	4303 301 91580	Cable 3P shielded
8004	4303 301 00380	Cable 2P shielded
8005	3139 110 30730	Cable 3P shielded

-II-

2201	4822 126 13838	100nF 80-20% 50V
2202	4822 126 11958	2.2nF 10% 500V
2203	4822 126 13841	1nF 20% 250V
2204	4822 122 33127	2.2nF 10% 63V
2205	5322 121 42498	680nF 5% 63V
2206	3143 018 90900	100pF 10% 1kV
2207	2222 044 36478	4.7µF 20% 400V
2208	2222 336 20105	1µF 20 275V
2209	4822 124 12056	1000µF 20% 35V
2210	4822 124 40196	220µF 20% 16V
2211	4822 126 13838	100nF 80-20% 50V
2301	4822 126 14043	1µF +80-20% 16V
2302	4822 126 14043	1µF +80-20% 16V
2303	4822 126 13751	47nF 10% 63V
2304	4822 126 13751	47nF 10% 63V
2401	4822 124 12056	1000µF 20% 35V
2402	4822 124 11912	220µF 20% 6,3V
2403	4822 124 11912	220µF 20% 6,3V
2404	4822 124 42367	3300µF 20% 35V
2405	4822 124 42367	3300µF 20% 35V
2406	4822 124 40769	4.7µF 20% 100V
2407	4822 124 40207	100µF 20% 25V
2408	4822 124 81151	22µF 50V
2409	4822 122 31947	100nF 20% 63V
2410	4822 122 31947	100nF 20% 63V
2411	4822 122 31947	100nF 20% 63V
2412	4822 122 31947	100nF 20% 63V
2413	4822 122 31947	100nF 20% 63V
2414	4822 122 31947	100nF 20% 63V
2415	4822 126 13473	220nF 80-20% 50V
2416	4822 126 13473	220nF 80-20% 50V
2420	5322 122 32268	470pF 10% 50V
2421	4822 126 13473	

2433	5322 122 32654	22nF 10% 63V
2434	5322 122 32654	22nF 10% 63V
2435	5322 122 32531	100pF 5% 50V
2436	5322 122 32531	100pF 5% 50V
2437	4822 126 13838	100nF 80-20% 50V
2438	4822 126 13838	100nF 80-20% 50V
2439	4822 126 13838	100nF 80-20% 50V
2440	4822 126 13838	100nF 80-20% 50V
2441	4822 126 14043	1μF +80-20% 16V
2442	4822 126 13473	220nF 80-20% 50V
2443	4822 126 13482	470nF 80/20% 16V
2444	4822 126 13691	27pF 1% 63V
2445	4822 126 13691	27pF 1% 63V
2446	4822 126 13473	220nF 80-20% 50V
2447	4822 126 13838	100nF 80-20% 50V
2448	4822 126 13838	100nF 80-20% 50V
2449	4822 126 13838	100nF 80-20% 50V
2450	4822 126 13838	100nF 80-20% 50V
2451	4822 126 13473	220nF 80-20% 50V
2452	5322 122 32531	100pF 5% 50V
2453	5322 122 32531	100pF 5% 50V
2454	5322 122 32531	100pF 5% 50V
2455	5322 122 32531	100pF 5% 50V
2456	4822 122 33127	2,2nF 10% 63V



3201	4822 051 52702	2k7 1% 0,125W
3202	4822 053 21475	4M7 5% 0,5W
3203	4822 053 21225	2M2 5% 0,5W
3204	4822 051 52702	2k7 1% 0,125W
3205	4822 051 20121	120Ω 5% 0,1W
3206	4822 117 11454	820Ω 1% 0,1W
3207	4822 053 20106	10M 5% 0,25W
3208	4822 116 83883	470Ω 5% 0,5W
3209	4822 117 11449	2k2 1% 0,1W
3210	4822 117 11449	2k2 1% 0,1W
3211	4822 117 10833	10k 1% 0,1W
3212	4822 051 10472	4k7 2% 0,25W
3214	4822 117 10833	10k 1% 0,1W
3215	4822 116 52195	47Ω 5% 0,5W
3216	4822 116 52182	15Ω 5% 0,5W
3217	4822 116 52182	15Ω 5% 0,5W
3219	4822 052 10108	1Ω 5% 0,33W
3220	4822 052 10108	1Ω 5% 0,33W
3221	4822 052 10109	10Ω 5% 0,33W
3222	4822 052 10471	470Ω 5% 0,33W
3223	4822 051 20471	470Ω 5% 0,1W
3301	4822 116 83933	15k 1% 0,1W
3302	4822 116 83933	15k 1% 0,1W
3303	4822 117 11149	82k 1% 0,1W
3304	4822 117 11149	82k 1% 0,1W
3305	4822 051 20008	Jumper 0805
3306	4822 051 20008	Jumper 0805
3307	4822 051 20223	22k 5% 0,1W
3308	4822 051 20223	22k 5% 0,1W
3401	4822 050 23301	330Ω 1% 0,6W
3402	4822 050 23301	330Ω 1% 0,6W
3403	4822 050 23301	330Ω 1% 0,6W
3404	4822 050 23301	330Ω 1% 0,6W
3405	4822 117 11507	6k8 1% 0,1W
3406	4822 051 20822	8k2 5% 0,1W
3407	4822 051 20472	4k7 5% 0,1W
3409	4822 051 20008	Jumper 0805
3410	4822 117 10833	10k 1% 0,1W
3411	4822 117 11507	6k8 1% 0,1W
3412	4822 051 20822	8k2 5% 0,1W
3413	4822 051 20472	4k7 5% 0,1W
3415	4822 051 20008	Jumper 0805
3416	4822 117 10833	10k 1% 0,1W
3419	4822 116 83961	6k8 5%
3420	4822 117 10834	47k 1% 0,1W
3421	4822 117 10834	47k 1% 0,1W
3422	4822 051 20472	4k7 5% 0,1W
3423	4822 117 10834	47k 1% 0,1W
3424	4822 117 13579	220k 1% 0,1W
3425	4822 050 21003	10k 1% 0,6W
3426	4822 051 20334	330k 5% 0,1W
3427	4822 117 10837	100k 1% 0,1W
3428	4822 117 10837	100k 1% 0,1W
3429	4822 117 10833	10k 1% 0,1W
3430	4822 117 10833	10k 1% 0,1W
3431	4822 117 10833	10k 1% 0,1W
3432	4822 051 20335	3M3 5% 0,1W
3433	4822 051 20474	470k 5% 0,1W
3434	4822 117 11149	82k 1% 0,1W
3435	4822 051 20474	470k 5% 0,1W
3436	4822 051 20223	22k 5% 0,1W
3437	4822 051 20472	4k7 5% 0,1W
3438	4822 117 10833	10k 1% 0,1W
3439	4822 116 52195	47Ω 5% 0,5W
3440	4822 117 10834	47k 1% 0,1W
3441	4822 117 10834	47k 1% 0,1W

3442	4822 117 11449	2k2 1% 0,1W
3443	4822 051 20472	4k7 5% 0,1W
3444	4822 051 20562	5k6 5% 0,1W
3445	4822 117 10833	10k 1% 0,1W
3446	4822 117 10833	10k 1% 0,1W
3447	4822 117 10833	10k 1% 0,1W
3448	4822 117 10837	100k 1% 0,1W
3449	4822 117 10833	10k 1% 0,1W
3450	4822 117 11449	2k2 1% 0,1W
3452	4822 052 10828	8,2Ω 5% 0,33W
3453	4822 052 10828	8,2Ω 5% 0,33W
3458	4822 051 20472	4k7 5% 0,1W
3459	4822 051 20472	4k7 5% 0,1W
3460	4822 117 10833	10k 1% 0,1W
3461	4822 051 20102	1k 5% 0,1W
3462	4822 051 20102	1k 5% 0,1W
42xx	4822 051 10008	Jumper 1206
43xx	4822 051 20008	Jumper 0805
44xx	4822 051 20008	Jumper 1206 (except see next line)
4408	4822 051 20008	Jumper 0805
4409	4822 051 20008	Jumper 0805

5201	4303 308 75810	Coil
5202	2422 535 97353	680μH 10%
5203	2422 535 97353	680μH 10%
5204	3128 138 38610	Standby transformer
5205	4822 157 70436	8,2μH
5206	4303 308 75820	Relay DC 12V



6501	9337 175 71682	TLSV5100
6201	4822 130 31878	1N4003G
6202	5322 130 31938	BYV27-200
6203	4822 130 83338	LL4148
6204	4822 130 83338	LL4148
6205	4822 130 83338	LL4148
6206	4822 130 83147	DF06M
6207	9338 872 80673	BZX55-F22
6208	4822 130 34281	BZX79-B15
6209	4822 130 30842	BAV21
6210	4822 130 83338	LL4148
6211	4822 130 11421	BT151X-500R
6212	9339 530 90685	TZM-C20
6401	4822 130 30862	BZX79-B9V1
6402	4822 130 30862	BZX79-B9V1
6403	4822 130 34278	BZX79-B6V8
6404	4822 130 34173	BZX79-B5V6
6405	4822 130 31878	1N4003G
6406	4822 130 31878	1N4003G
6407	4822 130 31878	1N4003G
6408	4822 130 31878	1N4003G
6409	4822 130 31878	1N4003G
6410	4822 130 31878	1N4003G
6411	4822 130 31878	1N4003G
6412	4822 130 31878	1N4003G
6413	4822 130 31878	1N4003G
6414	4822 130 31878	1N4003G
6415	4822 130 31878	1N4003G
6416	4822 130 31878	1N4003G
6417	4822 130 31878	1N4003G
6418	4822 130 31878	1N4003G
6421	4822 130 83338	LL4148
6422	4822 130 83338	LL4148
6423	4822 130 83338	LL4148
6424	4822 130 83338	LL4148
6425	4822 130 83338	LL4148
6426	4822 130 83338	LL4148
6427	4822 130 83338	LL4148
6428	4822 130 30621	1N4148
6429	4822 130 83338	LL4148
6430	4822 130 83338	LL4148
6431	4822 130 83338	LL4148
6432	4822 130 83338	LL4148
6433	4822 130 83338	LL4148
6434	4822 130 31878	1N4003G
6436	4822 130 31878	1N4003G
6437	4822 130 30621	1N4148
6501	9337 175 71682	TLSV5100



7201	4822 209 15867	L4940V12
7203	4822 130 11418	TCDT1102G
7204	4822 130 44568	BC557B
7205	4822 130 60511	BC847B
7206	4822 130 44503	BC547C
7207	4822 130 11417	STP3NB60FP
7401	4822 209 32641	TDA2616Q

7402	4822 209 30095	LM833D
7403	4822 209 30095	LM833D
7404	5322 209 82941	LM358D
7405	5322 209 70225	LM393D
7410	4822 130 60373	BC857B
7411	4822 130 60373	BC857B
7412	4822 130 60511	BC847B
7413	4822 130 60511	BC847B
7414	4822 130 40981	BC337-25
7415	4822 130 60511	BC847B
7416	4822 130 60511	BC847B
7417	4822 130 60511	BC847B