 


# Quick install guide

## Connecting your DVD recorder to the TV set /Initial installation

 
**Warning !** As long as the initial installation has not been carried out, the buttons on the front of the DVD recorder remain without function.

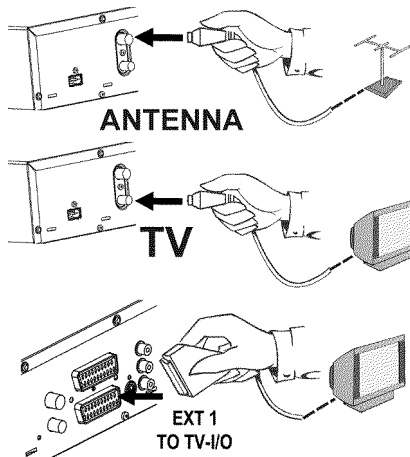


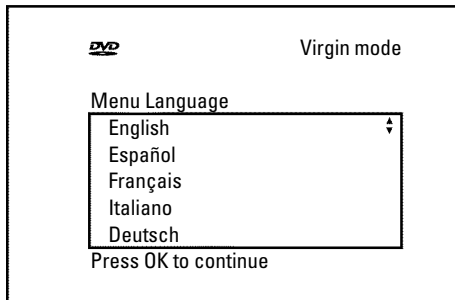 
- 1 Remove the aerial cable plug from your TV set. Insert it into the **ANTENNA IN** socket at the back of the DVD recorder
- 2 Insert one end of the supplied aerial cable into the **TV OUT** socket at the back of the DVD recorder and the other end into the aerial input socket of the TV set.
- 3 Connect socket **EXT 1 TO TV-I/O** or sockets **OUT S-VIDEO (Y/C)**, **VIDEO (CVBS) OUT**, **OUT AUDIO L/R** with the corresponding input sockets of your TV set.

**My TV sets supports the functions Easy Link, Cinema Link, NexTVView Link, Q-link, Smart Link, Megalagic, Datalagic...**

Connect the scart socket **EXT 1 TO TV-I/O** at the back of the DVD recorder with the - suitable for data transfer - scart socket of your TV set (see the instruction manual of your TV set) using a special cable (suitable for these data transfers).

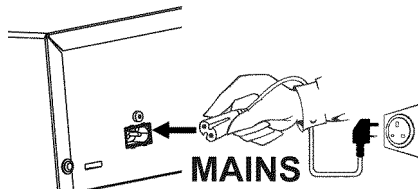

- 4 Switch on the TV set.
- 5 Use the supplied mains cable to connect the mains socket **~MAINS** at the back of the DVD recorder with the wall outlet. The most important features of the DVD recorder will appear in scrolling text on the display. After the first installation is completed this function will be switched off.
- 6 Switch on the DVD recorder using **STANDBY-ON**  . '15 TV ON?' will appear on the display.
- 7 If necessary, select the programme number for the input socket at the TV set.
- 8 The initial installation menu appears on the screen.
- 9 Select your favourite setting using **P- ▼** or **P+ ▲** . Confirm with **OK** .



The initial installation is carried out automatically. Wait until the whole procedure is complete. Further settings relate to the **GUIDE Plus+®** system. This offers a free interactive guide to the TV programmes available in your area.

To install this system, please read in the user manual the section entitled 'The **GUIDE Plus+®** System'.

**How to install an external receiver, read in the user manual the sections entitled 'Connecting additional devices' and 'Setting up the **GUIDE Plus+®** system'.**

## How to make a recording

- 1 Press **MONITOR** to view the currently selected input signal on the screen.
- 2 Select the programme number from which to record using **P+ ▲** or **P- ▼**.

### Recording via external sockets

Using **P+ ▲** or **P- ▼**, select the front sockets ('CAM1', 'CAM2') or the sockets ('EXT1', 'EXT2') at the back of the DVD recorder, from which you wish to record.

### Selecting the recording mode (quality)

Using **REC MODE**, you can choose between 'M1' (camcorder recordings/1 hour), 'M2' (2 hours), 'M2x' (2,5 hours), 'M3' (3 hours) or 'M4' (4 hours), 'M6' (6 hours) or 'M8' (8 hours).

### SAFE-RECORD

Normally, a recording always begins at the position where the previous recording ended. All subsequent recordings will be erased.

If you want the new recording to be made at the end of all the other recordings, hold down **REC/OTR ●** until 'SAFE REC' appears on the display.



**Tip**

- 3 Press **RECORD** or **REC/OTR ●** to start the recording.

### \*NO SIGNAL\* (no signal) will appear on the display

- ✓ Check whether the cable connectors are properly inserted.
- ✓ If the recording is to be made from a video recorder, change the 'tracking' setting on the video recorder.
- ✓ In case of bad or non-standard video input signals, the DVD recorder may be unable to detect the signal.



**Problem**

## How to program a recording

### Attention!

Programmed recordings will not work, until the installation of the GUIDE Plus® system is complete.

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Press **TIMER ⊖** on the remote control and then press the green function button to set a manual timer.
- 3 Enter the data of the recording using the number buttons **0..9**, or **P- ▼**, **P+ ▲**, **◀**, **▶**. Confirm the entry with **OK**.
- 4 Complete the programming by confirming the TV channel (programme number).
- 5 To end, press **TIMER ⊖**.
- 6 Switch off the DVD recorder using **STANDBY ⏻**.

A programmed recording functions only if the DVD recorder has been switched off using **STANDBY ⏻**.

