

1	2	3	4	5	6	7	8	9
---	---	---	---	---	---	---	---	---




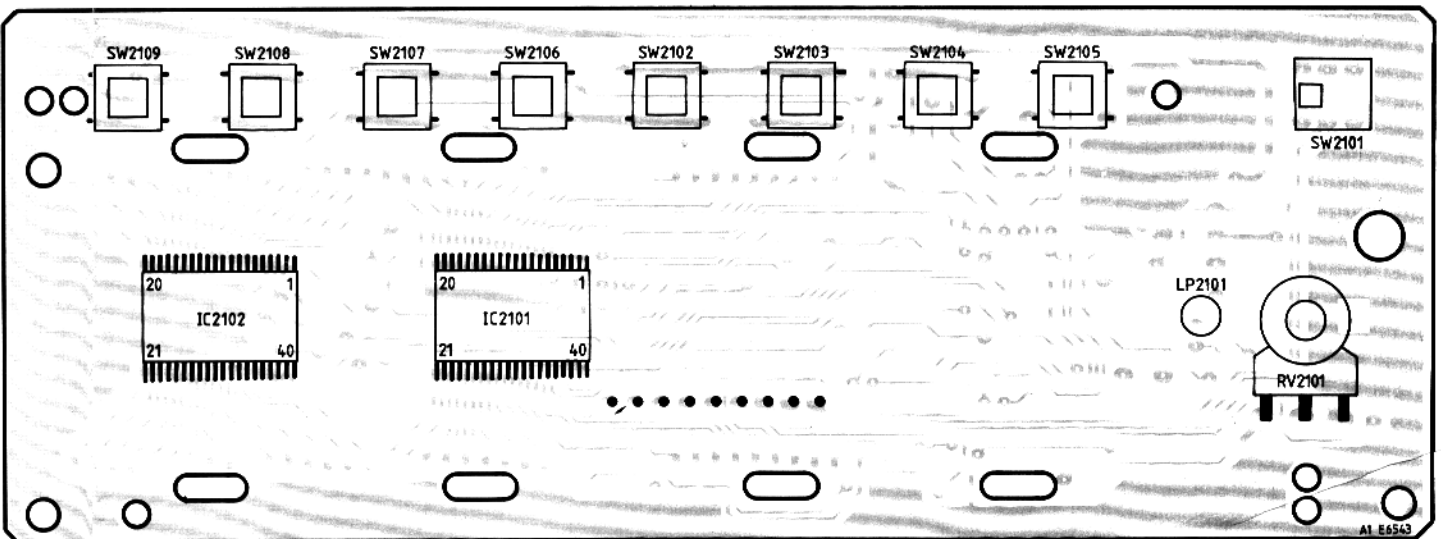


FIG 6.5 FM1200/FM1300 STANDARD CONSOLE COMPONENT LOCATION DIAGRAM

STANDARD CONSOLE 3513 500 00702

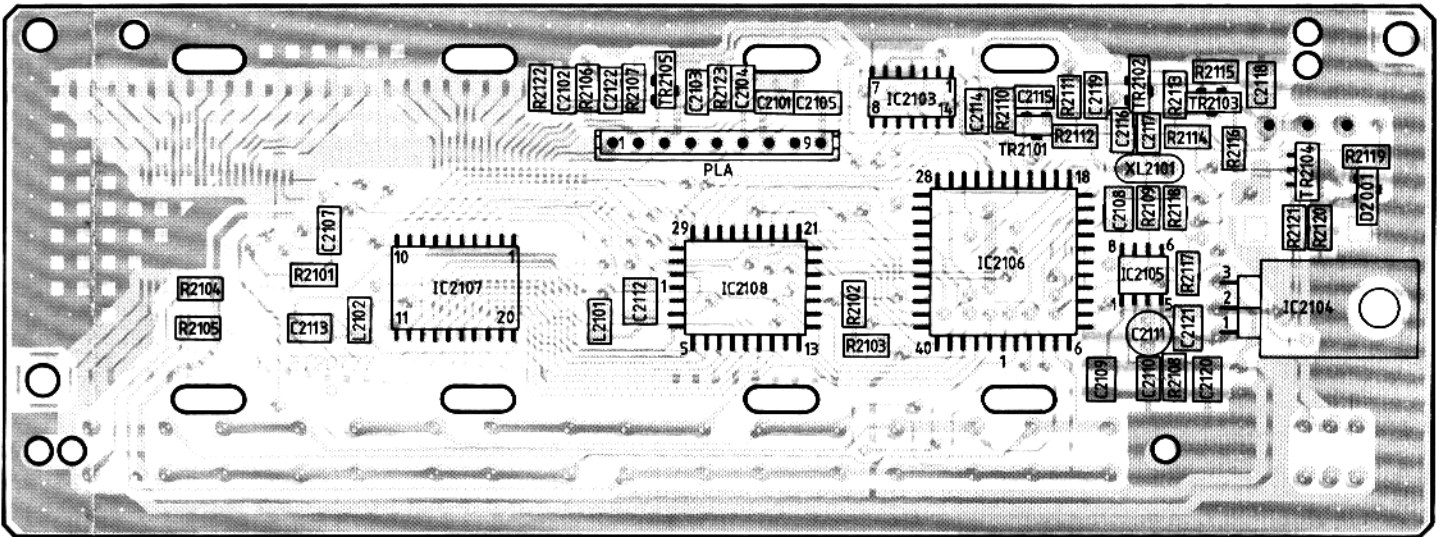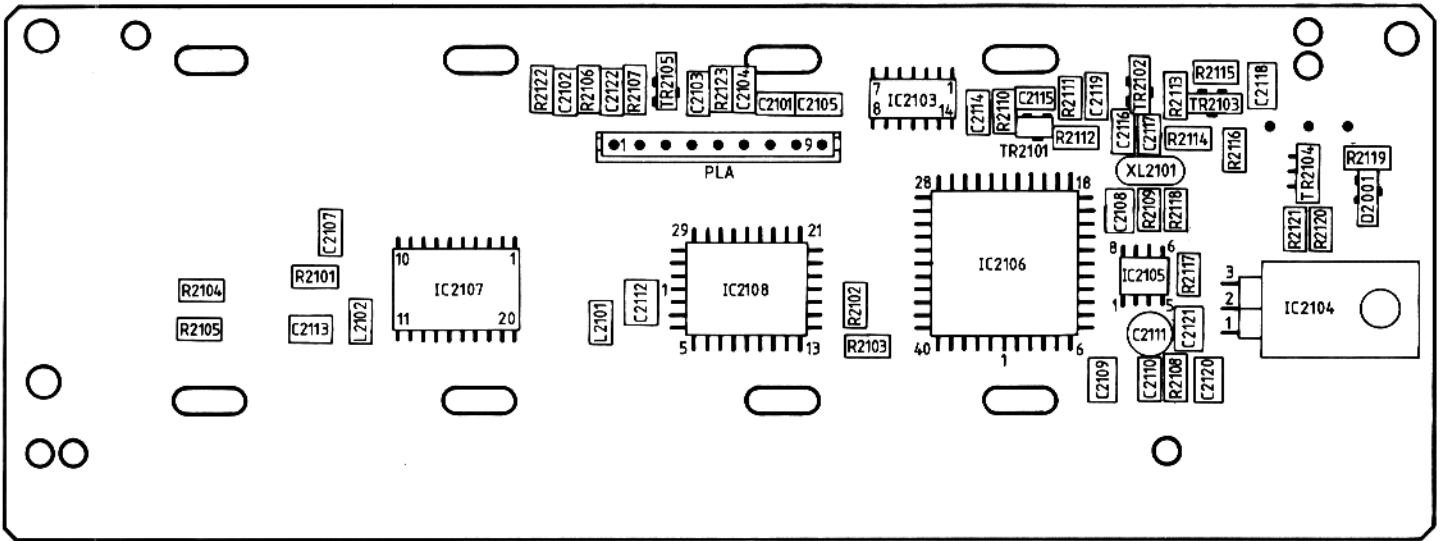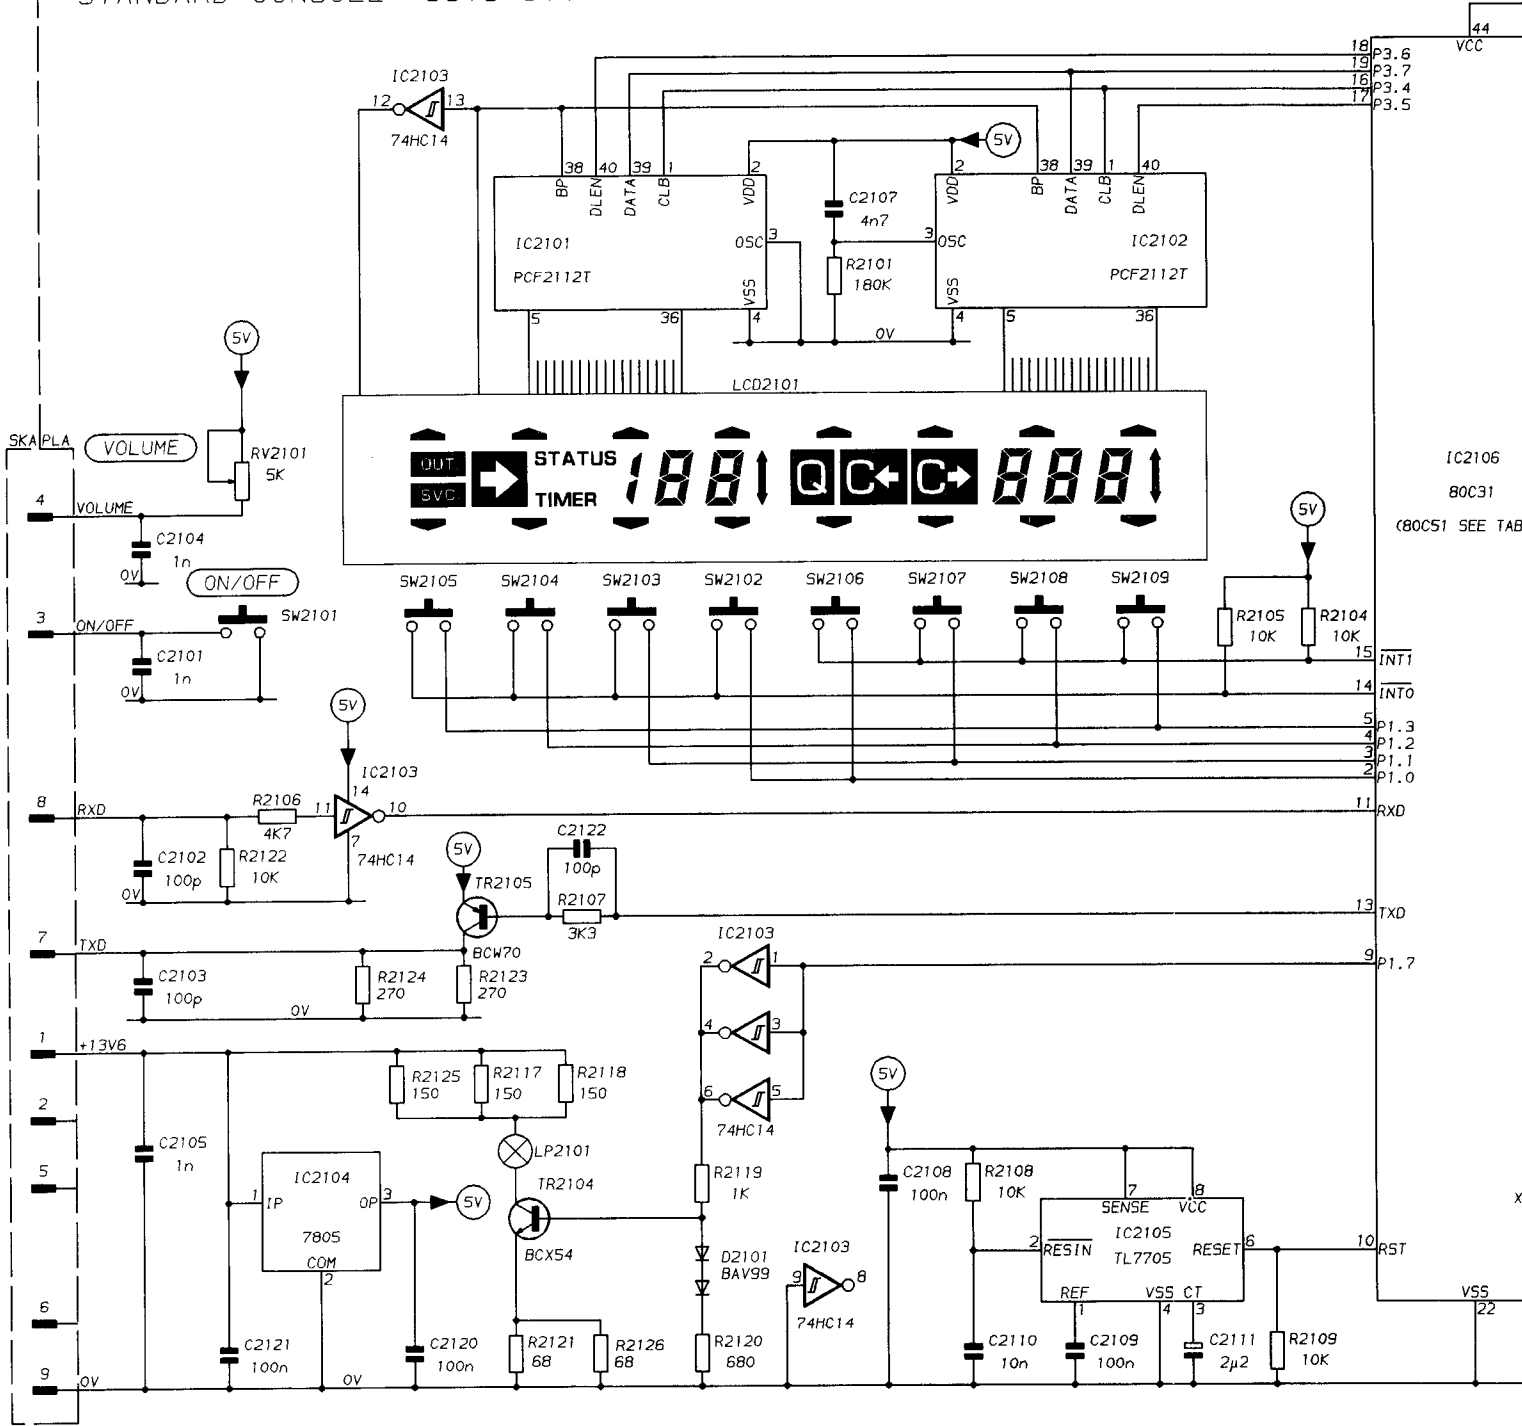


NOTES  
1. N/F = NOT FITTED

MEMORY ACCESS

IC2106 µP	MEMORY ACCESSED	IC2106 PIN 35	R2102	R2103	IC2107/2108
80C31	EXTERNAL	0V	FITTED	N/F	REQUIRED
80C51	EXTERNAL	0V	FITTED	N/F	REQUIRED
80C51	INTERNAL (MASKED)	5V	N/F	FITTED	NOT REQUIRED (MAY BE FITTED)

FIG 6.6 FM1200/FM1300 STANDARD CONSOLE  
CIRCUIT DIAGRAM

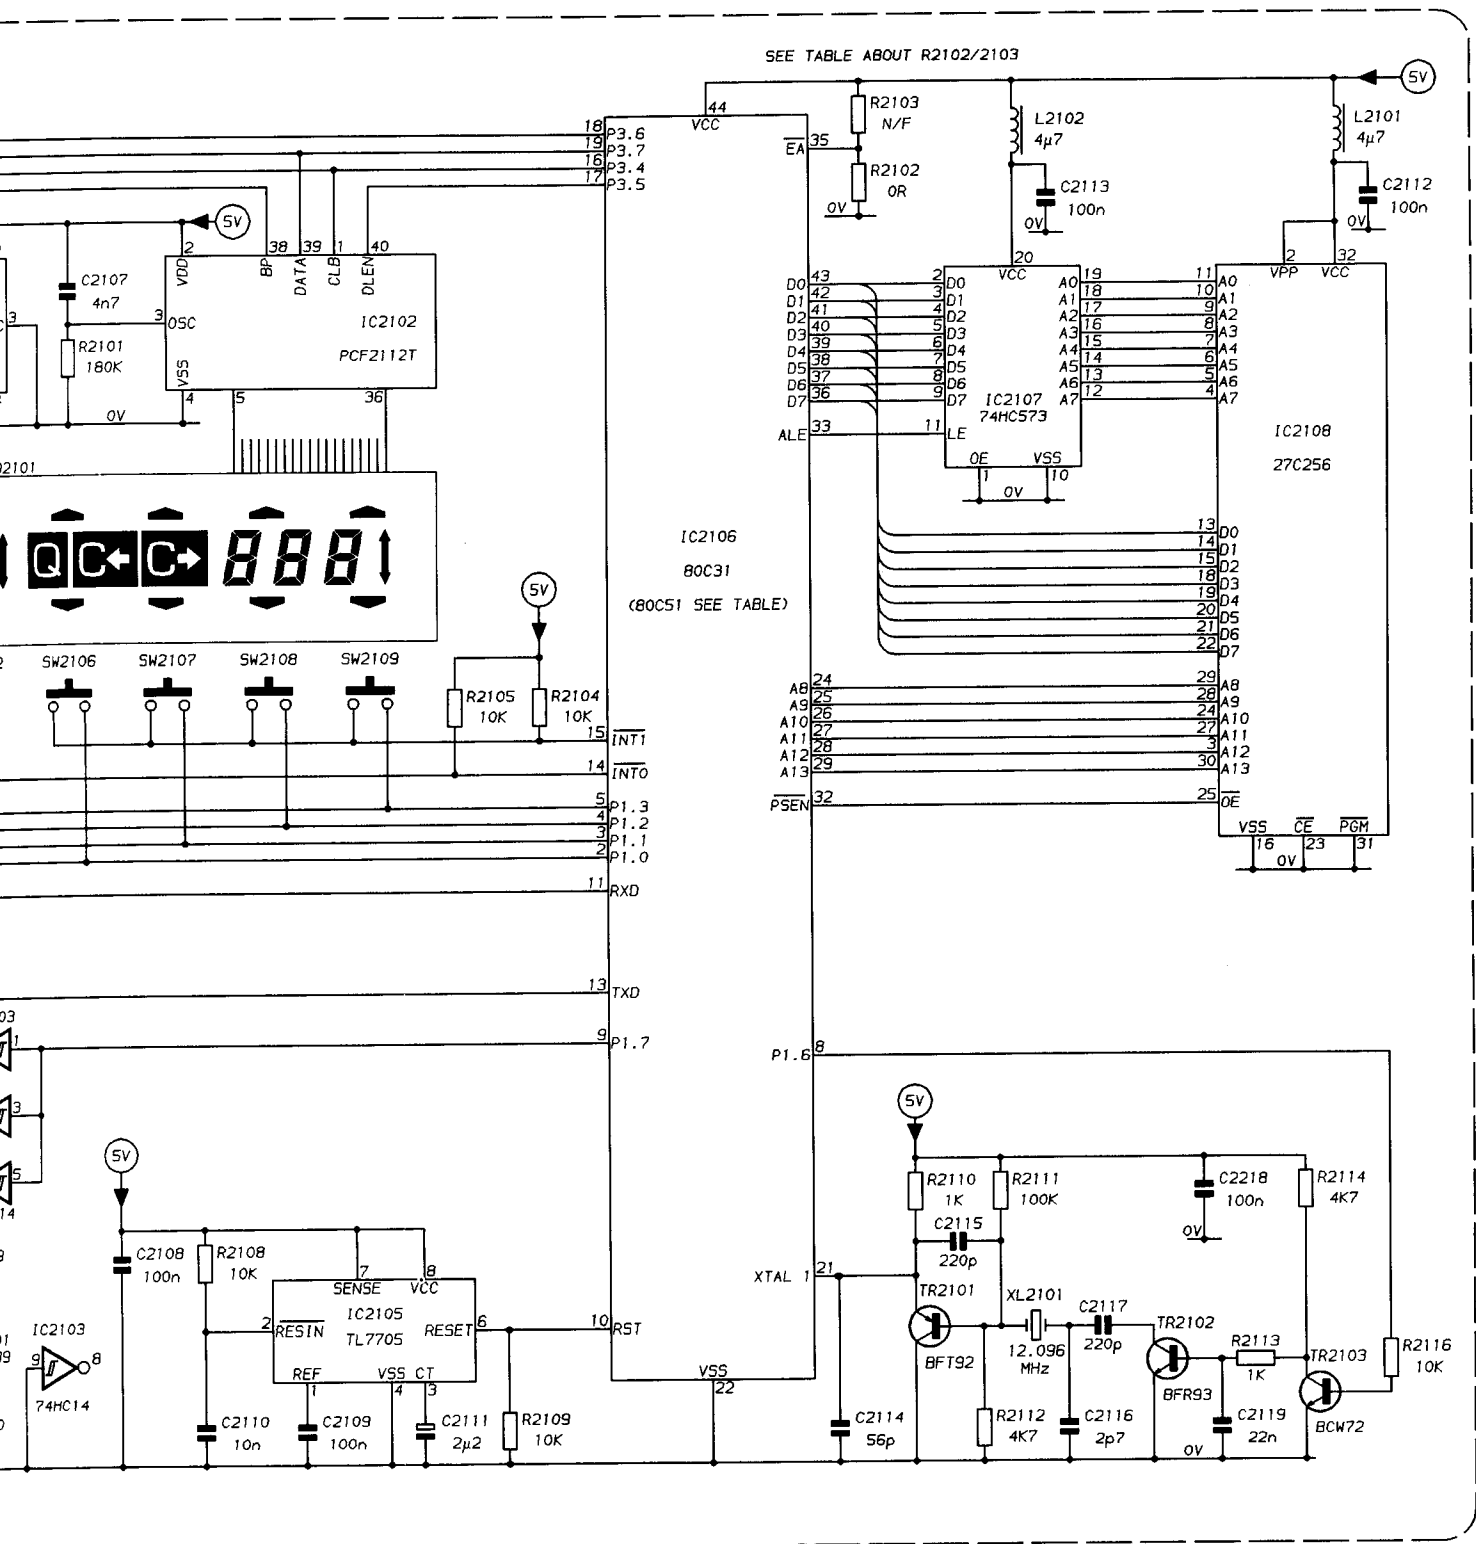

MEMORY ACCESS

IC2106 μP	MEMORY ACCESSED	IC2106 PIN 35	R2102	R2103	IC2107/2108
80C31	EXTERNAL	0V	FITTED	N/F	REQUIRED
80C51	EXTERNAL	0V	FITTED	N/F	REQUIRED
80C51	INTERNAL (MASKED)	5V	N/F	FITTED	NOT REQUIRED (MAY BE FITTED)

0 STANDARD CONSOLE  
RAM