


PDR-W839 Quick Start Guide

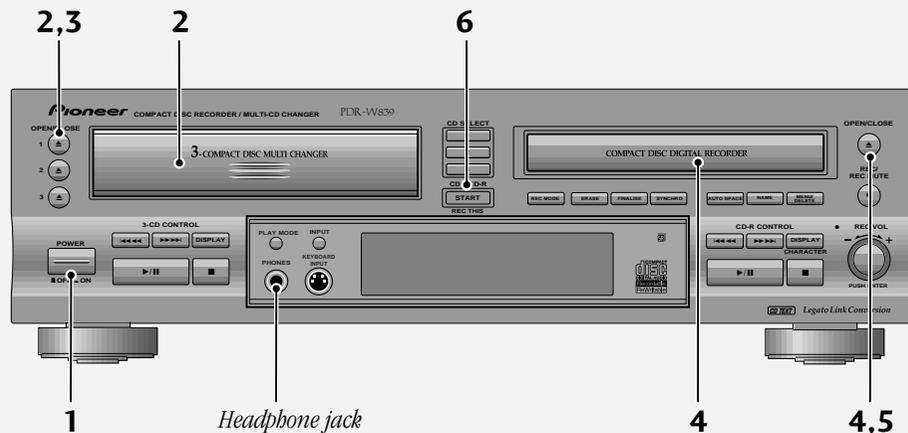

Quick CD recording

- 1 Press **POWER** to switch on.
- 2 Press **OPEN/CLOSE 1 ▲** to eject the **3-CD changer disc tray**.
Place the CD you want to record, with the label face up, on to the disc tray, making sure that it is seated properly in the disc guide.
Note: Do not use an adapter with 8cm CD-singles. The disc tray has guides for both 12cm and 8cm discs.
- 3 Press **OPEN/CLOSE 1 ▲** to close the disc tray.

CD1	TOTAL	TRK	MIN	SEC
		13	59	:30

- 4 Press **OPEN/CLOSE ▲** to eject the **CD-R disc tray**.
Place a blank CD-R or CD-RW disc, with the label/non-recording side face up, on to the disc tray.
Be careful when handling CD-R and CD-RW discs not to leave fingerprints on the recording surface.
- 5 Press **OPEN/CLOSE ▲** to close the disc tray.
The recorder reads the disc to see what you've loaded. After a few seconds it should show:

NEW	DISC	CD-R
-----	------	------

- 6 Press **START CD → CD-R**.

CD1	REC	CD-R FINALIZE
-----	-----	---------------

The recorder automatically records at double speed, so if you're listening to the recording as it's being made it will sound a little strange!

When finished, the recorder will finalize the CD-R to make it playable on most ordinary CD players (see *What's finalization* below). This process takes just a couple of minutes after the CD has been recorded.

TOC	MIN	SEC	CD-R
	01	:56	REC


Remove the disc from the recorder before switching off.

What's finalization?

Finalizing a disc means fixing the contents in place by creating what's called a *table of contents*, or TOC for short, at the beginning of the disc. This tells a CD player what's on the disc—the number of tracks and the length of each one. Once a TOC has been recorded onto a CD-R disc, almost any ordinary CD player will play the disc.

It's also possible to finalize CD-RW discs, but even after finalization, most ordinary CD players will *not* play these discs.

PDR-W839 Quick Start Guide

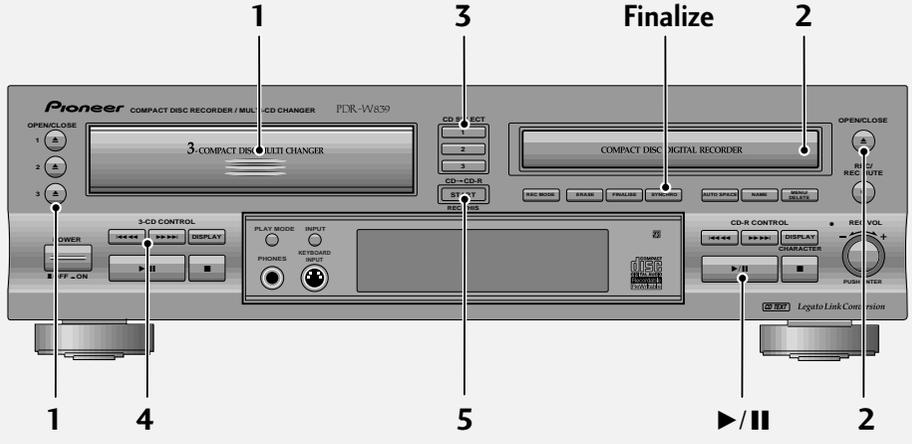

Recording individual tracks

Here's a fast way to record a track from any disc in the 3-CD changer:

- 1 Load the CD(s) you want to record tracks from into the CD changer.**
You can use any of the three disc trays in the changer.

- 2 Load a CD-R or CD-RW into the CD-R tray.**
If the disc isn't blank, make sure there is enough space on the disc for what you want to record (See *Switching the display* on page xx for how to check this).

- 3 Press the CD SELECT button for the disc you want to record.**

- 4 Play the track you want to record.**
Use ◀◀◀◀ and ▶▶▶▶ (CD changer side), or the number buttons on the remote, to select the track you want to record. It should start playing.

- 5 Press START CD → CD-R (REC THIS).**



The CD changer will jump to the beginning of the track and the CD-R starts recording. The recorder stops automatically at the end of the track.

- Repeat steps 3 to 5 to record more tracks.
- See *Finalizing a disc*, opposite, if you want to finalize the disc now.

Finalizing a disc

See *What's finalization?* on the other side of this Quick Start Guide for more information on what finalization does.

- 1 Press FINALIZE.**
 - Press ■ (CD-R side) here to cancel finalization.

- 2 Press ▶/|| (CD-R side) to start finalization.**

Finalization takes about 2 minutes; you'll see how long there is still to go in the display.



After finalization is complete:

- If a CD-R is loaded, the CD-R indicator changes to CD.
- If a CD-RW is loaded, the finalize indicator lights in the display.
- None of the controls on the player or the remote have any effect during finalization.

