FERRUPS CTO Configuration Guide



FERRUPS FE700VA 60 HZ

Invensys Powerware Division 2727 Kurtz Street San Diego, CA 92110 U.S.A. 800.356.5794 www.powerware .com



FE700VA CTO Configuration Guide

Configuring Your FERRUPS UPS

FERRUPS must be ordered using a Configure To Order (CTO) Number that reflects the cabinet style, VA rating, voltages, runtime, and other options pertaining to the FERRUPS configuration. As you select the options needed, they will become part of the CTO number.

Sample CTO Number: FB000BB2A0A0A0A. See page 700-4 for a CTO worksheet.

External battery packs, bypass switches and other external options will need to be ordered as separate line items.

Base Unit		
Base Model, Frequency, Cabinet Style	CTO Order Code	Base Price
FE700VA, 60 Hz Tower	FB	\$949

Input / Output Voltage								
Input Voltage Output Voltage CTO Order Code Base								
120	120	0	\$0					
208	120/208	1	\$150					
208	120/240	2	\$150					
240	120/240	3	\$150					
240	240 (International Models)	6	\$150					
220	127/220	7	\$150					

Battery and Battery Charger							
Battery Configuration	Option Price						
11 minute internal	standard	0	\$100				
16 minute internal	standard	1	\$212				
34 minute internal	standard	2	\$262				
Set up for internal (less batteries)	standard	3	\$43				
set up for external battery pack1	standard	4	\$36				
set up for external battery pack ¹	15 amp internal upgrade ²	6	\$536				

¹ Includes External Battery Connector Order desired external battery pack as a separate line. See page 700-3.

² Required for external battery packs 24me and 25me

Internal Maintenance Bypass Switch						
Internal Maintenance Bypass Switch CTO Order Code Option Programme CTO Order CTO						
No internal maintenance bypass switch option available ¹	0	\$0				

¹External maintenance bypass switch available for hardwired systems. Order desired maintenance bypass switch as a separate line item on your order. See page 700-3.

FE700VA CTO Configuration Guide

Input Connection								
Input Voltage Selected Input Connection CTO Order Code Option								
Any	Hardwired ¹	А	\$40					
400 - 1	5-15P ²	В	\$ 0					
120 volt	L5-15P ²	Н	\$15					
200, 220, 240	6-15P ²	E	\$ 0					
208, 220, 240	IEC320 – Jumper Cord ³	0	\$15					

Output Connection

Output Connection Configuration is designated by 8 digits within the unit CTO number. These eight digits allow selection of the type and quantity for up to four different types of receptacles.

Output Voltage Required	Output Connection	CTO Order Code	Option Price	
Any	Hardwired ¹	A0A0A0A0	\$0	
	(2) 5-15R Duplex	B2A0A0A0	\$0	
120 volt only	(1) 5-15R Duplex	B1G1A0A0	\$75	
120 Volt Offly	(1) L5-15R Duplex	BIGIAUAU		
	(2) L5-15R Duplex	G2A0A0A0	\$75	
200 220 240 cml	(2) 6-15R Duplex	D2A0A0A0	\$150	
208, 220, 240 only	(4) IEC320	U1A0A0A0	\$100	
	(1) 5-15R Duplex	B1D1A0A0	\$75	
Mixed Voltages	(1) 6-15R Duplex	BIDIAUAU	\$75	
120/208, 120/240, or 127/220	(1) L5-15R Duplex	D1G1A0A0	¢150	
	(1) 6-15R Duplex	DIGIAUAU	\$150	

¹ Hardwired output requires hardwired input

Internal Options							
Option	CTO Order Code	Option Price					
No other option	A	\$0					
AVR (recommended when loads contain PFC power supplies)	В	\$100					
Caster Kit (if ordered with unit)	С	\$100					
Anchor Kit for structural slab floor	D	\$200					
Anchor Kit for raised or access floor	Е	\$200					
AVR and Caster Kit	Н	\$200					
AVR and Anchor Kit for structural slab floor	I	\$300					
AVR and Anchor Kit for raised or access floor	J	\$300					
Neutral to Ground bond removal (For Shipboard Use)	Q	\$25					
Neutral to Ground bond removal and AVR (For Shipboard Use)	R	\$125					

¹ Hardwired input requires hardwired output ² NEMA line cord requires NEMA receptacles

³ International line cord requires international receptacles

FE700VA CTO Configuration Guide

External Options

External battery packs, bypass switches and other external options are not a part of the CTO number and will need to be ordered as separate line items. Some external options require that the UPS be configured for use with the option.

External Battery Packs							
Runtime Full/Half	Runtime Full/Half Battery Charger Required ¹ Order Number						
2h10m/6h07m	Standard Battery Charger ¹ 15 Amp Battery Charger Upgrade Optional	21me	\$638				
5h40m/16h	15 Amp Battery Charger Upgrade ¹	24me	\$1,230				
6h30m/18h23m	15 Amp Battery Charger Upgrade ¹	25me	\$1,430				

¹Order battery charger as part of UPS. See page 700-1.

External Battery Accessories						
Option Order Number List Price						
External Battery Connector Extension	BCS-0108	\$50				
Required for all external battery configurations except 21me – 25me.	DC3-0100	φου				

External Maintenance Bypass Switches (Recommended for hardwired units)							
UPS Input Voltage	Switch Type	Order Number	List Price				
120	MBB (Make Before Break)	BPE01MBB1A	\$400				
120	MBB, with AS/400 (iSeries) Option	BPE01MBBAS1A	\$400				
	BBM (Break Before Make)	BPE02BBM1A	\$450				
208, 220	BBM with AS/400 (iSeries) Option	BPE02BBMAS1A	\$450				
	BBM with Locking Handle	BPE02BBM1A/L	\$650				
	MBB (Make Before Break)	BPE02MBB1A	\$550				
240	MBB with AS/400 (iSeries) Option	BPE02MBBAS1A	\$550				
	MBB with Locking Handle	BPE02MBB1A/L	\$750				

¹ Bypass Switch must be mounted on the wall near the UPS.

Other External Options						
Option	Order Number	List Price				
Voltage Matching Transformer – 208V input, 120/240V output Required for applications using MBB bypass with source voltage of 208V.	TRN-1175	\$490				
Casters (if ordered as separate item)	CAA-0004	\$100				
IBM AS/400 (iSeries) Interface Kit – UPS without maintenance bypass switch	IPK-0001	\$95				
IBM AS/400 (iSeries) Interface Kit – UPS with maintenance bypass switch	IPK-0002	\$120				
EnviroCom TM I	ENV-0100	\$439				
EnviroCom II	ENV-0200	\$949				
BestLink SNMP/WEB Adapter	IPK-0318	\$349				
Hand-held Remote Control Panel with Cable	RCK-0007	\$250				
Signal Splitter Box	IPK-0022	\$199				

FE700VA Quote Sheet

The UPS CTO Worksheet											
		UPS CTO Order Code						List Price	Discount	Net Price	
Base Unit: FE700VA, 60 Hz Tower	FB										
Input / Output Voltage											
Battery and Battery Charger											
Internal Maintenance Bypass Switch				0					_	_	_
Input Connection											
Output Connection											
Internal Options											
Complete UPS CTO Number	FB		(0							
		1				UF	S Subto	otal			
External Battery Pack											
Battery Pack Selected:											
External Maintenance Bypass	Swite	ch									
External Maintenance Bypass Switch S	electe	d:									
Other External Options											
Voltage Matching Transformer							TRN-11	75			
Casters (if ordered as separate item)							CAA-00	004			
IBM AS/400 (iSeries) Interface Kit							IPK-00	01			
 UPS without maintenance bypass sw IBM AS/400 (iSeries) Interface Kit 	itch										
 UPS with maintenance bypass switch 							IPK-00	02			
EnviroCom TM I							ENV-01	00			
EnviroCom II							ENV-02	200			
BestLink SNMP/WEB Adapter							IPK-03	18			
Hand-held Remote Control Panel with C	Cable						RCK-00	007			
Signal Splitter Box							IPK-00	22			
						1	Sub To	otal			
										Freight	
										Insurance	
										Tax/Duty	
									(Quote Total	
Special Instructions:											