

C DOCUMENTS.HELP, HELP*, Technical Publications, 06/02/86

C HELP file for DOCUMENTS

C Copyright (c) 1986, Prime Computer, Inc., Natick, MA 01760

DOCUMENTS (List of current technical publications)

This file lists all the books that support PRIMOS Revision 20.2. See the Guide to Prime User Documents (DOC6138-4PA) for descriptions of these books.

To order technical documentation: inside the United States, call Prime Telemarketing at 800-343-2533; outside the United States, contact your local Prime subsidiary or distributor.

Books are grouped by these topics:

OPERATING SYSTEM (PRIMOS)	OFFICE AUTOMATION (OAS)
UTILITIES	PRODUCER/PERFORMER WORKSTATIONS
ASSEMBLY LANGUAGE/ARCHITECTURE	PRIME INFORMATION
COMMUNICATIONS	PRIMIX
PRIME/SNA	PRIMEWAY
DATA MANAGEMENT	PRIME 50 SERIES
LANGUAGES	TERMINALS/PERIPHERALS/SITE PREPARATION
PERSONAL COMPUTERS	

In document numbers, P refers to perfect bound editions; L refers to loose-leaf editions; P/L means the book is available in both formats. Asterisks mark books that are new or revised at Rev. 20.2.

OPERATING SYSTEM (PRIMOS)

COMPUTER ROOM OPERATIONS

Prime 2250 Planning and Installation Guide DOC6515-191P/191L

Prime 400 Handbook DOC8799-1LA

Prime 850 Handbook DOC10063-1LA

Prime 2250 Handbook DOC10073-1LA

Prime 2550 Handbook DOC8638-192P/192L
Update UPD8638-11A

Prime 2655 Handbook DOC8638-2LA

Prime 9950 Handbook DOC8887-192P/192L

Prime 9955 Handbook DOC8887-2LA

Operator's System Overview DOC9298-1PA/1LA
Update UPD9298-11A

Operator's Guide to System Monitoring DOC9299-1PA/1LA

Operator's Guide to File System Maintenance DOC9300-1PA/1LA

Update UPD9300-11A
Update UPD9300-12a

* Operator's Guide to File System Maintenance DOC9300-2LA

Operator's Guide to System Backups DOC9301-1PA/1LA
Update UPD9301-11A
Update UPD9301-12A

* Update UPD9301-13A

Operator's Guide to the Batch Subsystem DOC9302-1PA/1LA

Operator's Guide to the Batch Subsystem DOC9302-2LA

Operator's Guide to the Spooler Subsystem DOC9303-1PA/1LA

Operator's Guide to System Commands DOC9304-1PA/1LA

Operator's Guide to System Commands DOC9304-2LA

* Update UPD9304-21A

System Operator's Companion FDR7812-192

System Administrator's Guide DOC5037-3LA

* System Administrator's Guide DOC5037-4LA

System Administrator's Companion FDR3622-192

SOFTWARE RELEASES

Rev. 19.0 Software Release Document MRU4304-008

Rev. 19.1 Software Release Document MRU4304-009

Rev. 19.2 Software Release Document MRU4304-010

Rev. 19.3 Software Release Document MRU4304-011

Rev. 19.4 Software Release Document DOC10001-1PA

Rev. 20.0 Software Release Document DOC10001-2PA

* Rev. 20.2 Software Release Document DOC10001-3PA

USER AND REFERENCE GUIDES

Prime User's Guide DOC4130-4PA/4LA
Update UPD4130-41A

PRIMOS Commands Reference Guide DOC3108-5PA/5LA
Update UPD3108-51A

* Update UPD3108-52A

PRIMOS Commands Programmer's Companion FDR3250-192

Using Your Prime 2250 DOC6516-191P/191L

Using Your Prime 2250 DOC6516-2LA

Using Your Prime 2550 DOC8552-192P/192L

Update UPD8552-11A

Using Your Prime 2655 DOC8552-2LA

ICS2 User's Guide DOC10044-1PA/1LA

Advanced Programmer's Guide, Vol.0 DOC10066-1LA

Advanced Programmer's Guide, Vol.I DOC10055-1LA

Advanced Programmer's Guide, Vol.II DOC10056-1LA

Advanced Programmer's Guide, Vol.III DOC10057-1LA

SUBROUTINES

Subroutines Reference Guide DOC3621-190P/190L

Update UPD3621-31A

Update UPD3621-32A

Subroutines Reference Guide DOC10080-1LA

Subroutines Reference Guide DOC10081-1LA

Subroutines Reference Guide DOC10082-1LA

Subroutines Reference Guide DOC10083-1LA

UTILITIES

COMMAND PROCEDURE LANGUAGE (CPL)

CPL User's Guide DOC4302-190P/190L

CPL Programmer's Companion FDR7811-193

DEBUGGERS

Source Level Debugger Guide DOC4033-192P/192L

Update UPD4033-21A

* Update UPD4033-22A

Loading and Debugging Programmer's Companion FDR5094

Source Level Debugger Programmer's Companion DOC8916-1PA

EDITORS AND TEXT FORMATTERS

New User's Guide to EDITOR and RUNOFF FDR3104-101A/101B

Change sheets COR3104-001

Change sheets COR3104-002

EMACS Primer IDR6107

EMACS Reference Guide IDR5026
Update PTU2600-105
Update PTU2600-107
Update UPD5026-13A

EMACS Extension Writing Guide DOC5025-2LA

EMACS Standard User Interface Guide DOC7446-2LA

LOADERS

Programmer's Guide to BIND and EPFs DOC8691-1PA/1LA

SEG and LOAD Reference Guide DOC3524-192P/192L
Update UPD3524-21A

Loading and Debugging Programmer's Companion FDR5094

MAGNETIC TAPE

Magnetic Tape User's Guide DOC5027-2PA/2LA

ASSEMBLY LANGUAGE/ARCHITECTURE

Assembly Language Programmer's Guide FDR3059-101A/101B
Change sheets COR3059-001
Update PTU2600-104

Assembly Language Programmer's Companion FDR3340

System Architecture Reference Guide DOC9473-1LA
Update UPD9473-11A
Update UPD9473-12A
Update UPD9473-13A

Instruction Sets DOC9474-1LA
Update UPD9474-11A
Update UPD9474-12A
Update UPD9474-13A

COMMUNICATIONS

DISTRIBUTED PROCESSING TERMINAL EXECUTIVE (DPTX)

Distributed Processing Terminal Executive Guide DOC4035-193
Update UPD4035-21A

PRIMENET

PRIMENET Guide DOC3710-193P/193L
Update UPD3710-32A
* Update UPD3710-33A

Network Planning and Administration Guide DOC7532-2PA/2LA

REMOTE JOB ENTRY

Remote Job Entry Phase II Guide DOC6053-3LA

PRIME/SNA

PRIME/SNA Administrator's Guide DOC8908-1PA/1LA

PRIME/SNA Administrator's Guide DOC8908-2LA

PRIME/SNA Operator's Guide DOC8909-1PA/1LA

PRIME/SNA Operator's Guide DOC8909-2LA

PRIME/SNA Interactive Terminal User's Guide DOC8910-1PA/1LA

PRIME/SNA Interactive Terminal User's Guide DOC8910-2LA

DATA MANAGEMENT

DATA BASE MANAGEMENT SYSTEM (DBMS)

DBMS Data Manipulation Language Reference Guide DOC5308-190P/190L
Update UPD5308-11A

DBMS Data Description Language Reference Guide DOC5717-181P/181L
Update UPD5717-11A

DBMS Administrator's Guide DOC6292-192P/192L

Update UPD6292-11A

Update UPD6292-12A

* Update UPD6292-13A

DBMS User's Guide DOC6291-192P/192L

DBMS Programmer's Companion DOC8645-1XA

DISCOVER

DBMS/QUERY Report Generator Casebook IDR5650

DISCOVER Reference Guide DOC7798-192

Update UPD7798-11A

* Update UPD7798-12A

DISCOVER User's Guide DOC7799-1PA/1LA

Update UPD7799-11A

FORMS MANAGEMENT SYSTEM (FORMS)

FORMS Programmer's Guide PDR3040-163P
Update PTU2600-061
Update PTU2600-070
Update PTU2600-091
Update PTU2600-110

FED User's Guide DOC4940-191

MIDAS

MIDAS User's Guide IDR4558-176P
Update PTU2600-089

MIDASPLUS Concepts DOC9243-1PA/1LA

MIDASPLUS User's Guide DOC9244-1PA/1LA
Update UPD9244-11A
* Update UPD9244-12A

PRIME/POWER

PRIME/POWER Guide PDR3709
Update PTU2600-072
Update PTU2600-090

PRIME/POWER Companion [17.2] FDR4034

PRISAM

PRISAM User's Guide DOC7999-2PA/2LA
Update UPD7999-21A
* PRISAM User's Guide DOC7999-3LA

ROAM

* ROAM Administrator's Guide DOC7345-2LA
* Update UPD7345-21A

LANGUAGES

BASIC (Interpretive)

Interpretive BASIC Programmer's Guide IDR1813-140P

BASIC/VM

BASIC/VM Programmer's Guide FDR3058-101A/101B
Change sheets COR3058-001

Change sheets COR3058-002
Update UPD3058-33A

BASIC/VM Programmer's Companion [18.1] FDR3341

C Language

C User's Guide DOC7534-2LA
Update UPD7534-21A

C Programmer's Companion FDR8419-193

COBOL 74 (CBL)

COBOL 74 Reference Guide DOC5039-2LA

COBOL to CBL Conversion Guide MAN10002-1LA

FORTRAN (FTN)

FORTRAN Reference Guide FDR3057-101A/101B
Change sheets COR3057-001
Change sheets COR3057-002
Update UPD3057-33A

FORTRAN Programmer's Companion FDR3338

FORTRAN 77 (F77)

FORTRAN 77 Reference Guide DOC4029-4PA/4LA
Update UPD4029-41A

FORTRAN 77 Programmer's Companion FDR4030

PASCAL

Pascal Reference Guide DOC4303-191P/191L
Update UPD4303-192
Update UPD4303-21A

* Pascal Reference Guide DOC4303-3LA

Pascal Programmer's Companion FDR7095-192

PL/I

PL/I Reference Guide DOC5041-1LA

PL/I Conversion Guide DOC5769-1LA

PL/I Subset G

PL/I Subset G Reference Guide IDR4031
Update PTU2600-075

Update PTU2600-084
Update UPD4031-13A

RPG II V-mode Compiler

RPG II V-mode Compiler Reference Guide IDR5040
Update PTU2600-094
Update PTU2600-107 (EMACS Interface)
Update UPD5040-11A

RPG II V-mode Compiler Reference Guide DOC5040-2LA

Prime RPG II Debugging Template IDR11001-2XA

OFFICE AUTOMATION

Release 4.2

OAS Overview and Getting Started (PST 100) DOC10018-1LA

OAS Overview and Getting Started (PT200) DOC10019-1LA

WORD PROCESSING

OAS Word Processing Guide (PT65) DOC6756-040

OAS Word Processing Guide (PT45) DOC6877-040

OAS Word Processing Guide (PST 100 and PT200) DOC10014-1LA

MANAGEMENT COMMUNICATIONS AND SUPPORT

OAS Management Communications and Support Guide (PT45 and PT65) DOC6755-040

OAS Management Communications and Support Guide (PST 100) DOC10010-1LA

OAS Management Communications and Support Guide (PT200) DOC10011-1LA

SYSTEM ADMINISTRATION

OAS Administrator's Guide (PST 100 and PT200) DOC10017-1LA
Update: Hardware for the OAS Administrator PTU2600-113

OAINFO

OAINFO Guide DOC10068-1LA

PRIME TIMER

PRIME TIMER User's Guide DOC8804-011

UPDATES

New PT65 Keyboard PTU2600-095
Using OAS on the PT25 Management Workstation PTU2600-100
Using OAS on Hard Copy and Non-OAS Standard Terminals PTU2600-102

Release 5.0

OVERVIEW

OAS Overview and Getting Started DOC10092-1LA

WORD PROCESSING

OAS Word Processing Guide DOC10092-1LA

MANAGEMENT COMMUNICATIONS AND SUPPORT

OAS Management Communications and Support Guide DOC10089-1LA

SYSTEM ADMINISTRATION

OAS Administrator's Guide DOC10017-2LA

OAINFO

OAINFO Guide DOC10068-2LA

PRIME TIMER

PRIME TIMER User's Guide DOC8804-2LA

OAS KEYSTROKE REFERENCE CARDS

PT200 IDR10013-1XA
PST 100 IDR10018-1XA
PT65 IDR6756-1XA
PT45 IDR6757-1XA
PT25 IDR2600-1XA
PERFORMER/PRODUCER IDR8863-1XA

CONVERSION UTILITIES

Document Conversion Utility DOC11000-1LA

PRODUCER/PERFORMER WORKSTATIONS

Release 1.2 and 1.3

INSTALLATION AND ADMINISTRATION

- Prime Producer 100 Workstation Preparation Guide DOC8932-012P/012L
- Prime Producer 100 Planning and Installation Guide DOC8756-012P/012L
- Prime Producer 100 Workstation Administrator's Guide DOC8933-012P/012L
- Prime Producer 100 Installation and Administration PTU2600-115

WORKSTATION USER

- Using Your Prime Producer 100 DOC8863-012P/012L
- Prime Producer 100 Release 1.3 Notes DOC9635-1PA/1LA

WORD PROCESSING

- Prime Producer 100 Word Processing Case-By-Case DOC8972-1PA/1LA

CLUSTERING

- Prime Producer 100 Miniclustering Guide DOC9710-1PA/1LA

Release 2.0

(The following books document both the Producer and PERFORMER workstations, unless otherwise noted.)

INSTALLATION AND ADMINISTRATION

- Installation Guide (PERFORMER only) DOC10038-1XA
- Prime Producer 100 Planning and Installation Guide Update (Producer only) UPD8756-11A
- System Administrator's Guide DOC10030-1LA

WORKSTATION USER

- System User's Guide DOC10031-1LA

CLUSTERING

- Clustering Guide DOC10034-1LA

WORD PROCESSING

Word Processing User's Guide DOC10032-1LA

WP Self-Paced Guide PWS200E-20

MULTIPLAN

Multiplan User's Guide DOC10033-1LA

BUSINESS GRAPHICS PACKAGE

Business Graphics User's Guide DOC10036-1LA

OAINFO

OAINFO Guide DOC10068-2LA

PRIME INFORMATION

Prime INFORMATION INFO/BASIC Reference Guide DOC10023-1XA

INFO/BASIC Debugger Guide DOC7212-054P/054L

Prime INFORMATION Editor Reference Guide PDR3904-051P

INFORM Reference Guide PDR3905

Prime INFORMATION PERFORM Reference Guide DOC10059-1XA

Prime INFORMATION Primer DOC3909-053P/053L

Prime INFORMATION Highlights Companion FDR5212

INFORMATION System Update Release 5.1 MRU5964-001

INFORMATION System Update Release 5.2 MRU5964-002

INFORMATION System Update Release 5.3 MRU5964-003

INFORMATION System Update Release 5.4 MRU5964-004

INFORMATION System Update Release 6.0 DOC10006-1PA

Prime INFORMATION Administrator's Guide DOC10065-1XA

Prime INFORMATION Operator's Guide DOC3907-052P/052L

Prime INFORMATION Configuration Guide DOC6095-051P/051L

Prime INFORMATION SIMPLE User's Guide DOC7325-3PA/3LA

Prime INFORMATION SIMPLE Release Document DOC10029-1PA

Prime INFORMATION CONNECTION

- Prime INFORMATION CONNECTION
Installation and System Administration Guide MAN10041-1LA
- Prime INFORMATION CONNECTION
Word CONNECTION Primer MAN10040-1LA
- Prime INFORMATION CONNECTION
Word CONNECTION Reference Manual MAN10040-1LA
- Prime INFORMATION CONNECTION
Word CONNECTION Quick Reference Guide MAN10038-1LA
- Prime INFORMATION CONNECTION
Graph CONNECTION Primer MAN10037-1LA
- Prime INFORMATION CONNECTION
Graph CONNECTION Reference Manual MAN10036-1LA
- Prime INFORMATION CONNECTION
Graph CONNECTION Quick Reference Guide MAN10035-1LA
- Prime INFORMATION CONNECTION
Financial CONNECTION Primer MAN10034-1LA
- Prime INFORMATION CONNECTION
Financial CONNECTION Reference Manual MAN10033-1LA
- Prime INFORMATION CONNECTION
Financial CONNECTION Quick Reference Guide MAN10032-1LA

PRIMIX

- PRIMIX User's Manual MAN9507-1LA
- Using PRIMIX on 50 Series DOC9709-1LA
- PRIMIX User's Guide MAN9502-1LA
- PRIMIX Programmer's Guide MAN9503-1LA
- PRIMIX System Support Tools Guide MAN10004-1LA
- PRIMIX Release Notes DOC10077-1LA
- PRIMIX Document Preparation Guide MAN10005-1LA
- PRIMIX Editing Guide MAN10006-1LA

PRIMEWAY

Introduction to PRIMEWAY DOC8973-1PA/1LA

PRIMEWAY Design Guide DOC8974-1PA/1LA

Update UPD8974-11A

PRIMEWAY Configuration Development Guide DOC8975-1PA/1LA

Update UPD8975-11A

PRIMEWAY Transaction Development Guide DOC8976-1PA/1LA

Update UPD8976-11A

PRIMEWAY Forms Guide DOC8977-1PA/1LA

PRIMEWAY Administration Guide DOC8978-1PA/1LA

Update UPD8978-11A

PRIMEWAY Business Environment User's Guide DOC8979-1PA/1LA

Update UPD8979-11A

PRIME 50 SERIES

Technical Summary DOC6904-191P/191L

TERMINALS/PERIPHERALS/SITE PREPARATION

PT25 TERMINAL

PT25 Guide IDR4603

PT45 TERMINAL

PT45 Guide IDR4604

PT65 TERMINAL

PT65 Guide IDR4605

Update: New PT65 Keyboard PTU2600-095

PST 100 TERMINAL

PST 100 Programming Guide DOC6136-002P/002L

PST 100 Primer DOC6517-002P/002L

PST 100 Installation & Fault Isolation Guide DOC6987-002P/002L

DPTX on the PST 100 PTU2600-108

PT200

PT200 Installation Instructions IDR8619-2XA

PT200 International Installation Instructions IDR8893-1XX

PT200 Terminal Primer DOC8620-2LA
Update UPD8620-21A

PT200 Programmer's Reference Guide DOC8621-2LA

PT200 Graphics Option Primer DOC8718-1LA

PT200 Graphics Option Programmer's Reference Guide DOC8719-2LA

PW200

Using Your PW200 DOC7363-010P/010L

LETTER QUALITY PRINTERS

LQP 3175 Guide IDR5024

LQP 3185 Guide DOC7634-001
Update 1 UPD7634-001

SITE PREPARATION

Site Preparation Guide DOC5029-3LA

Prime 2250 Site Preparation Guide DOC6514-191P/191L

Prime 2550 Site Preparation Guide DOC8551-192P/192L

Prime 2655 Site Preparation Guide DOC8551-3LA/3PA
Update UPD8551-21A

Prime Office Systems Site Preparation Guide DOC10058-1LA

Prime T3350 Site Preparation Guide DOC10075-1LA

PERSONAL COMPUTERS

PERFORMER PC Documentation Package SPD10461-001

(The books in the PERFORMER PC package can only be purchased as a set, using the SDP number listed above. The set includes five books, listed below, and a binder and a slipcase for the set. The binder and slipcase can be ordered separately as IDR10030-1XA.)

PERFORMER PC Installation Guide DOC9714-2LA

PERFORMER PC Operations Guide DOC9713-1LA

PERFORMER PC Microsoft MS-DOS Reference Guide DOC9711-1LA

PERFORMER PC Diagnostics Guide DOC9712-1LA

PERFORMER PC Release Notes DOC10093-1LA

PERFORMER PC PRIMELINK User's Guide DOC10053-1LA

Update UPD10053-1LA