

TABLE OF CONTENTS

CHAPTER 1	PAGE
Specifications	3
CHAPTER 2	
Installation	4
Location	4
Mounting The Radio	4
Ignition Noise Interference	5
Antenna	5
Tuning The Antenna for Optimum SWR	6
External Speaker	7
Public Address	7
CHAPTER 3	
Operation	8
Front Panel	8
Rear Panel	10
Frequency Chart	11
Procedure to Receive And Transmit	12
Receiving SSB Signals	13
Alternate Microphone And Installation	15

- 1-

INDICE

CAPITULO 1	PAGE
Especificaciones	21
CÁPITULO 2	
Instalación	22
Ubicación	22
Conexiones	22
Interferencia Causada Por El Motor	23
Antena	23
Ajuste De La Antena Para Optimo SWR	24
Parlante Externo	25
Auto Parlante	25
CAPITULO 3	
Operación	26
Panel Frontal	26
Panel Trasero	29
Canales y Frecuencias	30
Uso del Equipo	31
Recepción de Señales de Banda Lateral (SSB)	32
Instalación y Reemplazo del Micrófono	34

- 2-