

13. **TONE/HI SWITCH** : This switch changes the tone quality. Press this switch (TONE) and bass is increased. Depress this switch (HI) and treble is increased.

14. **COUNTER SWITCH** : Press this switch for the frequency of the selected channel to be displayed in the frequency counter.

15. **DIM/BRT SWITCH** : This switch controls the level of brightness for the meter lamp, frequency display and the channel display. Press this switch (DIM) for the meter lamp and the displays LED to be dimly lighted. Depress this switch (BRT) for a brighter effects.


16. **ANL SWITCH** : In the ANL position, the Automatic Noise Limiter in the audio circuits is activated.

17. **CH19/OFF SWITCH** : The CH 19 switch is used for instant access to Channel 19, which is often used by truckers for transmission of traffic and weather condition.

18. **NB SWITCH** : In the NB position, the RF Noise Blanker is activated. The Noise Blanker is very effective in eliminating repetitive impulse noise such as ignition interference.

19. **CHANNEL DISPLAY** : The channel display indicates the current selected channel.

REAR PANEL

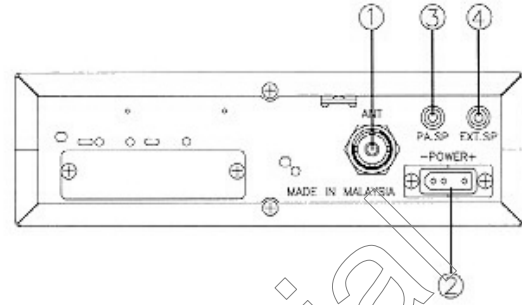

1. **ANTENNA** : This jack accepts 50 ohms coaxial cable with a PL-259 type plug.

2. **POWER** : This accepts 13.8V DC power cable with built-in fuse. The power cord provided with the radio has a black and red wire. The black goes to negative and the red goes to positive.

3. **PA. SP.** : This jack is for PA operation. Before operating, you must first connect a PA speaker (8 ohms, 4W) to this jack.

4. **EXT. SP.** : This jack accepts 4 to 8 ohms, 5 watts external speaker. When the external speaker is connected to this jack, the built-in speaker will be disabled.

ZEON PDF Drive
www.zeon.com.tw