

DF44 (A662)

PARTS CATALOG





INTRODUCTION

This chapter instructs you the numbers and names of parts on this machine.


INDEX to PARTS CATALOG

LOCATION OF UNIT	3
1.EXTERIOR 1 (A662)	4
2.EXTERIOR 2 (A622)	6
3.FEED-IN SECTION (A662)	8
4.TRANSPORT AND EXIT SECTION (A662)	10
5.DF MAIN BOARD (A662)	12
PARTS INDEX	15

LOCATION OF UNIT

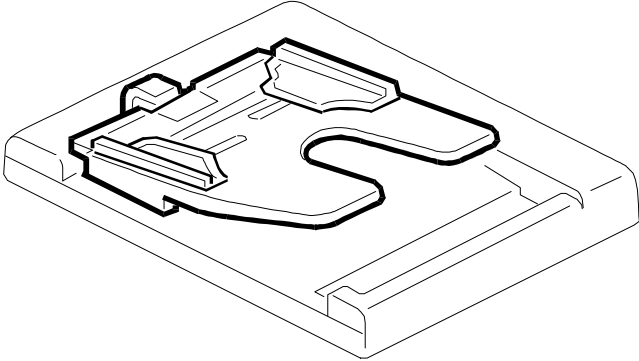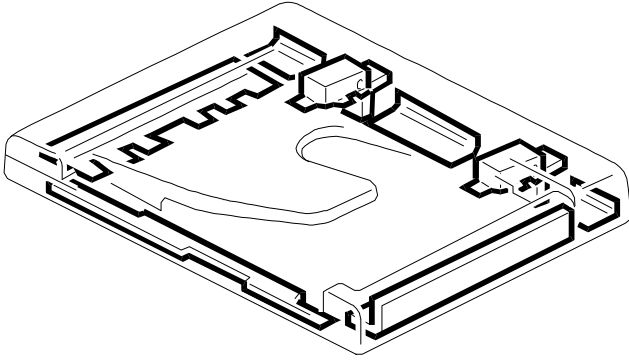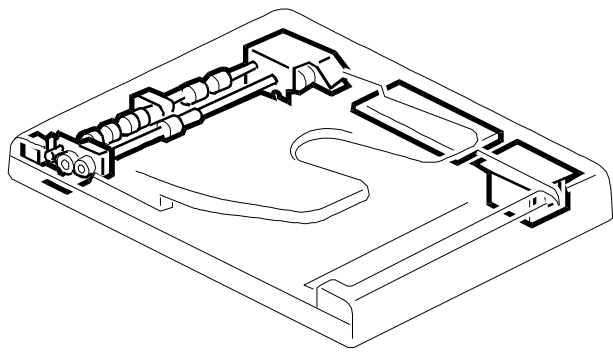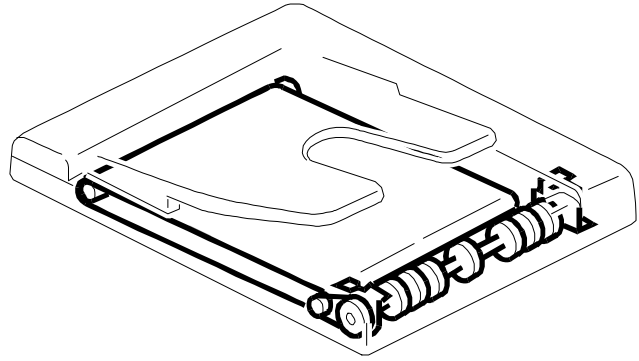1. EXTERIOR 1 (A662)  See Page 4	2. EXTERIOR 2 (A622)  See Page 6	3. FEED-IN SECTION (A662)  See Page 8
4. TRANSPORT AND EXIT SECTION (A662)  See Page 10		

1. EXTERIOR 1 (A662)

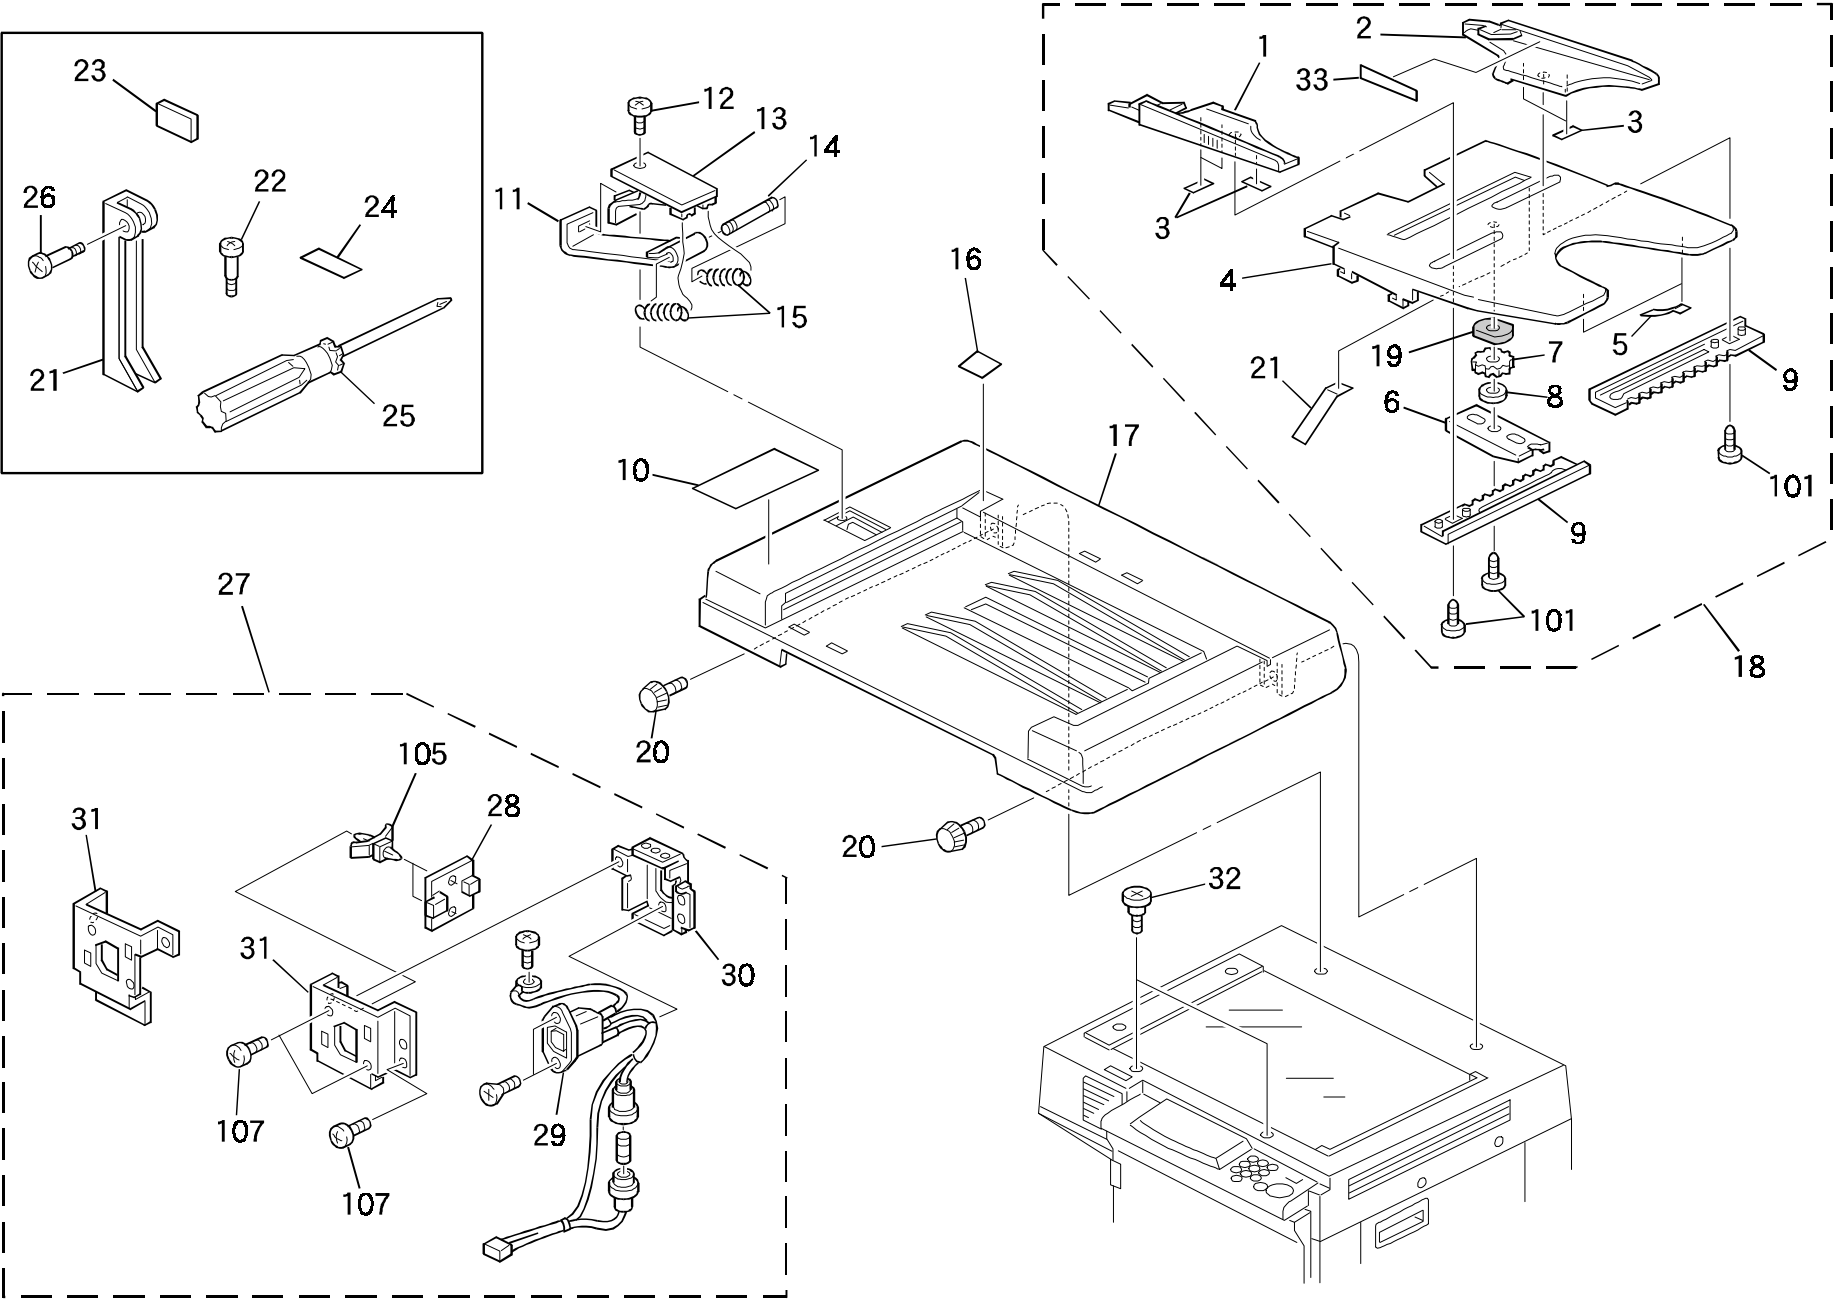


1. EXTERIOR 1 (A662)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A662 1375	Front Side Guide	1
2	A662 1380	Rear Side Guide	1
3	5894 2747	Mylar - Original Guides	4
4	A662 1370	Original Table	1
5	A395 1390	Lower Original Holder Ass'y	2
6	A365 1390	Rack Guide Bracket	1
7	5443 2657	Gear - 28Z	1
8	5443 2713	Wave Washer	1
9	A422 1361	Rack - Side Guide	2
10	A662 2060	Decal - Set	1
11	A497 1170	Friction Belt	1
12	5875 2088	Shoulder Screw - M4	1
13	A662 1352	Friction Belt Holder	1
14	A422 1356	Pin - 3x26mm	1
15	A422 1355	Friction Belt Spring	2
16	A395 2020	Cover - LED	1
17	A662 1310	ADF Cover	1
18	A662 0630	Original Table Ass'y	1
19	5443 2712	Cork Pad	1
20	A365 1495	Knob Screw	2
21	A395 1394	Rear Seal - Original Table	1
22	AA14 3183	Stepped Screw	1
23	A365 1486	Magnet	1
24	A365 2080	Instruction Decal	1
25	A365 6001	Screw Driver	1
26	5446 5832	Connector Guide Pin	1
27	A662 0662	ADF Bracket	1
28	A365 5121	Interface Board - ADF	1
29	A662 5316	DF Harness - 115V	1
29	A662 5317	DF Harness - 230V	1
30	A662 1160	ADF Inner Bracket	1
31	A077 1162	ADF Bracket	1
32	A662 1361	Stepped Screw	2
33	A662 1395	Decal - Original	1
34	A365 1485	Upper Unit Stand	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0413 0082W	Tapping Screw - M3x8	
102	0323 0060W	Philips Sunken Head Screw - M3x6	
103	0950 3008W	Philips Screw With Lock Washer - M3x8	
104	0950 4006W	Philips Screw With Lock Washer - M4x6	
105	1105 0160	Clamp	
106	1105 0267	Wire Clamp	
107	0451 3006B	Tapping Screw - M3x6	

2. EXTERIOR 2 (A622)

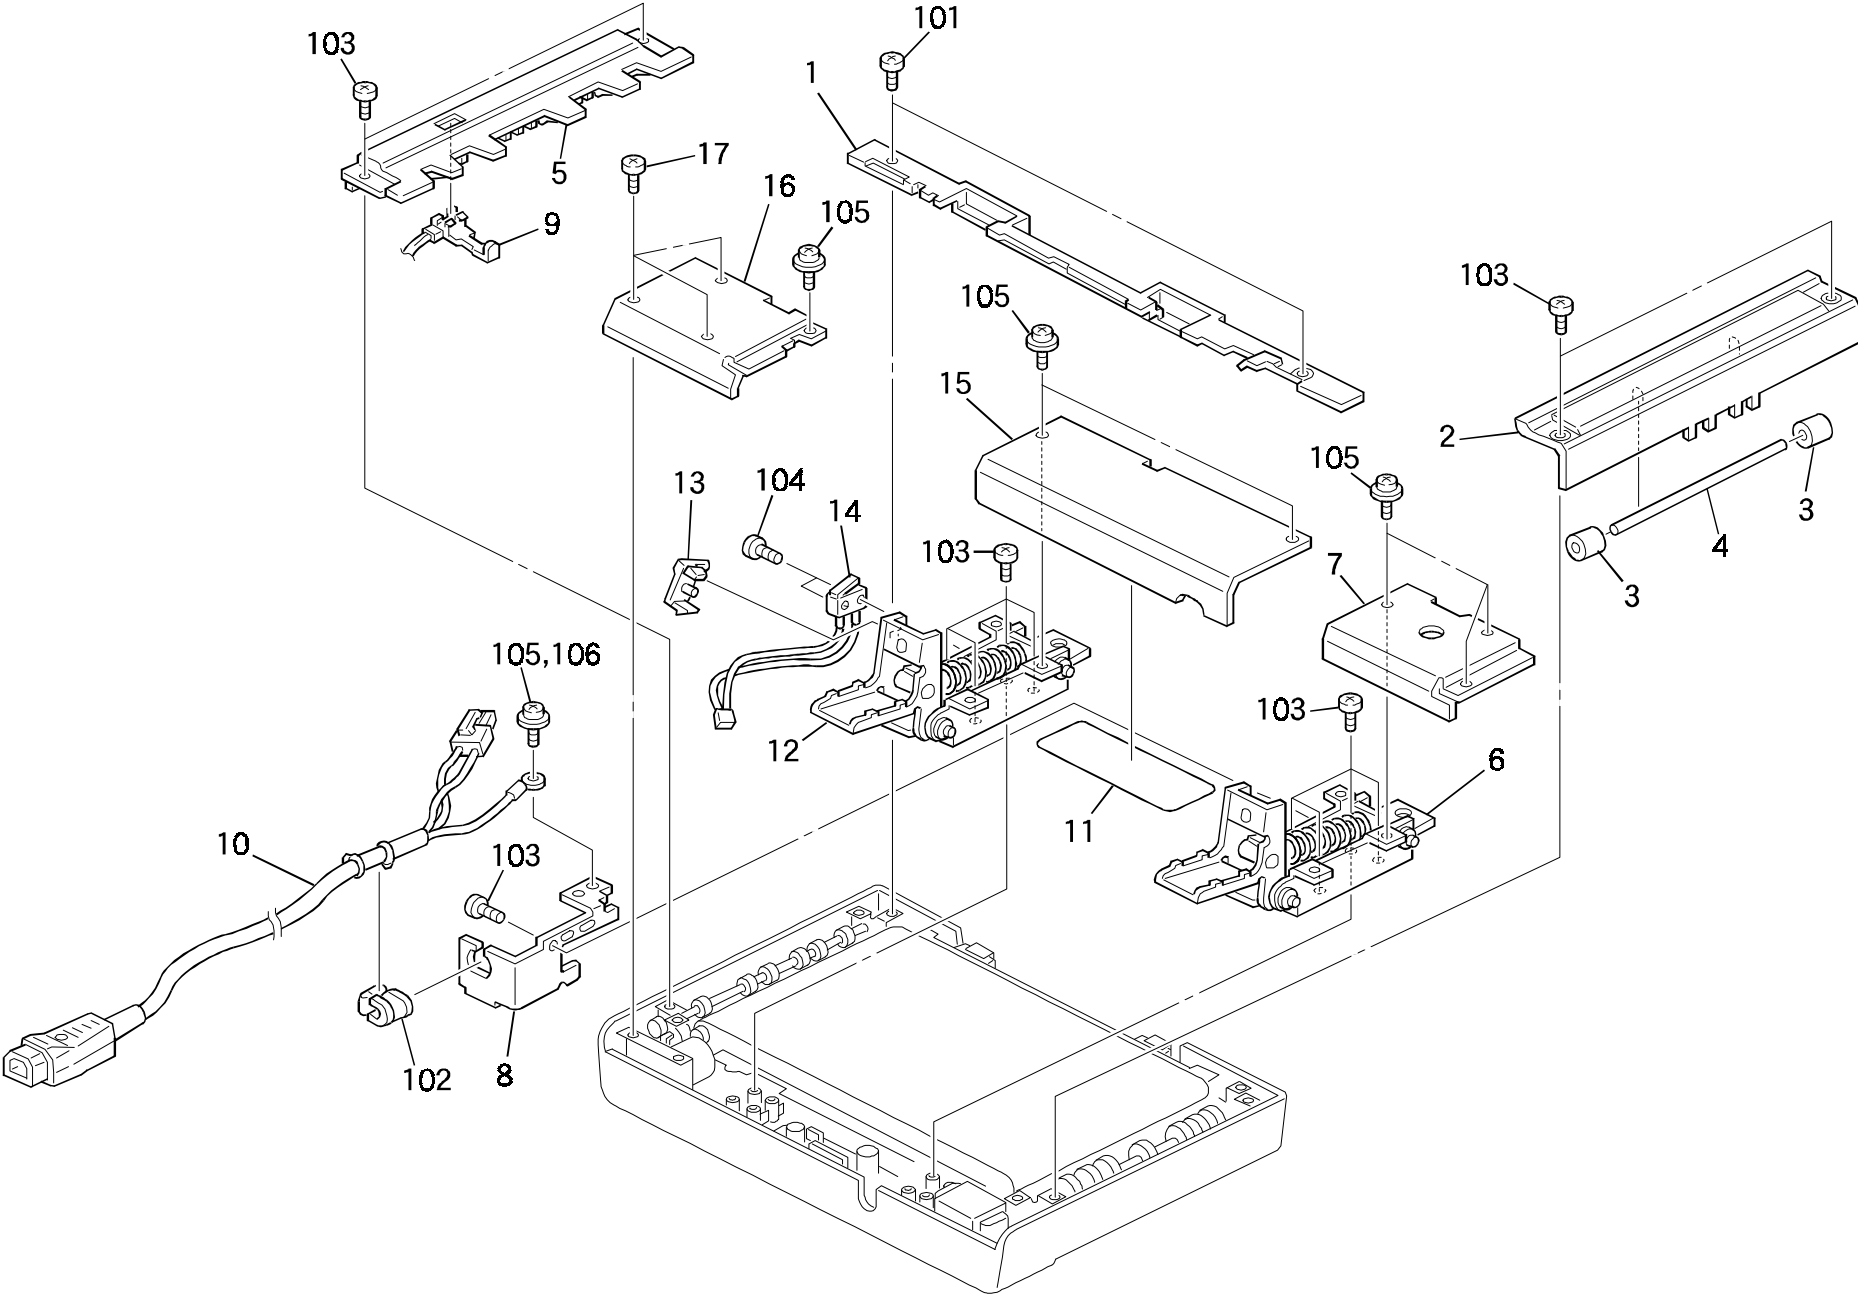


2. EXTERIOR 2 (A622)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A662 1325	Grip Cover	1
2	A365 1217	Paper Exit Guide	1
3	A365 1222	Exit Support Roller	2
4	A365 1221	Support Roller Shaft	1
5	A365 1070	Paper Feed Guide	1
6	A395 1410	Right Hinge	1
7	A365 1584	Transformer Cover	1
8	A365 1482	Grounding Bracket	1
9	A365 5335	Registration Sensor	1
10	A365 5231	Power Supply Harness - 115V	1
10	A365 5232	Power Supply Harhess - 220V/240V	1
11	A365 2030	Decal - Mode	1
12	A365 1400	Left Hinge	1
13	A365 1480	Lift Sensor Actuator	1
14	G648 5320	Microswitch	1
15	A365 1583	Main Board Cover	1
16	A395 1582	Paper Feed Cover	3
17	5875 2088	Shoulder Screw - M4	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0344 0060W	Philips Truss Head Screw - M4x6	
102	1106 0713	Cable Holder	
103	0314 0060W	Philips Pan Head Screw - M4x6	
104	0252 0080W	Screw - M2X8	
105	0801 0137	Philips Pan Head Screw With Spring	
106	0801 1185	Philips Truss Head Screw - M4x8	

3. FEED-IN SECTION (A662)

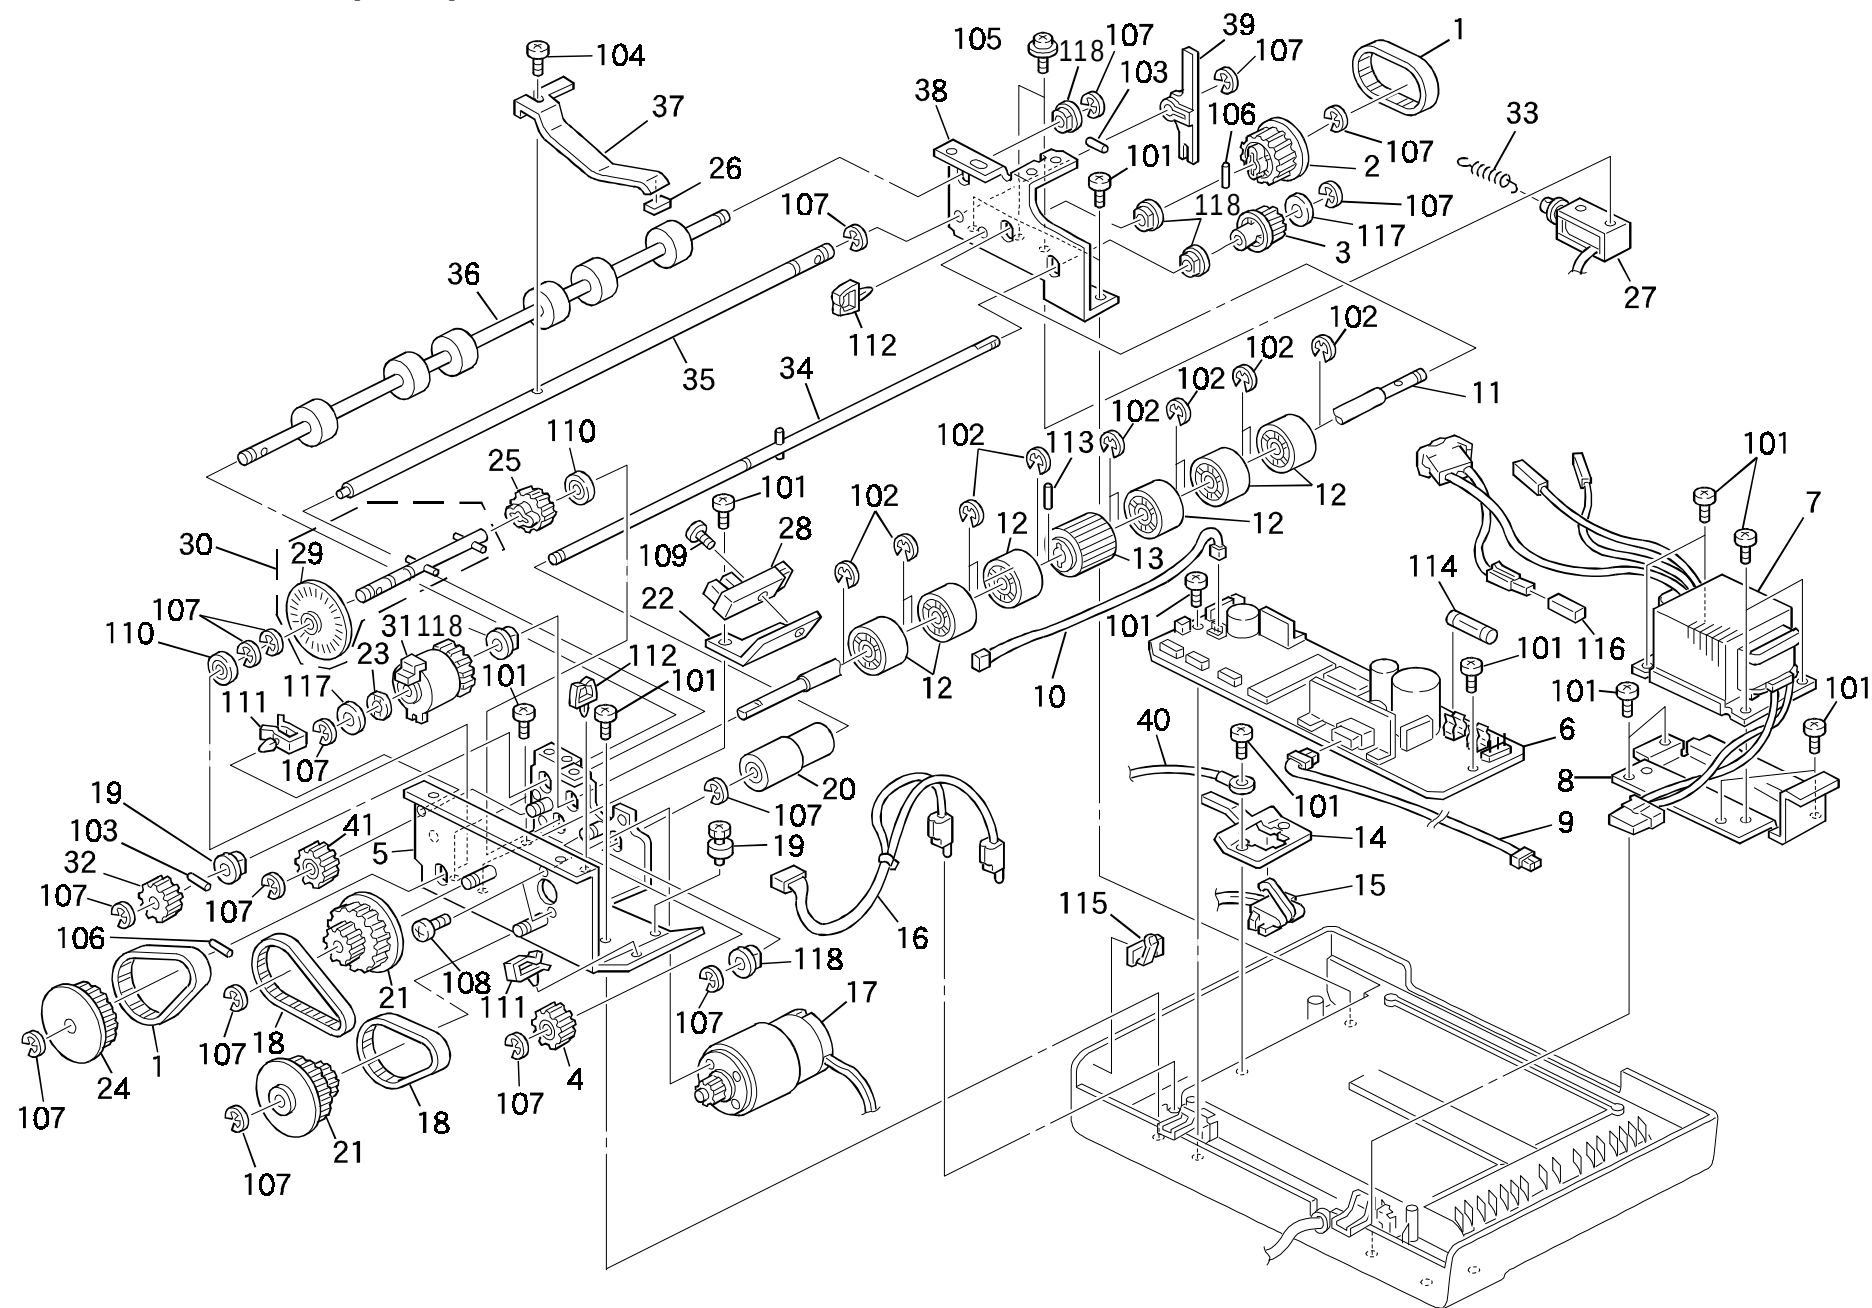


3. FEED-IN SECTION (A662)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A365 1051	Timing Belt - 122XL	1
2	A365 1045	Pick-up Pulley - Large	1
3	A365 1046	Pick-up Pulley - Small	1
4	A395 1018	Left Middle Gear	1
5	A395 1004	Rear Pulley Support Plate	1
6	A662 5010	Main Control Board	1
7	A365 5181	Transformer - 115V	1
7	A365 5182	Transformer - 220V/240V	1
8	A365 1315	Transformer Bracket	1
9	A300 5621	Optical Fiber Harness	1
10	A365 5221	Encoder Harness	1
11	A365 1026	Feed Roller Shaft	1
12	5940 1088	Upper Relay Feed Roller	6
13	A365 1027	Feed Roller	1
14	A365 1055	Set Sensor Bracket	1
15	A365 5338	Original Set Sensor	1
16	A395 5260	DF LED Ass'y	1
17	A365 5090	Main Motor - DC 9W	1
18	A365 1024	Timing Belt - 122XD - Orange	2
19	A395 1091	Cushion - Paper Feed - Inner Back	1
20	A365 1040	Pick-up Roller	1
21	A365 1011	Gear 18/40z	2
22	A365 1005	Photointerruptor Bracket	1
23	5443 2713	Wave Washer	1
24	A365 1012	Gear - 40Z	1
25	A395 1010	Joint Gear	1
26	A365 1085	Cushion - 3x6x10	1
27	A365 5324	Pick-up Solenoid	1
28	AW02 0041	Photointerruptor	1
29	A365 1032	Pulse Generator	1
30	A395 1029	Joint Drive Shaft	1
31	AX21 0057	Magnetic Clutch - 0.34n-m Z30	1
32	A395 1023	Drive Gear	1
33	A365 1063	Pick-up Release Spring	1
34	A365 1038	Pick-up Roller Shaft	1

Index No.	Part No.	Description	Q'ty Per Assembly
35	A365 1059	Pick-up Lever Shaft	1
36	A365 1022	Pull-out Roller	1
37	A365 1060	Pick-up Lever	1
38	A365 1007	Front Side Bracket	1
39	A365 1062	Lever - Pick-up Solenoid	1
40	A365 5250	Ground Wire	1
41	A395 1019	Right Middle Gear	1
101	0314 0060W	Philips Pan Head Screw - M4x6	
102	0720 0060E	Retaining Ring - M6	
103	0632 0080G	Parallel Key - 2x8mm	
104	0313 0050W	Philips Pan Head Screw - M3x5	
105	0313 0030W	Philips Pan Head Screw - M3x3	
106	0632 0120G	Parallel Pin - 2x12	
107	0720 0040E	Retaining Ring - M4	
108	0313 0040W	Philips Pan Head Screw - M3x4	
109	0314 0100W	Philips Pan Head Screw - M4x10	
110	0741 3506	Ball Bearing - 6x12x4mm	
111	1105 0087	Clamp	
112	1105 0199	Clamp	
113	0632 0120G	Parallel Pin - 2x12	
114	1107 0617	Fuse (glass Case) - 2.0A - 250V	
115	1105 0109	Cord Keep	
116	1102 5970	Plug Housing - Lp-01	
117	0701 0060B	Flat Washer - M6	
118	0805 3366	Bushing - 6mm	

4. TRANSPORT AND EXIT SECTION (A662)

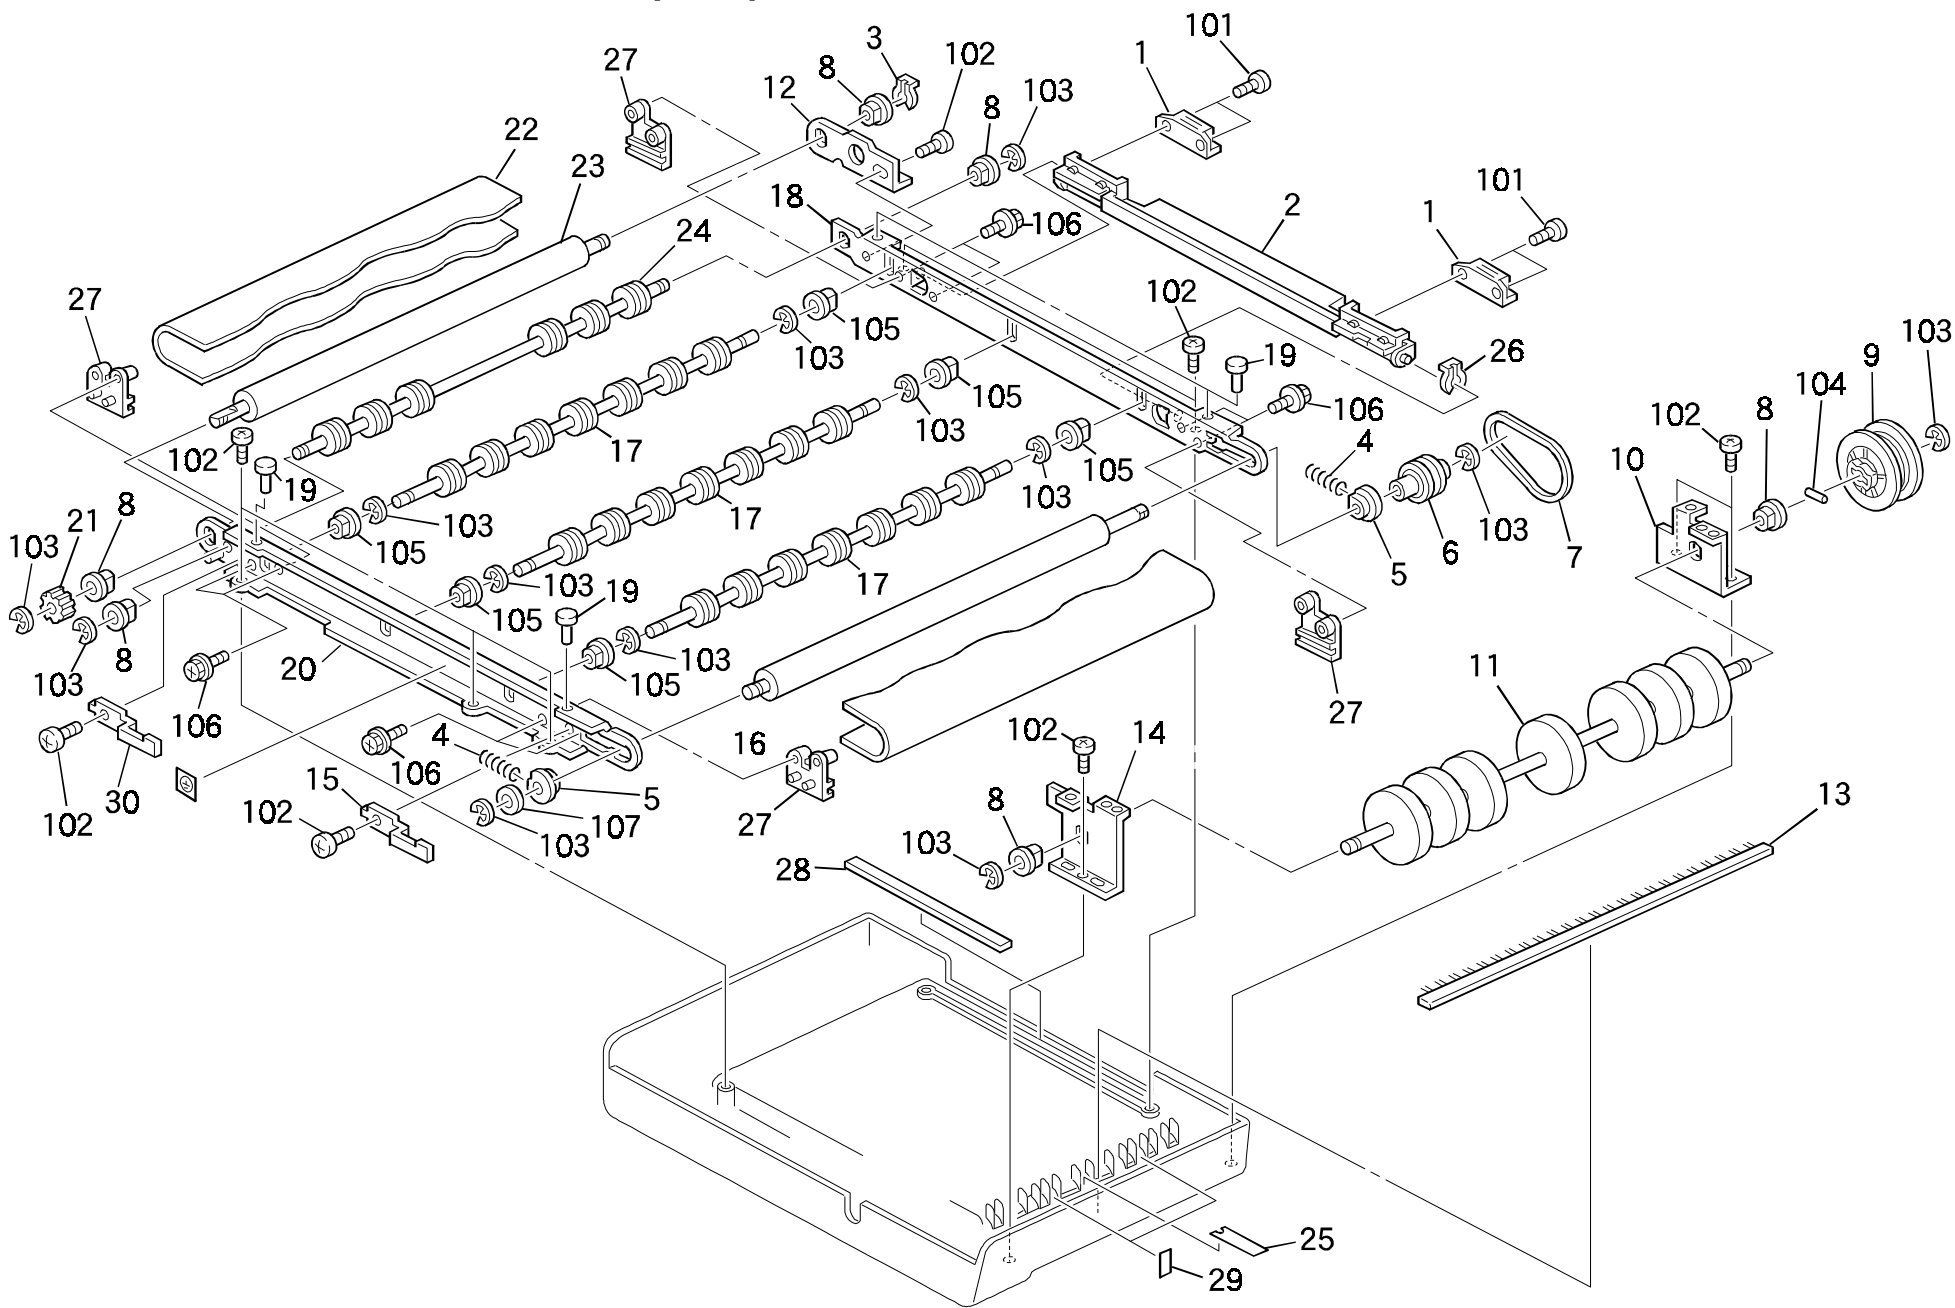

4. TRANSPORT AND EXIT SECTION (A662)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AG07 0004	Magnetic Catch	1
2	A662 1336	Magnet Holder	1
3	5447 2681	Snap Ring	1
4	A365 1114	Belt Tension Spring	1
5	A365 1195	Bushing - 6mm	1
6	A365 1186	Exit Pulley - Small	1
7	A365 1208	Exit Roller Drive Belt	1
8	5053 0447	Bushing - 6mm	1
9	A365 1205	Exit Roller Drive Pulley	1
10	A365 1211	Front Exit Guide Bracket	1
11	A365 1201	Exit Roller	1
12	A395 1117	Small Side Plate	1
13	A395 1248	Discharge Brush - Exit	1
14	A365 1213	Rear Exit Guide Bracket	1
15	A365 1190	Grounding Plate	1
16	A395 1184	Belt Driven Roller	1
17	A365 1118	Belt Tension Roller	1
18	A365 1106	Front Frame - Main	1
19	A422 1108	Stopper	1
20	A395 1111	Rear Side Plate	1
21	A395 1170	Belt Drive Gear	1
22	A465 1127	Transport Belt	1
23	A395 1174	Belt Drive Roller	1
24	A365 1176	Belt Pressure	1
25	A365 1255	Mylar - 10x85mm	1
26	G011 3275	Snap Ring	1
27	A365 1130	Transport Belt Guide	1
28	A365 1394	Cushion - 3x10x220	1
29	A395 1218	Shield - Exit	1
30	A395 1108	Grounding Plate	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0353 0050W	Tapping Screw - M3x5	
102	0314 0060W	Philips Pan Head Screw - M4x6	
103	0720 0040E	Retaining Ring - M4	
104	0632 0120G	Parallel Pin - 2x12	
105	0805 3383	Bushing - M5	
106	0433 0082B	Tapping Screw - M3x8	
107	0807 4138	Washer (100pcs/set)	

5. DF MAIN BOARD (A662)

AR

SYMBOL NO.	INDEX NO.
AR1	129
AR2	129
AR3	129

BR

SYMBOL NO.	INDEX NO.
BR1	116

CAPACITOR

SYMBOL NO.	INDEX NO.
C1	---
C2	135
C3	135
C4	135
C5	137
C6	---
C7	137
C8	149
C9	135
C10	137

SYMBOL NO.	INDEX NO.
C11	137
C12	137
C13	137
C14	137
C15	150
C16	137
C17	137
C18	134
C18	133
C20	137

SYMBOL NO.	INDEX NO.
C21	132
C22	137
C23	138
C24	151
C25	137

CONNECTOR

SYMBOL NO.	INDEX NO.
CN101	102
CN110	105
CN111	107
CN112	106
CN113	110
CN114	108
CN115	103
CN116	109
CN117	101
CN118	104

DIODE

SYMBOL NO.	INDEX NO.
D1	118
D2	118
D3	115
D4	115

FUSE

SYMBOL NO.	INDEX NO.
F1	113
(CLIP)	112

L

SYMBOL NO.	INDEX NO.
L1	131
L2	139

OSC

SYMBOL NO.	INDEX NO.
OSC1	127

IC

SYMBOL NO.	INDEX NO.
IC1	120
IC2	121
IC3	125
IC4	122
IC5	126
IC6	119
IC7	5
(SOCKET)	111
IC8	124
IC9	123

RESISTOR

SYMBOL NO.	INDEX NO.
R1	---
R2	141
R3	140
R4	141
R5	142
R6	147
R7	144
R8	142
R9	142
R10	143

SYMBOL NO.	INDEX NO.
R11	---
R12	---
R13	143
R14	142
R15	144
R16	140
R17	140
R18	140
R19	147
R20	140

SYMBOL NO.	INDEX NO.
R21	140
R22	146
R23	141
R24	128
R25	142
R26	145

TP

SYMBOL NO.	INDEX NO.
TP1	100
TP4	100
TP5	100
TP6	100

SW

SYMBOL NO.	INDEX NO.
SW1	114

L

SYMBOL NO.	INDEX NO.
VR1	130

5. DF MAIN BOARD (A662)

Index No.	Part No.	Description	Q'ty Per Assembly
*	A662 5010	Main Control Board	1
1	A365 5172	Heat Sink	1
2	A365 5176	Heat Sink	1
3	A365 5350	Insulation Sheet	1
4	A365 5355	Insulation Sheet	1
5	A662 5110	IC - EPROM 32KX8	1
100	1101 0328	Connector Pin Contact	
101	1102 0901	Connector	
102	1102 1077	Connector - 3p	
103	1102 4201	Connector - 2p	
104	1102 5003	Fiber Connector - Dc1002 - 2p	
105	1102 5887	Connector - 3p	
106	1103 1392	Connector - 2p	
107	1103 1542	Connector - 3p	
108	1103 1726	Connector - 4p	
109	1103 1768	Connector - 2p	
110	1103 1769	Connector - 3p	
111	1104 0271	IC Socket - 28P	
112	1104 0577	Fuse Holder	
113	1107 0617	Fuse (glass Case) - 2.0A - 250V	
114	1204 1422	Dip Switch - 51D-0401	
115	1401 0821	Diode - 1SS133	
116	1402 0601	Diode - Rbv - 401	

Index No.	Part No.	Description	Q'ty Per Assembly
117	1402 1125	Zener Diode - 1W - RD33FB2	
118	1402 1372	Silicon Diode-1SR139-400	
119	1407 1026	IC - SN74LS373N	
120	1407 1964	IC - TD62304AP	
121	1407 3092	IC - Cmos - TC74HC08AP	
122	1407 3410	IC - MPD78C10ACW	
123	1408 0402	IC - STR2024	
124	1408 0638	IC - 7805A	
125	1408 0826	IC - TA8428K	
126	1408 1265	IC - PST600D	
127	1503 0347	Oscillator - 12mhz	
128	1600 1837	Resistor-75Ω 5W	
129	1601 7220	Resistor Array - 10K Ω 1/8W	
130	1601 8170	Resistor - 10K Ω	
131	1602 0953	Coil - 800uh 2.5A	
132	1604 2448	Capacitor - 4700μF ±20% 50V	
133	1604 2454	Capacitor - 1000μF 50V	
134	1604 4473	Capacitor-330μF 16V	
135	1605 0433	Ceramic Capacitor - 0.01μF 50V	
136	1605 0591	Ceramic Capacitor - 1000pf±10% 50V	
137	1606 0807	Capacitor - 0.1μF +80%-20% 50V	
138	1606 1508	Capacitor - 10000PF 500V	
139	1607 0920	Choke-hp-023z	
140	1611 7103	Resistor - 10k Ω 1/4W	
141	1611 7151	Resistor - 150Ω 1/4W	
142	1611 7222	Resistor - 2.2k Ω 1/4W	
143	1611 7271	Resistor - 270Ω 1/4W	
144	1611 7333	Resistor - 33k Ω 1/4W	
146	1611 7470	Resistor - 47Ω 1/4W	
147	1611 7472	Resistor - 4.7k Ω 1/4W	
148	1611 8100	Resistor - 10 Ω +/5% 1/4W	
149	1640 5100	Capacitor - 10μF +20% 35V	
150	1640 5479	Capacitor - 4.7μF ±20% 50V	
151	1642 5479	Capacitor - 4.7μF 50V	

PARTS INDEX

PM Parts Index

[illegible]

Parts Index

Part No.	Description	Page and Index No.
A662 0630	Original Table Ass'y	5- 18
A662 0662	ADF Bracket	5- 27
A662 1160	ADF Inner Bracket	5- 30
A662 1310	ADF Cover	5- 17
A662 1325	Grip Cover	7- 1
A662 1336	Magnet Holder	11- 2
A662 1352	Friction Belt Holder	5- 13
A662 1361	Stepped Screw	5- 32
A662 1370	Original Table	5- 4
A662 1375	Front Side Guide	5- 1
A662 1380	Rear Side Guide	5- 2
A662 1395	Decal - Original	5- 33
A662 2060	Decal - Set	5- 10
A662 5010	Main Control Board	9- 6
A662 5010	Main Control Board	13- *
A662 5110	IC - EPROM 32KX8	13- 5
A662 5316	DF Harness - 115V	5- 29
A662 5317	DF Harness - 230V	5- 29

Part No.	Description	Page and Index No.
AA14 3183	Stepped Screw	5- 22
AG07 0004	Magnetic Catch	11- 1
AW02 0041	Photointerruptor	9- 28
AX21 0057	Magnetic Clutch - 0.34n-m Z30	9- 31
G011 3275	Snap Ring	11- 26
G648 5320	Microswitch	7- 14

Part No.	Description	Page and Index No.
A077 1162	ADF Bracket	5- 31
A300 5621	Optical Fiber Harness	9- 9
A365 1005	Photointerruptor Bracket	9- 22
A365 1007	Front Side Bracket	9- 38
A365 1011	Gear 18/40z	9- 21
A365 1012	Gear - 40Z	9- 24
A365 1022	Pull-out Roller	9- 36
A365 1024	Timing Belt - 122XD - Orange	9- 18
A365 1026	Feed Roller Shaft	9- 11
A365 1027	Feed Roller	9- 13
A365 1032	Pulse Generator	9- 29
A365 1038	Pick-up Roller Shaft	9- 34
A365 1040	Pick-up Roller	9- 20
A365 1045	Pick-up Pulley - Large	9- 2
A365 1046	Pick-up Pulley - Small	9- 3
A365 1051	Timing Belt - 122XL	9- 1
A365 1055	Set Sensor Bracket	9- 14
A365 1059	Pick-up Lever Shaft	9- 35
A365 1060	Pick-up Lever	9- 37
A365 1062	Lever - Pick-up Solenoid	9- 39
A365 1063	Pick-up Release Spring	9- 33
A365 1070	Paper Feed Guide	7- 5
A365 1085	Cushion - 3x6x10	9- 26
A365 1106	Front Frame - Main	11- 18
A365 1114	Belt Tension Spring	11- 4
A365 1118	Belt Tension Roller	11- 17
A365 1130	Transport Belt Guide	11- 27
A365 1176	Belt Pressure	11- 24
A365 1186	Exit Pulley - Small	11- 6
A365 1190	Grounding Plate	11- 15
A365 1195	Bushing - 6mm	11- 5
A365 1201	Exit Roller	11- 11
A365 1205	Exit Roller Drive Pulley	11- 9
A365 1208	Exit Roller Drive Belt	11- 7
A365 1211	Front Exit Guide Bracket	11- 10

Part No.	Description	Page and Index No
A365 1213	Rear Exit Guide Bracket	11- 14
A365 1217	Paper Exit Guide	7- 2
A365 1221	Support Roller Shaft	7- 4
A365 1222	Exit Support Roller	7- 3
A365 1255	Mylar - 10x85mm	11- 25
A365 1315	Transformer Bracket	9- 8
A365 1390	Rack Guide Bracket	5- 6
A365 1394	Cushion - 3x10x220	11- 28
A365 1400	Left Hinge	7- 12
A365 1480	Lift Sensor Actuator	7- 13
A365 1482	Grounding Bracket	7- 8
A365 1485	Upper Unit Stand	5- 34
A365 1486	Magnet	5- 23
A365 1495	Knob Screw	5- 20
A365 1583	Main Board Cover	7- 15
A365 1584	Transformer Cover	7- 7
A365 2030	Decal - Mode	7- 11
A365 2080	Instruction Decal	5- 24
A365 5090	Main Motor - DC 9W	9- 17
A365 5121	Interface Board - ADF	5- 28
A365 5172	Heat Sink	13- 1
A365 5176	Heat Sink	13- 2
A365 5181	Transformer - 115V	9- 7
A365 5182	Transformer - 220V/240V	9- 7
A365 5221	Encoder Harness	9- 10
A365 5231	Power Supply Harness - 115V	7- 10
A365 5232	Power Supply Harhess - 220V/240V	7- 10
A365 5250	Ground Wire	9- 40
A365 5324	Pick-up Solenoid	9- 27
A365 5335	Registration Sensor	7- 9
A365 5338	Original Set Sensor	9- 15
A365 5350	Insulation Sheet	13- 3
A365 5355	Insulation Sheet	13- 4
A365 6001	Screw Driver	5- 25
A395 1004	Rear Pulley Support Plate	9- 5

Part No.	Description	Page and Index No.
A395 1010	Joint Gear	9- 25
A395 1018	Left Middle Gear	9- 4
A395 1019	Right Middle Gear	9- 41
A395 1023	Drive Gear	9- 32
A395 1029	Joint Drive Shaft	9- 30
A395 1091	Cushion - Paper Feed - Inner Back	9- 19
A395 1108	Grounding Plate	11- 30
A395 1111	Rear Side Plate	11- 20
A395 1117	Small Side Plate	11- 12
A395 1170	Belt Drive Gear	11- 21
A395 1174	Belt Drive Roller	11- 23
A395 1184	Belt Driven Roller	11- 16
A395 1218	Shield - Exit	11- 29
A395 1248	Discharge Brush - Exit	11- 13
A395 1390	Lower Original Holder Ass'y	5- 5
A395 1394	Rear Seal - Original Table	5- 21
A395 1410	Right Hinge	7- 6
A395 1582	Paper Feed Cover	7- 16
A395 2020	Cover - LED	5- 16
A395 5260	DF LED Ass'y	9- 16
A422 1108	Stopper	11- 19
A422 1355	Friction Belt Spring	5- 15
A422 1356	Pin - 3x26mm	5- 14
A422 1361	Rack - Side Guide	5- 9
A465 1127	Transport Belt	11- 22
A497 1170	Friction Belt	5- 11
5053 0447	Bushing - 6mm	11- 8
5443 2657	Gear - 28Z	5- 7
5443 2712	Cork Pad	5- 19
5443 2713	Wave Washer	5- 8
5443 2713	Wave Washer	9- 23
5446 5832	Connector Guide Pin	5- 26
5447 2681	Snap Ring	11- 3
5875 2088	Shoulder Screw - M4	5- 12
5875 2088	Shoulder Screw - M4	7- 17

Part No.	Description	Page and Index No
5894 2747	Mylar - Original Guides	5- 3
5940 1088	Upper Relay Feed Roller	9- 12

Part No.	Description	Page and Index No.
0252 0080W	Screw - M2X8	7-104
0313 0030W	Philips Pan Head Screw - M3x3	9-105
0313 0040W	Philips Pan Head Screw - M3x4	9-108
0313 0050W	Philips Pan Head Screw - M3x5	9-104
0314 0060W	Philips Pan Head Screw - M4x6	7-103
0314 0060W	Philips Pan Head Screw - M4x6	9-101
0314 0060W	Philips Pan Head Screw - M4x6	11-102
0314 0100W	Philips Pan Head Screw - M4x10	9-109
0323 0060W	Philips Sunken Head Screw - M3x6	5-102
0344 0060W	Philips Truss Head Screw - M4x6	7-101
0353 0050W	Tapping Screw - M3x5	11-101
0413 0082W	Tapping Screw - M3x8	5-101
0433 0082B	Tapping Screw - M3x8	11-106
0451 3006B	Tapping Screw - M3x6	5-107
0632 0080G	Parallel Key - 2x8mm	9-103
0632 0120G	Parallel Pin - 2x12	9-106
0632 0120G	Parallel Pin - 2x12	9-113
0632 0120G	Parallel Pin - 2x12	11-104
0701 0060B	Flat Washer - M6	9-117
0720 0040E	Retaining Ring - M4	9-107
0720 0040E	Retaining Ring - M4	11-103
0720 0060E	Retaining Ring - M6	9-102
0741 3506	Ball Bearing - 6x12x4mm	9-110
0801 0137	Philips Pan Head Screw With Spring	7-105
0801 1185	Philips Truss Head Screw - M4x8	7-106
0805 3366	Bushing - 6mm	9-118
0805 3383	Bushing - M5	11-105
0807 4138	Washer (100pcs/set)	11-107
0950 3008W	Philips Screw With Lock Washer - M3x8	5-103
0950 4006W	Philips Screw With Lock Washer - M4x6	5-104
1101 0328	Connector Pin Contact	13-100
1102 0901	Connector	13-101
1102 1077	Connector - 3p	13-102
1102 4201	Connector - 2p	13-103
1102 5003	Fiber Connector - Dc1002 - 2p	13-104

Part No.	Description	Page and Index No.
1102 5887	Connector - 3p	13-105
1102 5970	Plug Housing - Lp-01	9-116
1103 1392	Connector - 2p	13-106
1103 1542	Connector - 3p	13-107
1103 1726	Connector - 4p	13-108
1103 1768	Connector - 2p	13-109
1103 1769	Connector - 3p	13-110
1104 0271	IC Socket - 28P	13-111
1104 0577	Fuse Holder	13-112
1105 0087	Clamp	9-111
1105 0109	Cord Keep	9-115
1105 0160	Clamp	5-105
1105 0199	Clamp	9-112
1105 0267	Wire Clamp	5-106
1106 0713	Cable Holder	7-102
1107 0617	Fuse (glass Case) - 2.0A - 250V	9-114
1107 0617	Fuse (glass Case) - 2.0A - 250V	13-113
1204 1422	Dip Switch - 51D-0401	13-114
1401 0821	Diode - 1SS133	13-115
1402 0601	Diode - Rbv - 401	13-116
1402 1125	Zener Diode - 1W - RD33FB2	13-117
1402 1372	Silicon Diode-1SR139-400	13-118
1407 1026	IC - SN74LS373N	13-119
1407 1964	IC - TD62304AP	13-120
1407 3092	IC - Cmos - TC74HC08AP	13-121
1407 3410	IC - MPD78C10ACW	13-122
1408 0402	IC - STR2024	13-123
1408 0638	IC - 7805A	13-124
1408 0826	IC - TA8428K	13-125
1408 1265	IC - PST600D	13-126
1503 0347	Oscillator - 12mhz	13-127
1600 1837	Resistor-75Ω 5W	13-128
1601 7220	Resistor Array - 10K Ω 1/8W	13-129
1601 8170	Resistor - 10K Ω	13-130
1602 0953	Coil - 800uh 2.5A	13-131

Part No.	Description	Page and Index No.
1604 2448	Capacitor - 4700 μ F $\pm$ 20% 50V	13-132
1604 2454	Capacitor - 1000 μ F 50V	13-133
1604 4473	Capacitor-330 μ F 16V	13-134
1605 0433	Ceramic Capacitor - 0.01 μ F 50V	13-135
1605 0591	Ceramic Capacitor - 1000pf $\pm$ 10% 50V	13-136
1606 0807	Capacitor - 0.1 μ F +80%-20% 50V	13-137
1606 1508	Capacitor - 10000PF 500V	13-138
1607 0920	Choke-hp-023z	13-139
1611 7103	Resistor - 10k Ω 1/4W	13-140
1611 7151	Resistor - 150 Ω 1/4W	13-141
1611 7222	Resistor - 2.2k Ω 1/4W	13-142
1611 7271	Resistor - 270 Ω 1/4W	13-143
1611 7333	Resistor - 33k Ω 1/4W	13-144
1611 7470	Resistor - 47 Ω 1/4W	13-146
1611 7472	Resistor - 4.7k Ω 1/4W	13-147
1611 8100	Resistor - 10 Ω +/5% 1/4W	13-148
1640 5100	Capacitor - 10 μ F +20% 35V	13-149
1640 5479	Capacitor - 4.7 μ F $\pm$ 20% 50V	13-150
1642 5479	Capacitor - 4.7 μ F 50V	13-151

Part No.	Description	Page and Index No