


LARGE CAPACITY TRAY

(Machine Code: A609)

1. SPECIFICATIONS

Copy Paper Size:	A4 sideways B5 Sideways 8 1/2" x 11" sideways
Copy Paper Weight:	64 ~ 105 g/m ² 16~24 lb
Power Source:	DC24 V, 5V (from the copier)
Power Consumption:	48 W
Dimensions (W x D x H):	403 x 529 x 608 mm (15.9" x 20.9" x 24.0")
Weight:	19.8 kg (43.7 lb)
Tray Capacity:	3,500 sheets (may vary slightly depending on paper weight)

2. MECHANICAL COMPONENT LAYOUT

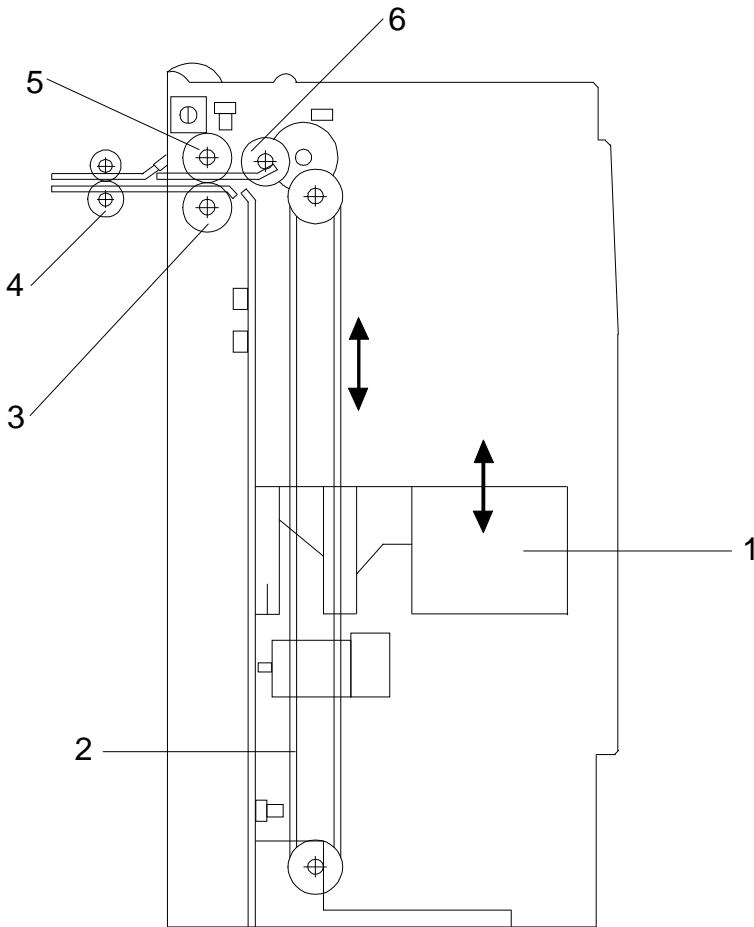


A609V500.wmf

1. Bottom Plate
2. Tray Drive Belt
3. Separation Roller
4. Transport Rollers
5. Feed Roller
6. Pick-up Roller

3. ELECTRICAL COMPONENT DESCRIPTION

Symbol	Name	Function	Index No.
Sensors			
S1	Paper End	Informs the CPU that there is no paper on the LCT bottom plate.	L2
S2	Paper Near End	Informs the CPU that about 60 sheets of paper remain on the LCT bottom plate.	L3
S3	Paper Position	Detects the paper position.	L4
S4	Tray Down	Informs the CPU that the LCT bottom plate is in the lowest position.	L6
S5	Feed	Controls the paper feed clutch off-on timing and the pick-up solenoid off timing.	L9
S6	Lift	Detects the correct paper feed height.	L10
Switches			
SW1	Feed Unit Cover	Detects if the feed unit cover is open or not. Note: There are two sensors.	L1
SW2	LCT Cover	Detects if the LCT cover is open or not. Note: There are three sensors.	L7
SW3	Tray Down	Lowers the LCT bottom plate.	L8
Motors			
M1	LCT	Lifts and lowers the LCT bottom plate to bring paper to the feed position and allow loading of the paper.	L5
M2	Feed	Drives all feed and transport rollers.	L13
Others			
SOL1	Pick-up	Controls the up-down movement of the pick-up roller.	L11
MC1	Feed	Starts paper feed from the LCT.	L12

4. MECHANICAL OPERATION

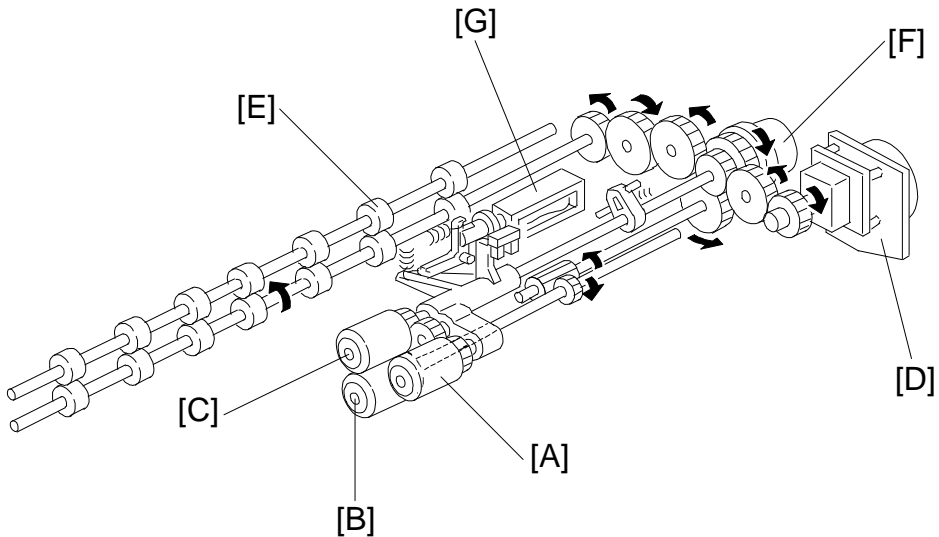

A609D500.wmf

The LCT uses an FRR feed system which uses three rollers.


The pick-up [A], separation [B] and feed [C] rollers are common with those of the by-pass feed unit of the mainframe but different from those of the paper feed stations in the paper tray unit.

The LCT feed motor [D] drives the pick-up, separation, feed, and transport [E] rollers.

The pick-up and feed rollers rotate only when the LCT feed clutch [F] activates.

Paper feeding starts when the LCT pick up solenoid [G] activates.


5. PAPER LIFT MECHANISM

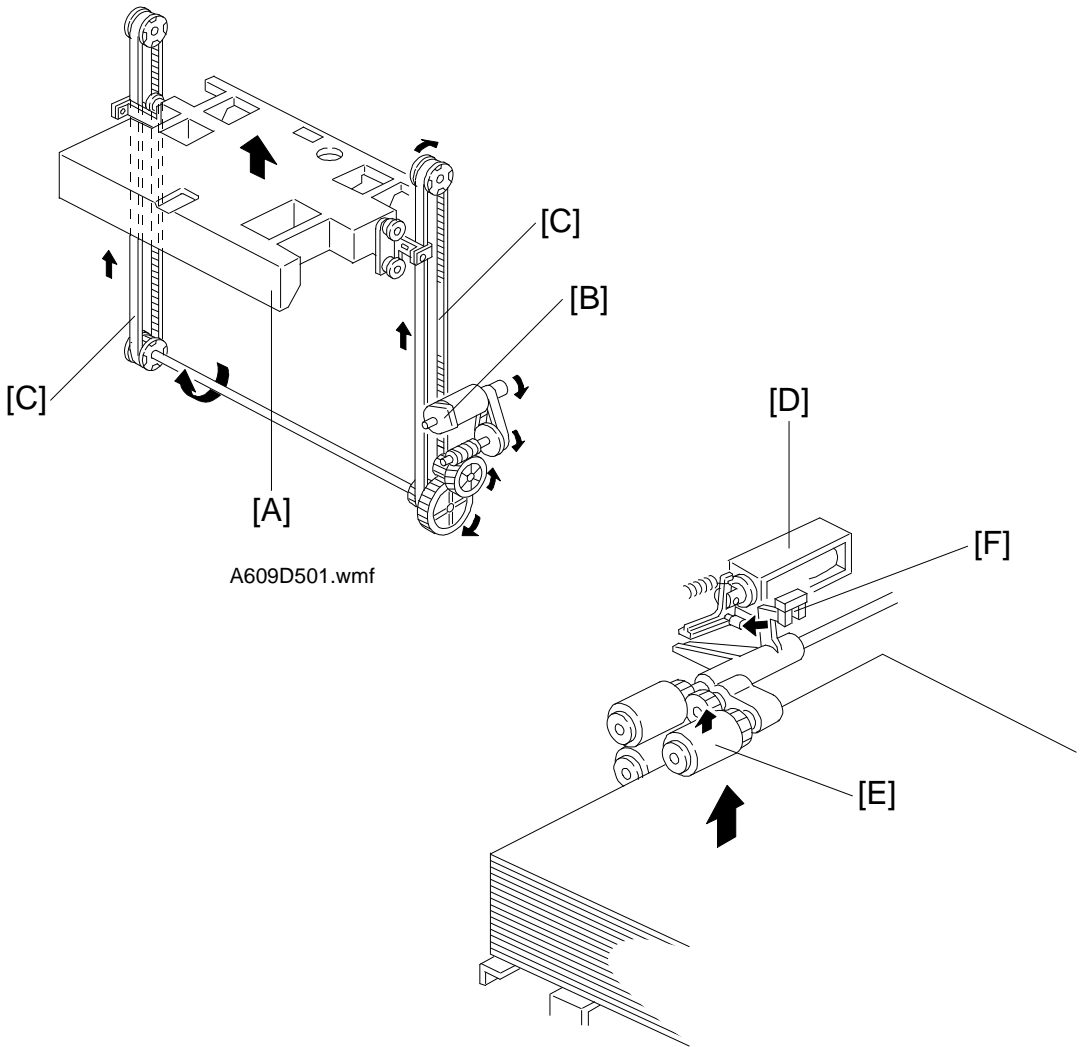

A609D501.wmf

A609D502.wmf

The bottom plate [A] of the LCT is raised and lowered by the LCT motor [B] and the drive belts [C]. When the main switch is on and the LCT cover is closed, the pick-up solenoid [D] activates and the LCT motor [B] rotates clockwise to raise the bottom plate until the top sheet pushes up the pick-up roller [E]. When the lift sensor [F] is de-actuated, the copier CPU de-activates the LCT motor [B] and the pick-up solenoid [D].

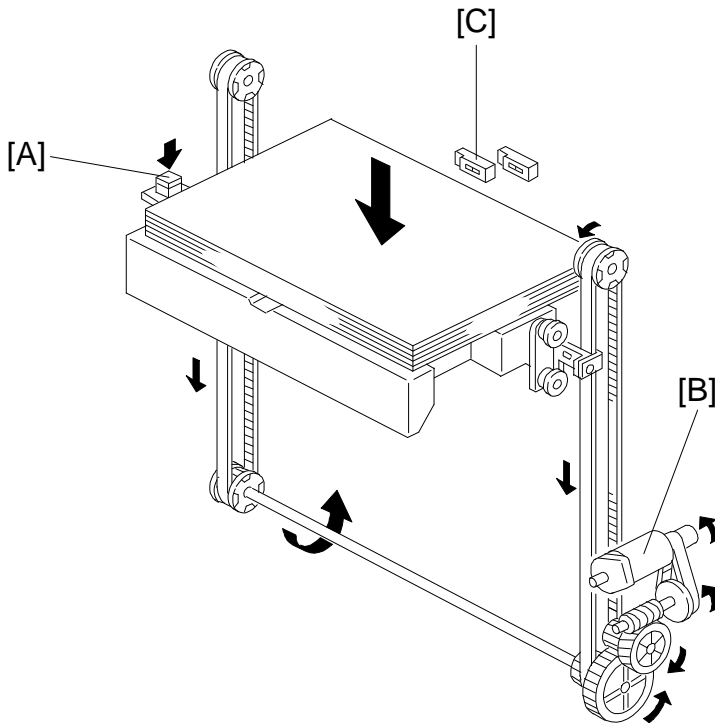


A609D503.wmf

If the tray down switch [A] is pressed, or paper runs out, or a paper jam occurs in the LCT, the LCT motor [B] rotates counterclockwise to lower the bottom plate. However, it is not lowered all the way down at this time. When the paper position sensor [C] activates, the LCT motor stops once. At this point, the bottom plate (or the top sheet of paper) is positioned about 5 cm below the top. This gives enough space for the customer to replenish about 500 sheets of paper.

If the tray down switch is then pressed again, the bottom plate moves down and stops once again when the top sheet of paper just passes the paper position sensor. In this way, the bottom plate is lowered 5 cm at each press of the tray down switch. This allows the customer to replenish paper in convenient amounts and at the same position.

6. PAPER END DETECTION

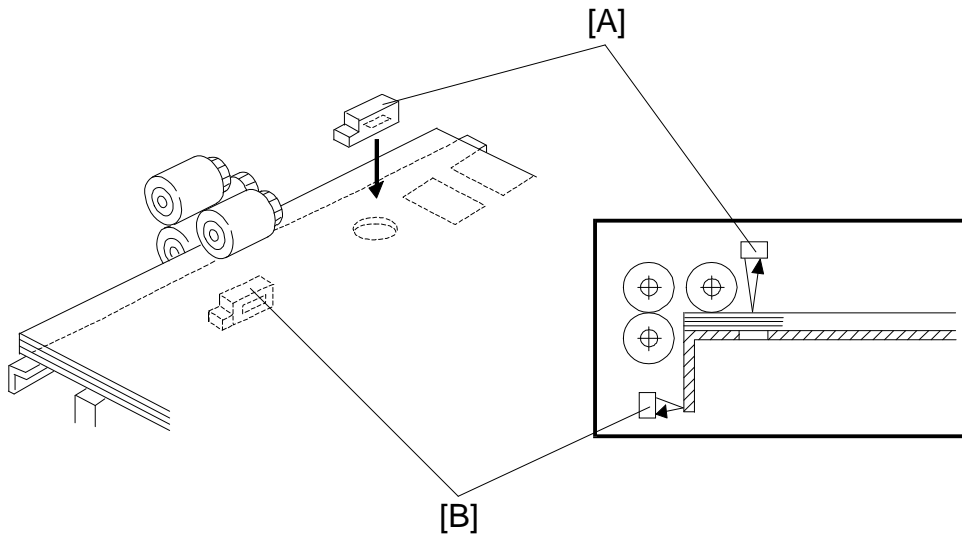

A609D504.wmf


The paper end sensor [A] detects paper on the bottom plate. If there is paper on the table, reflected light from the paper activates the paper end sensor. When the paper runs out, the paper end sensor de-activates and informs the copier CPU of the paper end condition.

The paper near end sensor [B] also detects the paper and the tray bottom plate. If there is enough paper on the table, reflected light from the paper activates the paper near end sensor.

If less than about 60 sheets of paper remain, the paper near end sensor de-activates because the black colored bottom plate does not reflect the light from the sensor LED.

7. REPLACEMENTS AND ADJUSTMENTS

7.1 PAPER FEED ROLLERS REPLACEMENT

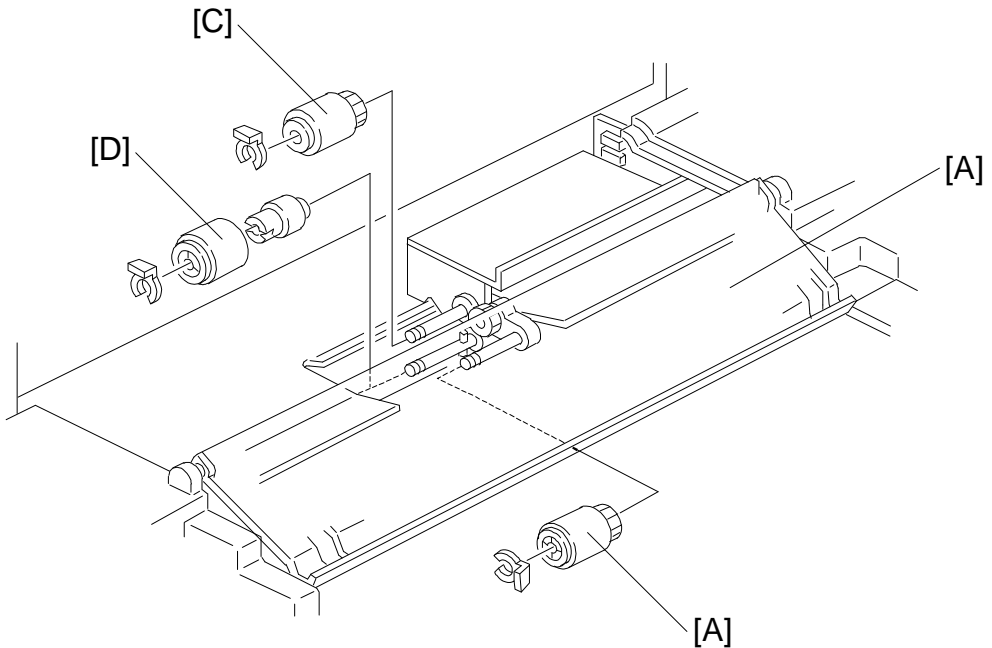


A609R500.wmf

1. Open the top cover [A].
2. Remove the pick-up roller [B] (1 snap ring).
3. Remove the feed roller [C] (1 snap ring).
4. Remove the separation roller [D] (1 snap ring).

NOTE: Do not touch the surface of the rollers with oily hands.
The paper feed rollers used in the LCT are different from rollers used in the 1st ~ 3rd feed units in the paper tray unit.

7.2 LCT FEED CLUTCH REMOVAL

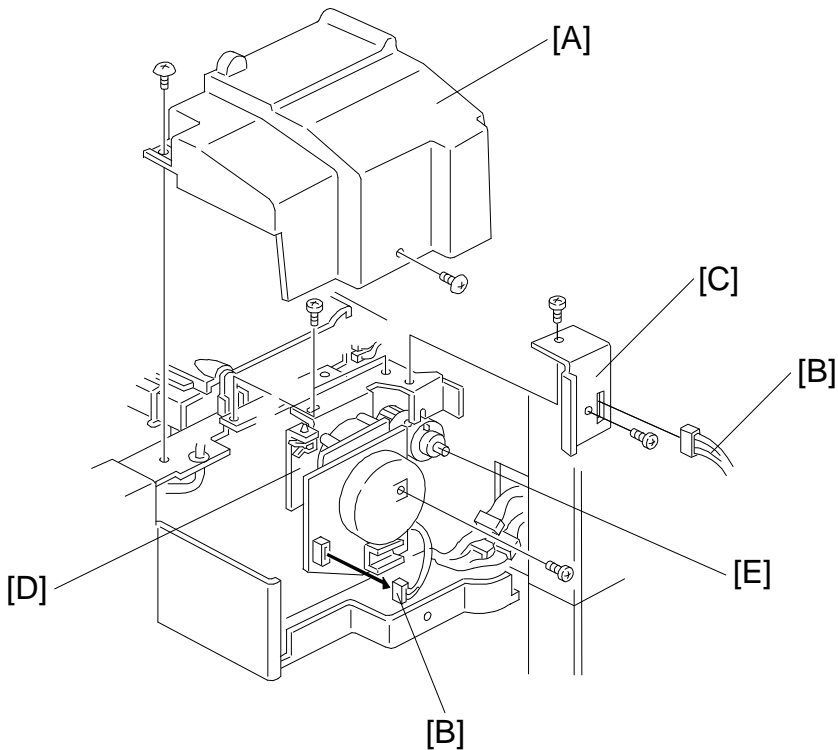


A609R501.wmf


1. Remove the rear upper cover [A] (2 screws).
2. Disconnect the two connectors [B].
3. Remove the harness bracket [C] (2 screws).
4. Remove the bracket [D] with the LCT feed motor (3 screws).
5. Replace the LCT feed clutch [E] (2 Allen screws).

NOTE: When installing the LCT feed clutch, set the stopper pin on the clutch in the cut-out [F] on the bracket.

7.3 UPPER COVER SWITCHES

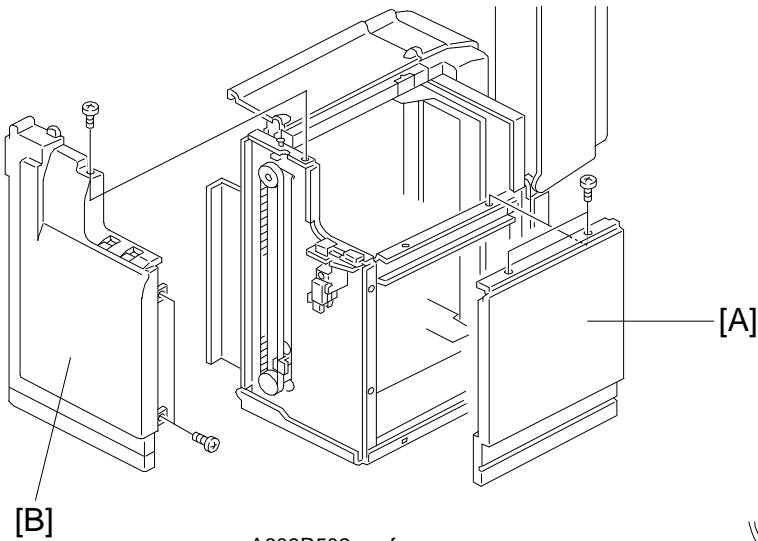

A609R502.wmf

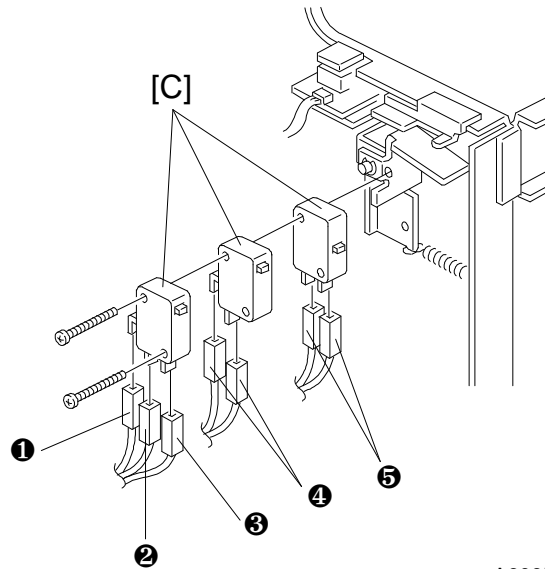


A609R503.wmf

1. Remove the right cover [A].
2. Remove the front cover [B].
3. Remove the upper cover switches [C].

NOTE: When installing the switches, set the connectors correctly.

- ❶ Yellow
- ❷ Blue
- ❸ Green
- ❹ Small white
- ❺ Large white

7.4 SIDE-TO-SIDE REGISTRATION ADJUSTMENT

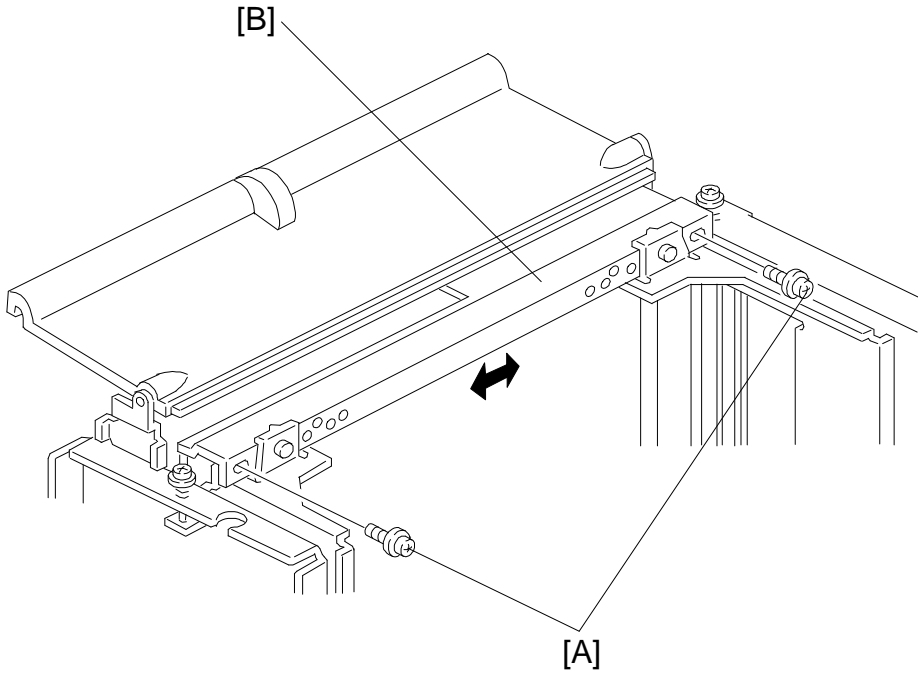

A609R504.wmf

- Rough Adjustment -

1. Loosen the two screws [A] fixing the stay [B].
2. Move the stay position to change the side-to-side paper position.

- Fine Adjustment -

1. Enter SP mode (refer to the service program access procedure) and access the side to side adjustment mode (SP Adjustment - PAGE 4).
2. Adjust side to side registration by changing the SP mode data.

NOTE: Copies can be made in SP mode. Touch the "Copy in SP" key to select the paper feed station.

Adjustment standard: less than ± 2 mm difference between the original and the copy.


7. LCT (A609)

7.1 ACCESSORY CHECK


Check the accessories in the box according to the following list:

Description	Q'ty
1. LCT feed unit	1
2. Small cover - left cover	1
3. Philips pan head screw - M4 x 6	3
4. Philips pan head screw - M4 x 16	3
5. Tapping screw - M4 x 8	1


7.2 INSTALLATION PROCEDURE

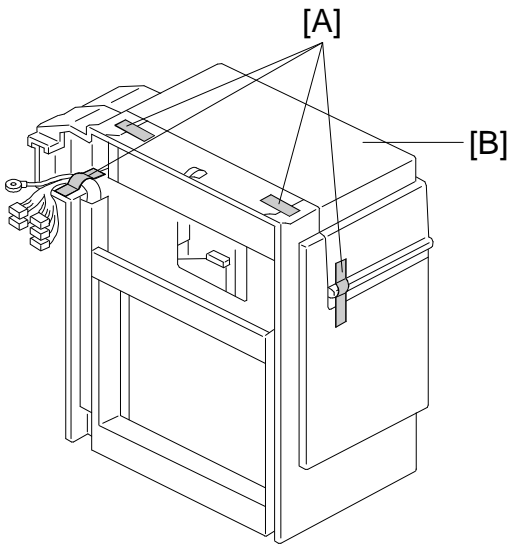


A609I500.wmf

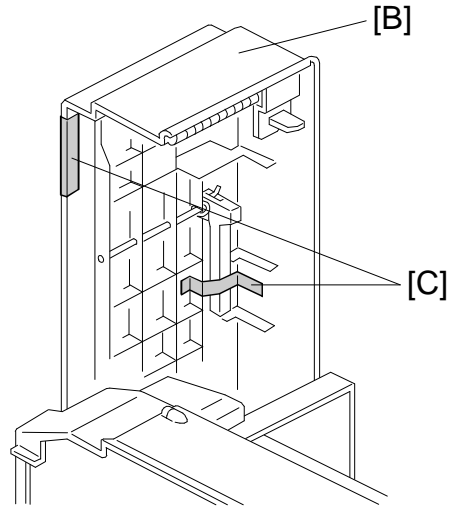

A609I501.wmf

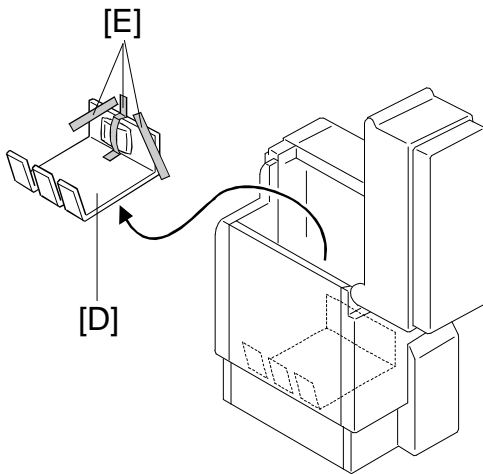

A609I502.wmf

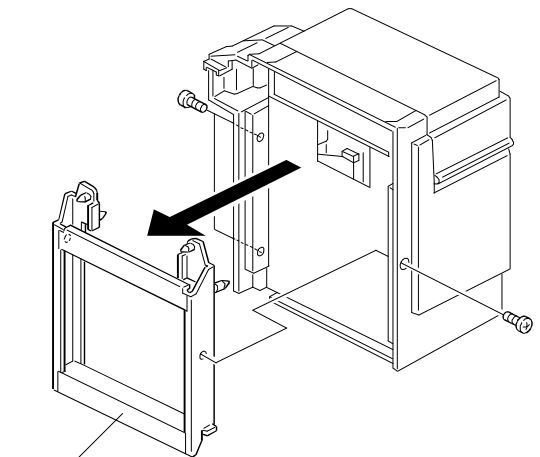


A609I503.wmf


⚠ CAUTION

Unplug the copier power cord before starting the following procedure.


1. Remove the four strips of tape [A].
2. Open the LCT cover [B] and remove the tape [C] fixing the paper trailing edge stopper.
3. Remove the tray cushion [D] secured with three strips of tape [E].
4. Remove the LCT connector [F] (3 screws).

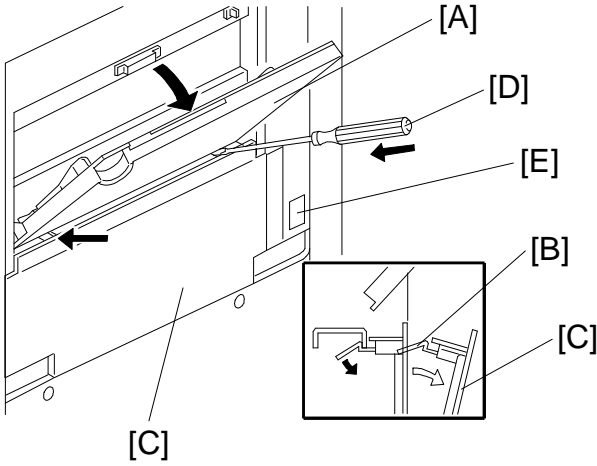

A609I504.wmf

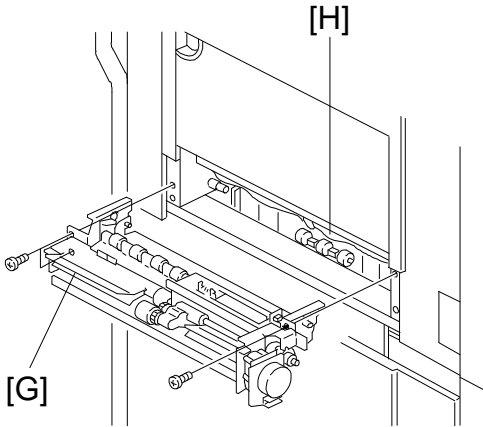

A609I506.wmf

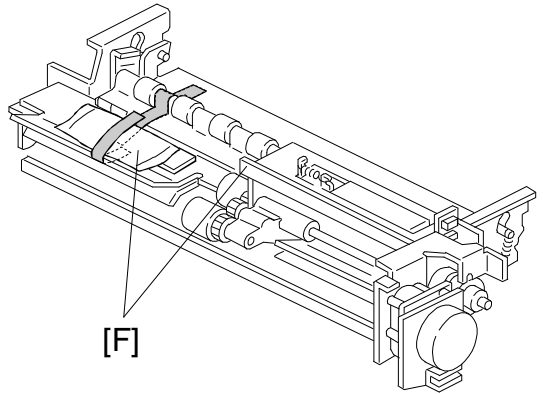


A609I505.wmf


5. Open the by-pass table [A] approximately 45 degrees and push the stoppers [B] of the feed unit cover [C] by using a small flat head screw driver [D], then remove the feed unit cover.
6. Remove the harness cover [E].
7. Remove the shipping retainers [F].
8. Install the LCT feed unit [G] to the copier (3 screws - M 4 x 6).

⚠ CAUTION

Do not pinch the harness [H] located below the by-pass table.

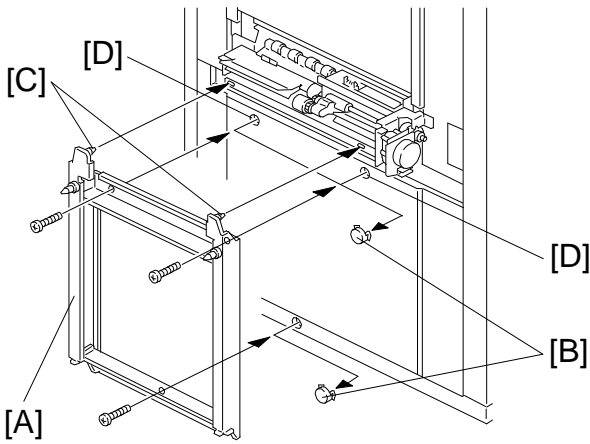


A6091507.wmf

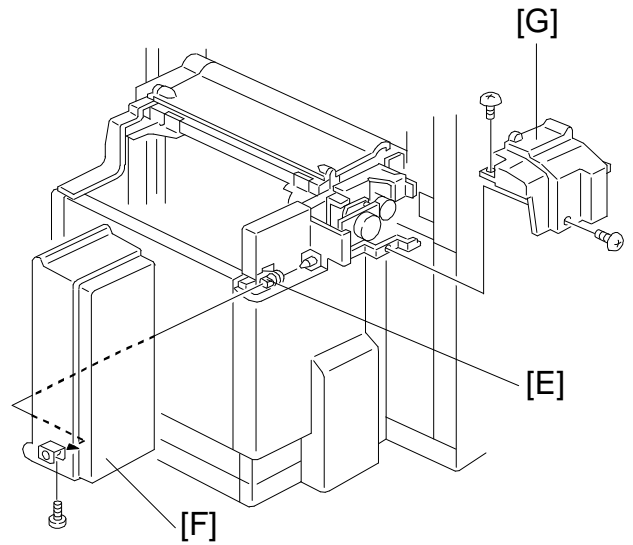


A6091508.wmf

9. Install the LCT connector [A] to the copier.
 - 1) Remove the three caps [B].
 - 2) Set the two pins [C] of the LCT connector into the two holes [D] on the LCT feed unit.
 - 3) Install the LCT connector to the copier (3 screws - M4 x 16).
10. Remove the screw fixing the upper cover hinge [E] then slide and remove the LCT cover [F].
11. Remove the rear upper cover [G] (2 screws).

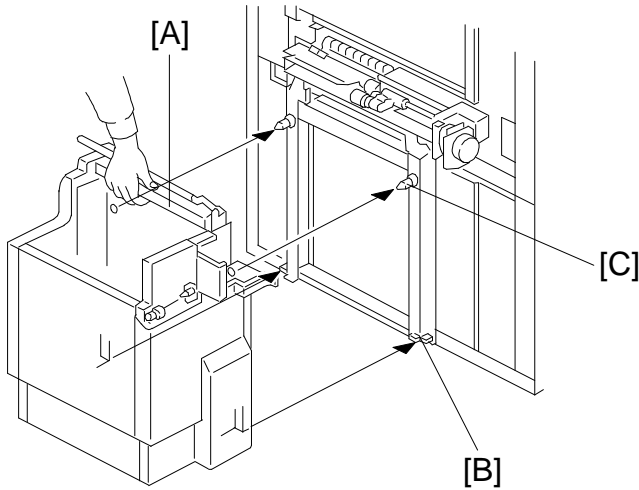

A609I509.wmf

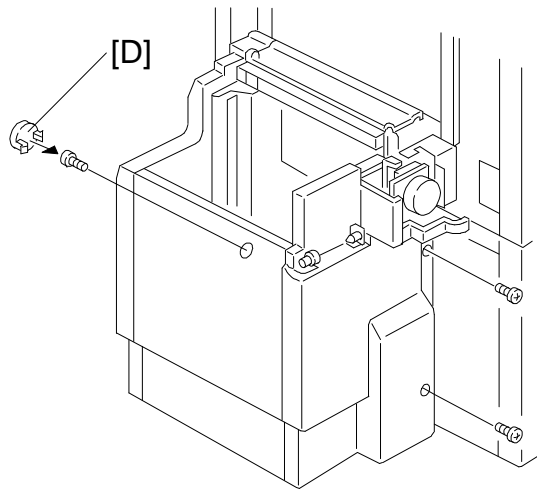


A609I510.wmf

12. Hold the upper stay [A] of the LCT and place the LCT on the plates [B] of the LCT connector.

⚠ CAUTION

Properly place the LCT on the plate [B] of the LCT connector.

13. Insert the two pins [C] on the LCT connector into the two holes on the LCT.
14. Secure the LCT to the LCT connector (3 screws - M 4 x 8).
15. Set the cap [D] in the front screw access hole.

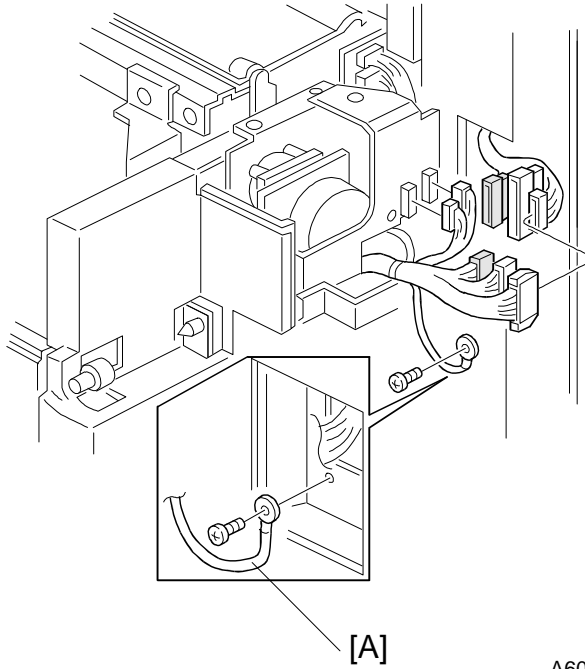

A609I511.wmf

16. Connect the connectors.


1) Between the copier and the LCT (3 connectors).

- 13P white
- 13P red
- 16P white

2) Between the LCT and the LCT feed unit (2 connectors).

- 10P white
- 8P white

17. Secure the protective earth wire [A] on the copier.

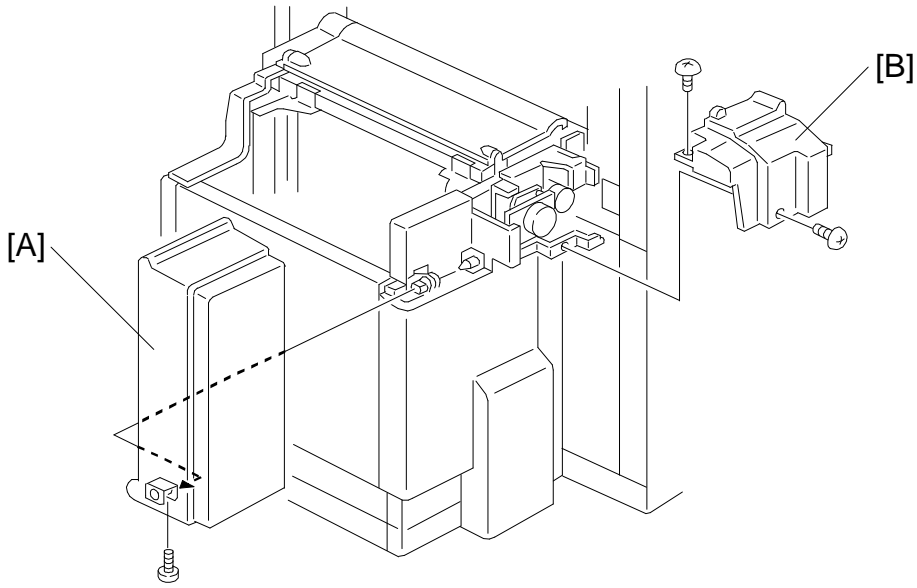


A609I512.wmf


18. Install the rear upper cover [A] (2 screws).
19. Install the LCT cover [B] (1 screw).
20. Plug in the copier and check machine operation.

NOTE: The copier automatically recognizes that the LCT has been installed.

7.2.1 PAPER SIZE CHANGE

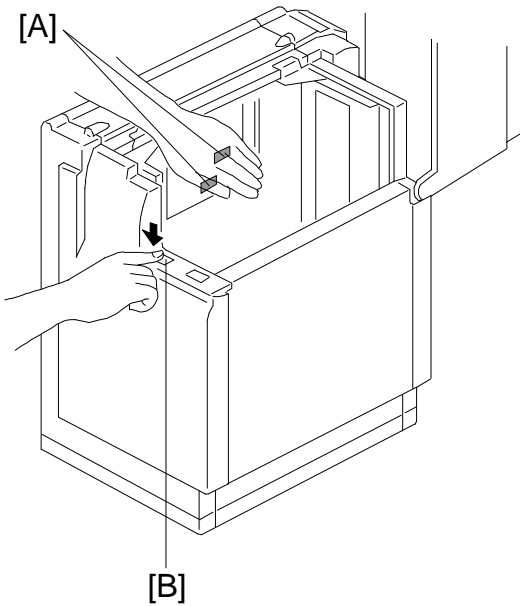

A6091513.wmf

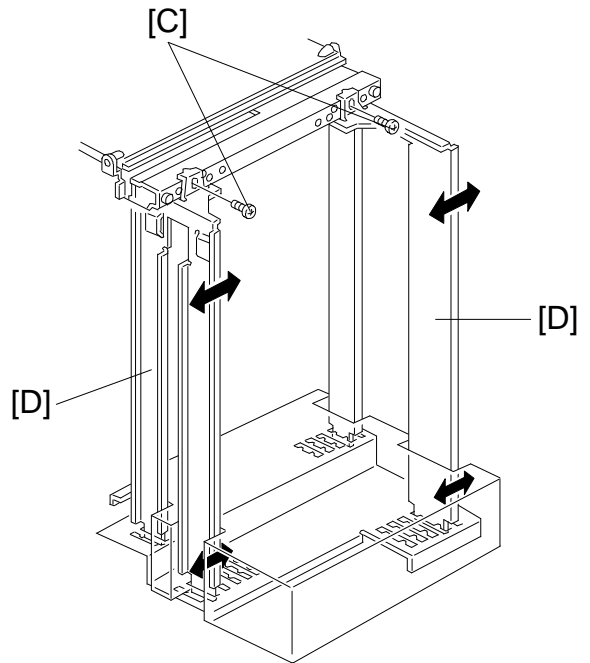


A6091514.wmf

Change the paper size, if the customer requests it.


NOTE: A4/Letter sideways is the factory setting.

1. While covering two sensors [A] with your hand, press the tray down key [B] to lower the bottom tray.
2. Remove the screws [C] fixing the front and the rear side fences [D].
3. Tilt the side fences to the right (front view) and lift to remove.
4. Position the side fences according to the paper size.
5. Fix the side plates (1 screw each).

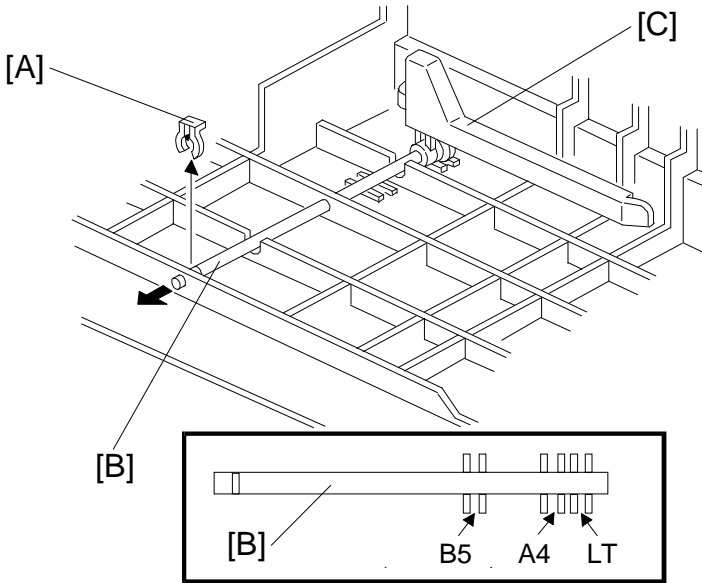


A609I515.wmf

 6. Remove the clip [A] and pull out the shaft [B]. Position the paper trailing edge stopper [C] according to the paper size.
7. Re-install the shaft [B] and the clip [A].
8. Enter SP mode as follows:
 - 1) Press the clear mode key.
 - 2) Enter "107".
 - 3) Touch the clear/stop key for more than 3 seconds.




9. Touch the "SP Special Features" key [D].

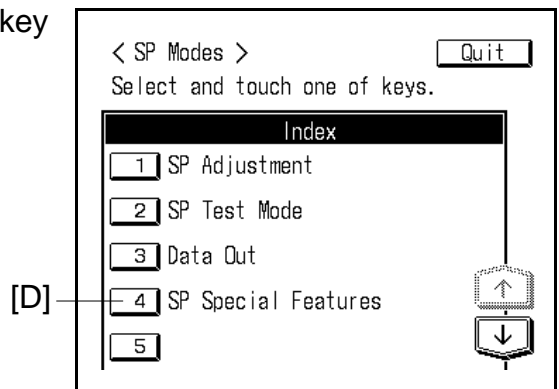

A609I516.img


10. Touch the "Next" key [A] seven times to select the paper size setting mode (page 8), then touch the appropriate paper size of "LCT" [B].

11. Touch the "Index" key [C].

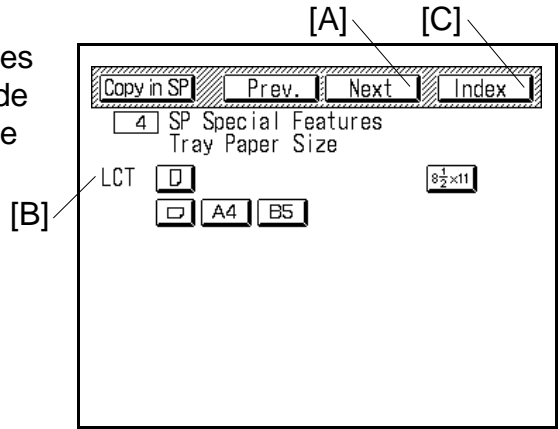


A609I517.img

12. Touch the "Quit" key [D].

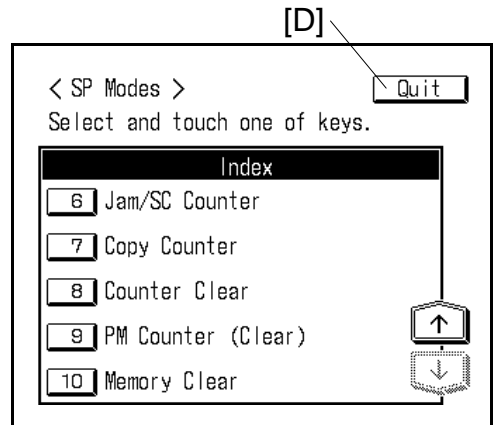

A609I518.img

13. Check the copy quality and machine operation.

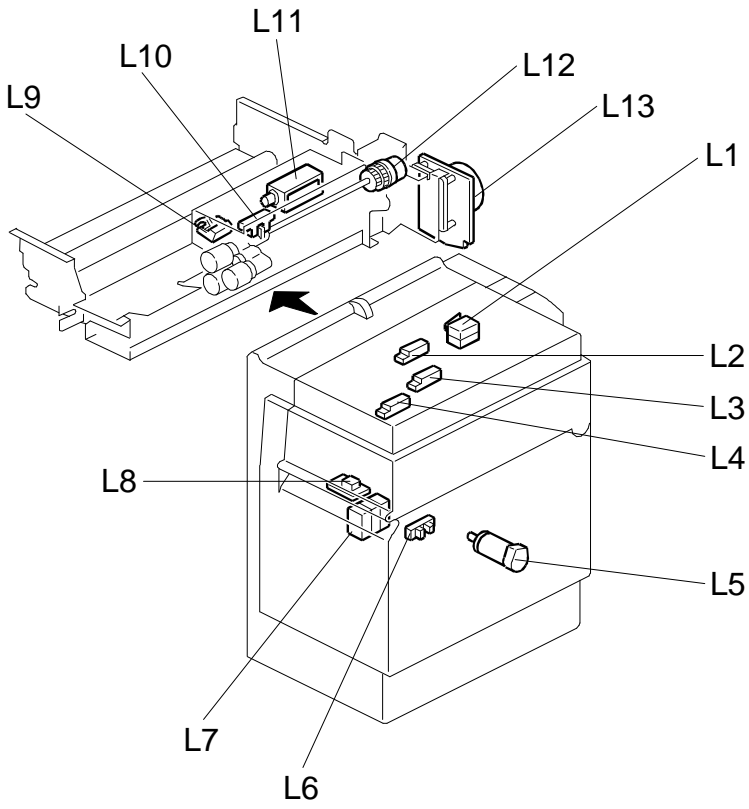

A176S510.wmf

3.5 k LCT

Symbol	Name	Index No.	P-to-P
Sensors			
LS1	Paper End	L2	H2
LS2	Paper Near End	L3	H2
LS3	Paper Position	L4	G2
LS4	Tray Down	L6	I2
LS5	Feed	L9	I2
LS6	Lift	L10	H2
Switches			
LSW1	Feed Unit Cover	L1	I2
LSW2	LCT Cover	L7	K2
LSW3	Tray Down	L8	H2
Motors			
LM1	LCT	L5	J2
LM2	Feed	L13	J2
Others			
LSOL1	Pick-up	L11	J2
LMC1	Feed	L12	J2