

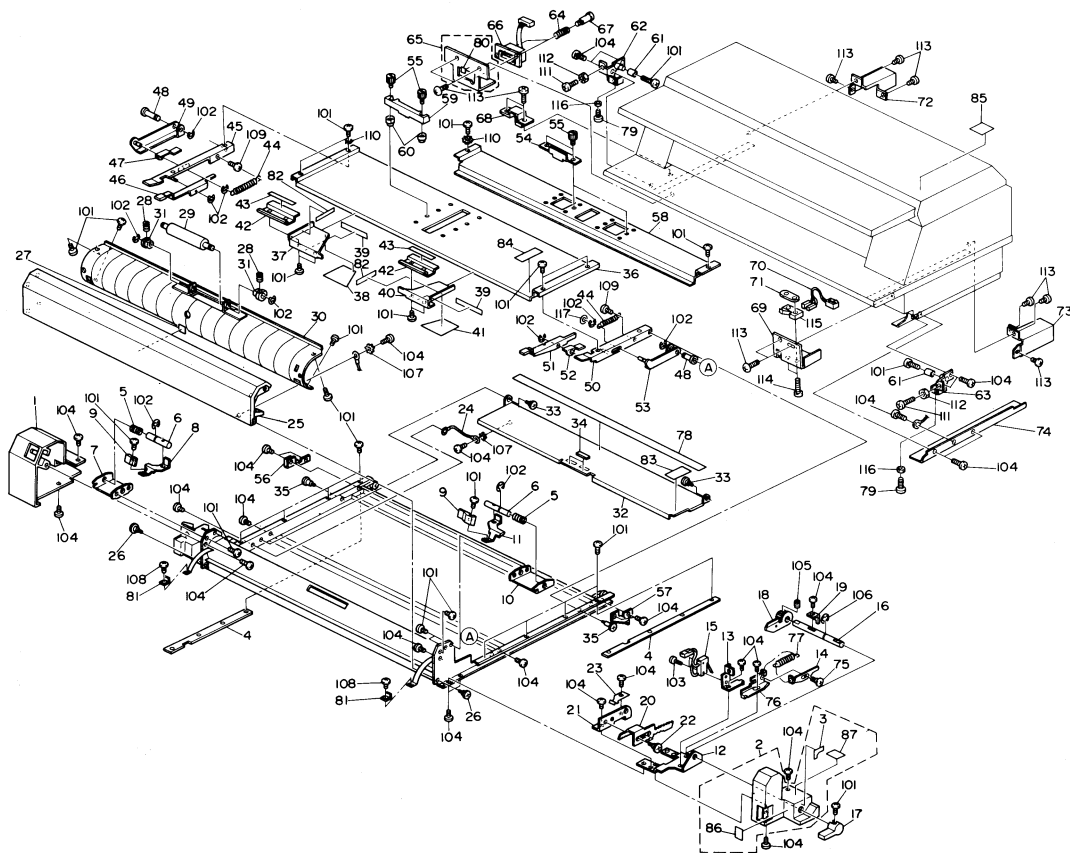
SHEET FEEDER TYPE 810

(A 4 5 3)

1. Auto Feeder I (A453)	2
2. Auto Feeder II (A453)	4
3. Auto Feeder III (A453)	6
4. Paper Feeder Unit Harness(A453)	8
5. Decal & Document (A453)	10
Parts Index	13

1. AUTO FEEDER 1 (A453)

February 01,'90



1. AUTO FEEDER I (A453)


February 01,'90

Index No.	Parts No.	Description	Q'ty Per Assembly
1	A453 1250	Left Cover	1
2	A453 1243	Right Cover	1
3	A453 1310	Decal	1
4	A453 2570	Side Plate Bracket	2
5	AA06 3086	Spring - Release Lever	2
6	AA14 5084	Lock Shaft - Front Cover	2
7	A453 2602	Left Lock Bracket	1
8	A453 2603	Left Release Lever	1
9	A453 2605	Lock Release Knob	2
10	A453 2612	Right Lock Bracket	1
11	A453 2613	Right Release Lever	1
12	A453 2791	Lever Bracket	1
13	A453 2792	Switch Bracket	1
14	A453 2793	Actuator - Safety Switch	1
15	A453 5340	Micro Switch	1
16	AA14 5085	Separation Lever Shaft	1
17	AG05 0028	Separation Knob	1
18	A453 2796	Gear - 19Z	1
19	A453 2799	Pick-off Actuator	1
20	A453 2806	Pick-off Rack	1
21	A453 2807	Rack Bracket	1
22	5413 1882	Stepped Screw	2
23	A453 2810	Spring Plate	1
24	A453 5370	Grounding wire - Paper Feed Tray	1
25	A453 2867	Front Cover	1
26	AA14 3129	Shoulder Screw - Front Cover	2
27	A453 2858	Mylar Seal - 20x20	1
28	AA06 3088	Spring - Paper Feed Roller	2
29	AF02 0108	Paper Feed Roller - Middle	1
30	A453 2861	Outer Guide Plate	1
31	5205 2697	Bushing - Upper Registration Roller	2
32	A453 2881	Bottom Plate	1
33	5201 1796	Stepped Screw - M4	2
34	5215 2713	Bottom Plate Pad	2
35	AA14 3132	Shoulder Screw - Paper Feed	2

index no.	Parts No.	Description	Q'ty Per Assembly
36	A453 3121	Paper Feed Tray	1
37	A453 2901	Left Side Fence	1
38	A453 2902	Felt Seal - 75x106	1
39	A453 2903	Felt Seal - 7x75	2
40	A453 2906	Right Side Fence	1
41	A453 2907	Felt Seal - 75x106	1
42	A453 2911	Side Fence Bracket	2
43	A453 2912	Felt Seal - 15x74	2
44	AA06 0168	Spring - Paper Feed Tray	2
45	A453 2917	Left Frame - Paper Feed Tray	1
46	A453 2920	Left Release Lever	1
47	A453 2921	Left Spring Plate	1
48	AA14 8146	Arm Shaft	2
49	A453 2926	Left Arm	1
50	A453 2932	Right Frame - Paper Feed Tray	1
51	A453 2935	Right Release Lever	1
52	A453 2936	Right Spring Plate	1
53	A453 2941	Right Arm	1
54	AF01 7003	End Fence	2
55	A453 2955	Knob Screw - End Fence	6
56	A453 2961	Left Stopper - Paper Feed Roller	1
57	A453 2962	Right Stopper - Paper Feed Roller	1
58	A453 2950	Paper Feed Tray	1
59	A453 2970	End Fence	1
60	A453 2972	Pin - End Fence	2
61	AA13 0031	Lock Roller	2
62	A453 2981	Left Lock Guide	1
63	A453 2991	Right Lock Guide	1
64	AA06 3089	Spring - Paper Feed	2
65	A453 2997	Connector - Paper Feed Unit	1
66	A453 5320	Cassette Relay Harness	1
67	5446 5832	Connector Guide Pin	2
68	A453 3005	Bracket - Cassette Relay Harness	1
69	A453 3011	Safety Switch Bracket	1
70	A453 5330	Safety Switch Relay Harness	1

Index No.	Parts No.	Description	Q'ty Per Assembly
71	50560509	Nut Plate - Microswitch	1
72	A453 1265	Rear Left Cover	1
73	A453 1268	Rear Right Cover	1
74	A453 3025	Grounding Wire Cover	1
75	AA14 3076	Stepped Screw - M4	1
76	A453 2794	Switch Actuator Bracket	1
77	5203 3127	Toner End Spring	1
78	A453 1341	Paper Size Decal	1
79	AA14 3220	Adjusting Screw - Lock Guide	2
80	A453 3007	Mylar Seal - 20x20	1
81	A453 2662	Spacer	2
82	A453 1360	Decal - Side Fence	2
83	A453 1377	Decal - Loading Paper	1
84	A453 1345	Decal - Removing Misfed Paper	1
85	A453 1365	Decal - Loading/Removing	1
86	A453 1352	Decal - Separation Knob	1
87	A453 1355	Decal - Paper Feed Selection	

Index No.	Parts No.	Description	Q'ty Per Assembly
101	0313 00606	Philips Pan Head Screw - M3x6	
102	0720 0040Z	Retaining Ring - M4	
103	0252 0080B	Screw - M2x8	
104	0314 0060B	Philips Pan Head Screw - M4x6	
105	0574 0040E	Hexagon Headless Set Screw - M4x4	
106	0720 0060Z	Retaining Ring - M6	
107	0705 0040C	Toothed Washer - M4	
108	0951 3006B	Philips Screw With Flat Washer - M3x6	
109	0314 0140B	Philips Pan Head Screw - M4x14	
110	0705 0030C	Toothed Washer - M3	
111	0314 0160B	Philips Pan Head Screw - M4x16	
112	0710 00408	Hexagon Nut - M4	
113	0344 0060F	Philips Truss Head Screw - M4x6	
114	0313 0160B	Philips Pan Head Screw - M3x16	
115	1204 0795	Microswitch	
116	0710 0050B	Hexagon Nut - M5	
117	0807 4083	Washer 5mm	

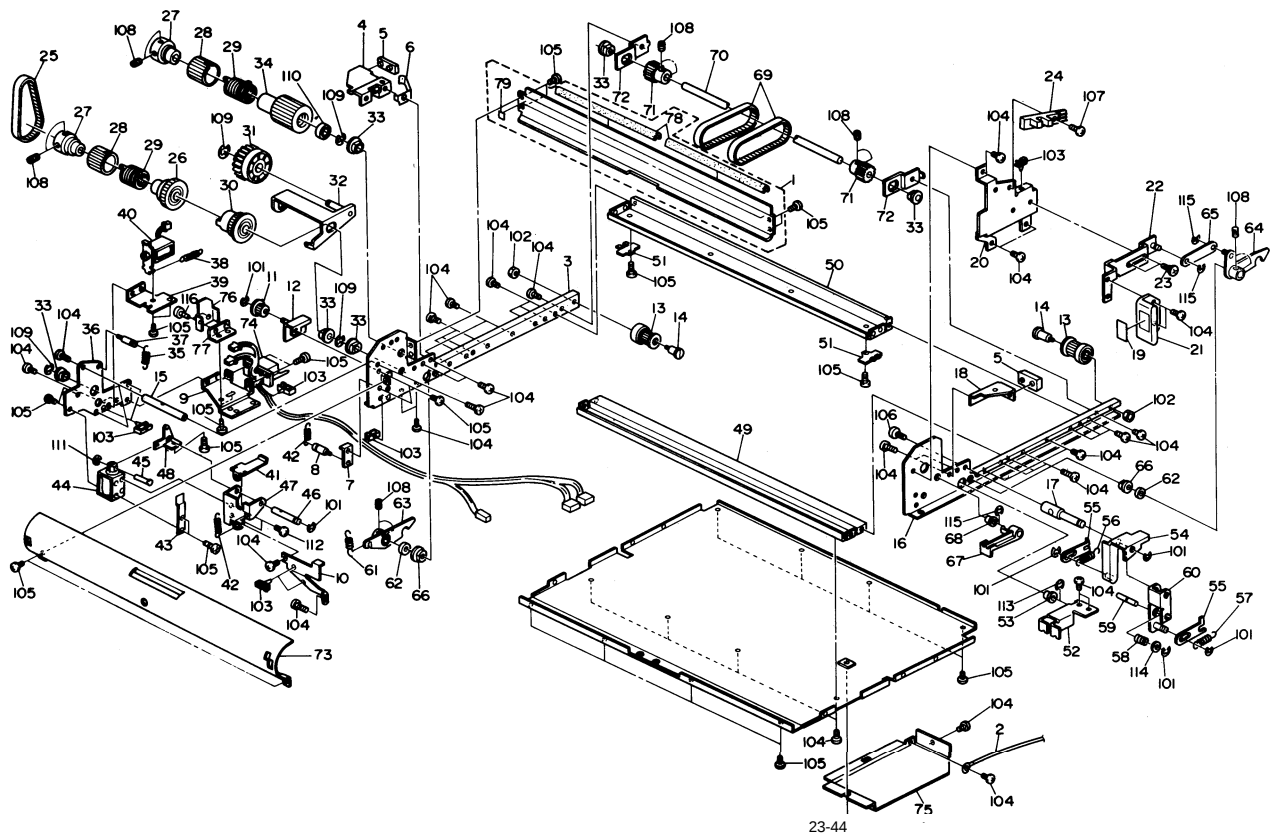

2. AUTO FEEDER II (A453)

Index No.	Parts No.	Description	Q'ty Per Assembly
1	A453 1230	Inner Cover	1
2	A453 5350	Grounding Wire - Bottom Cover	1
3	A453 2555	Left Side Plate	1
4	A453 2573	Left Bracket - Rubber Pad	1
5	AA16 1838	Rubber Pad - Paper Feed	2
6	A453 2575	Spring Plate - Paper Feed	1
7	A453 2571	Arm Stopper	1
8	AA14 3045	Stud	1
9	A453 2576	Connector Bracket	1
10	A453 2577	Harness Bracket	1
11	AB03 0091	Pulley - 22Z	1
12	A453 2581	Pulley Bracket	1
13	A453 2590	Gear/Pulley - 36/45Z	2
14	AA14 3130	Shoulder Screw - Roller Guide	2
15	AA14 5082	Stud - Side Plate Bracket	2
16	A453 2565	Right Side Plate	1
17	AA14 8145	Pressure Lever Shaft	1
18	A453 2621	Right Bracket - Rubber Pad	1
19	A453 1330	Decal - Lock Release	1
20	A453 2625	Bracket - Release Lock Lever	1
21	AG05 1836	Lock Release Grip - Paper Feed	1
22	A453 2631	Release Lock Lever	1
23	5413 1882	Stepped Screw	3
24	5205 5251	L.E.D Sensor Type - T	1
25	AA04 3835	Timing Belt - 190XL	1
26	A453 2671	Gear - 33Z	1
27	AB04 2802	Clutch Sleeve - Paper Feed	2
28	AB04 3002	Spring Clutch Sleeve	2
29	AB04 4002	Spring Clutch	2
30	A453 2688	Pulley - 49Z	1
31	AB01 3354	Gear - 34Z	1
32	A453 2676	Idler Shaft Arm	1
33	5304 1639	Bushing - 8nTn	6
34	A453 2686	Pulley - 43Z	1
35	AA06 0180	Spring - SP Clutch Paul	1


Index No.	Parts No.	Description	Q'ty Per Assembly
36	A453 2691	Side Plate Bracket - Left	1
37	5415 2875	Spring Anchor	1
38	A409 1153	Spring - Inverter Guide Plate	1
39	A453 2687	Solenoid Bracket	1
40	A453 2696	Solenoid - Paper Feed	1
41	AB04 5004	Spring Clutch Pawl	1
42	52082672	Spring - Solenoid Release	2
43	A453 2702	Solenoid Stopper	1
44	5428 5090	Toner Supply Solenoid	1
45	5894 2229	Solenoid Pin	1
46	AA14 5083	Shaft - Pick-off Paul	1
47	A453 2786	Solenoid Bracket	1
48	A453 2787	Spring Clutch Lever	1
49	A453 2765	Middle Stay - Friction Pad	1
50	A453 2770	Side Stay - Friction Pad	1
51	A453 2772	Guide Plate	2
52	A453 2778	Pressure Arm - Bottom Plate	1
53	5053 0223	Bushing - 8r1tn	1
54	A453 2781	Pressure Lever - Bottom Plate	1
55	A453 2784	Support Plate	2
56	AA06 0170	Spring - Bottom Plate	1
57	AA06 0171	Spring - Bottom Plate	1
58	AA06 3090	Spring - Pressure Lever Pin	1
59	AA14 5086	Pin - Pressure Lever	1
60	A453 2786	Pressure Lever	1
61	AA06 0169	Spring - Lock Lever	1
62	AA13 2060	Collar - Lock Lever	2
63	A453 2826	Left Lock Lever	1
64	A453 2828	Right Lock Lever	1
65	A453 2825	Release Lock Joint	1
66	5053 0419	Bushing - lotnn	2
67	A453 2835	Shield Plate - Paper End	1
68	5443 2668	Bushing	1
69	AA04 3036	Timing Belt - 201XL	2
70	AA14 0229	Guide Roller Shaft	1

Index No.	Parts No.	Description	Q'ty Per Assembly
71	A803 0092	Pulley - 22Z	2
72	A453 2840	Guide Roller Bracket	2
73	A453 2845	Inner Guide Plate	1
74	A453 5310	Paper Feed Unit Harness	1
75	A453 3020	Grounding Wire Cover - Paper Feed	1
76	A453 2678	Support Plate	1
77	A453 2679	Bracket - Support Plate	1
78	AA15 1432	Seal - 10x215	2
79	A453 3007	Mylar Seal - 20x20	2
101	0720 0040Z	Retaining Ring - M4	
102	0710 0060B	Hexagon Nut - M6	
103	1105 0087	clamp	
104	0314 0060B	Phillips Pan Head Screw - M4x6	
105	0313 0060B	Phillips Pan Head Screw - M3x6	
106	0315 0080B	Phillips Pan Head Screw - M5x8	
107	0314 0100B	Phillips Pan Head Screw - M4x10	
108	0574 0040E	Hexagon Headless Set Screw - M4x4	
109	0720 0060Z	Retaining Ring - M6	
110	0805 3270	Ball Bearing - 8x16x5rMI	
111	0720 0025Z	Retaining Ring - M2.5	
112	0313 0040B	Phillips Pan Head Screw - M3x4	
113	0720 0080Z	Retaining Ring - M8	
114	0708 0050B	Washer - M5	
115	0720 0030Z	Retaining Ring - M3	
116	0951 4006B	Phillips Screw With Flat Washer - M4x6	

Index No.	Parts No.	Description	Q'ty Per Assembly

3. AUTO FEEDER III (A453)

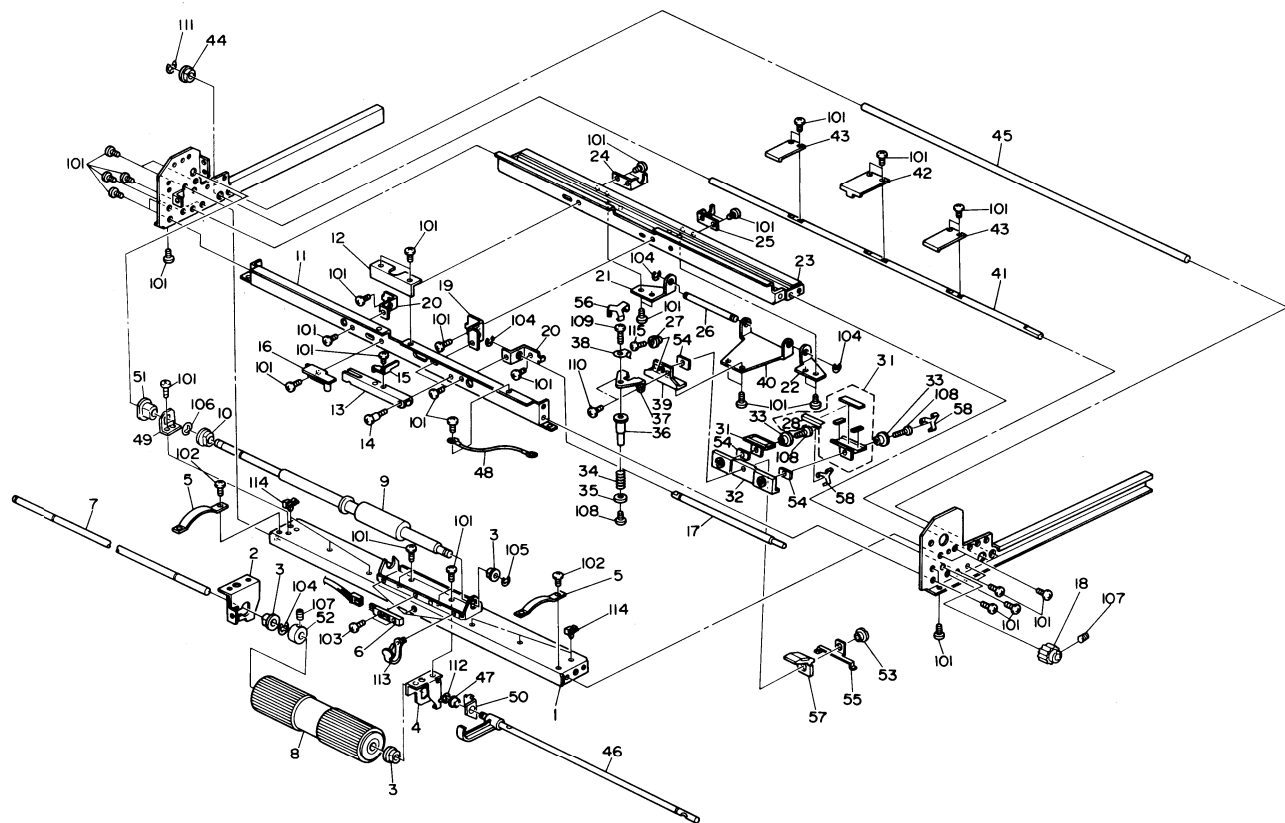February 01,'90




February 01,'90

Index No.	Parts No.	Description	Q'ty Per Assembly
36	A453 2752	Sleeve - Friction Pad	1
37	A453 2756	Sleeve Bracket - Friction Pad	1
38	A453 2757	Spring Plate - Pressure Sleeve	1
39	A453 2760	Friction Pad Holder	1
40	A453 2761	Support Plate - Friction Pad	1
41	AA14 0222	Shaft - Bottom Tray	1
42	A453 2776	Middle Arm - Bottom Tray	1
43	A453 2777	Side Arm - Bottom Tray	2
44	5053 0223	Bushing - (km	1
45	AA14 0219	"Lock Lever Shaft	1
46	A453 2830	Lever - Paper End Sensor	1
47	5443 2668	Bushing	1
48	A023 5393	Grounding Hire	1
49	A453 2647	Clutch Bracket	1
50	A453 2658	Bracket - Paper End Sensor	1
51	5205 2865	Bushing - Paper Feed Roller	1
52	AA13 2103	Collar - Feed Roller	1
53	AA13 2108	Nut - Middle Pad	1
54	AA16 1054	Friction Pad Cushion	3
55	A453 2767	Spring Plate - Middle Pad	1
56	A453 2768	Spring Plate - Pad Arm	1
57	A453 2773	Friction Pad Ass'y - Middle	1
58	A453 2769	Spring Plate - Friction Pad	2

Index No.	Parts No.	Description	Q'ty Per Assembly

4. PAPER FEED UNIT HARNESS (A453)

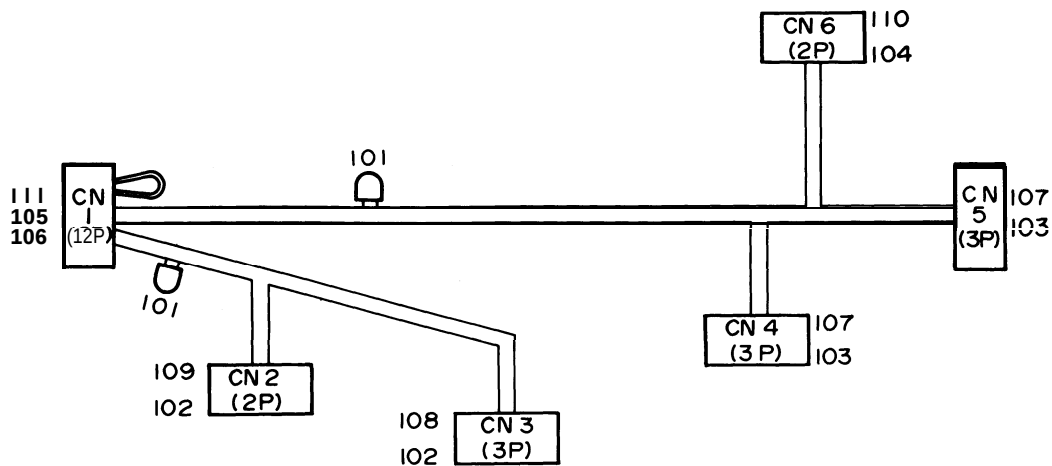February 01, 90








4. PAPER FEED UNIT HARNESS (A453)

February 01,'90

Index No.	Parts No.	Description	Q'ty Per Assembly
*	A453 5310	Paper Feed Unit Harness	1

Index No.	Parts No.	Description	Q'ty Per Assembly
101	1100 0878	Connecting Cap	
102	1100 1159	Socket - Mate-N-Lock	
103	1100 1259	Socket - Mate-N-Lock	
104	1100 1327	Contact	
105	1100 1342	Terminal	
106	1100 1346	Pin Contact	
107	1102 1089	Connector - 3P	
108	1102 1306	Connector - 3P	
109	1102 1396	Connector - 2P	
110	1102 1910	Connector - 2P	
111	1102 4403	Connector - 10P	

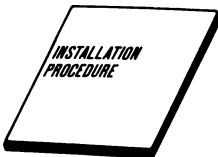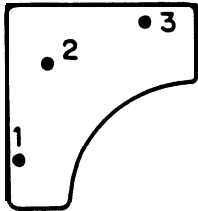1 	2 	4 
3 		5 

   6  Loading Paper  Adjust trail edge guide plate to desired paper size and lift the knobs on both sides.  Load copy paper in the tray. Make sure that paper trail edge parallels the trail edge guide plate. ① Set the side guide plates. ② Lower the lead edge of paper. ③ Return the paper tray in its original position.	7  Removing Misfed Paper  Release the levers on both ends and open the cover.  Remove the misfed paper and close the cover.	8  Loading Paper  Removing Misfed Paper  Slide out the tray by pulling the release lever. Follow the instruction inside of the tray.						
9 Paper feed pressure selection lever has to be operated when paper tray is slid out.	10 Paper Feed Pressure Select ■ Selection Position <table><tr><td>Bond Paper</td><td>: 1</td></tr><tr><td>Tracing Paper (A3/B, A4/A)</td><td>: 2</td></tr><tr><td>Tracing Paper (A1/D, A2/C)</td><td>: 3</td></tr></table>	Bond Paper	: 1	Tracing Paper (A3/B, A4/A)	: 2	Tracing Paper (A1/D, A2/C)	: 3	
Bond Paper	: 1							
Tracing Paper (A3/B, A4/A)	: 2							
Tracing Paper (A1/D, A2/C)	: 3							

5. DECAL & DOCUMENT (A453)

February 01, '90

Index No.	Parts No.	Description	Q'ty Per Assembly
1	A453 8615	Installation Procedure - 5 Languages	1
2	A453 1330	Decal - Lock Release	1
3	A453 1341	Paper Size Decal	1
4	A453 1310	Decal	1
5	A453 1360	Decal - Side Fence	2
6	A453 1377	Decal - Loading Paper	1
7	A453 1345	Decal - Removing Misfed Paper	1
8	A453 1365	Decal - Loading/Removing	1
9	A453 1352	Decal - Separation Knob	1
10	A453 1355	Decal - Paper Feed Selection	1
11	A309 1322	Decal Set - AF - German	1
11	A309 1314	Decal Set - AF - French	1
11	A309 1334	Decal Set - AF - Italian	1
11	A309 1342	Decal Set - AF - Spanish	1

Index No.	Parts No.	Description	Q'ty Per Assembly

PARTS INDEX

Parts No.	Description	Page and Index No.
A453 1230	Inner Cover	5- 1
A453 1243	Right Cover	3- 2
A453 1250	Left Cover	3- 1
A453 1265	Rear Left Cover	3-72
A453 1268	Rear Right Cover	3-73
A453 1310	Decal	3- 3
A453 1310	Decal	11- 4
A453 1330	Decal - Lock Release	5-19
A453 1330	Decal - Lock Release	11- 2
A453 1341	Paper Size Decal	3-78
A453 1341	Paper Size Decal	11- 3
A453 1345	Decal - Removing Misfed Paper	3-84
A453 1345	Decal - Removing Misfed Paper	11- 7
A453 1352	Decal - Separation Knob	3-86
A453 1352	Decal - Separation Knob	11- 9
A453 1355	Decal - Paper Feed Selection	3-87
A453 1355	Decal - Paper Feed Selection	11-10
A453 1360	Decal - Side Fence	3-82
A453 1360	Decal - Side Fence	11- 5
A453 1365	Decal - Loading/Removing	3-85
A453 1365	Decal - Loading/Removing	11- 8
A453 1377	Decal - Loading Paper	3-83
A453 1377	Decal - Loading Paper	11- 6
A453 2555	Left Side Plate	5- 3
A453 2565	Right Side Plate	5-16
A453 2570	Side Plate Bracket	3- 4
A453 2571	Arm Stopper	5- 7
A453 2573	Left Bracket - Rubber Pad	5- 4
A453 2575	Spring Plate - Paper Feed	5- 6
A453 2576	Connector Bracket	5- 9
A453 2577	Harness Bracket	5-10
A453 2581	Pulley Bracket	5-12
A453 2590	Gear/Pulley - 36/452	5-13
A453 2602	Left Lock Bracket	3- 7
A453 2603	Left Release Lever	3- 8

Parts No.	Description	Page and Index No.
A453 2605	Lock Release Knob	3- 9
A453 2612	Right Lock Bracket	3-10
A453 2613	Right Release Lever	3-11
A453 2621	Right Bracket - Rubber Pad	5-18
A453 2625	Bracket - Release Lock Lever	5-20
A453 2631	Release Lock Lever	5-22
A453 2640	Paper Feed Roller Stay	7- 1
A453 2647	Clutch Bracket	7-49
A453 2650	Left Bracket - Paper Feed Roller	7- 2
A453 2656	Right Bracket - Paper Feed Roller	7- 4
A453 2658	Bracket - Paper End Sensor	7-50
A453 2660	Front Cover Stopper	7- 5
A453 2662	Spacer	3-81
A453 2671	Gear - 33Z	5-26
A453 2676	Idler Shaft Arm	5-32
A453 2678	Support Plate	5-76
A453 2679	Bracket - Support Plate	5-77
A453 2686	Pulley - 43Z	5-34
A453 2687	Solenoid Bracket	5-39
A453 2688	Pulley - 492	5-30
A453 2691	Side Plate Bracket - Left	5-36
A453 2696	Solenoid - Paper Feed	5-40
A453 2702	Solenoid Stopper	5-43
A453 2706	Solenoid Bracket	5-47
A453 2707	Spring Clutch Lever	5-48
A453 2711	Front Stay	7-11
A453 2713	Adjusting Plate	7-12
A453 2716	Pressure Ann	7-13
A453 2717	Pressure Lever	7-15
A453 2720	Support Plate - Pressure Arm	7-16
A453 2727	Bracket - Transport Shaft	7-19
A453 2728	Support Plate - Lower Stay	7-20
A453 2729	Left Bracket	7-21
A453 2730	Right Bracket	7-22
A453 2731	Left Support Plate	7-24

Parts No.	Description	Page and Index No.
A453 2732	Right Support Plate	7-25
A453 2735	Lwer Stay	7-23
A453 2742	Friction Pad Ass'y	7-31
A453 2752	Sleeve - Friction Pad	7-36
A453 2756	Sleeve Bracket - Friction Pad	7-37
A453 2757	Spring Plate - Pressure Sleeve	7-38
A453 2760	Friction Pad Holder	7-39
A453 2761	Support Plate - Friction Pad	7-40
A453 2765	Middle Stay - Friction Pad	5-49
A453 2767	Spring Plate - Middle Pad	7-55
A453 2768	Spring Plate - Pad Arm	7-56
A453 2769	Spring Plate - Friction Pad	7-58
A453 2770	Side Stay - Friction Pad	5-50
A453 2771	Pad Arm	7-32
A453 2772	Guide Plate	5-51
A453 2773	Friction Pad Ass'y - Middle	7-57
A453 2776	Middle Arm - Bottom Tray	7-42
A453 2777	Side Arm - Bottom Tray	7-43
A453 2778	Pressure Arm - Bottom Plate	5-52
A453 2781	Pressure Lever - Bottom Plate	5-54
A453 2784	Support Plate	5-55
A453 2786	Pressure Lever	5-60
A453 2791	Lever Bracket	3-12
A453 2792	Switch Bracket	3-13
A453 2793	Actuator - Safety Switch	3-14
A453 2794	Switch Actuator Bracket	3-76
A453 2796	Gear - 19Z	3-18
A453 2799	Pick-off Actuator	3-19
A453 2806	Pick-off Rack	3-20
A453 2807	Rack Bracket	3-21
A453 2810	Spring Plate	3-23
A453 2825	Release Lock Joint	5-65
A453 2826	Left Lock Lever	5-63
A453 2828	Right Lock Lever	5-64
A453 2830	Lever - Paper End Sensor	7-46

Parts No.	Description	Page and Index No.
A453 2835	Shield Plate - Paper End	5-67
A453 2840	Guide Roller Bracket	5-72
A453 2845	Inner Guide Plate	5-73
A453 2858	Mylar Seal - 20x20	3-27
A453 2861	Outer Guide Plate	3-30
A453 2867	Front Cover	3-25
A453 2881	Bottom Plate	3-32
A453 2901	Left Side Fence	3-37
A453 2902	Felt Seal - 75x106	3-38
A453 2903	Felt Seal - 7x75	3-39
A453 2906	Right Side Fence	3-40
A453 2907	Felt Seal - 75x106	3-41
A453 2911	Side Fence Bracket	3-42
A453 2912	Felt Seal - 15x74	3-43
A453 2917	Left Frame - Paper Feed Tray	3-45
A453 2920	Left Release Lever	3-46
A453 2921	Left Spring Plate	3-47
A453 2926	Left Arm	3-49
A453 2932	Right Frame - Paper Feed Tray	3-50
A453 2935	Right Release Lever	3-51
A453 2936	Right Spring Plate	3-52
A453 2941	Right Arm	3-53
A453 2950	Paper Feed Tray	3-58
A453 2955	Knob Screw - End Fence	3-55
A453 2961	Left Stopper - Paper Feed Roller	3-56
A453 2962	Right Stopper - Paper Feed Roller	3-57
A453 2970	End Fence	3-59
A453 2972	Pin - End Fence	3-60
A453 2981	Left Lock Guide	3-62
A453 2991	Right Lock Guide	3-63
A453 2997	Connector - Paper Feed Unit	3-65
A453 3005	Bracket - Cassette Relay Harness	3-68
A453 3007	Mylar Seal - 20x20	3-80
A453 3007	Mylar Seal - 20x20	5-79
A453 3011	Safety Switch Bracket	3-69

Parts No.	Description	Page and Index No.
A453 3020	Grounding Wire Cover - Paper Feed	5-75
A453 3025	Grounding Wire Cover	3-74
A453 3121	Paper Feed Tray	3-36
A453 5310	Paper Feed Unit Harness	5-74
A453 5310	Paper Feed Unit Harness	9- *
A453 5320	Cassette Relay Harness	3-66
A453 5330	Safety Switch Relay Harness	3-70
A453 5340	Micro Switch	3-15
A453 5350	Grounding Wire - Bottom Cover	5- 2
A453 5370	Grounding Wire - Paper Feed Tray	3-24
A453 8615	Installation Procedure - 5 Languages	11- 1

Parts No.	Description	Page and Index No.
A023 5393	Grounding Wire	7-48
A309 1314	Decal Set - AF - French	11-11
A309 1322	Decal Set - AF - German	11-11
A309 1334	Decal Set - AF - Italian	11-11
A309 1342	Decal Set - AF - Spanish	11-11
A409 1153	Spring - Inverter Guide Plate	5-38

Parts No.	Description	Page and Index No.
AA04 3035	Timing Belt - 190XL	5-25
AA04 3036	Timing Belt - 201XL	5-69
AA06 0168	Spring - Paper Feed Tray	3-44
AA06 0169	Spring - Lock Lever	5-61
AA06 0170	Spring - Bottom Plate	5-56
AA06 0171	Spring - Bottom Plate	5-57
AA06 0180	Spring - SP Clutch Pawl	5-35
AA06 3086	Spring - Release Lever	3- 5
AA06 3088	Spring - Paper Feed Roller	3-28
AA06 3089	Spring - Paper Feed	3-64
AA06 3090	Spring - Pressure Lever Pin	5-58
AA06 3138	Pressure Spring	7-34
AA13 0031	Lock Roller	3-61
AA13 2060	Collar - Lock Lever	5-62
AA13 2061	Collar	7-35
AA13 2103	Collar - Feed Roller	7-52
AA13 2108	Nut - Middle Pad	7-53
AA13 2109	Spacer - Friction Pad	7-33
AA13 2112	Spacer - Pad Ann	7-27
AA14 0218	Shaft - Friction Pad	7-26
AA14 0219	Lock Lever Shaft	7-45
AA14 0220	Guide Roller Shaft	5-70
AA14 0221	Separation Roller Shaft	7-17
AA14 0222	Shaft - Bottom Tray	7-41
AA14 0223	Shaft - Paper Feed Roller	7- 7
AA14 3045	Stud	5- 8
AA14 3076	Stepped Screw - M4	3-75
AA14 3129	Shoulder Screw - Front Cover	3-26
AA14 3130	Shoulder Screw - Roller Guide	5-14
AA14 3132	Shoulder Screw - Paper Feed	3-35
AA14 3139	Shoulder Screw - Pressure Arm	7-14
AA14 3220	Adjusting Screw - Lock Guide	3-79
AA14 5082	Stud - Side Plate Bracket	5-15
AA14 5083	Shaft - Pick-off Pawl	5-46
AA14 5084	Lock Shaft - Front Cover	3- 6

Parts No.	Description	Page and Index No.
AA14 5085	Separation Lever Shaft	3-16
AA14 5086	Pin - Pressure Lever	5-59
AA14 8145	Pressure Lever Shaft	5-17
AA14 8146	Arm Shaft	3-48
AA15 0177	Mylar Seal - Friction Pad	7-28
AA15 1432	Seal - 10x215	5-78
AA16 1038	Rubber Pad - Paper Feed	5- 5
AA16 1054	Friction Pad Cushion	7-54
AB01 1056	Gear - 20Z	7-18
AB01 3354	Gear - 34Z	5-31
AB03 0091	Pulley- 22Z	5-11
AB03 0092	Pulley - 22Z	5-71
AB04 2002	Clutch Sleeve - Paper Feed	5-27
AB04 3002	Spring Clutch Sleeve	5-28
AB04 4002	Spring Clutch	5-29
AB04 5004	Spring Clutch Pawl	5-41
AF01 7003	End Fence	3-54
AF02 0108	Paper Feed Roller - Middle	3-29
AF02 0110	Transport Roller	7- 9
AF03 1007	Paper Feed Roller	7- 8
AF03 3001	Friction Pad - Separation	7-29
AF03 3002	Friction Pad - Swan	7-30
AG05 0028	Separation Knob	3-17
AG05 1036	Lock Release Grip - Paper Feed	5-21

Parts No.	Description	Page and Index No.
50530223	Bushing - 8mm	5-53
50530223	Bushing - 8mm	7-44
50530419	Bushing - 10mm	5-66
50560509	Nut Plate - Microswitch	3-71
5201 1796	Stepped Screw - M4	3-33
5203 3127	Toner End Spring	3-77
5205 2697	Bushing - Upper Registration Roller	3-31
5205 2865	Bushing - Paper Feed Roller	7-51
5205 5251	L.E.D Sensor Type - T	5-24
52082672	Spring - Solenoid Release	5-42
5215 2713	Bottom Plate Pad	3-34
5304 1639	Bushing - 8mm	5-33
5304 1639	Bushing - 8mm	7- 3
5413 1882	Stepped Screw	3-22
5413 1882	Stepped Screw	5-23
54143327	Ball Bearing - Fusing and Invertor	7-10
5415 2875	Spring Anchor	5-37
54285090	Toner Supply Solenoid	5-44
54432668	Bushing	5-68
54432668	Bushing	7-47
54465832	Connector Guide Pin	3-67
58942229	Solenoid Pin	5-45
59185722	Photosensor	7- 6

Parts No.	Description	Page and Index No.
025200806	Screw - M2x8	3-103
0313 0040B	Philips Pan Head Screw - M3x4	5-112
0313 0040B	Philips Pan Head Screw - M3x4	7-110
031300608	Philips Pan Head Screw - M3x6	3-101
031300606	Philips Pan Head Screw - M3x6	5-105
0313 0060B	Philips Pan Head Screw - M3x6	7-108
0313 0100B	Philips Pan Head Screw - M3x10	7-103
031301608	Philips Pan Head Screw - M3x16	3-114
0314 0060B	Philips Pan Head Screw - M4x6	3-104
0314 0060B	Philips Pan Head Screw - M4x6	5-104
0314 0060B	Philips Pan Head Screw - M4x6	7-101
0314 0080B	Philips Pan Head Screw - M4x8	7-109
031401008	Philips Pan Head Screw - M4x10	5-107
0314 0140B	Philips Pan Head Screw - M4x14	3-109
0314 0140B	Philips Pan Head Screw - M4x14	7-115
0314 0160B	Philips Pan Head Screw - M4x16	3-111
0315 0080B	Philips Pan Head Screw - M5x8	5-106
0344 0060F	Philips Truss Head Screw - M4x6	3-113
0574 0040E	Hexagon Headless Set Screw - M4x4	3-105
0574 0040E	Hexagon Headless Set Screw - M4x4	5-108
0574 0040E	Hexagon Headless Set Screw - M4x4	7-107
0705 0030C	Toothed Washer - M3	3-110
0705 0040C	Toothed Washer - M4	3-107
0708 0050B	Washer - M5	5-114
0710 0040B	Hexagon Nut - M4	3-112
0710 0050B	Hexagon Nut - M5	3-116
0710 0060B	Hexagon Nut - M6	5-102
0720 0025Z	Retaining Ring - M2.5	5-111
07200030Z	Retaining Ring - M3	5-115
0720 0030Z	Retaining Ring - M3	7-112
0720 0040Z	Retaining Ring - M4	3-102
0720 0040Z	Retaining Ring - M4	5-101
0720 0060Z	Retaining Ring - M6	3-106
0720 0060Z	Retaining Ring - M6	5-109
0720 0060Z	Retaining Ring - M6	7-104

Parts No.	Description	Page and Index No.
0720 0070Z	Retaining Ring - M7	7-105
0720 0080Z	Retaining Ring - M8	5-113
0720 0080Z	Retaining Ring - M8	7-111
0720 0100Z	Retaining Ring - M10	7-106
0805 3270	Ball Bearing - 8x16x511111	5-110
0807 4083	Washer 5mm	3-117
0951 30068	Philips Screw With Flat Washer - M3x6	3-108
0951 30066	Philips Screw With Flat Washer - M3x6	7-102
0951 4006B	Philips Screw With Flat Washer - M4x6	5-116
11000878	Connecting Cap	9-101
1100 1159	Socket - Mate-N-Lock	9-102
1100 1259	Socket - Mate-N-Lock	9-103
1100 1327	Contact	9-104
1100 1342	Terminal	9-105
1100 1346	Pin Contact	9-106
1102 1089	Connector - 3P	9-107
1102 1306	Connector - 3P	9-108
1102 1396	Connector - 2P	9-109
1102 1910	Connector - 2P	9-110
1102 4403	Connector - 10P	9-111
1105 0032	Clamp	7-113
1105 0087	Clamp	5-103
1105 0089	Cable Clip - 11.5mm	7-114
1204 0795	Microswitch	3-115

Parts No.	Description	Page and Index No.