

Installing the Drivers

Before installing the UC6 you will need to ensure the following have been done:-

- You have a Digital Duplicator.
- The PC/PCs or Apple computer have been setup on a functioning network.

Note: TCP/IP Networks - The UC6 requires a DHCP Server for IP address assignment.

If the network is not setup like this, install the NETBUI or IPX/SPX protocols onto the client computer/s

- If installing onto a Model C235 you will need the interface harness from the Type-10 interface kit (From your Digital Duplicator supplier).

▣▣▣▣ Unpack the box and check you have the following items.

- 1 x UC6
- 1 x Power Cable
- 1 x Data Cable

▣▣▣▣ Place the UC6 no further than 2 meters from the Digital Duplicator.

▣▣▣▣ Locate the power cable and connect to the power socket on the back of the UC6. Set the power selector to 110v or 220v depending on your power supply. See figure 1a.

Warning!

Incorrect setting of the power selector will damage the UC6.

▣▣▣▣ Connect one end of an ethernet network cable to the ethernet port on the back of the UC6 and the other end to your network hub. See figure 1a.

▣▣▣▣ Locate the Female to Male DB25 Data Cable from the UC6 kit. Connect the male end to the external port on the Digital Duplicator and the female end to the port on the back of the UC6. See figure 1a.

▣▣▣▣ Plug in the Power cable into the mains socket.

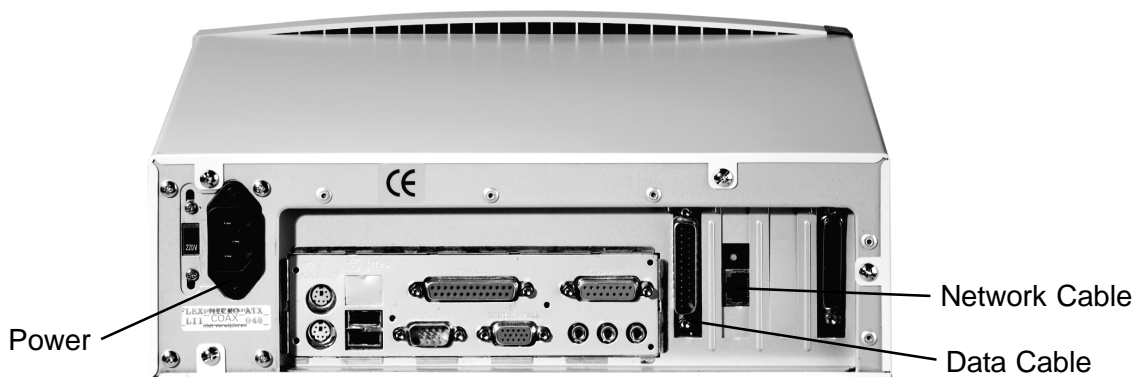


Figure 1a

▣▣▣▣ Press the “ON” button at the front of the UC6.

▣▣▣▣ Wait approximately 2 minutes for the UC6 to boot up.

▣▣▣▣ Once the UC6 has booted up the driver needs to be installed onto the client computer. Refer to the Operators Manual for this procedure. To obtain the Operators manual please follow the instructions on page 2.

◆ **TO TURN THE UC6 OFF PRESS THE RESET BUTTON WAIT FOR THE UC6 TO BEEP AND THEN PRESS THE POWER BUTTON ONCE.**

Installing the UC6 Hardware

Windows 95,98 and ME

- ▣▣▣▣ On the client computer **right** click on “Network Neighbourhood” or “My Network Places” depending on the operating system.
- ▣▣▣▣ Select “Find Computer”.
- ▣▣▣▣ In the “Find Computer” dialogue box, type in the name of the UC6. Located on the front bezel of the UC6. e.g. UC6000XX. Click “Find”.
- ▣▣▣▣ If you have connected the network correctly the UC6 icon will appear in the search results.
- ▣▣▣▣ Double click on the UC6 icon.
- ▣▣▣▣ Double click on the “Support” folder.
- ▣▣▣▣ Double click on the “Manual” folder.
- ▣▣▣▣ Copy the Operators Manual onto the hard drive of your machine.
- ▣▣▣▣ To read the Operators manual you require Acrobat Reader 4. If you do not have it installed double click on the Acrobat exe located in the Manuals folder or download it from the Adobe internet site www.adobe.com.
- ▣▣▣▣ Follow the instructions in the Operators Manual to complete the driver installation.

Apple Macintosh

- ▣▣▣▣ Select “Chooser” from the Apple menu.
- ▣▣▣▣ Click on the AppleShare icon.
- ▣▣▣▣ Double click on the UC6 computer icon named according to the serial number and click “OK”.
- ▣▣▣▣ Select “Guest” and click “Connect”.
- ▣▣▣▣ The shared folder Macsupport will be displayed. Select it then click “OK”.
- ▣▣▣▣ The Apple Share icon “Macsupport” will be placed on the desktop.
- ▣▣▣▣ Double click on the icon.
- ▣▣▣▣ Select the language you would like and double click.
- ▣▣▣▣ To read the Operators manual you require Acrobat Reader 4. If you do not have it installed double click on the Acrobat Installer located in the Manuals folder or download it from the Adobe internet site www.adobe.com.
- ▣▣▣▣ Follow the instructions in the Operators Manual to complete the driver installation.