


RICOH

Priport

JP1010/1050

OPERATING INSTRUCTIONS

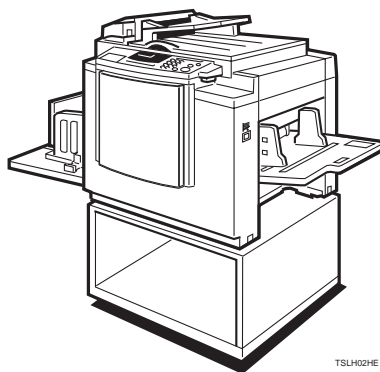

TSLH02HE

Read this manual carefully before you use this product and keep it handy for future reference.
For safety, please follow the instructions in this manual.

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.


Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.



Notes:

Some illustrations may be slightly different from your machine.

Certain options may not be available in some countries. For details, please contact your local dealer.



Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual.

- A4 drum: JP1010
- B4 drum: JP1050

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the Metric version.

For good print quality, Ricoh recommends that you use genuine Ricoh master and ink.

Ricoh shall not be responsible for any damage or expense that might result from the use of parts other than genuine Ricoh parts in your Ricoh office product.

Power Source

220 – 240 V, 50/60 Hz, 1.5 A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see ⇒ P.110 “Power connection”.



Declaration of Conformity

"The Product complies with the requirements of the EMC Directive 89/336/EEC and the Low Voltage Directive 73/23/EEC."

In accordance with ISO Standard 7001, this machine uses the following symbols for the main switch:

I means **POWER ON.**

O means **POWER OFF.**



RICOH COMPANY, LTD.

15-5, 1 chome, Minami-Aoyama, Minato-ku, Tokyo
Telephone: Tokyo 3479-3111

Overseas Affiliates

U.S.A.

RICOH CORPORATION
5 Dedrick Place
West Caldwell, New Jersey 07006
Phone: +1-973-882-2000

The Netherlands

RICOH EUROPE B.V.
Groenelaan 3, 1186 AA, Amstelveen
Phone: +31-(0)20-5474111

United Kingdom

RICOH UK LTD.
Ricoh House,
1 Plane Tree Crescent, Feltham,
Middlesex, TW13 7HG
Phone: +44-(0)181-261-4000

Germany

RICOH DEUTSCHLAND GmbH
Mergenthalerallee 38-40,
65760 Eschborn
Phone: +49-(0)6196-9060

France

RICOH FRANCE S.A.
383, Avenue du Général de Gaulle
BP 307-92143 Clamart Cedex
Phone: +33-(0)1-40-94-38-38

Spain

RICOH ESPAÑA S.A.
Avda. Litoral Mar, 12-14,
08005 Barcelona
Phone: +34-(0)93-295-7600

Italy

RICOH ITALIA SpA
Via della Metallurgia 12,
37139 Verona
Phone: +39-(0)45-8181500

Hong Kong

RICOH HONG KONG LTD.
23/F., China Overseas Building,
139, Hennessy Road,
Wan Chai, Hong Kong
Phone: +852-2862-2888

Singapore

RICOH ASIA PACIFIC PTE.LTD.
260 Orchard Road,
#15-01/02 The Heeren,
Singapore 238855
Phone: +65-830-5888


Safety Information

When using your machine, the following safety precautions should be always be followed.

Safety During Operation


In this manual, the following important symbols are used:

 **WARNING:**
Ignoring this warning could cause serious injury or even death.


 **CAUTION:**
Ignoring this caution could cause injury or damage to property.

Examples Of Indications




Symbols  mean a situation that requires you take care.



Do NOT carry out the operation represented by this symbol .
This example means “Do not take apart”.



Symbols  mean you MUST perform this operation.
This example means “You must remove the wall plug”.

⚠ WARNING:



- **Only connect the machine to the power source described on the inside front cover of this manual.**
- **Avoid multi-wiring.**
- **Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it, pull it hard or bend it more than necessary. These actions could cause an electric shock or fire.**
- **Do not plug or unplug the power cord with your hands wet. Otherwise, an electric shock might occur.**



- **Make sure the wall outlet is near the machine and freely accessible so that in event of an emergency it can be unplugged easily.**



- **Do not remove any covers or screws other than those specified in this manual. Some parts of the machine are at a high voltage and could give you an electric shock. When the machine needs to be checked, adjusted, or repaired, contact your service representative.**
- **Do not take apart or attempt any modifications to this machine. There is a risk of fire, electric shock, explosion or loss of sight.**



- **If the machine looks damaged or breaks down, smoke is coming out, there is a strange smell or anything looks unusual, immediately turn off the main switch then unplug the power cord from the wall. Do not continue using the machine in this condition. Contact your service representative.**
- **If metal, liquid or foreign matter falls into the machine, turn off the main switch and unplug the main power cord. Contact your service representative. Do not keep using the machine with a fault or defect.**



- **Do not put any metal objects or containers holding water (e.g. vases, flowerpots, glasses) on the machine. If the contents fall inside the machine, a fire or electric shock could occur.**

⚠ CAUTION:



- *Keep the machine away from humidity and dust. A fire or an electric shock might occur.*
- *Do not place the machine on an unstable or tilted surface. If it topples over, it could cause injury.*



- *After you move the machine, fix it with the caster fixture. Otherwise, the machine might move or come down to cause a personal injury.*



- *When you move the machine, unplug the power cord from the wall outlet to avoid fire or electric shock.*
- *When the machine will not be used for a long time, unplug the power cord.*



- *When you pull out the plug from the socket, grip the plug to avoid damaging the cord and causing fire or electric shock.*



- *If you use the machine in a confined space, make sure there is a continuous air turnover.*



- *Do not reuse stapled paper. Do not use aluminum foil, carbon-containing paper or other conductive paper. Otherwise, a fire might occur.*



- *This machine has been tested for safety using this supplier's parts and consumables. We recommend you only use these specified supplies.*



- *This equipment is only to be installed by a qualified service personnel.*



- *Deliver to collection point for waste products. Do not be disposed of via domestic refuse collection.*



- *If ink comes into contact with your eyes, rinse immediately in running water. In the case of any abnormal symptoms, consult a doctor.*



- *Keep the ink or ink container out of reach of children.*



- *If ink is ingested, force vomiting by drinking a strong saline solution and consult a doctor immediately.*



- *Be careful not to cut yourself on any sharp edges when you reach inside the machine to remove misfed sheets of paper or masters.*



- *Do not touch the belt at the end of the paper delivery table. Do not insert your hands under the paper feed table or the paper delivery table. You might be injured.*

How To Read This Manual

Symbols

In this manual, the following symbols are used:

WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

* The statements above are notes for your safety.

Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

Note

This symbol indicates precautions for operation, or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

Reference

This symbol indicates a reference.

[]

Keys that appear on the machine's panel display.

[]

Keys built into the machine's operation panel.

What You Can Do With This Machine

❖ Standard Printing

See ⇒ P.5 “Standard Printing”.

❖ Adjusting The Print Image Position

See ⇒ P.8 “Adjusting The Print Image Position”.

❖ Adjusting The Print Image Density

See ⇒ P.10 “Adjusting The Print Image Density”.

❖ Making Half-tone Prints

See ⇒ P.11 “Tint Mode—Making Half-tone Prints”.

❖ Making Clear Prints



See ⇒ P.12 “Fine Mode—Making Clear Prints”.

❖ Changing The Print Speed

See ⇒ P.13 “Changing The Printing Speed”.


❖ Reducing And Enlarging Using Preset Ratios

See ⇒ P.15 “Preset Reduce/Enlarge—Reducing And Enlarging Using Preset Ratios”.

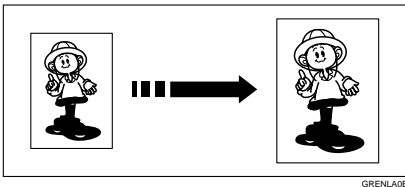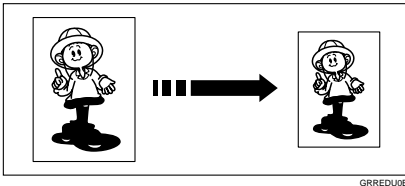

❖ Erasing Center And Edge Margins

See ⇒ P.17 “Center/Edge Erase—Erasing Center And Edge Margins”.

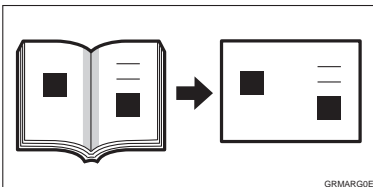

❖ **Erasing Edge Margins**

See ⇒ P.19 *"Edge Erase—Erasing Edge Margins"*.

❖ **Erasing The Shadow Of Pasted Originals**

See ⇒ P.21 *"Paste Shadow Erase—Erasing The Shadow Of Pasted Originals"*.

❖ **Printing On Thick Or Thin Paper**

See ⇒ P.22 *"Printing On Thick Or Thin Paper"*.

❖ **Selecting Original Type**

See ⇒ P.23 *"Selecting Original Type"*.

❖ **Ink Saving**


See ⇒ P.24 *"Economy Mode—Ink Saving"*.

❖ **Printing From Several Originals At Once**

See ⇒ P.25 *"Auto Cycle—Printing From Several Originals At Once"*.


❖ **Group Printing From The Same Original**

See ⇒ P.27 *"Class Mode—Group Printing From The Same Original"*.

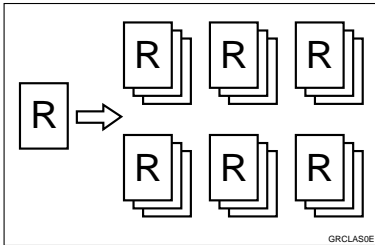


❖ **Group Printing From Different Originals**

See ⇒ P.29 *"Memory Mode—Group Printing From Different Originals"*.

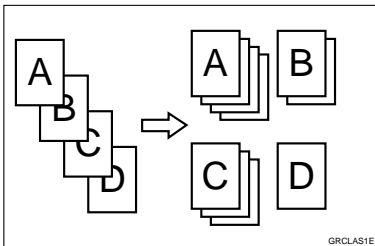

❖ **Combining Originals Into One Print**

See ⇒ P.32 *"Combine Copies—Combining 2 Originals Into One Print"*.

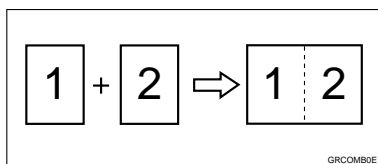

❖ **Skip Feed Printing**

See ⇒ P.35 *"Skip Feed Printing"*.

❖ **Storing Your Print Settings In Memory**

See ⇒ P.36 *"Program—Storing Your Print Settings In Memory"*.

❖ **Printing Secret Documents**

See ⇒ P.40 *"Security Mode—Printing Secret Documents"*.

❖ **Making Color Prints**


See ⇒ P.49 *"Making Color Prints"*.

❖ **Printing In Two Colors**

See ⇒ P.51 *"Printing In Two Colors"*.

Guide To Components

Machine Exterior

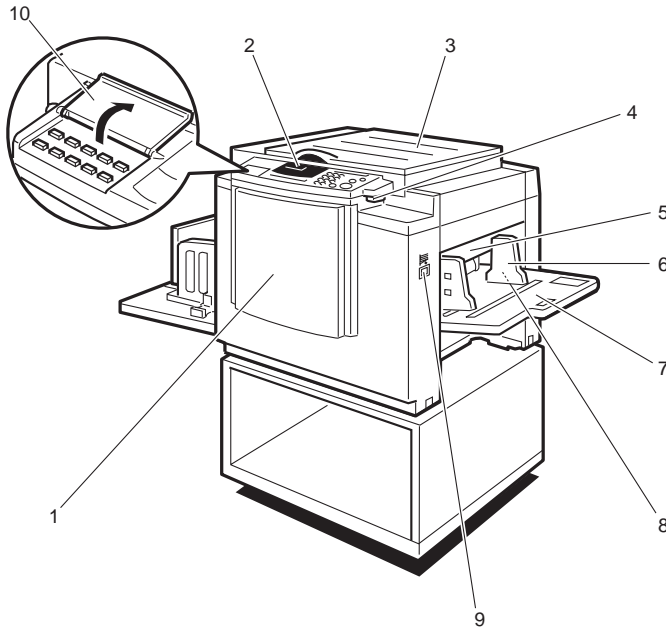

TSUH01EE

1. Front Door

Open for access to the inside of the machine.

2. Operation Panel

Operator controls and indicators are located here. See ⇒ P.xii "Operation Panel".

3. Platen Cover

Lower this cover over an original before printing.

4. Original Table Release Lever

Use to open the original table unit when installing the master.

5. Feed Roller Pressure Lever

Use to adjust the contact pressure of the paper feed roller according to paper thickness.

6. Paper Feed Side Plates

Use to prevent paper skew.

7. Paper Feed Table

Set paper on this table for printing.

8. Side Table Fine Adjusting Dial

Use to shift the paper feed table sideways.


9. Paper Feed Table Down key

Press to lower the paper feed table.

10. Behind Cover

Flip up when you use the keys underneath.

Machine Interior

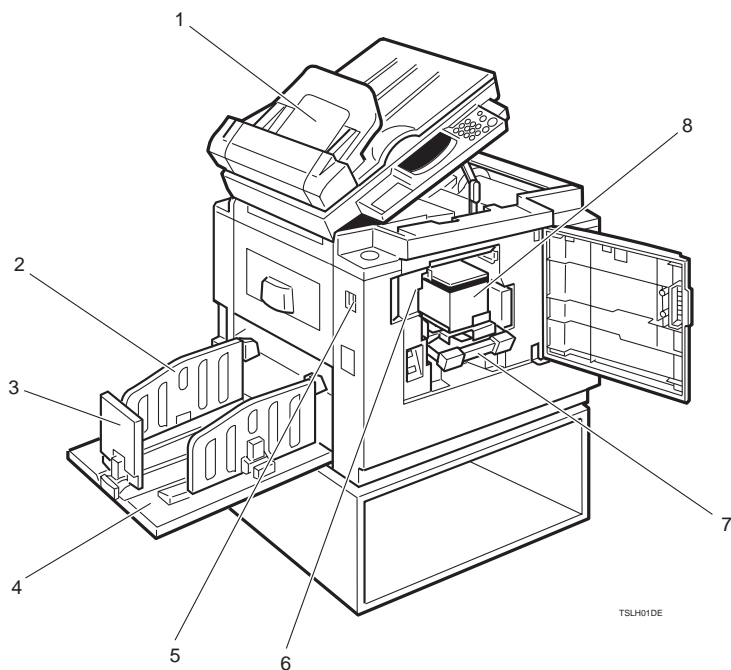

1. Document Feeder (Option)

Original inserted into the document feeder are individually and automatically fed onto and removed from the exposure glass. See ⇒ P.41 "Printing Using The Optional 30 Originals Document Feeder".

2. Paper Delivery Side Plates

Use to align the prints on the paper delivery table.

3. Paper Delivery End Plate

Use to align the leading edge of prints.

4. Paper Delivery Table

Completed prints are delivered here.

5. Main Switch

Use to turn the power on or off.

6. Drum Unit

The master is wrapped around this unit.

7. Drum Unit Lock Lever


Lift to unlock and pull out the drum unit.

8. Ink Holder

Set the ink cartridge in this holder.

Options

◆ 30 Originals Document Feeder

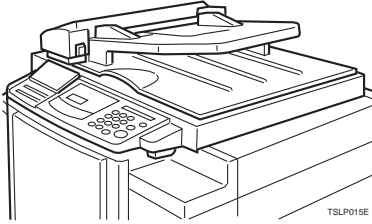


Note

- Other options:
 - Color Drum: B4 drum
 - Color Drum: A4 drum
 - Tape Dispenser
 - Key Counter

Operation Panel

Keys

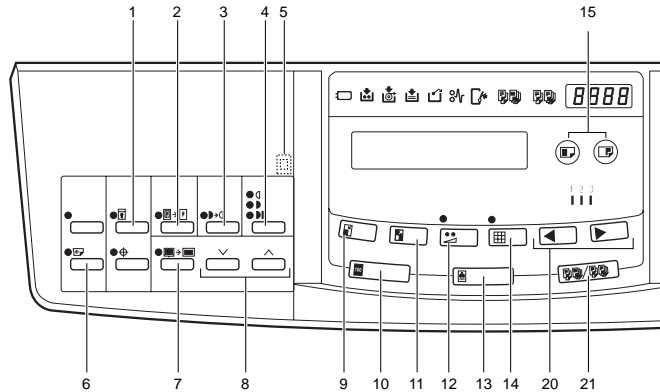

1. **【Security】** key

Press to make prints of secret documents. See ⇒ P.40 “*Security Mode—Printing Secret Documents*”.

2. **【Paste Shadow Erase】** key

Press to erase the shadow of pasted originals. See ⇒ P.21 “*Paste Shadow Erase—Erasing The Shadow Of Pasted Originals*”.

3. **【Tint】** key

Press to make half-tone prints. See ⇒ P.11 “*Tint Mode—Making Half-tone Prints*”.

4. **【Image Density】** key

Press to make prints darker or lighter. See ⇒ P.10 “*Adjusting The Print Image Density*”.

5. **Check Indicator**

This indicator lights when you have selected one or more of the functions accessed by lifting the behind cover and pressing the keys underneath (e. g. **【Security】** key, **【Paste Shadow Erase】** key etc.).

This lets you know whether one or more of these functions is selected, even if the cover is lowered.

6. **【Skip Feed】** key

Press to select skip feed printing. See ⇒ P.35 “*Skip Feed Printing*”.

7. **【Center/Edge Erase】** key

Press to print book originals that have a solid image on the center or edges. See ⇒ P.17 “*Center/Edge Erase—Erasing Center And Edge Margins*”.

8. **【∨】 and **【∧】** keys (Scroll keys)**

Press to select size and direction of paper or original in Center/Edge Erase.

9. **【Reduce】** key

Press to reduce the image. See ⇒ P.15 “*Preset Reduce/Enlarge—Reducing And Enlarging Using Preset Ratios*”.

10. **【Full Size】** key


Press to make full size prints.

11. **【Enlarge】** key

Press to enlarge the image. See ⇒ P.15 “*Preset Reduce/Enlarge—Reducing And Enlarging Using Preset Ratios*”.

12. **【Economy】** key

Press to save ink. See ⇒ P.24 “*Economy Mode—Ink Saving*”.

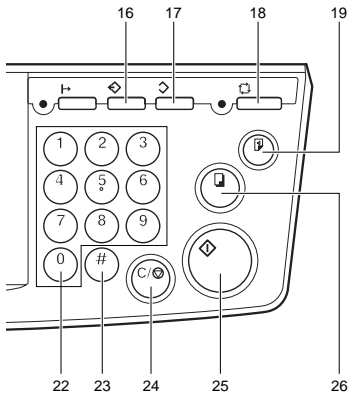

TSB.9022E

13. [Type of Original] key

Press to select Letter, Photo, or Letter/Photo mode. See ⇒ P.23 “Selecting Original Type”.

14. [Fine] key

Press to select the fine image. See ⇒ P.12 “Fine Mode—Making Clear Prints”.

15. [Image Position] key

Press to shift the image forwards or backwards. See ⇒ P.8 “Adjusting The Print Image Position”.

16. [Program] key

Press to input or recall user programs. See ⇒ P.36 “Program—Storing Your Print Settings In Memory”.

17. [Clear Modes] key

Press to clear the previously entered job settings.

18. [Auto Cycle] key

Use to process the master and make prints automatically. See ⇒ P.25 “Auto Cycle—Printing From Several Originals At Once”.

19. [Proof] key

Press to make proof prints.

20. [◀] and [▶] keys (Speed keys)

Press to adjust the printing speed. See ⇒ P.13 “Changing The Printing Speed”.

21. [Memory/Class] key

Press to select Memory or Class mode. See ⇒ P.27 “Class Mode—Group Printing From The Same Original” or ⇒ P.29 “Memory Mode—Group Printing From Different Originals”.

22. [Number] keys

Press to enter the desired number of prints and data for selected modes.

23. [#] key

Use to enter data in selected modes.

24. [Clear/Stop] key

While entering numbers, press to cancel a number you have entered.

While copying, press to stop copying.


25. [Start] key

Press to make a master.

26. [Print] key

Press to start printing.

Indicators

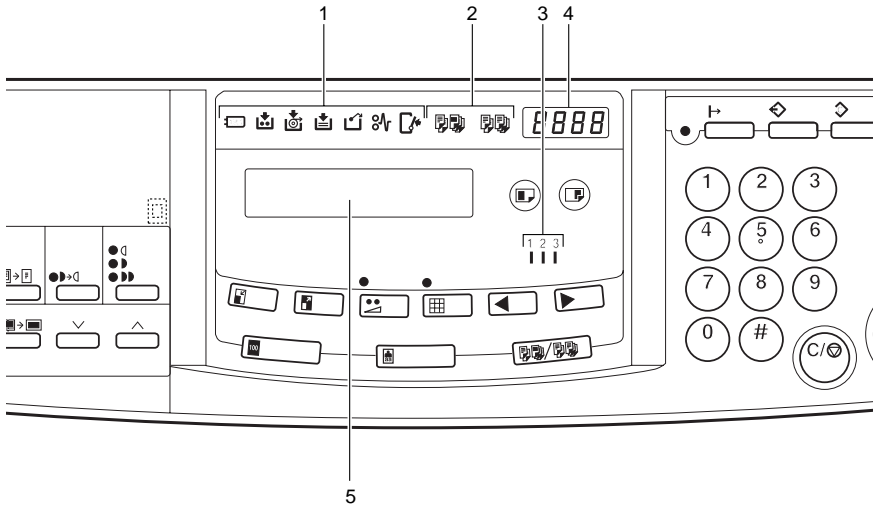

1. Error Indicators

These indicators are lit when a non-standard condition occurs within the machine.

2. Memory/Class Indicator

Shows the number entered in Memory or Class mode.

3. Speed Indicators

These indicators show the printing speed that is selected.

4. Counter

Displays the number of prints entered. While printing, it shows the number of prints remaining.

5. Guidance Display

Display the machine's condition.

TABLE OF CONTENTS

1. OPERATION

Printing Paper	1
Originals	2
Preparation For Printing	3
Loading Paper	3
Setting Up The Paper Delivery Table	4
Standard Printing	5
Restoring Paper Feed And Paper Delivery Tables	7
Adjusting The Print Image Position	8
Shifting The Print Image Position Forward Or Backward	8
Shifting The Print Image Position To The Right Or Left	8
Adjusting The Print Image Density	10
Before Making A Master	10
After Making A Master	10
Tint Mode—Making Half-tone Prints	11
Fine Mode—Making Clear Prints	12
Changing The Printing Speed	13
Stopping The Machine During The Multi-print Run	14
When You Want To Stop The Machine During The Multi-print Run And Print The Next Original	14
When You Want To Change The Number Of Prints Entered Or Check The Completed Prints	14
Preset Reduce/Enlarge—Reducing And Enlarging Using Preset Ratios 15	
Center/Edge Erase—Erasing Center And Edge Margins	17
Edge Erase—Erasing Edge Margins	19
Paste Shadow Erase—Erasing The Shadow Of Pasted Originals	21
Printing On Thick Or Thin Paper	22
Printing On Thick Paper	22
Printing On Thin Paper	22
Selecting Original Type	23
Economy Mode—Ink Saving	24
Auto Cycle—Printing From Several Originals At Once	25
Class Mode—Group Printing From The Same Original	27
Memory Mode—Group Printing From Different Originals	29
Combine Copies—Combining 2 Originals Into One Print	32
Skip Feed Printing	35

Program—Storing Your Print Settings In Memory	36
Storing Your Settings	36
Recalling A Program	37
Protecting A Program	38
Removing Program Protection	39
Security Mode—Printing Secret Documents	40


2. OPTIONAL FUNCTIONS

Printing Using The Optional 30 Originals Document Feeder	41
Document Feeder Exterior	41
Originals	41
Setting Originals In The Document Feeder	42
Combine Copies With The Document Feeder	44
Memory Mode With The Document Feeder	45
Color Printing Using The Optional Color Drum	49
Making Color Prints	49
Changing The Color Drum Unit	49
Printing In Two Colors	51

3. SERVICE PROGRAM MODE

Accessing Service Programs	53
Changing The Settings Of Service Programs	54
Service Program Menu	55
User Codes	62
How To Set User Code Mode (# 120)	62
How To Use User Code Mode	63
How To Check The User Code Counter (# 121)	63
How To Clear The User Code Counter (# 122)	64
How To Check The Total Number Of Masters And Prints Made Under All User Codes (# 123)	65
How To Clear The User Code Total Counter (# 124)	66

4. REPLENISHING SUPPLIES

Loading Paper On The Paper Feed Table	69
Replenishing Paper	69
Changing The Paper Size	70
When The Add Ink Indicator () Blinks	71
Master Roll Replacement	74
Placing A New Roll Of Tape In The Tape Dispenser (Option)	76

5. WHAT TO DO IF SOMETHING GOES WRONG

If Your Machine Does Not Operate As You Want	79
---	-----------

✂ Clearing Misfeeds	82
“✂” + “ORIGINAL JAM. REMOVE ORIGINAL”	82
“✂” + “PAPER FEED JAM. REMOVE JAMMED PAPER”	85
“✂” + “MASTER FEED JAM. REMOVE JAMMED MASTER”	88
“✂” + “PAPER WRAP JAM. REMOVE JAMMED PAPER”	89
“✂” + “MASTER EJECT JAM. REMOVE JAMMED MASTER”	92
“✂” + “DELIVERY JAM. REMOVE JAMMED PAPER”	94
When The Open Cover/Unit Indicator (☐*) Blinks	95
When The Master Eject Indicator (☐) Blinks	97
When Other Indicators Blink	98
When The Prints Are Thrown Over The Paper Delivery Table	99
Poor Printing	100
Dirt On The Back Side Of Paper	100
Dirt On The Front Side Of Paper (Black Line/Stain)	102
White Prints Or Incomplete Prints	102

6. REMARKS

Operation Notes	105
General Cautions	105
Print Paper	107
Originals	107
Where To Put Your Machine	109
Environmental Conditions	109
Power connection.....	110
Access to machine	111
Maintaining Your Machine	112
Main Frame	112
Optional Document Feeder	113
Combination Chart	114

7. SPECIFICATION

Main Frame	115
30 Originals Document Feeder	118
Consumables	119
INDEX	120

This page is intentionally blank.

1. OPERATION

Printing Paper


The following types of print paper are not recommended for this machine.

- Paper smaller than 90 mm × 148 mm, 3.6" × 5.9"
- Paper larger than 268 mm × 388 mm, 10.5" × 15.2"
- Paper heavier than 157.0 g/m², 41.7 lb
- Paper lighter than 47.1 g/m², 12.5 lb
- Roughly-cut paper
- Paper of different thickness in the same stack
- Buckled or curled paper
- Low stiffness paper

Correct curls in the paper before setting it in the machine. When you cannot correct the paper curl, stack the paper with the curl face down. Otherwise the paper might wrap around the drum or stains might appear.

Store paper where it will not curl or absorb moisture. Use paper soon after it is unpacked.

Only use paper where the leading edge has two right angle corners, as shown below.

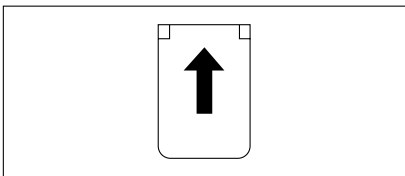
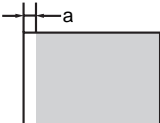


GRPRINDE

Originals

Note

- 1**
- ❑ Originals that can be set on the exposure glass are as follows:
 - Maximum size: 257 × 364 mm, 10.2" × 14.4"
 - Maximum total thickness: 30 mm, 1.1"
 - Maximum total weight: 5 kg, 11.0 lb
 - ❑ If you use paste-up originals, make sure the pasted parts hold firmly to the base sheet and press the **[Paste Shadow Erase]** key. If the thickness of the paste-up original is more than 0.1 mm and the space between the pasted parts is less than 2 mm, 0.08", a shadow might appear on the prints.
 - ❑ If you use originals that have bold letters or solid images at the leading edges, you might get prints with dirty edges. In this case, insert the widest margin first, or raise the printing speed.
 - ❑ The first 5 mm, 0.2" of the leading edge cannot be printed. Make sure the leading edge margin is at least 5 mm, 0.2".


Original	Print
	

- ❑ a: 5 mm, 0.2"


Preparation For Printing

Loading Paper

- 1** Carefully open the paper feed table.

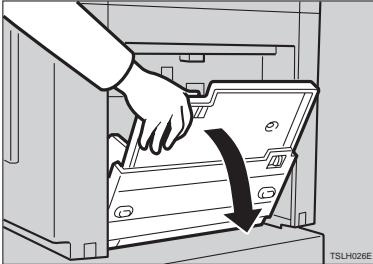


- 2** Put the paper feed side plates lock lever. Adjust the side plates to match the paper size.

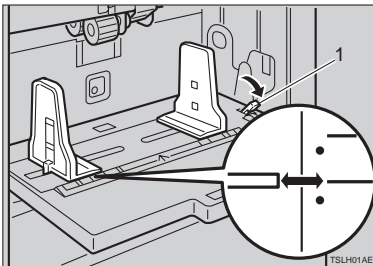

1: Paper Feed Side Plates Lock Lever



- 3** Place the paper on the paper feed table.

1

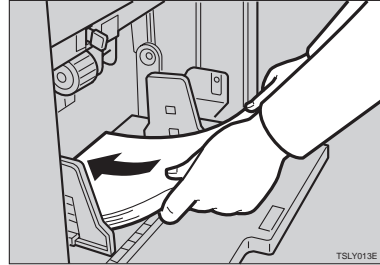


Note


- ❑ Correct the paper curl before setting the paper. If you cannot do so, stack the paper with the curl face down as shown.

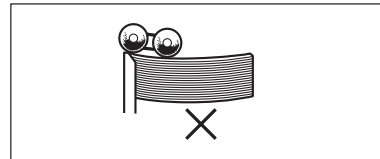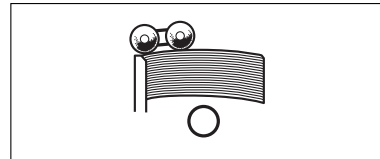


- 4** Make sure that the paper feed side plates touch the paper lightly. Put back the lock lever.

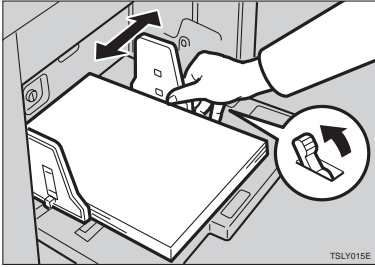


- 2** Lift the paper delivery side plates and adjust them to the paper size.

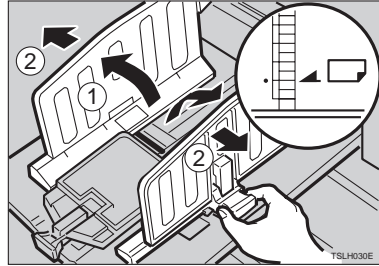

- 3** Lift the paper delivery end plate and move it to match the print paper size.

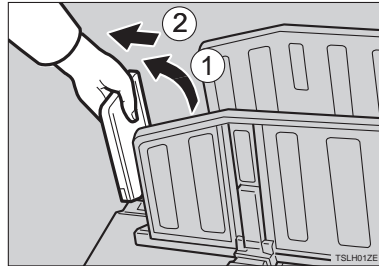


- 4** Turn on the main switch.

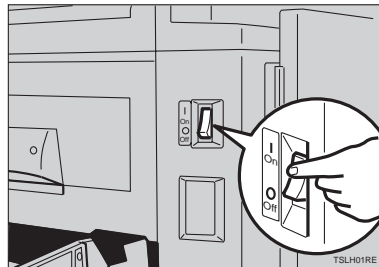

Setting Up The Paper Delivery Table

- 1** Open the paper delivery table.

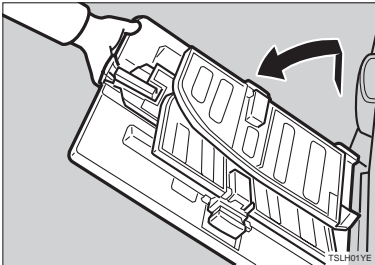

Reference

When the prints are not delivered in a neat stack, see ⇒ P.99 "When The Prints Are Thrown Over The Paper Delivery Table".

Standard Printing


Printing

In this manual, the word, “Printing” is used as opposed to “Copying” in order to distinguish between the process that your machine uses to make prints, and the process used by a standard copier machine.

A standard copier scans in the original for each copy set made. This machine, however, scans in your original once and makes multiple prints from this master.


This chapter describes the basic pointing operations that your machine is capable of.

1 Lift the platen cover.

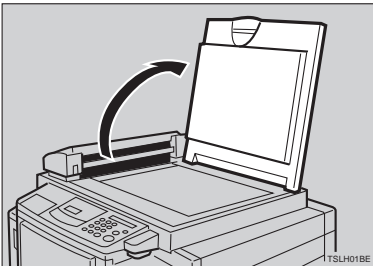


2 Set the original face down on the exposure glass. The original


should be centered according to the size marks on the right scale.

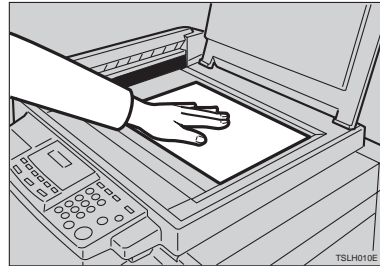

3 Lower the platen cover.

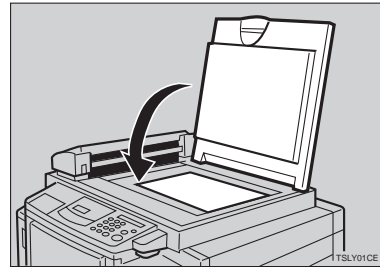


4 Press the [Start] key.

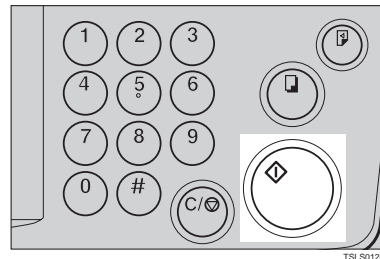

A trial print is delivered to the paper delivery table.


- 5** Press the **[Proof]** key and check the image density and the image position of the proof print.

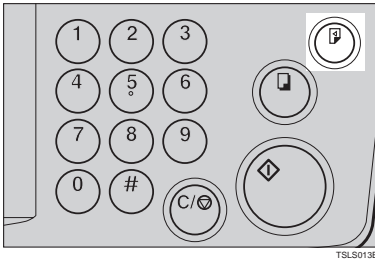

Note

- If the image position is not correct, adjust it using the **[Image Position]** keys or the fine adjustment dial. See ⇒ P.8 “Adjusting The Print Image Position”.
- If the image density is slightly dark or light, adjust the image density using the **[◀]** or **[▶]** key. See ⇒ P.10 “Adjusting The Print Image Density”.


- 6** Enter the number of prints required with the **[Number]** keys.

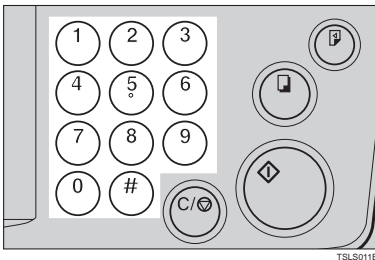

Note

- Up to 9999 prints can be entered at one time.
- To change the number entered, press the **[Clear/Stop]** key and enter the new number.

- 7** Press the **[Print]** key.

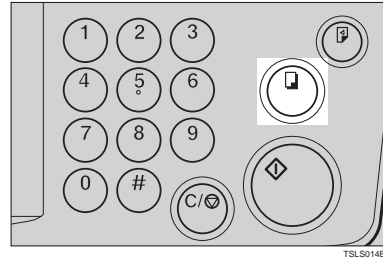


Note

- After printing is completed, the same number of prints is automatically set for the next job.
- To stop the machine during the multi-print run, press the **[Clear/Stop]** key.
- To return the machine to the initial condition after printing, press the **[Clear Modes]** key.

Restoring Paper Feed And Paper Delivery Tables


1

- 1** Remove the paper from the paper feed table.

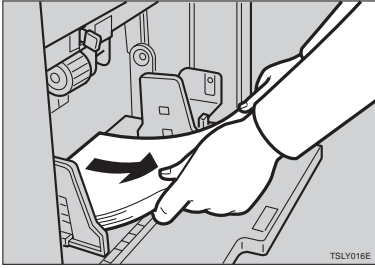


The paper feed table will lower.


- 2** Turn off the main switch.

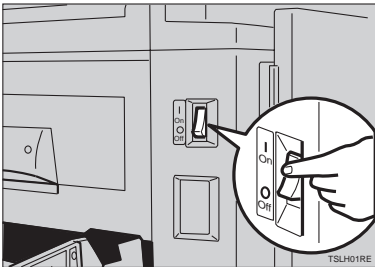


- 3** Close the paper feed table.

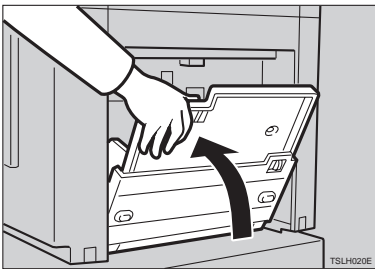

- 4** Move the end plate until the plate handle is flush with the end of the table.

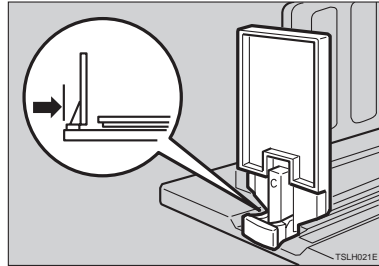

- 5** Lower the end plate.

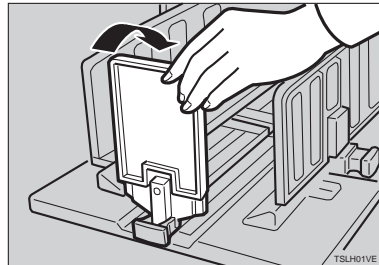

- 6** Move the side plates to the sides, then lower them.



- 7** Close the table.

Adjusting The Print Image Position

1

After master making, you can adjust the print image position to suit your needs. There are two ways:


◆ Shifting The Image Position Forward Or Backward

Shift the image position using the **[Image Position]** keys.

◆ Shifting The Image Position To The Right Or Left

Shift the image position using the side table fine adjusting dial.


Shifting The Print Image Position Forward Or Backward

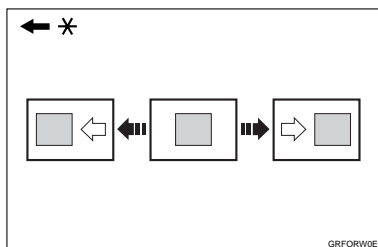

GRFORW0E

* Paper feed direction

1 Press the left **[Image Position]** key to move the image forwards, the right key to move it backwards.

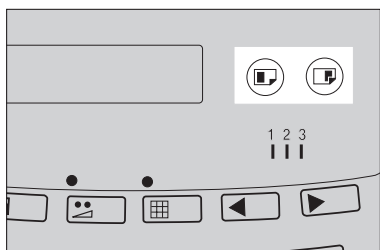


TSL5015E

Note


- When you shift the image forwards, leave a margin (more than 5 mm, 0.2") at the leading edge. If there is no margin, paper might wrap around the drum and cause a misfeed.
- The right or left **[Image Position]** keys shift the image about 0.5 mm, 0.02" each time they are pressed. When the indicator changes, the image position shifts about 5 mm, 0.2".

2 Press the **[Proof]** key to check the image position.

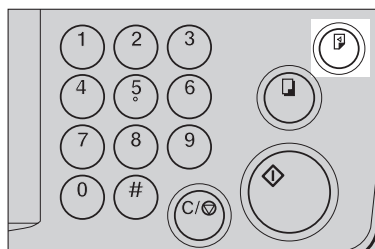

TSL5013E

Shifting The Print Image Position To The Right Or Left

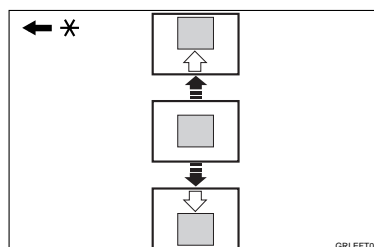

GRLEFT0E

* Paper feed direction

1 Turn the side table fine adjusting dial as shown in the illustrations.

◆ Shifting the image to the right



◆ Shifting the image to the left




Note

- The image position can be shifted up to about 10 mm, 0.4" each way. Each division on the scale is 2 mm, 0.08".

2 Adjust the paper delivery side plates to the print paper position.

3 Press the **[Proof]** key to check the image position.

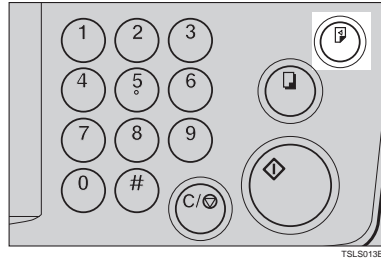

1

Adjusting The Print Image Density


1

You can adjust the print image density to suit your needs. There are two ways:

- ◆ **Before Making A Master**
Adjust the image density using the **[Image Density]** key.
- ◆ **After Making A Master**
Adjust the image density using the **[◀]** or **[▶]** key.

Before Making A Master

- 1 Use the **[Image Density]** key before pressing the **[Start]** key.

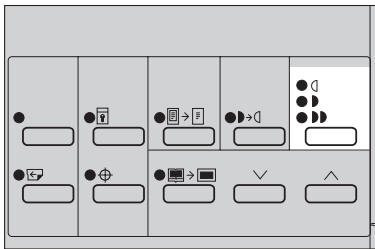


TSL5016E

After Making A Master

- 1 Press the **[◀]** or **[▶]** key. To increase the speed, press the **[▶]**

key. To reduce the speed, press the **[◀]** key.

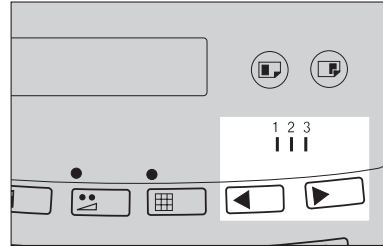


TSL5017E

Note


- The faster the printing speed becomes, the lighter the printing density is. If you want darker prints, decrease the printing speed.

Tint Mode—Making Half-tone Prints

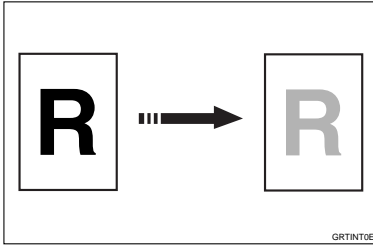


Use the **[Tint]** key to make half-tone prints.

- 1 Press the **[Tint]** key to select Tint mode.

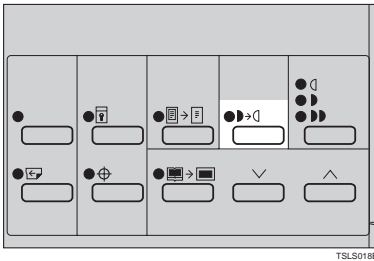

- 2 Set your originals on the exposure glass or in the optional document feeder.

- 3 Press the **[Start]** key.

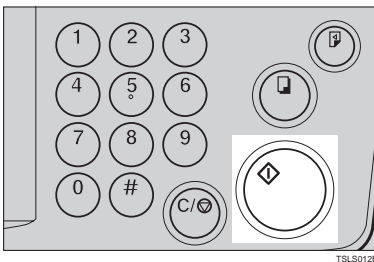


- 4 Check the image position of the trial or proof print.

Note

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “Adjusting The Print Image Position”) or the side table fine adjusting dial (see ⇒ P.8 “Shifting The Print Image Position To The Right Or Left”).

- 5 Enter the number of prints with the **[Number]** keys.

- 6 Press the **[Print]** key.

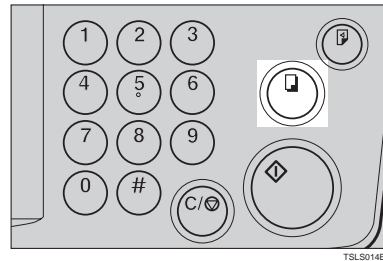


Fine Mode—Making Clear Prints

1


Use the **[Fine]** key to make clear prints.

- 1 Press the **[Fine]** key to select Fine mode.

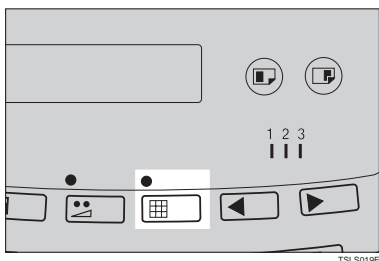


- 4 Enter the number of prints with the **[Number]** keys.

- 5 Press the **[Print]** key.

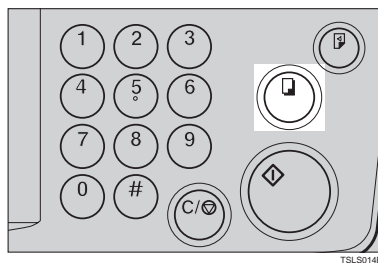

- 2 Set your originals on the exposure glass or in the optional document feeder.

- 3 Press the **[Start]** key. Check the image position of the trial or proof print.

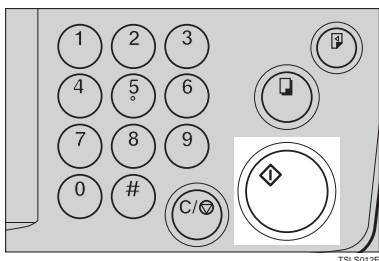

Note


- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “Adjusting The Print Image Position”) or the side table fine adjusting dial (see ⇒ P.8 “Shifting The Print Image Position To The Right Or Left”).

Changing The Printing Speed

Use the [◀] or [▶] key to adjust the speed of the machine with the image density and printing paper.

1

1 Press the [▶] key to increase the speed and press the [◀] key to reduce the speed.

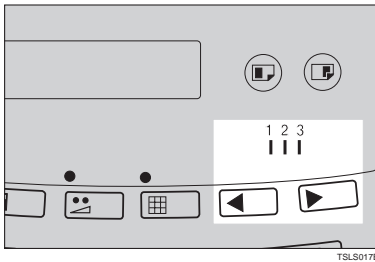

Note


- ❑ The following speeds are available:
 - Setting 0:
80 sheets/minute
 - Setting 1:
100 sheets/minute
 - Setting 2:
120 sheets/minute
- ❑ As a default setting, Setting 1 is selected.
- ❑ The faster the printing speed becomes, the lighter the printing density is, and vice versa.

Stopping The Machine During The Multi-print Run

1

When You Want To Stop The Machine During The Multi-print Run And Print The Next Original


1 Press the **[Clear/Stop]** key.

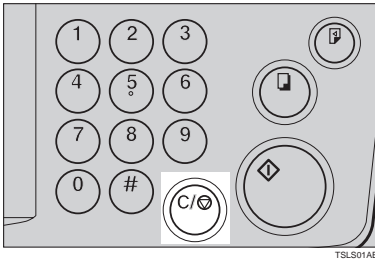

TSL501AE

2 Set the new original.


3 Enter the number of prints and press the **[Start]** key.

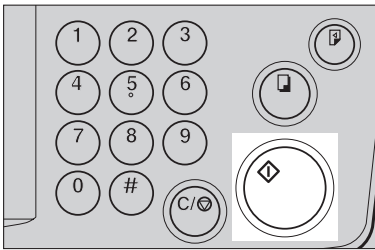

TSL5012E

When You Want To Change The Number Of Prints Entered Or Check The Completed Prints

1 Press the **[Clear/Stop]** key.

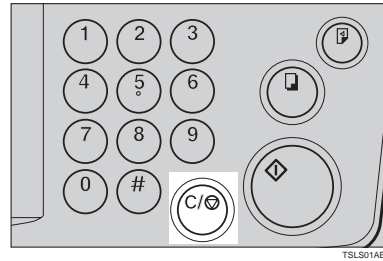


TSL501AE

2 Change the number of prints or check the completed prints.

Note

- When you change the number of prints, you can re-enter the number with the **[Number]** keys after pressing the **[Clear/Stop]** key.



3 Press the **[Print]** key.

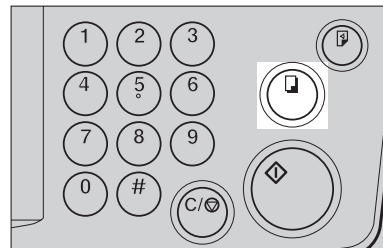

TSL501AE

Preset Reduce/Enlarge—Reducing And Enlarging Using Preset Ratios

You can select a preset ratio for printing.

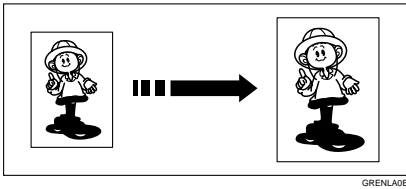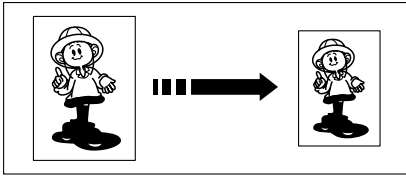

Prints can be reduced or enlarged as follows:

◆ Reduction (Metric version)

Reduction Ratio	Original Size	Print Size
93 %	*1	
87 %	A5	B6
	A4	B5
82 %	B4	A4
	B5	A5
71 %	A4	A5
	B4	B5

*1 Select this ratio when you make prints with a lot of edge margins.


Note

The center and the leading edge of the print image do not shift when a print image is made with this function.

◆ Reduction (Inch version)

Reduction Ratio	Original Size	Print Size
93 %	*1	
77 %	8 ¹ / ₂ "×14"	8 ¹ / ₂ "×11"
74 %	10"×14"	8 ¹ / ₂ "×11"
65 %	8 ¹ / ₂ "×11"	5 ¹ / ₂ "×8 ¹ / ₂ "

*1 Select this ratio when you make prints with a lot of edge margins.

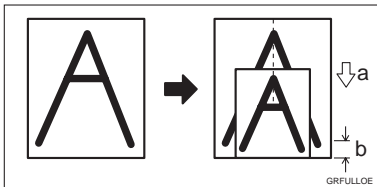

a: Paper Feed Direction

b: Constant

- You can select one of 7 preset ratios (3 enlargement ratios, 4 reduction ratios).
- You can select a ratio regardless of the size of an original or printing paper. With some ratios, parts of the image might not be printed or margins will appear on prints.


◆ Enlargement (Metric version)

Enlarge-ment Ratio	Original Size	Print Size
141 %	B5	B4
	A5	A4
122 %	A4	B4
	A5	B5
115 %	B5	A4
	B6	A5

◆ Enlargement (Inch version)


Enlarge-ment Ratio	Original Size	Print Size
155 %	5 ¹ / ₂ "×8 ¹ / ₂ "	8 ¹ / ₂ "×14"
129 %	5 ¹ / ₂ "×8 ¹ / ₂ "	8 ¹ / ₂ "×11"
121 %	8 ¹ / ₂ "×11"	11"×15"

- 1 Select the desired reduction or enlargement ratio using the **[Reduce]** key or the **[Enlarge]** key.

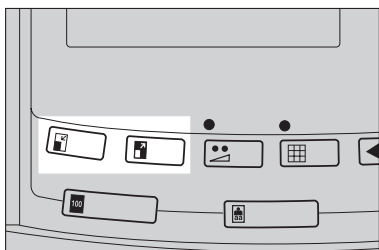

- 2 Make sure that the original and the print paper are the correct size.
- 3 Set your originals on the exposure glass or in the optional document feeder.

- 4 Press the **[Start]** key.

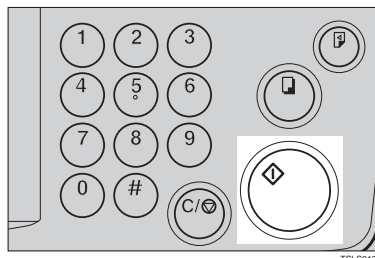

- 5 Check the image position of the trial or proof print.


Note

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 "Shifting The Print Image Position Forward Or Backward") or the side table fine adjusting dial (see ⇒ P.8 "Shifting The Print Image Position To The Right Or Left").

- 6 Make your prints.

Center/Edge Erase—Erasing Center And Edge Margins

When printing from thick books, or similar originals, the binding margin at the center and the edges might appear on prints. To prevent this, follow the steps below.

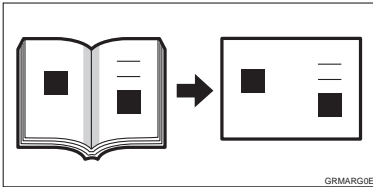


Note


- As a default setting, the paper sizes and directions that can be used are as follows:

Metric version	B4, A4, A5, A5, B5, B5
Inch version	8 1/2" × 14", 8 1/2" × 11", 5 1/2" × 8 1/2", 5 1/2" × 8 1/2"

- If you want to use other size originals, you can register the size using Service Program mode (See ⇒ P.55 "Service Program Menu").
- The margin width to be erased can be adjusted with Service Program mode (See ⇒ P.55 "Service Program Menu").

- Press the **[Center/Edge Erase]** key twice to select the Center/Edge Erase mode.


Check Indicator is blinking and  is shown in the guidance display.

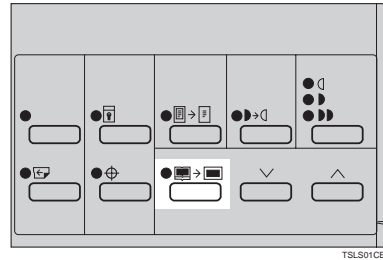

Note


- To cancel this mode, press the **[Center/Edge Erase]** key again.

- Press the **[√]** or **[^]** key to select the paper size and direction.

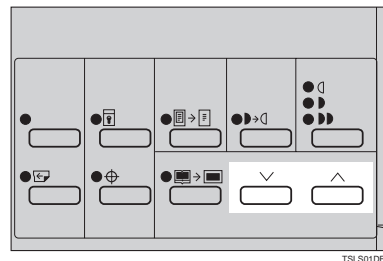


1


- 3** When you reach the desired paper size and direction, press the **[#]** key.

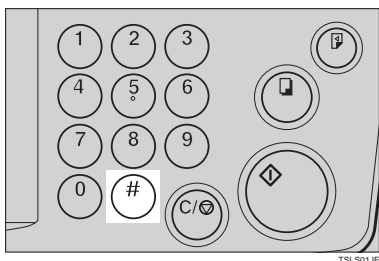

- 4** Set the book on the exposure glass.

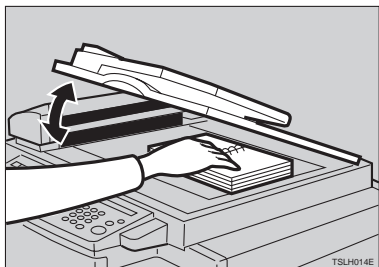

- 5** Press the **[Start]** key.

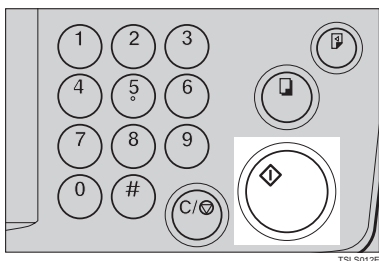

- 6** Check the image position of the trial or proof print.


Note

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “Adjusting The Print Image Position”)

or the side table fine adjusting dial (see ⇒ P.8 “Shifting The Print Image Position To The Right Or Left”).

- 7** Enter the number of prints with the **[Number]** keys.

- 8** Press the **[Print]** key.

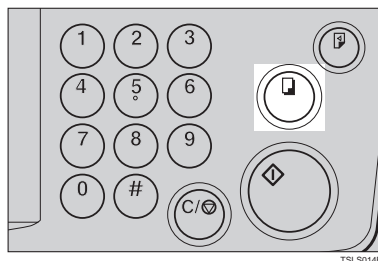

Edge Erase—Erasing Edge Margins

If you want to erase edge margins of a book original, follow the steps below.


Note


- As a default setting, the paper sizes and directions that can be used are as follows:

Metric version	B4, A4, A5, A5, B5, B5
Inch version	8 1/2" x 14", 8 1/2" x 11", 5 1/2" x 8 1/2", 5 1/2" x 8 1/2"

- If you want to use other size originals, you can register the size using Service Program mode (See ⇒ P.55 "Service Program Menu").
- The margin width to be erased can be adjusted with Service Program mode (See ⇒ P.55 "Service Program Menu").

- Press the **[Center/Edge Erase]** key to select Edge Erase mode.


Check Indicator is blinking and  is shown in the guidance display.

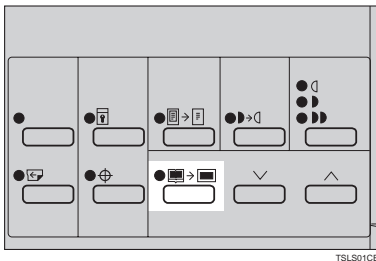


Note

- To cancel this mode, press the **[Center/Edge Erase]** key twice.


- Press the **[√]** or **[∧]** key to select the paper size and direction.

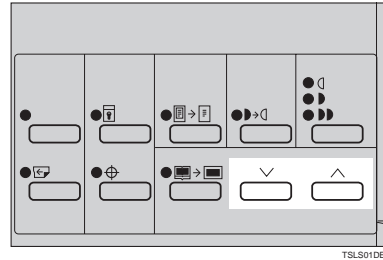

- When you reach the desired paper size and direction, press the **[#]** key.

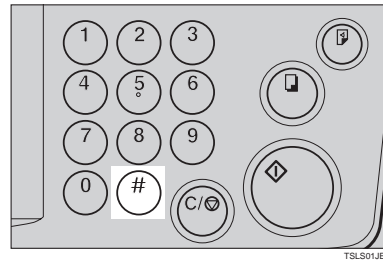


- Set the book on the exposure glass.

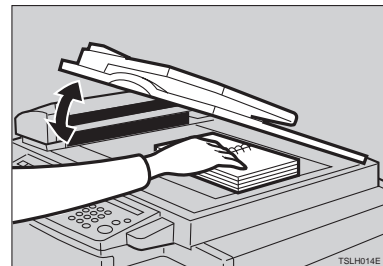

1

5 Press the **[Start]** key.

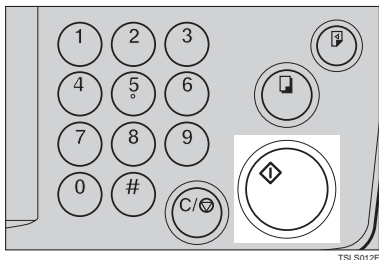


6 Check the image position of the trial or proof print.

 **Note**

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “Adjusting The Print Image Position”) or the side table fine adjusting dial (see ⇒ P.8 “Shifting The Print Image Position To The Right Or Left”).

7 Enter the number of prints with the **[Number]** keys.


8 Press the **[Print]** key.

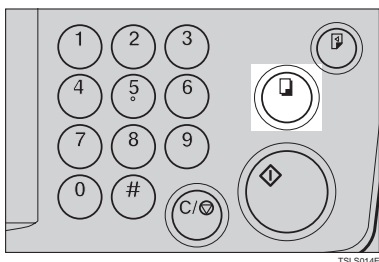


Paste Shadow Erase—Erasing The Shadow Of Pasted Originals

If you want to erase the shadow of pasted originals, follow the steps below.


1 Set the original on the exposure glass.

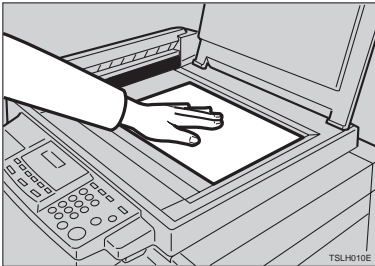

2 Press the **[Paste Shadow Erase]** key.

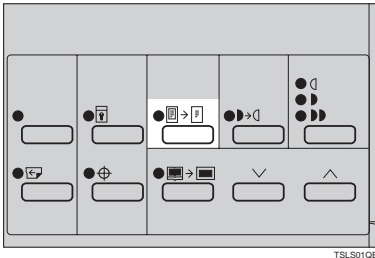


3 Press the **[Start]** key.

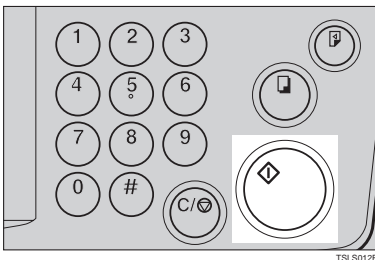

4 Enter the number of prints with the **[Number]** keys.

5 Press the **[Print]** key.

1

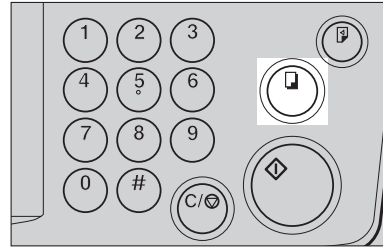


Printing On Thick Or Thin Paper

1

When you make prints on thick (127.9 to 157.0 g/m², 34.0 to 41.7 lb) or thin (47.1 to 81.4 g/m², 12.5 to 21.6 lb) paper, perform the following steps.

Printing On Thick Paper

- 1 When you use paper heavier than 127.9 g/m², 34.0 lb and lighter than 157.0 g/m², 41.7 lb, position pressure lever to the Thick paper position.

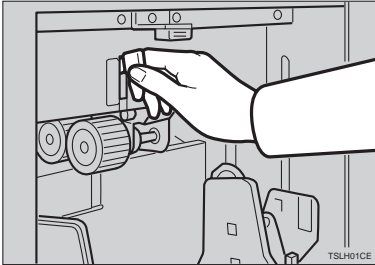


Note


- When you use paper heavier than 64 g/m², 17 lb and lighter than 157.0 g/m², 41.7 lb, position the pressure lever to the standard position.
- In the case of paper smaller than B5, 5¹/₂" × 8¹/₂" and heavier than 81.4 g/m² (21.6 lb), move the feed roller pressure lever to the Thin paper position.

Printing On Thin Paper

- 1 Set the side pads (move the side pad levers to as shown).

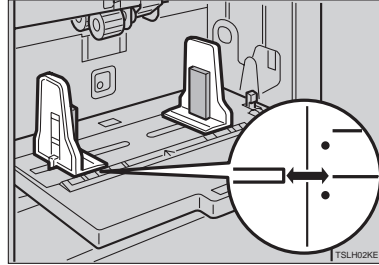

- 2 Position pressure lever to the Standard paper position.

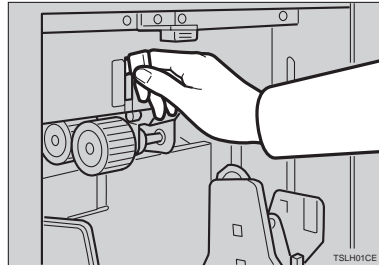

Selecting Original Type

Select one of the following three types to match your originals:

❖ Photo mode

Delicate tones of photographs and pictures can be reproduced with this mode.

❖ Letter mode

Select this mode when your originals contain only letters (no pictures).


❖ Letter/Photo mode

Select this mode when your originals contain photographs or pictures with letters.


Note

- Moire patterns might occur when screened originals are printed.
- When using Photo mode to print originals with both letter and photographs, the letter will appear lighter. To avoid this, select Letter/Photo mode with the **[Type of Original]** key.

1 Press the **[Type of Original]** key to select Photo mode.

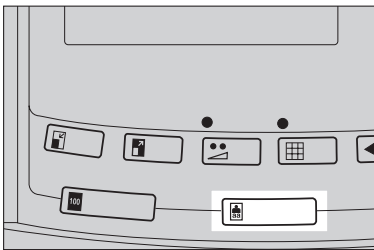


2 Press the **[Image Density]** key to adjust the image density.

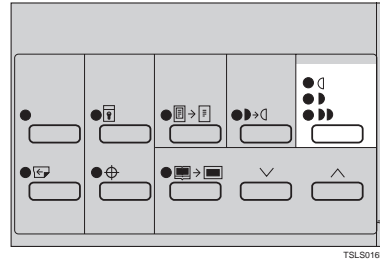

3 Set your originals on the exposure glass or in the optional document feeder.

4 Press the **[Start]** key.

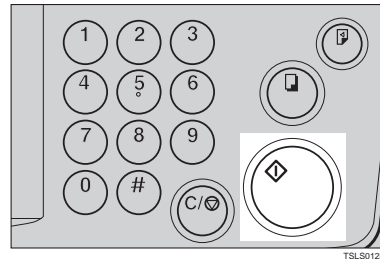

5 Check the image position of the trial or proof print.

Note

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “Shifting The Print Image Position Forward Or Backward”) or the side table fine adjusting dial (see ⇒ P.8 “Shifting The Print Image Position To The Right Or Left”).

6 Make your prints.

1

Economy Mode—Ink Saving


1

When you want to save ink, select Economy mode.

 **Note**

- Prints will come out lighter.


1 Press the **[Economy]** key.

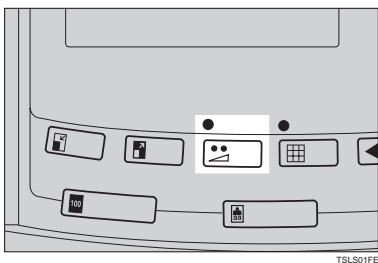

TSL501FE

2 Set your originals on the exposure glass or in the optional document feeder.

3 Press the **[Start]** key.

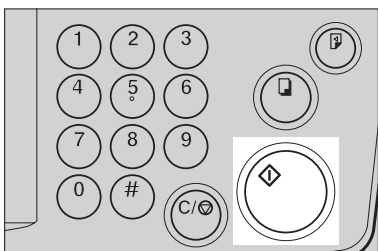

TSL5012E

4 Check the image position of the trial or proof print.

 **Note**

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “*Shifting The Print Image Position Forward Or Backward*”) or the side table fine adjusting dial (see ⇒

P.8 “*Shifting The Print Image Position To The Right Or Left*”).

5 Make your prints.

Auto Cycle—Printing From Several Originals At Once

Use the **[Auto Cycle]** key to process masters and make prints at one stroke.

Note


- ❑ When you use the optional document feeder, it is not necessary to place originals one by one. All originals are fed and prints are completed after you press the **[Print]** key.
- ❑ If you use the optional tape dispenser, the tape dispenser drops a strip of paper onto the top of the paper stack after the last page of each printing set is fed out to the paper delivery table. This marks the end of each printing group.

1 Set the original on the exposure glass or in the optional document feeder.


Note

- ❑ You can set up to 30 originals into the optional document feeder.

2 Enter the number of prints required with the **[Number]** keys.

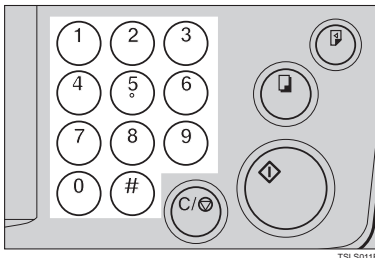

3 Press the **[Start]** key.

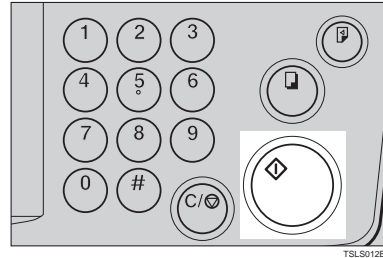


4 Check the image position of the trial or proof print.

Note

- ❑ If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “Shifting The Print Image Position Forward Or Backward”) or the side table fine adjusting dial (see ⇒ P.8 “Shifting The Print Image Position To The Right Or Left”).

5 Press the **[Auto Cycle]** key.

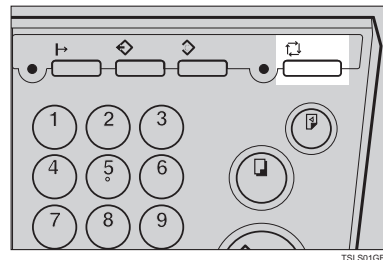


Note

- ❑ If you press the **[Auto Cycle]** key, you cannot make proof prints by pressing the **[Proof]** key.

1

- 6** If you use the optional tape dispenser, turn on the tape dispenser power switch.

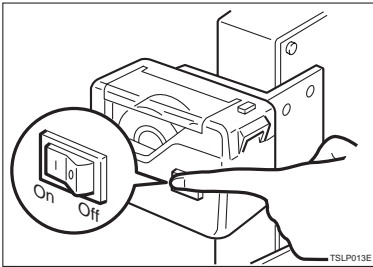


- 7** Press the **[Print]** key.

 **Note**

- Repeat steps **1** through **3** until all originals are printed when you set originals on the exposure glass.
- If you set originals into the optional document feeder, originals are fed and prints are completed automatically.
- After the last page of each set is fed out to the paper delivery table, the optional tape dispenser drops a strip of paper on the top of the paper stack. The next cycle begins.

Class Mode—Group Printing From The Same Original


Use the **[Memory/Class]** key to make sets of prints from the same original. The same number of prints is made for each set.

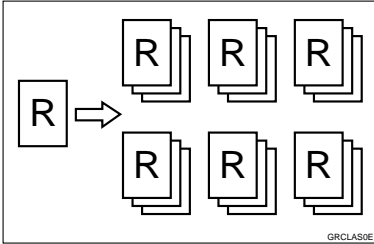


Note

- The optional tape dispenser automatically feeds out strips of paper which separate the printing groups on the paper delivery table.
- Up to 20 sets of prints can be selected for one original.


1 Press the **[Memory/Class]** key to light the Class indicator.

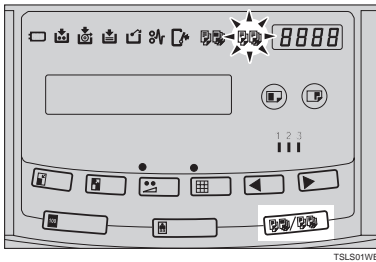


2 With the **[Number]** keys, enter the number of prints for each set to be made from the original.

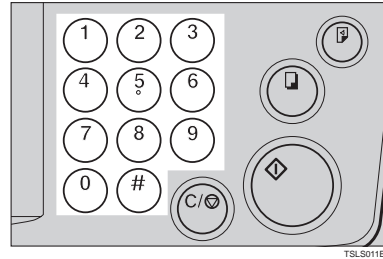

3 Press the **[#]** key.

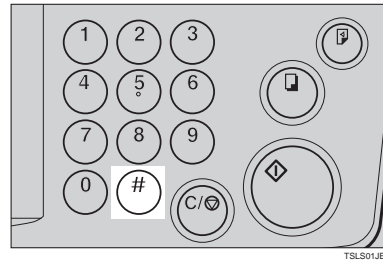


4 With the **[Number]** keys, enter the desired number of sets.

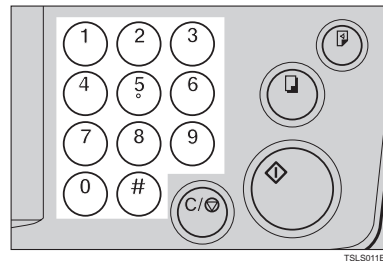

Note


- The maximum number of sets that can be made is 20.

- 5** Turn on the optional tape dispenser power switch.

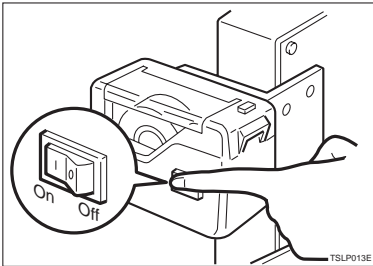

- 6** Set one original face down on the exposure glass or in the optional document feeder.

- 7** Press the **[Start]** key.

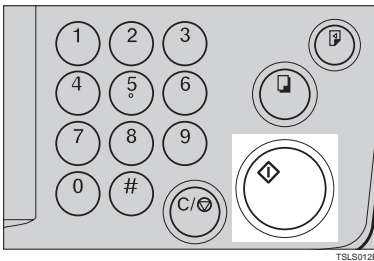


- 8** Check the image position of the trial or proof print.

Note

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “Shifting The Print Image Position Forward Or Backward”) or the side table fine adjusting dial (see ⇒ P.8 “Shifting The Print Image Position To The Right Or Left”).

- 9** Make your prints.

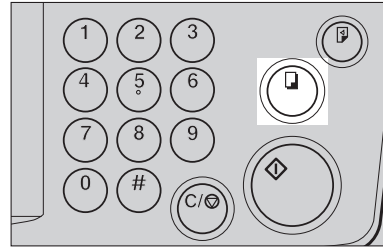


Note

- After the last page of each printing set is fed out to the paper delivery table, the tape dispenser drops a strip of paper on the top of the paper stack.
- If the power switch of the optional tape dispenser is turned off or the tape dispenser is not installed in your machine, the group printing cycle stops after each set is delivered. Remove the set of prints from the paper delivery table and press the **[Print]** key to start the next group printing cycle.

Memory Mode—Group Printing From Different Originals


Use the **[Memory/Class]** key to make sets of prints from different originals.

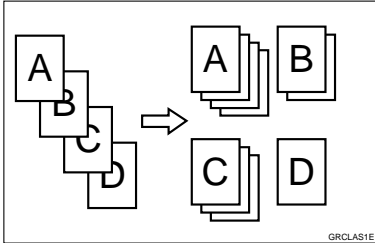


Note

- ❑ With the optional document feeder, you can set several originals and make prints of all of them at once. See ⇒ P.45 “Memory Mode With The Document Feeder”.
- ❑ The optional tape dispenser automatically feeds out strips of paper which separate the printing groups on the paper delivery table.

- 1** Press the **[Memory/Class]** key to light the Memory indicator.

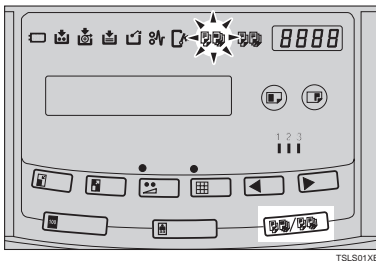


- 2** With the **[Number]** keys, enter the desired number of prints for the first original.

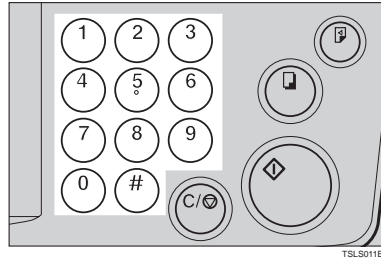

- 3** Press the **[#]** key.


This stores the number of prints to be made for the first original in memory 1.

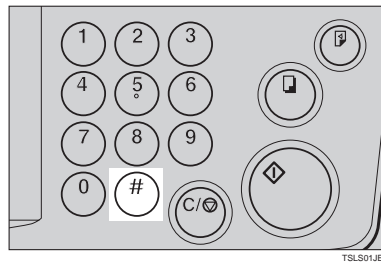

Note

- ❑ When the number of prints in each set is the same, it is not necessary to input the number of prints for each group in memory. Simply select Auto Cycle mode and enter the desired number of prints once.

- 4** With the **[Number]** keys, enter the number of prints for the second original.

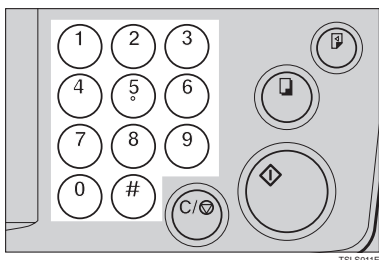

- 5** Press the **[#]** key.


This stores the number of prints to be made for the second original in memory 2.

Note

- Repeat steps **4** and **5** for each original.
- The number of prints for up to 20 originals can be stored.

- 6** Press the **[#]** key again.


The memory returns to memory 1.

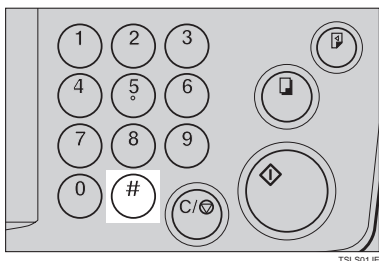

Note

- If you store the number of prints for 20 originals, the memory number returns to 1. It is not necessary to press the **[#]** key.


- 7** Set the first original face down on the exposure glass.

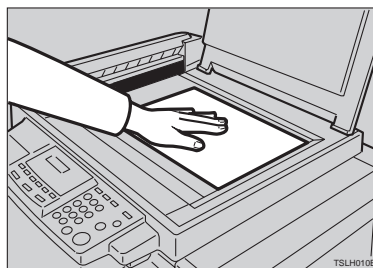

Note

- Set originals one sheet at a time in the same order that you stored them in memory.

- 8** Press the **[Start]** key.

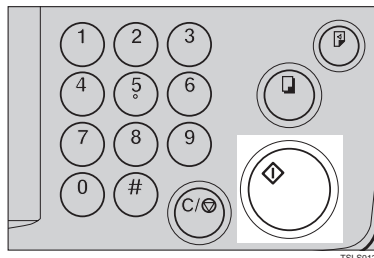


- 9** Check the image position of the trial or proof print.


Note

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “Shifting The Print Image Position Forward Or Backward”) or the side table fine adjusting dial (see ⇒ P.8 “Shifting The Print Image Position To The Right Or Left”).

- 10** Turn on the optional tape dispenser power switch.

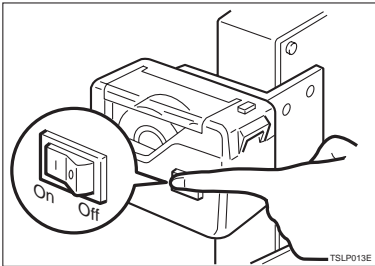


- 11** Press the **[Auto Cycle]** key.

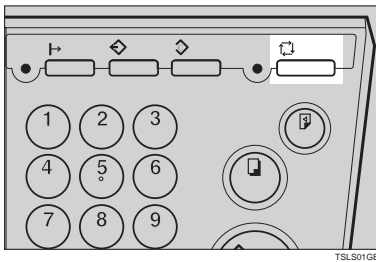

Note

- If you press the **[Auto Cycle]** key, you cannot make proof prints by pressing the **[Proof]** key.

- 12** Press the **[Print]** key.

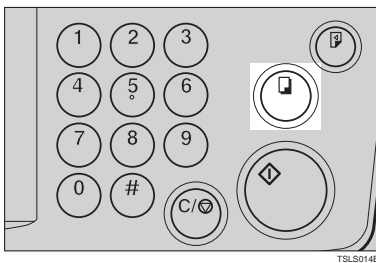


Note

- After the first set is fed to the paper delivery table, the optional tape dispenser drops a strip of

paper on the top of the paper stack.

- 13** After the first set is completed, set the second original on the exposure glass and press the **[Start]** key.

1

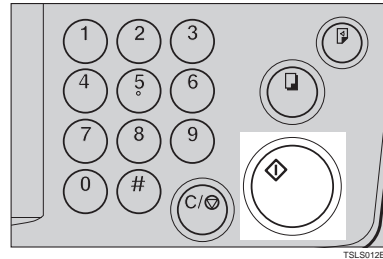

Note


- Repeat this step until you have finished printing.

Combine Copies—Combining 2 Originals Into One Print

1

As a default, this function cannot be used. If you want to use this function, set "SET COMBINE KEY" to "Yes". See "17 SET COMBINE KEY" in ⇒ P.54 "Changing The Settings Of Service Programs".

You can print 2 separate originals on a single sheet of paper. The following tables list the combinations that can be used when combining two originals.

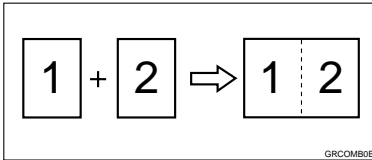

Note

- The following tables list the combinations that can be used in this function:

◆ Metric version

		Original Size				
		A4 ☐	B5 ☐	A5 ☐	B6 ☐	A6 ☐
Paper Size	B4 ☐	87 %	100 %	122 %	141 %	--
	A4 ☐	71 %	82 %	100 %	115 %	141 %
	B5 ☐	61 %	71 %	87 %	100 %	122 %
	A5 ☐	--	--	71 %	82 %	100 %

◆ Inch version

		Original Size	
		8 ¹ / ₂ " × 11" ☐	5 ¹ / ₂ " × 8 ¹ / ₂ " ☐
Paper Size	8 ¹ / ₂ " × 14" ☐	77 %	100 %
	8 ¹ / ₂ " × 11" ☐	65 %	100 %
	5 ¹ / ₂ " × 8 ¹ / ₂ " ☐	--	65 %

- If the master length of the first original is longer than the maximum allowable length or shorter than the minimum allowable length, Combine Copies mode is canceled. The following table gives the maximum and minimum allowable master length.

	Minimum	Maximum
B4 drum model	91 mm, 3.6"	243 mm, 9.5"
A4 drum model	91 mm, 3.6"	198 mm, 7.7"

- Master length = actual original length × Enlargement/Reduction ratio
- Any image closer than 5 mm, 0.2" to the leading edge of the first original will not be printed. Also, any image closer than 4 mm, 0.16" to the leading edge of the second original will not be printed. When the image is too close to the leading edge, use copies of the originals with the image shifted at least 5 mm, 0.2" for the first original (4


mm, 0.16" for the second original) from the leading edge.

- ❑ You can select different kinds of image settings for the first and second original.
- ❑ Make sure that the paper feed side plates touch the paper lightly when in the Combine Copies function. Otherwise, the two original images will not appear at the proper position on the prints.

Reference

When you use the optional document feeder with this function, see ⇒ P.29 "Memory Mode—Group Printing From Different Originals".


1 Set the first original face down.

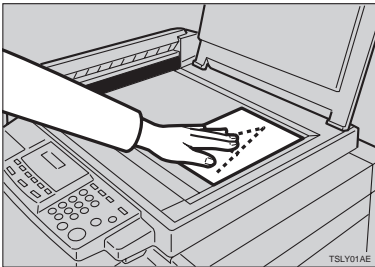


Note

- ❑ The first original will be printed on the leading part of the print.


2 Press the [Center/Edge Erase] key twice.

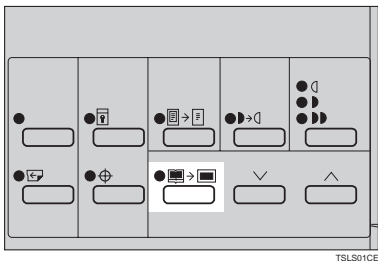


3 Press the [V] or [^] key to select the original size and direction.

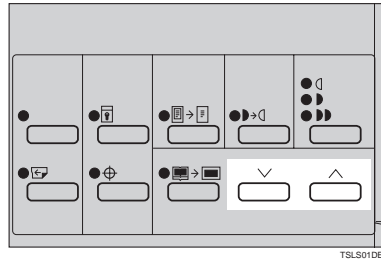

4 When you reach the desired size and direction, Press the [#] key.

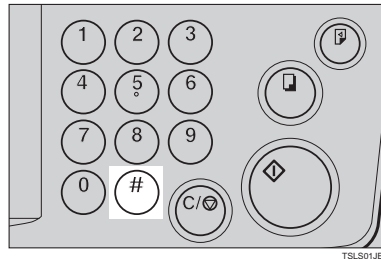


5 Press the [Combine Copies] key to select your desired mode.

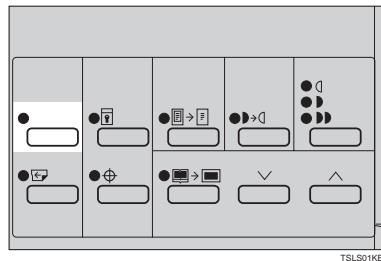


1

- 6** Press the **[Start]** key.

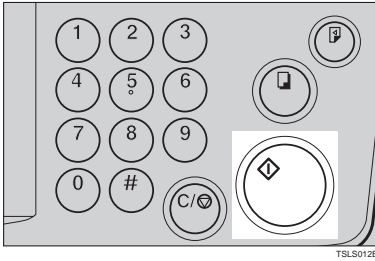

- 7** The beeper sounds after the first original is on the master. Set the second original face down.

- 8** Press the **[Start]** key.

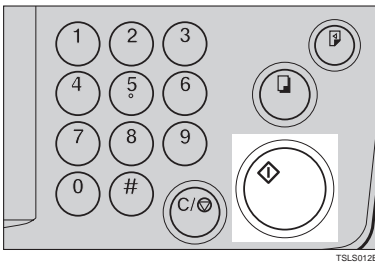


- 9** Check the image position of the trial or proof print.

Note

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “Shifting The Print Image Position Forward Or Backward”) or the side table fine adjusting dial (see ⇒ P.8 “Shifting The Print Image Position To The Right Or Left”).

- 10** Enter the number of prints with the **[Number]** keys.

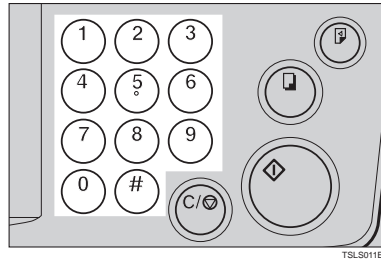


- 11** Make your prints.

Skip Feed Printing

If the backs of prints are dirty, you can increase the time between two prints using the **[Skip Feed]** key. In the default setting, when one sheet of paper is fed the drum rotates twice. However, you can select the number of rotations of the drum. This gives you the chance to remove prints one by one from the paper delivery table or insert one sheet of paper between two prints.

1 Set your originals on the exposure glass or in the optional document feeder.


2 While holding down the **[Skip Feed]** key, select the number of rotations of the drum while one sheet of paper is fed with the **[Number]** keys.

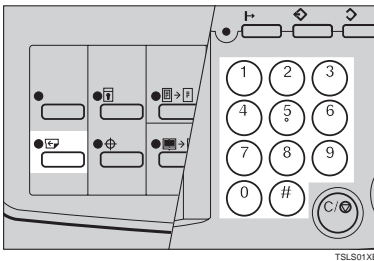

Note

- You can select from 1 to 9 rotations.
- The beeper sounds after you set the number of rotations.

3 Press the **[Start]** key.

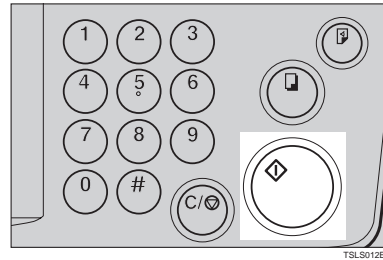


4 Check the image position of the trial or proof print.

Note

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 "Shifting The Print Image Position Forward Or Backward") or the side table fine adjusting dial (see ⇒ P.8 "Shifting The Print Image Position To The Right Or Left").

5 Enter the number of prints with the **[Number]** keys.

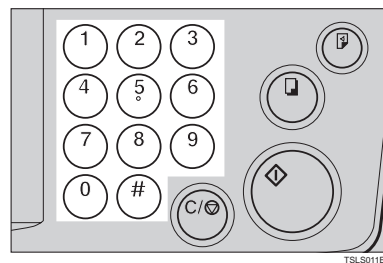

6 Make your prints.

1

Program—Storing Your Print Settings In Memory

1

You can store up to 9 frequently used print job settings in machine memory, and recall them for future use.


Note

- ❑ The stored programs are not cleared when you turn off the main switch.
- ❑ The stored programs cannot be deleted. If you want to change a stored program, overwrite it.

Storing Your Settings


1 Set the print settings you want to put into memory.

2 Press the **[Program]** key.

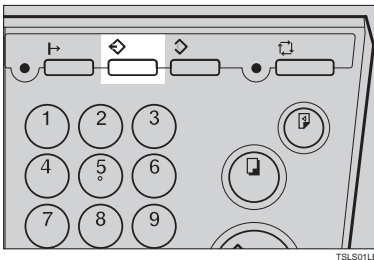


Numbers already containing a program are displayed on the guidance display.

3 Enter “0” with the **[Number]** keys.

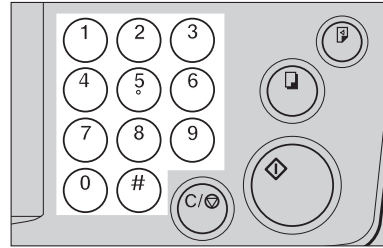


4 Press the **[#]** key.

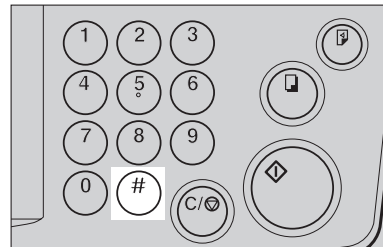

Note

- ❑ The program numbers (1 to 9) will be displayed in the guidance display.
- ❑ If a user program has been protected, that program number will not appear in the display. For how to change a protected user program, see ⇒ P.38 “Protecting A Program”.
- ❑ If all the user programs have been protected, the machine returns to the ready condition.


- 5 Select the program number you want to store the settings in with the **[Number]** keys.

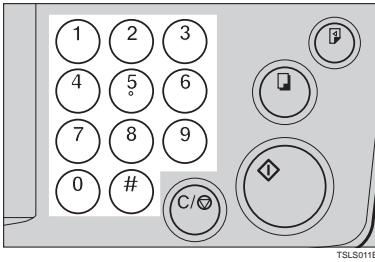

Note


- Make sure that the previous job settings stored under the selected program number are overwritten.

- 6 Press the **[#]** key.

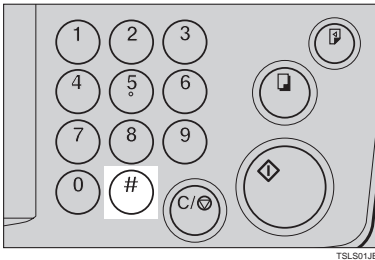

Recalling A Program


- 1 Press the **[Program]** key.

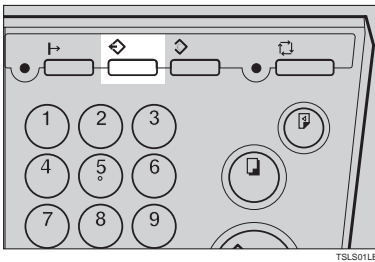


Note

- Numbers already containing a program are displayed on the guidance display.

- 2 Select the program number you want to recall with the **[Number]** keys.

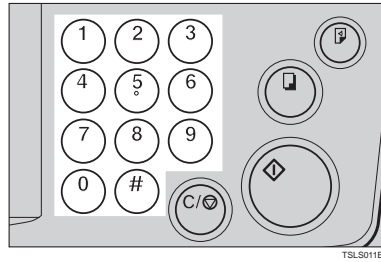

- 3 Press the **[#]** key.

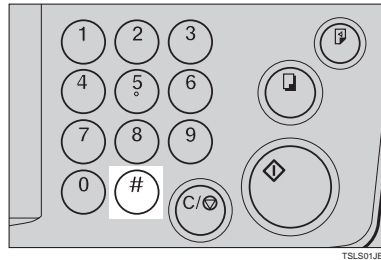


Note

- The stored settings are recalled.


- 4 Set your originals on the exposure glass or in the optional document feeder.

1

5 Press the **[Start]** key.

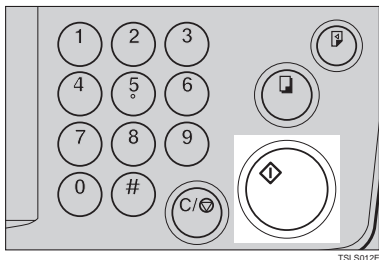


3 Press the **[#]** key.

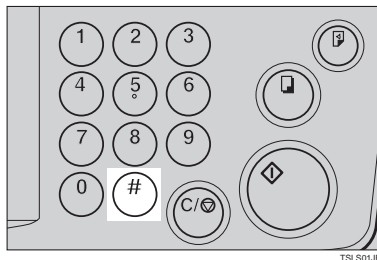

Protecting A Program

If you want to prevent someone from writing over your program, do the following procedure.


1 While holding down the **[Clear/Stop]** key, press the **[Program]** key.

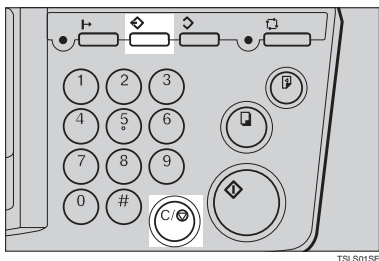


Note

- The numbers of the programs which are not protected will be displayed in the guidance display.


4 Select the program number you want to protect with the **[Number]** keys.

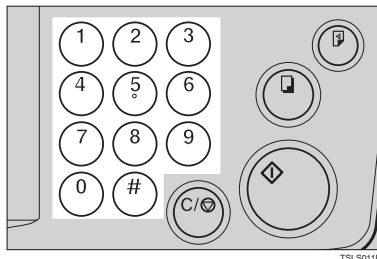

2 Enter "1" with the **[Number]** keys.

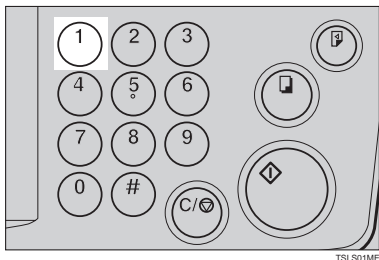


5 Press the **[#]** key.

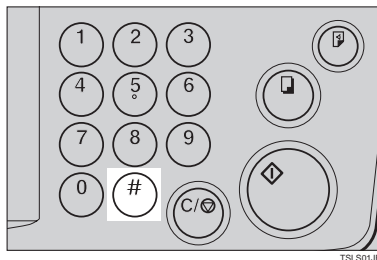


Removing Program Protection


- 1 While holding down the **[Clear/Stop]** key, press the **[Program]** key.

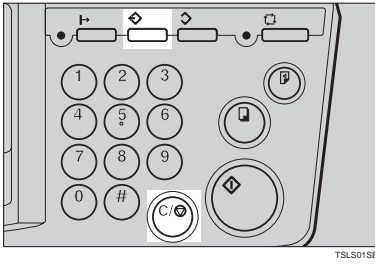

- 2 Enter "0" with the **[Number]** keys.

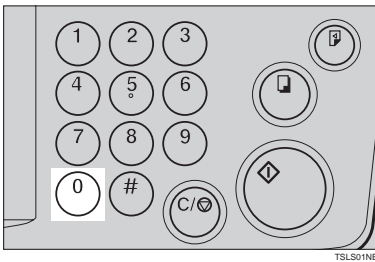


- 3 Press the **[#]** key.

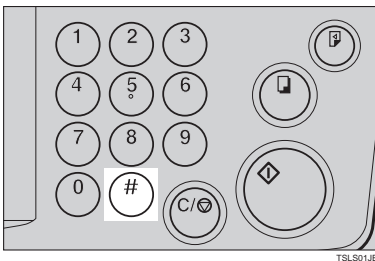


Note

- If no program number is protected, the machine returns to the ready condition.

- 4 Select the program number you want to remove protection from with the **[Number]** keys.

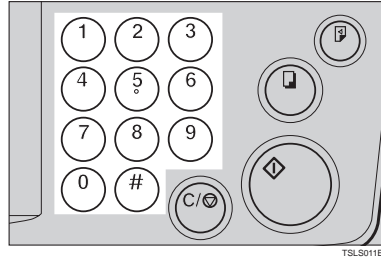

- 5 Press the **[#]** key.

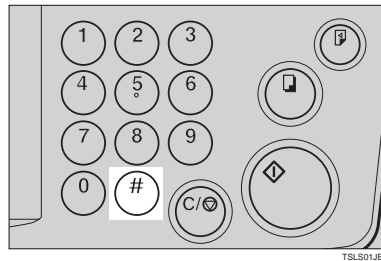


Security Mode—Printing Secret Documents

1

This function prevents others from making prints of secret documents from the master. For example, if you want to print some documents with sensitive information, use this function after making your prints so that nobody can access that master again.

- 1 Make your prints.
- 2 Hold down the **[Security]** key for at least 5 seconds.

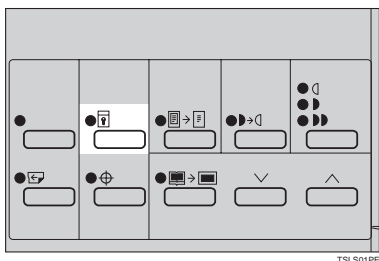

Note


- ❑ If you press the **[Proof]** key or the **[Print]** key after setting Security mode, the beeper sounds and you cannot make prints.
- ❑ You cannot cancel Security mode even if you turn off the main switch.
- ❑ If you make the next master, Security mode is canceled.

2. OPTIONAL FUNCTIONS

Printing Using The Optional 30 Originals Document Feeder

Insert a stack of originals in the document feeder. They will be fed automatically.

Document Feeder Exterior

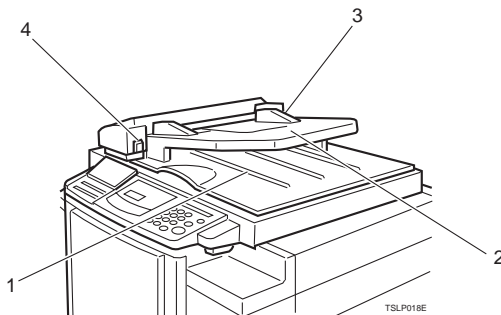

1. Original Tray

Originals used to make masters are delivered to this tray.

2. ADF Unit

Feeds the original to the master making position.

3. Original Guides

Adjust these guides to position the originals correctly.

4. ADF Unit Open Lever

Use to open the ADF unit.

Originals

Setting the following originals in the document feeder might cause original mis-feeds or damage to the originals.


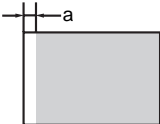
Set these originals on the exposure glass.

- Originals heavier than 90 g/m², 23.9 lb (when setting a stack of originals)
- Originals lighter than 50 g/m², 13.3 lb (when setting a stack of originals)
- Originals heavier than 120 g/m², 31.9 lb (when setting one original at a time)
- Originals lighter than 40 g/m², 10.6 lb (when setting one original at a time)
- Carbon coated originals
- Damaged originals

- Originals with glue on them
- Originals perforated for ring binders
- Book originals
- Originals written with a pencil or ball-point pen
- Originals smaller than 148 mm × 105 mm, 5.8" × 4.1"
- Originals larger than 257 mm × 364 mm, 10.2" × 14.4"
- Folded, curled, creased originals
- Bound, stapled, or clipped originals
- OHP transparencies
- Translucent paper
- Pasted originals

 **Note**

- If you use paste-up originals, make sure the pasted parts hold firmly to the base sheet and press the **[Paste Shadow Erase]** key. If the thickness of the paste-up original is more than 0.1 mm, and the space between the pasted parts is less than 2 mm, 0.08", a shadow might appear on the prints.
- The first 5 mm, 0.2", of the leading edge cannot be printed. Make sure the leading edge margin is at least 5 mm, 0.2".

Original	Print
	


- a: 5 mm, 0.2"

Setting Originals In The Document Feeder

 **Note**


- If you set one original into the document feeder while another original is still on the exposure glass, the original set into the document feeder will be scanned first.

1 Adjust the guide to the original size.

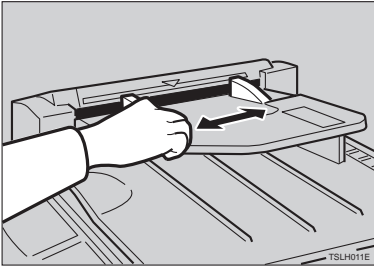

2

2 Insert the aligned originals face up in the document feeder until they stop.

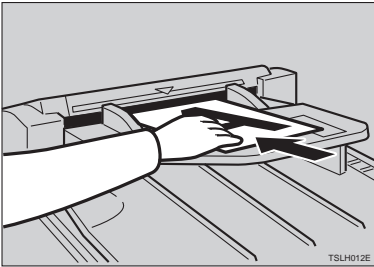


⚠ Limitation

- Approximately 30 originals (64 g/m², 17 lb) can be inserted at one time in the 30 originals document feeder. The first (top) original will be fed first.

📝 Note

- Do not insert different size originals at the same time.
- The guides must fit snugly against both sides of the stack.

3 Set the desired settings and press the **[Start]** key.

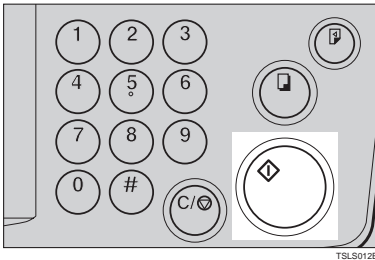

4 Make your prints.

 **Note**


- If the next original has been set in the document feeder before the machine stops, that original is fed automatically and a trial print is delivered to the paper delivery table after the first original is completed. Check the image position of the trial print of the next original. If necessary, make proof prints using the **[Proof]** key to check the image position again.

2

Combine Copies With The Document Feeder

As a default, this function cannot be used. If you want to use this function, set "SET COMBINE KEY" to "Yes". See "17 SET COMBINE KEY" in ⇒ P.55 "Service Program Menu".

- 1** Insert the 2 originals face up, tops pointing towards the operation side.

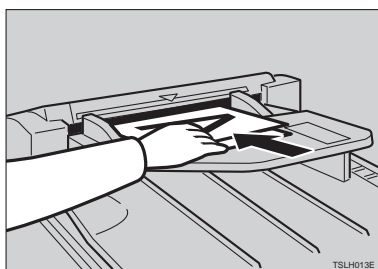


 **Note**


- When you use the optional 30 originals document feeder, the bottom original will be printed on the leading part of print.

- 2** Check the print paper size and the reproduction ratio.

- 3** Press the **[Combine Copies]** key to select your desired mode.

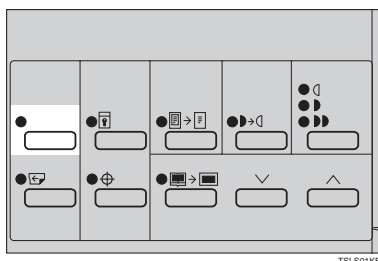

4 Press the **[Start]** key.

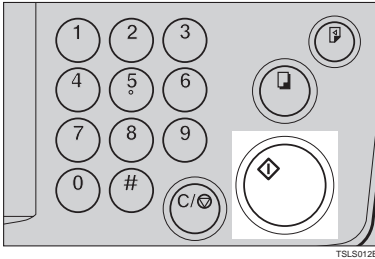


5 Check the image position of the trial or proof print.

Note

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “Shifting The Print Image Position Forward Or Backward”) or the side table fine adjusting dial (see ⇒ P.8 “Shifting The Print Image Position To The Right Or Left”).
- After the first original is on the master, the second original is fed.
- If you set only one original, the beeper sounds after the first original is on the master. Set the second original and the desired image settings. Then, press the **[Start]** key.

6 Enter the number of prints with the **[Number]** keys.

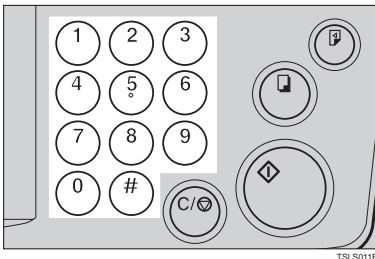


7 Make your prints.

Memory Mode With The Document Feeder


Note

- To prevent original misfeeds, do not set originals of different sizes.
- Do not set more than 30 originals at one time in the optional 30 originals document feeder.

- 1 Press the **[Memory/Class]** key to light the Memory indicator.

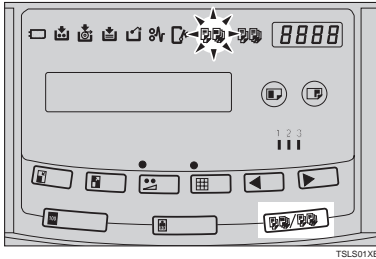


- 2 With the **[Number]** keys, enter the desired number of prints for the first original.

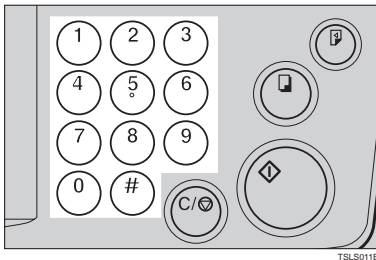

- 3 Press the **[#]** key.


This stores the number of prints to be made for the first original in memory 1.

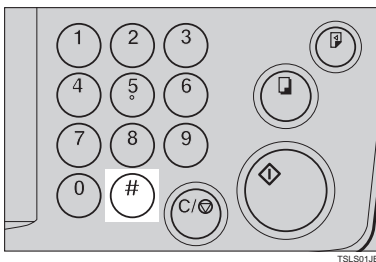

Note

- When the number of prints in each set is the same, it is not necessary to input the number of prints for each group in memory. Simply select Auto Cycle mode and enter the desired number of prints once.

4 Set your originals face up into the document feeder.

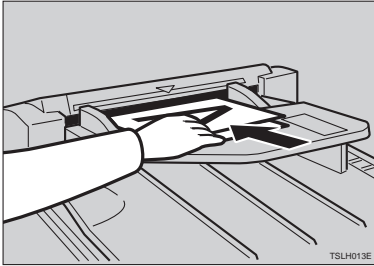


2

Note

- When you use the optional 30 originals document feeder, the originals are fed from the bottom of the stack. Make sure that the originals are set in the correct sequence with the first original on the bottom.

5 Press the **[Start]** key.

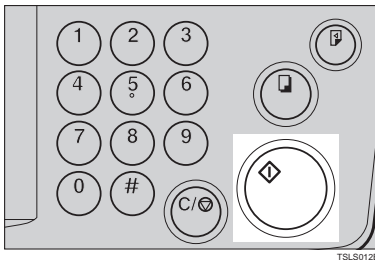


6 Check the image position of the trial or proof print.


Note

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “Shifting The Print Image Position Forward Or Backward”) or the side table fine adjusting dial (see ⇒ P.8 “Shifting The Print Image Position To The Right Or Left”).

7 Turn on the optional tape dispenser power switch.

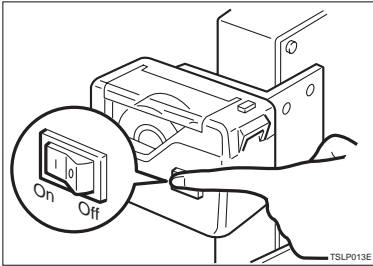


8 Press the **[Auto Cycle]** key.

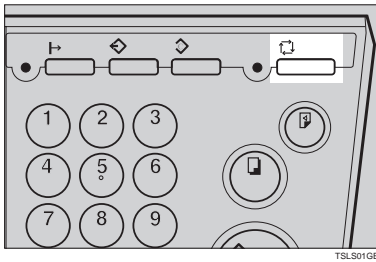

Note

- In Auto Cycle mode, printing starts automatically after a trial print is delivered.

9 Press the **[Print]** key.

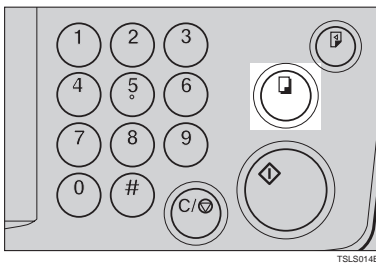


Note

- After the last page of each set is fed out to the paper delivery table, the tape dispenser drops a strip of paper on the top of the paper stack. The next cycle begins.

Color Printing Using The Optional Color Drum


Color drum units (red, blue, green, brown, yellow, purple, navy, maroon, orange, teal and gray) are available as options in addition to the standard black unit. For making color prints, a separate drum unit is necessary for each color.

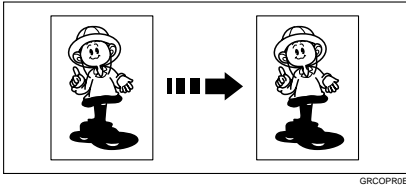

GRCOPROE

Making Color Prints

- 1 Make sure that the **COLOR** is shown in the guidance display.
- 2 Press the **[Start]** key.

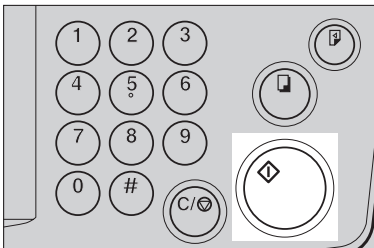

TSL5012E

- 3 Check the image position of the trial or proof print.

Note

- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 “Shifting The Print Image Position Forward Or Backward”) or the side table fine adjusting dial (see ⇒

P.8 “Shifting The Print Image Position To The Right Or Left”).

- 4 Make your prints.

2


Changing The Color Drum Unit

- 1 Open the front door.



TSLH011E


- 2 Lift the lock lever until it locks in position.

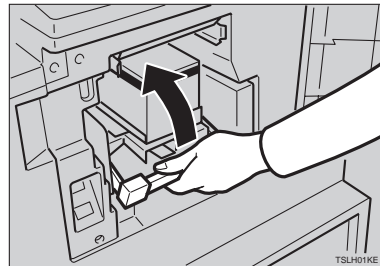

TSLH011E

2


3 Pull out the drum unit handle.

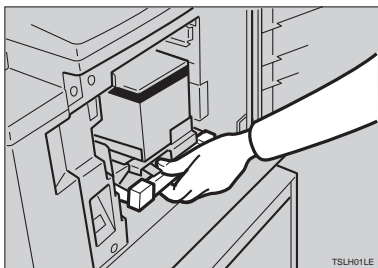


Note

- If you cannot pull out the drum unit, push the drum unit handle, then pull out the drum unit.

4 Hold the rail on the drum and slide out the drum while pulling the release towards you.

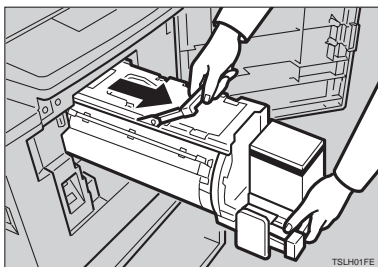


5 Remove the drum unit from the machine while holding the upper drum stay.

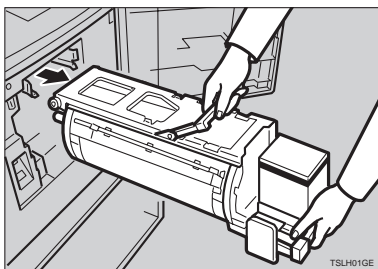


Note

- Be careful not to let the drum unit fall.


6 Insert the color drum unit along the guide rail.

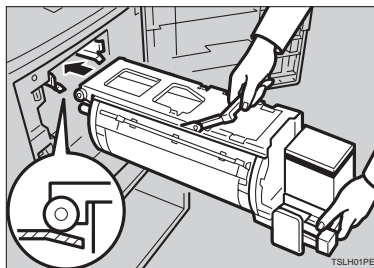

7 Slide in the drum unit until it locks in position.

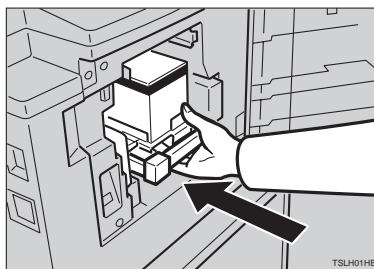

8 Lower the drum unit lock lever.

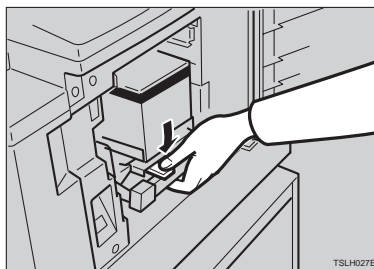

9 Close the front door. **Note**

- Make sure that the **Cover Open** indicator (🔒) turns off, and the **COLOR** is shown in the guidance display.

Printing In Two Colors



After printing in one color, you can print in another color on the same side of the print.

 **Important**


- Leave the prints for a while before printing on them again to let the ink dry.
- If the prints are not dry, the paper feed roller might become dirty. In this case, wipe off the roller with a cloth.

 **Note**


- You cannot print in two colors at one time.

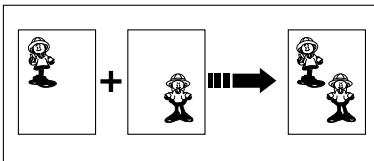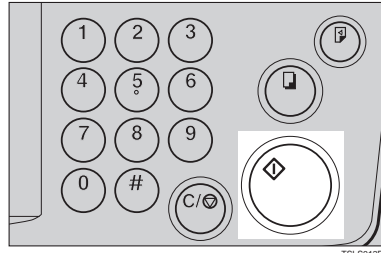1 Prepare the two originals. Set the first original on the exposure glass.**2** Press the **[Start]** key.**2****3** Check the image position of the trial or proof print. **Note**


- If the image position is not correct, adjust it using the **[Image Position]** keys (see ⇒ P.8 "Shifting The Print Image Position Forward Or Backward") or the side table fine adjusting dial (see ⇒ P.8 "Shifting The Print Image Position To The Right Or Left").

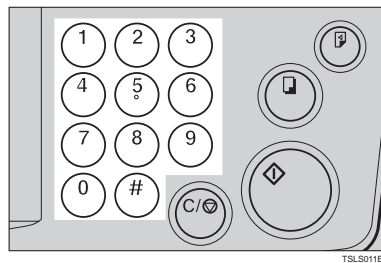4 Enter the number of prints with the **[Number]** keys.


5 Press the **[Print]** key.

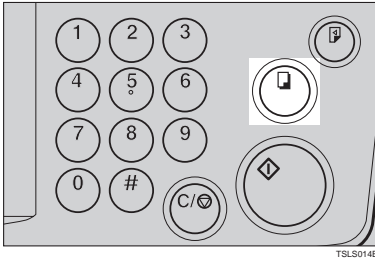

8 Set the second original and press the **[Start]** key.

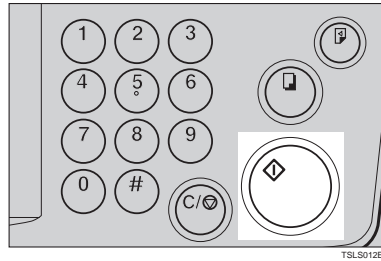


6 Remove the prints from the paper delivery table and set them on the paper feed table again as shown in the illustration.

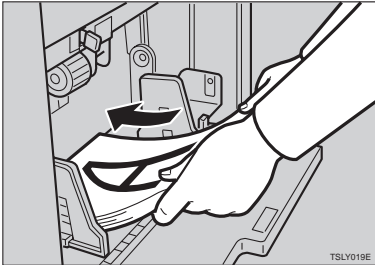

9 Check the image position.

10 Press the **[Print]** key.

7 Exchange the drum unit. See ⇒ P.49 "Changing The Color Drum Unit".

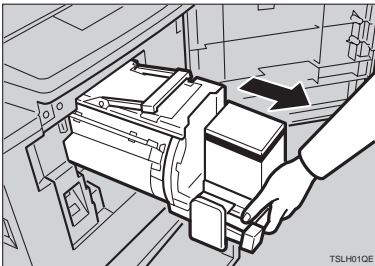

3. SERVICE PROGRAM MODE


Accessing Service Programs

The service programs can be set by following this procedure.


Reference

For the service program menu, see ⇒ P.55 "Service Program Menu".

- 1** Press the **[Clear Modes]** key.

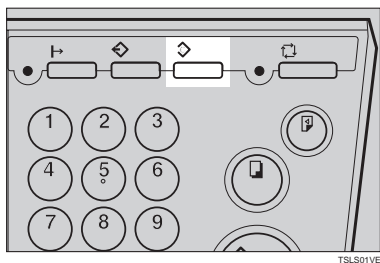

- 2** Hold down the **[Clear/Stop]** key for at least 3 seconds.

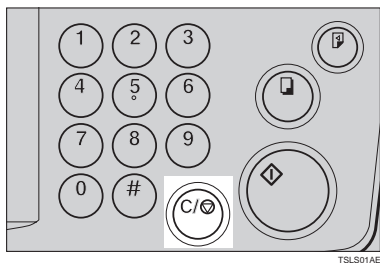


The SP-mode display appears on the guidance display.

Note

- If you press the wrong key, try pressing the above keys from the beginning.

- 3** With the **[Number]** keys, enter the desired service program number (SP No.).

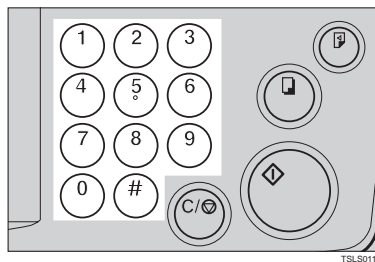


Reference

For the SP No., see ⇒ P.55 "Service Program Menu".

When you want to leave the service program mode

- 1** Press the **[Clear Modes]** key.

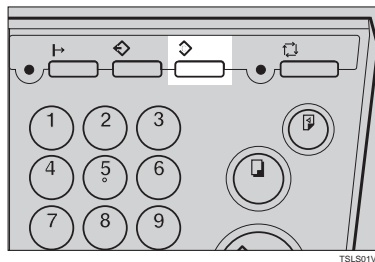


Reference

If you want to change the settings of a selected service program, see ⇒ P.54 "Changing The Settings Of Service Programs".

Changing The Settings Of Service Programs

- 1** After entering the desired SP No., press the **【#】** key.

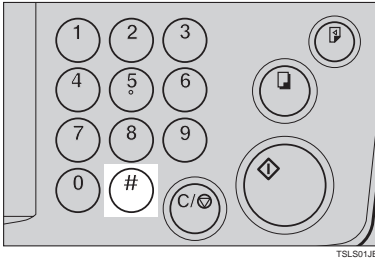


The value or mode set at the factory will be displayed at the end of the second line on the guidance display.


Note

- If you designate the wrong SP No., press the **【Clear Modes】** key. Then, re-enter the desired SP No.

- 2** Enter the desired value or mode with the **【Number】** keys.

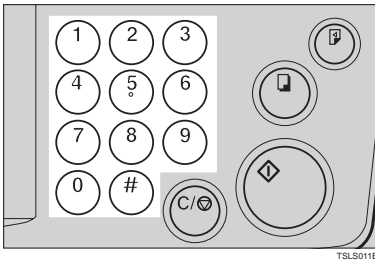

- 3** Press the **【#】** key to store the desired value or mode.

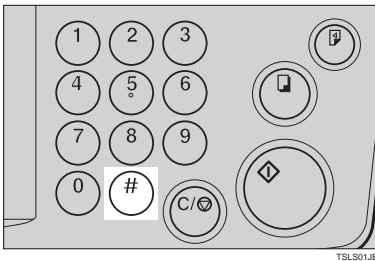


Note

- If you enter the wrong value or mode, press the **[Clear Modes]** key. Then, go back to step 1.

When you want to leave the service program mode



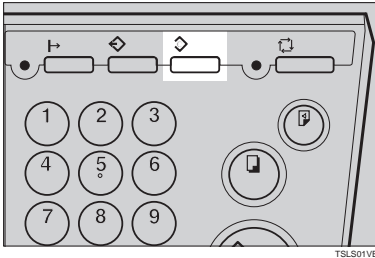

- 1 Press the **[Clear Modes]** key.












3




Service Program Menu







SP No.	Mode	Function
5	TAPE MARKER OFF	<p>Specifies whether the optional tape dispenser can be used.</p> <p>Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 0 <input type="checkbox"/> Adjustment value: 0: No 1: Yes
10	MIN PRINT	<p>Specifies the minimum number of prints that can be input with the [Number] keys.</p> <p>Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 0 <input type="checkbox"/> Adjustment value: 0 to 9999
11	MAX PRINT	<p>Specifies the maximum number of prints that can be input with the [Number] keys.</p> <p>Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 0 <input type="checkbox"/> Adjustment value: 0 to 9999




SP No.	Mode	Function
12	SET DISPLAY	<p>If you want to change the language used by the guidance display, select the language version.</p> <p> Note</p> <p><input type="checkbox"/> Default: 1</p> <p><input type="checkbox"/> Adjustable value:</p> <ul style="list-style-type: none"> • 0: Japanese • 1: English • 2: German • 3: French • 4: Italian • 5: Spanish • 6: Chinese • 7: Dutch • 8: Portuguese (BRAZIL)
13	SET SIZE MODE	<p>Change the size mode.</p> <p> Note</p> <p><input type="checkbox"/> Default: 0</p> <p><input type="checkbox"/> Adjustment value: 0: mm 1: Inch</p>
17	SET COMBINE KEY	<p>If you want to use Combine Copies mode, select "Yes".</p> <p> Note</p> <p><input type="checkbox"/> Default: 0</p> <p><input type="checkbox"/> Adjustment value: 0: No 1: Yes</p> <p><input type="checkbox"/> For details about Combine Copies, see ⇒ P.32 "Combine Copies—Combining 2 Originals Into One Print".</p>
20	BUZZER ON	<p>Turns the buzzer ON or OFF.</p> <p> Note</p> <p><input type="checkbox"/> Default: 0</p> <p><input type="checkbox"/> Adjustment value: 0: No 1: Yes</p>

SP No.	Mode	Function
21	PRINTS/MASTER COST	<p>The optional key counter usually counts the number of prints made regardless of the number of masters used. For accounting purposes, it is possible for the key counter to be incremented by a value between 0 and 50 whenever a new master is used.</p> <p>Example: The key counter is adjusted to increase by 20 for each master fed. If 100 copies have been made and the master is replaced, the key counter will increase by 120.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 0 <input type="checkbox"/> Adjustment value: 0 – 50
25	CLEAR 2 IN 1	<p>By default, when master making is finished in Combine Copies mode, this mode stays selected for the next master making.</p> <p>If you want master making turned off, select “1”.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 0 <input type="checkbox"/> Adjustable value: 0: No 1: Yes <input type="checkbox"/> Even if you select “1” in this mode, Combine Copies mode is not cleared when the next original are set in the optional document feeder. <input type="checkbox"/> For details about Combine Copies, see ⇒ P.32 “Combine Copies—Combining 2 Originals Into One Print”.
29	PHT BCKGRND CORRECT	<p>When you make prints in Photo or Letter/Photo mode, the background of the prints might become dirty. You can prevent this using this function.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 0 <input type="checkbox"/> Adjustment value: 0: No 1: Yes
40	ORIGINAL	<p>Specifies the image mode at power on.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 0 <input type="checkbox"/> Adjustment value: <ul style="list-style-type: none"> • 0: Letter mode • 1: Letter/Photo mode • 2: Photo mode

SP No.	Mode	Function
41	IMAGE DENSITY	<p>Specifies the image density at power on.</p> <p> Note</p> <p><input type="checkbox"/> Default: 1</p> <p><input type="checkbox"/> Adjustment value:</p> <ul style="list-style-type: none"> • 0: Light • 1: Standard • 2: Dark • 3: Darker
42	PRINT SPEED	<p>Specifies the printing speed at power on.</p> <p> Note</p> <p><input type="checkbox"/> Default: 1</p> <p><input type="checkbox"/> Adjustment value:</p> <ul style="list-style-type: none"> • 0 : 80 sheets/minute • 1 : 100 sheets/minute • 2 : 120 sheets/minute
43	AUTO CYCLE MODE	<p>Specifies whether Auto Cycle mode is selected at power on.</p> <p> Note</p> <p><input type="checkbox"/> Default: 1</p> <p><input type="checkbox"/> Adjustment value: 0: No 1: Yes</p>
81	QUALITY START NO.	<p>You can select how many times Quality Start mode is carried out for each master making.</p> <p>When you set the Quality Start function, the bold letter or solid images might be light.</p> <p> Note</p> <p><input type="checkbox"/> Default: 1</p> <p><input type="checkbox"/> Adjustment value: 0 to 3 times</p>
82	SKIP FEED NO.	<p>When you use the Skip Feed Printing function, you can select how many times the drum rotates while one sheet of paper is fed.</p> <p> Note</p> <p><input type="checkbox"/> Default: 2 times</p> <p><input type="checkbox"/> Adjustment value: 1 to 9 times</p>

SP No.	Mode	Function
84	AUTO MULTI COPY	<p>If you set an original on the exposure glass and press the [Combine Copies] key and [Start] key, two identical images are printed on the one sheet.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 0 <input type="checkbox"/> Adjustment value: 0: No 1: Yes <input type="checkbox"/> For details about Combine Copies, see ⇒ P.32 <i>“Combine Copies—Combining 2 Originals Into One Print”</i>.
87	MEMORY PRINT	<p>If you wish to make print sets of a single page document placed on the exposure glass in Memory Mode, change this setting to Stack. Each print set or stack will contain the number of prints you program in Memory mode.</p> <p>If set to Memory, Memory mode will work.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 0 <input type="checkbox"/> Adjustment value: 0: Memory 1: Stack <input type="checkbox"/> For details about Memory mode, see ⇒ P.29 <i>“Memory Mode—Group Printing From Different Originals”</i>.
88	AUTO MEMORY/ CLASS	<p>In this function, the machine stops printing for 2 seconds after one set of prints are completed in Memory mode and Class mode. This gives you the chance to separate each set when you do not have an optional tape dispenser.</p> <p>For example, you can remove prints one by one from the paper delivery table or insert one sheet of paper between the prints.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 0 <input type="checkbox"/> Adjustment value: 0: No 1: Yes
113	RESETTABLE COUNT	<p>Used to display the total number of masters and prints.</p> <ul style="list-style-type: none"> • M: Total number of masters • P: Total number of prints

SP No.	Mode	Function
114	CLR RESETTABLE COUNT	<p>Clears the resettable master/print counter.</p> <p> Note</p> <p><input type="checkbox"/> Default: 0</p> <p><input type="checkbox"/> Adjustment value: 0: No 1: Yes</p>
120	USER CODE MODE	<p>Selects user code mode. When you set this function, you have to also specify the auto reset time. For details about user code mode, see ⇒ P.62 "User Codes".</p> <p> Note</p> <p><input type="checkbox"/> Default:</p> <ul style="list-style-type: none"> • User Code mode:0 • Auto Reset time: 0 <p><input type="checkbox"/> Adjustment value:</p> <ul style="list-style-type: none"> • User Code mode: 0: No 1: Yes • Auto Reset time: 0: No, 1 – 5 minutes
121	UC COUNT	<p>Displays the number of masters and prints made in each user code.</p> <p> Note</p> <p><input type="checkbox"/> M: Number of masters</p> <p><input type="checkbox"/> P: Number of prints</p>
122	CLR UC COUNT	<p>Clear each user code counter.</p> <p> Note</p> <p><input type="checkbox"/> Default: 0</p> <p><input type="checkbox"/> Adjustment value: 0: No 1: Yes</p>
123	TOTAL UC COUNT	<p>Display the total number of masters and prints for all the 20 user codes.</p> <p> Note</p> <p><input type="checkbox"/> M: Number of masters</p> <p><input type="checkbox"/> P: Number of prints</p>
124	CLEAR TOTAL UC COUNT	<p>Clear the total user code counter.</p> <p> Note</p> <p><input type="checkbox"/> Default: 0</p> <p><input type="checkbox"/> Adjustment value: 0: No 1: Yes</p>

SP No.	Mode	Function
160	SIDE ERS.	<p>Adjust the default side edge margin width in Edge Erase and Center/Edge Erase mode.</p> <p> Note</p> <p><input type="checkbox"/> Default:</p> <ul style="list-style-type: none"> • Metric Version: 5 mm • Inch Version: 0.2" <p><input type="checkbox"/> Adjustable value:</p> <ul style="list-style-type: none"> • Metric Version: 2 – 20 mm • Inch Version: 0.1" – 0.8"
161	CENTER ERS.	<p>Adjust the default center margin width in Center/Edge Erase mode.</p> <p> Note</p> <p><input type="checkbox"/> Default:</p> <ul style="list-style-type: none"> • Metric version: 10 mm • Inch version: 0.4" <p><input type="checkbox"/> Adjustable value:</p> <ul style="list-style-type: none"> • Metric version: 4 – 60 mm • Inch version: 0.2" – 2.3"
162	HORIZONTAL ERS.	<p>Adjust the default horizontal edge (top and bottom) margin in Edge Erase and Center/Edge Erase mode.</p> <p> Note</p> <p><input type="checkbox"/> Default:</p> <ul style="list-style-type: none"> • Metric version: 5 mm • Inch version: 0.2" <p><input type="checkbox"/> Adjustable value:</p> <ul style="list-style-type: none"> • Metric version: 2 – 20 mm • Inch version: 0.1" – 0.8"

Entering decimal values in SP No. 160–162:

- Press the **[Program]** key to enter a decimal point.
- Press the **[#]** key to fix the value.

User Codes

If the machine is set to use the User Code function, operators must input their user codes before the machine can operate. The machine keeps count of the number of prints made under each user code.

In this mode, the following 20 user codes (fixed) can be used to access the machine: 382, 191, 182, 173, 164, 155, 146, 137, 128, 119, 482, 291, 282, 273, 264, 255, 246, 237, 228, 219


Note

- ❑ To prevent unauthorized users from accessing the machine, note down the codes and then black out the codes from this manual.

How To Set User Code Mode (# 120)


The following procedure explains how to set user code mode. This must be done before a user code can be input.

- 1** Press the **[Clear Modes]** key.

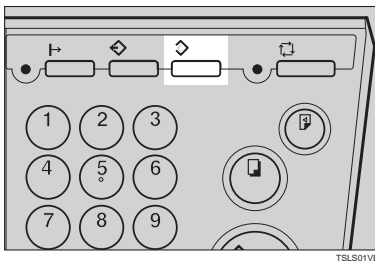


[Number] keys and press the **[#]**


- 2** Hold down the **[Clear/Stop]** key for at least 3 seconds.

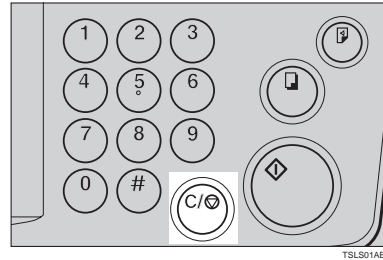

- 3** Enter "120" with the **[Number]** keys and press the **[#]** key.

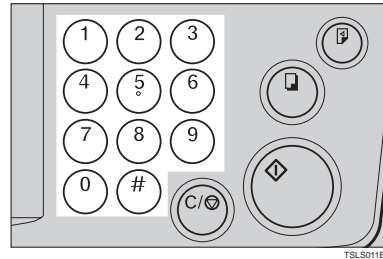


- 4** Enter "1" (Yes) with the **[Number]** keys and then press the **[#]** key.

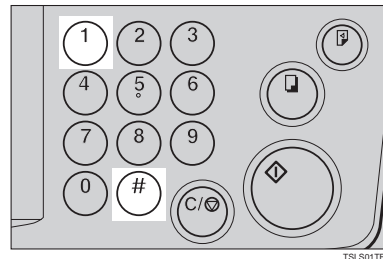


- 5** Specify the Auto Reset time. Enter the desired setting with the

key.

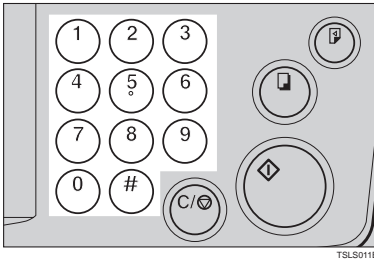


- 6** Press the **[Clear Modes]** key to leave Service Program mode.

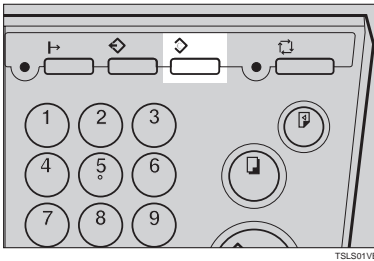

How To Use User Code Mode


- 1** Input your assigned 3-digit user code with the **[Number]** keys, then press the **[#]** key.

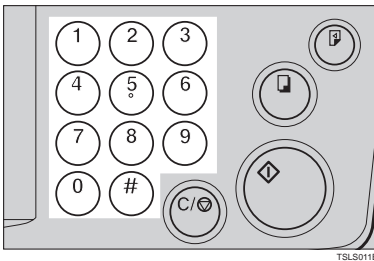

- 2** Make your prints.

- 2** Hold down the **[Clear/Stop]** key

- 3** After you have finished, press the **[Clear/Stop]** key while holding down the **[Clear Modes]** key.

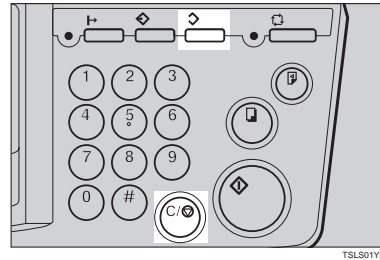

Note


- This prevents others from making prints using your user code.
- If you do not follow this step, the machine will not request the next user for their codes unless the auto reset time has expired.

How To Check The User Code Counter (# 121)

Reference


If you want to check the total masters and prints made under all user codes, see ⇒ P.65 "How To Check The Total Number Of Masters And Prints Made Under All User Codes (# 123)".

- 1** Press the **[Clear Modes]** key.

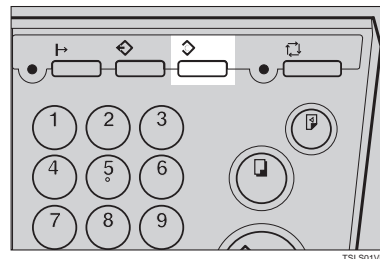


3

for at least 3 seconds.

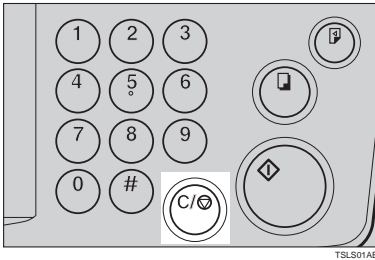


- 3** Enter "121" with the [Number] keys and press the [#] key.

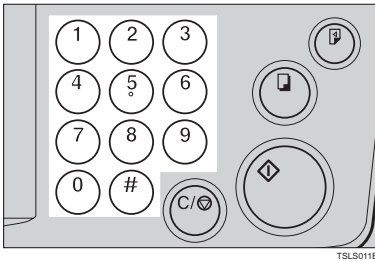


The number of masters and prints made under the user code "382" will be displayed in the guidance display.

- 4** Keep pressing the [#] key to display the number of masters and prints made under your user code.

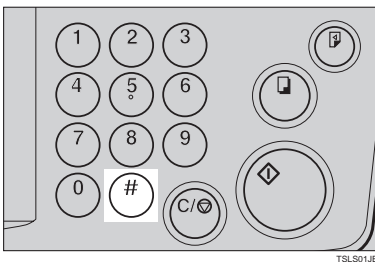

- 5** Press the [Clear Modes] key to leave Service Program mode.

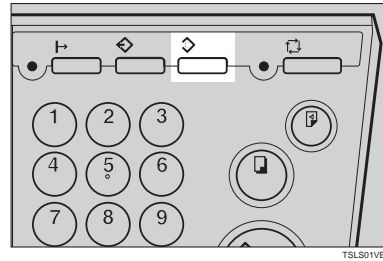


How To Clear The User Code Counter (# 122)


Reference

If you want to clear every user code counter, see ⇒ P.66 "How To Clear The User Code Total Counter (# 124)".


- 1** Press the [Clear Modes] key.

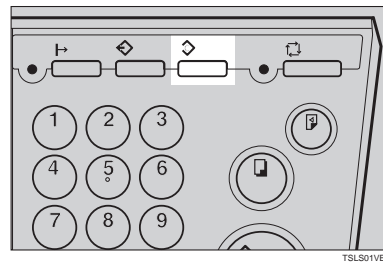


- 2** Hold down the **[Clear/Stop]** key for at least 3 seconds.

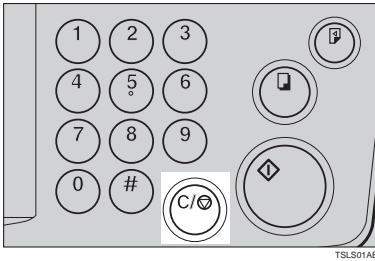


- 3** Enter "1" (Yes) with the **[Number]** keys and press the **[#]** key.

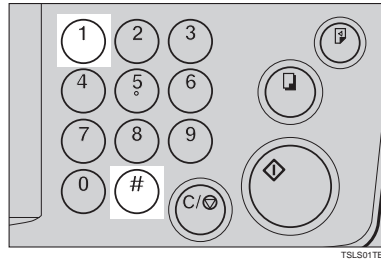

- 3** Enter "122" with the **[Number]** keys and press the **[#]** key.

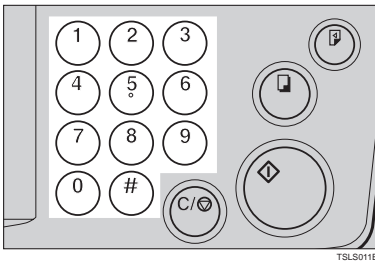


- 4** Keep pressing the **[#]** key until desired user code is displayed.

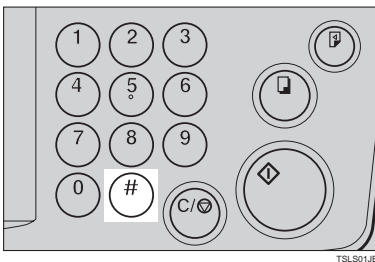


- 6** Press the **[Clear Modes]** key to leave Service Program mode.

How To Check The Total Number Of Masters And Prints Made Under All User Codes (# 123)


- 1** Press the **[Clear Modes]** key.

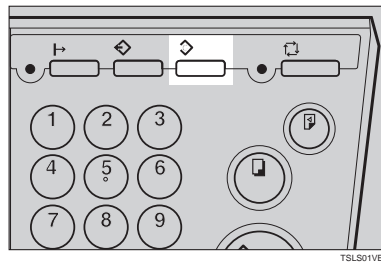

- 2** Hold down the **[Clear/Stop]** key for at least 3 seconds.

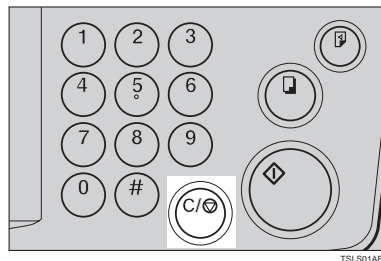


- 3** Enter "123" with the **[Number]** keys and press the **[#]** key.

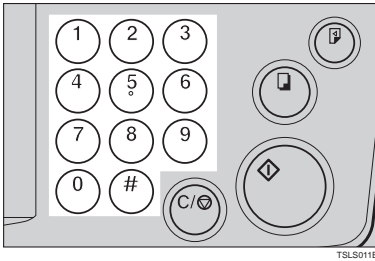

The total number of masters and prints made under all user codes will be displayed in the guidance display.


- M: Number of masters
- P: Number of prints

- 4** Press the **[Clear Modes]** key to leave Service Program mode.

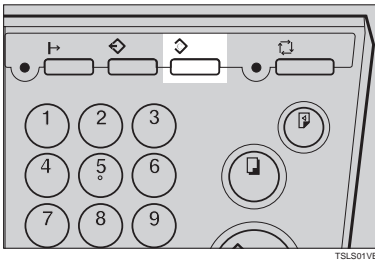


How To Clear The User Code Total Counter (# 124)


- 1** Press the **[Clear Modes]** key.

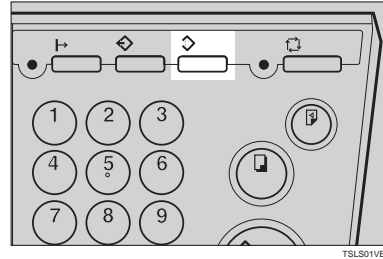


- 2** Hold down the **[Clear/Stop]** key for at least 3 seconds.

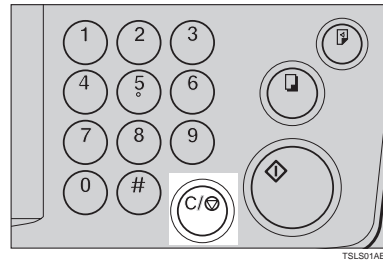


- 3** Enter "124" with the **[Number]** keys and press the **[#]** key.

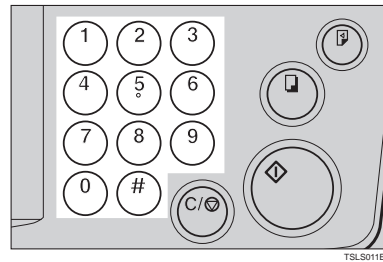

- 4** Enter "1" (Yes) with the **[Number]** keys and press the **[#]** key.

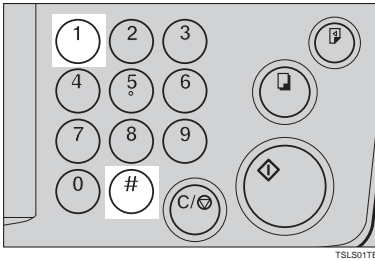

- 5** Press the **[Clear Modes]** key to leave Service Program mode.

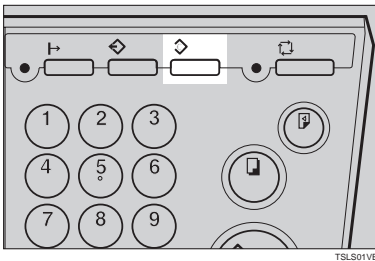

3

This page is intentionally blank.


4. REPLENISHING SUPPLIES

Loading Paper On The Paper Feed Table

The **Load Paper** indicator (📄) blinks when the paper feed table runs out of paper.

Replenishing Paper


1 Press the **[Clear/Stop]** key.

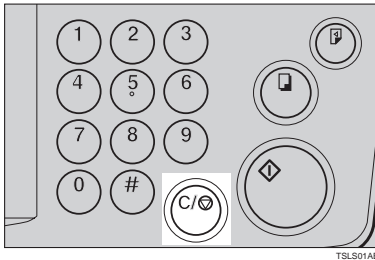

Note

- ❑ This step is necessary only if you want to pause a print run to replenish paper.


2 Press the **[Paper Feed Table Down]** key.

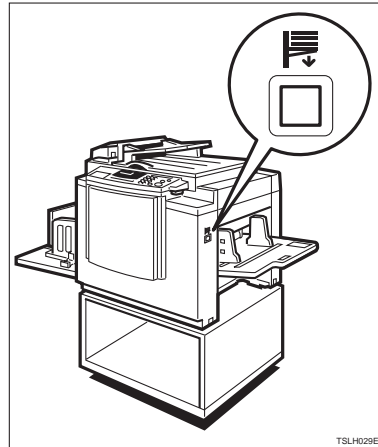

Note

- ❑ The paper feed table will lower without the key being pressed when the printing paper runs out.
- ❑ The top sheet might remain between the feed rollers. In this case, remove the top sheet.



3 Load paper on the paper feed table.

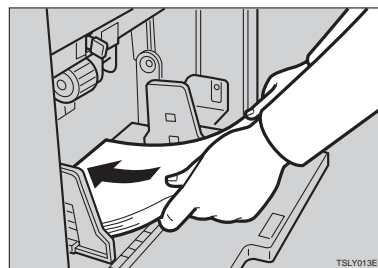

Note


- Correct paper curl before setting the paper.

- 4** Press the **[Print]** key to resume printing.

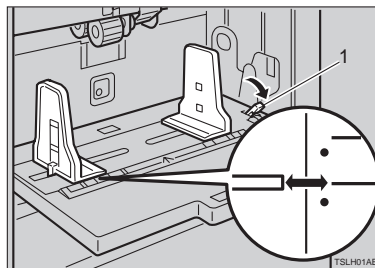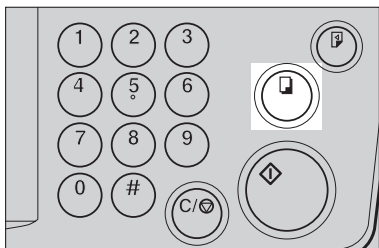

1: Paper Feed Side Plates Lock Lever

- 3** Place the paper on the paper feed table.

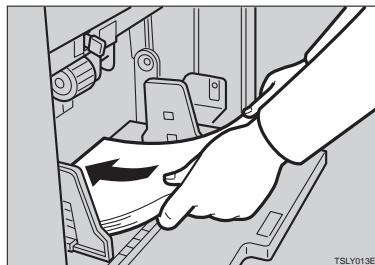


Note

- Correct any paper curl before setting the paper.
- Make sure that the side plates touch the paper lightly.
- Put back the lock lever.

Changing The Paper Size


- 1** Remove the paper from the paper feed table.

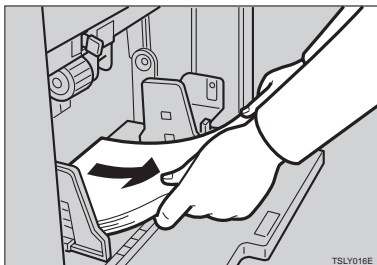


The paper feed tray will lower.

- 2** Put the paper feed side plates lock lever. Adjust the paper feed side plates to match the paper size.

- 4** Adjust the side plates and the end plate.

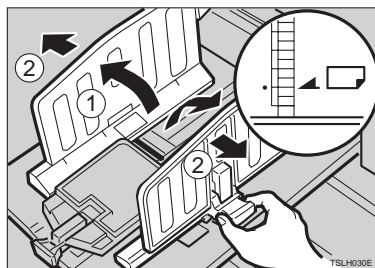

When The Add Ink Indicator () Blinks

The **Add Ink** indicator () blinks when it is time to supply ink.

 **CAUTION:**



- *If ink comes into contact with your eyes, rinse immediately in running water. In the case of any abnormal symptoms, consult a doctor.*

 **CAUTION:**



- *Keep the ink or ink container out of reach of children.*

 **CAUTION:**




- *If ink is ingested, force vomiting by drinking a strong saline solution and consult a doctor immediately.*

 **CAUTION:**




- *This machine has been tested for safety using this supplier's parts and consumables. We recommend you only use these specified supplies.*


1 Open the front door.

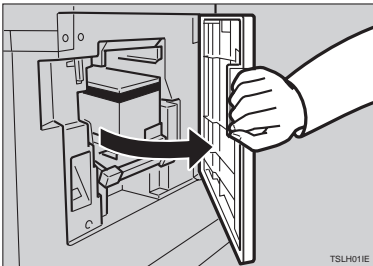


- 2** Pull out the ink holder and remove the used ink cartridge.

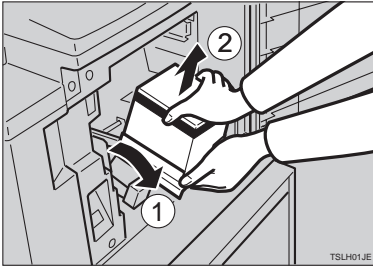

- 3** Remove the cap of the new ink cartridge.

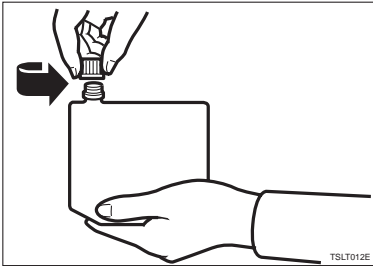

- 4** Insert the new cartridge into the ink holder.

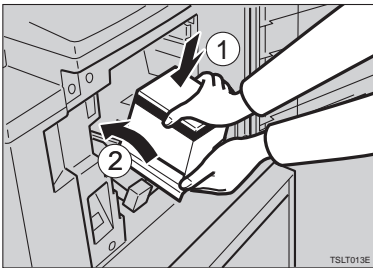


- 5** Return the ink holder to its original position until it clicks.

 **Note**

- Always supply ink of the same color.

- ❑ Make sure to firmly insert the part indicated by the arrow mark into the guide.

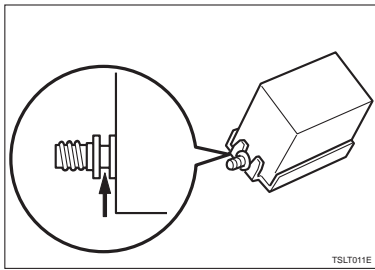

6 Close the front door.

The machine will start idling to supply ink to the drum.


Note

- ❑ It will stop when the correct amount of ink reaches the drum.

Master Roll Replacement

The **Master End** indicator (🔆) is lit when it is time to replace the master roll.


1 Open the original table.

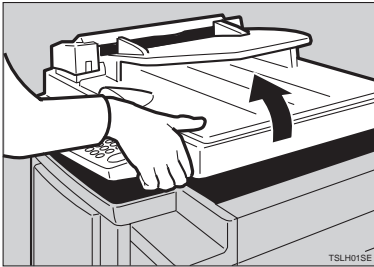

Note

- ❑ Lift the original table release lever and lift the original table.


2 Open the right side cover.

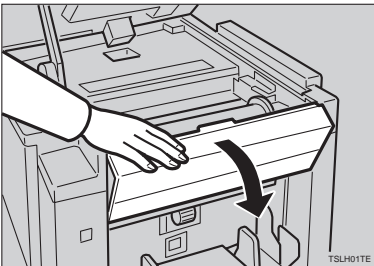

3 Open the plotter cover.




4 Remove the used master roll and pull out both spools. Then, insert both spools into a new master roll.

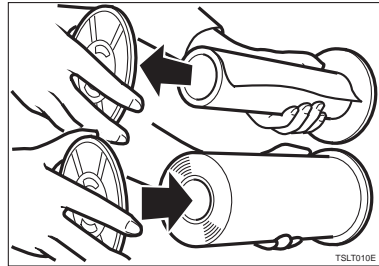


Note

- ❑ When the **Master End** indicator lights, it is necessary to replace the master roll even if some master remains on the old roll.


5 The new master roll must be positioned as shown in the illustration.

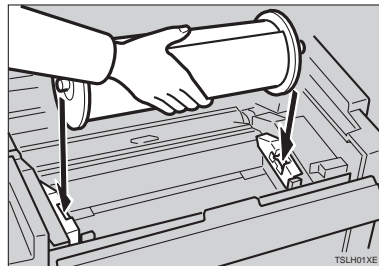

- 6** Set the paper edge of the master roll as shown.

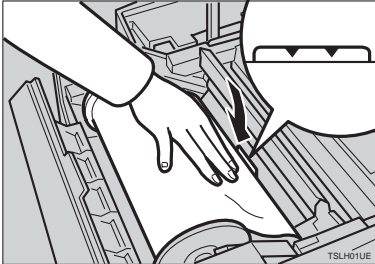


- 9** Return the original table to its original position.

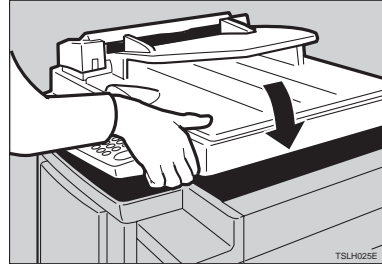


Note

- Rotate the spools backward to take up any slack in the master.

- 7** Close the plotter cover.

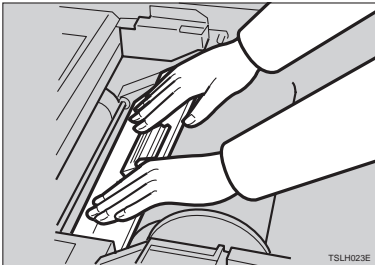

- 8** Close the right side cover.

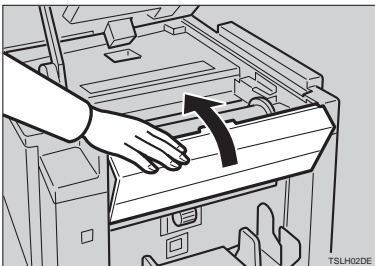


Placing A New Roll Of Tape In The Tape Dispenser (Option)

Note

- Make sure that the main switch is turned on and the power switch of the tape dispenser is off.

- 1** Open the cover of the tape dispenser.

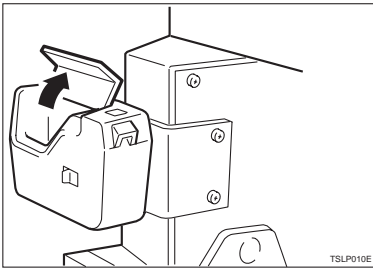


- 2** As shown, put the roll in the dispenser.



Note

- Make sure that the tape is installed in the proper direction. If it is not in the correct direction, the tape dispenser will not work correctly.


- 3** Feed the leading edge of the roll in the dispensing slot until it stops.

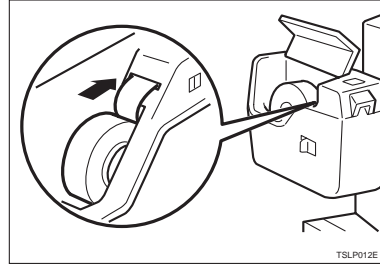


Note

- Push the tape as far as possible through the slot.

- 4** Turn on the power switch of the tape dispenser.

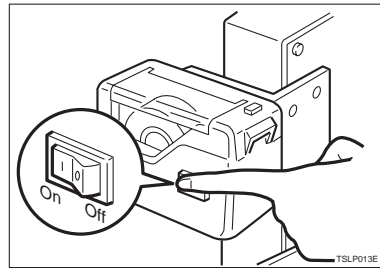

- 5** Press the manual cut button to trim off the leading edge of the tape.

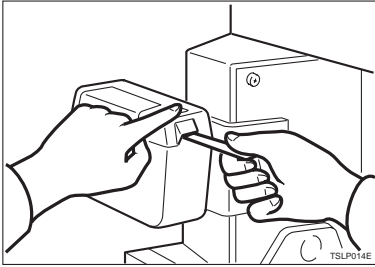


4

This page is intentionally blank.

5. WHAT TO DO IF SOMETHING GOES WRONG

If Your Machine Does Not Operate As You Want

If a malfunction or a misfeed occurs within the machine, the following indicators will blink or light.

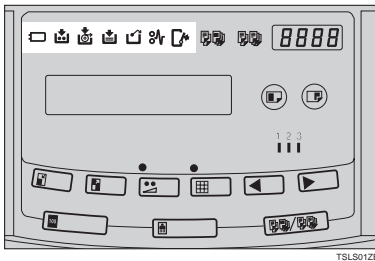

❖ When the misfeed indicator (🚫) blinks

Indicator	Guidance Display	Page
🚫	ORIGINAL JAM. REMOVE ORIGINAL REMOVE ORIGINAL	⇒ P.82 “x” + “ORIGINAL JAM. REMOVE ORIGINAL”.
🚫	PAPER FEED JAM. REMOVE JAMMED PAPER REMOVE JAMMED PAPER	⇒ P.85 “x” + “PAPER FEED JAM. REMOVE JAMMED PAPER”.
🚫	MASTER FEED JAM. REMOVE JAMMED MASTER REMOVE JAMMED MASTER	⇒ P.88 “x” + “MASTER FEED JAM. REMOVE JAMMED MASTER”.
🚫	PAPER WRAP JAM. REMOVE JAMMED PAPER REMOVE JAMMED PAPER	⇒ P.89 “x” + “PAPER WRAP JAM. REMOVE JAMMED PAPER”.
🚫	MASTER EJECT JAM. REMOVE JAMMED MASTER REMOVE JAMMED MASTER	⇒ P.92 “x” + “MASTER EJECT JAM. REMOVE JAMMED MASTER”.
🚫	DELIVERY JAM. REMOVE JAMMED PAPER REMOVE JAMMED PAPER	⇒ P.94 “x” + “DELIVERY JAM. REMOVE JAMMED PAPER”.

⚠ CAUTION:



- Be careful not to cut yourself on any sharp edges when you reach inside the machine to remove misfed sheets of paper or masters.

Note

- ❑ To prevent misfeeds, do not leave any torn scraps of paper within the machine.
- ❑ When clearing misfeeds, do not turn off the main switch. If you do, your copy settings are cleared.
- ❑ If misfeeds occur repeatedly, contact your service representative.

◆ When the open cover/unit indicator (🔍) blinks

Monitor	Guidance Display and Action	Page
🔍	CLOSE THE COVER <ul style="list-style-type: none"> • Close the original table unit. • Close the front door. 	⇒ P.95 "When The Open Cover/Unit Indicator (M) Blinks".
	CLOSE THE PLOTTER COVER <ul style="list-style-type: none"> • Close the right side cover and the plotter cover. 	
	CLOSE THE ADF COVER <ul style="list-style-type: none"> • Close the optional ADF unit. 	⇒ P.95 "When The Open Cover/Unit Indicator (M) Blinks".
	SET THE DRUM COMPLETELY	

◆ When the supply/exchange indicators blink

Monitor	Guidance Display and Action	Page
📄	LOAD MORE PAPER	⇒ P.69 "Loading Paper On The Paper Feed Table".
🖨	LOAD NEW INK CARTRIDGE	⇒ P.71 "When The Add Ink Indicator (j) Blinks".
📜	LOAD NEW MASTER ROLL	⇒ P.74 "Master Roll Replacement".
🗑	EMPTY MASTER EJECT BOX <ul style="list-style-type: none"> • Remove the used master. 	⇒ P.97 "When The Master Eject Indicator (k) Blinks".
	SET THE MASTER EJECT BOX	

◆ When other indicators blink

Monitor	Guidance Display and Action	Page
🔑	SET THE KEY COUNTER	⇒ P.98 "When Other Indicators Blink".

5

◆ **When one of the following messages is displayed on the guidance display**

Guidance Display	Meaning
RE-ENTER COPY NUMBER MAXIMUM IS XXX	The maximum number of prints that can be entered is specified by the Service Program mode. Change the number of prints.
RE-ENTER COPY NUMBER MINIMUM IS XXX	The minimum number of prints that can be entered is specified by the Service Program mode. Change the number of prints.
SET THE ORIGINALS	Make prints after you confirm whether there is an original.
INPUT YOUR ID CODE	User Code mode is set. Before printing, enter your user code.
NO ADDITIONAL PRINTS ALLOWED	Security mode is set. If you make the next master, Security mode is canceled.
MASTER MAKING HALTED	Master making is halted. Press the [Start] key.

5

💡 **When a service code (E-XX) is displayed in the guidance display**

Turn the main switch off and on. If a service code appears again, contact your service representative.

 **Note**

- If a service code appears on the guidance display after you turn the main switch off and on a few times, do not continue turning it on and off. Leave the machine off.
- E04 might be displayed when you make masters continuously using the originals that have solid images. In the case, turn off the main switch and wait for a while.


Clearing Misfeeds

Important

- When clearing misfeeds, do not turn off the main switch. If you do, your print settings are cleared.

After clearing misfeeds

Press the **[Clear Modes]** key to reset the error indicators.

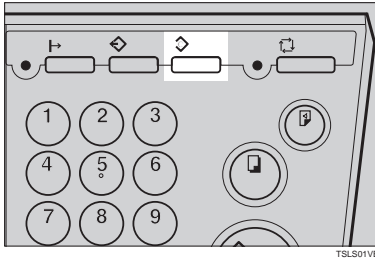


+ “ORIGINAL JAM. REMOVE ORIGINAL”


Note

- These indicators will blink when your machine is equipped with the optional document feeder.


1 Press the ADF unit open lever and open the ADF unit.

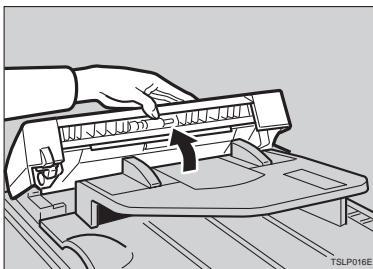

2 Pull out the original gently.

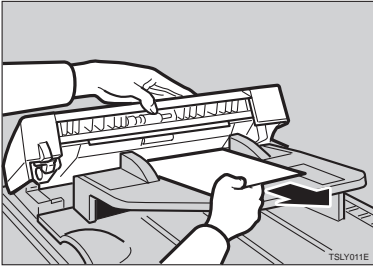


3 If you cannot remove the misfed original, pull out the original from the side of the original tray and remove the original.

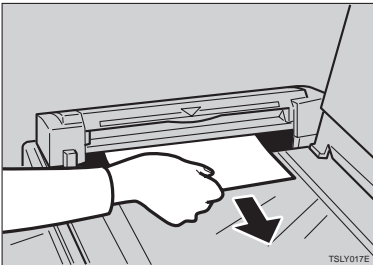

5

4 If you still cannot remove the misfed paper, press the ADF open lever and open the ADF unit to remove the original.

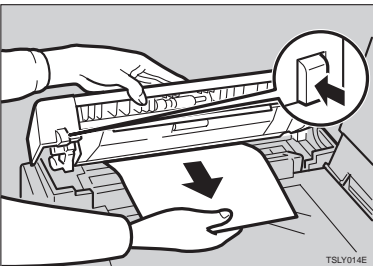

5 Close the ADF unit until it locks in position.

To prevent original misfeeds:


- Originals heavier than 90 g/m², 23.9 lb (when setting a stack of originals)
- Originals lighter than 50 g/m², 13.3 lb (when setting a stack of originals)
- Originals heavier than 120 g/m², 31.9 lb (when setting one original at a time)

- Originals lighter than 40 g/m², 10.6 lb (when setting one original at a time)
- Carbon coated originals
- Damaged originals
- Originals with glue on them
- Originals perforated for ring binders
- Book originals
- Originals written with a pencil or ball-point pen
- Originals smaller than 148 mm × 105 mm, 5.8" × 4.1"
- Originals larger than 257 mm × 364 mm, 10.2" × 14.4"
- Folded, curled, creased originals
- Bound, stapled, or clipped originals
- OHP transparencies
- Translucent paper
- Pasted originals

5

 **Note**

- If you use paste-up originals, make sure the pasted parts hold firmly to the base sheet and press the **[Paste Shadow Erase]** key. If the thickness of the paste-up original is more than 0.1 mm, and the space between the pasted parts is less than 2 mm, 0.08", a shadow might appear on the prints.
- The first 5 mm, 0.2" of the leading edge cannot be printed. Make sure the leading edge margin is at least 5 mm, 0.2".

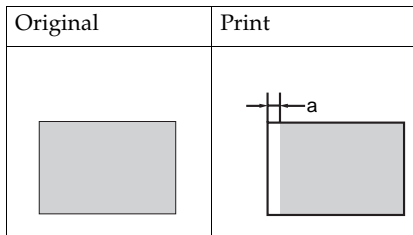

- a: 5 mm, 0.2"
- Do not mix different sizes of originals in the optional document feeder.
- Clean the separation roller if it is dirty. (A dirty separation roller might slip and cause original misfeeds.)
- Remove staples or clips of originals. Fan originals that have had staples or clips removed.



“✂” + “PAPER FEED JAM. REMOVE JAMMED PAPER”


⚠ CAUTION:



- *Be careful not to cut yourself on any sharp edges when you reach inside the machine to remove misfed sheets of paper or masters.*

Misfeed in the paper feed section


- 1** Slowly but firmly pull out the paper.

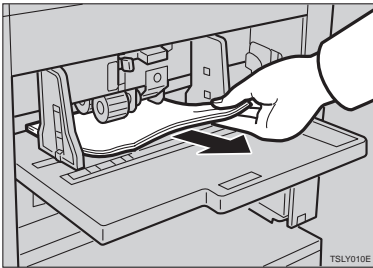

5


Paper is wrapped around the drum

- 1** Pull out the drum unit.

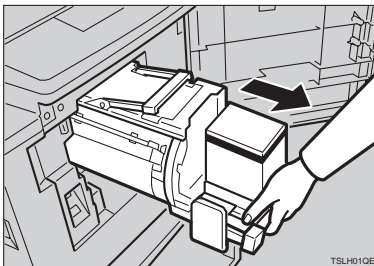

- 2** Remove the misfed paper.

- 3** Re-insert the drum unit until the drum unit locks in position and put the lever back in place.

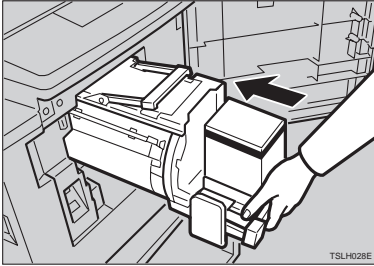


- 4** Close the front door.



5  **To prevent paper misfeeds:**

If the paper is curled or the originals leading edge margin is too narrow, the following action is necessary.


- When you use curled paper, correct the curl as shown.

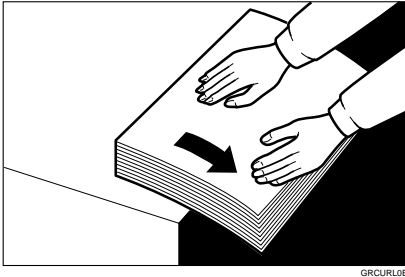

- If you cannot correct the paper curl, stack the paper with the curl face down as shown.

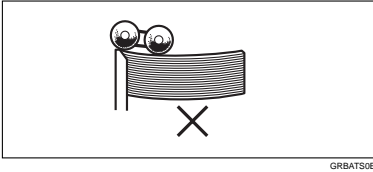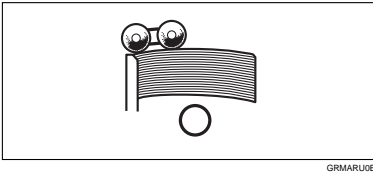


- When the leading edge margin of the original is less than 5 mm, 0.2" or there is a solid image on the leading edge, insert the original with the widest margin first or make a leading edge margin by making a copy.

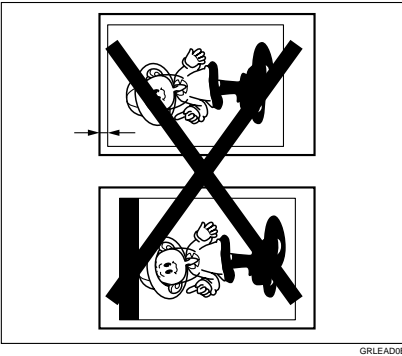

“” + “MASTER FEED JAM. REMOVE JAMMED MASTER”


1 Open the original table.

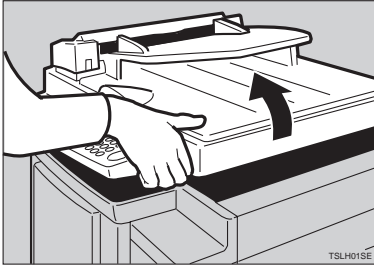


 **Note**

- Lift the original table release lever and slide the original table all the way to the left.


2 Open the right side cover.

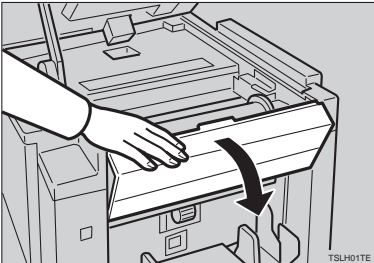

3 Open the plotter cover.

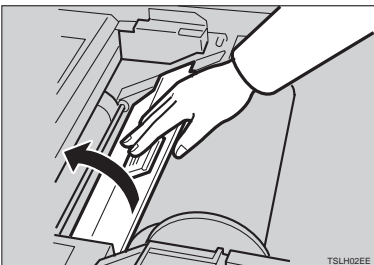

- 4** If you could not remove the misfed master in steps **2** and **3**, take out the drum and remove the misfed master from the inside.

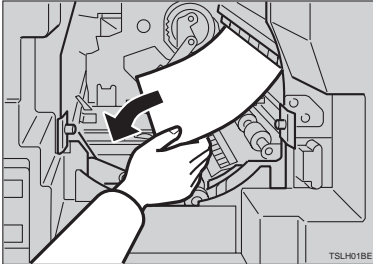


Reference

For how to take out the drum unit, see ⇒ P.49 “Changing The Color Drum Unit”.

- 5** If the original misfeeds in the optional document feeder, press the ADF open lever and open the ADF unit to remove the misfed sheet.

5

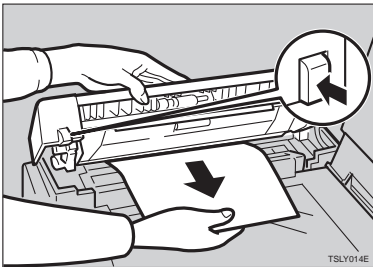

- 6** Return the original table to its original position.

Note

- If you follow step **4**, set the drum unit and close the front door.
- If you follow step **5**, close the ADF unit.


“” + “PAPER WRAP JAM. REMOVE JAMMED PAPER”

CAUTION:




- Be careful not to cut yourself on any sharp edges when you reach inside the machine to remove misfed sheets of paper or masters.


1 Remove the misfeed paper.

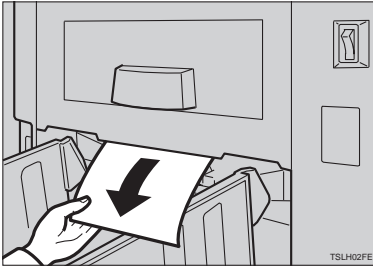

2 If the paper is completely wrapped around the drum, pull out the drum unit and remove the misfed paper from the drum.

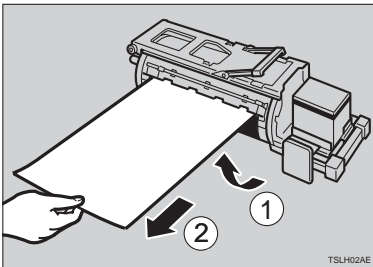

3 Re-install the drum unit locks in position and put the lever back in place.

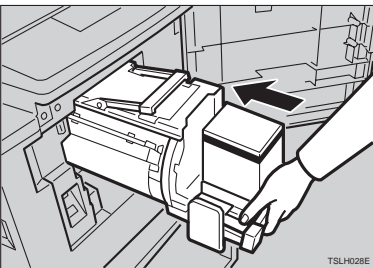


Note

- If you followed step **2** or **3**, close the front door.

To prevent paper misfeeds:


If the paper is curled or the original's leading edge margin is too narrow, the following action is necessary.

- When you use curled paper, correct the curl as shown.

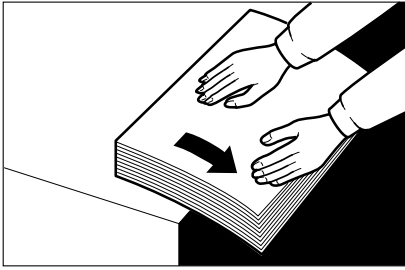


GRCURLOE

- If you cannot correct the paper curl, stack the paper with the curl face down as shown.

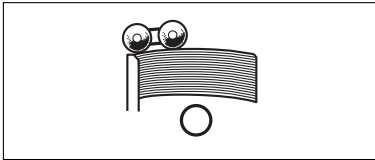


GRMARUOE

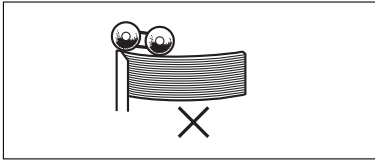

GRBATSOE

- When the leading edge margin of the original is less than 5 mm, 0.2" or there is a solid image on the leading edge, insert the original with the widest margin first or make a leading edge margin by making a copy.

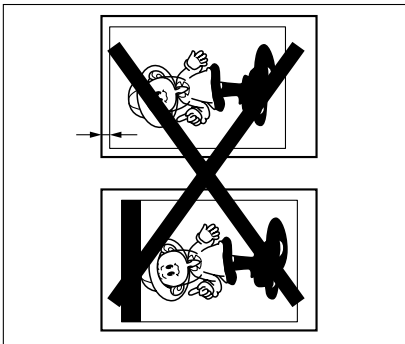


GRLEADDE

“%” + “MASTER EJECT JAM. REMOVE JAMMED MASTER”


- 1 Check where the misfed master is. Remove the misfed master as follows.

When a master misfeed occurs in the master eject section

- 1 Pull out the master eject box.

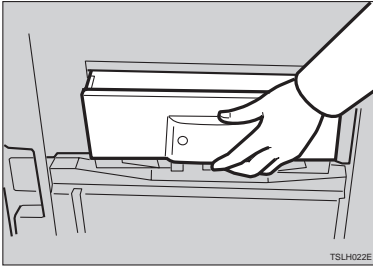

- 2 Remove the misfed master.

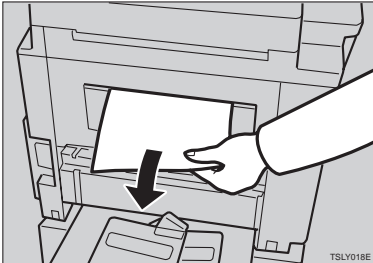


 **Note**

- Be careful not to stain your hands with ink when you touch used masters.

- 3 Return the master eject box to its original position.

When a master misfeed occurs on the drum


- 1 Lift the lever to unlock the drum unit and pull out the unit.

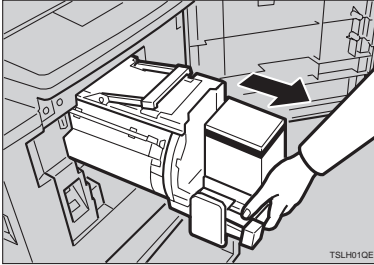


Reference

For how to remove the drum unit, see ⇒ P.49 “Changing The Color Drum Unit”.


- 2 Grasp the drum unit handle and remove the master from the drum.

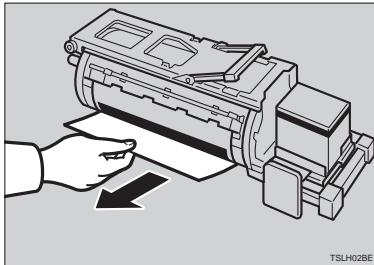

- 3 Pull the master out of the master clamp.

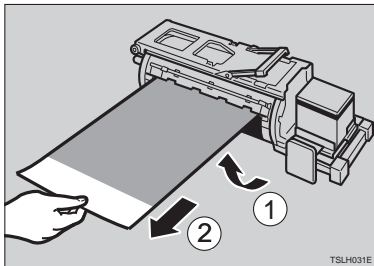


- 4 Re-insert the drum unit until the drum unit locks in position and put the lever back in place.

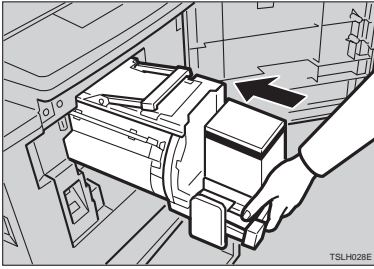

“%” + “DELIVERY JAM. REMOVE JAMMED PAPER”

- 1 Remove the misfed paper.

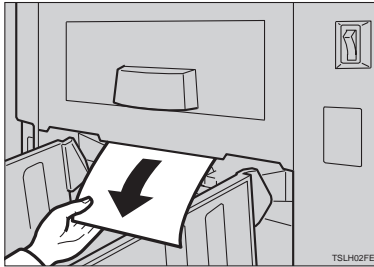

 **Note**


- Make sure that the paper delivery end plate and paper delivery side plates are in the proper position.

When The Open Cover/Unit Indicator (🔒) Blinks

🔒 Make sure that the following door/units are closed.

❖ Original Table

Close the original table until it locks in position.

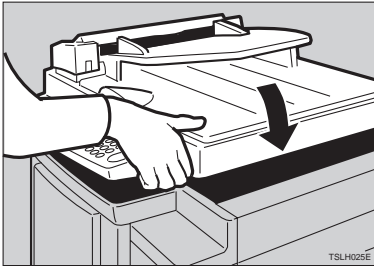


❖ Front Door

Close the front door completely.




❖ ADF Unit (Option)

Close the ADF unit until it locks in position.

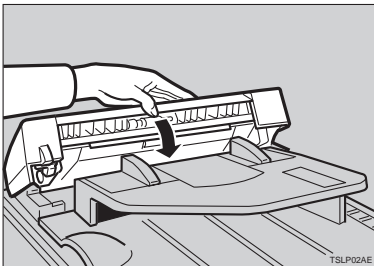

Make sure that the drum is completely set in position.

- Set the drum unit completely until it locks in position.

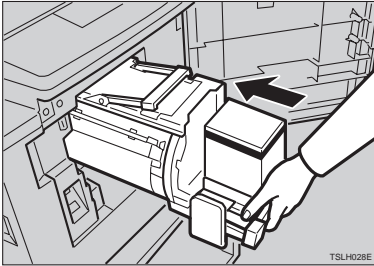


5

When The Master Eject Indicator (↶) Blinks

The **Master Eject** indicator (↶) and the **Reset** indicator blink when it is time to empty master eject box or when you need to set the master eject box.

- 1** Take out the master eject box and remove the used masters.

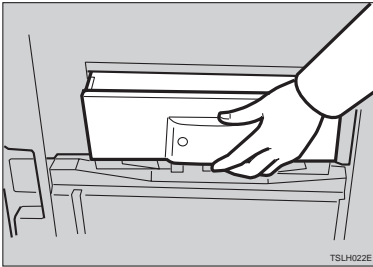


5


 **Note**

- Spread an old newspaper, then turn the master eject box upside down on it to remove the used masters. Then, throw away the masters.

- 2** Re-install the master eject box. Push in the box until it touches the inside bracket.

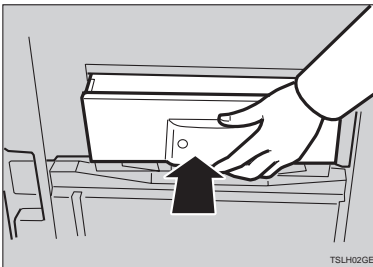


When Other Indicators Blink
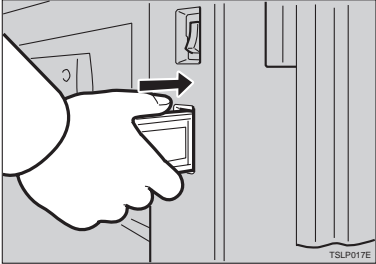
<p>523</p> <p>Set the key counter</p>	<p>The key counter (option) is not set. Insert the key counter.</p>  <p>TSLP017E</p>
--	---

5

When The Prints Are Thrown Over The Paper Delivery Table

1 Reduce the printing speed by pressing the [◀] key.

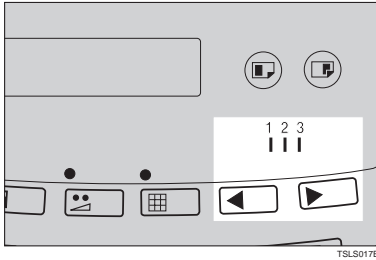

Poor Printing

Dirt On The Back Side Of Paper



GRDIRT0E

Note


- When you use paper smaller than the original, select the proper reduction ratio. Otherwise, you might get dirty background prints.
- When you use postcards and the like, the background might be dirty because postcards do not absorb ink well.
- You might get prints with dirty background when printing at high speed and under high temperature.

1 Turn off the main switch.



TSLH01RE

2 Pull out the drum unit.

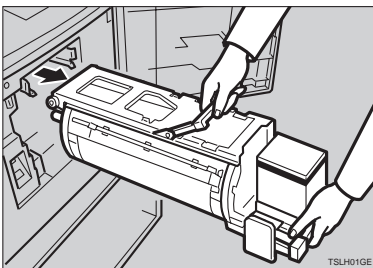


TSLH01GE

5


 **Reference**

See ⇒ P.49 “Changing The Color Drum Unit” for the details.

- 3** Clean the pressure roller with a clean cloth.

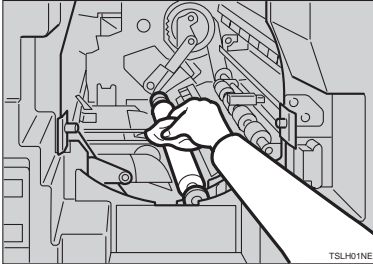


- 4** With a clean cloth, remove any ink that has accumulated on the trailing edge of the drum unit.

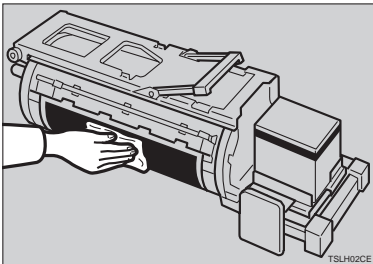

5

- 5** Insert the drum unit until it locks in position, then lower the drum unit lock lever.

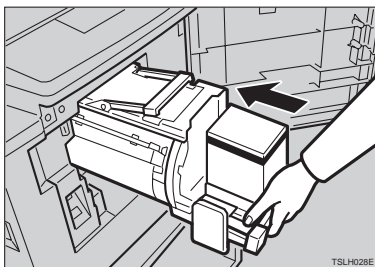


- 6** Close the front door.

7 Turn on the main switch.



Dirt On The Front Side Of Paper (Black Line/Stain)


5

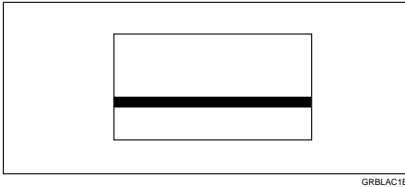


 **Note**

- When black lines or stains still appear on prints even if you clean the above, contact your service representative.
- If there is no margin or if there is a solid image area near the leading edge of the original, make a margin of at least 5 mm, 0.2" at the leading edge. Otherwise, the paper exit pawl might become dirty and cause black lines on prints.
- Check the platen cover and clean it if dirty. (See ⇒ P.112 "Platen Cover".)
- Check the exposure glass and clean it if dirty. (See ⇒ P.112 "Exposure Glass".)

White Prints Or Incomplete Prints

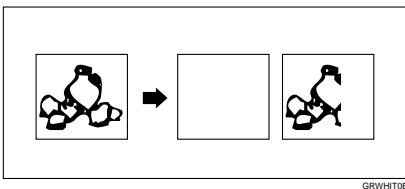

- Make sure that the paper feed side plates touch the paper lightly. Put back the lock lever.

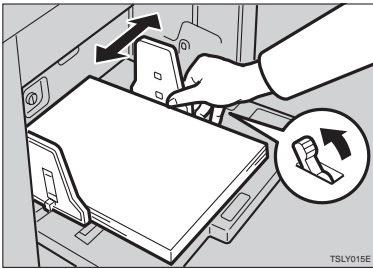


- When you use the optional document feeder, make sure that the original guides contact the originals lightly.

When you get white or incomplete prints even if you check the items above, perform the following procedure.

1 Pull out the drum unit.


5

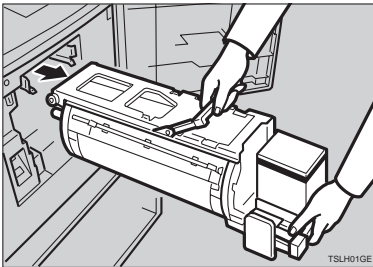


Reference

See ⇒ P.49 “Changing The Color Drum Unit” for the details.


2 Remove the master from the drum.

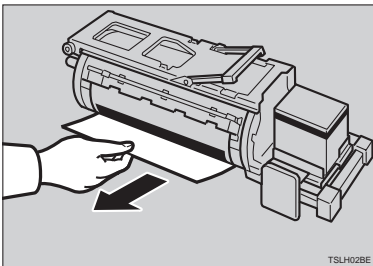


3 Remove paper that is stuck to the drum.

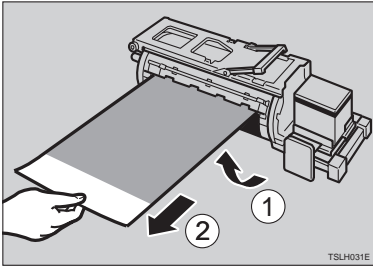

4 Insert the drum unit until it locks in position, then lower the drum unit lock lever.

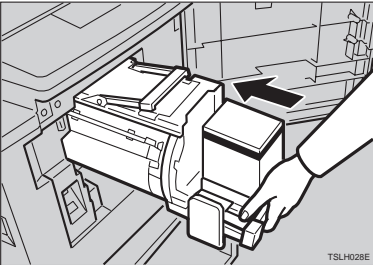

5 Close the front door.

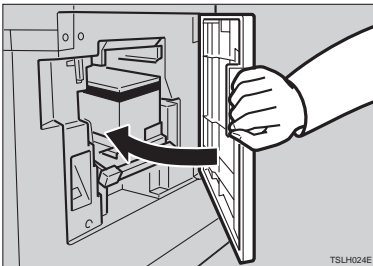

5

6. REMARKS

Operation Notes

General Cautions

- While printing, do not turn off the main switch.
- While printing, do not open the door or covers.
- While printing, do not unplug the power cord.
- While printing, do not move the machine.
- Keep corrosive liquids, such as acid, off the machine.
- Open and close the door and covers softly.
- Do not put anything except originals on the machine.
- Do not spill liquid on the machine.
- When opening or closing the door or covers, keep hold of them so they don't fall.
- When removing the drum unit from the machine, be careful not to let the drum unit fall.
- Do not modify or replace any parts other than the ones specified in this manual.
- Do not operate the machine without covers. You might get your fingers caught in the machine, or the machine might be damaged because, for example, dust or the like might get inside.
- Since some parts of the machine are sharp and might cause injury, touch only the parts specified in this manual.
- If you clean rubber parts with benzine, wipe them with a dry cloth afterwards.
- Always turn the machine off when you have finished printing for the day.
- If the machine must be transported by vehicle, please contact your service representative.
- Make sure to make a few trial prints to check the image position because the image position of the trial print might not correspond with that of the original.
- If the image registration is not consistent, slow the printing speed down to Setting 0.
- When performing duplex or multicolored printing, leave the printed paper for a while before the next printing in order to let the ink dry on the printed paper. If this is not done, feed roller marks will appear on the print image.

- If the machine is not used for a long period, the image density might decrease because the ink on the drum might dry. Make extra prints until the image density recovers.
- When the machine is used in low temperature conditions, the image density might decrease. In this case, slow the printing speed down to step 1 or 2.
- When making duplex prints, misdetection of paper wrapping might occur if the paper delivery sensor detects a black area at the leading edge of the back side. Keep at least an 5 mm, 0.2" margin at the leading edge of the back side of the printing paper.
- Press the **[Proof]** key to perform a test print as the first few prints might be light.
- The top sheet might remain between the feed rollers when you press the **[Paste Shadow Erase]** key. In this case, remove the top sheet.
- When making duplex prints or when using non-white printing paper, the paper end sensor might malfunction and fail to detect the paper. In this case, place a blank sheet under the printing paper on the paper feed table.
- The outer portion of the image might not be printed under low temperature. In this case, slow the printing speed down to step 1 or 2, or increase the room temperature.
- The paper exit pawl might contact the printing paper and cause black lines on the prints. In this case, increase the printing speed or make a new master with lighter image density mode.
- If you cannot pull out the drum, close the front cover again to rotate the drum. Pull out the drum after it stopped at the position.
- The leading edge of the prints might become stained if the edge touches the image of prints on the paper delivery table.
- The ink of the print on the paper delivery table might stick to the back side of the next print.
- When the machine is on and the power source is less than 90 % of the specified amount, printing quality will decrease. Therefore, make sure the supply from your electrical outlet is at least 90 % of the required amount.
- As various kinds and qualities of paper exist, some paper might be wrapped around the drum or cause misfeeds.
- If your hands are stained with ink:
 - Avoid prolonged or repeated contact with skin.
 - Cleanse skin thoroughly after contact, before breaks and meals, and at the end of the work period.
 - Ink is readily removed from skin by waterless hand cleaners followed by washing with soap and water.
- Also, be careful not to get any ink on your clothing while emptying the master eject box or while loading a new ink cartridge.

- The image density varies according to the printing speed and the room temperature. So, adjust the printing speed or increase the room temperature.
- When you make a lot of prints from a small image, ink might ooze out from the edges of the master, especially under high temperature and when printing in two or more colors. In this case, make a new master.
- Use ink made within one year. Ink stored for a long period tends to dry slowly and yield lower image density.
- While making a master, do not leave the platen cover or optional document feeder open.
- In Letter/Photo mode, moire patterns might occur when screened originals are printed. In this case, make prints in Letter or Photo mode.
- When you use originals with light lettering, edges of the letters might be printed clearly and the inside of the letters might be light. In this case, increase the image density.

Print Paper

- When the paper is curled, stack the paper with the curl face down, otherwise the paper might wrap around the drum or stains might appear.
- Postcards and the like do not absorb ink well. Offset images might appear on the rear side of subsequent prints. Solid image originals will cause offset image prints.

6

Originals

- If there is no margin or if there is a solid image area near the leading edge of the original, make at least a 5 mm, 0.2", margin at the leading edge; otherwise, the paper might wrap around the drum or the paper exit pawl might become dirty and cause black lines on prints.
- If you use originals that have bold letters or solid images at the leading edges, you might get prints with dirty edges. In this case, insert the widest margin first, or raise the printing speed.
- If you use paste-up originals, select Paste Shadow Erase mode (see ⇒ P.21 "*Paste Shadow Erase—Erasing The Shadow Of Pasted Originals*") make sure that the pasted parts hold firmly to the base sheet. If the thickness of the paste-up originals is more than 0.1 mm and the space between the pasted parts is less than 2 mm, 0.08", a shadow might appear on the print.
- Under the following conditions, the machine might not detect the original on the exposure glass. If you press the **[Start]** key again, the machine will start making a master anyway:
 - When you set a dark original on the exposure glass.
 - When the original is not centered according to the size marks on the right scale.

REMARKS

- If you do not open the platen cover at an angle of more than 25 degrees with the exposure glass when you replace originals.
- If the machine is installed under a strong light.

Where To Put Your Machine

Your machine's location should be carefully chosen because environmental conditions greatly affect its performance.

Environmental Conditions

Optimum environmental conditions

CAUTION:



- *Keep the machine away from humidity and dust. A fire or an electric shock might occur.*
- *Do not place the machine on an unstable or tilted surface. If it topples over, it could cause injury.*

CAUTION:



- *If you use the machine in a confined space, make sure there is a continuous air turnover.*

6

- Temperature: 10 – 30°C, 50 – 86°F
- Humidity:
 - Main Frame: 20 – 90 % RH
 - Document feeder (option): 20 – 70 % RH
- A strong and level base (a sturdy desk and cabinet etc.).
- The machine must be level within 5 mm, 0.2" both front to rear and left to right.
- Make sure to locate this machine in a large well ventilated room that has an air turnover of more than 30 m³/hr/person.

Environments to avoid

- Locations exposed to direct sunlight or strong light (more than 1500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater. (Sudden temperature changes might cause condensation within the machine.)
- Places where the machine might be subjected to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

Power connection

⚠ WARNING:

 
- **Only connect the machine to the power source described on the inside front cover of this manual.**
- **Avoid multi-wiring.**
- **Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it, pull it hard or bend it more than necessary. These actions could cause an electric shock or fire.**
- **Do not plug or unplug the power cord with your hands wet. Otherwise, an electric shock might occur.**

⚠ WARNING:

- **Make sure the wall outlet is near the machine and freely accessible so that in event of an emergency it can be unplugged easily.**

⚠ CAUTION:

- **When you move the machine, unplug the power cord from the wall outlet to avoid fire or electric shock.**
- **When the machine will not be used for a long time, unplug the power cord.**

⚠ CAUTION:

- **When you pull out the plug from the socket, grip the plug to avoid damaging the cord and causing fire or electric shock.**


❖ Main Frame

- Make sure the plug is firmly inserted in the outlet.

Access to machine

Place the machine near the power source, providing clearance as shown.

◆ **Main Frame**

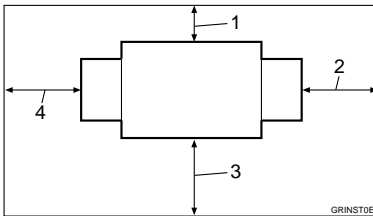

1. More than 20 cm, 8.0"
2. More than 60 cm, 23.7"
3. More than 60 cm, 23.7"
4. More than 60 cm, 23.7"


Maintaining Your Machine

To maintain high print quality, clean the following parts and units regularly.

Main Frame

Exposure Glass

- 1** Lift the platen cover or document feeder.
- 2** Clean the exposure glass with a damp cloth and wipe it with a dry cloth.

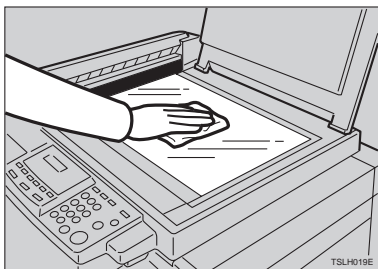


Note

- If you do not clean the exposure glass, marks on the glass will be printed.

Platen Cover

- 1** Lift the platen cover.

- 2** Clean the platen cover with a damp cloth and wipe it with a dry cloth.

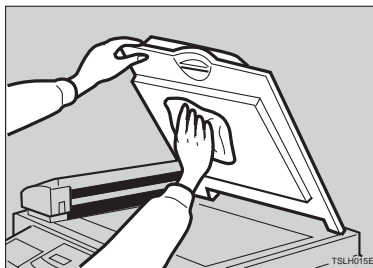


Note

- If you do not clean the platen cover, marks on the cover will be printed.

Paper Feed Roller (paper feed table)

- 1** Wipe off the paper dust on the paper feed roller with a damp cloth, then wipe it with a dry cloth.

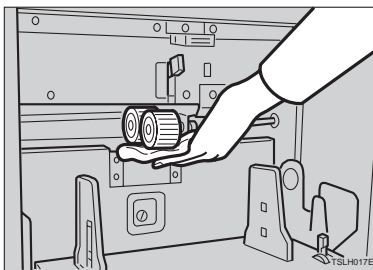


Note

- If you do not clean the paper feed roller, paper misfeeds tend to occur.

Optional Document Feeder

Separation Roller

- 1** Open the ADF unit.
- 2** Clean the separation roller with a damp cloth and wipe it with a dry cloth.

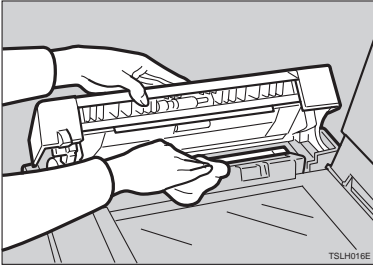

 **Note**

- If you do not clean the separation roller, original misfeeds tend to occur.

Combination Chart

This combination chart shows which modes can be used together.

○	means that these modes can be used together.
×	means that these modes cannot be used together.

		1	2	3	4	5	6	7	8	9	10	11	12	13	14
1	Reduction	--	×	○	○	○	○	○	○	○	×	○	○	○	○
2	Enlargement	×	--	○	○	○	○	○	○	○	×	○	○	○	○
3	Auto Cycle	○	○	--	○	○	○	○	○	○	○	○	○	○	○
4	Memory mode	○	○	○	--	×	○	○	○	○	×	×	○	○	○
5	Class mode	○	○	○	×	--	○	○	○	○	×	×	○	○	○
6	Combine Copies	○	○	○	○	○	--	○	○	○	×	×	○	○	○
7	Center/Edge Erase	○	○	○	○	○	○	--	○	○	×	○	○	○	○
8	Type of Original	○	○	○	○	○	○	○	--	○	×	○	○	○	○
9	Image Density	○	○	○	○	○	○	○	○	--	×	○	○	○	○
10	On-Line	×	×	○	×	×	×	×	×	×	--	○	○	×	×
11	Overlay	○	○	○	×	×	×	○	○	○	○	--	○	×	×
12	Economy mode	○	○	○	○	○	○	○	○	○	○	○	--	○	○
13	Tint mode	○	○	○	○	○	○	○	○	○	×	×	○	--	○
14	Fine mode	○	○	○	○	○	○	○	○	○	×	×	○	○	--

7. SPECIFICATION

Main Frame

- ❖ **Configuration:**
Desk top
- ❖ **Printing Process:**
Full automatic one drum system
- ❖ **Original Type:**
Sheet/Book
- ❖ **Original Size:**
Maximum 257 mm × 364 mm, 10.2" × 14.4"
- ❖ **Pixel Density:**
300 dpi (in Fine mode 400dpi)
- ❖ **Image Mode:**
Photo mode (Sand pattern)
Letter mode (Standard mode)
Letter/Photo mode
- ❖ **Reduction Ratios:**
 - Inch version:
93 %, 77 %, 74 %, 65 %
 - Metric version:
93 %, 87 %, 82 %, 71 %
- ❖ **Enlargement Ratios:**
 - Inch version:
155 %, 129 %, 121 %
 - Metric version:
141 %, 122 %, 115 %
- ❖ **Printing Area:**
 - B4 drum:
More than 250 mm × 355 mm, 9.8" × 14.0"
 - A4 drum:
More than 210 mm × 288 mm, 8.2" × 11.3"
- ❖ **Print Paper Size:**
Maximum 268 mm × 388 mm, 10.5" × 15.2"
Minimum 90 mm × 148 mm, 3.6" × 5.9"

◆ **Leading Edge Margin:**

5 mm ± 3 mm, 0.2" ± 0.12"

◆ **Print Paper Weight:**

47.1 g/m² to 157.0 g/m², 12.5 lb to 41.7 lb

◆ **Print Speed:**

80 – 120 rpm (3 steps)

◆ **First Copy Time (Master Process Time):**

Less than 27.0 seconds (A4☐, 8¹/₂" × 11"☐)
(When setting an original on the exposure glass)

◆ **Second Copy Time (First Print Time):**

Less than 29.0 seconds (A4☐, 8¹/₂" × 11"☐)
(When setting an original on the exposure glass)

◆ **Color Printing:**

Drum unit replacement system (black, red, blue, green, brown, yellow, purple, navy, maroon, orange, teal and gray)

◆ **Image Position Adjustment:**

- Vertical:
More than + 10 mm, – 10 mm, + 0.39", – 0.39"
- Side:
10 mm, 0.39" (for either side)

◆ **Paper Feed Table Capacity:**

1,000 sheets (80 g/m², 20 lb)

◆ **Paper Delivery Table Capacity:**

1,000 sheets (80 g/m², 20 lb)

◆ **Master Eject Box Capacity:**

More than 30 masters under low temperature
More than 40 masters under high temperature

◆ **Dimensions (W × D × H):**

	Width	Depth	Height
Stored	594 mm, 23.4"	601 mm, 23.1"	567 mm, 22.4"
Stored with document feeder	594 mm, 23.4"	601 mm, 23.1"	617 mm, 24.3"
Set up	1,187 mm, 46.8"	601 mm, 23.1"	567 mm, 22.4"
Set up with document feeder	1,187 mm, 46.8"	601 mm, 23.1"	617 mm, 24.3"

◆ **Weight:**

- Main Frame: 65 kg, 143.3 lb
- Main Frame with optional document feeder: 68 kg, 150.0 lb

◆ **Noise Emission:**

Sound Power level (The measurements are made according to ISO 7779.)

Printing Speed	
80 rpm	81 dB (A)
100 rpm	82 dB (A)
120 rpm	83 dB (A)

◆ **Noise Emission:**

- Sound Pressure level (The measurements are made according to ISO 7779 at the operation position.)

Printing Speed	
80 rpm	71 dB (A)
100 rpm	72 dB (A)
120 rpm	72 dB (A)

◆ **Power Source:**

See the inside front cover of this manual.

◆ **Power Consumption:**

Stand-by	Less than 0.04 kW
Master Making	Less than 0.25 kW
Printing: Speed 1	Less than 0.14 kW
Printing: Speed 2	Less than 0.16 kW
Printing: Speed 3	Less than 0.18 kW

◆ **Optional Equipment:**

- Color Drum
- A4 Drum
- B4 Drum
- Key Counter
- Tape Dispenser
- 30 Originals Document Feeder

30 Originals Document Feeder

❖ **Original Type:**

Sheet

❖ **Original Weight:**

- When setting a stack of originals:
50 – 90 g/m², 13.3 – 23.9 lb
- When setting one sheet at a time:
40 – 120 g/m², 10.6 – 31.9 lb

❖ **Original Size:**

Max. 257 mm × 364 mm, 10.2" × 14.4"

Min. 148 mm × 105 mm, 5.8" × 4.1"

❖ **First Copy Time (Master Process Time):**

Less than 29.0 seconds (A4☐, 8¹/₂" × 11"☐)

❖ **Second Copy Time (First Print Time):**

Less than 32.0 seconds (A4☐, 8¹/₂" × 11"☐)

❖ **Original Capacity:**

30 sheets (80 g/m², 20 lb)

 **Note**

- ☐ Specifications are subject to change without notice.

Consumables

Name	Size	Remarks
Master for B4 drum	Length: 125 m, 410 ft/roll Width: 280 mm, 11.0" 2 Rolls/case	260 masters can be made per roll
Master for A4 drum	Length: 125m, 410 ft/roll Width: 240 mm, 9.5" 2 Rolls/case	300 masters can be made per roll
Ink-Black	600 ml/pack, 5 packs/case	Environmental conditions: - 5 to 40°C, 10 to 95 % RH
Ink-Red	600 ml/pack, 5 packs/case	
Ink-Blue	600 ml/pack, 5 packs/case	
Ink-Green	600 ml/pack, 5 packs/case	
Ink-Brown	600 ml/pack, 5 packs/case	
Ink-Yellow	600 ml/pack, 5 packs/case	
Ink-Purple	600 ml/pack, 5 packs/case	
Ink-Navy	600 ml/pack, 5 packs/case	
Ink-Maroon	600 ml/pack, 5 packs/case	
Ink-Orange	600 ml/pack, 5 packs/case	
Ink-Teal	600 ml/pack, 5 packs/case	
Ink-Gray	600 ml/pack, 5 packs/case	
Tape for Tape dispenser	35 m (114.8 ft)/roll	

Note

- Specifications are subject to change without notice.

INDEX

Symbols

[◀] or [▶] key, 13

A

Accessing Service Programs, 53
Access to machine, 111
ADF Unit, 41
ADF Unit Open Lever, 41
Adjusting The Print Image Density, 10
Adjusting The Print Image Position, 8
After clearing misfeeds, 82
Auto Cycle, 25
[Auto Cycle] key, xiii, 25

B

Behind Cover, x

C

Center/Edge Erase, 17
[Center/Edge Erase] key, xii, 17, 19
Changing The Color Drum Unit, 49
Changing The Paper Size, 70
Changing The Printing Speed, 13
Changing The Settings Of Service Programs, 54
Check Indicator, xii
Class Mode, 27
Clearing Misfeeds, 82
[Clear Modes] key, xiii
[Clear/Stop] key, xiii, 14
Color Printing, 49
Combination Chart, 114
Combine Copies, 32
[Combine Copies] key, 34
Combine Copies With The Document Feeder, 44
Consumables, 119
Counter, xiv

D

Dirt On The Back Side Of Paper, 100
Dirt On The Front Side Of Paper (Black Line/Stain), 102
Document Feeder, x, 41
Document Feeder Exterior, 41
Drum Unit, x

Drum Unit Lock Lever, x

E

[Economy] key, xii, 24
Economy Mode, 24
Edge Erase, 19
[Enlarge] key, xii, 16
Enlargement, 15
[Enter] key, xiii
Environments to avoid, 109
Error Indicators, xiv
Exposure Glass, 112
(E-XX), 81

F

Feed Roller Pressure Lever, ix
[Fine] key, 12, xiii
Fine Mode, 12
Front Door, ix
[Full Size] key, xii

G

Guidance Display, xiv

H

How To Check The Total Number Of Masters And Prints Made Under All User Codes, 65
How To Check The User Code Counter, 63
How To Clear The User Code Counter, 64
How To Clear The User Code Total Counter, 66
How To Set User Code Mode, 62
How To Use User Code Mode, 63

I

[Image Density] key, xii, 10
[Image Position] key, xiii, 8
Ink Holder, x

L

Loading Paper, 3
Loading Paper On The Paper Feed Table, 69

M

Machine Exterior, ix

Machine Interior, x
Main Frame, 112, 115
Main Switch, x
Maintaining Your Machine, 112
Making Color Prints, 49
Master Eject Indicator, 97
Master Roll Replacement, 74
Memory/Class Indicator, xiv
[Memory/Class] key, xiii, 27, 29
Memory Mode, 29
misfeed indicator, 79

N

[Number] keys, xiii

O

open cover/unit indicator, 79
Operation Notes, 105
Operation Panel, ix, xii
Optimum environmental conditions, 109
Options, xi
Original Guides, 41
Originals, 2, 41
Original Table Release Lever, ix
Original Tray, 41

P

Paper Delivery End Plate, x
Paper Delivery Side Plates, x
Paper Delivery Table, x
Paper Feed Roller, 112
Paper Feed Side Plates, ix
Paper Feed Table, ix
Paper Feed Table Down key, ix
Paste Shadow Erase, 21
[Paste Shadow Erase] key, xii, 21
Photo mode, 23
Placing A New Roll Of Tape In The Tape
Dispenser, 76
Platen Cover, ix, 112
Poor Printing, 100
Power connection, 110
Preparation For Printing, 3
Preset Reduce/Enlarge, 15
Printing In Two Colors, 51
Printing On Thick Paper, 22
Printing On Thin Paper, 22
Printing Paper, 1
[Print] key, xiii
Program, 36

[Program] key, xiii, 36
[Proof] key, xiii
Protecting A Program, 38

R

Recalling A Program, 37
[Reduce] key, xii, 16
Reduction, 15
Removing Program Protection, 39
Replenishing Paper, 69
Restoring Paper Feed And Paper Delivery
Tables, 7

S

Safety Information, i
[Scroll] key, xii
[Security] key, xii, 40
Security Mode, 40
Separation Roller, 113
Service Program Menu, 55
Setting Up The Paper Delivery Table, 4
Shifting The Image Position Forward Or
Backward, 8
Shifting the print image to the left, 8
Shifting the print image to the right, 8
side plate fine adjusting dial, 8
Side Table Fine Adjusting Dial, ix
[Skip Feed] key, xii, 35
Skip Feed Printing, 35
Speed Indicators, xiv
[Speed] key, xiii
Standard Printing, 5
[Start] key, xiii
Stop The Machine, 14
Storing Your Settings, 36
supply/exchange indicators, 79

T

tape dispenser, 76
Thick paper, 22
Thin paper, 22
[Tint] key, xii, 11
Tint Mode, 11
[Type of Original], 23
[Type of Original] key, xiii

U

User Codes, 62

W

- When The Add Ink Indicator (🖨️) Blinks, 71
- Where To Put Your Machine, 109
- White Prints Or Incomplete Prints, 102