

Table of Contents

1. OVERALL MACHINE INFORMATION

1. SPECIFICATIONS.....	1-1
2. GUIDE TO COMPONENTS AND THEIR FUNCTION	1-8
3. OPERATION PANEL	1-12
4. PRINTING PROCESS	1-16
5. ELECTRICAL COMPONENT LAYOUT	1-17
6. ELECTRICAL COMPONENT DESCRIPTIONS	1-20
7. MECHANICAL COMPONENT LAYOUT	1-24

2. SECTIONAL DESCRIPTION

1. ORIGINAL FEED SECTION	2-1
1.1 OVERALL: VT2300/VT2500	2-1
1.2 OVERALL: VT2100/VT2130/VT2150	2-2
1.3 ORIGINAL FEED DRIVE MECHANISM: VT2300/VT2500	2-3
1.4 ORIGINAL FEED DRIVE MECHANISM: VT2100/VT2130/VT2150	2-4
1.5 ELECTRICAL TIMING: VT2300/VT2500	2-5
1.6 ELECTRICAL TIMING: VT2100/VT2130/VT2150.....	2-8
1.7 CIRCUIT:.....	2-9
1.8 OUTPUTS:	2-10
2. OPTICS/IMAGE PROCESSING	2-11
2.1 OVERALL	2-11
2.2 LIGHT SOURCE	2-12
2.3 LENS	2-13
2.4 CCD (Charge Coupled Device).....	2-14
2.4.1 Function	2-15
2.4.2 The Image Signal :	2-16
2.5 A/D CONVERSION BOARD	2-17
2.5.1 CCD Output Signal Conversion, DC Clamping, Amplification:.....	2-18
2.5.2 Peak Hold:	2-20

2.5.3 Shading Distortion Correction:	2-22
2.5.4 Original Background Correction	2-25
2.5.5 Black Level Correction (Line mode only)	2-26
2.5.6 A/D Conversion	2-27
2.5.7 Printing Density Change.	2-31
2.6 REDUCTION PROCESSING:	2-34
2.6.1 Main Scanning Reduction:	2-34
2.6.2 Movement:	2-35
2.6.3 Sub-scanning Reduction:	2-36
2.7 Enlargement Processing: VT2300/VT2500	2-38
2.7.1 Main Scanning Enlargement	2-38
2.7.2 Sub-scanning Enlargement	2-41
2.8 IMAGE SIGNAL PROCESSING : BINARY CIRCUIT	2-42
2.8.1 Function	2-42
2.8.2 Outline	2-42
2.9 THERMAL HEAD PULSE GENERATOR:	2-44
2.10 THERMAL HEAD DRIVE:	2-46
2.10.1 Function/Specification	2-46
2.10.2 Thermal Head Outline	2-46
2.10.3 Power Lines	2-46
2.10.4 Movement.	2-47
2.10.5 Temperature Rise Detection of Thermal Head/Power Supply:	2-50
2.11 MAKE-UP MODE: VT2500 only	2-52
2.11.1 Overall Operation	2-52
2.11.2 Command Sheet Data Reduction.	2-53
2.11.3 Designated Area Memory.	2-53
2.11.4 Make-up Control Circuit	2-55
2.11.5 Background Pattern	2-60
2.11.6 Recognition of Designated Area: VT2500 only	2-66
3. MASTER FEED SECTION	2-69
3.1 OVERALL	2-69
3.2 MASTER CLAMPER OPENING MECHANISM	2-70
3.3 MASTER FEEDING MECHANISM	2-71
3.4 MASTER WRAPPING MECHANISM	2-72

3.5 CUTTER MECHANISM	2-73
3.6 ELECTRICAL TIMING	2-74
3.7 CIRCUIT: VT2300/VT2500	2-76
3.8 INPUT/OUTPUT: VT2300/VT2500	2-76
3.9 CIRCUIT: VT2100/VT2130/VT2150	2-77
3.10 INPUT/OUTPUT: VT2100/VT2130/VT2150	2-77
4. MASTER EJECT SECTION	2-78
4.1 OVERALL	2-78
4.2 MASTER EJECT ROLLER ROTATING MECHANISM	2-79
4.3 MASTER EJECT ROLLER DRIVE MECHANISM	2-80
4.4 MASTER EJECT CLAMPER MECHANISM	2-83
4.5 PRESSURE PLATE UP/DOWN MECHANISM	2-84
4.6 ELECTRICAL TIMING	2-86
4.7 CIRCUIT: VT2300/VT2500	2-87
4.8 INPUT/OUTPUT: VT2300/VT2500	2-87
4.9 CIRCUIT: VT2100/VT2130/VT2150	2-88
4.10 INPUT/OUTPUT: VT2100/VT2130/VT2150	2-88
5. PAPER FEED SECTION	2-89
5.1 OVERALL	2-89
5.2 PAPER FEED ROLLER/UPPER SEPARATION ROLLER MECHANISM	2-90
5.3 FEED ROLLER PRESSURE MECHANISM	2-91
5.4 SEPARATION MECHANISM	2-92
5.5 SEPARATION ROLLER PRESSURE RELEASE MECHANISM	2-93
5.6 SECOND FEED ROLLER MECHANISM	2-94
5.7 PAPER TABLE UP/DOWN MECHANISM	2-96
5.8 SIDE REGISTRATION MECHANISM	2-98
5.9 PAPER SIZE DETECTION: VT2300/VT2500	2-99
5.10 PAPER END DETECTION: VT2300/VT2500	2-100
5.11 OPTIONAL B4 PAPER CASSETTE: VT2300/VT2500	2-100
5.12 ELECTRICAL TIMING	2-101
5.13 CIRCUIT: VT2300/VT2500	2-102
5.14 INPUT/OUTPUT: VT2300/VT2500	2-102
5.15 CIRCUIT: VT2100/VT2130/VT2150	2-103

5.16 INPUT/OUTPUT: VT2100/VT2130/VT2150	2-103
6. PRINTING SECTION	2-104
6.1 OVERALL	2-104
6.2 PAPER DETECTING AND PRINTING PRESSURE ON/OFF MECHANISM	2-105
6.3 PRINT PRESSURE RELEASE MECHANISM	2-106
6.4 CIRCUIT	2-107
6.5 INPUT/OUTPUT	2-107
6.6 ELECTRICAL TIMING	2-107
7. DRUM SECTION	2-108
7.1 OVERALL	2-108
7.2 DRUM ROTATION MECHANISM	2-109
7.3 DRUM LOCK MECHANISM 1	2-110
7.4 DRUM LOCK MECHANISM 2: VT2300/VT2500	2-111
7.5 DRUM LOCK MECHANISM 3	2-112
7.6 DRUM LOCK MECHANISM 4	2-113
7.7 INK SUPPLY MECHANISM	2-114
7.8 INK KNEADING MECHANISM	2-115
7.9 DRUM MASTER DETECTION: VT2300/VT2500	2-116
7.10 INK DETECTION	2-117
7.11 ELECTRICAL TIMING	2-119
7.12 CIRCUIT:	2-120
7.13 INPUT/OUTPUT:	2-120
8. IMAGE SHIFTING SECTION	2-121
8.1 OVERALL	2-121
8.2 IMAGE SHIFTING MECHANISM	2-121
8.3 ELECTRICAL OPERATION:	2-123
9. DELIVERY SECTION	2-124
9.1 OVERALL	2-124
9.2 EXIT PAWL DRIVE MECHANISM	2-125
9.3 VACUUM UNIT DRIVE MECHANISM	2-126
9.4 MISFEED/PAPER WRAP	2-127
9.5 EXIT MISFEED/PAPER WRAP	2-127
9.6 CIRCUIT: VT2100/VT2130/VT2150	2-128

9.7 INPUT/OUTPUT: VT2100/VT2130/VT2150	2-128
9.8 CIRCUIT: VT2300/VT2500	2-129
9.9 INPUT/OUTPUT: VT2300/VT2500	2-129
9.10 ELECTRICAL TIMING:	2-130
10. INDICATORS/KEYS/PROGRAMS:	
VT2300/VT2500	2-131
10.1 CHECK PAPER SIZE/DIRECTION INDICATOR	2-131
10.2 REDUCE/ENLARGE KEY	2-131
10.3 SKIP PAPER FEED SWITCH	2-131
10.4 COMBINE 2 ORIGINALS	2-132
10.5 MEMORY/CLASS KEY	2-133
10.6 TRIAL PRINTS	2-133
10.7 CLEAR MODES KEY	2-133
10.8 INITIAL CHECK	2-134
10.9 MAIN MOTOR SOFT START	2-134
11. DIFFERENCES BETWEEN SS900 SERIES	
AND VT 2000 SERIES	2-135

3. INSTALLATION

1. INSTALLATION REQUIREMENTS	3-1
1.1 OPTIMUM ENVIRONMENTAL CONDITION:	3-1
1.2 ENVIRONMENTS TO AVOID:	3-2
1.3 GROUND:	3-2
1.4 POWER CONNECTION:	3-3
1.5 ACCESS TO MACHINE:	3-4
2. VT2300/2500 INSTALLATION PROCEDURE	3-5
2.1 VT2100/2130/2150 INSTALLATION PROCEDURE	3-10
3. TAPE MARKER INSTALLATION PROCEDURE	3-15
3.1 ACCESSORY CHECK	3-15
3.2 [For Models VT2100/2130/2150/2300/2500]	3-16
3.3 [For Model VT3500]	3-17
3.4 [Common Steps]	3-18
4. INSTALLATION PROCEDURE COLOR	
DRUM VT2000 –M/S/LG (Option)	3-19

5. CASSETTE INSTALLATION PROCEDURE (Option)	3-21
--	------

4. SERVICE TABLES

1. MAINTENANCE TABLES	4-1
1.1 LUBRICATION POINTS	4-1
1.2 USER'S MAINTENANCE	4-1
1.3 TABLE OF PERIODIC INSPECTION (every 6 months)	4-2
1.4 TABLE OF PERIODIC INSPECTION (every 12 months)	4-3
1.5 TABLE OF SERVICE CALL INDICATIONS	4-4
2. DIP SW, LED, VR TABLES	4-6
2.1 VT2300/VT2500 DIP SW (on the main control PCB)	4-6
2.2 VT2300/VT2500 PHOTO DIODE (on the main control PCB)	4-6
2.3 VT2300/VT2500 VR	4-7
2.4 VT2300/VT2500 DIP SW (on the image processing PCB)	4-7
2.5 VT2100/VT2130/VT2150 DIP SW (on the main control PCB)	4-8
2.6 VT2100/VT2130/VT2150 PHOTODIODE (on the main control PCB)	4-9
2.7 VT2100/VT2130/VT2150 VR	4-9
2.8 VT2100/VT2130/VT2150 DIP SW (on the image processing PCB)	4-9
2.9 EXPECTED LIFE OF PARTS	4-10
2.10 SPECIAL TOOLS	4-10
3. SERVICE PROGRAM MODE (I/O Check Mode)	4-11
3.1 HOW TO ACCESS I/O CHECK MODE	4-11
3.2 SERVICE PROGRAM TABLE: VT2300/VT2500	4-13
3.3 SERVICE PROGRAM TABLE: VT2300/VT2500	4-14
3.4 SERVICE PROGRAM TABLE: VT2100/VT2130/VT2150	4-15
3.5 SERVICE PROGRAM TABLE: VT2100/VT2130/VT2150	4-16
4. TEST PATTERN IMAGE MODE	4-17
4.1 OPERATION: (To Enter Test Pattern Image Mode)	4-18
5. DESIGNATED AREA CHECK MODE: VT2500	4-19
6. OPTION/SUPPLY INTERCHANGEABILITY	4-21

5. REPLACEMENT AND ADJUSTMENT

1. EXTERIOR	5-1
1.1 EXTERIOR COVER REPLACEMENT	5-1
2. ORIGINAL FEED SECTION	5-3
2.1 ORIGINAL FEED BELT TENSION ADJUSTMENT	5-3
2.2 ORIGINAL PRESSURE SOLENOID ADJUSTMENT: VT2300/VT2500	5-4
2.3 TRANSPORT ROLLER PRESSURE ADJUSTMENT: VT2300/VT2500	5-5
2.4 EXPOSURE GLASS REPLACEMENT	5-6
2.5 EXPOSURE LAMP / HEATER REPLACEMENT	5-7
2.6 ORIGINAL REGISTRATION SENSOR / 2ND ORIGINAL SENSOR REPLACEMENT	5-8
2.7 1ST ORIGINAL SENSOR REPLACEMENT: VT2300/2500	5-9
2.8 ORIGINAL FEED ROLLERS / PULL-OUT ROLLERS REPLACEMENT: VT2300/2500	5-10
3. SCANNER SECTION	5-11
3.1 OPTICAL ADJUSTMENT	5-11
3.1.1 Preparation for Adjustment.	5-12
3.1.2 Black Level Adjustment: VT2300/VT2500	5-13
3.1.3 Shading Adjustment	5-14
3.1.4 Scan Line Position Adjustment.	5-15
3.1.5 Reading Start Position Adjustment (In The Main Scan Direction)	5-16
3.1.6 Focus Adjustment (MTF Adjustment).	5-17
3.1.7 Reduction Ratio Adjustment (Moire Adjustment)	5-18
3.1.8 White Level Adjustment	5-19
3.2 IMAGE MAGNIFICATION ADJUSTMENT (In The Sub-scan Direction)	5-20
4. IMAGE SHIFTING SECTION	5-21
4.1 ENCODER MOUNTING POSITION ADJUSTMENT	5-21
5. MASTER FEED SECTION	5-23
5.1 THERMAL HEAD VOLTAGE ADJUSTMENT.	5-23
5.2 BELT TENSION ADJUSTMENT	5-24
5.3 RIGHT AND LEFT CUTTER SWITCH ADJUSTMENT.	5-25
5.4 REVERSE ROLLER SOLENOID ADJUSTMENT.	5-26
5.5 CUTTER REPLACEMENT	5-27

5.6 MASTER BUCKLE SENSOR REPLACEMENT	5-28
5.7 THERMAL HEAD REPLACEMENT:.....	5-29
5.8 THERMAL HEAD DRIVE BOARD REPLACEMENT	5-30
6. MASTER EJECT SECTION	5-31
6.1 MASTER EJECT SOLENOID ADJUSTMENT	5-31
6.2 PRESSURE PLATE POSITION SWITCH ADJUSTMENT	5-32
6.3 FULL MASTER SWITCH ADJUSTMENT	5-33
6.4 MASTER EJECT SENSOR ADJUSTMENT: VT2300/VT2500	5-34
6.5 MASTER EJECT UNIT REPLACEMENT	5-36
6.6 MASTER EJECT BELT/ROLLER REPLACEMENT	5-37
7. PAPER FEED SECTION	5-38
7.1 PAPER TABLE SAFETY SWITCH ADJUSTMENT	5-38
7.2 PAPER TABLE HEIGHT ADJUSTMENT	5-39
7.3 PAPER FEED ROLLER PRESSURE ADJUSTMENT	5-40
7.4 SEPARATION PLATE PRESSURE ADJUSTMENT: VT2300/VT2500	5-42
7.5 LOWER GUIDE PLATE ADJUSTMENT	5-43
7.6 UPPER SECOND FEED ROLLER ADJUSTING	5-44
7.7 PAPER FEED ROLLER FEED-LENGTH ADJUSTMENT	5-45
7.8 PAPER FEED SECTOR GEAR STOPPER CLEARANCE ADJUSTMENT	5-46
7.9 SECOND FEED ROLLER SECTOR STOPPER CLEARANCE ADJUSTMENT	5-47
7.10 SECOND FEED ROLLER FEED LENGTH ADJUSTMENT	5-48
7.11 SECOND FEED ROLLER FEED TIMING ADJUSTMENT	5-49
7.12 PAPER FEED ROLLER REPLACEMENT	5-50
7.13 PAPER FEED ROLLER UNIT REPLACEMENT	5-51
7.14 UPPER SEPARATION ROLLER REPLACEMENT	5-52
7.15 SEPARATION PLATE / LOWER SEPARATION ROLLER REPLACEMENT	5-53
8. PRINTING SECTION	5-54
8.1 PAPER DETECTING ARM CLEARANCE ADJUSTMENT	5-54
8.2 PRESSURE ROLLER POSITION ADJUSTMENT	5-55
8.3 PRESSURE TIMING ADJUSTMENT	5-56
8.4 PRINTING PRESSURE ADJUSTMENT	5-57
8.5 PRINTING PRESSURE STOPPER CLEARANCE ADJUSTMENT	5-58

8.6 PRESS URE ROLLER REPLACEMENT	5-59
9. DRUM SECTION	5-60
9.1 MAIN DRIVE BELT TENSION ADJUSTMENT	5-60
9.2 DRUM ROTATION SENSOR ADJUSTMENT	5-61
9.3 PRINTING SPEED ADJUSTMENT:	5-62
9.4 DRUM STOPPER ADJUSTMENT	5-63
9.5 MASTER FEED CLAMPER CAM ADJUSTMENT	5-64
9.6 MASTER EJECT CLAMPER CAM ADJUSTMENT	5-65
9.7 INK DETECTING PIN POSITION ADJUSTMENT	5-66
9.8 DOCTOR ROLLER CLEARANCE ADJUSTMENT	5-67
9.9 INK ROLLER UNIT POSITION ADJUSTMENT	5-68
9.10 INK SUPPLY SOLENOID POSITION ADJUSTMENT	5-69
9.11 DRUM LOCK SOLENOID ADJUSTMENT: VT2300/VT2500	5-70
9.12 MASTER DETECTING SENSOR ADJUSTMENT: VT2300/VT2500	5-71
9.13 INK DETECTION ADJUSTMENT	5-72
9.14 SCREEN REPLACEMENT	5-73
9.15 DRUM DRIVE BELT REPLACEMENT	5-74
10. PAPER DELIVERY	5-78
10.1 FIRST PAPER EXIT SENSOR ADJUSTMENT	5-78
10.2 SECOND PAPER EXIT SENSOR ADJUSTMENT	5-79
10.3 EXIT PAWL CLEARANCE ADJUSTMENT	5-80
10.4 EXIT PAWL TIMING ADJUSTMENT	5-81
10.5 DELIVERY TABLE REPLACEMENT	5-82
10.6 VACUUM UNIT REPLACEMENT	5-83
10.7 DELIVERY BELT/PAPER EXIT SENSORS REPLACEMENT	5-84
10.8 VACUUM MOTOR REPLACEMENT	5-85

6. TAPE MARKER

1. SPECIFICATIONS	6-1
2. BASIC OPERATION	6-2
2.1 OVERVIEW	6-2
2.2 DRIVE AND CUTTING MECHANISM	6-3
2.3 MANUAL CUT	6-5

3. REPLACEMENT AND ADJUSTMENT	6-6
3.1 CUTTER REPLACEMENT	6-6
3.2 CUTTER HOME POSITION SENSOR REPLACEMENT	6-7
3.3 TAPE CUT LENGTH ADJUSTMENT	6-8

7. TROUBLESHOOTING

1. ELECTRICAL COMPONENT TROUBE	7-1
2. TROUBLESHOOTING	7-7
2.1 IMAGE TROUBLE.....	7-7
2.2 PAPER FEED TROUBLE	7-11

8. ELECTRICAL DATA

1. VT2100/VT2130/VT2150/VT2300/VT2500 AC DRIVE CIRCUIT	8-1
2. VT2100/VT2130/VT2150/VT2300/VT2500 INK DETECTING CIRCUIT	8-2
3. VT2100/VT2130/VT2150/VT2300/VT2500 CCD CIRCUIT	8-3
4. VT2300/VT2500 PAPER SIZE DETECTION CIRCUIT.....	8-4
5. TAPE MARKER CIRCUIT (OPTION)	8-5
6. VT2100/VT2130/VT2150/VT2300/VT2500 POWER SUPPLY CIRCUIT	8-7
7. VT2100/VT2130/VT2150/VT2300/VT2500 THERMAL HEAD DRIVE CIRCUIT	8-8
8. VT2300/VT2500 IMAGE PROCESSING CIRCUIT	8-9
9. VT2100/VT2130/VT2150 IMAGE PROCESSING CIRCUIT	8-12
10. VT2300/VT2500 A/D CONVERTER CIRCUIT	8-15
11. VT2100/VT2130/VT2150 A/D CONVERTER CIRCUIT	8-17
12. VT2300/VT2500 OPERATION PANEL CIRCUIT	8-19
13. VT2100/VT2130/VT2150 OPERATION PANEL CIRCUIT	8-20

14. VT2300/VT2500 MAIN BOARD CIRCUIT	8-21
15. VT2100/VT2130/VT2150 MAIN BOARD CIRCUIT	8-22