

Table of Contents

1. OVERALL MACHINE INFORMATION

- 1. SPECIFICATIONS 1-1
- 2. ESSENTIAL DIFFERENCES BETWEEN
C211/C212/C213 AND C224 MODELS 1-4
- 3. ELECTRICAL COMPONENT DESCRIPTIONS 1-7

2. DETAILED SECTION DESCRIPTIONS

- 1. MASTER EJECT SECTION 2-1
 - 1.1 MASTER EJECT ROLLER DRIVE MECHANISM 2-1
 - 1.2 PRESSURE PLATE UP/DOWN MECHANISM 2-2
- 2. OPTICS 2-3
 - 2.1 OVERALL 2-3
 - 2.2 THERMAL HEAD 2-4
- 3. DRUM 2-5
 - 3.1 DRUM CONNECTION MECHANISM 2-5
- 4. PAPER DELIVERY 2-6
 - 4.1 EXIT PAWL AIR PUMP MECHANISM 2-6

3. INSTALLATION

- 1. INSTALLATION PROCEDURE 3-1

4. SERVICE TABLES

- 1. MAINTENANCE TABLES 4-1
 - 1.1 LUBRICATION POINTS 4-1
 - 1.2 USER'S MAINTENANCE 4-1
 - 1.3 PERIODIC INSPECTION TABLE (EVERY 6 MONTHS) 4-2
 - 1.4 TABLE OF PERIODIC INSPECTION (EVERY 12 MONTHS) 4-3

1.5 EXPECTED LIFE OF PARTS	4-5
1.6 SPECIAL TOOLS	4-5
2. TABLE OF SERVICE CALL INDICATIONS	4-6
3. DIP SW, LED, VR, AND TP TABLES	4-7
3.1 DIP SW TABLE (ON THE MAIN BOARD)	4-7
3.2 LED TABLE	4-9
3.3 VR TABLE	4-9
3.4 TEST PIN TABLE (Main Control PCB)	4-9
3.5 TEST PIN TABLE (A/D Conversion PCB)	4-9
4. SERVICE PROGRAM TABLE	4-10
4.1 HOW TO ACCESS I/O CHECK MODE	4-10
4.2 INPUT CHECK MODE	4-11
4.3 OUTPUT CHECK MODE	4-12
4.4 THERMAL HEAD TEST	4-13
4.4.1 OPERATION: (To Enter Test Pattern Image Mode)	4-14
5. AVAILABLE OPTION/SUPPLY TABLE	4-15

5. REPLACEMENT AND ADJUSTMENT

1. OPTICS ADJUSTMENT	5-2
1.1 PREPARATION FOR ADJUSTMENT	5-2
1.2 BLACK LEVEL ADJUSTMENT	5-3
1.3 SHADING ADJUSTMENT	5-3
1.4 SCAN LINE POSITION ADJUSTMENT	5-4
1.5 READING START POSITION ADJUSTMENT (In The Main Scan Direction) ..	5-4
1.6 FOCUS ADJUSTMENT	5-5
1.7 REDUCTION RATIO ADJUSTMENT	5-5
1.8 WHITE LEVEL ADJUSTMENT	5-6
1.9 IMAGE MAGNIFICATION IN THE SUB-SCAN DIRECTION ADJUSTMENT ..	5-6
2. THERMAL HEAD VOLTAGE ADJUSTMENT	5-7
3. AIR PUMP TIMING ADJUSTMENT	5-8