

Software Manual



cdma2000/1xEV-DV Base Station Test

Applications Firmware R&S® FS-K82

1157.2316.02



This Software Manual describes the following models:

- R&S[®] FMU
- R&S[®] FSG
- R&S[®] FSMR
- R&S[®] FSP
- R&S[®] FSQ
- R&S[®] FSU
- R&S[®] FSUP

Dear Customer,

throughout this manual, FS-K82 is generally used as an abbreviation for the software option R&S FS-K82. The Spectrum Analyzers R&S FSU and R&S FSP are abbreviated as FSU and FSP.
CDMA2000[®] is a registered trademark of the Telecommunications Industry Association (TIA –USA).

Contents

Safety Instructions
 Certificate of Quality
 Support Center Address
 List of R&S Representatives

Contents of the Application Firmware R&S FS–K82 Manual

1	Installing and Enabling the Application Firmware	1.1
	Installation	1.1
	Enabling.....	1.1
2	Getting Started	2.1
	Default settings in cdma2000 BTS mMode.....	2.2
	Measurement 1: Measuring the signal power	2.3
	Measurement 2: Measuring the spectrum emission mask.....	2.4
	Measurement 3: Measuring the relative code domain power and the frequency error	2.5
	Setting: Synchronizing the reference frequencies.....	2.6
	Setting: Behaviour with deviating center frequency setting	2.6
	Measurement 4: Triggered measurement of relative code domain power	2.7
	Setting: Trigger offset	2.7
	Setting: Behaviour with wrong PN offset.....	2.8
	Measurement 5: Measuring the composite EVM	2.9
	Measurement 6: Measuring the peak code domain error	2.10
	Measurement 7: Measuring the RHO factor	2.11
3	Test Setup for Base Station Tests	3.1
	Standard Test Setup	3.1
	Presettings.....	3.2
4	Predefined Channel Tables	4.1
5	Menu Overview	5.1
6	Configuration of cdma2000 Measurements	6.1
	Measuring channel power	6.2
	Measuring adjacent channel power – ACLR.....	6.3
	Measurement of Multi Carrier Adjacent–Channel Power – MULT CARR ACLR	6.12
	Signal power check – SPECTRUM EM MASK	6.16
	Measuring bandwidth occupied by the signal – OCCUPIED BANDWIDTH.....	6.27
	Signal statistic	6.29
	Code domain measurements on cdma2000/1xEV–DV signals	6.33
	Presentation of evaluations – RESULTS.....	6.35
	Measurement configuration	6.53
	Configuring the firmware application – SETTINGS	6.60
	Frequency settings – <i>FREQ</i> key.....	6.67
	Span settings – <i>SPAN</i> key.....	6.67
	Level settings – <i>AMPT</i> key	6.68
	Marker settings – <i>MKR</i> key.....	6.69
	Changing instrument settings – <i>MKR</i> → key.....	6.70
	Marker functions – <i>MKR FCTN</i> key	6.71
	Bandwidth setting – <i>BW</i> key	6.71

	Measurement control – <i>SWEEP</i> key	6.71
	Measurement selection – <i>MEAS</i> key.....	6.71
	Trigger settings – <i>TRIG</i> key.....	6.72
	Trace settings – <i>TRACE</i> key	6.72
	Display lines – <i>LINES</i> key.....	6.73
	Measurement screen settings – <i>DISP</i> key.....	6.73
	Storing and loading of unit data – <i>FILE</i> key.....	6.73
	Preset of device – <i>PRESET</i> key	6.74
	Calibration of device – <i>CAL</i> key.....	6.74
	Setup of device – <i>SETUP</i> key	6.74
	Printing – <i>HCOPY</i> key	6.74
7	Remote Control Commands.....	7.1
	CALCulate:FEED subsystem	7.1
	CALCulate:LIMit:SPECtrum subsystem.....	7.3
	CALCulate:MARKer subsystem	7.6
	CALCulate:PEAKsearch PSEarch- Subsystem	7.8
	CALCulate:STATistics subsystem	7.9
	CONFigure:CDPower subsystem.....	7.11
	FORMat - Subsystem.....	7.18
	INSTrument subsystem.....	7.19
	MMEMory – Subsystem	7.20
	SENSE:CDPower subsystem	7.21
	TRACe subsystem	7.27
	STATus–QUEStionable:SYNC Register	7.34
	Table of softkeys with assignment of IEC/IEEE bus commands	7.35
	Key MEAS or Hotkey MEAS.....	7.35
	Hot key RESULTS or Softkey CODE DOM ANALYZER.....	7.39
	Hotkey CHAN CONF	7.40
	Hotkey SETTINGS.....	7.41
8	Performance Test.....	8.1
	Measuring equipment and accessories.....	8.1
	Test procedure	8.1
9	Hadamard and BitReverse Code Tables.....	9.1
10	Glossary.....	10.1
11	Index.....	11.1

Figures

Fig. 3–1	BTS test setup	3.1
Fig. 5–1	Hot key tier with enabled application firmware R&S FS–K82	5.1
Fig. 5–2	Overview of menus in the R&S FS–K82 application firmware	5.1
Fig. 5–3	Overview of menus	5.3
Fig. 6–1	Power measurement in the 1.2288 MHz transmission channel	6.2
Fig. 6–2	Measuring adjacent channel power	6.3
Fig. 6–3	Measurement of the spectrum emission mask	6.16
Fig. 6–4	Peak list of spectrum emission mask	6.25
Fig. 6–5	Measuring occupied bandwidth	6.27
Fig. 6–6	CCDF of cdma2000 signal	6.29
Fig. 6–7	Function fields of diagrams	6.36
Fig. 6–8	CDP diagram in Hadamard order	6.38
Fig. 6–9	CDP diagram in BitReverse order for the same signal	6.38
Fig. 6–10	CDEP diagram in Hadamard order	6.39
Fig. 6–11	CDEP diagram in BitReverse order for the same signal	6.40
Fig. 6–12	Composite EVM display for the case of all the channels contained in the signal being detected as active	6.41
Fig. 6–13	Composite EVM display for the case of one code channel was not detected as being active	6.41
Fig. 6–14	Peak code domain error for the case of all the channels contained in the signal being detected as active	6.42
Fig. 6–15	Peak code domain error for the case of one channel not being detected as active	6.42
Fig. 6–16	Power versus time for an occupied channel with power control	6.43
Fig. 6–17	Result summary	6.44
Fig. 6–18	Channel table	6.46
Fig. 6–19	Symbol constellation diagram	6.47
Fig. 6–20	Error vector magnitude for a PCG of a channel	6.47
Fig. 6–21	Phasor diagram for QPSK, BPSK, 8–PSK and 16–QAM including bit values	6.48
Fig. 6–22	Demodulated bits for a PCG of a channel	6.49
Fig. 6–23	Composite constellation diagram	6.50
Fig. 6–24	Power versus symbol for a PCG of a channel	6.50
Fig. 6–25	Table for editing a channel configuration	6.55
Fig. 6–26	Table of special channels	6.57
Fig. 6–27	Creating a new channel configuration	6.59
Fig. 6–28	Band class selection	6.61
Fig. 6–29	Marker field of diagrams	6.69

Tables

Table 2–1 Default settings of the code domain measurement after Preset 2.2

Table 4–1 Base station channel table for main branch in radio configuration 1 4.1

Table 4–2 Base station channel table for main branch in radio configuration 4 4.1

Table 4–3 Base station channel table for antenna 2 in radio configuration 4 4.2

Table 4–4 Base station test model for aggregate signal in radio configuration 4 4.2

Table 6–1 ACLR settings for band classes 0, 2, 3, 5, 9, 10, 11 and 12 6.4

Table 6–2 ACLR settings for band class 7 6.4

Table 6–3 ACLR settings for band classes 1, 4 and 8 6.4

Table 6–4 ACLR settings for band class 6 6.4

Table 6–5 Band classes 0, 2, 3, 5, 9, 10, 11 and 12 for carrier power $P < 28 \text{ dBm}$ 6.18

Table 6–6 Band classes 0, 2, 3, 5, 9, 10, 11 and 12 for carrier power $28 \text{ dBm} \leq P < 33 \text{ dBm}$ 6.18

Table 6–7 Band classes 0, 2, 3, 5, 9, 10, 11 and 12 for carrier power $P \geq 33 \text{ dBm}$ 6.18

Table 6–8 Band class 7 for carrier power $P < 28 \text{ dBm}$ 6.19

Table 6–9 Band class 7 for carrier power $28 \text{ dBm} \leq P < 33 \text{ dBm}$ 6.19

Table 6–10 Band class 7 for carrier power $P \geq 33 \text{ dBm}$ 6.19

Table 6–11 Band classes 1, 4 and 8 for carrier power $P < 28 \text{ dBm}$ 6.20

Table 6–12 Band classes 1, 4 and 8 for carrier power $28 \text{ dBm} \leq P < 33 \text{ dBm}$ 6.21

Table 6–13 Band classes 1, 4 and 8 for carrier power $P \geq 33 \text{ dBm}$ 6.21

Table 6–14 Band class 6 for all carrier power values 6.22

Table 6–15 Evaluations on screen A 6.33

Table 6–16 Evaluations on screen B 6.33

Table 6–17 Relationship between symbol rate, spreading factor and number of symbols 6.34

Table 7–1 Meaning of bits in STATus:QUEstionable:SYNC Register 7.27

Table 9–1 Code table for base spreading factor 64 9.1

Table 9–2 Code table for base spreading factor 128 (part 1) 9.2

Table 9–3 Code table for base spreading factor 128 (part 2) 9.3

Basic Safety Instructions

Always read through and comply with the following safety instructions!









All plants and locations of the Rohde & Schwarz group of companies make every effort to keep the safety standards of our products up to date and to offer our customers the highest possible degree of safety. Our products and the auxiliary equipment they require are designed, built and tested in accordance with the safety standards that apply in each case. Compliance with these standards is continuously monitored by our quality assurance system. The product described here has been designed, built and tested in accordance with the attached EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards. To maintain this condition and to ensure safe operation, you must observe all instructions and warnings provided in this manual. If you have any questions regarding these safety instructions, the Rohde & Schwarz group of companies will be happy to answer them.





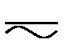

Furthermore, it is your responsibility to use the product in an appropriate manner. This product is designed for use solely in industrial and laboratory environments or, if expressly permitted, also in the field and must not be used in any way that may cause personal injury or property damage. You are responsible if the product is used for any intention other than its designated purpose or in disregard of the manufacturer's instructions. The manufacturer shall assume no responsibility for such use of the product.

The product is used for its designated purpose if it is used in accordance with its product documentation and within its performance limits (see data sheet, documentation, the following safety instructions). Using the product requires technical skills and a basic knowledge of English. It is therefore essential that only skilled and specialized staff or thoroughly trained personnel with the required skills be allowed to use the product. If personal safety gear is required for using Rohde & Schwarz products, this will be indicated at the appropriate place in the product documentation. Keep the basic safety instructions and the product documentation in a safe place and pass them on to the subsequent users.

Observing the safety instructions will help prevent personal injury or damage of any kind caused by dangerous situations. Therefore, carefully read through and adhere to the following safety instructions before and when using the product. It is also absolutely essential to observe the additional safety instructions on personal safety, for example, that appear in relevant parts of the product documentation. In these safety instructions, the word "product" refers to all merchandise sold and distributed by the Rohde & Schwarz group of companies, including instruments, systems and all accessories.



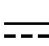

Symbols and safety labels

							
Notice, general danger location Observe product documentation	Caution when handling heavy equipment	Danger of electric shock	Warning! Hot surface	PE terminal	Ground	Ground terminal	Be careful when handling electrostatic sensitive devices

					
ON/OFF supply voltage	Standby indication	Direct current (DC)	Alternating current (AC)	Direct/alternating current (DC/AC)	Device fully protected by double (reinforced) insulation

Tags and their meaning

The following signal words are used in the product documentation in order to warn the reader about risks and dangers.

	indicates a hazardous situation which, if not avoided, will result in death or serious injury.
	indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
	indicates the possibility of incorrect operation which can result in damage to the product. In the product documentation, the word ATTENTION is used synonymously.

These tags are in accordance with the standard definition for civil applications in the European Economic Area. Definitions that deviate from the standard definition may also exist in other economic areas or military applications. It is therefore essential to make sure that the tags described here are always used only in connection with the related product documentation and the related product. The use of tags in connection with unrelated products or documentation can result in misinterpretation and in personal injury or material damage.

Operating states and operating positions

The product may be operated only under the operating conditions and in the positions specified by the manufacturer, without the product's ventilation being obstructed. If the manufacturer's specifications are not observed, this can result in electric shock, fire and/or serious personal injury or death. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.

1. Unless otherwise specified, the following requirements apply to Rohde & Schwarz products: predefined operating position is always with the housing floor facing down, IP protection 2X, pollution severity 2, overvoltage category 2, use only indoors, max. operating altitude 2000 m above sea level, max. transport altitude 4500 m above sea level. A tolerance of $\pm 10\%$ shall apply to the nominal voltage and $\pm 5\%$ to the nominal frequency.
2. Do not place the product on surfaces, vehicles, cabinets or tables that for reasons of weight or stability are unsuitable for this purpose. Always follow the manufacturer's installation instructions when installing the product and fastening it to objects or structures (e.g. walls and shelves). An installation that is not carried out as described in the product documentation could result in personal injury or death.
3. Do not place the product on heat-generating devices such as radiators or fan heaters. The ambient temperature must not exceed the maximum temperature specified in the product documentation or in the data sheet. Product overheating can cause electric shock, fire and/or serious personal injury or death.

Electrical safety

If the information on electrical safety is not observed either at all to the extent necessary, electric shock, fire and/or serious personal injury or death may occur.

1. Prior to switching on the product, always ensure that the nominal voltage setting on the product matches the nominal voltage of the AC supply network. If a different voltage is to be set, the power fuse of the product may have to be changed accordingly.
2. In the case of products of safety class I with movable power cord and connector, operation is permitted only on sockets with an earthing contact and protective earth connection.
3. Intentionally breaking the protective earth connection either in the feed line or in the product itself is not permitted. Doing so can result in the danger of an electric shock from the product. If extension cords or connector strips are implemented, they must be checked on a regular basis to ensure that they are safe to use.
4. If the product does not have a power switch for disconnection from the AC supply network, the plug of the connecting cable is regarded as the disconnecting device. In such cases, always ensure that the power plug is easily reachable and accessible at all times (corresponding to the length of connecting cable, approx. 2 m). Functional or electronic switches are not suitable for providing disconnection from the AC supply network. If products without power switches are integrated into racks or systems, a disconnecting device must be provided at the system level.
5. Never use the product if the power cable is damaged. Check the power cable on a regular basis to ensure that it is in proper operating condition. By taking appropriate safety measures and carefully laying the power cable, you can ensure that the cable will not be damaged and that no one can be hurt by, for example, tripping over the cable or suffering an electric shock.
6. The product may be operated only from TN/TT supply networks fused with max. 16 A (higher fuse only after consulting with the Rohde & Schwarz group of companies).
7. Do not insert the plug into sockets that are dusty or dirty. Insert the plug firmly and all the way into the socket. Otherwise, sparks that result in fire and/or injuries may occur.
8. Do not overload any sockets, extension cords or connector strips; doing so can cause fire or electric shocks.
9. For measurements in circuits with voltages $V_{\text{rms}} > 30 \text{ V}$, suitable measures (e.g. appropriate measuring equipment, fusing, current limiting, electrical separation, insulation) should be taken to avoid any hazards.
10. Ensure that the connections with information technology equipment, e.g. PCs or other industrial computers, comply with the IEC60950-1/EN60950-1 or IEC61010-1/EN 61010-1 standards that apply in each case.
11. Unless expressly permitted, never remove the cover or any part of the housing while the product is in operation. Doing so will expose circuits and components and can lead to injuries, fire or damage to the product.
12. If a product is to be permanently installed, the connection between the PE terminal on site and the product's PE conductor must be made first before any other connection is made. The product may be installed and connected only by a licensed electrician.
13. For permanently installed equipment without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fused in such a way that anyone who has access to the product, as well as the product itself, is adequately protected from injury or damage.

Basic Safety Instructions

14. Use suitable overvoltage protection to ensure that no overvoltage (such as that caused by a bolt of lightning) can reach the product. Otherwise, the person operating the product will be exposed to the danger of an electric shock.
15. Any object that is not designed to be placed in the openings of the housing must not be used for this purpose. Doing so can cause short circuits inside the product and/or electric shocks, fire or injuries.
16. Unless specified otherwise, products are not liquid-proof (see also section "Operating states and operating positions", item 1. Therefore, the equipment must be protected against penetration by liquids. If the necessary precautions are not taken, the user may suffer electric shock or the product itself may be damaged, which can also lead to personal injury.
17. Never use the product under conditions in which condensation has formed or can form in or on the product, e.g. if the product has been moved from a cold to a warm environment. Penetration by water increases the risk of electric shock.
18. Prior to cleaning the product, disconnect it completely from the power supply (e.g. AC supply network or battery). Use a soft, non-linting cloth to clean the product. Never use chemical cleaning agents such as alcohol, acetone or diluents for cellulose lacquers.

Operation

1. Operating the products requires special training and intense concentration. Make sure that persons who use the products are physically, mentally and emotionally fit enough to do so; otherwise, injuries or material damage may occur. It is the responsibility of the employer/operator to select suitable personnel for operating the products.
2. Before you move or transport the product, read and observe the section titled "Transport".
3. As with all industrially manufactured goods, the use of substances that induce an allergic reaction (allergens) such as nickel cannot be generally excluded. If you develop an allergic reaction (such as a skin rash, frequent sneezing, red eyes or respiratory difficulties) when using a Rohde & Schwarz product, consult a physician immediately to determine the cause and to prevent health problems or stress.
4. Before you start processing the product mechanically and/or thermally, or before you take it apart, be sure to read and pay special attention to the section titled "Waste disposal", item 1.
5. Depending on the function, certain products such as RF radio equipment can produce an elevated level of electromagnetic radiation. Considering that unborn babies require increased protection, pregnant women must be protected by appropriate measures. Persons with pacemakers may also be exposed to risks from electromagnetic radiation. The employer/operator must evaluate workplaces where there is a special risk of exposure to radiation and, if necessary, take measures to avert the potential danger.
6. Should a fire occur, the product may release hazardous substances (gases, fluids, etc.) that can cause health problems. Therefore, suitable measures must be taken, e.g. protective masks and protective clothing must be worn.
7. If a laser product (e.g. a CD/DVD drive) is integrated into a Rohde & Schwarz product, absolutely no other settings or functions may be used as described in the product documentation. The objective is to prevent personal injury (e.g. due to laser beams).

Repair and service

1. The product may be opened only by authorized, specially trained personnel. Before any work is performed on the product or before the product is opened, it must be disconnected from the AC supply network. Otherwise, personnel will be exposed to the risk of an electric shock.
2. Adjustments, replacement of parts, maintenance and repair may be performed only by electrical experts authorized by Rohde & Schwarz. Only original parts may be used for replacing parts relevant to safety (e.g. power switches, power transformers, fuses). A safety test must always be performed after parts relevant to safety have been replaced (visual inspection, PE conductor test, insulation resistance measurement, leakage current measurement, functional test). This helps ensure the continued safety of the product.

Batteries and rechargeable batteries/cells

If the information regarding batteries and rechargeable batteries/cells is not observed either at all or to the extent necessary, product users may be exposed to the risk of explosions, fire and/or serious personal injury, and, in some cases, death. Batteries and rechargeable batteries with alkaline electrolytes (e.g. lithium cells) must be handled in accordance with the EN 62133 standard.

1. Cells must not be taken apart or crushed.
2. Cells or batteries must not be exposed to heat or fire. Storage in direct sunlight must be avoided. Keep cells and batteries clean and dry. Clean soiled connectors using a dry, clean cloth.
3. Cells or batteries must not be short-circuited. Cells or batteries must not be stored in a box or in a drawer where they can short-circuit each other, or where they can be short-circuited by other conductive materials. Cells and batteries must not be removed from their original packaging until they are ready to be used.
4. Keep cells and batteries out of the hands of children. If a cell or a battery has been swallowed, seek medical aid immediately.
5. Cells and batteries must not be exposed to any mechanical shocks that are stronger than permitted.
6. If a cell develops a leak, the fluid must not be allowed to come into contact with the skin or eyes. If contact occurs, wash the affected area with plenty of water and seek medical aid.
7. Improperly replacing or charging cells or batteries that contain alkaline electrolytes (e.g. lithium cells) can cause explosions. Replace cells or batteries only with the matching Rohde & Schwarz type (see parts list) in order to ensure the safety of the product.
8. Cells and batteries must be recycled and kept separate from residual waste. Rechargeable batteries and normal batteries that contain lead, mercury or cadmium are hazardous waste. Observe the national regulations regarding waste disposal and recycling.

Transport

1. The product may be very heavy. Therefore, the product must be handled with care. In some cases, the user may require a suitable means of lifting or moving the product (e.g. with a lift-truck) to avoid back or other physical injuries.

2. Handles on the products are designed exclusively to enable personnel to transport the product. It is therefore not permissible to use handles to fasten the product to or on transport equipment such as cranes, fork lifts, wagons, etc. The user is responsible for securely fastening the products to or on the means of transport or lifting. Observe the safety regulations of the manufacturer of the means of transport or lifting. Noncompliance can result in personal injury or material damage.
3. If you use the product in a vehicle, it is the sole responsibility of the driver to drive the vehicle safely and properly. The manufacturer assumes no responsibility for accidents or collisions. Never use the product in a moving vehicle if doing so could distract the driver of the vehicle. Adequately secure the product in the vehicle to prevent injuries or other damage in the event of an accident.

Waste disposal

1. If products or their components are mechanically and/or thermally processed in a manner that goes beyond their intended use, hazardous substances (heavy-metal dust such as lead, beryllium, nickel) may be released. For this reason, the product may only be disassembled by specially trained personnel. Improper disassembly may be hazardous to your health. National waste disposal regulations must be observed.
2. If handling the product releases hazardous substances or fuels that must be disposed of in a special way, e.g. coolants or engine oils that must be replenished regularly, the safety instructions of the manufacturer of the hazardous substances or fuels and the applicable regional waste disposal regulations must be observed. Also observe the relevant safety instructions in the product documentation. The improper disposal of hazardous substances or fuels can cause health problems and lead to environmental damage.

Informaciones elementales de seguridad

Es imprescindible leer y observar las siguientes instrucciones e informaciones de seguridad!

El principio del grupo de empresas Rohde & Schwarz consiste en tener nuestros productos siempre al día con los estándares de seguridad y de ofrecer a nuestros clientes el máximo grado de seguridad. Nuestros productos y todos los equipos adicionales son siempre fabricados y examinados según las normas de seguridad vigentes. Nuestro sistema de garantía de calidad controla constantemente que sean cumplidas estas normas. El presente producto ha sido fabricado y examinado según el certificado de conformidad adjunto de la UE y ha salido de nuestra planta en estado impecable según los estándares técnicos de seguridad. Para poder preservar este estado y garantizar un funcionamiento libre de peligros, el usuario deberá atenerse a todas las indicaciones, informaciones de seguridad y notas de alerta. El grupo de empresas Rohde & Schwarz está siempre a su disposición en caso de que tengan preguntas referentes a estas informaciones de seguridad.

Además queda en la responsabilidad del usuario utilizar el producto en la forma debida. Este producto está destinado exclusivamente al uso en la industria y el laboratorio o, si ha sido expresamente autorizado, para aplicaciones de campo y de ninguna manera deberá ser utilizado de modo que alguna persona/cosa pueda sufrir daño. El uso del producto fuera de sus fines definidos o sin tener en cuenta las instrucciones del fabricante queda en la responsabilidad del usuario. El fabricante no se hace en ninguna forma responsable de consecuencias a causa del mal uso del producto.





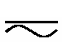

Informaciones elementales de seguridad

Se parte del uso correcto del producto para los fines definidos si el producto es utilizado conforme a las indicaciones de la correspondiente documentación del producto y dentro del margen de rendimiento definido (ver hoja de datos, documentación, informaciones de seguridad que siguen). El uso del producto hace necesarios conocimientos técnicos y ciertos conocimientos del idioma inglés. Por eso se debe tener en cuenta que el producto solo pueda ser operado por personal especializado o personas instruidas en profundidad con las capacidades correspondientes. Si fuera necesaria indumentaria de seguridad para el uso de productos de Rohde & Schwarz, encontraría la información debida en la documentación del producto en el capítulo correspondiente. Guarde bien las informaciones de seguridad elementales, así como la documentación del producto, y entréguelas a usuarios posteriores.

Tener en cuenta las informaciones de seguridad sirve para evitar en lo posible lesiones o daños por peligros de toda clase. Por eso es imprescindible leer detalladamente y comprender por completo las siguientes informaciones de seguridad antes de usar el producto, y respetarlas durante el uso del producto. Deberán tenerse en cuenta todas las demás informaciones de seguridad, como p. ej. las referentes a la protección de personas, que encontrarán en el capítulo correspondiente de la documentación del producto y que también son de obligado cumplimiento. En las presentes informaciones de seguridad se recogen todos los objetos que distribuye el grupo de empresas Rohde & Schwarz bajo la denominación de "producto", entre ellos también aparatos, instalaciones así como toda clase de accesorios.

Símbolos y definiciones de seguridad

							
Aviso: punto de peligro general Observar la documentación del producto	Atención en el manejo de dispositivos de peso elevado	Peligro de choque eléctrico	Advertencia: superficie caliente	Conexión a conductor de protección	Conexión a tierra	Conexión a masa	Aviso: Cuidado en el manejo de dispositivos sensibles a la electrostática (ESD)

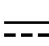					
Tensión de alimentación de PUESTA EN MARCHA / PARADA	Indicación de estado de espera (Standby)	Corriente continua (DC)	Corriente alterna (AC)	Corriente continua / Corriente alterna (DC/AC)	El aparato está protegido en su totalidad por un aislamiento doble (reforzado)

Palabras de señal y su significado

En la documentación del producto se utilizan las siguientes palabras de señal con el fin de advertir contra riesgos y peligros.



PELIGRO identifica un peligro inminente con riesgo elevado que provocará muerte o lesiones graves si no se evita.



ADVERTENCIA identifica un posible peligro con riesgo medio de provocar muerte o lesiones (graves) si no se evita.



ATENCIÓN identifica un peligro con riesgo reducido de provocar lesiones leves o moderadas si no se evita.



AVISO indica la posibilidad de utilizar mal el producto y, como consecuencia, dañarlo.

En la documentación del producto se emplea de forma sinónima el término CUIDADO.

Las palabras de señal corresponden a la definición habitual para aplicaciones civiles en el área económica europea. Pueden existir definiciones diferentes a esta definición en otras áreas económicas o en aplicaciones militares. Por eso se deberá tener en cuenta que las palabras de señal aquí descritas sean utilizadas siempre solamente en combinación con la correspondiente documentación del producto y solamente en combinación con el producto correspondiente. La utilización de las palabras de señal en combinación con productos o documentaciones que no les correspondan puede llevar a interpretaciones equivocadas y tener por consecuencia daños en personas u objetos.

Estados operativos y posiciones de funcionamiento

El producto solamente debe ser utilizado según lo indicado por el fabricante respecto a los estados operativos y posiciones de funcionamiento sin que se obstruya la ventilación. Si no se siguen las indicaciones del fabricante, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte. En todos los trabajos deberán ser tenidas en cuenta las normas nacionales y locales de seguridad del trabajo y de prevención de accidentes.

1. Si no se convino de otra manera, es para los productos Rohde & Schwarz válido lo que sigue: como posición de funcionamiento se define por principio la posición con el suelo de la caja para abajo, modo de protección IP 2X, grado de suciedad 2, categoría de sobrecarga eléctrica 2, uso solamente en estancias interiores, utilización hasta 2000 m sobre el nivel del mar, transporte hasta 4500 m sobre el nivel del mar. Se aplicará una tolerancia de $\pm 10\%$ sobre el voltaje nominal y de $\pm 5\%$ sobre la frecuencia nominal.
2. No sitúe el producto encima de superficies, vehículos, estantes o mesas, que por sus características de peso o de estabilidad no sean aptos para él. Siga siempre las instrucciones de instalación del fabricante cuando instale y asegure el producto en objetos o estructuras (p. ej. paredes y estantes). Si se realiza la instalación de modo distinto al indicado en la documentación del producto, pueden causarse lesiones o incluso la muerte.
3. No ponga el producto sobre aparatos que generen calor (p. ej. radiadores o calefactores). La temperatura ambiente no debe superar la temperatura máxima especificada en la documentación del producto o en la hoja de datos. En caso de sobrecalentamiento del producto, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

Seguridad eléctrica

Si no se siguen (o se siguen de modo insuficiente) las indicaciones del fabricante en cuanto a seguridad eléctrica, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

1. Antes de la puesta en marcha del producto se deberá comprobar siempre que la tensión preseleccionada en el producto coincida con la de la red de alimentación eléctrica. Si es necesario modificar el ajuste de tensión, también se deberán cambiar en caso dado los fusibles correspondientes del producto.
2. Los productos de la clase de protección I con alimentación móvil y enchufe individual solamente podrán enchufarse a tomas de corriente con contacto de seguridad y con conductor de protección conectado.
3. Queda prohibida la interrupción intencionada del conductor de protección, tanto en la toma de corriente como en el mismo producto. La interrupción puede tener como consecuencia el riesgo de que el producto sea fuente de choques eléctricos. Si se utilizan cables alargadores o regletas de enchufe, deberá garantizarse la realización de un examen regular de los mismos en cuanto a su estado técnico de seguridad.
4. Si el producto no está equipado con un interruptor para desconectarlo de la red, se deberá considerar el enchufe del cable de conexión como interruptor. En estos casos se deberá asegurar que el enchufe siempre sea de fácil acceso (de acuerdo con la longitud del cable de conexión, aproximadamente 2 m). Los interruptores de función o electrónicos no son aptos para el corte de la red eléctrica. Si los productos sin interruptor están integrados en bastidores o instalaciones, se deberá colocar el interruptor en el nivel de la instalación.
5. No utilice nunca el producto si está dañado el cable de conexión a red. Compruebe regularmente el correcto estado de los cables de conexión a red. Asegúrese, mediante las medidas de protección y de instalación adecuadas, de que el cable de conexión a red no pueda ser dañado o de que nadie pueda ser dañado por él, p. ej. al tropezar o por un choque eléctrico.
6. Solamente está permitido el funcionamiento en redes de alimentación TN/TT aseguradas con fusibles de 16 A como máximo (utilización de fusibles de mayor amperaje solo previa consulta con el grupo de empresas Rohde & Schwarz).
7. Nunca conecte el enchufe en tomas de corriente sucias o llenas de polvo. Introduzca el enchufe por completo y fuertemente en la toma de corriente. La no observación de estas medidas puede provocar chispas, fuego y/o lesiones.
8. No sobrecargue las tomas de corriente, los cables alargadores o las regletas de enchufe ya que esto podría causar fuego o choques eléctricos.
9. En las mediciones en circuitos de corriente con una tensión $U_{\text{eff}} > 30 \text{ V}$ se deberán tomar las medidas apropiadas para impedir cualquier peligro (p. ej. medios de medición adecuados, seguros, limitación de tensión, corte protector, aislamiento etc.).
10. Para la conexión con dispositivos informáticos como un PC o un ordenador industrial, debe comprobarse que éstos cumplan los estándares IEC60950-1/EN60950-1 o IEC61010-1/EN 61010-1 válidos en cada caso.
11. A menos que esté permitido expresamente, no retire nunca la tapa ni componentes de la carcasa mientras el producto esté en servicio. Esto pone a descubierto los cables y componentes eléctricos y puede causar lesiones, fuego o daños en el producto.

12. Si un producto se instala en un lugar fijo, se deberá primero conectar el conductor de protección fijo con el conductor de protección del producto antes de hacer cualquier otra conexión. La instalación y la conexión deberán ser efectuadas por un electricista especializado.
13. En el caso de dispositivos fijos que no estén provistos de fusibles, interruptor automático ni otros mecanismos de seguridad similares, el circuito de alimentación debe estar protegido de modo que todas las personas que puedan acceder al producto, así como el producto mismo, estén a salvo de posibles daños.
14. Todo producto debe estar protegido contra sobretensión (debida p. ej. a una caída del rayo) mediante los correspondientes sistemas de protección. Si no, el personal que lo utilice quedará expuesto al peligro de choque eléctrico.
15. No debe introducirse en los orificios de la caja del aparato ningún objeto que no esté destinado a ello. Esto puede producir cortocircuitos en el producto y/o puede causar choques eléctricos, fuego o lesiones.
16. Salvo indicación contraria, los productos no están impermeabilizados (ver también el capítulo "Estados operativos y posiciones de funcionamiento", punto 1). Por eso es necesario tomar las medidas necesarias para evitar la entrada de líquidos. En caso contrario, existe peligro de choque eléctrico para el usuario o de daños en el producto, que también pueden redundar en peligro para las personas.
17. No utilice el producto en condiciones en las que pueda producirse o ya se hayan producido condensaciones sobre el producto o en el interior de éste, como p. ej. al desplazarlo de un lugar frío a otro caliente. La entrada de agua aumenta el riesgo de choque eléctrico.
18. Antes de la limpieza, desconecte por completo el producto de la alimentación de tensión (p. ej. red de alimentación o batería). Realice la limpieza de los aparatos con un paño suave, que no se deshilache. No utilice bajo ningún concepto productos de limpieza químicos como alcohol, acetona o diluyentes para lacas nitrocelulósicas.

Funcionamiento

1. El uso del producto requiere instrucciones especiales y una alta concentración durante el manejo. Debe asegurarse que las personas que manejen el producto estén a la altura de los requerimientos necesarios en cuanto a aptitudes físicas, psíquicas y emocionales, ya que de otra manera no se pueden excluir lesiones o daños de objetos. El empresario u operador es responsable de seleccionar el personal usuario apto para el manejo del producto.
2. Antes de desplazar o transportar el producto, lea y tenga en cuenta el capítulo "Transporte".
3. Como con todo producto de fabricación industrial no puede quedar excluida en general la posibilidad de que se produzcan alergias provocadas por algunos materiales empleados, los llamados alérgenos (p. ej. el níquel). Si durante el manejo de productos Rohde & Schwarz se producen reacciones alérgicas, como p. ej. irritaciones cutáneas, estornudos continuos, enrojecimiento de la conjuntiva o dificultades respiratorias, debe avisarse inmediatamente a un médico para investigar las causas y evitar cualquier molestia o daño a la salud.
4. Antes de la manipulación mecánica y/o térmica o el desmontaje del producto, debe tenerse en cuenta imprescindiblemente el capítulo "Eliminación", punto 1.

5. Ciertos productos, como p. ej. las instalaciones de radiocomunicación RF, pueden a causa de su función natural, emitir una radiación electromagnética aumentada. Deben tomarse todas las medidas necesarias para la protección de las mujeres embarazadas. También las personas con marcapasos pueden correr peligro a causa de la radiación electromagnética. El empresario/operador tiene la obligación de evaluar y señalar las áreas de trabajo en las que exista un riesgo elevado de exposición a radiaciones.
6. Tenga en cuenta que en caso de incendio pueden desprenderse del producto sustancias tóxicas (gases, líquidos etc.) que pueden generar daños a la salud. Por eso, en caso de incendio deben usarse medidas adecuadas, como p. ej. máscaras antigás e indumentaria de protección.
7. En caso de que un producto Rohde & Schwarz contenga un producto láser (p. ej. un lector de CD/DVD), no debe usarse ninguna otra configuración o función aparte de las descritas en la documentación del producto, a fin de evitar lesiones (p. ej. debidas a irradiación láser).

Reparación y mantenimiento

1. El producto solamente debe ser abierto por personal especializado con autorización para ello. Antes de manipular el producto o abrirlo, es obligatorio desconectarlo de la tensión de alimentación, para evitar toda posibilidad de choque eléctrico.
2. El ajuste, el cambio de partes, el mantenimiento y la reparación deberán ser efectuadas solamente por electricistas autorizados por Rohde & Schwarz. Si se reponen partes con importancia para los aspectos de seguridad (p. ej. el enchufe, los transformadores o los fusibles), solamente podrán ser sustituidos por partes originales. Después de cada cambio de partes relevantes para la seguridad deberá realizarse un control de seguridad (control a primera vista, control del conductor de protección, medición de resistencia de aislamiento, medición de la corriente de fuga, control de funcionamiento). Con esto queda garantizada la seguridad del producto.

Baterías y acumuladores o celdas

Si no se siguen (o se siguen de modo insuficiente) las indicaciones en cuanto a las baterías y acumuladores o celdas, pueden producirse explosiones, incendios y/o lesiones graves con posible consecuencia de muerte. El manejo de baterías y acumuladores con electrolitos alcalinos (p. ej. celdas de litio) debe seguir el estándar EN 62133.

1. No deben desmontarse, abrirse ni triturarse las celdas.
2. Las celdas o baterías no deben someterse a calor ni fuego. Debe evitarse el almacenamiento a la luz directa del sol. Las celdas y baterías deben mantenerse limpias y secas. Limpiar las conexiones sucias con un paño seco y limpio.
3. Las celdas o baterías no deben cortocircuitarse. Es peligroso almacenar las celdas o baterías en estuches o cajones en cuyo interior puedan cortocircuitarse por contacto recíproco o por contacto con otros materiales conductores. No deben extraerse las celdas o baterías de sus embalajes originales hasta el momento en que vayan a utilizarse.
4. Mantener baterías y celdas fuera del alcance de los niños. En caso de ingestión de una celda o batería, avisar inmediatamente a un médico.
5. Las celdas o baterías no deben someterse a impactos mecánicos fuertes indebidos.

Informaciones elementales de seguridad

6. En caso de falta de estanqueidad de una celda, el líquido vertido no debe entrar en contacto con la piel ni los ojos. Si se produce contacto, lavar con agua abundante la zona afectada y avisar a un médico.
7. En caso de cambio o recarga inadecuados, las celdas o baterías que contienen electrolitos alcalinos (p. ej. las celdas de litio) pueden explotar. Para garantizar la seguridad del producto, las celdas o baterías solo deben ser sustituidas por el tipo Rohde & Schwarz correspondiente (ver lista de recambios).
8. Las baterías y celdas deben reciclarse y no deben tirarse a la basura doméstica. Las baterías o acumuladores que contienen plomo, mercurio o cadmio deben tratarse como residuos especiales. Respete en esta relación las normas nacionales de eliminación y reciclaje.

Transporte

1. El producto puede tener un peso elevado. Por eso es necesario desplazarlo o transportarlo con precaución y, si es necesario, usando un sistema de elevación adecuado (p. ej. una carretilla elevadora), a fin de evitar lesiones en la espalda u otros daños personales.
2. Las asas instaladas en los productos sirven solamente de ayuda para el transporte del producto por personas. Por eso no está permitido utilizar las asas para la sujeción en o sobre medios de transporte como p. ej. grúas, carretillas elevadoras de horquilla, carros etc. Es responsabilidad suya fijar los productos de manera segura a los medios de transporte o elevación. Para evitar daños personales o daños en el producto, siga las instrucciones de seguridad del fabricante del medio de transporte o elevación utilizado.
3. Si se utiliza el producto dentro de un vehículo, recae de manera exclusiva en el conductor la responsabilidad de conducir el vehículo de manera segura y adecuada. El fabricante no asumirá ninguna responsabilidad por accidentes o colisiones. No utilice nunca el producto dentro de un vehículo en movimiento si esto pudiera distraer al conductor. Asegure el producto dentro del vehículo debidamente para evitar, en caso de un accidente, lesiones u otra clase de daños.

Eliminación

1. Si se trabaja de manera mecánica y/o térmica cualquier producto o componente más allá del funcionamiento previsto, pueden liberarse sustancias peligrosas (polveros con contenido de metales pesados como p. ej. plomo, berilio o níquel). Por eso el producto solo debe ser desmontado por personal especializado con formación adecuada. Un desmontaje inadecuado puede ocasionar daños para la salud. Se deben tener en cuenta las directivas nacionales referentes a la eliminación de residuos.
2. En caso de que durante el trato del producto se formen sustancias peligrosas o combustibles que deban tratarse como residuos especiales (p. ej. refrigerantes o aceites de motor con intervalos de cambio definidos), deben tenerse en cuenta las indicaciones de seguridad del fabricante de dichas sustancias y las normas regionales de eliminación de residuos. Tenga en cuenta también en caso necesario las indicaciones de seguridad especiales contenidas en la documentación del producto. La eliminación incorrecta de sustancias peligrosas o combustibles puede causar daños a la salud o daños al medio ambiente.

Certified Quality System

DIN EN ISO 9001 : 2000
DIN EN 9100 : 2003
DIN EN ISO 14001 : 2004

DQS REG. NO 001954 QM UM

QUALITÄTSZERTIFIKAT

Sehr geehrter Kunde,

Sie haben sich für den Kauf eines Rohde & Schwarz-Produktes entschieden. Hiermit erhalten Sie ein nach modernsten Fertigungsmethoden hergestelltes Produkt. Es wurde nach den Regeln unseres Managementsystems entwickelt, gefertigt und geprüft.

Das Rohde & Schwarz Managementsystem ist zertifiziert nach:

DIN EN ISO 9001:2000
DIN EN 9100:2003
DIN EN ISO 14001:2004

CERTIFICATE OF QUALITY

Dear Customer,

you have decided to buy a Rohde & Schwarz product. You are thus assured of receiving a product that is manufactured using the most modern methods available. This product was developed, manufactured and tested in compliance with our quality management system standards.

The Rohde & Schwarz quality management system is certified according to:

DIN EN ISO 9001:2000
DIN EN 9100:2003
DIN EN ISO 14001:2004

CERTIFICAT DE QUALITÉ

Cher Client,

vous avez choisi d'acheter un produit Rohde & Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests respectent nos normes de gestion qualité.

Le système de gestion qualité de Rohde & Schwarz a été homologué conformément aux normes:

DIN EN ISO 9001:2000
DIN EN 9100:2003
DIN EN ISO 14001:2004



ROHDE & SCHWARZ

Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish.

We will take care that you will get the right information.

USA & Canada

Monday to Friday (except US public holidays)

8:00 AM – 8:00 PM Eastern Standard Time (EST)

Tel. from USA 888-test-rsa (888-837-8772) (opt 2)

From outside USA +1 410 910 7800 (opt 2)

Fax +1 410 910 7801

E-mail CustomerSupport@rohde-schwarz.com

East Asia

Monday to Friday (except Singaporean public holidays)

8:30 AM – 6:00 PM Singapore Time (SGT)

Tel. +65 6 513 0488

Fax +65 6 846 1090

E-mail CustomerSupport@rohde-schwarz.com

Rest of the World

Monday to Friday (except German public holidays)

08:00 – 17:00 Central European Time (CET)

Tel. from Europe +49 (0) 180 512 42 42*

From outside Europe +49 89 4129 13776

Fax +49 (0) 89 41 29 637 78

E-mail CustomerSupport@rohde-schwarz.com

* 0.14 €/Min within the German fixed-line telephone network, varying prices for the mobile telephone network and in different countries.



Address List

Headquarters, Plants and Subsidiaries

Headquarters

ROHDE & SCHWARZ GmbH & Co. KG
Mühlendorfstraße 15 · D-81671 München
P.O.Box 80 14 69 · D-81614 München

Phone +49 (89) 41 29-0
Fax +49 (89) 41 29-121 64
info.rs@rohde-schwarz.com

Plants

ROHDE & SCHWARZ Messgerätebau GmbH
Riedbachstraße 58 · D-87700 Memmingen
P.O.Box 16 52 · D-87686 Memmingen

Phone +49 (83 31) 1 08-0
+49 (83 31) 1 08-1124
info.rsmb@rohde-schwarz.com

ROHDE & SCHWARZ GmbH & Co. KG
Werk Teisnach
Kaikenrieder Straße 27 · D-94244 Teisnach
P.O.Box 11 49 · D-94240 Teisnach

Phone +49 (99 23) 8 50-0
Fax +49 (99 23) 8 50-174
info.rsdt@rohde-schwarz.com

ROHDE & SCHWARZ závod
Vimperk, s.r.o.
Location Spidrova 49
CZ-38501 Vimperk

Phone +420 (388) 45 21 09
Fax +420 (388) 45 21 13

ROHDE & SCHWARZ GmbH & Co. KG
Dienstleistungszentrum Köln
Graf-Zeppelin-Straße 18 · D-51147 Köln
P.O.Box 98 02 60 · D-51130 Köln

Phone +49 (22 03) 49-0
Fax +49 (22 03) 49 51-229
info.rsdc@rohde-schwarz.com
service.rsdc@rohde-schwarz.com

Subsidiaries

R&S BICK Mobilfunk GmbH
Fritz-Hahne-Str. 7 · D-31848 Bad Münder
P.O.Box 20 02 · D-31844 Bad Münder

Phone +49 (50 42) 9 98-0
Fax +49 (50 42) 9 98-105
info.bick@rohde-schwarz.com

ROHDE & SCHWARZ FTK GmbH
Wendenschloßstraße 168, Haus 28
D-12557 Berlin

Phone +49 (30) 658 91-122
Fax +49 (30) 655 50-221
info.ftk@rohde-schwarz.com

ROHDE & SCHWARZ SIT GmbH
Am Studio 3
D-12489 Berlin

Phone +49 (30) 658 84-0
Fax +49 (30) 658 84-183
info.sit@rohde-schwarz.com

R&S Systems GmbH
Graf-Zeppelin-Straße 18
D-51147 Köln

Phone +49 (22 03) 49-5 23 25
Fax +49 (22 03) 49-5 23 36
info.rssys@rohde-schwarz.com

GEDIS GmbH
Sophienblatt 100
D-24114 Kiel

Phone +49 (431) 600 51-0
Fax +49 (431) 600 51-11
sales@gedis-online.de

HAMEG Instruments GmbH
Industriestraße 6
D-63533 Mainhausen

Phone +49 (61 82) 800-0
Fax +49 (61 82) 800-100
info@hameg.de

Locations Worldwide

Please refer to our homepage: www.rohde-schwarz.com

- ◆ Sales Locations
- ◆ Service Locations
- ◆ National Websites

Contents of the Application Firmware R&S FS–K82 Software Manual

This software manual contains information on the operation of the Spectrum Analyzer R&S FSU, R&S FSP or Signal Analyzer R&S FSQ configured with the Application Firmware R&S FS–K82. It includes a description of the menus and the remote–control commands for the cdma2000/1xEV–DV base station test application firmware.

All other aspects of analyzer operation can be taken from the operating manual of the analyzer.

The software manual of the application firmware consists of the data sheet and 10 chapters:

The data sheet	informs on the guaranteed and typical specifications and the firmware characteristics
Chapter 1	describes how to enable the application firmware.
Chapter 2	describes typical examples of measurements by means of tests.
Chapter 3	describes the measurement setup for base station tests.
Chapter 4	describes the predefined channel tables.
Chapter 5	gives a schematic view of the control menus.
Chapter 6	contains a detailed description of all functions for base station tests as a reference for manual operation. The chapter also presents a list of IEC/IEEE bus commands associated with each function.
Chapter 7	describes all remote–control commands defined for the application firmware. A table containing the IEC/IEEE bus commands assigned to the softkeys are given at the end of the chapter.
Chapter 8	describes the performance test
Chapter 9	contains code tables in Hadamard and BitReverse order
Chapter 10	contains definitions relating to measured quantities of the code domain measurement
Chapter 11	contains the index of this software manual.

cdma2000 Base Station Test – Application Firmware R&S FS–K82

When configured with the Application Firmware R&S FS–K82, the analyzer performs code domain power measurements on forward link signals (base station) on the basis of the 3GPP2 Standard (Third Generation Partnership Project 2).

The "**Recommended Minimum Performance Standard for cdma2000 Spread Spectrum Base Stations Release C**", version C.S0010–C dated May 2002, is taken as a basis.

This Standard has been approved by the following authority with the specified designation:

- TIA: TIA/EIA–97–E (also known as IS–97–E)

When the cdma2000 specification is mentioned in the document, these standards are meant.

The application firmware supports radio configurations 1 to 5. This means that all radio configurations with a single carrier (1X) are supported. Accordingly, IS95A/B signals conforming to radio configurations 1&2 can also be measured with this application firmware. Channels and modulation types of the 1xEV–DV enhancement are supported as well. In addition to the measurements called for by the cdma2000 Standard in the code domain, the application firmware features measurements in the spectral range such as channel power, adjacent channel power, assigned bandwidth and spectrum emission mask with predefined settings.

1 Installing and Enabling the Application Firmware

Installation

If the Application Firmware R&S FS-K82 has not been installed on the unit, a firmware update has to be performed. This has already been done in the case of instalment at the factory.

A prerequisite to install the application firmware is that an appropriate basic firmware is installed on the analyzer. Refer to the release notes of the current Application Firmware R&S FS-K82 for the compatible version.

If the basic firmware has to be updated, the firmware update with the floppy disks containing the basic firmware has to be performed, this is done by choosing *SETUP* → *NEXT* → *FIRMWARE UPDATE*.


When the correct basic software has been installed, the firmware update for the firmware application can be started from the floppy disks containing the Firmware Application R&S FS-K82 by choosing the same options – *SETUP* → *NEXT* → *FIRMWARE UPDATE*.

After the application firmware has been installed, it has to be enabled as described below.

Enabling

The Application Firmware R&S FS-K82 is enabled on the *SETUP* → *GENERAL SETUP* menu by entering a keyword. The keyword is supplied with the application firmware. If the application is installed at the factory it will also be enabled.

GENERAL SETUP menu:

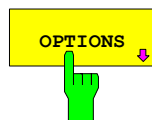

The *OPTIONS* softkey opens a submenu in which the keywords for the application firmware can be entered. The available applications are displayed in a table, which is opened when you enter the submenu.



The *INSTALL OPTION* softkey enables entry of the keyword for an application firmware.

You can enter one or more keywords in the entry field. If the keyword is valid, the message *OPTION KEY OK* is displayed and the application firmware is entered in the *FIRMWARE OPTIONS* table.

If a keyword is invalid, the message *OPTION KEY INVALID* is displayed.

If the version of the application firmware and the version of the basic firmware are not compatible, a corresponding message is issued. In this instance, follow the instructions contained in the above chapter, "Installation".

2 Getting Started

The following chapter explains fundamental cdma2000 base station tests using a measurement setup with the signal generator SMIQ as the device under test. It describes how operating and measuring errors can be avoided by means of correct default settings.

The measurement screen is presented in Chapter 0 for the different measurements.

Attention is drawn to important settings exemplifying how to avoid measurement errors during measurements. The correct setting is followed by a demonstration of the effect of an incorrect setting. The following measurements are performed:

- Measurement 1: Measuring the signal spectrum
- Measurement 2: Measuring the spectrum emission mask
- Measurement 3: Measuring the relative code domain power and the frequency error
 - Setting: Center frequency
- Measurement 4: Triggered measurement of relative code domain power
 - Setting: Trigger offset
 - Setting: PN offset of base station
- Measurement 5: Measuring the composite EVM
- Measurement 6: Measuring the peak code domain error
- Measurement 7: Measuring the RHO factor

As the cdma2000 application firmware also supports the IS95 Standard, the examples are performed on an IS95 signal.

Measurements are performed with the following units and accessories:

- Spectrum analyzer R&S FSU, R&S FSP or Signal analyzer R&S FSQ with application firmware R&S FS-K82 base station test for cdma2000.
- Vector signal generator SMIQ with option B11 data generator / B20 modulation coder and B42 cdmaOne (IS95) and SMIQ-Z5 PARADATA BNC ADAPTER for external trigger.
- 1 coaxial cable, 50 Ω , approximately 1 m, N connector
- 2 coaxial cables, 50 Ω , approximately 1 m, BNC connector
- The following conventions apply to displaying settings on the analyzer:
 - [<Key>] Press a key on the front panel such as **[SPAN]**
 - [<SOFTKEY>] Press a softkey such as **[MARKER → PEAK]**
 - [<nn unit>] Enter a value and terminate by entering the unit such as **[12 kHz]**
- The following conventions apply to displaying settings on the SMIQ:
 - [<Key>] Press a key on the front panel such as **[FREQ]**
 - <MENU> Choose a menu, parameter or a setting such as **DIGITAL STD.**
The menu level is identified by indenting.
 - <nn unit> Enter a value and terminate by entering the unit such as **12 kHz**

Default settings in cdma2000 BTS mMode

In the default setting after PRESET, the analyzer is in SPECTRUM mode. The following default settings of the code domain measurement are not enabled until cdma2000 BTS mode is selected by means of the hot key CDMA2k BS.

Table 2–1 Default settings of the code domain measurement after Preset

Parameter	Setting
Digital standard	CDMA 2000 MC1 (where MC1 stands for Multi-carrier 1 and thus describes cdma2000 1X, i.e. a single carrier)
Band class	Band class 0 (800 MHz band)
Sweep	CONTINUOUS
CDP mode	CODE CHAN AUTOSEARCH
Trigger setting	FREE RUN
Trigger offset	0 s
PN offset	0 Chips
Threshold value	-60 dB
Code number	0
PCG number	0
Capture length	3 PCGs (where PCG stands for Power Control Group)
Code order	Hadamard
Antenna diversity	OFF
Evaluation	Screen A: CODE PWR RELATIVE Screen B: RESULT SUMMARY

Measurement 1: Measuring the signal power

Measurement of the spectrum gives an overview of the cdma2000 signal and the spurious emissions close to the carrier.

Test setup ➤ Connect the RF output of SMIQ to the RF input of the analyzer (coaxial cable with N connectors).

Setting on SMIQ:

[PRESET]	
[LEVEL:	<i>0 dBm]</i>
[FREQ:	<i>878.49 MHz]</i>
<i>DIGITAL STD</i>	
<i>IS95</i>	
STATE:	<i>ON</i>

Setting on analyzer:

[PRESET]	
[FREQUENCY:	<i>878.49 MHz]</i>
[AMPT:	<i>0 dBm]</i>
<i>[CDMA2k BS]</i>	
[MEAS:	<i>POWER]</i>

Measurement on analyzer: The following is displayed:

- The spectrum of the cdma2000 signal
- The signal channel power within the 1.2288 MHz channel bandwidth

Measurement 2: Measuring the spectrum emission mask

The cdma2000 specification calls for a measurement that monitors compliance with a spectral mask over a range of at least ± 4.0 MHz around the cdma2000 carrier. To assess the power emissions within the specified range, the signal power is measured with a 30 kHz filter. The resulting trace is compared with a limit line as defined in the cdma2000 standard. The limit lines are automatically selected as a function of the used band class.

Test setup ➤ Connect the RF output of SMIQ to the RF input of the analyzer (coaxial cable with N connectors).

Setting on SMIQ:

[PRESET]	
[LEVEL:	<i>0 dBm]</i>
[FREQ:	<i>878.49 MHz]</i>
DIGITAL STD	
IS95	
STATE:	<i>ON</i>

Setting on analyzer:

[PRESET]	<i>Band class 0 is thus selected</i>
[FREQUENCY:	<i>878.49 MHz]</i>
[AMPT:	<i>0 dBm]</i>
[CDMA2k BS]	
[MEAS:	<i>SPECTRUM EM MASK]</i>

Measurement on analyzer: The following is displayed:

- The spectrum of the cdma2000 signal
- The limit line defined in the standard
- Information on limit line violations (passed/failed)

Measurement 3: Measuring the relative code domain power and the frequency error

A code domain power measurement on a test model (having 9 channels) is shown in the following. The basic parameters of the CDP measurements, which allows an analysis of the signal, are changed one after the other from values adapted to the measurement signal to non-adapted values to demonstrate the ensuing effects.

- Setting on SMIQ:
- Connect the RF output of SMIQ to the RF input of the analyzer.
 - Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference output (REF) on the SMIQ (coaxial cable with BNC connectors)

Setting on SMIQ:

[PRESET]	
[LEVEL:	<i>0 dBm]</i>
[FREQ:	<i>878.49 MHz]</i>
<i>DIGITAL STD</i>	
<i>IS95</i>	
STATE:	<i>ON</i>

Setting on analyzer:

[PRESET]	
[FREQUENCY:	<i>878.49 MHz]</i>
[AMPT:	<i>10 dBm]</i>
[CDMA2k BS]	

Measurement on analyzer: The following is displayed:

Screen A:	Signal code domain power (test model with 9 channels)
Screen B:	Numeric results of CDP measurement including the frequency error

Measurement 4: Triggered measurement of relative code domain power

If the code domain power measurement is performed without external triggering, a section of the test signal is recorded at an arbitrary point of time and the firmware attempts to detect the start of a power control group (PCG). To detect this start, all possibilities of the PN sequence location have to be tested in Free Run mode. This requires computing time. This computing time can be reduced by using an external (frame) trigger and entering the correct PN offset. If the search range for the start of the power control group and the PN offset are known then fewer possibilities have to be tested. This increases the measurement speed.

Test setup	<ul style="list-style-type: none"> ➤ Connect the RF output of SMIQ to the RF input of the analyzer ➤ Connect the reference frequencies (refer to measurement 2) ➤ Connect external triggering of the analyzer (EXT TRIG GATE) to the SMIQ trigger (TRIGOUT1 at PAR DATA).
Setting on SMIQ:	As for measurement 3
Setting on analyzer:	As for measurement 3, plus [TRIG: EXTERN]
Measurement on analyzer:	<p>The following is displayed:</p> <p>Screen A: Code domain power of signal Screen B: Numeric results of CDP measurement</p> <p>Trg to frame: Offset between trigger event and start of the PCG</p> <p>The repetition rate of the measurement increases compared with measurement without an external trigger.</p>

Setting: Trigger offset

A delay between the trigger event and the start of the PCG can be compensated for, by changing the trigger offset.

Setting on analyzer:	As for measurement 3, plus [TRIG:] [TRIG OFFSET <i>100 μs]</i>
Measurement on analyzer:	<p>The parameter "Trg to Frame" in the numeric results table (screen B) changes:</p> <p><i>Trg to Frame</i> <i>-100 μs</i></p>

A trigger offset compensates analog delays of the trigger event.

Setting: Behaviour with wrong PN offset

A valid CDP measurement can only be performed if the PN offset set on the analyzer are the same as that of the transmit signal.

Setting on SMIQ: *As for measurement 3*

Setting on analyzer: Set PN offset to the new value:

[SETTINGS: PN-OFFSET 200]

Measurement on analyzer: The 'SYNC FAILED' message appears.

Setting on analyzer: Set PN offset to the new value:

[SETTINGS: PN-OFFSET 0]

Measurement on analyzer: The CDP display shows the test model again.

The setting of the PN offset on the analyzer must agree with the PN offset of the signal to be measured.

The TRG TO FRAME value of the result summary is only correct if the PN offset agrees!

Measurement 5: Measuring the composite EVM

Composite EVM is the measurement of the mean squared error of the overall signal required by the cdma2000 specification.

The instrument generated an ideal reference signal from the demodulated data. The test signal and the reference signal are then compared with each other. The squared deviation produces the composite EVM measurement.

- Test setup
- Connect the RF output of SMIQ to the RF input of the analyzer (coaxial cable with N connectors)
 - Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference output (REF) on the SMIQ (coaxial cable with BNC connectors)
 - Connect external triggering of the analyzer (EXT TRIG GATE) to the SMIQ trigger (TRIGOUT1 at PAR DATA).

Setting on SMIQ:

```

[PRESET]
[LEVEL:           0 dBm]
[FREQ:           878.49 MHz]
DIGITAL STD
  IS95
  
```

STATE: ON

Setting on analyzer:

```

[PRESET]
[FREQUENCY:      878.49 MHz]
[AMPT:           10 dBm]
[CDMA2k BS]
[TRIG             EXTERN]
[RESULTS         COMPOSITE EVM]
  
```

Measurement on analyzer: The following is displayed:

Screen A: Code domain power of signal

Screen B: Composite EVM (EVM for total signal)

Measurement 6: Measuring the peak code domain error

For the peak code domain error measurement, the instrument generates an ideal reference signal from the demodulated data. The test signal and the reference signal are compared with each other; the difference between the two signals is projected to the class of the base spreading factor. The peak code domain error measurement is obtained by summing the symbols of each PCG of the difference signal and searching for the maximum error code.

- Test setup
- Connect the RF output of SMIQ to the RF input of the analyzer (coaxial cable with N connectors)
 - Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference output (REF) on the SMIQ (coaxial cable with BNC connectors)
 - Connect external triggering of the analyzer (EXT TRIG GATE) to the SMIQ trigger (TRIGOUT1 at PAR DATA).

Setting on SMIQ:

```
[PRESET]
[LEVEL:           0 dBm]
[FREQ:           878.49 MHz]
DIGITAL STD
  IS95
      STATE:       ON
```

Setting on analyzer:

```
[PRESET]
[FREQUENCY:     878.49 MHz]
[AMPT:          0 dBm]
[CDMA2k BS]
[TRIG           EXTERN]
[RESULTS       PEAK CODE DOMAIN ERR]
```

Measurement on analyzer: The following is displayed:

Screen A: Code domain power of signal

Screen B: Peak code domain error (for base spreading factor with the default setting value of 64)

Measurement 7: Measuring the RHO factor

A measurement of the RHO factor is shown in the following. The quality parameter RHO is required to be measured on a signal that only contains the pilot channel.

- Setting on SMIQ:
- Connect the RF output of SMIQ to the RF input of the analyzer.
 - Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference output (REF) on the SMIQ (coaxial cable with BNC connectors)

Setting on SMIQ:

```
[PRESET]
[LEVEL:           0 dBm]
[FREQ:           878.49 MHz]
DIGITAL STD
  IS95
    STATE:         ON
    On the list of channels, except pilot code 0, set to
    STATE OFF. This means that only the pilot channel is available
    in the signal.
```

Setting on analyzer:

```
[PRESET]
[FREQUENCY:      878.49 MHz]
[AMPT:          10 dBm]
[CDMA2k BS]
```

Measurement on analyzer: The following is displayed:

Screen A: Signal code domain power
(Only the pilot from 0.64)

Screen B: Numeric results of CDP measurement including the
RHO factor

3 Test Setup for Base Station Tests



Note:

Before taking the unit into operation, make sure that

- The housing covers are in place and their screws have been tightened
- The ventilation slits are free
- No signal voltage levels above the permissible limits are applied to the inputs
- The outputs of the unit are not overloaded or wrongly connected

Failure to comply with the above points may result in damage to the unit.

This chapter describes the default settings of the analyzer for operation as a cdma2000 base station tester. A condition that has to be met before measurements can start is that the analyzer is correctly configured and supplied with power, as described in Chapter 1 of the operating manual for the basic unit. Furthermore, the Application Firmware R&S FS-K82 must be enabled. Installation and enabling of the application firmware are described in Chapter 1 of this software manual.

Standard Test Setup

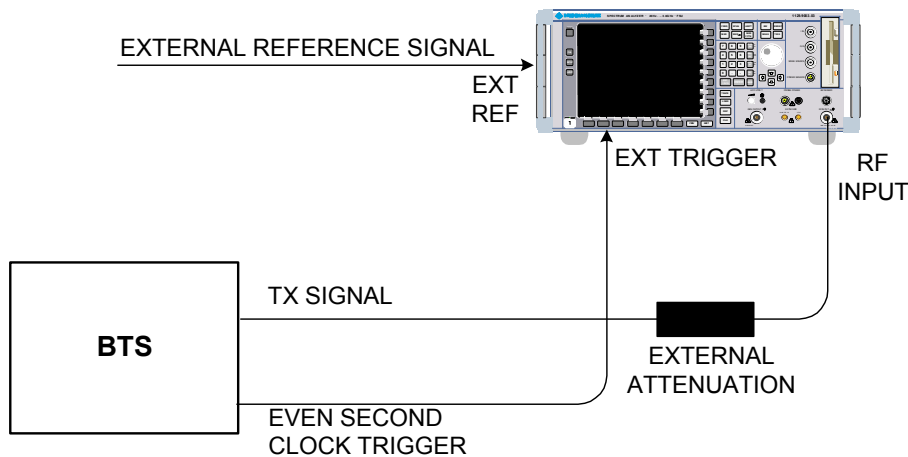


Fig. 3-1 BTS test setup

- Connect the antenna output (or TX output) of the base station to the RF input of the analyzer by means of a power attenuator exhibiting suitable attenuation.

The following values for external attenuation are recommended to ensure that the RF input of the analyzer is protected and the sensitivity of the unit is not reduced too much:

Maximum power	Recommended external attenuation
≥ 55 to 60 dBm	35 to 40 dB
≥ 50 to 55 dBm	30 to 35 dB
≥ 45 to 50 dBm	25 to 30 dB
≥ 40 to 45 dBm	20 to 25 dB
≥ 35 to 40 dBm	15 to 20 dB
≥ 30 to 35 dBm	10 to 15 dB
≥ 25 to 30 dBm	5 to 10 dB
≥ 20 to 25 dBm	0 to 5 dB
20 dBm	0 dB

- For signal measurements at the output of two–port networks, connect the reference frequency of the signal source to the rear reference input of the analyzer (EXT REF IN/OUT).
- To ensure that the error limits specified in the cdma2000 specification for frequency measurements on base stations are met, the analyzer must be operated with an external frequency reference. A rubidium frequency standard can be used as a reference source, for example.
- If the base station has a trigger output, connect the trigger output of the base station to the rear trigger input of the analyzer (EXT TRIG GATE).

Presettings

- Enter the external attenuation. **[AMPT] [NEXT] [REF LVL OFFSET].**
- Enter the reference level. **[AMPT]**
- Enter the center frequency. **[FREQUENCY]**
- Set the trigger. **[TRIG]**
- If used, enable the external reference. **[SETUP] [REF: EXT]**
- Select the standard and the desired measurement. **[CDMA2k BS] [RESULTS]**
- Set the PN offset **[SETTINGS] [PN OFFSET]**

4 Predefined Channel Tables

By default, the application firmware works in the Automatic Channel Search mode (softkey *CODE CHAN AUTOSEARCH*). However, there is also the option of using predefined channel tables and taking the code domain analysis as a basis. To do this, select the channel table and enable the predefined search mode (*CODE CHAN PREDEFINED* softkey). In accordance with the cdma2000 specification, different channel tables have already been defined. These tables are listed below. The standard does not specify a channel number for the data channels. If you wish to use channels other than those in the predefined channel tables of the firmware application, you may copy the original tables and adapt the channels in the copy. (Refer to the *CHAN CONF* hot key on page 6.53)

Channel table with PICH/SYNC/PCH and 6 data channels called **MPC_RC1**. (Base Station **Main Path 6 Channels Radio Configuration 1**).

Table 4–1 Base station channel table for main branch in radio configuration 1

Channel type	Number of channels	Radio configuration	Code channel (Walsh Code.SF)
PICH	1	–	0.64
SYNC	1	–	32.64
PCH	1	–	1.64
CHAN	6	1 1 1 1 1 1	9.64 10.64 11.64 15.64 17.64 25.64

Channel table with PICH/SYNC/PCH and 6 data channels called **MPC_RC4**. (Base Station **Main Path 6 Channels Radio Configuration 4**).

Table 4–2 Base station channel table for main branch in radio configuration 4

Channel type	Number of channels	Radio configuration	Code channel (Walsh Code.SF)
PICH	1	–	0.64
SYNC	1	–	32.64
PCH	1	–	1.64
CHAN	6	4 4 4 4 4 4	9.128 10.128 11.128 15.128 17.128 25.128

Channel table with PICH/SYNC/PCH and 6 data channels called **TDC_RC4**. (Base Station Transmit Diversity Path 6 Channels Radio Configuration 4).

Table 4–3 Base station channel table for antenna 2 in radio configuration 4

Channel type	Number of channels	Radio configuration	Code channel (Walsh Code.SF)
TDPICH	1	–	16.128
SYNC	1	–	32.64
PCH	1	–	1.64
CHAN	6	4	9.128
		4	10.128
		4	11.128
		4	15.128
		4	17.128
		4	25.128

In addition to these models specified in the standard, a further model is defined in the firmware:

Channel table with PICH/TDPICH/SYNC/PCH and 6 data channels called **BPC_RC4**. (Base Station Both Paths 6 Channels Radio Configuration 4).

Table 4–4 Base station test model for aggregate signal in radio configuration 4

Channel type	Number of channels	Radio configuration	Code channel (Walsh Code.SF)
PICH	1	–	0.64
TDPICH	1	–	16.128
SYNC	1	–	32.64
PCH	1	–	1.64
CHAN	6	4	9.128
		4	10.128
		4	11.128
		4	15.128
		4	17.128
		4	25.128

Channel table similar to MPC_RC4, but additionally with a PACKET DATA CONTROL CHANNEL and 11 PACKET DATA CHANNELs called **DV** due to the 1xEV-DV enhancement.

Channel type	Number of channels	Radio configuration	Code channel (Walsh Code.SF)
PICH	1	–	0.64
SYNC	1	–	32.64
PCH	1	–	1.64
PDCCH	1	–	5.64
PDCH	11	10 10 10 10 10 10 10 10 10 10 10	31.32 15.32 23.32 7.32 27.32 11.32 19.32 3.32 30.32 14.32 22.32
CHAN	6	4 4 4 4 4 4	9.128 10.128 12.128 16.128 17.128 25.128

For further information on the channel table defaults refer to the *CHAN CONF* hot key.

The channel abbreviations are defined in Chapter 10.

5 Menu Overview

The Application Firmware R&S FS-K82 (cdma2000/1xEV-DV base station tests) adds RF measurements and code domain power measurements for the cdma2000 forward link mobile radio standard to the analyzer including 1xEV-DV.

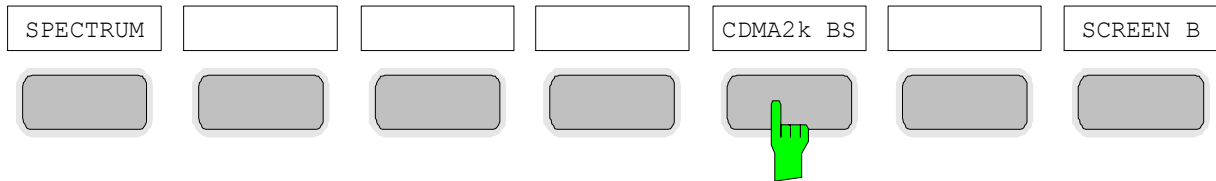


Fig. 5-1 Hot key tier with enabled application firmware R&S FS-K82

After entering the application firmware by pressing the hot key *CDMA2k BS* (2k stands for two thousand, i.e. cdma2000) a new hot key tier is displayed at the bottom edge of the screen and the code domain analyzer is selected and started.

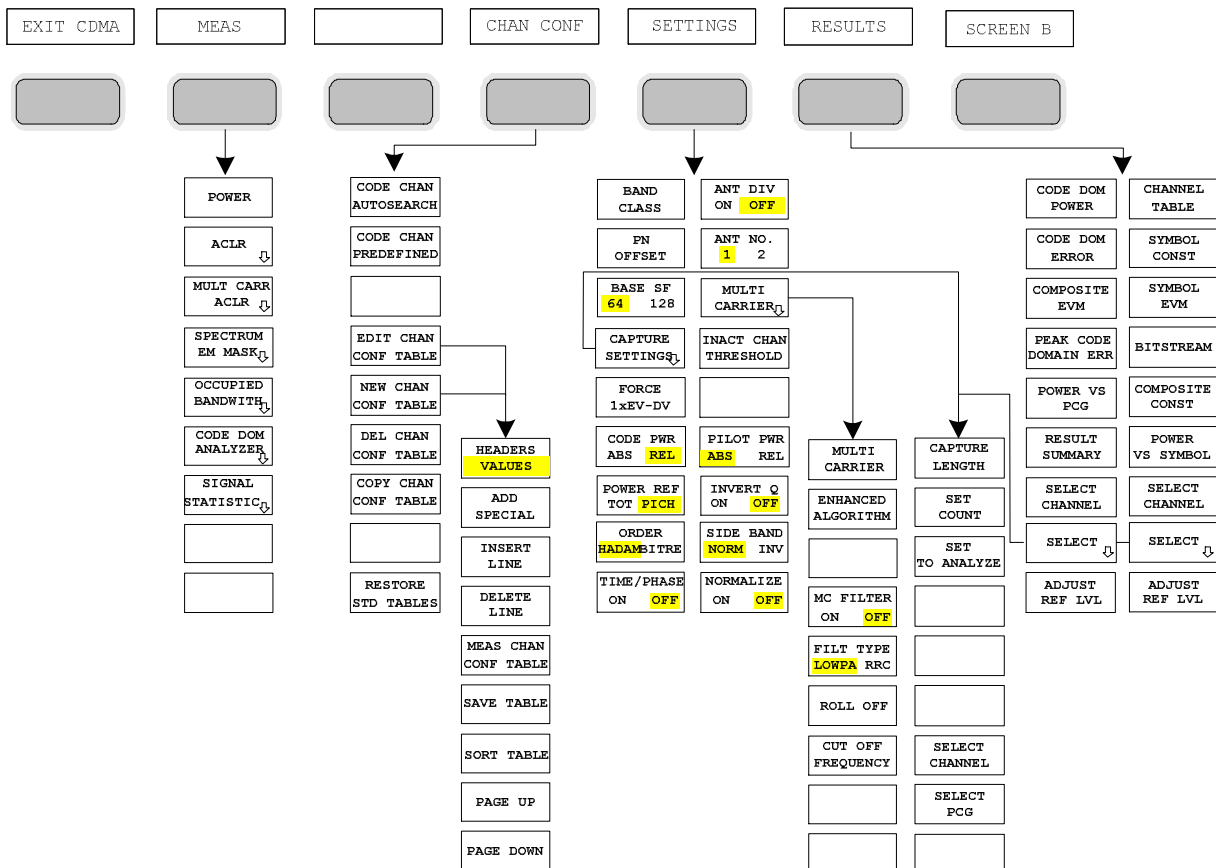


Fig. 5-2 Overview of menus in the R&S FS-K82 application firmware

There are different evaluations for the code domain analyzer. They can be selected by means of the *RESULTS* hot key. The *SETTINGS* hot key can be used to configure the application firmware. The PN offset of the base station or the band class can be set in this menu, for example. The *CHAN CONF* hot key is used to set Channel Search mode for the code domain analyzer. Furthermore, the user can also define his own channel tables.

The *MEAS* hot key is identical to the *MEAS* key (on the right of the front panel) and is used to select the different RF measurements or the code domain analyzer.

Selection of the *CHAN CONF* or *RESULTS* hot key automatically results in switching to the code domain analyzer.

Pressing the *EXIT CDMA* hot key results in exiting from R&S FS-K82. The hot key tier of the basic unit is displayed again and the analyzer goes to *SPECTRUM*, the default mode.

Transition from *SPECTRUM* mode to the application firmware:

The following user-specific settings are not modified so that the adaptation to the device under test is preserved:

- Reference Level + Rev Level Offset
- Center Frequency + Frequency Offset
- Input Attenuation + Mixer Level

The following user-specific settings are transferred as follows:

- External trigger sources are preserved, while all other trigger sources result in Free Run mode.
- Additional trigger settings are preserved.

Transition from the application firmware to *SPECTRUM* mode:

The following user-specific settings are not modified so that the adaptation to the device under test is preserved:

- Reference Level + Rev Level Offset
- Center Frequency + Frequency Offset
- Input Attenuation + Mixer Level

The following user-specific settings are transferred as follows:

- The trigger source is switched to FREE RUN and an analyzer frequency sweep is set with the SPAN equal to the double center frequency, or the maximum possible span, so that the center frequency remains unchanged at any event.

The measurements available in R&S FS-K82 can be selected by means of the MEAS hot key or the MEAS key:

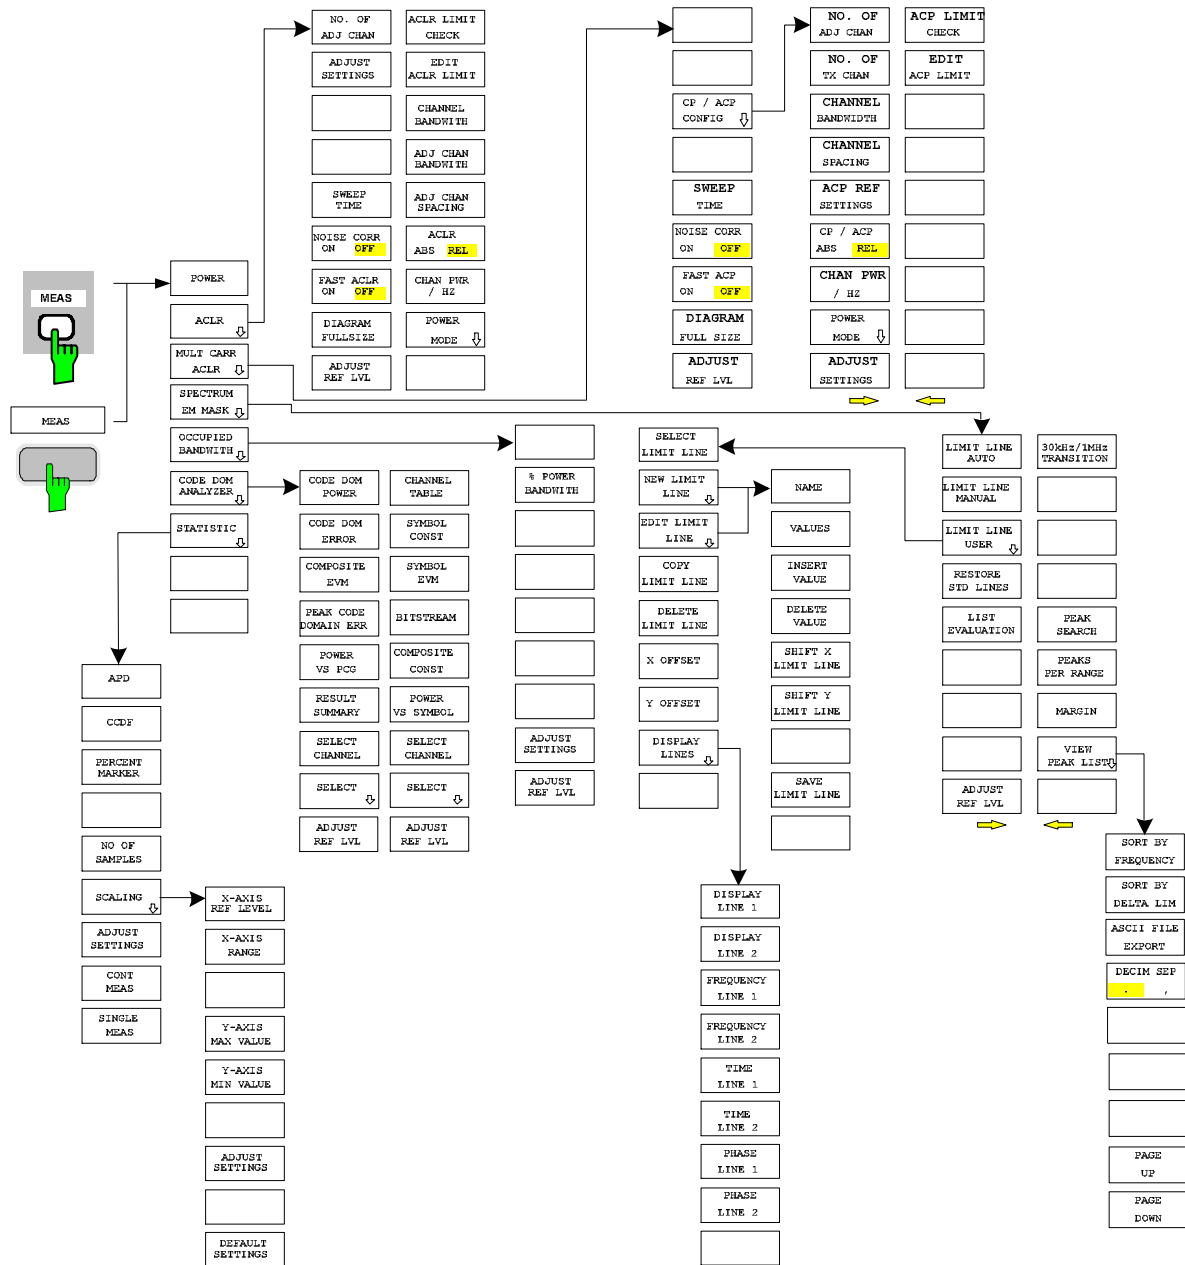


Fig. 5-3 Overview of menus


6 Configuration of cdma2000 Measurements

The most important measurements of a cdma2000 base station can be selected by means of the *MEAS* hot key and the *MEAS* key. They will be explained below on the basis of the softkey functions.

The *CODE DOM ANALYZER* softkey activates the code domain analyzer and takes you to the submenus for selecting the evaluations. Changing the assignment of the hot key tier during transition to the application ensures that the most important parameters of the code domain analyzer can be directly accessed on the hot key tier.

The softkeys *POWER*, *ACLR*, *SPECTRUM EM MASK*, *OCCUPIED BANDWIDTH*, and *SIGNAL STATISTIC* enable base station measurements with predefined settings, which are performed in *SPECTRUM* mode of the basic unit. The measurements are performed with the parameters specified in the cdma2000 specification. The user can modify the settings at a later stage.

MEAS key or *MEAS* hot keys

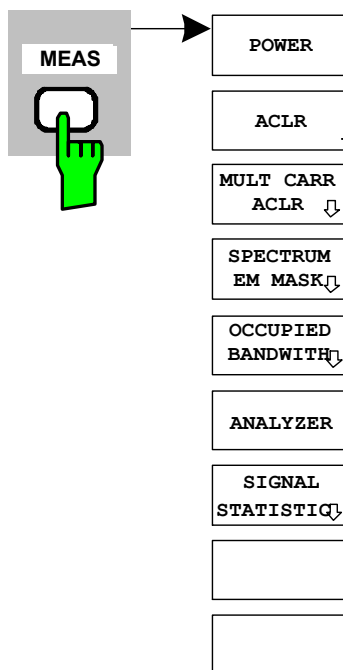


The *MEAS* hot key or the *MEAS* key opens a submenu for selecting the measurements:

- *POWER* enables the channel power measurement with defined default values in *SPECTRUM* mode.
- *ACLR* enables the adjacent channel power measurement with defined default values in *SPECTRUM* mode.
- *MULTI CARRIER ACLR* enables the multi carrier adjacent channel power measurement with defined default values in *SPECTRUM* mode.
- *SPECTRUM EM MASK* performs a comparison of the signal power in different carrier offset ranges with the maximum values specified in the cdma2000 specification.
- *OCCUPIED BANDWIDTH* enables measurement of the bandwidth assigned to the signal.
- *CODE DOM ANALYZER* enables the code domain analyzer and opens another menu for choosing the evaluation type. All other menus of the analyzer are adapted to the functions of the code domain analyzer mode. The code domain analyzer is described in a separate chapter starting on page 6.33.
- *SIGNAL STATISTIC* evaluates the signal with regard to its statistical characteristics (distribution function of the signal amplitudes).

Measuring channel power

MEAS key or MEAS hot key

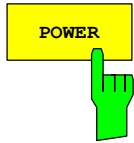

The *POWER* softkey enables measurement of the channel power of the cdma2000 signal.

The analyzer measures the RF signal power in a 1.2288 MHz bandwidth. The power is calculated by summation of the values at the trace points. The bandwidth and the associated channel power are displayed beneath the measurement screen.

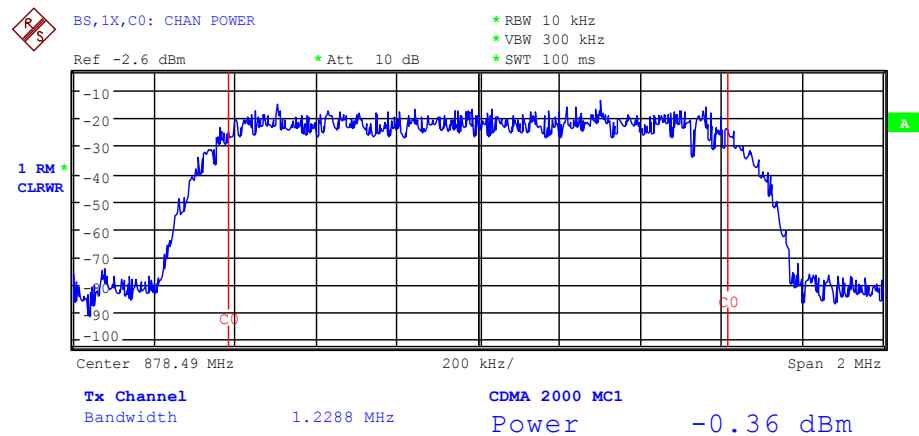


Fig. 6–1 Power measurement in the 1.2288 MHz transmission channel

The softkey enables SPECTRUM mode with defined settings:

The following user-specific settings are not modified on the first access following presetting: Level parameters Center Frequency + Frequency Offset All trigger settings	
ADJACENT CHAN POWER	ON
ACP STANDARD	cdma2000 MC1 (MC1 simply stands for multi-carrier, i.e. a single carrier)
NO OF ADJ CHANNELS	0 (main channel only)
FREQUENCY SPAN	2 MHz


Departing from this setting, the analyzer can be operated in all the functions it features in SPECTRUM mode, i.e. all measurement parameters can be adapted to a specific measurement.

To restore adapted measurement parameters, the following parameters are saved on exiting and are set again on <u>re-entering</u> this measurement: Level parameters RBW, VBW Sweep time	
--	--

IEC bus command: :CONF:CDP:MEAS POW
 Query of results: :CALC:MARK:FUNC:POW:RES? CPOW

Measuring adjacent channel power – ACLR

MEAS key or MEAS hot key

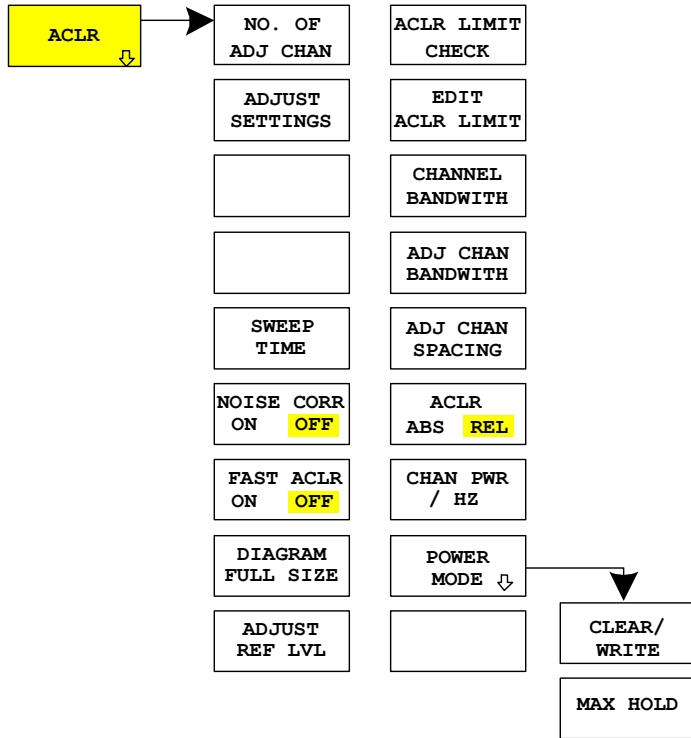

The ACLR (Adjacent Channel Leakage Power Ratio) softkey enables measurement of the adjacent channel power. The settings and limits are taken from the spurious emissions measurement defined in the cdma2000 specification.

The analyzer measures the power of the useful channel and of the adjacent channels on the left and right sides. In the default setting, only two adjacent channels are taken into account. Measurement results are displayed beneath the measurement screen.

The limits depend on the band class setting (BAND CLASS softkey).

The ACLR limit check can be enabled or disabled by means of the ACLR LIMIT CHECK softkey.

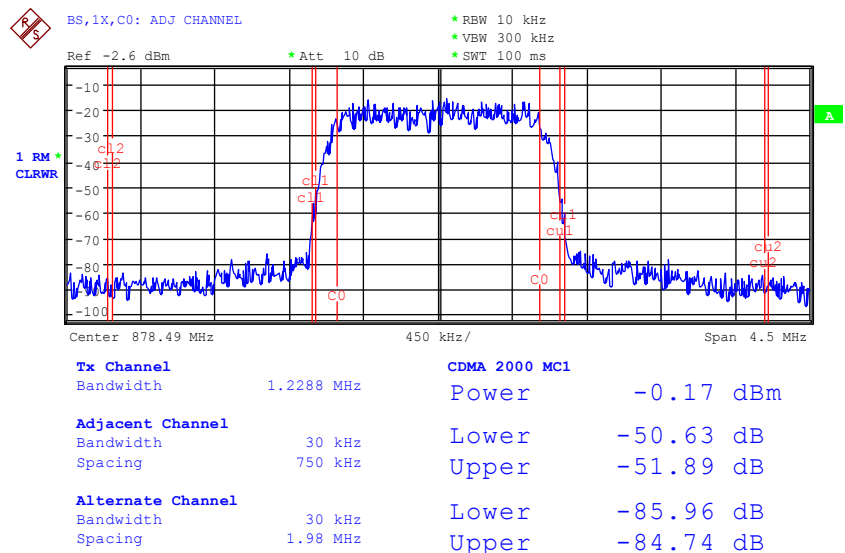


Fig. 6–2 Measuring adjacent channel power

The softkey enables SPECTRUM mode with defined settings:

The following user-specific settings are not modified on the first access following presetting: Level parameters Center Frequency + Frequency Offset All trigger settings	
ADJACENT CHAN POWER	ON
ACP STANDARD	cdma2000 MC1
NO OF ADJ. CHANNELS	2

Table 6-1 ACLR settings for band classes 0, 2, 3, 5, 9, 10, 11 and 12

Adjacent channel type	Spacing	RBW	Rel. Limit	Abs. Limit
Adjacent	750 kHz	30 kHz	-45 dBc	none
Alternate	1.98 MHz	30 kHz	-60 dBc	-27 dBm
Alternate2	4.00 MHz	30 kHz	-60 dBc	-27 dBm

Table 6-2 ACLR settings for band class 7

Adjacent channel type	Spacing	RBW	Rel. Limit	Abs. Limit
Adjacent	750 kHz	30 kHz	-45 dBc	none
Alternate	1.98 MHz	30 kHz	-60 dBc	-27 dBm
Alternate2	3.25 MHz	30 kHz	none	-39.2 dBm

Table 6-3 ACLR settings for band classes 1, 4, 8, 14 and 15

Adjacent channel type	Spacing	RBW	Rel. Limit	Abs. Limit
Adjacent	885 kHz	30 kHz	-45 dBc	none
Alternate	1.25 MHz	30 kHz	-45 dBc	-9 dBm
Alternate2	1.98 MHz	30 kHz	-55 dBc	-22 dBm

Table 6-4 ACLR settings for band class 6


Adjacent channel type	Spacing	RBW	Rel. Limit	Abs. Limit
Adjacent	885 kHz	30 kHz	-45 dBc	none
Alternate	1.25 MHz	30 kHz	none	-13 dBm
Alternate2	1.45 MHz	30 kHz	none	-13 dBm

Departing from this setting, the analyzer can be operated in all the functions it features in SPECTRUM mode, i.e. all measurement parameters can be adapted to a specific measurement.

To restore adapted measurement parameters, the following parameters are saved on exiting and are set again on <u>re-entering</u> this measurement: Level parameters RBW, VBW Sweep time SPAN NO OF ADJ. CHANNELS FAST ACLR MODUS
--

IEC/IEEE bus command: :CONF:CDP:MEAS ACLR

Query of results: :CALC:MARK:FUNC:POW:RES? ACP

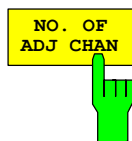

The *NO. OF ADJ CHAN* softkey enables input of the number $\pm n$ of adjacent channels which are taken into account for the adjacent channel power measurement.


Numbers between 0 and 12 can be entered.

The following measurements are performed depending on the number of channels.

- 0 Only the channel power is measured.
- 1 The channel power and the power of the upper and lower adjacent channel are measured.
- 2 The channel power, the power of the upper and lower adjacent channel and of the next upper and lower channel (alternate channel 1) are measured.
- 3 The channel power, the power of the upper and lower adjacent channel, the next higher and lower channel (alternate channel 1) and the next but one higher and lower channel (alternate channel 2) are measured.

With higher numbers the procedure is expanded accordingly.

IEC/IEEE bus command: `::SENS:POW:ACH:ACP 2`

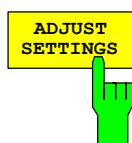

The *ADJUST SETTINGS* softkey automatically optimizes the unit settings of the analyzer for the selected power measurement.

All the analyzer settings relevant to power measurement within a specific frequency range (channel bandwidth) are then optimized as a function of the channel configuration (channel bandwidth, channel spacing):

- Frequency span:
 - The frequency span must cover at least all the channels that have to be taken into account.
 - When the channel power is measured, the span is set as twice the channel bandwidth.
 - The span setting depends for adjacent channel power measurement on the channel spacing and the channel bandwidth of the adjacent channel ADJ, ALT1 or ALT2 farthest away from the transmission channel.
- Resolution bandwidth $RBW \leq 1/40$ of channel bandwidth
- Video bandwidth $VBW \geq 3 \times RBW$.
- Detector RMS detector

Trace math and trace averaging functions are disabled.

The reference level is not affected by *ADJUST SETTINGS*. It has to be adjusted separately by means of *ADJUST REF LVL*.

Adjustment is performed once; if necessary, the unit settings can be modified afterwards.

IEC/IEEE bus command: `::SENS:POW:ACH:PRES ACP|CPOW|OBW`

For manual setting of the test parameters different from the settings made with *ADJUST SETTINGS*, the following must be taken into account for the different parameters:

Frequency span The frequency span must include at least all the channels needing to be measured.
This is the channel bandwidth when channel power is measured.
If the frequency span is large compared with the analyzed frequency section (or frequency sections), only a few pixels on the trace are available for the measurement.

Resolution bandwidth (RBW) To ensure an acceptable measurement speed and also the necessary selectivity (for inhibiting spectral components outside the channel you want to measure, especially the adjacent channels), the resolution bandwidth must be selected so that it is neither too small nor too large. As a rule of thumb, the resolution bandwidth should be set to values between 1% and 4% of the channel bandwidth. A larger resolution bandwidth can be set if the spectrum within and around the channel you want to measure has a flat characteristic.

Video bandwidth (VBW) For a correct power measurement, the video signal must not be limited in terms of bandwidth. A restricted band of the logarithmic video signal would result in averaging and thus in a too low indication of the power (-2.51 dB for very low video bandwidths). The video bandwidth should therefore be at least three times the resolution bandwidth.

The *ADJUST SETTINGS* softkey sets the video bandwidth (VBW) as a function of the channel bandwidth as follows:

$$VBW \geq 3 \times RBW.$$


Detector The *ADJUST SETTINGS* softkey selects the RMS detector.
The RMS detector is selected because it always indicates the power correctly irrespective of the characteristics of the signal you want to measure. In principle, even the sample detector would be possible. However, it would lead to unstable results due to the limited number of trace pixels for calculating the power in the channel. Averaging, which is frequently performed to stabilize measurement results, leads to the level indication being too low and should therefore be avoided. The reduction in the displayed power depends on the number of averages and the signal characteristics in the channel you want to measure.



The *SWEEP TIME* softkey activates the entry of the sweep time. With the RMS detector, a longer sweep time increases the stability of the measurement results.


The function of the softkey is identical to the softkey *SWEEP TIME MANUAL* in the menu *BW*.

IEC/IEEE-bus command: `:SWE:TIM <value>`

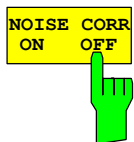

If the *NOISE CORR ON/OFF* softkey is activated, the results will be corrected by the instrument's inherent noise, which increases the dynamic range. When the function is switched on, a reference measurement of the instrument's inherent noise is carried out. The noise power measured is then subtracted from the power in the channel that is being examined. The inherent noise of the instrument depends on the selected center frequency, resolution bandwidth and level setting. Therefore, the correction function is disabled whenever one of these parameters is changed. A disable message is displayed on the screen. To enable the correction function in conjunction with the changed setting, press the softkey once more. A new reference measurement is carried out.

IEC/IEEE-bus command: `:SENS:POW:NCOR ON`

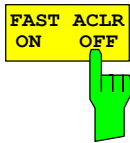

The *FAST ACLR* softkey toggles between measurement by the IBW method (*FAST ACLR OFF*) and the time domain method (*FAST ACLR ON*).

With *FAST ACLR ON*, the power measurement is performed in the different channels in the time domain. The analyzer adjusts its center frequency in succession to the different channel center frequencies and measures the power with the set measuring time (i.e. sweep time/number of measured channels). In doing so, the RBW filters suitable for the selected standard and frequency offset are used.

The RMS detector is used for correct power measurement. Consequently, no software correction factors are necessary.


Measure values are displayed in a table, the power in the useful channel being output in dBm and the power in the adjacent channels in dBm (*ACLR ABS*) or dB (*ACLR REL*).

Selection of the sweep time (i.e. measuring time) depends on the desired reproducibility of results. Reproducibility of the results increases with sweep time since power measurement is then performed over a longer period of time.

As a rule of thumb, it is safe to assume for a reproducibility of 0.5 dB (99% of the measurements are within 0.5 dB of the true measured value) that approximately 500 uncorrelated measured values are necessary (this applies to white noise). Measured values are assumed to be uncorrelated when their time interval corresponds to the reciprocal of the measurement bandwidth (i.e. $1/BW$).


For cdma2000 the measurement bandwidth is 10 kHz, i.e. measured values at an interval of 10 μ s are assumed to be uncorrelated. Thus a measurement time (sweep time) of 50 ms per channel is required for 500 measured values. This is the default sweep time which the analyzer sets in coupled mode. Approximately 5000 measured values (i.e. the measurement time has to be extended to 500 ms) are required for a reproducibility of 0.1 dB (99% of all measurements are within 0.1 dB of the true measured values).

IEC/IEEE bus command: `:SENS:POW:HSP ON`

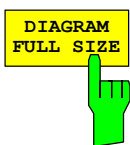


The soft key *DIAGRAM FULL SIZE* switches the diagram to full size.

IEC/IEEE bus command: `-`

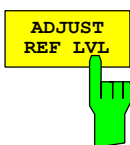

The *ADJUST REF LVL* softkey adjusts the reference level of the analyzer to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without the analyzer being overloaded or the dynamic response being limited by a too low signal-to-noise ratio. Since the measurement bandwidth is considerably lower for channel power measurements than the signal bandwidth, the signal path may be overloaded although the trace is still well below the reference level.

IEC/IEEE bus command: `:SENS:POW:ACH:PRES:RLEV`

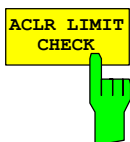

The *ACLR LIMIT CHECK* softkey enables and disables the limit check for the ACLR measurement.

IEC/IEEE bus command: `:CALC:LIM:ACP ON`
`:CALC:LIM:ACP:ACH:RES?`
`:CALC:LIM:ACP:ALT1..11:RES?`



The default settings of limits are defined at the start of the adjacent channel power measurement as a function of the selected band class (refer to the BAND CLASS softkey), as in the tables on page 6.4. Similarly, the values in these tables are restored on a change of band class. After the band class has been selected, a table can be opened in the ACLR measurement, however, by means of the *EDIT ACLR LIMITS* softkey the limits for the ACLR measurement can be modified in the table..

ACP LIMITS				
CHAN	RELATIVE LIMIT CHECK		ABSOLUTE LIMIT CHECK	
	VALUE	ON	VALUE	ON
ADJ	-45 dBc	√	0 dBm	
ALT1	-60 dBc	√	-27 dBm	
ALT2	-60 dBc	√	-27 dBm	√


The following rules apply to limits:

- A separate limit can be defined for each of the adjacent channels. The limit applies simultaneously to the lower and upper adjacent channels.
- A relative limit and/or an absolute limit can be defined. Checks of both limits can be enabled independently of each other.
- Compliance with the active limits is checked independently of whether the limits are absolute or relative and whether the measurement itself is performed in absolute levels or at relative signal intervals. If both checks are active and if the higher of the two limits has been exceeded, the measured value concerned is identified.

Note: Measured values which exceed the limit are preceded by an asterisk and identified in red.

IEC/IEEE bus command:

```
:CALC:LIM:ACP ON
:CALC:LIM:ACP:ACH 0dB,0dB
:CALC:LIM:ACP:ACH:STAT ON
:CALC:LIM:ACP:ACH:ABS -10dBm,-10dBm
:CALC:LIM:ACP:ACH:ABS:STAT ON
:CALC:LIM:ACP:ALT1 0dB,0dB
:CALC:LIM:ACP:ALT1:STAT ON
:CALC:LIM:ACP:ALT1:ABS -10dBm,-10dBm
:CALC:LIM:ACP:ALT1:ABS:STAT ON
:CALC:LIM:ACP:ALT2..11 0dB,0dB
:CALC:LIM:ACP:ALT2..11:STAT ON
:CALC:LIM:ACP:ALT2..11:ABS -10dBm,-10dBm
:CALC:LIM:ACP:ALT2..11:ABS:STAT ON
```

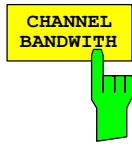


The *CHANNEL BANDWIDTH* softkey enables entry of the channel bandwidth for the transmission channel.

The useful channel bandwidth is normally determined by the transmission procedure. The default setting of cdma2000 measures a channel bandwidth of 1.2288 MHz.

When measuring by the IBW method (*FAST ACLR OFF*), the channel bandwidth is represented on the screen by two vertical lines to the left and right of the center of the screen. This means that a visual check can be made to determine whether the whole power of the signal being measured is within the selected channel bandwidth.

With the time domain method (*FAST ACLR ON*), the measurement is performed in zero span, the channel limits are not identified here. The analyzer provides all available channel filters for selection of the channel bandwidth entry. Any channel bandwidths deviating from this cannot be set. Should deviating channel bandwidths be necessary, perform the measurement by the IBW method.

IEC/IEEE bus command: `:SENS:POW:ACH:BWID 1.2288MHz`

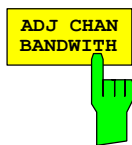

The *ADJ CHAN BANDWIDTH* softkey opens a table for defining the channel bandwidths for the adjacent channels.


ACP CHANNEL BW	
CHAN	BANDWIDTH
ADJ	30 kHz
ALT1	30 kHz
ALT2	30 kHz

When using the IBW method (*FAST ACLR OFF*), enter the bandwidths of the different adjacent channels numerically. Since all adjacent channel frequently have the same bandwidth, entering the adjacent channel bandwidth (*ADJ*) also sets the other channels *Alt1* and *Alt2* to the bandwidth of the adjacent channel. This means that only one value has to be entered when adjacent channel bandwidths are identical. The procedure is similar for the *Alt2* channels (alternate channels 2) with regard to entering bandwidth of the *Alt1* channel (alternate channel 1).

Note: *The bandwidths can be set independently of each other by overwriting the table from top to bottom.*

With the time domain method (*FAST ACLR ON*), the adjacent channel bandwidths are selected from the list of available channel filters. Use the IBW method for deviating adjacent channel bandwidths.

IEC/IEEE bus command: `:SENS:POW:ACH:BWID:ACH 30kHz`
`:SENS:POW:ACH:BWID:ALT1 30kHz`
`:SENS:POW:ACH:BWID:ALT2..11 30kHz`

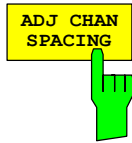


The *ADJ CHAN SPACING* softkey opens a table for defining the channel spacings.

CHANNEL SPACING	
CHAN	SPACING
ADJ	750 kHz
ALT1	1.98 MHz
ALT2	4.00 MHz

Since adjacent channels frequently have identical spacings, entering the adjacent channel spacing (ADJ) sets channel ALT1 to twice and channel ALT2 to three times the channel spacing of the adjacent channel. This means that only one value has to be entered when channel spacings are identical. The procedure is similar with Alt2 channels when the bandwidth of the Alt1 channel is entered.

Note: The channel spacings can be set independently of each other by overwriting the table from top to bottom.

```
IEC/IEEE bus command: :SENS:POW:ACH:SPAC:ACH 750kHz
                        :SENS:POW:ACH:SPAC:ALT1 1.98MHz
                        :SENS:POW:ACH:SPAC:ALT2..11 4MHz
```

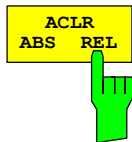


The *ACLR ABS/REL* softkey (channel power absolute/relative) toggles between absolute and relative measurement of the power in the channel.

ACLR ABS The absolute value of the power in the transmission channel and the adjacent channels is displayed in the unit of the Y-axis such as dBm or dBμV.

ACLR REL In the case of adjacent channel power measurement (*NO. OF ADJ CHAN > 0*), the level of the adjacent channels is displayed relative to the level of the transmission channel in dBc.

With linear scaling of the Y-axis, the relative power (CP/CP_{ref}) of the new channel to the reference channel is displayed. With dB scaling, the logarithmic ratio $10 \cdot \lg(CP/CP_{ref})$ is displayed. This means that the relative channel power measurement can also be used for universal adjacent channel power. Each channel is measured separately in this latter instance.


```
IEC/IEEE bus command: :SENS:POW:ACH:MODE ABS
```

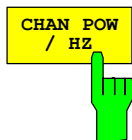

The *CHAN POW / HZ* softkey toggles between measurement of the total power in the channel and measurement of the power in the channel referred to 1 Hz of bandwidth.

The conversion factor is $10 \cdot \lg \frac{1}{\text{Channel} \cdot \text{Bandwidth}}$.

```
IEC/IEEE bus command: :CALC:MARK:FUNC:POW:RES:PHZ ON|OFF
```

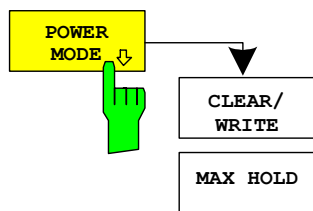


The *POWER MODE* sub menu allows to change between the normal (*CLEAR/WRITE*) and the max hold power mode. In the *CLEAR/WRITE* the channel power and the adjacent channel powers are calculated directly from the current trace. In *MAX HOLD* mode the power values are still derived from the current trace, but they are compared with a maximum algorithm to the previous power value. The greater value is remained.

IEC bus command: :CALC:MARK:FUNC:POW:MODE WRIT|MAXH

Measurement of Multi Carrier Adjacent-Channel Power – MULT CARR ACLR

MEAS key or MEAS hot key

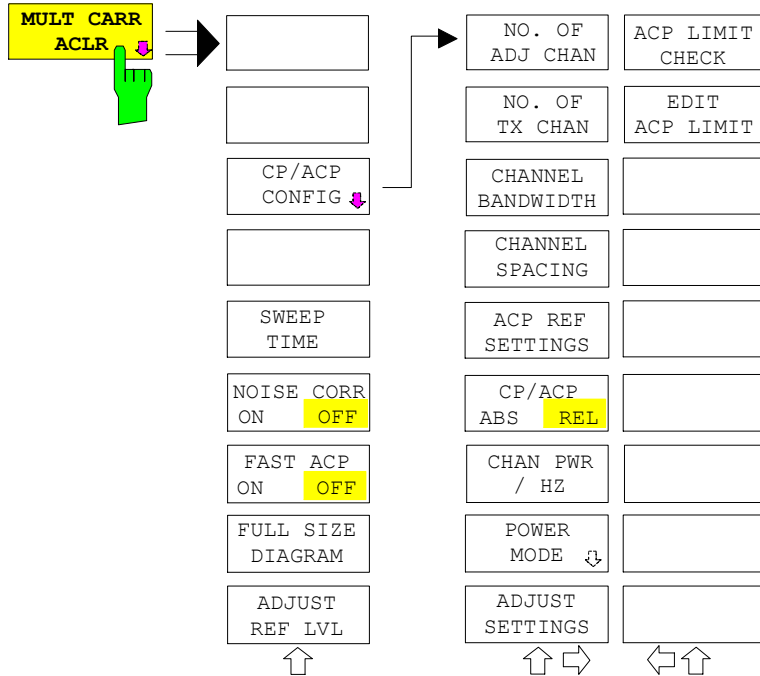

The *MULT CARR ACLR* (Multi Carrier Adjacent Channel Leakage Power Ratio) softkey enables measurement of the multi carrier adjacent channel power. The settings and limits are taken from the spurious emissions measurement defined in the cdma2000 specification.

The analyzer measures the power of the 4 useful channels and of the adjacent channels on the left and right sides. In the default setting, only two adjacent channels are taken into account. Measurement results are displayed beneath the measurement screen.

The limits depend on the band class setting (*BAND CLASS* softkey).

The ACLR limit check can be enabled or disabled by means of the *ACLR LIMIT CHECK* softkey.

The following user-specific settings are not modified on the first access following presetting:

- Level parameters
- All trigger settings
- The center frequency setting is adjusted on first entry by 1/2 of the TX spacing, thus the measurement on the TX channel can continue.


ADJACENT CHAN POWER	ON
ACP STANDARD	cdma2000 MC1
NO OF TX CHANNELS	4
NO OF ADJ. CHANNELS	2
Further band class depended settings are identical to the ACLR measurement.	

Departing from this setting, the analyzer can be operated in all the functions it features in SPECTRUM mode, i.e. all measurement parameters can be adapted to a specific measurement.

To restore adapted measurement parameters, the following parameters are saved on exiting and are set again on re-entering this measurement:

- Level parameters
- RBW, VBW
- Sweep time
- SPAN
- NO OF TX CHANNELS
- NO OF ADJ. CHANNELS
- FAST ACLR MODUS

IEC/IEEE bus command: :CONF:CDP:MEAS MCAC
 Query of results: :CALC:MARK:FUNC:POW:RES? MCAC

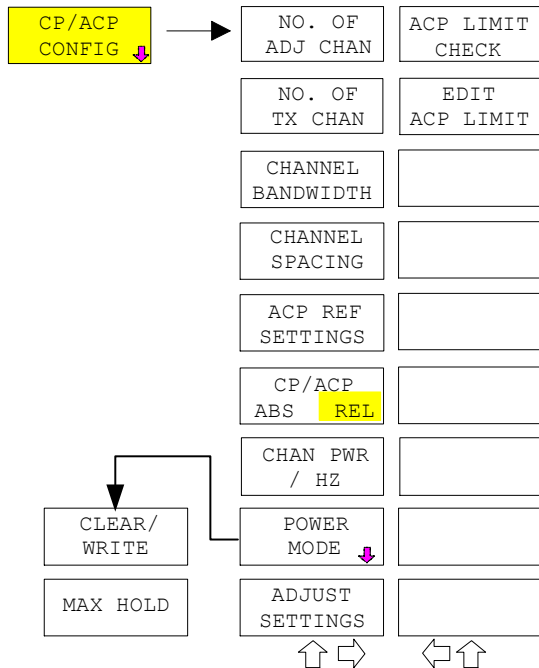

The *CP/ACP CONFIG* softkey opens a submenu for configuration of the multi carrier adjacent channel power measurement.

The channel configuration includes the number of channels to be measured, the channel bandwidths (*CHANNEL BANDWIDTH*), and the channel spacings (*CHANNEL SPACING*).

Limit values can additionally be specified for the adjacent-channel power (*ACP LIMIT CHECK* and *EDIT ACP LIMITS*) which are checked for compliance during the measurement.

NO. OF ADJ CHAN



This softkey behaves as in the adjacent channel power measurement – ACLR. Refer there.

NO. OF TX CHAN



The *NO. OF TX CHAN* softkey enables the entry of the number of carrier signals to be considered.

Numbers from 1 to 12 can be entered.

IEC/IEEE-bus command: SENS:POW:ACH:TXCH:COUN 4

CHANNEL BANDWIDTH



The *CHANNEL BANDWIDTH* softkey opens a table for defining the channel bandwidths for the transmission channels and the adjacent channels.

IEC/IEEE-bus command: POW:ACH:BWID:CHAN 1.2288MHz
 POW:ACH:BWID:ACH 30kHz
 POW:ACH:BWID:ALT1 30kHz
 POW:ACH:BWID:ALT2..11 30kHz


CHANNEL SPACING



The *CHANNEL SPACING* softkey opens a table for defining the channel spacings of the TX channel and the adjacent channels.

Note: The channel spacings can be set separately by overwriting the table from top to bottom.

IEC/IEEE-bus command: SENS:POW:ACH:SPAC:CHAN 1.25MHz
 SENS:POW:ACH:SPAC:ACH 750kHz
 SENS:POW:ACH:SPAC:ALT1 1.98MHz
 SENS:POW:ACH:SPAC:ALT2..11 4MHz

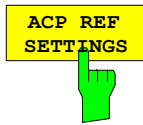

The *ACP REF SETTINGS* softkey opens a table for selecting the transmission channel to which the adjacent-channel relative power values should be referenced.

ACP REFERENCE CHANNEL
✓ TX CHANNEL 1
TX CHANNEL 2
TX CHANNEL 3
TX CHANNEL 4
TX CHANNEL 5
TX CHANNEL 6
TX CHANNEL 7
TX CHANNEL 8
TX CHANNEL 9
TX CHANNEL 10
TX CHANNEL 11
TX CHANNEL 12
MIN POWER TX CHANNEL
MAX POWER TX CHANNEL
LOWEST & HIGHEST CHANNEL


TX CHANNEL 1 – 12	Selection of one of channels 1 to 12.
MIN POWER TX CHANNEL	The transmission channel with the lowest power is used as a reference channel.
MAX POWER TX CHANNEL	The transmission channel with the highest power is used as a reference channel.
LOWEST & HIGHEST CHANNEL	The outer lefthand transmission channel is the reference channel for the lower adjacent channels, the outer righthand transmission channel that for the upper adjacent channels.

```
IEC/IEEE-bus command: POW:ACH:REF:TXCH:MAN 1
                       POW:ACH:REF:TXCH:AUTO MIN
                       POW:ACH:REF:TXCH:AUTO MAX
                       POW:ACH:REF:TXCH:AUTO LHIG
```




The *CP/ACP ABS/REL* softkey (channel power absolute/relative) switches between absolute and relative power measurement in the adjacent channels.

```
IEC/IEEE-bus command: POW:ACH:MODE ABS
```

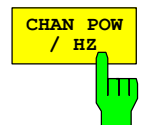


This softkey behaves as in the adjacent channel power measurement – ACLR. Refer there.

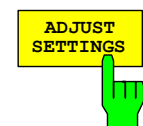

The *ADJUST SETTINGS* softkey automatically optimizes the instrument settings for the selected power measurement (see below). All instrument settings relevant for a power measurement within a specific frequency range (channel bandwidth) are optimized for the selected channel configuration (channel bandwidth, channel spacing):

```
IEC/IEEE-bus command: POW:ACH:PRES MCAC
```

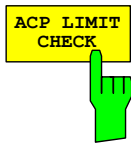

This softkey behaves as the `ACLR LIMIT CHECK` softkey in the adjacent channel power measurement – ACLR. Refer there.




This softkey behaves as in the `EDIT ACLR LIMIT` softkey in the adjacent channel power measurement – ACLR. Refer there.



The function of the softkey is identical to the softkey `SWEEP TIME MANUAL` in the menu `BW`.


IEC/IEEE–bus command: `SWE:TIM <value>`

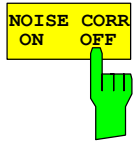


This softkey behaves as in the adjacent channel power measurement – ACLR. Refer there.



This softkey behaves as in the adjacent channel power measurement – ACLR. Refer there.

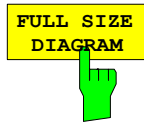

Dieser Softkey verhält sich wie bei der Messung der Nachbarkanalleistung – ACLR, siehe dort.

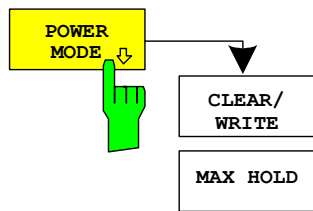

The `POWER MODE` sub menu allows to change between the normal (`CLEAR/WRITE`) and the max hold power mode. In the `CLEAR/WRITE` mode the channel power and the adjacent channel powers are calculated directly from the current trace. In `MAX HOLD` mode the power values are still derived from the current trace, but they are compared with a maximum algorithm to the previous power value. The greater value is remained.

IEC/IEEE bus command:

`:CALC:MARK:FUNC:POW:MODE WRIT|MAXH`




The `ADJUST REF LVL` softkey adjusts the reference level of the instrument to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the instrument or limiting the dynamic range by a too small S/N ratio.

Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is still significantly below the reference level.

IEC/IEEE–bus command: `SENS:POW:ACH:PRES:RLEV`

Signal power check – SPECTRUM EM MASK

MEAS key or MEAS hot key

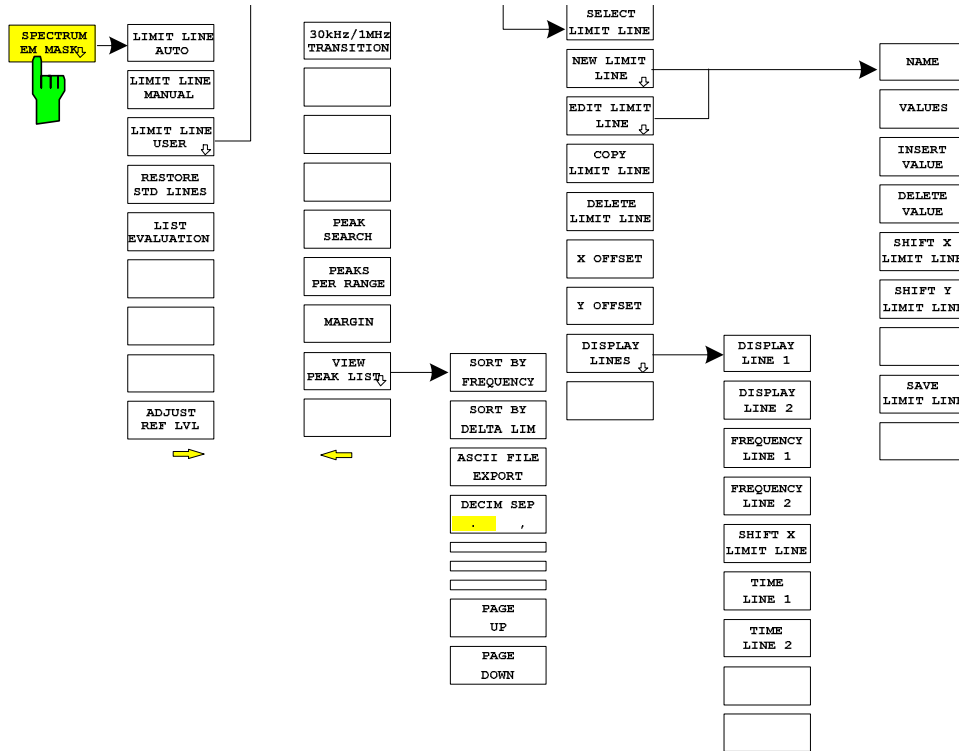

The *SPECTRUM EM MASK* (Spectrum Emission Mask) softkey measures the cdma2000 signal power in defined offsets from the carrier and compares the power values with the spurious emission mask, specified in the cdma2000 specification, in the near-carrier range from -4 MHz to 4 MHz.

The limits depend on the band class setting (*BAND CLASS* softkey).

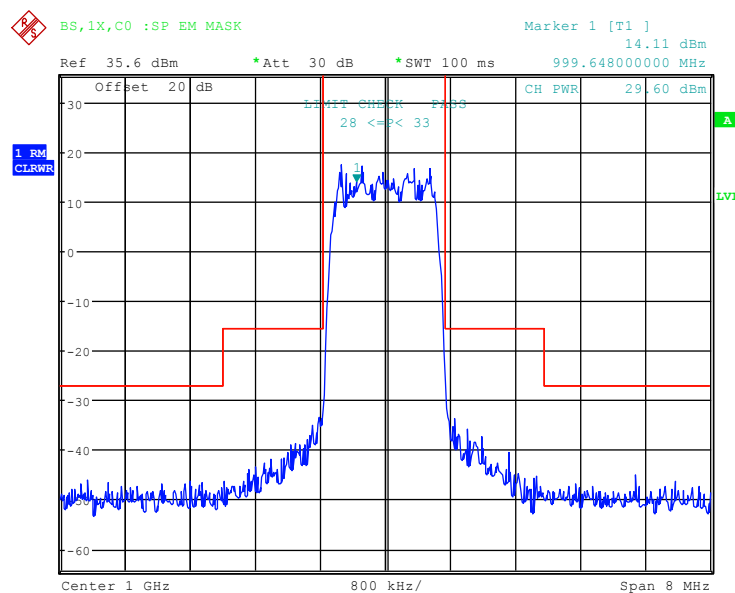


Fig. 6-3 Measurement of the spectrum emission mask.

The softkey enables SPECTRUM mode with defined settings:

The following user-specific settings are not modified on the first access following presetting:

Level parameters
Center Frequency + Frequency Offset
All trigger settings

ADJACENT CHAN POWER	ON
ACP STANDARD	cdma2000 MC1
NO OF ADJ. CHANNELS	0
FREQUENCY SPAN	8 MHz
SWEEP TIME	100 ms
DETECTOR	RMS

Departing from these settings, the analyzer can be operated in many functions featured in SPECTRUM mode. Changing of the RBW and the VBW are limited because they are set by the definition of the limits.

To restore adapted measurement parameters, the following parameters are saved on exiting and are set again on re-entering this measurement:

Level parameters
Sweep time
SPAN

IEC/IEEE bus command :CONF:CDP:MEASu ESP

Query of result of limit line: :CALC:LIM:FAIL?

Query of results of worst fail :CALC:LIM:ESP:CHECK:X?

:CALC:LIM:ESP:CHECK:Y?

LIMIT LINE
AUTO



The *LIMIT LINE AUTO* softkey automatically selects the limit line after the power in the used channel has been determined. If the measurement is performed in *CONTINUOUS SWEEP* and if the channel power varies from sweep to sweep, it can result in continuous replotting of the limit line.

The softkey is enabled when the spectrum emission mask measurement is activated.

IEC/IEEE bus command: :CALC:LIM:ESP:MODE AUTO

LIMIT LINE
MANUAL



The *LIMIT LINE MANUAL* softkey gives the user an opportunity to select the limit line manually. If this softkey is selected, the channel power measurement is not used for selecting the limit line but only for determining its relative components. The power for the different frequency offsets is compared with the limit line specified by the user.

The softkey opens a table with all the predefined limit lines on the unit:

Name of limit line

P >= 33 dBm

28 dBm <= P < 33 dBm

P < 28 dBm

The name of the limit line specifies the expected power range for which the limit line was defined.

IEC/IEEE bus command: :CALC:LIM:ESP:MODE MANuAl

:CALC:LIM:ESP:VALue 28

'Selects line 28 dBm <= P < 33 dBm

The definition of the limit line names is described at the *LIMIT LINE USER* softkey.

Table 6–5 Band classes 0, 2, 3, 5, 9, 10, 11 and 12 for carrier power $P < 28$ dBm

Offset frequency	Limit	Type/name C2KB0CR	RBW
–4.00 MHz	–55 dBc	relative to carrier power	30 kHz
–1.98 MHz	–55 dBc	relative to carrier power	30 kHz
–1.98 MHz	–45 dBc	relative to carrier power	30 kHz
–750 kHz	–45 dBc	relative to carrier power	30 kHz
+750 kHz	–45 dBc	relative to carrier power	30 kHz
+1.98 MHz	–45 dBc	relative to carrier power	30 kHz
+1.98 MHz	–55 dBc	relative to carrier power	30 kHz
+4.00 MHz	–55 dBc	relative to carrier power	30 kHz

Table 6–6 Band classes 0, 2, 3, 5, 9, 10, 11 and 12 for carrier power $28 \text{ dBm} \leq 33 \text{ dBm}$

Offset frequency	Limit	Type/name C2KB0BA and C2KB0BR	RBW
–4.00 MHz	–27 dBm	Absolute	30 kHz
–1.98 MHz	–27 dBm	Absolute	30 kHz
–1.98 MHz	–45 dBc	relative to carrier power	30 kHz
–750 kHz	–45 dBc	relative to carrier power	30 kHz
+750 kHz	–45 dBc	relative to carrier power	30 kHz
+1.98 MHz	–45 dBc	relative to carrier power	30 kHz
+1.98 MHz	–27 dBm	Absolute	30 kHz
+4.00 MHz	–27 dBm	Absolute	30 kHz

Table 6–7 Band classes 0, 2, 3, 5, 9, 10, 11 and 12 for carrier power $P \geq 33 \text{ dBm}$

Offset frequency	Limit	Type/name C2KB0AR	RBW
–4.00 MHz	–60 dBc	relative to carrier power	30 kHz
–1.98 MHz	–60 dBc	relative to carrier power	30 kHz
–1.98 MHz	–45 dBc	relative to carrier power	30 kHz
–750 kHz	–45 dBc	relative to carrier power	30 kHz
+750 kHz	–45 dBc	relative to carrier power	30 kHz
+1.98 MHz	–45 dBc	relative to carrier power	30 kHz
+1.98 MHz	–60 dBc	relative to carrier power	30 kHz
+4.00 MHz	–60 dBc	relative to carrier power	30 kHz

The limits for band class 7 are derived from band class 0. In addition a -46 dBm/6.25 kHz limit is defined between 3.25 MHz and 4 MHz. This limit is increased by 6.8 dB so that the 30 kHz resolution filter can be used for the measurement. The 30 kHz filter detects more power than the 6.25 kHz filter ($10 \log 30 \text{ kHz} - 10 \log 6.25 \text{ kHz} = 6.8 \text{ dB}$). Hence the limit is $-46 \text{ dBm} + 6.8 \text{ dB} = -39.2 \text{ dBm}$.

Table 6–8 Band class 7 for carrier power $P < 28 \text{ dBm}$

Offset frequency	Limit	Type/name C2KB7CA and C2KB7R	RBW
-4.00 MHz	-39.2 dBm	Absolute	30 kHz
-3.25 MHz	-39.2 dBm	Absolute	30 kHz
-3.25 MHz	-55 dBc	relative to carrier power	30 kHz
-1.98 MHz	-55 dBc	relative to carrier power	30 kHz
-1.98 MHz	-45 dBc	relative to carrier power	30 kHz
-750 kHz	-45 dBc	relative to carrier power	30 kHz
+750 kHz	-45 dBc	relative to carrier power	30 kHz
+1.98 MHz	-45 dBc	relative to carrier power	30 kHz
+1.98 MHz	-55 dBc	relative to carrier power	30 kHz
+3.25 MHz	-55 dBc	relative to carrier power	30 kHz
+3.25 MHz	-39.2 dBm	Absolute	30 kHz
+4.00 MHz	-39.2 dBm	Absolute	30 kHz

Table 6–9 Band class 7 for carrier power $28 \text{ dBm} \leq P < 33 \text{ dBm}$

Offset frequency	Limit	Type/name C2KB7BA and C2KB7BR	RBW
-4.00 MHz	-39.2 dBm	Absolute	30 kHz
-3.25 MHz	-39.2 dBm	Absolute	30 kHz
-3.25 MHz	-27 dBm	Absolute	30 kHz
-1.98 MHz	-27 dBm	Absolute	30 kHz
-1.98 MHz	-45 dBc	relative to carrier power	30 kHz
-750 kHz	-45 dBc	relative to carrier power	30 kHz
+750 kHz	-45 dBc	relative to carrier power	30 kHz
+1.98 MHz	-45 dBc	relative to carrier power	30 kHz
+1.98 MHz	-27 dBm	Absolute	30 kHz
+3.25 MHz	-27 dBm	Absolute	30 kHz
+3.25 MHz	-39.2 dBm	Absolute	30 kHz
+4.00 MHz	-39.2 dBm	Absolute	30 kHz

Table 6–10 Band class 7 for carrier power $P \geq 33 \text{ dBm}$

Offset frequency	Limit	Type/name C2KB7AA and C2KB7AR	RBW
-4.00 MHz	-39.2 dBm	Absolute	30 kHz
-3.25 MHz	-39.2 dBm	Absolute	30 kHz
-3.25 MHz	-60 dBc	relative to carrier power	30 kHz
-1.98 MHz	-60 dBc	relative to carrier power	30 kHz
-1.98 MHz	-45 dBc	relative to carrier power	30 kHz
-750 kHz	-45 dBc	relative to carrier power	30 kHz
+750 kHz	-45 dBc	relative to carrier power	30 kHz
+1.98 MHz	-45 dBc	relative to carrier power	30 kHz
+1.98 MHz	-60 dBc	relative to carrier power	30 kHz
+3.25 MHz	-60 dBc	relative to carrier power	30 kHz
+3.25 MHz	-39.2 dBm	Absolute	30 kHz
+4.00 MHz	-39.2 dBm	Absolute	30 kHz

The limits for band classes 1, 4 and 8 are defined by separate limits. RBW switching is beneficial in this instance to speed up the measurement. The 1 MHz channel filter is used for the 1 MHz segments. The frequency range is divided into three sub-segments. The user's sweep time is then spread over the segments as follows (k=filter velocity factor k) :

Segment1: -4.00 to -2.25 MHz RBW = 1 MHzk = 850 SWT1 = SWT * 1/10
 Segment2: -2.25 to +2.25 MHzRBW = 30 kHzk = 2.5SWT2 = SWT * 8/10
 Segment3: +2.25 to 4.00 MHzRBW = 1 MHzk = 850SWT3 = SWT * 1/10

For bigger Spans than 4 MHz the sweeptime is adjusted in that way that all three segments are swept with the same filter velocity factor k.

For entering the limit "Stricter of" a check determines whether $P - 45 \text{ dBc} > -9 \text{ dBm}$. If this is the case, the measured value is compared with $P - 45 \text{ dBc}$, in all other cases with -9 dBm .

Table 6-11 Band classes 1, 4, 8, 14 and 15 for carrier power $P < 28 \text{ dBm}$

Offset frequency	Limit	Type/name C2KB1CA and C2KB1CR	RBW
-4.00 MHz	-13 dBm	absolute	1 MHz
-2.25 MHz	-13 dBm	absolute	1 MHz
-2.25 MHz	-50 dBc	relative to carrier power	30 kHz
-1.98 MHz	-50 dBc	relative to carrier power	30 kHz
-1.98 MHz	Stricter of: -45 dBc / -9 dBm	relative to carrier power/absolute	30 kHz
-1.25 MHz	Stricter of: -45 dBc / -9 dBm	relative to carrier power/absolute	30 kHz
-1.25 MHz	-45 dBc	relative to carrier power	30 kHz
-885 kHz	-45 dBc	relative to carrier power	30 kHz
+885 kHz	-45 dBc	relative to carrier power	30 kHz
+1.25 MHz	-45 dBc	relative to carrier power	30 kHz
+1.25 MHz	Stricter of: -45 dBc / -9 dBm	relative to carrier power/absolute	30 kHz
+1.98 MHz	Stricter of: -45 dBc / -9 dBm	relative to carrier power/absolute	30 kHz
+1.98 MHz	-50 dBc	relative to carrier power	30 kHz
+2.25 MHz	-50 dBc	relative to carrier power	30 kHz
+2.25 MHz	-13 dBm	absolute	1 MHz
+4.00 MHz	-13 dBm	absolute	1 MHz

Table 6–12 Band classes 1, 4, 8, 14 and 15 for carrier power $28 \text{ dBm} \leq P < 33 \text{ dBm}$

Offset frequency	Limit	Type/name C2KB1BA and C2KB1BR	RBW
–4.00 MHz	–13 dBm	absolute	1 MHz
–2.25 MHz	–13 dBm	absolute	1 MHz
–2.25 MHz	–22 dBm	absolute	30 kHz
–1.98 MHz	–22 dBm	absolute	30 kHz
–1.98 MHz	Stricter of: –45 dBc / –9 dBm	relative to carrier power/absolute	30 kHz
–1.25 MHz	Stricter of: –45 dBc / –9 dBm	relative to carrier power/absolute	30 kHz
–1.25 MHz	–45 dBc	relative to carrier power	30 kHz
–885 kHz	–45 dBc	relative to carrier power	30 kHz
+885 kHz	–45 dBc	relative to carrier power	30 kHz
+1.25 MHz	–45 dBc	relative to carrier power	30 kHz
+1.25 MHz	Stricter of: –45 dBc / –9 dBm	relative to carrier power/absolute	30 kHz
+1.98 MHz	Stricter of: –45 dBc / –9 dBm	relative to carrier power/absolute	30 kHz
+1.98 MHz	–22 dBm	absolute	30 kHz
+2.25 MHz	–22 dBm	absolute	30 kHz
+2.25 MHz	–13 dBm	absolute	1 MHz
+4.00 MHz	–13 dBm	absolute	1 MHz


Table 6–13 Band classes 1, 4, 8, 14 and 15 for carrier power $P \geq 33 \text{ dBm}$

Offset frequency	Limit	Type/name C2KB1AA and C2KB1AR	RBW
–4.00 MHz	–13 dBm	absolute	1 MHz
–2.25 MHz	–13 dBm	absolute	1 MHz
–2.25 MHz	–55 dBc	relative to carrier power	30 kHz
–1.98 MHz	–55 dBc	relative to carrier power	30 kHz
–1.98 MHz	Stricter of: –45 dBc / –9 dBm	relative to carrier power/absolute	30 kHz
–1.25 MHz	Stricter of: –45 dBc / –9 dBm	relative to carrier power/absolute	30 kHz
–1.25 MHz	–45 dBc	relative to carrier power	30 kHz
–885 kHz	–45 dBc	relative to carrier power	30 kHz
+885 kHz	–45 dBc	relative to carrier power	30 kHz
+1.25 MHz	–45 dBc	relative to carrier power	30 kHz
+1.25 MHz	Stricter of: –45 dBc / –9 dBm	relative to carrier power/absolute	30 kHz
+1.98 MHz	Stricter of: –45 dBc / –9 dBm	relative to carrier power/absolute	30 kHz
+1.98 MHz	–55 dBc	relative to carrier power	30 kHz
+2.25 MHz	–55 dBc	relative to carrier power	30 kHz
+2.25 MHz	–13 dBm	absolute	1 MHz
+4.00 MHz	–13 dBm	absolute	1 MHz

The limits for band class 6 are derived from the limits of band classes 1, 4 and 8. The difference is that there is no dependence on carrier power and there is a gradient between 1.45 and 2.25 MHz from the carrier center(?).

Table 6–14 Band class 6 for all carrier power values

Offset frequency	Limit	Type/name C2KB6_A and C2KB6_R	RBW
-4.00 MHz	-13 dBm	absolute	1 MHz
-2.25 MHz	-13 dBm	absolute	1 MHz
-2.25 MHz	-26.6 dBm	absolute	30 kHz
-1.45 MHz	-13 dBm	absolute	30 kHz
-1.25 MHz	-13 dBm	absolute	30 kHz
-1.25 MHz	-45 dBc	relative to carrier power	30 kHz
-885 kHz	-45 dBc	relative to carrier power	30 kHz
+885 kHz	-45 dBc	relative to carrier power	30 kHz
-1.25 MHz	-45 dBc	relative to carrier power	30 kHz
-1.25 MHz	-13 dBm	absolute	30 kHz
-1.45 MHz	-13 dBm	absolute	30 kHz
-2.25 MHz	-26.6 dBm	absolute	30 kHz
-2.25 MHz	-13 dBm	absolute	1 MHz
-4.00 MHz	-13 dBm	absolute	1 MHz

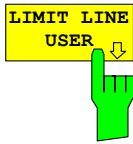

The *LIMIT LINE USER* softkey enables the creation of user-defined limit lines. The softkey opens the menus of the limit-line editor, which may be familiar from the basic unit. The limit lines created by the user are included in the table for *LIMIT LINE MANUAL*.

The following limit line settings are recommended for base station tests: Trace 1, Domain Frequency, X-Scaling relative, Y-Scaling absolute, Spacing linear, Unit dBm.

Unlike the default limit lines on the unit that conform to the standard specifications when the analyzer is supplied, the user-specified limit line can be specified for the whole frequency range (± 4.0 MHz from the carrier) only either relatively (referred to the reference level) or absolutely.

The supplied limit lines of AUTO and MANUAL modes can also be selected. The names are specified next to the type in the tables above and are defined as follows:

- 1) Standard in three characters
- 2) Link direction B for base station
- 3) Band class, with more than one band class the lowest digit is used
- 4) Power classes A, B, C or _ where A is the highest power class and _ is used when there is no dependency on power class.
- 5) Type differentiation: A for absolute and R for relative

Example with regard to cdma2000 band classes 0, 2, 3, 5, 9, 10, 11 and 12 for P <28 dBm:

```
C2K      : cdma2000
  B      : base station
  0      : lowest of band classes 0, 2, 3, 5 , 9 - 12
  C      : lowest of the three power classes
  R      : relative line
=====
C2KB0CR
```

The limit line names are shown in the table above next to the type.

IEC/IEEE bus command: refer to table of softkeys and their IEC bus commands



The *RESTORE STD LINES* softkey restores the limit lines defined in the standard to the state they were in when the firmware was installed. In this way unintended overwriting of the standard lines can be undone.

IEC/IEEE bus command: :CALC:LIM:ESP:RESTore




The *LIST EVALUATION* softkey reconfigures the SEM output to a split screen. In the upper half the trace with the limit line is shown. In the lower half the peak value list is shown. For every range of the spectrum emission defined by the standard the peak value is listed. For every peak value the frequency, the absolute power, the relative power to the channel power and the delta limit to the limit line is shown. As long as the delta limit is negative, the peak value is below the limit line. A positive delta indicates a failed value. The results are then colored in red, and a star is indicated at the end of the row, for indicating the fail on a black and white printout.

If the list evaluation is active, the peak list function is not available.

Since version 4.00 the peak list softkeys are moved to the side menu.

IEC/IEEE bus command: `:CALC1:PEAK:AUTO ON | OFF`

Mit diesem Befehl kann die Listenauswertung, die aus Gründen der Rückwärtskompatibilität nicht standardmäßig aktiv ist, aktiviert werden.

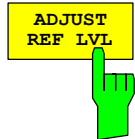


The *ADJUST REF LVL* softkey adjusts the reference level of the analyzer to the measured total signal power.

The softkey becomes active when the first sweep ends with measurement of the occupied bandwidth and the total power of the signal is known.

Adaptation of the reference level ensures that the signal path of the analyzer is not overloaded, and the dynamic response is not restricted by a reference level that is too low.

IEC/IEEE bus command: `:SENS:POW:ACH:PRES:RLEV`

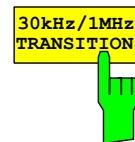

The *30kHz/1MHz TRANSITION* softkey specifies the offset frequency at which the resolution bandwidth is changed between 30k and 1MHz. The default value is dependent on the band class, refer to the tables above.

For multi carrier spectrum emission mask measurement this value can be extended. User specific limit lines shall than be defined and used.

IEC/IEEE bus command: `:CALC:LIM:ESP:TRAN
<numeric value>`



The *PEAK SEARCH* activates a single evaluation of spectrum emission mask. The limit mask - reduced by an overall margin - is checked against the trace. The fail positions are marked by crosses as long as not a next sweep is performed. It is recommended to use single sweep. Every value is added to a peak list which can be opened and saved in ASCII format or read out via an IEC/IEEE command.

The peaks are calculated using the same peak search algorithm like markers do. It is possible to define the peak excursion value via *MKR->NEXT*, softkey *PEAK EXCURSION*. In addition the worst fail of each fail area without a peak is marked and added to the peak list.

IEC/IEEE bus command: `:CALC:PEAK:IMM`



The *PEAKS PER RANGE* softkey defines how many peaks are searched for within one range. The ranges are according to the band class setting (SETTINGS -> BAND CLASS) e.g. for BAND CLASS 0, 2, 3, 5, 9, 10, 11 and 12:

- from -4.00 MHz to -1.98 MHz from the carrier,
- from -1.98 MHz to -0.75 MHz from the carrier,
- the area from -0.75 MHz to +0.75 MHz around the carrier,
- from +0.75 to +1.98 MHz from the carrier
- from +1.98 MHz to +4.00 MHz from the carrier.


The default value of *PEAKS PER RANGE* is 25.

IEC/IEEE bus command: `:CALC:PEAK:SUBR 1...50`



The *MARGIN* softkey defines an overall margin which is subtracted from the limit line to make the peak search more stronger. If the values of the trace are above the limit line minus margin value it will be marked with a cross as shown in the peak list. The *DELTA LIMIT* of the list will be positive thus indicating that only the margin and not the limit itself is reached. A negative sign would indicate the real fail. The default value of *MARGIN* is 6 dB.

IEC/IEEE bus command: :CALC:PEAK:MARG -200dB...200dB

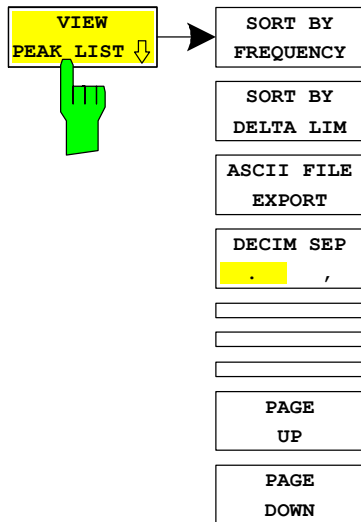

The *VIEW PEAK LIST* softkey opens the peak list. The list is empty if either no peak search (see softkey *PEAK SEARCH*) has been done, or if no peaks/fails have been found.

The list shows for every peak value the following entries:

- the range (LOWER side or UPPER side from carrier)
- the frequency,
- the level in dBc (relative to the carrier channel power)
- the delta level to the limit (negative deltas indicate a fail).

Mit einem hohen *MARGIN* von beispielsweise 200 dB und einem *PEAKS PER RANGE* von 1 ist es möglich, den schlechtesten Punkt von jedem Bereich zu erhalten, wenn man den Softkey *VIEW PEAK LIST* drückt. Um das Ganze in aufsteigender Frequenzreihenfolge zu sortieren, muss der Softkey *SORT BY FREQUENCY* gedrückt werden.

Die folgende Abbildung zeigt eine Spitzenwertliste:


VIEW PEAK LIST			
LOW-UP RANGE /REW	FREQUENCY	LEVEL dBc	DELTA LIMIT dB
L1.980-4.000M/30k	875.4020 MHz	-54.25	0.74
L0.750-1.980M/30k	875.7620 MHz	-54.41	-9.41
Inner Range /30k	879.2400 MHz	-55.62	-10.62
U0.750-1.980M/30k	880.2180 MHz	-54.07	-9.07
U1.980-4.000M/30k	881.1460 MHz	-53.66	1.33

Fig. 6-4 Peak list of spectrum emission mask

IEC/IEEE bus command: :TRAC? FINa11

The comma separated values are :

<freq1>, <level1>, <delta level 1>,
<freq2>, <level2>, <delta level 2>, ...

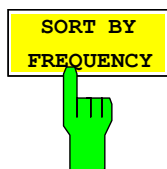

The *SORT BY FREQUENCY* softkey sorts the list in ascending order according to the column *FREQUENCY*.

IEC/IEEE bus command: --



The *SORT BY DELTA LIM* softkey sorts the list in descending order according to the column *DELTA LIMIT*

IEC/IEEE bus command: --



The *ASCII FILE EXPORT* softkey exports the peak list in ASCII format to a file.

The complete output format is similar to the trace export. The peak values within the file are comma separated in the format:

```
<trace no 1>, <freq1>, <level1>, <delta level 1>,
<trace no 2>, <freq2>, <level2>, <delta level 2>,
...
```

The trace no is always 1.

IEC/IEEE bus command: :MMEM:STOR:FIN 'A:\final.dat'




Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between default separators '.' (decimal point) and ',' (comma) using softkey *DECIM SEP*.

IEC/IEEE bus command: :FORM:DEXP:DSEP POIN | COMM

Measuring bandwidth occupied by the signal – OCCUPIED BANDWIDTH

MEAS key or MEAS hot key

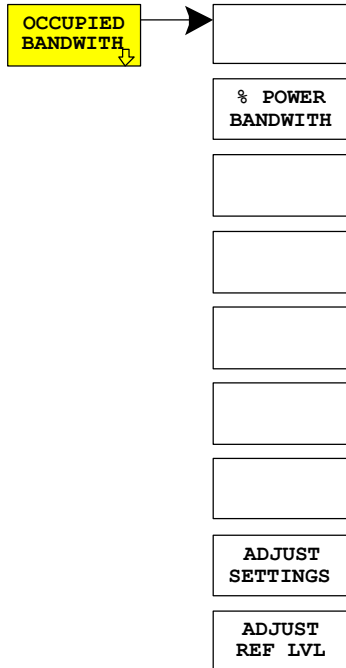

The *OCCUPIED BANDWIDTH* softkey enables measurement of the bandwidth occupied by the signal. This measurement determines the bandwidth in which – in the initial state – 99% of the signal power will be found. The percentage signal power required to be included in the bandwidth measurement can be modified. The bandwidth and the frequency markers for the measurement are displayed in the Marker Info field in the top right corner of the display.

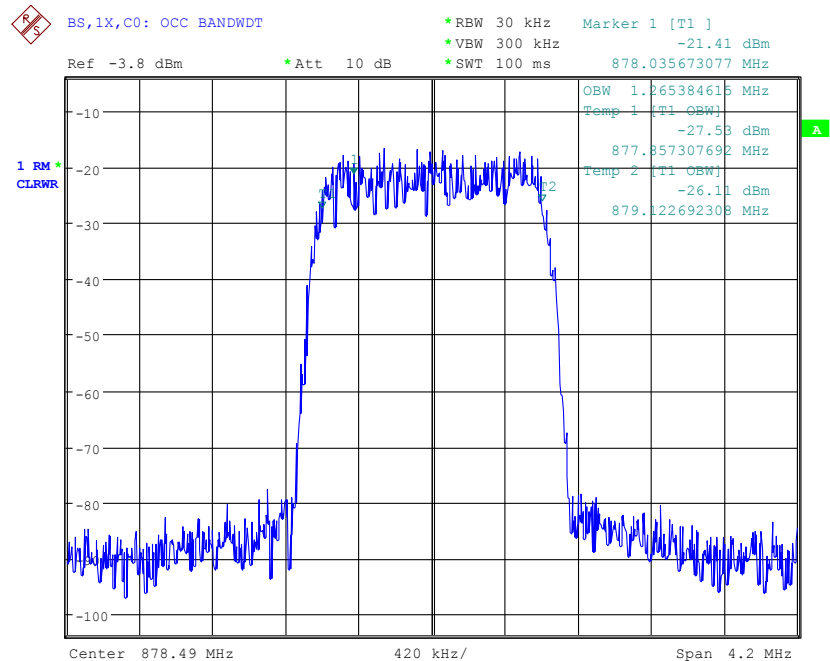


Fig. 6–5 Measuring occupied bandwidth


The softkey enables SPECTRUM mode with defined settings:

The following user-specific settings are not modified on the first access following presetting:
 Level parameters
 Center Frequency + Frequency Offset
 All trigger settings

OCCUPIED BANDWIDTH	ON
FREQUENCY SPAN	4.2 MHz
SWEEP TIME	100 ms
RBW	30 kHz
VBW	300 kHz
DETECTOR	RMS

To restore adapted measurement parameters, the following parameters are saved on exiting and are set again on re-entering this measurement:
 Level parameters
 RBW, VBW
 Sweep time
 SPAN


IEC/IEEE bus command: :CONF:CDP:MEAS OBAN
 Query of results: :CALC:MARK:FUNC:POW:RES? OBAN

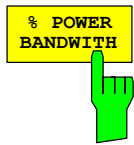

The % POWER BANDWIDTH softkey opens a field for entering the percentage power referred to the total power in the displayed frequency range, by means of which the occupied bandwidth is defined (percentage of total power).

The permissible range is 10% to 99.9%.

IEC/IEEE bus command: `:SENS:POW:BWID 99PCT`

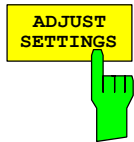

The *ADJUST SETTINGS* softkey matches the analyzer unit settings to the specified channel bandwidth for measurement of the occupied bandwidth.

All analyzer settings relevant to power measurement within a certain frequency range (channel bandwidth) such as:


- • Frequency span $3 \times$ channel width
- • Resolution bandwidth $RBW \leq 1/40$ of channel bandwidth.
- • Video bandwidth $VBW \geq 3 \times RBW$.
- • Detector RMS

are optimized.

The reference level is not affected by *ADJUST SETTINGS*. It must be set for optimum dynamics so that the maximum signal is in the proximity of the reference level.

Adjustment is performed only once but, if necessary, the unit settings may be changed afterwards.

IEC/IEEE bus command: `:SENS:POW:ACH:PRES OBW`

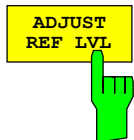

The *ADJUST REF LVL* softkey adjusts the reference level of the analyzer to the measured total signal power.

The softkey becomes active when the first sweep ends with measurement of the occupied bandwidth and the total power of the signal is known.


Adaptation of the reference level ensures that the signal path of the analyzer is not overloaded, and the dynamic response is not restricted by a reference level that is too low.

Since the measurement bandwidth is considerably lower for channel power measurements than the signal bandwidth, the signal path may be overloaded although the trace is still well below the reference level. When the measured channel power is identical to the reference level, the signal path is not overloaded.

IEC/IEEE bus command: `:SENS:POW:ACH:PRES:RLEV`

Signal statistic

MEAS key or MEAS hot key

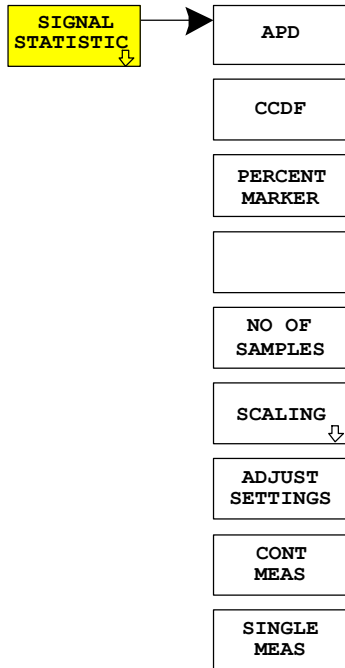

The *SIGNAL STATISTIC* softkey launches measurement of the distribution function of signal amplitudes (complementary cumulative distribution function). The measurement can be switched, using the menu softkey, to amplitude power distribution (APD).

For this measurement, a signal section of settable length is recorded continuously in a zero span, and the distribution of the signal amplitudes is evaluated. The recorded length and the display range of the CCDF can be set using the softkeys of the menu. The amplitude distribution is plotted logarithmically as a percentage of the amount by which a certain level is exceeded, starting with the average value of the signal amplitudes.

In addition, the crest factor, i.e. the difference between the maximum value and the mean power, is displayed in dB.

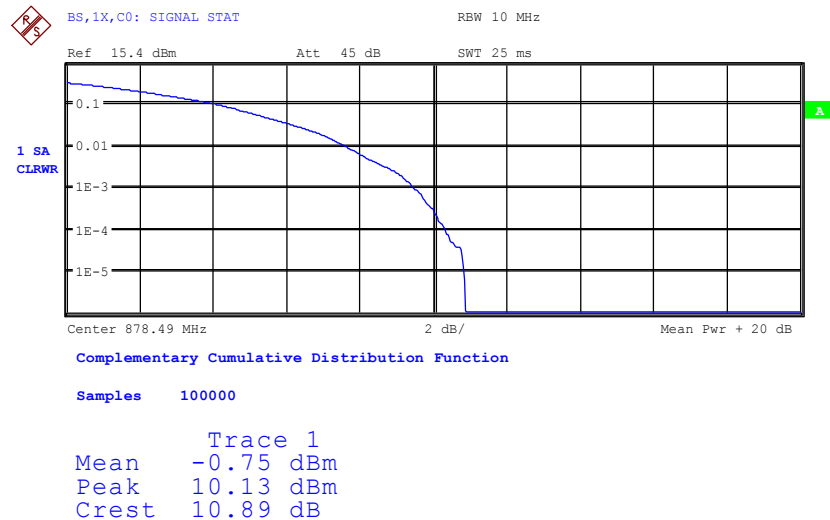


Fig. 6–6 CCDF of cdma2000 signal.

The softkey enables SPECTRUM mode with predefined settings:


The following user-specific settings are not modified so that the adaptation to the device under test is preserved: Reference Level + Rev Level Offset Center Frequency + Frequency Offset Input Attenuation + Mixer Level All trigger settings	
CCDF	ON
RBW	10 MHz
DETECTOR	SAMPLE
To restore adapted measurement parameters, the following parameters are saved on exiting and are set again on re-entering this measurement: Level parameters RBW NO OF SAMPLES	

Departing from this setting, the analyzer can be operated in all the functions it features in SPECTRUM mode, i.e. all measurement parameters can be adapted to a specific measurement.

IEC/IEEE bus command: :CONF:CDP:MEAS CCDF
 or
 :CALC:STAT:CCDF ON


Query of results:

```
:CALC:STAT:RES? MEAN | PEAK | CFA
                | ALL
MEAN    mean (r.m.s) measured power in dBm
        in the period of observation
PEAK    measured peak power in dBm
        in the period of observation
CFACTOR determined CREST factor (i.e. ratio of
        peak power to mean power) in dB
ALL     results of all three named measure-
        ments, separated by a comma:
        <mean pow>, <peak pow>,
        <crest factor>
```

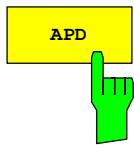

The *APD ON/OFF* softkey enables the amplitude probability distribution function .

IEC/IEEE bus command: :CALC:STAT:APD ON

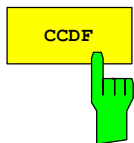

The *CCDF ON/OFF* softkey enables the complementary distribution function (complementary cumulative distribution function).


IEC/IEEE bus command: :CALC:STAT:CCDF ON



When the CCDF function is enabled, the *PERCENT MARKER* softkey supports positioning of marker 1 by entering a sought probability. In this way the power which exceeds a specified probability can be determined in a simple manner.

If marker 1 is disabled, it is enabled automatically.


IEC/IEEE bus command: :CALC:MARK:Y:PERC 0...100%

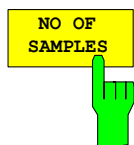


The *NO OF SAMPLES* softkey sets the number of power measured values to be taken into account for the calculation of the distribution function.

Note: *The overall measurement time is influenced by the selected number of samples as well as by the resolution bandwidth selected for the measurement, since the resolution bandwidth directly affects the sampling rate.*

IEC/IEEE bus command: :CALC:STAT:NSAM <value>

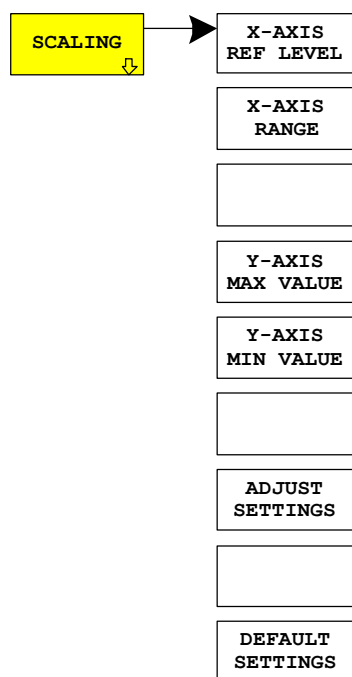


The *SCALING* softkey opens a menu on which the scaling parameters for the X-axis and the Y-axis can be modified.

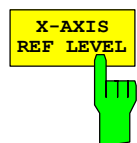


The *X-AXIS REF LEVEL* softkey changes the level settings of the unit and sets the maximum measurable power. The function is identical to that of the *REF LEVEL* softkey on the *AMPT* menu. This value is mapped to the right diagram border for the *APD* function. For the *CCDF* function, this value is not directly represented in the diagram because the X-axis is scaled relative to the measured *MEAN POWER*.

IEC/IEEE bus command: `:CALC:STAT:SCAL:X:RLEV <value>`

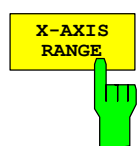


The *X-AXIS RANGE* softkey changes the level range that is to be covered by the distribution sampling function. The function is identical to that of the *RANGE LOG MANUAL* softkey on the *AMPT* menu.

IEC/IEEE bus command: `:CALC:STAT:SCAL:X:RANG <value>`

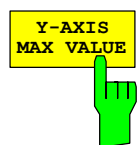


The *Y-AXIS MAX VALUE* softkey sets the upper limit of the displayed probability range. The values on the Y-axis are normalized, i.e. the maximum value is 1.0. Since the Y-axis scaling is logarithmic, the spacing between the maximum and minimum values must be at least one decade.

IEC/IEEE bus command: `:CALC:STAT:SCAL:Y:UPP <value>`

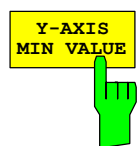

The *Y-AXIS MIN VALUE* softkey sets the lower limit of the displayed probability range. Since the Y-axis scaling is logarithmic, the spacing between the maximum and minimum values must be at least one decade. Permissible range $0 < \text{value} < 1$.

IEC/IEEE bus command: `:CALC:STAT:SCAL:Y:LOW <value>`

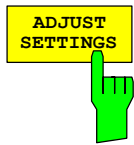


The *ADJUST SETTINGS* softkey optimizes the analyzer level settings according to the measured peak power in order to gain maximum sensitivity of the unit.

The level range is set for the APD measurement according to the measured distance between the power peak value and the minimum value and for the CCDF measurement between the power peak value and the mean value in order to achieve maximum power resolution.

In addition, the probability scale is adapted to the selected number of samples.

IEC/IEEE bus command: `:CALC:STAT:SCAL:AUTO ONCE`

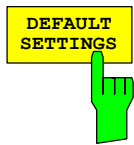

The *DEFAULT SETTINGS* softkey resets the scaling on the X-axis and the Y-axis to the default (PRESET) settings.

X-axis reference level: `-20 dBm`


X-axis range for APD: `100 dB`

X-axis range for CCDF: `20 dB`

Y-axis for upper limit: `1.0`


Y-axis for lower limit: `1E-6`

IEC/IEEE bus command: `:CALC:STAT:PRES`

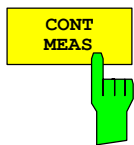

The *CONT MEAS* softkey starts the collection of new sequences of sample data and the calculation of the APD or CCDF trace, depending on the selected measurement. The next measurement is started automatically as soon as the indicated number of samples has been reached ("CONTinuous MEASurement").

IEC/IEEE bus command: `:INIT:CONT ON;`
`:INIT:IMM`

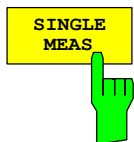

The *SINGLE MEAS* softkey starts the collection of one new sequence of sample data and the calculation of the APD or CCDF trace, depending on the selected measurement. The measurement terminates when the indicated number of samples is reached.

IEC/IEEE bus command: `:INIT:CONT OFF;`
`:INIT:IMM`

Code domain measurements on cdma2000/1xEV-DV signals

The Application Firmware R&S FS-K82 features a code domain analyzer. It can be used to perform the measurements required in the cdma2000 standards with regard to the power of the different codes and code channels (concentrated codes). In addition, the modulation quality (EVM and RHO factor), frequency errors and trigger-to-frame time, and peak-code domain errors are determined. Constellation evaluations and bitstream evaluations are also available. Furthermore the timing and phase offsets of the channels to the pilot can also be calculated (refer to the *TIME/PHASE* softkey). The observation period can be set as multiples of the power control group (PCG) using the *CAPTURE LENGTH* softkey.

Basically, the firmware differentiates between the following result classes for the evaluations:

- Results which take the overall signal into account over the whole observation period (all PCGs)
- Results which take the overall signal into account over a power control group (PCG)
- Results which take one channel into account over the whole observation period (all PCGs)
- Results which take one channel into account over a power control group (PCG)

The evaluations of the code domain analyzer are performed on a split screen. The screen is divided into two halves for this purpose.

The upperhalf of the screen (screen A) displays evaluations which vary by means of the codes. The lower screen (screen B) displays all other evaluations.

Table 6-15 Evaluations on screen A

Evaluation on screen A	Total signal	One channel	All PCGs	One PCG
Code domain power	✓			✓
Code domain error power	✓			✓
Channel table	✓			✓

Table 6-16 Evaluations on screen B

Evaluation on screen B	Total signal	One channel	All PCGs	One PCG
Result Summary	✓	✓	✓	✓
Power versus power control group		✓	✓	
Power versus symbol		✓		✓
Composite EVM (modulation accuracy)	✓		✓	
Composite constellation	✓			✓
Peak code domain error	✓		✓	
Symbol constellation		✓		✓
Symbol EVM		✓		✓
Bitstream		✓		✓

Depending on the symbol rate of a code channel, it has a different spreading factor and a different number of symbols per power control group. The relationship can be seen in the table below.

Table 6–17 Relationship between symbol rate, spreading factor and number of symbols

Transmission speed [ksps]	Spreading factor	Symbols per PCG (no transmit diversity)	Symbols per PCG (transmit diversity)
9.6	128	12	6
19.2	64	24	12
38.4	32	48	24
76.8	16	96	48
153.6	8	192	96
307.2	4	384	192

With evaluations on the lower screen which have uses symbols on the x-axis, the maximum number of symbols varies according to the symbol rate of the selected code channel. With transmit diversity signals (softkey *ANT DIV*) the symbols of the signal are distributed on two antennas. Therefore the symbol number is reduced to the half.

With the help of the *SELECT CHANNEL* and *SELECT PCG* softkeys, the user can select the code channel and the power control group (PCG) for which he wants to have a result displayed. Let us assume that he has selected code channel 1.64 (Walsh code number 1 for spreading factor 64) and PCG 2. On screen A, the code domain power relative evaluation is active and on screen B the symbol EVM evaluation is active. Screen A thus displays the code domain power evaluation of PCG 2. In this instance code channel 1.64 is shown in red. In the lower half of the screen you can see the symbol EVM evaluation of code channel 1.64 in PCG 2 with 24 corresponding values.

The code domain analyzer can be operated in two modes. In *CODE CHAN AUTOSEARCH* mode it performs an automatic search for active channels in the whole code domain. During the search, the *PILOT CHANNEL (PICH)* at 0.64, the *SYNCHRONISATION CHANNEL (SYNC)* at 32.64, the *TRANSMIT DIVERSITY PILOT CHANNEL (TDPICH)* at 16.128 and the first *PAGING CHANNEL (PCH)* at 1.64 are detected automatically if they are active. In addition, active data channels, generally referred to as *CHAN*, are detected with their radio configuration 1+2 or 3 to 5.

PACKET DATA CHANNELS (PDCH) from 1xEV–DV are always sent from the base station with spreading factor 32. The standard defines for these channel radio configuration 10. These packet channels can be either QPSK (like the normal data channels *CHAN*), 8–PSK or 16–QAM modulated. The modulation types is automatically detected by the application firmware and in case of 8–PSK/16–QAM the detected channel is recognised as PDCH with radio configuration 10. The difference between *CHAN* and PDCH with QPSK modulation is not unambiguous, therefore the softkey *FORCE 1xEV–DV* exists which can force the 1xEV–DV recognition (PDCH/radio configuration 10).


The structure of the *PACKET DATA CONTROL CHANNEL (PDCCH)* is similar to a normal data channel (*CHAN*) and can not be distinguished in the automatic search mode. But it is possible to add the PDCCH in the *CODE CHAN PREDEFINED* mode.

In the another mode, *CODE CHAN PREDEFINED*, the user is given the opportunity of determining the active code channels in the signal by means of selectable and editable tables. The automatic channel search is then replaced by this user input.

The code domain analyzer requires the presence of the *PILOT CHANNEL (PICH)* or, in the case of OTD (orthogonal transmit diversity), the *TRANSMIT DIVERSITY PILOT CHANNEL (TDPICH)*.

Presentation of evaluations – RESULTS

The *RESULTS* hot key or the *MEAS* hot key and then the *CODE DOM ANALYZER*

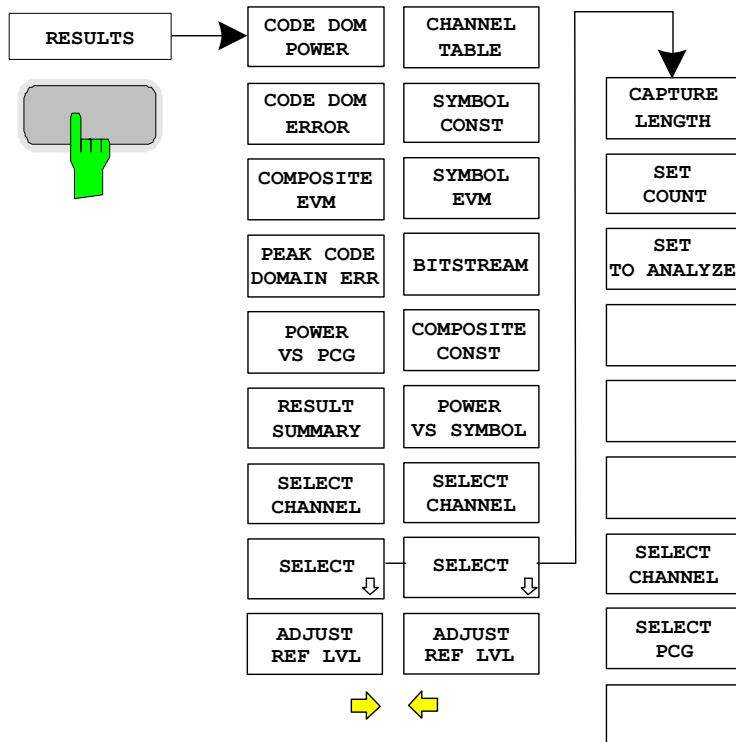

The *RESULTS* hot key opens the submenu for choosing the evaluation. The main menu features the most important evaluations for rapid access; more detailed evaluations are available on the Page menu.

You can choose from the following evaluations:

- CODE DOM POWER Code domain power evaluation, depending on the CODE PWR ABS/REL softkey in relative or absolute scaling
- CODE DOM ERROR Code domain error power evaluation
- COMPOSITE EVM Square difference between the test signal and the ideal reference signal
- PEAK CODE DOMAIN ERR Projection of the error between the test signal and the ideal reference signal to the base spreading factor and subsequent summation using the symbols of each PCG of the difference signal
- POWER VS PCG Power of the selected channel versus all PCGs
- RESULT SUMMARY Results in tabular form
- CHANNEL TABLE Channel occupancy table
- SYMBOL CONST Symbol constellation evaluation
- SYMBOL EVM Error vector magnitude evaluation
- BITSTREAM Display of decided bits
- COMPOSITE CONST Composite constellation evaluation
- POWER VS SYMBOL Power of the selected channel and of the selected PCG versus all symbols.

By entering a channel number (*SELECT CHANNEL* softkey) the user can select a channel for the evaluations *POWER VS PCG*, *SYMBOL CONST*, *SYMBOL EVM*, *BITSTREAM* and *POWER VS SYMBOL*.

The user can use the *SELECT PCG* softkey to select a power control group for the evaluations *CODE DOM POWER*, *CODE ERROR*, *CHANNEL TABLE*, *SYMB CONST*, *SYMBOL EVM*, *BITSTREAM*, *COMPOSITE CONST* and *POWER VS SYMBOL*.

The user use *ADJUST REF LVL* to achieve optimum matching of the reference level to the signal level.

The following user-specific settings are not modified on the first access following presetting:
 Level parameters
 Center Frequency + Frequency Offset
 Input Attenuation + Mixer Level

The following user-specific settings are transferred as follows:
 External trigger sources are retained, while all other trigger sources result in Free Run mode.
 Additional trigger settings are retained.

To restore adjusted level parameters, they are saved on exiting the code domain analyzer and reset on re-entering the code domain analyzer.

The most important measurement settings on which the displays are based are summarized at the top of the diagram:

BS, 1X, C1	:CODE POWER	SR	19.2 ksp/s
		Chan	1.64
dB TOT	CF 1.93125 GHz	PCG	3


Fig. 6-7 Function fields of diagrams

The meanings are as follows:

- 1st column: Mobile radio system (base station cdma2000 1X) such as BS, 1X
- band such as C1 for 1900 MHz
- Name of the selected evaluation: such as CODE POWER
- (empty) such as dB TOT for relative
- Unit of the y-axis to the total power

- 2nd column: (empty)
- (empty) such as CF 1.93125 GHz
- Center frequency of the signal.

- 3rd column: Symbol rate of the selected channel : such as SR 19.2 ksp/s
- Walsh code and spreading factor of the selected channel: such as Chan 1.64
- PCG number of the selected channel PCG 3

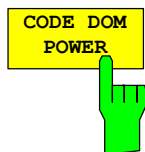

The CODE DOM POWER softkey selects the evaluation of the code domain power (CDP) with relative scaling.

With the code domain power evaluation, the total signal is taken into account over precisely one power control group. The power values of the different codes are determined and plotted in a diagram. In this diagram, the x-axis is the code number and the y-axis is a logarithmic level axis. The number of codes on the x-axis, which corresponds to the base spreading factor, can be set by means of the *BASE SF 64/128* softkey. The power control group to be evaluated can be set by means of the *SELECT PCG* softkey.

The power of the channels is referred to the power of the pilot channel PICH (code number 0) at the default setting. This power reference has been selected since the total power can vary, between the PCG, due to the possibility of a power level change in the different code channels. Unlike this variable total power, the power of the PICH is identical over all PCGs and hence it can be used as a constant reference for the display. If the second antenna is measured (refer to softkeys *ANT DIV* and *ANT NO.*), the pilot channel of the second antenna TDPICH is used as the reference. The power reference can be switched to the total power of the signal with the help of the *POWER REF* softkey.

Apart from these relative displays, there is also the option of specifying the absolute power. It can be enabled by means of the *CODE PWR ABS/REL* softkey. The unit of y-axis is consequently dBm for absolute evaluation and dB PICH for relative evaluation with regard to the pilot, dB TDPICH for relative evaluation with regard to the pilot when measuring the second antenna and dB TOT for relative evaluation with regard to the total power.

The power values of the active and unassigned codes are shown in different colours. In addition, codes with alias power can occur. In this instance a code contains power components originating either from a spreading factor higher than the base spreading factor or the own and/or a different antenna as a result of transmit diversity.

The following colours are defined:

- Yellow active channel
- Cyan unoccupied
- Light blue alias power of higher spreading factor
- Magenta alias power as a result of transmit diversity

Note: *If there is alias power in the code domain power evaluation, the highest base spreading factor should be set by means of the *BASE SF* softkey.*

A channel in *CODE CHAN AUTOSEARCH* mode (automatic channel search mode) is referred to as active when the minimum power entered by the user (refer to the *INACT CHAN THRESHOLD* softkey) is exceeded and there is an adequate signal-to-noise ratio. In *CODE CHAN PREDEFINED* mode, each code channel contained in the user-defined channel table is identified as active.

The code domain power evaluation supports two sort orders: the Hadamard and BitReverse orders. In Hadamard order, the codes are sorted and displayed in ascending order: 0.64, 1.64, 2.64, etc, 63.64. For each code, the power is displayed in this code. If there is a code channel in the signal that covers several codes, the individual power of the codes is displayed. If you wish to read the total power of this concentrated code channel, use BitReverse order.

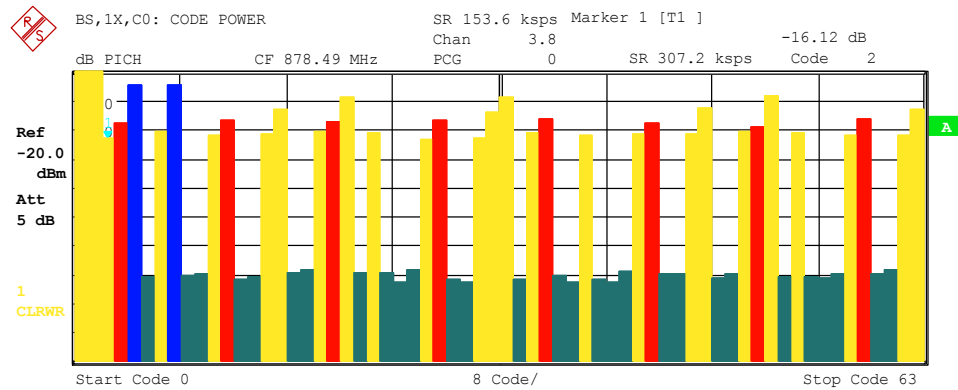


Fig. 6–8 CDP diagram in Hadamard order

With BitReverse order, the sort order of the channels is changed in such that the code numbers at bit level are interpreted from back to front (reversed). The following code order thus results for a base spreading factor of 64: 0.64, 32.64, 16.64, 48.64, 8.64, 40.64, etc., 15.64, 47.64, 31.64, 63.64 (refer to Chapter 9). The codes of a concentrated code channel are now adjacent and the total power of the code channel is displayed.


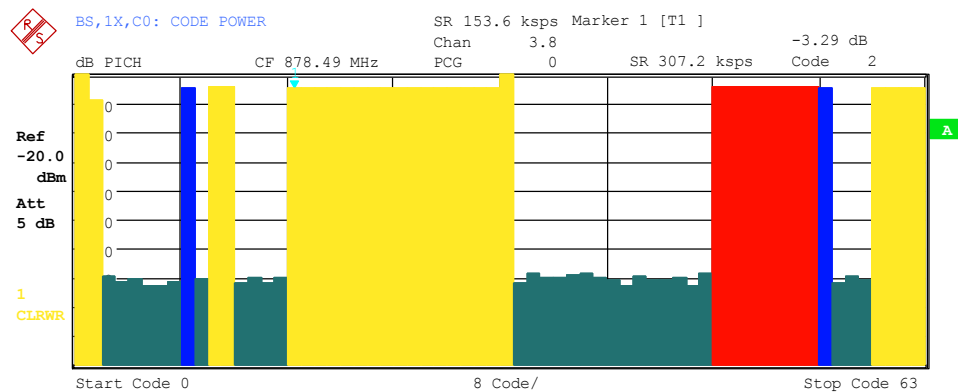


Fig. 6–9 CDP diagram in BitReverse order for the same signal

By entering a channel number (refer to the *SELECT CHANNEL* softkey), you can select a channel for more detailed displays. The codes of this channel are shown in red.

The selection of more detailed evaluations (such as SYMBOL CONSTELLATION) for unassigned codes is possible but not meaningful, since the results are not valid.

IEC/IEEE bus command: :CALC1:FEED "XPOW:CDP:RAT" (relative)
 :CALC1:FEED "XPOW:CDP" (absolute)

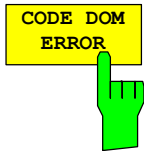

The CODE DOM ERROR softkey selects the evaluation of the code domain error power (CDEP).

The code-domain error power measurement reads out the difference in power between measured and ideally generated reference signals for each code in dB. Since it is an error power, active and inactive channels can be assessed jointly at a glance with this evaluation.

With the code-domain error power evaluation, the total signal is taken into account over exactly one power control group and the error power in the different codes are determined and plotted in a diagram. In this diagram, the x-axis is the code number and the y-axis is a logarithmic level axis, the unit being dB. The number of codes on the x-axis, which corresponds to the base spreading factor, can be set by means of the *BASE SF 64/128* softkey. The power control group you want to evaluate can be set by means of the *SELECT PCG* softkey.

The power values of the active and unassigned codes are shown in different colours. In addition, codes with alias power can occur. In this instance a code contains power components originating either from a spreading factor higher than the base spreading factor of the own and/or a different antenna as a result of transmit diversity.

The following colours are defined:

- Yellow active channel
- Cyan unoccupied
- Light blue alias power of higher spreading factor
- Magenta alias power as a result of transmit diversity

Note: *If there is alias power in the code domain power evaluation, the highest base spreading factor should be set by means of the BASE SF softkey.*

A channel in *CODE CHAN AUTOSEARCH* mode (automatic channel search mode) is referred to as active when the minimum power entered by the user (refer to the *INACT CHAN THRESHOLD* softkey) is exceeded and there is an adequate signal-to-noise ratio. In *CODE CHAN PREDEFINED* mode, each code channel contained in the user-defined channel table is identified as active.

The code-domain error power evaluation supports two sort orders: the Hadamard and BitReverse orders. In Hadamard order, the codes are sorted and displayed in ascending order: 0.64, 1.64, 2.64, etc., 63.64. For each code, the power is displayed in this code.

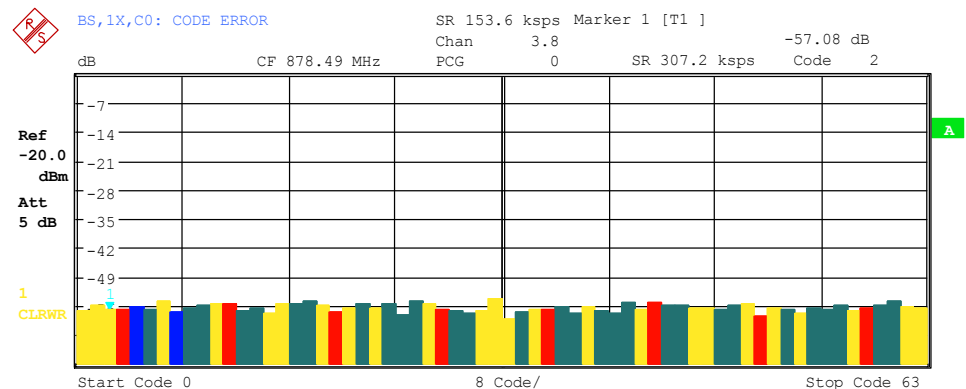


Fig. 6-10 CDEP diagram in Hadamard order

With BitReverse order, the sort order of the channels is changed in such that the code numbers at bit level are interpreted from back to front (reversed). The following code order thus results for a base spreading factor of 64: 0.64, 32.64, 16.64, 48.64, 8.64, 40.64, etc., 15.64, 47.64, 31.64, 63.64 (refer to Chapter 9). With the code-domain error power evaluation, unlike the code domain power evaluation, no power values of the concentrated code channel are displayed, since the power values in the code-domain error power evaluation are error power values.

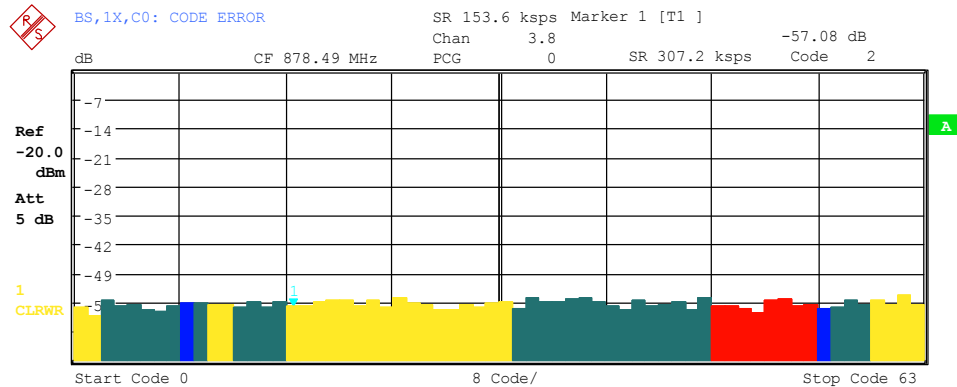


Fig. 6–11 CDEP diagram in BitReverse order for the same signal

By entering a channel number (refer to the *SELECT CHANNEL* softkey), you can select a channel for more detailed displays. The codes of this channel are shown in red.

The selection of more detailed evaluations (such as SYMBOL CONSTELLATION) for unassigned codes is possible but not meaningful, since the results are not valid.

IEC/IEEE bus command: :CALC1:FEED "XPOW:CDEP"



The *COMPOSITE EVM* softkey selects the evaluation of the error vector magnitude (EVM) over the total signal (modulation accuracy).

In the composite EVM measurement, the square root is determined from the error square between the real and imaginary parts of the test signal and an ideally generated reference signal (EVM referred to the total signal).

The measurement result consists of a composite EVM measured value for each power control group (PCG). You can set the number of PCGs by means of the *CAPTURE LENGTH* softkey. Subsequently, the *COMPOSITE EVM* evaluation takes the whole signal into account over the entire period of observation.

Only the channels detected as being active are used to generate the ideal reference signal. In the case of a channel which is not detected as being active on account of, say low power, the difference between the test signal and the reference signal and the composite EVM is therefore very large (refer to the figure).

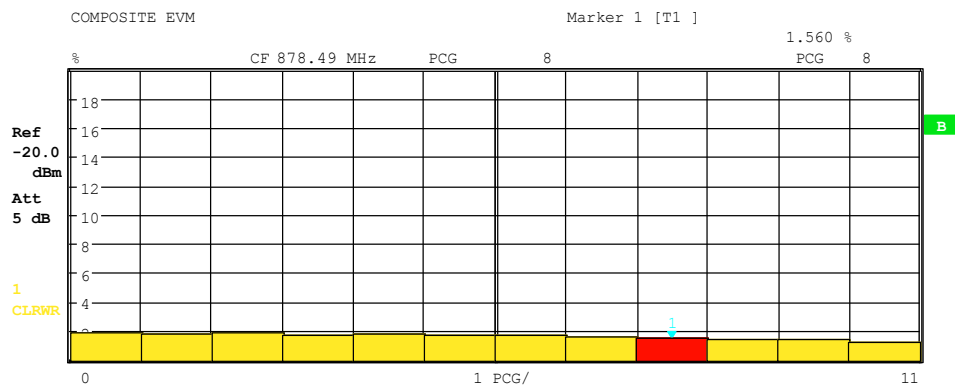


Fig. 6-12 Composite EVM display for the case of all the channels contained in the signal being detected as active


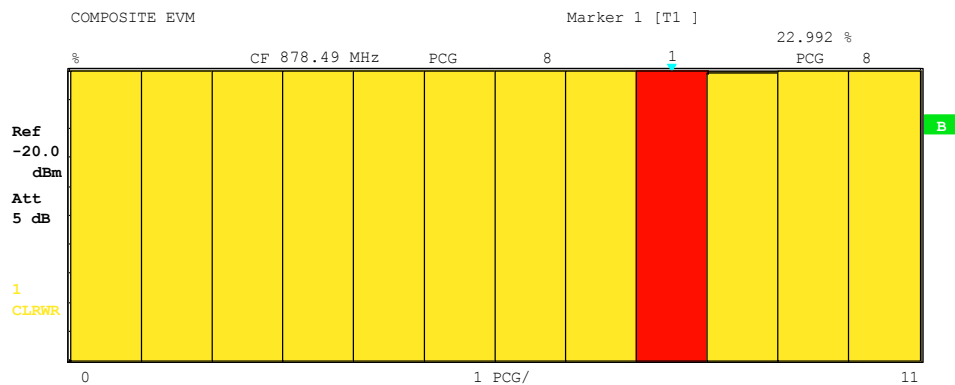


Fig. 6-13 Composite EVM display for the case of one code channel was not detected as being active.

Similar to selecting a code channel in the CDP or CDEP diagram, there is the option in the composite EVM diagram of selecting a PCG. The selection is performed by entering the PCG number (refer to the *SELECT PCG* softkey). The selected PCG is shown as a red bar.

IEC/IEEE bus command: :CALC2:FEED "XTIM:CDP:MACC"

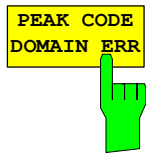

The *PEAK CODE DOMAIN ERR* softkey selects the evaluation of the peak code domain error.

With the peak code domain error measurement, the error is between the test signal and the ideally generated reference signal is projected to the base spreading factor. The unit on the y-axis is dB. The base spreading factor is selected by means of the *BASE SF 64/128* softkey.

The measurement result consists of the numeric value per PCG for the peak code domain error. You can set the number of PCGs by means of the *CAPTURE LENGTH* softkey. Subsequently, the peak code domain error evaluation takes the whole signal into account over the entire period of observation.

Only the channels detected as being active are used to generate the ideal reference signal for the peak code domain error. If an assigned code is not detected as being active on account of low power, the difference between the test signal and the reference signal is very large. The R&S FS-K82 therefore shows a peak code domain error that is too high (refer to figure).

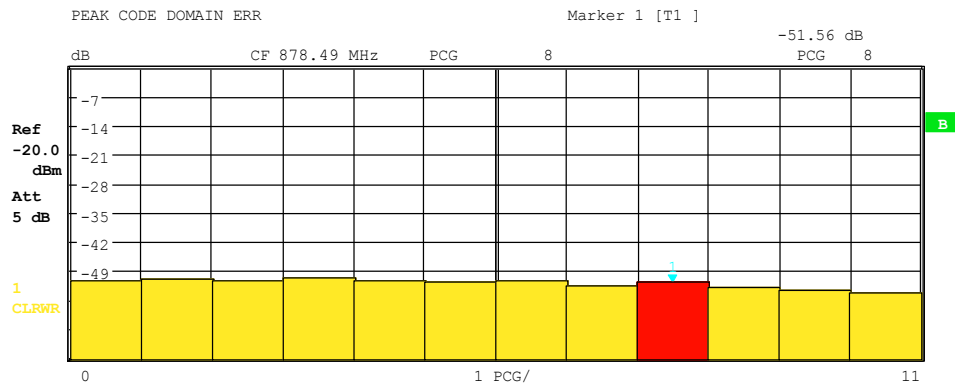


Fig. 6-14 Peak code domain error for the case of all the channels contained in the signal being detected as active


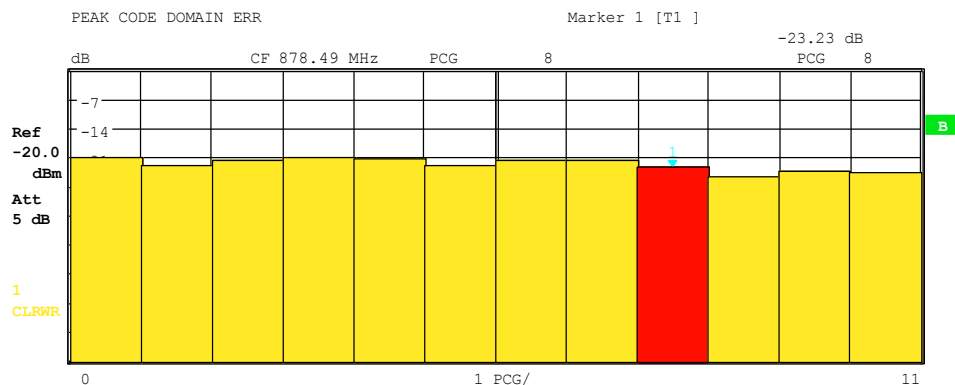


Fig. 6-15 Peak code domain error for the case of one channel not being detected as active

Similar to selecting a code channel in the CDP or CDEP diagram, there is the option in the peak code domain error diagram of selecting a PCG. The selection is performed by entering the PCG number (refer to the *SELECT PCG* softkey). The selected PCG is shown as a red bar.

IEC/IEEE bus command: :CALC2:FEED "XTIM:CDP:ERR:PCDomain"

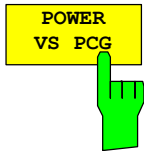

The *POWER VS PCG* softkey enables the POWER versus power control group (PCG) evaluation.

In this instance the display of the power for the selected channel is averaged for each PCG and referred to the power of the PCG. The unit on the y-axis is therefore dB PICH.

The measurement result consists of the numeric value per PCG for the power value. You can set the number of PCGs by means of the *CAPTURE LENGTH* softkey. Subsequently, the *POWER VS PCG* evaluation takes one code channel into account over the entire period of observation.

Note: For the beginning of a power control group always to be detected correctly for a power-regulated signal, the external trigger must be used.

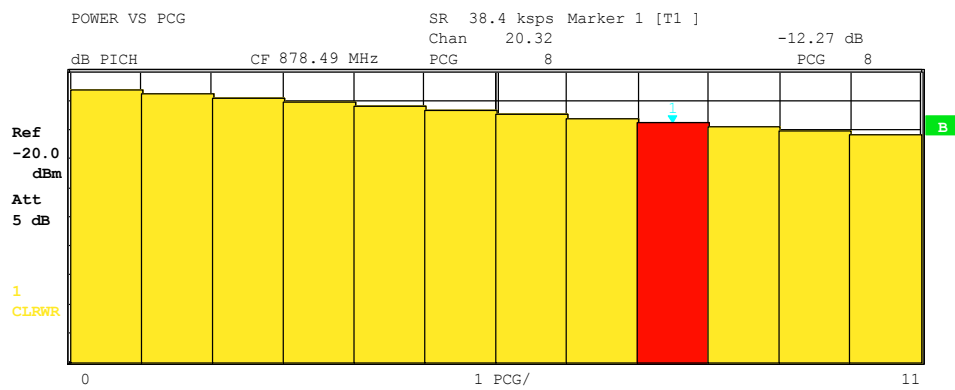


Fig. 6–16 Power versus time for an occupied channel with power control

Similar to selecting a code channel in the CDP or CDEP diagram, there is the option in the power versus PCG diagram of selecting a PCG. The selection is performed by entering the PCG number (refer to the *SELECT PCG* softkey). The selected PCG is shown as a red bar.

IEC/IEEE bus command: :CALC2:FEED "XTIM:CDP:PVSLOT"



The *RESULT SUMMARY* softkey selects the numeric evaluation of all measurement results. The evaluation is subdivided as follows:

		RESULTS FOR PCG 0:		GLOBAL RESULTS:	
	Total PWR	-5.48	dBm	Carr Freq Error	-365.19 Hz
Ref	Pilot PWR	-12.14	dBm	Carr Freq Error	-0.24 ppm
10.0	RHO	0.99929		Chip Rate Error	-0.34 ppm
dBm	Composite EVM	2.67	%	Trg to Frame	-418.488664 µs
Att	Pk CDE (SF 64)	-47.32	dB	Active Channels	9
40 dB	IQ Imbal/Offset	0.02/1.74	%		
		CHANNEL RESULTS:		Modulation	QPSK
1	Symbol Rate	153.6	ksps	Timing Offset	0.27 ns
CLRWR	Channel.SF	3.8		Phase Offset	1.00 mrad
	Channel Power Rel	-4.28	dB	Channel Power Abs	-16.41 dBm
	Symbol EVM	3.30	% rms	Symbol EVM	7.07 % Pk

Fig. 6–17 Result summary

The top left part specifies the measurement results which concern the total signal (that is, all channels) for the power control group selected with the *SELECT PCG* softkey:

- Total Power: Specifies the total power of the signal.
- Pilot power: Specifies the pilot power. If antenna 2 (refer to *ANT NO* softkey) is selected, the power of the TDPICH is displayed, in all other cases that of the PICH.
- RHO: Specifies RHO, the quality parameter. According to the cdma2000 standards, RHO is the normalized, correlated power between the measured and the ideally generated reference signal. When RHO is measured, the cdma2000 standards require that only the pilot channel be supplied.
- Composite EVM: The composite EVM value is the difference between the test signal and the ideal reference signal (refer to the *COMPOSITE EVM* softkey).
- Pk CDE: The *PEAK CODE DOMAIN ERR* measurement specifies a projection of the difference between the test signal and the ideal reference signal to the selected base spreading factor (refer to softkeys *PEAK CODE DOMAIN ERR* and *SELECT BASE SF*). The base spreading factor, to which the projection is made, is specified in addition to the measured value.
- IQ Imbalance: IQ imbalance of the signal in %
- IQ Offset: DC offset of the signal in %

The top right part specifies the measured results which concern the total signal (that is, all channels) for the entire period of observation (that is, all PCGs):

- Carrier Freq Error: Specifies the frequency error referred to the set center frequency of the analyzer. The absolute frequency error is the sum of the frequency error of the analyzer and that of the device under test. Frequency differences between the transmitter and receiver of more than 1.5 kHz impair synchronization of the CDP measurement. If at all possible, the transmitter and the receiver should be synchronized (refer to the *Getting Started* chapter). The frequency error is available in the unit hertz on the one hand and in ppm referred to the carrier frequency on the other.
- Chip Rate Error: Specifies the chip rate error (1.2288 Mcps) in ppm. A large chip rate error results in symbol errors and, consequently,

possibly in the CDP measurement not being able to perform synchronization. This measurement result is also valid when the analyzer could not synchronize to the cdma2000 signal.

Trigger to Frame: This measurement result reflects the time offset from the beginning of the recorded signal section until the start of the first PCG. In the case of triggered data recording, this corresponds to the timing offset "frame trigger (+ trigger offset) – start of first PCG". If it was not possible to synchronize the analyzer to the cdma2000 signal, the value of Trg to Frame is meaningless. Is the trigger *FREE RUN* selected, dashes (–.—) are displayed.

No of Active Chan: Specifies the number of active channels found in the signal. In this case the detected data channels as well as the special channels are regarded as active. The result applies with transmit diversity to the selected antenna (refer to softkeys *ANT DIV* and *ANT NO.*).

The bottom part of RESULT SUMMARY presents the results of measurements on the selected channel and the selected PCG.

Symbol Rate: Symbol rate with which the channel is transmitted

Channel.SF: Number of the channel and its associated spreading factor

Modulation: Modulation type of the channel, BPSK, QPSK, 8–PSK or 16–QAM.

Timing Offset: Timing offset between the selected channel and the pilot channel. This measurement can be enabled by means of the *TIME/PHASE* softkey.

Phase Offset: Phase offset between the selected channel and the pilot channel. This measurement can be enabled by means of the *TIME/PHASE* softkey.

Chan Pow rel. / abs.:


Channel power relative (referred to the pilot or total power depending on the *POWER REF TOT/PICH*) softkey and the absolute channel power.

Symbol EVM Pk / rms:

Peak or mean value of the results of the error vector magnitude measurement (refer to the *SYMBOL EVM* softkey). The measurement provides information on the EVM of the selected channel for the selected PCG at symbol level.

If the *MAX/MIN HOLD* or *AVERAGE* trace statistics are enabled using the *TRACE* hardkey, the values are interlinked accordingly from one analysis to the next. The Active Channels, Symbol Rate and Channel.SF values are not statistically interlinked. In the case of the values which have an expectation value of 0 (Carr Freq Error, Trg to Frame, IQ Imbal/Offset, Timing and Phase Offset), the maximum value is formed in such a way that the maximum is sought among the absolute values and then output with sign. In this way it is possible to determine the largest deviation including the direction of the deviation. The minimum value is formed in the same way.

```
IEC/IEEE bus command: :CALC2:FEED "XTIM:CDP:ERR:SUMM"
                        :CALC2:MARK1:FUNC:CDP:BTS:RES? PTOT |
                        FERR | RHO | PPIC | FERF | CERR | TFR |
                        IQOF | IQIM | MACC | PCD | SLOT |
                        ACT | DMTY | SRAT | TOFF | CHAN |
                        POFF | SFAC | CDP | CDPR | EVMR |
                        EVMP
```

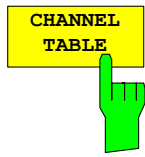

The CHANNEL TABLE softkey selects the evaluation for the channel assignment table.

The channel assignment table may contain up to 128 entries, corresponding to the highest base spreading factor of 128. The channel assignment table evaluation takes the total signal into account over exactly one power control group. The power control group to be evaluated can be set by means of the SELECT PCG softkey.

The table lists first the special channels including the packet channels from 1xEV-DV then the data channels (CHAN) included in the signal are shown. The channels are sorted in descending order by symbol rate and in ascending order within a symbol rate by channel number. Unassigned codes are thus always at the end of the table.

BS,1X,C0 :CHANNEL TAB

CF 878.49 MHz Chan 20.32 Max T 1.55 ns @ 2.4
PCG 4 Max Ph 2.94 mrad @ 71.128

	Type	Chan.SF	Symb Rate ksp/s	RC	Status	Pwr Abs dBm	Pwr Rel dB	T Offs ns	Ph Offs mrad	
Ref	PICH	0.64	19.2	---	active	-12.14	reference	0.00	0.00	A
10.0	SYNC	32.64	19.2	---	active	-18.41	-6.28	0.65	-2.17	SGL
	PCH	1.64	19.2	---	active	-12.40	-0.27	0.12	0.51	
Att	CHAN	2.4	307.2	3-5	active	-16.40	-4.26	1.55	-1.15	TRG
40 dB	CHAN	3.8	153.6	3-5	active	-16.40	-4.27	0.86	-1.94	
	CHAN	15.16	76.8	3-5	active	-10.39	1.74	0.38	0.41	
	CHAN	20.32	38.4	3-5	active	-20.44	-8.31	0.93	1.85	
	CHAN	68.128	9.6	3-5	active	-16.40	-4.27	1.40	-1.35	
1	CHAN	71.128	9.6	3-5	active	-16.40	-4.27	-0.55	2.94	
CLRWR	----	5.64	19.2	3-5	inact	-56.35	-44.21	----	----	
	----	8.64	19.2	3-5	inact	-54.47	-42.34	----	----	
	----	9.64	19.2	3-5	inact	-54.07	-41.94	----	----	

Fig. 6–18 Channel table


The following parameters are determined by the CDP measurement for the channels:

- Type: Type of channel
- Chan.SF: Number of the channel spreading code (0 to [spreading factor –1]) including the spreading factor of the channel in Chan.SF notation.
- Symb Rate: Symbol rate with which the channel is transmitted (9.6 ksp/s to 307.2 ksp/s)
- RC: Radio configuration
- Status: Status display. Unassigned codes are identified as inactive channels.
- Pwr Abs / Pwr Rel: Specification of the absolute and relative (referred to the PICH or the total power of signal) power of the channel.
- T Offs: Timing offset. The time offset between this channel and the pilot channel can be enabled by means of the TIME/MEAS softkey.
- Ph Offs: Phase offset. The phase offset between this channel and the pilot channel can be enabled by means of the TIME/MEAS softkey.

A data channel in CODE CHAN AUTOSEARCH mode is defined as active when it exhibits a minimum power (refer to the INACT CHAN THRESHOLD softkey) and an adequate signal-to-noise ratio. In CODE CHAN PREDEFINED mode, all code channels contained in the channel table are marked as active.

If the TIME/PHASE softkey is set to ON, the maximum value of the TIMING and PHASE OFFSET is displayed together with the associated channel on the right-hand side above the channel table. Since the TIMING and PHASE values of each active channel can be either negative or positive, the absolute values are compared and the maximum is then displayed with the original sign.

IEC/IEEE bus command: :CALC1:FEED "XTIM:CDP:ERR:CTABLE"

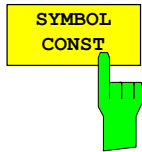

The *SYMBOL CONST* softkey selects the evaluation of the constellation diagram at symbol level. Evaluation of the symbols is performed for the selected channel (*SELECT CHANNEL* softkey) and the selected PCGs (*SELECT PCG* softkey). This evaluation thus takes into account the results of a channel for a power control group.

Evaluation of the constellation diagram is possible for unassigned codes, but the results are meaningless since unassigned code channels do not contain data. For orientation, the unit circle is added to the figure.


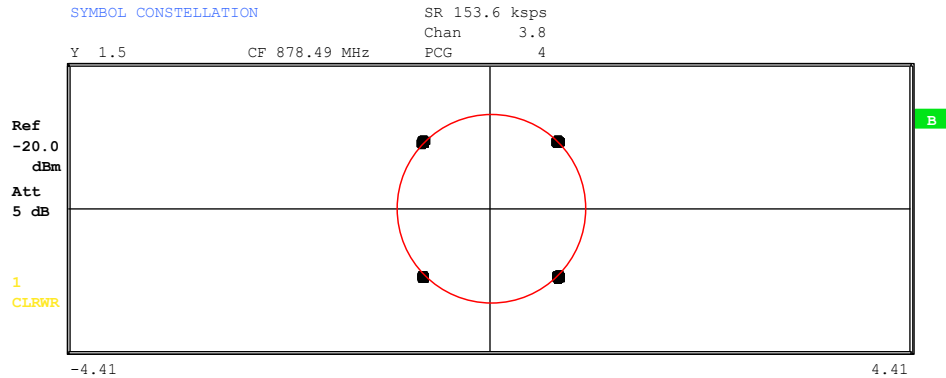


Fig. 6–19 Symbol constellation diagram

IEC/IEEE bus command: :CALC2:FEED "XTIM:CDP:SYMB:CONS"

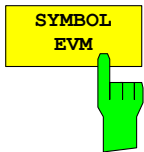

The *SYMBOL EVM* softkey selects the evaluation for the symbol error vector magnitude. Evaluation of the EVM is performed for the selected channel (*SELECT CHANNEL* softkey) and the selected PCGs (*SELECT PCG* softkey). This evaluation thus takes into account the results of a channel for a power control group.

Evaluation of the symbol error vector magnitude for unassigned codes is possible, but the results are not meaningful.

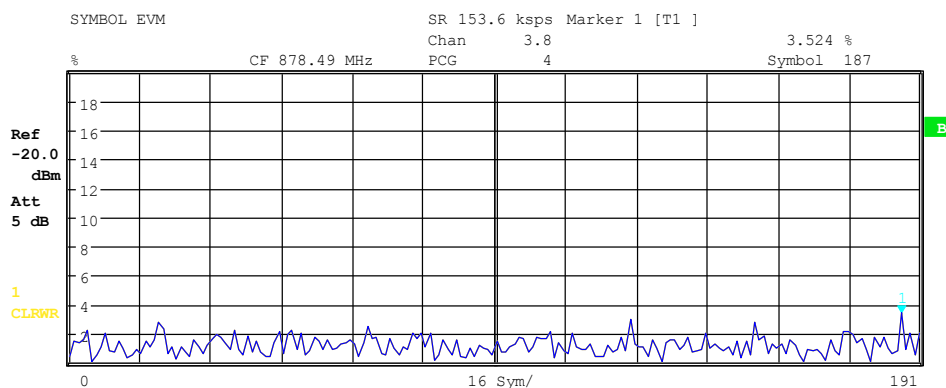


Fig. 6–20 Error vector magnitude for a PCG of a channel

IEC/IEEE bus command: :CALC2:FEED "XTIM:CDP:SYMB:EVM"



The *BITSTREAM* softkey selects the "Bitstream" evaluation . Evaluation of the decided bits is performed for the selected channel (*SELECT CHANNEL* softkey) and the selected PCGs (*SELECT PCG* softkey). This evaluation thus takes into account the results of a channel for a power control group.

Depending on the symbol rate of the channel, a minimum of 12 and a maximum of 384 symbols can be contained in a power control group. In case of transmit diversity (softkey *ANT DIV*) the values reduce to the half. For QPSK modulated channels, a symbol always consists of two bits: the I-component is displayed first, followed by the Q-component. For BPSK modulated channels, a symbol always consists of one bit (only the I-component is assigned). For 8-PSK and 16-QAM modulated symbols, a symbol consists of 3 and 4 bits respectively. The order is shown in the following figure:

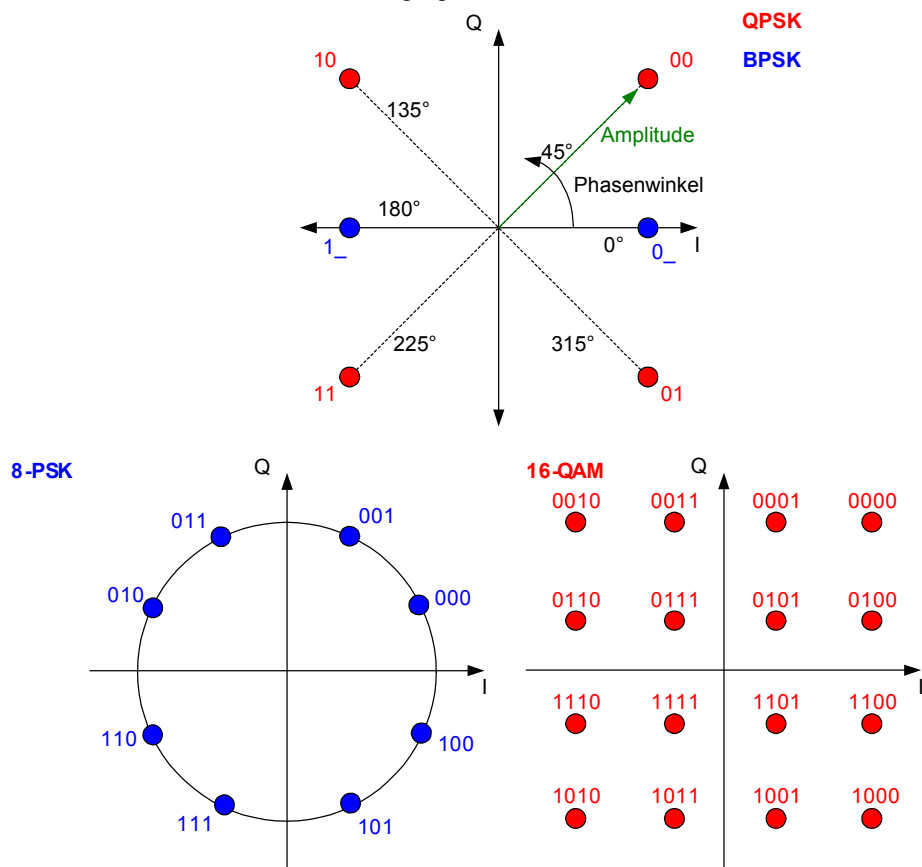


Fig. 6-21 Phasor diagram for QPSK, BPSK, 8-PSK and 16-QAM including bit values

In accordance with the radio configuration and the channel type, there are BPSK and QPSK modulated channels in the cdma2000 system.

Table 6–18 Relationship between channel type and modulation type

Channel type	Channel	Modulation
PICH	Pilot channel	BPSK
SYNC	Synchronisation channel	BPSK
PCH	Paging channel	BPSK
TDPICH	Transmit diversity pilot channel	BPSK
APICH	Auxiliary pilot channel	BPSK
ATDPICH	Auxiliary transmit diversity channel	BPSK
BCH	Broadcast channel	QPSK
CPCCH	Common power control channel	QPSK
CACH	Common assignment channel	QPSK
CCCH	Common control channel	QPSK
PDCCH	Packet data control channel	QPSK
PDCH	Packet data channel	QPSK, 8-PSK or 16-QAM
CHAN	Data channel radio configuration 1+2	BPSK
CHAN	Data channel radio configuration 3-5	QPSK

Evaluation of the bitstream for unassigned codes is possible, but the results are not meaningful on account of missing data; in this case all bits are marked as being invalid by means of '-'.
The marker can be used to scroll in the bitstream.

The marker can be used to scroll in the bitstream.


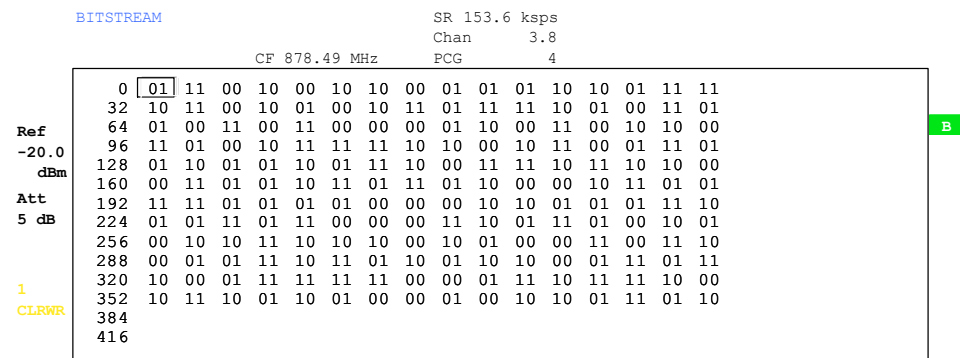


Fig. 6–22 Demodulated bits for a PCG of a channel

IEC/IEEE bus command: :CALC2:FEED "XTIM:CDP:BSTream"

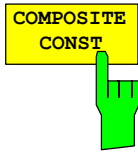

The *COMPOSITE CONST* softkey selects the evaluation of the constellation diagram at chip level. With *COMPOSITE CONST*, the total signal is taken into account over the selected power control group (*SELECT PCG* softkey). A constellation point is entered in the diagram for each of the 1536 chips. For orientation, the unit circle is added to the figure.


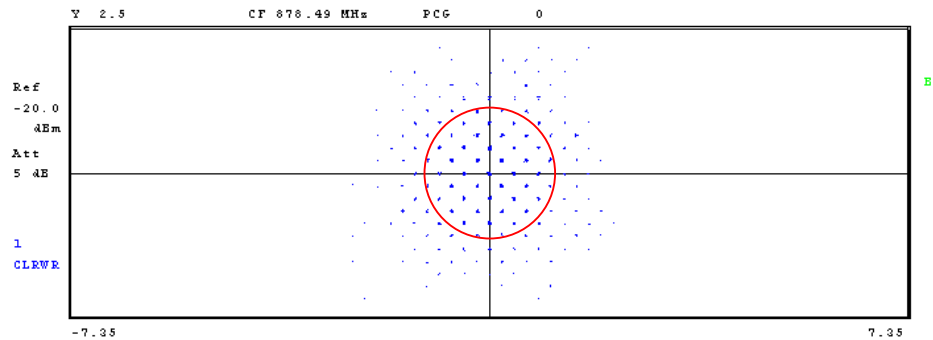


Fig. 6–23 Composite constellation diagram

IEC/IEEE bus command: `:CALC2:FEED "XTIM:CDP:COMP:CONS"`

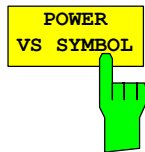

The *POWER VS SYMBOL* softkey selects the power versus symbol evaluation. The evaluation outputs the absolute power in dBm at every symbol time for the selected channel (*SELECT CHANNEL* softkey) and the selected PCGs (*SELECT PCG* softkey). This evaluation thus takes into account the results of a channel for a power control group.



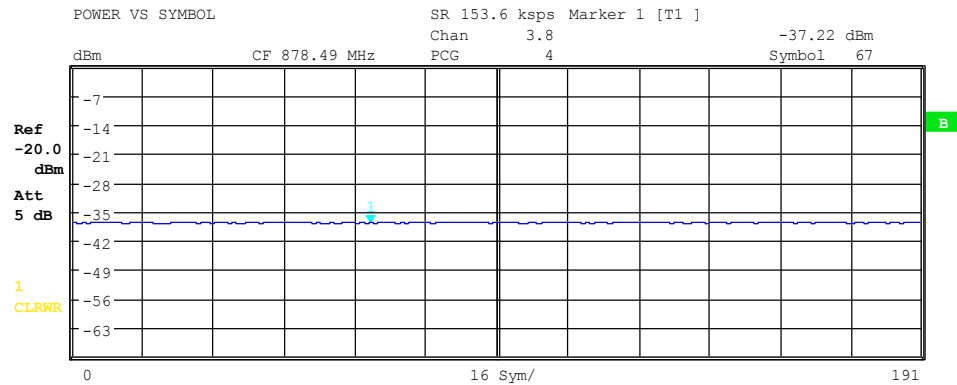


Fig. 6–24 Power versus symbol for a PCG of a channel

IEC/IEEE bus command: `:CALC2:FEED "XTIM:CDP:PVSY"`


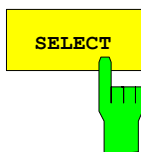


The *SELECT* softkey opens a submenu to define the capture configuration and the selection of the PCG and channel for the evaluation.

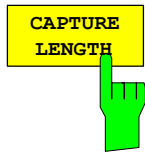

The *CAPTURE LENGTH* softkey supports input of the number of power control groups (PCG) that are to be analyzed. The input value is always in multiples of the PCGs. The range is from 2 to 50 (since firmware version 2.60/3.50 the maximum is increased to 64) for Analyzer R&S FSU, R&S FSQ and from 2 to 12 for Analyzer R&S FSP. With all evaluations exhibiting one value per PCG on the x-axis, the maximum value on the x-axis is the set *CAPTURE LENGTH* - 1.

 IEC/IEEE bus command: `:SENS:CDP:IQL 2..64 (2..12`

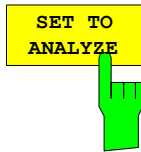


This function offers the possibility for the **R&S FSQ** to capture up to 2432 PCGs (more than 3 seconds) with a *SINGLE SWEEP* and then post process all the data with *SET TO ANALYZE*.

If the *SET COUNT* is set to 1 (default value), the device behaves as before and with the *CAPTURE LENGTH* the number of PCG can be set.

For R&S FSQ the *SET COUNT* can be adjusted in the range of 1...38. If the *SET COUNT* greater than 1 the *CAPTURE LENGTH* will be implicitly set to 64 PCGs and become unavailable. The *SET COUNT* defines then how many SETS of 64 PCGs shall be captured consecutively into the IQ RAM of the R&S FSQ. With the *SET TO ANALYZE* softkey the set for which the results are calculated can be defined. The range is from 0... (*SET COUNT*-1).

IEC-Bus-command: `:SENS:CDP:SET:COUNT 1..38 (FSQ)`
`:SENS:CDP:SET:VAL <numeric_value>`

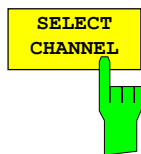

You can use the *SELECT CHANNEL* softkey to select a channel. All evaluations which take results for a channel into account, specify the results for the newly selected channel: *POWER VS PCG*, *POWER VS SYMBOL*, *RESULT SUMMARY*, *BITSTREAM*, *SYMBOL CONSTELLATION* and *SYMBOL EVM*. In the evaluations *CODE DOMAIN POWER*, *CODE DOMAIN ERROR POWER* and *CHANNEL TABLE* (all on screen A), the selected channel is marked in red.

A channel is entered as a decimal. The entered value is always converted to the base spreading factor. It is displayed in the input field in the format `<Channel>.<Base spreading factor>`.

Example:

Let the base spreading factor be 64. (*BASE SF* softkey).
 Enter the number 14 by means of the *SELECT CHANNEL* softkey.
 14.64 is displayed.

Normally, the code is displayed with reference to the base spreading factor in the function field above the diagrams.

If the current channel table contains a concentrated channel to which the selected channel belongs with reference to the base spreading factor, this concentrated channel will be displayed with the associated code number and spreading factor in the function field and marked in red in the corresponding evaluations.

Example:

Enter the same details as in the example shown above.
 Channel 2.4 is now active in the channel table.
 The associated code is 14.64, i.e. 2.4 is displayed in the function field and channel 2.4 is marked in red on screen A.
 In Hadamard order, all the codes belonging to channel 2.4 are marked: 2.62, 6.64, 10.64, **14.64**, ..., 62.64

If the channel configuration changes for the next measurement, the changed channel for which the channel `<channel>.<base spreading factor>` belongs is displayed in the function field and indicated in red on screen A.

Example:

Continuing with the above example, the channel configuration has been changed and now channel 6.8 is active.


Channel 6.8 is now displayed in the function field and

Marked in red on screen A. In Hadamard order, the codes 6.64, **14.64**, 22.64, ..., 54.64 are marked.

The rotating wheel behaviour depends on the evaluation on screen A and is geared to the graphic display. In the case of CODE DOMAIN POWER and CODE DOMAIN ERROR POWER, it depends on whether the Hadamard or BitReverse order is active. (Refer to the *ORDER* softkey.) The adjacent channel is always selected with the rotating wheel. With the channel table, the rotating wheel is used to scroll through the list.

Input over the IEC/IEEE bus generally refers to the base spreading factor.


IEC/IEEE bus command: `:SENS:CDP:CODE 0... (BASE_SF-1)`

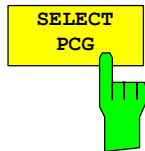

The *SELECT PCG* softkey is used to select a power control group. The PCG is entered as a decimal. In this instance the range is from 0 to (capture length-1), refer to the *CAPTURE LENGTH* softkey. All evaluations which take results for a PCG into account, specify the results for the newly selected PCG: (CODE DOMAIN POWER, CODE DOMAIN ERROR POWER, CHANNEL TABLE, POWER vs SYMBOL, COMPOSITE CONSTELLATION, RESULT SUMMARY, BITSTREAM, SYMBOL CONSTELLATION and SYMBOL EVM)

In the evaluations POWER vs PCG, COMPOSITE EVM and PEAK CODE DOMAIN ERROR the selected PCG is marked in red.

IEC/IEEE bus command: `:SENS:CDP:SLOT 0... (IQ_CAPTURE_LENGTH-1)`

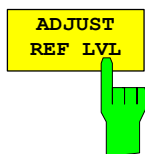


The *ADJUST REF LVL* softkey adjusts the reference level of the analyzer to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without the analyzer being overloaded or the dynamic response being limited by a too low signal-to-noise ratio.

IEC/IEEE bus command: `SENS:POW:ACH:PRES:RLEV`

Measurement configuration


CHAN CONF hot key

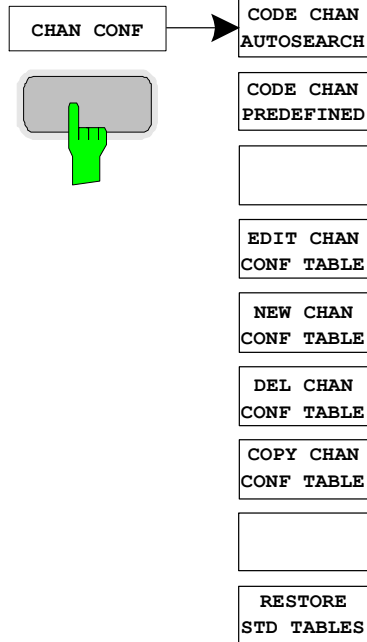

The *CHAN CONF* hot key opens a submenu with the configuration options for the channel search. On this submenu, predefined channel tables can be selected and are then taken as a basis for measurements by the code domain analyzer.

When the hot key is selected, a table containing the channel tables stored on the hard disk of the measuring instrument is opened. The table is used merely to obtain an overview; one of the tables can be selected for the measurement only after the *CODE CHAN PREDEFINED* softkey has been operated. The *RECENT* entry is the channel table of the last code domain power analysis to be performed.


IEC/IEEE bus command: `:CONF:CDP:BTS:CTAB:CAT?`

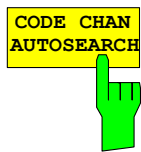

The *CODE CHAN AUTOSEARCH* softkey supports measurements of the code domain power analyzer in Autosearch mode. In this mode, the whole code domain (all permissible symbol rates and channel numbers) is searched for active channels. A channel is active when the minimum power entered by the user, referred to the total power, is exceeded (refer to the *INACT CHAN THRESHOLD* softkey) and an adequate signal-to-noise ratio is present.

CODE CHAN AUTOSEARCH mode is the default search mode with which the CDP analysis starts. It is used primarily to provide the user with an overview of the channels contained in the signal. If the signal contains channels which are not detected as being active in Autosearch mode, the CDP analysis can be performed with predefined channel configurations by changing to *CODE CHAN PREDEFINED* mode.

IEC/IEEE bus command: `:CONF:CDP:BTS:CTAB:STAT OFF`



The *CODE CHAN PREDEFINED* softkey switches the CDP analysis to the measuring mode with the help of predefined channel tables. In this mode there is no search for active channels in the code domain, but the channels of a channel table defined prior to a measurement are assumed to be active.

When the softkey is selected, a table containing all the channel tables stored on the measuring instrument is opened. The CDP analysis is switched to "Predefined Channel Table" mode. The last table of Autosearch mode is initially taken as a basis for the measurement. This table is available at the *RECENT entry* .

Switching to one of the predefined channel tables is done by selecting the corresponding table entry and operating one of the unit keys or by pressing Enter; the selected channel table is taken as a basis for the evaluation as from the next measurement. A tick marks the selected channel table.

R&S FS-K82 comes with the following channel table stored on the measuring instrument:

Channel table with PICH/SYNC/PCH and 6 data channels called **MPC_RC1**. (Base Station **Main Path 6 Channels Radio Configuration 1**).

Channel table with PICH/SYNC/PCH and 6 data channels called **MPC_RC4**. (Base Station **Main Path 6 Channels Radio Configuration 4**).

Channel table with PICH/TDPICH/SYNC/PCH and 6 data channels called **BPC_RC4**. (Base Station **Both Paths 6 Channels Radio Configuration 4**).

Channel table similar to MPC_RC4, but additionally with a PACKET DATA CONTROL CHANNEL and 11 PACKET DATA CHANNELS called **DV** due to the 1xEV-DV enhancement.

For a precise definition of the channel tables refer to Chapter 4.

If transmit diversity (two-antenna system) is used, the following test setups are possible:

- A) Feeding of antenna 1 identical to the normal measurement without transmit diversity
- B) Feeding of antenna 2
- C) Feeding of the aggregate signal of both antennas


If a predefined channel table is used it must describe the feed in signal.

This means that in case A) the pilot channel PICH **must** be contained in the predefined channel table. The pilot channel of the antenna 2 TDPICH **must not** be included.

In case B) the pilot channel of antenna 2 TDPICH **must** be included in the predefined channel table. Pilot channel PICH **must not** be included.

In case C) the pilot channel PICH and the pilot channel of antenna 2 TDPICH **must** be included in the predefined channel table.

```
IEC/IEEE bus command: :CONF:CDP:BTS:CTAB:STAT ON
                      :CONF:CDP:BTS:CTAB:SEL "MPC_RC4"
```

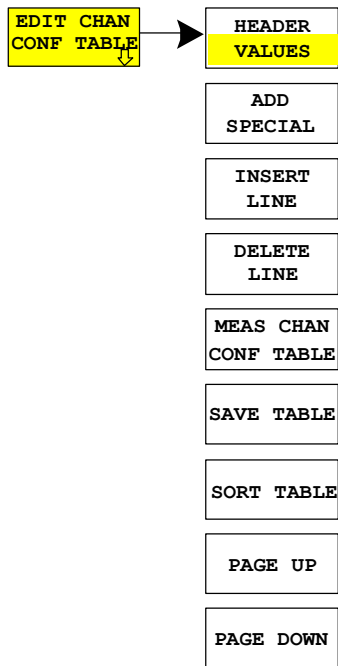

The *EDIT CHAN CONF TABLE* softkey opens the selected channel table in which the channel configuration can be modified. In addition, a submenu is opened with the softkeys required for editing the channel table.

EDIT CHANNEL TABLE					
NAME:	MPC_RC4				
COMMENT:	Base Station Main Path 6 Channels RC4				
TYPE	CHAN.SF	SYMBOL RATE [ksps]	RC	CDP REL [dB]	STATUS
PICH	0.64	19.2	-	0.0	ACTIVE
SYNC	32.64	19.2	-	0.0	ACTIVE
PCH	1.64	19.2	-	0.0	ACTIVE
CHAN	9.128	9.6	4	0.0	ACTIVE
CHAN	10.128	9.6	4	0.0	ACTIVE
CHAN	11.128	9.6	4	0.0	ACTIVE
CHAN	15.128	9.6	4	0.0	ACTIVE
CHAN	17.128	9.6	4	0.0	ACTIVE
CHAN	25.128	9.6	4	0.0	ACTIVE


Fig. 6-25 Table for editing a channel configuration

As a general rule, each of the channel tables stored on the measuring instrument can be modified at will. The edited table is not stored automatically on the hard disk of the measuring instrument but only by selecting the *SAVE TABLE* softkey. This prevents a table from being accidentally overwritten (such as one of the channel models).

If a table is edited that is currently the basis for the code domain power analysis, the edited table is used for the next measurement immediately after being saved. The effects of the changes in the table are therefore immediately visible. Here again, the edited table is not saved on the hard disk of the measuring instrument until the *SAVE TABLE* softkey has been selected.

If a table that is stored on the hard disk of the measuring instrument but is not currently enabled is edited, the changes will not be visible until it has been saved (*SAVE TABLE* softkey) and then enabled.

If the CHAN NO parameter or the spreading factor of a channel is changed, a check is made for code domain conflicts after the input has been confirmed (units key). If a code domain conflict is detected, the channels causing the conflict are identified by an asterisk. The user is thus given an opportunity to eliminate the code domain conflicts. When a table with code domain conflicts is used for a CDP analysis, the results are invalid.

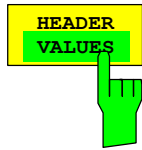

The *HEADER/VALUES* softkey sets the focus of the edit option either to the entries in the table or to the table header.

Editing the table header (*HEADER*):

Overwriting of saved tables can be avoided by changing the name of a table. A table name must not consist of more than 8 characters.

IEC/IEEE bus command: `:CONF:CDP:BTS:CTAB:NAME "NEW_TAB"`

Editing table entries (*VALUES*):

The actual data of the channel table are edited here. The following entries are available for each of the channels contained in the table (confirm an input with the help of the units keys):

TYPE: Channel type. Special channels are identified by name (PICH, SYNC, PCH, TDPICH, APICH, ATDPICH, BCH, CPCCH, CACH, CCCH, PDCCH and PDCH). All other channels contain the CHAN entry for normal data channels.

CHAN.SF: The channel number and the spreading factor are entered for the channel in this column. If no decimal point is entered, the base spreading factor is used for the channel spreading factor (refer to the *BASE SF* softkey). Invalid entries are rejected.

SYMBOL RATE: Symbol rate with which the channel is transmitted. It depends directly on the spreading factor of the channel (refer to Table 6–17) and therefore cannot be edited.

RC: Radio configuration, cannot be edited for special channels '-'. For data channels (CHAN) values between 1 and 5 can be entered. The AUTO Search mode differentiates between the 1&2 (for which BPSK data channels are modulated) and RC 3 to 5 (for which QPSK data channels are modulated). For PACKET DATA CHANNEL (PDCH) the radio configuration is 10 (QPSK), 10 (8-PSK) or 10 (16-QAM) depending on the requested modulation type.

CDP REL.: Informative entry of the relative channel power (referred to the pilot or total power depending on the *POWER REF TOT/PICH* softkey). The entry cannot be edited and only exists for the *RECENT* table; it is used to detect channels with low power.

STATUS: Status of the channel (active/inactive). When a change of channel status occurs, a channel that has been entered in the table can be hidden in the code domain power analysis without having to remove the corresponding entry from the table. Only channels having an "active" channel status are used for the CDP analysis.

IEC/IEEE bus commands: `:CONF:CDP:BTS:CTAB:DATA`
`0,6,0,0,0,0,1,0.0,`
`10,5,3,4,0,0,1,0.0`
 'Select PICH 0.64 and data channel
 with RC4/Walsh code 3.32.

`:CONF:CDP:BTS:CTAB:COMM "Comment for new table"`



The *ADD SPECIAL* softkey allows special channels to be added to the channel table.

ADD SPECIAL CHANNEL	
PICH	Pilot Channel
SYNC	Synrchonisation Channel
PCH	Paging Channel
TDPICH	Transmit Diversity Channel
APICH	Auxiliary Pilot Channel
ATDPICH	Auxiliary Transmit Diversity Pilot Channel
BCH	Broadcast Channel
CPCCH	Common Power Control Channel
CACH	Common Assigment Channel
CCCH	Common Control Channel
PDCCH	Packet Data Control Channel
PDCH	Packet Data Channel

Fig. 6–26 Table of special channels

All channels not listed are entered as CHAN by means of the *Insert Line* softkey.

If transmit diversity (two–antenna system) is used, the following test setups are possible:

- A) Feeding of antenna 1 identical to the normal measurement without transmit diversity
- B) Feeding of antenna 2
- C) Feeding of the aggregate signal of both antennas

If a predefined channel table is used, the feed signal must fulfill the following conditions:

In case A) the pilot channel PICH **must** be contained in the predefined channel table. The pilot channel of the antenna 2 TDPICH **must not** be included.


In case B) the pilot channel of antenna 2 TDPICH **must** be included in the predefined channel table. Pilot channel PICH **must not** be included.

In case C) pilot channel PICH **and** the pilot channel of antenna 2 TDPICH **must** be included in the predefined channel table.

IEC/IEEE bus command: — (integrated in command
:CONFigure:CDPower[:BTS]:CTable:DATA)

The *INSERT LINE* softkey adds a new entry to the table. Entries can be made in any order. A channel is only included in the CDP analysis if all required entries are present in the list.

IEC/IEEE bus command: —

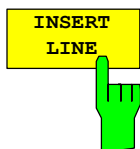

The *DELETE LINE* softkey deletes the selected line from the table.

IEC/IEEE bus command: --






The *MEAS CHAN CONF TABLE* softkey initiates a measurement in *CODE CHAN AUTOSEARCH* mode. The measurement results are applied to the open channel table. The softkey is only available in *CODE CHAN AUTOSEARCH* mode.

IEC/IEEE bus command: --



The *SAVE TABLE* softkey saves the table with its specified name. Note: Editing of the channel models and saving with the original name results in the models being overwritten.

IEC/IEEE bus command: -- (automatic with remote control)

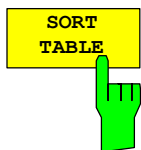


The *SORT TABLE* softkey sorts the table in ascending order by spreading factor and in ascending order within a spreading factor by channel number.

IEC/IEEE bus command: --



The *DEL CHAN CONF TABLE* softkey deletes the selected table. The current table in *CODE CHAN PREDEFINED* mode cannot be deleted.

IEC/IEEE bus command :CONF:CDP:BTS:CTAB:DEL

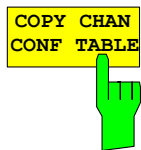


The *COPY CHAN CONF TABLE* softkey copies the selected table. The system asks the name under which you want to save the copy.

IEC/IEEE bus command: :CONF:CDP:BTS:CTAB:COPY "CTAB2"



The *RESTORE STD TABLES* softkey restores the predefined channel tables including all of their values (refer to Chapter 4) to the state in which they were in when the device left the factory. In this way unintentional overwriting can be undone.

IEC-bus command: :CONF:CDP:CTAB:REST

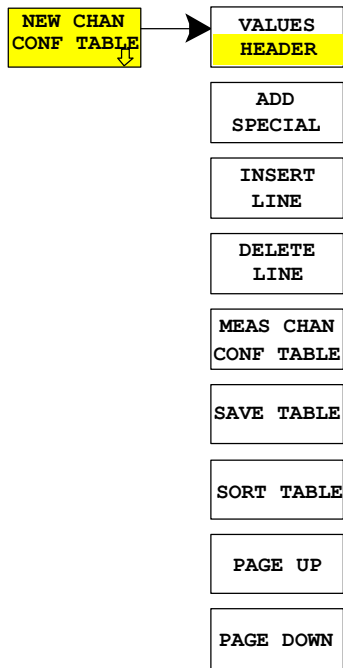


The *NEW CHAN CONF TABLE* softkey opens a submenu that is identical with that described for the *EDIT CHAN CONF TABLE* softkey. Unlike *EDIT CHAN CONF TABLE*, however, only the pilot channel PICH is included in the table with *NEW CHAN CONF TABLE*; the name of the table is similarly still undefined:

EDIT CHANNEL TABLE					
NAME:					
COMMENT:					
TYPE	CHAN.SF	SYMBOL RATE [ksps]	RC	CDP REL [dB]	STATUS
PICH	0.64	19.2	-	0.0	ACTIVE

Fig. 6-27 Creating a new channel configuration

Configuring the firmware application – SETTINGS

SETTINGS hot key

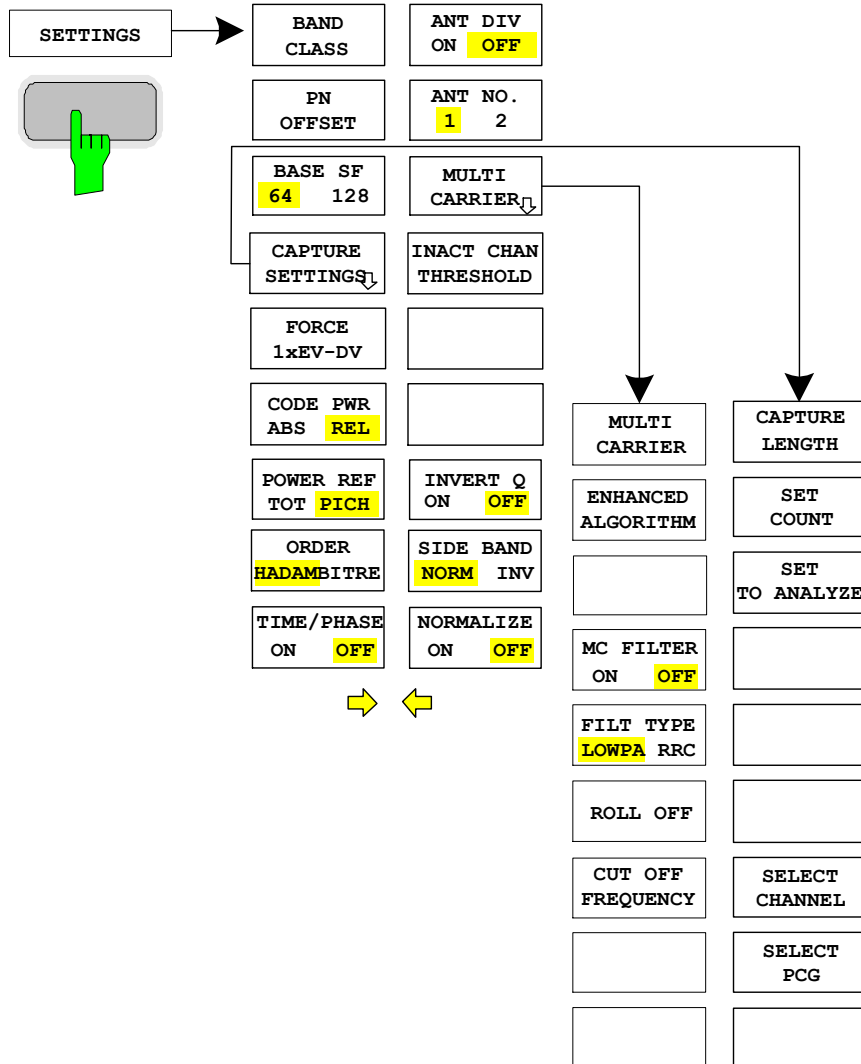


The *SETTINGS* hot key opens a submenu for setting the measurement parameters of the firmware application.

The *BAND CLASS* softkey is a setting parameter for the RF measurements "adjacent channel power" and "spectrum emission mask".

All other softkeys configure the measurements in the code domain analyzer.

The softkeys *CAPTURE SETTINGS* and *MULTI CARRIER* are leading in the submenus as shown in the drawing on the right.

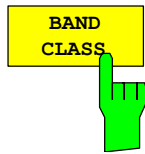

The *BAND CLASS* softkey supports entry of the frequency band used for the RF measurements "adjacent channel power" and "spectrum emission mask". The selection is made from a table in which the name of the band class is displayed.


The center frequency entry is not restricted by the selected band class.

BAND CLASS SELECTION	
Band Class 0	(800 MHz Band)
✓ Band Class 1	(1900 MHz Band)
Band Class 2	(TACS Band)
Band Class 3	(JTACS Band)
Band Class 4	(Korean PCS Band)
Band Class 5	(450 MHz Band)
Band Class 6	(2 GHz Band)
Band Class 7	(700 MHz Band)
Band Class 8	(1800 MHz Band)
Band Class 9	(900 MHz Band)
Band Class 10	(Secondary 800 MHz Band)
Band Class 11	(400 MHz European PAMR Band)
Band Class 12	(800 MHz PAMR Band)
Band Class 14	(US PCS 1.9GHz Band)
Band Class 15	(AWS Band)

Fig. 6–28 Band class selection


The user can scroll in the table, and the entry currently being used is checked, while a bar displays the selected entry; click ENTER to apply the value. The numerical value is specified over the IEC/IEEE bus.

IEC/IEEE bus command: `:CONF:CDP:BCL 1 '1900 MHz'`

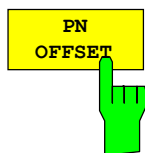


The *PN OFFSET* softkey supports input of the PN offset of the base station, which is used to distinguish the base stations within a cdma2000 system. The PN offset determines the offset in the circulating PN sequence in multiples of 64 chips with reference to the event second clock trigger.

IEC/IEEE bus command: `:SENS:CDP:PNOF 0...511`

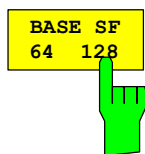


The *BASE SF* softkey selects the base spreading factor as 64 or 128. If channels of spreading factor 128 are being analyzed, the base spreading factor of 128 should be used since, when base spreading factor 64 is used, alias power is displayed in the CODE DOMAIN POWER and CODE DOMAIN ERROR POWER diagrams. (Refer to the colours for these evaluations.)

IEC/IEEE bus command: `: [SENSe:]CDPower:SFACTOR 64 | 128`


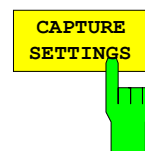


The *CAPTURE SETTINGS* softkey opens a submenu to define the capture configuration and the selection of slot and channel for the evaluation.

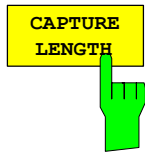

The *CAPTURE LENGTH* softkey supports input of the number of power control groups (PCG) that are to be analyzed. The input value is always in multiples of the PCGs. The range is from 2 to 50 (since firmware version 2.6x/3.5x the maximum is increased to 64) for Analyzer R&S FSU, R&S FSQ and from 2 to 12 for Analyzer R&S FSP. With all evaluations exhibiting one value per PCG on the x-axis, the maximum value on the x-axis is the set *CAPTURE LENGTH* - 1.

 IEC/IEEE bus command: `:SENS:CDP:IQL 2..64 (2..12)`

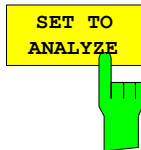


This function offers the possibility for the **R&S FSQ** to capture up to 2432 PCGs (more than 3 seconds) with a *SINGLE SWEEP* and then post process all the data with *SET TO ANALYZE*.

If the *SET COUNT* is set to 1 (default value), the device behaves as normal and with the *CAPTURE LENGTH* the number of PCG can be set.

For R&S FSQ the *SET COUNT* can be adjusted in the range of 1...38. If the *SET COUNT* is greater than 1 the *CAPTURE LENGTH* will be implicitly set to 64 PCGs and become unavailable. The *SET COUNT* defines then how many SETS of 64 PCGs shall be captured consecutively into the IQ RAM of the R&S FSQ. With the *SET TO ANALYZE* softkey the set for which the results are calculated can be defined. The range is from 0... (*SET COUNT*-1).

IEC-Bus-command: `:SENS:CDP:SET:COUNT 1..38 (FSQ)`
`:SENS:CDP:SET:VAL <numeric_value>`

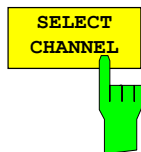

You can use the *SELECT CHANNEL* softkey to select a channel. All evaluations which take results for a channel into account, specify the results for the newly selected channel: *POWER VS PCG*, *POWER VS SYMBOL*, *RESULT SUMMARY*, *BITSTREAM*, *SYMBOL CONSTELLATION* and *SYMBOL EVM*. In the evaluations *CODE DOMAIN POWER*, *CODE DOMAIN ERROR POWER* and *CHANNEL TABLE* (all on screen A), the selected channel is marked in red.

A channel is entered as a decimal. The entered value is always converted to the base spreading factor. It is displayed in the input field in the format `<Channel>.<Base spreading factor>`.

Example:

Let the base spreading factor be 64. (*BASE SF* softkey).
 Enter the number 14 by means of the *SELECT CHANNEL* softkey.
 14.64 is displayed.

Normally, the code is displayed with reference to the base spreading factor in the function field above the diagrams.

If the current channel table contains a concentrated channel to which the selected channel belongs with reference to the base spreading factor, this concentrated channel will be displayed with the associated code number and spreading factor in the function field and marked in red in the corresponding evaluations.

Example:

Enter the same details as in the example shown above.
 Channel 2.4 is now active in the channel table.
 The associated code is 14.64, i.e. 2.4 is displayed in the function field and channel 2.4 is marked in red on screen A.
 In Hadamard order, all the codes belonging to channel 2.4 are marked: 2.62, 6.64, 10.64, **14.64**, ..., 62.64

If the channel configuration changes for the next measurement, the changed channel for which the channel `<channel>.<base spreading factor>` belongs is displayed in the function field and indicated in red on screen A.

Example:

Continuing with the above example, the channel configuration has been changed and now channel 6.8 is active.


Channel 6.8 is now displayed in the function field and

Marked in red on screen A. In Hadamard order, the codes 6.64, **14.64**, 22.64, ..., 54.64 are marked.

The rotating wheel behaviour depends on the evaluation on screen A and is geared to the graphic display. In the case of CODE DOMAIN POWER and CODE DOMAIN ERROR POWER, it depends on whether the Hadamard or BitReverse order is active. (Refer to the *ORDER* softkey.) The adjacent channel is always selected with the rotating wheel. With the channel table, the rotating wheel is used to scroll through the list.

Input over the IEC/IEEE bus generally refers to the base spreading factor.


IEC/IEEE bus command: `:SENS:CDP:CODE 0... (BASE SF-1)`

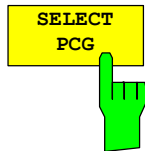

The *SELECT PCG* softkey is used to select a power control group. The PCG is entered as a decimal. In this instance the range is from 0 to (capture length-1), refer to the *CAPTURE LENGTH* softkey. All evaluations which take results for a PCG into account, specify the results for the newly selected PCG: (CODE DOMAIN POWER, CODE DOMAIN ERROR POWER, CHANNEL TABLE, POWER vs SYMBOL, COMPOSITE CONSTELLATION, RESULT SUMMARY, BITSTREAM, SYMBOL CONSTELLATION and SYMBOL EVM)


In the evaluations POWER vs PCG, COMPOSITE EVM and PEAK CODE DOMAIN ERROR the selected PCG is marked in red.

IEC/IEEE bus command: `:SENS:CDP:SLOT 0 ... (IQ_CAPTURE_LENGTH-1)`

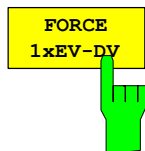

The *FORCE 1xEV-DV* softkey is necessary in the automatic search mode to support the channel detection. If there is a QPSK modulated channel with spreading-factor 32 it is not possible to distinguish whether it is a data channel (CHAN with radio configuration 3-5) or a PACKET DATA CHANNEL (PDCH with radio configuration 10). This decision is made for the PDCH of the 1xEV-DV system if the softkey is active. If the softkey is not active (default) the CHAN is detected.

IEC/IEEE bus command: `:SENS:CDP:FDV ON | OFF`

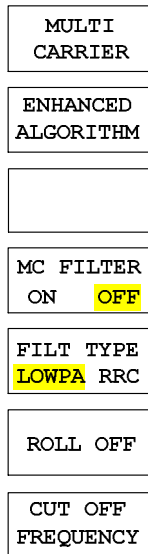

The softkey *MULTI CARRIER* activates an additional mode in the signal processing to improve the processing of multi carrier signals. This allows the measurement on one carrier out of a multi carrier signal with 1.23 MHz carrier spacing even with identical PN offset values on all carriers.

This multi carrier mode has by default two features switched on:

- improved algorithm for signal detection on multi carrier signals
- additional low pass filter

For that reason the softkey *ENHANCED ALGORITHM* and *MC FILTER* are switched on if the *MULTI CARRIER* is activated. The filter type LOWPA (for low pass filter) is selected.

From this base setting the enhanced multi carrier algorithm can be switched on or off with the *ENHANCED ALGORITHM* softkey.

With respect to the *MC FILTER* there are also different configurations possible: The *MC FILTER ON/OFF* softkey allows to switch the additional filter on or off.

If the *ENHANCED ALGORITHM* and the *MC FILTER* are switched off the multi carrier mode is deactivated and the *MULTI CARRIER* softkey becomes grey. To restart the multi carrier mode it is necessary to repress the *MULTI CARRIER* softkey.

The softkey *FILT TYPE LOWPA/RRC* allows the selection between the automatically activated low pass filter and a configurable RRC filter with integrated hamming window. If the RRC filter is selected further two softkeys become available. These are the softkeys *ROLL OFF* and *CUT OFF FREQUENCY*. The first defines the roll off factor, meaning the type of decay of the filter curve, between 0.01 and 0.99 in 0.01 steps – default value is 0.02. The second softkey defines the cut off frequency. This is the frequency where the cut off of the filter begins – here the default value is 1.25 MHz and the value is adjustable between 0.1 and 2.4 MHz in Hz-steps.

If the *MULTI CARRIER* softkey is switched off also the further settings became unavailable.

Please be aware that the low pass filter is influencing the measured signal quality (like RHO or EVM) in comparison without an additional filter and the improved algorithm will slightly increase the calculation time.

```
IEC/IEEE bus command: :CONF:CDP:MCAR ON | OFF
                      :CONF:CDP:MCAR:MALG ON | OFF
                      :CONF:CDP:MCAR:FILT:STAT ON | OFF
                      :CONF:CDP:MCAR:FILT:TYPE LPAS | RRC
                      :CONF:CDP:MCAR:FILT:ROFF<numeric_value>
```




The *INACT CHAN THRESHOLD* softkey supports input of the minimum power which a single channel must have compared with the total signal in order to be regarded as the active channel.

Channels below the specified threshold are regarded as "inactive".

The two measurements *COMPOSITE EVM* and *PEAK CODE DOMAIN ERR*, which are specified as measurements on the total signal, are performed using the list of active channels. Distortions of these two measurements always occur when active channels are not detected as being active and unassigned codes are wrongly given the status of "occupied channel". *INACT CHAN TRHESHOLD* can therefore be used to influence the results of the two measurements.


The default value is –60 dB, which results in location of all channels by the CDP analysis with signals such as the cdma2000 test models. If not all channels contained in the signal are detected automatically, *INACT CHAN THRESHOLD* must be decreased.

```
IEC/IEEE bus command: :SENS:CDP:ICTR -100 dB ... 0 dB
```

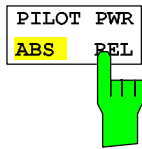


The **PILOT PWR ABS/REL** softkey sets the pilot channel power is displayed in absolute or relative terms in the result summary. In relative mode, the reference power is the total power.

IEC/IEEE bus command: `:SENS:CDP:PPR ABS | REL`

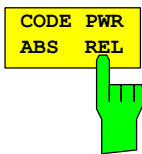

The **CODE PWR ABS/REL** softkey selects for the CODE DOMAIN POWER evaluation whether the y -values should be displayed as absolute (dBm) or relative (dB). With Relative mode, the reference is either the total power or the pilot power. With **ANT OFF** and **ANT NO 1**, the PICH is the reference of the pilot power; with **ANT NO 2** it is the TDPICH

IEC/IEEE bus command: `:CALC1:FEED "XPOW:CDP:RAT" (relative)`
`:CALC1:FEED "XPOW:CDP" (absolute)`

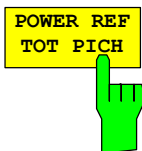

The **POWER REF TOT/PICH** softkey determines the reference power for the relative power evaluations:

TOT All relative power values (*CDP RELATIVE* and *POWER VS PCG* evaluations) are referred per PCG to the total power of the signal in the PCG concerned.

PICH The reference power is that of the PICH, or in the case of **ANT NO. 2**, that of the TDPICH in the corresponding PCG.


The default setting of the softkey is *PICH*.

Since PCG-oriented power control is planned for each channel according to cdma2000, the total power of the signal will vary from PCG to PCG in accordance with the power controls of the different channels. With enabled power control and reference to the total power of the signal, a relative CDP evaluation by means of the PCG number (*POWER VS PCG*) does therefore not necessarily reflect the power control of the selected channel.

Example (theoretical): If there is just one data channel in the signal and its power is controlled, and if the power is referred to the total power of the signal (which consists only of the contribution from this one data channel), a straight line will appear in the *POWER VS PCG* diagram instead of the expected power staircase. The reference value *TOT* of the relative evaluations is therefore only meaningful if the signal does not contain power control.

The *PICH* setting, by contrast, reflects the precise variation of power for each PCG in a selected channel even for signals with power control. Since the PICH is not subject to power control under any circumstances, the same reference value is used in every PCG.

IEC/IEEE bus command: `:SENS:CDP:PREF TOT | PICH`

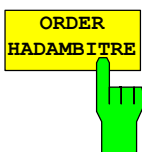


The **ORDER HADAM/BITRE** softkey makes it possible to define the channel sort for the CODE DOMAIN POWER and CODE DOMAIN ERROR POWER evaluations. With Hadamard order (softkey at HADAM), the codes are sorted in ascending order. With BitReverse order (softkey at BITRE), channels with concentrated codes are next to one another, since the code numbers are sorted in bit-reversed order. (Refer to the CODE DOMAIN POWER and CODE DOMAIN ERROR POWER evaluations.)

IEC/IEEE bus command: `:SENS:CDP:ORD HAD | BITR`




The *TIME/PHASE ON/OFF* softkey supports the enabling and disabling of the timing and phase offset evaluation of the channels to the pilot. If the value of the softkey is OFF (default setting) or more than 50 active channels are in the signal, dashes ('—') are entered in the channel occupation table and in the result summary evaluation for the timing and phase offsets. If the softkey is ON, the evaluation will take place and the values will be displayed.

IEC/IEEE bus command: :SENS:CDP:TPM ON | OFF

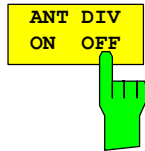

The *ANT DIV* (Antenna Diversity) softkey supports enabling and disabling of orthogonal transmit diversity (two-antenna system). The default setting of the softkey is OFF. If the value is at ON, the firmware application measures transmit diversity signals. The *ANT NO* softkey becomes available.

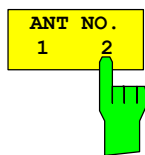


The *ANT NO.* softkey is used to select the antenna for which the evaluation is required to be performed. With transmit diversity, the signal of antenna 1 or the signal of antenna 2 or the aggregate signal from both antennas is fed in. The softkey is merely used to select the antenna for which results will be displayed.

On antenna 1, the pilot channel PICH with channel number 0 and spreading factor 64 (0.64) is required.

On antenna 2, the transmit diversity pilot channel TDPICH with channel number 16 and spreading factor 128 (16.128) is required.


For a correct entry of the predefined channel table with transmit diversity, refer to the *CODE CHAN PREDEFINED* softkey.

IEC/IEEE bus command: :SENS:CDP:ANT OFF | 1 | 2

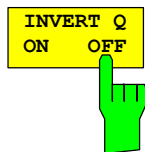

The *INVERT Q* softkey inverts the sign of the Q-component of the signal. The default setting is OFF.

IEC/IEEE bus command: :SENS:CDP:QINV OFF

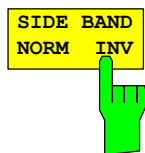

The *SIDE BAND NORM / INV* softkey chooses between measurement of the signal in normal (NORM) and inverted spectral position (INV).

NORM The normal position allows measurement of base station RF signals.

INV The inverted position is practical for measurements on IF modules or components in the case of spectral inversion.

The default setting is NORM.

IEC/IEEE bus command: :SENS:CDP:SBAN NORM|INV



The *NORMALIZE ON / OFF* softkey eliminates the DC offset from the signal. The default setting of the parameter is OFF.

IEC/IEEE bus command: :SENS:CDP:NORM OFF

Frequency settings – *FREQ* key



CENTER

The *FREQ* key opens a submenu for changing the measurement frequency.

CF-
STEPSIZE

The *CENTER* softkey opens the input window for manually entering the center frequency.

The permissible input range of the center frequency is

$$\text{Minspan}/2 \leq f_{\text{center}} \leq f_{\text{max}} - \text{Minspan}/2$$

f_{center}

center frequency

Minspan

smallest selectable span >0 Hz (10 Hz)

f_{max}

maximum frequency

IEC/IEEE bus command: :FREQ:CENT 100MHz

FREQUENCY
OFFSET

CF-STEPSIZE opens a submenu for setting the step size of the center frequency change. There is an option of entering the step size manually (*MANUAL* softkey) or using the current measurement frequency (*CENTER* softkey). The softkeys are described in the manual for the basic unit.

IEC/IEEE bus command: :FREQ:CENT:STEP <numeric_value>


The *FREQUENCY OFFSET* softkey enables entry of an arithmetic frequency offset which is added to the frequency axis labelling. The range for the offset is –100 GHz to 100 GHz. The default setting is 0 Hz.

IEC/IEEE bus command: :FREQ:OFFS 10 MHz

Span settings – *SPAN* key

The *SPAN* key is disabled for measurements in the code domain analyzer. For all other measurements (refer to the *MEAS* key), the permissible span settings are explained for the measurement concerned. The associated menu corresponds to that of the measurement in the basic unit and is described in the manual for the basic unit.

Level settings – AMPT key

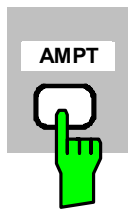

REF LEVEL

The *AMPT* key opens a submenu for setting the reference level.

ADJUST
REF LEVEL

The *REF LEVEL* softkey enables entry of the reference level. The entry is performed in dBm.

REF LEVEL
POSITION

IEC/IEEE bus command: :DISP:WIND:TRAC:Y:RLEV -60dBm

ADJUST REF LEVEL executes a routine for optimum adaptation of the reference level to the signal.

Y PER DIV

IEC/IEEE bus command: :SENS2:CDP:LEV:ADJ

REF VALUE
POSITION

The *REF LEVEL OFFSET* softkey enables entry of an arithmetic level offset. This is added to the measured level irrespective of the selected unit. The Y-axis scaling is changed accordingly.

The setting range is ± 200 dB in steps of 0.1 dB.

RF ATTEN
MANUAL

IEC/IEEE bus command: :DISP:WIND:TRAC:Y:RLEV:OFFS -10dB

RF ATTEN
AUTO

Y PER DIV sets the grid spacing on the y-axis for all diagrams in which this is possible.

IEC/IEEE bus command: :DISP:WIND2:TRAC1:Y:SCAL:PDIV

REF VALUE POSITION supports entry of the position of the y-axis reference value on the axis (0 to 100%).

IEC/IEEE bus command: :DISP:WIND2:TRAC1:Y:SCAL:RPOS

The *RF ATTEN MANUAL* softkey enables entry of the attenuation, irrespective of the reference level.

If the required reference level can no longer be set for the given RF attenuation, it will be adjusted and the message "Limit reached" will be issued.

IEC/IEEE bus command: :INP:ATT 40 DB


The *RF ATTEN AUTO* sets the RF attenuation automatically irrespective of the set reference level.

This ensures that the optimum attenuation desired by the user is always used.

RF ATTEN AUTO is the default setting.

IEC/IEEE bus command: :INP:ATT:AUTO ON

Marker settings – MKR key

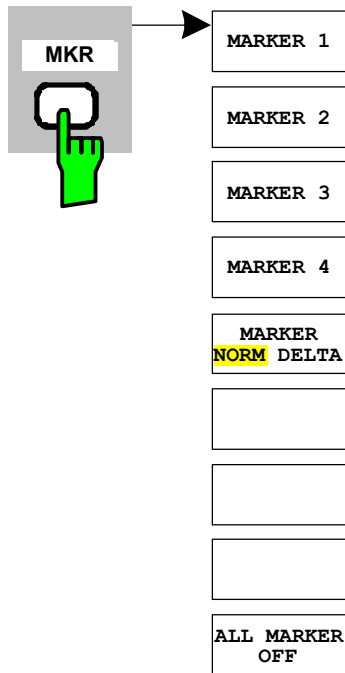

The *MARKER* key opens a submenu for the marker settings.

Markers are not available for the *RESULT SUMMARY* and *CHANNEL TABLE* evaluations. Up to four markers can be enabled in all other evaluations and defined as markers or delta markers with the help of the *MARKER NORM/DELTA* softkey.

The *MARKER 1/2/3/4* softkeys select the marker concerned and enable it simultaneously.

Marker 1 is always the normal marker after it has been enabled, while markers 2 to 4 are delta referring to marker 1 after they have been enabled. The *MARKER NORM DELTA* softkey can be used to transform these markers into markers with absolute measure value display. If marker 1 is the active marker, *MARKER NORM DELTA* is enabled as an additional delta marker.

Pressing the *MARKER 1* to *MARKER 4* softkeys disables the selected marker.

IEC/IEEE bus command: :CALC:MARK ON;
 :CALC:MARK:X <value>;
 :CALC:MARK:Y?
 :CALC:DELT ON;
 :CALC:DELT:MODE ABS|REL
 :CALC:DELT:X <value>;
 :CALC:DELT:X:REL?
 :CALC:DELT:Y?

The *ALL MARKER OFF* softkey disables all markers (reference and delta markers). It also disables the functions and displays associated with the markers and delta markers.

IEC/IEEE bus command: :CALC:MARK:AOFF

The parameters relating to an enabled marker are read out above the diagrams:

 



Fig. 6–29 Marker field of diagrams

Apart from the channel power, which is displayed relative to the value specified at *POWER REF TOT/PICH*, the channel parameters are specified. The meanings are as follows (for the channel assigned to the marker):

- PCG 03: PCG number of the channel
- SR 19.2 ksps: Symbol rate of the channel
 (for unassigned codes 9.6 ksps)
- 1.64: Walsh code number and spreading factor of the
 channel

For all other measurements not belonging to the code domain analyzer the marker functions of the basic unit apply.

Changing instrument settings – MKR→ key

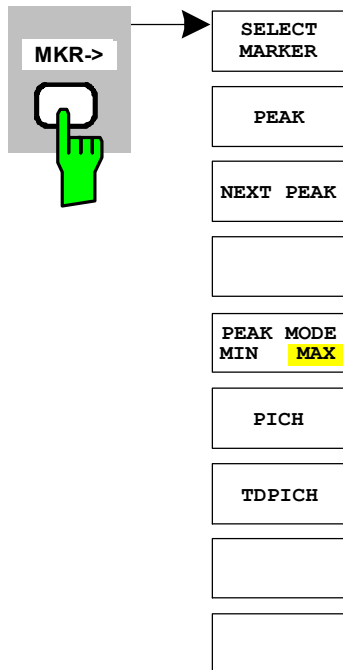

The *MKR* → key opens a submenu for marker functions:

The *SELECT MARKER* softkey selects the desired marker in a data input field. If the marker is disabled, it is enabled and can then be moved. You enter a number. Delta marker 1 is selected by entering '0'.

```
IEC/IEEE bus command :CALC:MARK1 ON;
                     :CALC:MARK1:X <value>;
                     :CALC:MARK1:Y?
```

The *PEAK* softkey sets the active marker or delta marker to the maximum/minimum of the associated trace. If no marker had been active before the *MKR* → menu was opened, marker 1 is automatically enabled and the Peak function is executed.

```
IEC/IEEE bus command: .CALC:MARK:MAX
                     .CALC:DELT:MAX
                     .CALC:MARK:MIN
                     .CALC:DELT:MAX
```

The *NEXT PEAK* softkey sets the active marker or delta marker to the next lower maximum/minimum value of the associated trace. The search direction is specified by the setting in the *NEXT MODE LEFT/RIGHT* submenu.

```
IEC/IEEE bus command: CALC:MARK:MAX:NEXT
                     CALC:DELT:MAX:NEXT
                     CALC:MARK:MIN:NEXT
                     CALC:DELT:MIN:NEXT
```

The *PEAK MODE MIN/MAX* softkey sets whether the peak search should determine the maximum or minimum value of the trace. The parameter affects the response of the *PEAK* and *NEXT PEAK* softkeys.

```
IEC/IEEE bus command: --
```

The *MARKER* → *PICH* softkey sets the marker to the pilot channel (channel number 0.64).

```
IEC/IEEE bus commands:
                     :CALCulate<1|2>:MARKer<1>:FUNCtion:PICH
                     :CALCulate<1|2>:MARKer<1>:Y?
```

The *MARKER* → *TDPICH* softkey sets the marker to the transmit diversity pilot channel (channel number 16.128 for base spreading factor 128. If base spreading factor 64 is selected, the marker is set to channel 16.64).

```
IEC/IEEE bus commands:
                     :CALC1:MARK1:FUNC:TDP
                     :CALC1:MARK1:Y?
```

Marker functions – MKR FCTN key

The *MKR FCTN* key is disabled for all measurements in the code domain analyzer. The softkeys of the menu are described in the manual of the basic unit for all other measurements of the R&S FS-K82.

Bandwidth setting – BW key

The *BW* key is disabled for all measurements of the code domain analyzer. The softkeys associated with the menu are described in the manual of the basic unit for all other measurements of the R&S FS-K82.

Measurement control – SWEEP key

The menu of the *SWEEP* key contains options for switching between single measurement and continuous measurement and for the control of individual measurements. For measurements in the spectral range, the measurement time for a sweep and the number of sweep points can also be set. All the softkeys associated with the menu are described in the manual of the basic unit.

Measurement selection – MEAS key

The menu of the *MEAS* key contains all the measurements that can be selected at the pressing of a key in the R&S FS-K82. The menu and its submenus are described in Chapter 0.

Trigger settings – TRIG key

The selectable trigger options depend on the measurement selected. For the code domain power analyzer, Free Run mode and the external even-second clock trigger mode specified by the cdma200 standard are possible. The trigger options for all other measurements are identical to those of the corresponding measurement in the basic unit. The associated softkeys are described in the manual for the basic unit.



With the softkey *EXTERN* the external trigger source can be selected. From firmware V2.60/3.60 on also the external trigger level can be adjusted in the range from 0.5V to 3.5V. The default value is 1.4V.

IEC/IEEE bus command: :TRIG SEQ:LEV:EXT
<numeric_value>

Trace settings – TRACE key



- [Empty box]
- CLEAR/
WRITE
- MAX HOLD
- MIN HOLD
- AVERAGE
- VIEW
- SWEEP
COUNT
- [Empty box]
- [Empty box]

The *TRACE* key opens the following submenu:

The *CLEAR/WRITE* softkey enables Overwrite mode for the acquired measured values, i.e. the trace is rewritten for each sweep. After the *CLEAR/WRITE* softkey has been operated, the unit deletes the selected trace memory and restarts the measurement.

IEC/IEEE bus command: DISP:WIND:TRAC:MODE WRIT

The *MAX HOLD* softkey activates the peak value detector. The analyzer only accepts the new measured value into the saved trace data if it is larger than the previous one. Pressing the *MAX HOLD* softkey a second time deletes the trace memory and starts peak value detection from the beginning again.

IEC/IEEE bus command: DISP:WIND:TRAC:MODE MAXH

The *MIN HOLD* softkey activates the minimum value detector. The analyzer only accepts the new measured value into the saved trace data if it is smaller than the previous one. Pressing the *MIN HOLD* softkey a second time deletes the trace memory and starts minimum peak detection from the beginning again.

IEC/IEEE bus command: DISP:WIND:TRAC:MODE MINH

The *AVERAGE* softkey enables the trace averaging function. The average value is formed over several sweeps. Averaging is performed irrespective of the AVG MODE LOG / LIN setting on the logarithmic level values or on the measured power/voltage values. Averaging is restarted every time the *AVERAGE* softkey is pressed. The trace memory is always cleared.

IEC/IEEE bus command: DISP:WIND:TRAC:MODE AVER

The softkey *VIEW* freezes the trace.

IEC-Bus-Befehl: :DISP:WIND:TRAC:MODE VIEW

For the measurements in the code domain analyzer, an AVERAGE/ MAX HOLD or MIN HOLD is possible. For the measurements in the code domain analyzer, an AVERAGE/

MAX HOLD or MIN HOLD is possible.

In the evaluation channel occupation table the measured channel configuration of the first sweep is retained for the trace statistic.

If the signal configuration changes, the Softkey SINGLE SWEEP (and under circumstances CONTINUOUS SWEEP) needs to be pressed. The evaluations RESULT SUMMARY, BITSTREAM and the CONSTELLATION diagrams only support CLEAR WRITE mode.

The *SWEEP COUNT* softkey sets the number of sweeps used for averaging. The permissible range is 0 to 30000, though the following should be noted:

Sweep Count = 0 means running averaging with averaging length of 10

Sweep Count = 1 means no averaging

Sweep Count > 1 averaging over the specified number of sweeps; in continuous sweep mode averaging changes over to running averaging once this number has been reached.

The default setting is running averaging (Sweep Count = 0). The number of sweeps used for averaging is always equal to the averaging length of 10 for all active traces in the selected diagram.

IEC/IEEE bus command: SWE: COUN 64

Display lines – *LINES* key

The *LINES* keys are disabled for all measurements in the code domain analyzer. The menu setting options for all other measurements are equivalent to those of the corresponding measurement in the basic unit. The respective softkeys are described in the manual for the basic unit.

Measurement screen settings – *DISP* key

The menu of the *DISP* key contains softkeys for configuring the measurement screen. The menus and the softkey properties are described in the manual of the basic unit.

Storing and loading of unit data – *FILE* key

The *FILE* menu is the same as that of the basic unit. All softkeys are described in the manual for the basic unit.

Preset of device – PRESET key

The *PRESET* key presets the device. The behaviour is the same as of the basic unit and is described in the manual for the basic unit.

Calibration of device – CAL key

The menu *CAL* is the same as that of the basic unit. All softkeys are described in the manual for the basic unit.

Setup of device – SETUP key

The menu *SETUP* is the same as that of the basic unit. All softkeys are described in the manual for the basic unit. The usage of transducer factors is possible in the Code-Domain as well as in the RF measurements.

Using the FS-K9 "Measurements with Power Sensor" is also possible within that application. Therefore the FS-K9 must be installed and the option key must be entered, then in the sidemenu the softkey *POWERMETER* is available. For further details of the FS-K9 please refer to the FS-K9 software manual.

Printing – HCOPY key

The menu *HCOPY* is the same as that of the basic unit. All softkeys are described in the manual for the basic unit.

All keys on the front panel of the unit that are not specifically mentioned are identical to those of the basic unit. The functions of the keys and the softkeys are described in the manual of the basic unit.

7 Remote Control Commands

This chapter describes the remote control commands for the cdma2000/1xEV-DV base station test application firmware. An alphabetical list following the description provides a quick overview of the commands.

The commands, which also apply to the basic unit in SPECTRUM mode, and the system settings are described in the operating manual for the analyzer.

CALCulate:FEED subsystem

The CALCulate:FEED subsystem selects the type of evaluation for the measurement data. This corresponds to the result display selection in manual operation.

COMMAND	PARAMETER	UNIT	COMMENT
CALCulate<1 2>: :FEED	<string>		No query

:CALCulate<1|2>:FEED <string>

This command selects the measured data that will be displayed.

Parameters: <string> ::= 'XPOW:CDP' |
'XPOW:CDP:RAT' |
'XPOW:CDEP' |
'XTIM:CDP:MACCuracy' |
'XTIM:CDP:PVSLOT' |
'XTIM:CDP:PVSymbol' |
'XTIM:CDP:BSTream' |
'XTIM:CDP:ERR:SUMM' |
'XTIM:CDP:ERR:CTABLE' |
'XTIM:CDP:ERR:PCDomain' |
'XTIM:CDP:SYMB:CONST' |
'XTIM:CDP:SYMB:EVM' |
'XTIM:CDP:COMP:CONST'

The meanings of the string parameters are as follows:

'XPOW:CDP'	Result display of the code domain power (absolute) in the bar graph (CALCulate<1>)
'XPOW:CDP:RAT'	Result display of the code domain power ratio (relative) in the bar graph (CALCulate<1>)
'XPOW:CDEP'	Result display of the code domain power in the bar graph (CALCulate<1>)
'XTIM:CDP:ERR:SUMM'	Tabular display of results (CALCulate2)
'XTIM:CDP:ERR:CTABLE'	Display of channel occupation table (CALCulate<1>)
'XTIM:CDP:ERR:PCDomain'	Result display of peak code domain error (CALCulate2)
'XTIM:CDP:MACCuracy'	Result display of composite EVM (CALCulate2)
'XTIM:CDP:PVSLOT'	Result display of power versus power control group (CALCulate2)
'XTIM:CDP:PVSymbol'	Result display of power versus symbol (CALCulate2)
'XTIM:CDP:BSTream'	Result display of bitstream (CALCulate2)
'XTIM:CDP:SYMB:CONST'	Result display of symbol constellation (CALCulate2)
'XTIM:CDP:SYMB:EVM'	Result display of error vector magnitude (CALCulate2)
'XTIM:CDP:COMP:CONST'	Result display of composite constellation (CALCulate2)

Example:

```
"INST:SEL BC2K"      'Activate cdma2000 BTS
"INIT:CONT OFF"     'Select single sweep
"CALC2:FEED 'XTIM:CDP:MACC'"
                        'Select COMP EVM evaluation
"INIT;*WAI"         'Start measurement with
                        'synchronization
"TRAC? TRACE2"      'Query COMP EVM data
```

Features:

```
*RST value:  'XPOW:CDP:RAT'      (CALCulate<1>)
              'XTIM:CDP:ERR:SUMM' (CALCulate<2>)
SCPI:        Compliant
```

Note: *The code domain power measurements are always shown in split screen mode and the allocation of the evaluation to the measurement window is fixed. The necessary or allowed numerical suffix in `CALCulate` is therefore specified in brackets in every evaluation.*

CALCulate:LIMit:SPECtrum subsystem

The CALCulate:LIMit:SPECtrum subsystem defines the limit check for spectral measurements.

COMMAND	PARAMETER	UNIT	COMMENT
CALCulate<1 2> LIMit<1...8> :ESpectrum :MODE :VALue :RESTore :CHECK :X? :Y? :TRANSition	AUTO MANual USER <numeric_value> <numeric_value>	DBM Hz	No query Query only Query only

:CALCulate:LIMit:ESpectrum:MODE AUTO | MANual | USER

This command automatically enables and disables automatic selection of the limit line in the spectrum emission mask measurement.

The limit lines normally depend on the selected band class.
(Command CONF:CDP:BCL)

Parameters:

- AUTO The limit line depends on the measured channel power
- MANUAL One of the three specified limit lines is set. The selection is made with the command CALC:LIM:ESP:VAL
- USER Query only, user-defined limit lines are enabled (refer to the description of limit lines in the manual for the unit)

Example:

```

"INST:SEL BC2K"           'Activate cdma2000 BTS
"INIT:CONT OFF"          'Select single sweep
"CONF:CDP:BCL 1"        'Select band class 1, 1900 MHz
"CONF:CDP:MEAS ESP"     'Select spectrum emission mask
                           'measurement
"CALC:LIM:ESP:MODE AUTO" 'Activates automatic selection of the
                           'limit line
"INIT;*WAI"             'Start measurement with
                           'synchronization
"CALC:LIM:FAIL?"        'Query result of the limit check
    
```

Features:

- *RST value: AUTO
- SCPI: device-specific

:CALCulate:LIMit:ESpectrum:VALue <numeric_value>

This command switches to manual limit line selection. The limit line is selected by specifying the expected power as a value. One of the four possible limit lines is selected depending on the value entered:

Specified value in dBm	Selected limit line	Value when queried
Value \geq 33	"P \geq 33"	33
28 \leq value < 33	"28 \leq P < 33"	28
Value < 28	"P < 28"	0

Example:

```
"INST:SEL BC2K"           'Activate cdma2000 BTS
"INIT:CONT OFF"           'Select single sweep
"CONF:CDP:BCL 1"         'Select band class 1, 1900 MHz
"CONF:CDP:MEAS ESP"      'Select spectrum emission mask
                           'measurement
"CALC:LIM:ESP:VALue 33"  'Activates manual selection of the
                           'limit line and selects the one for P $\geq$ 33
"INIT;*WAI"              'Start measurement with 'synchronization
"CALC:LIM:FAIL?"         'Query result of the limit check
```

Features:

```
*RST value: 0
SCPI:       device-specific
```

:CALCulate:LIMit:ESpectrum:REStore

This command restores the standard limit lines for the spectrum emission mask measurement. All changes made to the standard limit lines are lost and the state of these limit lines as they left the factory is restored .

Example:

```
"INST BC2K"           'Activate cdma2000 BTS
"CALC:LIM:ESP:REST"   'Resets the spectrum emission mask
                           'limit lines to the default setting
```

Features:

```
*RST value: —
SCPI:       device-specific
```

This command is an event and therefore has neither a query function nor a *RST value.

:CALCulate:LIMit:ESpectrum:CHECk:X?;Y?

These commands query the worst fail position.

Example:

```
"INST:SEL BC2K"           'Activate cdma2000 BTS
"INIT:CONT OFF"           'Select single sweep
"CONF:CDP:BCL 1"         'Select band class 1, 1900 MHz
"CONF:CDP:MEAS ESP"      'Select spectrum emission mask
                           'measurement
"CALC:LIM:ESP:VALue 33"  'Activates manual selection of the
                           'limit line and selects the one for P $\geq$ 33
"INIT;*WAI"              'Start measurement with 'synchronization
"CALC:LIM:ESP:CHEC:X?;Y?" 'Query result of worst fail position
```

Features:

```
*RST value: —
SCPI:       device-specific
```

:CALCulate:LIMit:ESpectrum:TRANSition 0..1 GHz

specifies the offset frequency at which the resolution bandwidth is changed between 30k and 1MHz.

Example:	"INST:SEL BC2K"	'Activate cdma2000 BTS
	"INIT:CONT OFF"	'Select single sweep
	"CONF:CDP:BCL 1"	'Select band class 1, 1900 MHz
	"CONF:CDP:MEAS ESP"	'Select spectrum emission mask
		'measurement
	"CALC:LIM:ESP:TRAN 10MHZ"	'Defines the transition frequency to
		'10 MHz
	"INIT;*WAI"	'Start measurement with synchronization
	"CALC:LIM:ESP:CHEC:X?;Y?"	'Query result of worst fail position
Features:	*RST value: —	
	SCPI: device-specific	

CALCulate:MARKer subsystem

COMMAND	PARAMETER	UNIT	COMMENT
CALCulate<1 2> :MARKer<1...4> :FUNction :PICH :TDPich :CDPower [:BTS] :RESult?	SLOT PTOTal PPICH RHO MACCuracy PCDError ACTive FERRor FERPpm CERRor TFRame IQOFFset IQIMbalance SRATe CHANnel SFACtor TOFFset POFFset CDPabsolute CDPRelative EVMRms EVMPeak DMTYpe		Query only

:CALCulate<1|2>:MARKer<1>:FUNction:PICH

This command sets marker1 to channel 0.64.

Example:

```

"INST:SEL BC2K"
"INIT:CONT OFF"
"INIT;*WAI"
"CALC:MARK:FUNC:PICH"
"CALC:MARK:Y?"
    
```

'Activate cdma2000 BTS, implicit are
'CDP relative on screen A and
'result summary active on screen B
'Select single sweep
'Start measurement with
'synchronization
'Activate marker and position at pilot '0.64
'Query value of the CDP rel. of the PICH

Features: *RST value: –
SCPI: device-specific

This command is an "event" and therefore has neither a *RST value nor a query function.

:CALCulate<1|2>:MARKer<1>:FUNction:TDPIch

This command sets marker1 to channel 16.128. The base spreading factor should be set to 128 beforehand and antenna 2 should be measured.

Example:

```

"INST:SEL BC2K"
"INIT:CONT OFF"
"CDP:ANT 2"
"CDP:SFAC 128"
"INIT;*WAI"
"CALC:MARK:FUNC:PICH"
"CALC:MARK:Y?"
    
```

'Activate cdma2000 BTS, implicit are
'CDP relative on screen A and
'result summary active on screen B
'Select single sweep
'Select antenna 2
'Select base spreading factor 128
'Start measurement with synchronization
'Activate marker and position
'at TDPICH 16.128
'Query value of the CDP rel.
'of the TDPICH

Features: *RST value: –
SCPI: device-specific

This command is an "event" and therefore has neither a *RST value nor a query function.

:CALCulate<1|2>:MARKer<1>:FUNCTION:CDPower[:BTS]:RESult?

SLOT | PTOTal | PPICh | RHO | MACCuracy | PCDerror | ACTive | FERRor | FERPPm | CERRor
 | TFRame | IQOFFset | IQIMbalance | SRATe | CHANnel | SFACtor | TOFFset | POFFset |
 CDPabsolute | CDPRelative | EVMRms | EVMPeak | DMType

This command queries the measured and calculated values of the code domain power analysis. The channel results are provided for the channel to which the code selected by means of the `CDPower:CODE` command belongs.

Parameters:

Global results of the selected PCG:		Global results of all PCGs:	
SLOT	PCG number	FERRor	Frequency error in Hz
PTOTal	Total power in dBm	FERPPm	Frequency error in ppm
PPICh	Pilot power in dBm	CERRor	Chip rate error in ppm
RHO	RHO	TFRame	Trigger to frame
MACCuracy	Composite EVM in %	ACTive	Number of active channels
PCDerror	Peak code domain error in dB		
IQOFFset	IQ offset in %		
IQIMbalance	IQ imbalance in %		

Channel results:

DMTYpe	Modulation type (1 = BPSK, 2 = QPSK, 3 = 8-PSK, 4= 16-QAM)		
SRATe	Symbol rate in ksp/s	TOFFset	Timing offset in s
CHANnel	Channel number	POFFset	Phase offset in rad
SFACtor	Spreading factor of channel		
CDPRelative	Channel power, relative, in dB	CDPabsolute	Channel power, abs., in dBm
(relative to total or PICH power, refer to command <code>CDP:PREF</code>)			
EVMRms	Error vector magnitude rms in %	EVMPeak	Error Vector Mag. Peak in %

Hint:

The value trigger to frame (`TFRame`) delivers a '9' if the trigger is set to FREE RUN.

The values timing/phase offset (`TOFFset`/`POFFset`) deliver a '9' if the timing and phase offset measurement is switched off (refer to `CDP:TPM`) or the number of active channel exceeds 50.

Example:	<code>"INST:SEL BC2K"</code>	'Activate cdma2000 BTS, implicit are 'CDP relative on screen A and 'result summary active on screen B
	<code>"INIT:CONT OFF"</code>	'Select single sweep
	<code>"INIT;*WAI"</code>	'Start measurement with 'synchronization
	<code>"CALC:MARK:FUNC:CDP:RES? PTOT"</code>	'Read out total power
	<code>"CDP:SLOT 2"</code>	'Select power control group 2
	<code>"CDP:CODE 11"</code>	'Select code number 11
	<code>"CALC:MARK:FUNC:CDP:RES? EVMR"</code>	'Read out EVM rms of the code with 'number 11 in PCG 2

Features:	*RST value:	–
	SCPI:	device-specific

CALCulate:PEAKsearch | PSEarch- Subsystem

COMMAND	PARAMETER	UNIT	COMMENT
CALCulate<1 2> :PEAKsearch :AUTO [:IMMediate] :MARGin :SUBRanges	<Boolean> <numeric_value> <numeric_value>	dB	

CALCulate<1|2>:PEAKsearch:AUTO ON | OFF

By using this command, the peak list in the spurious measurement is calculated automatically after a measurement. For each range, exactly one peak value is calculated.

The SENSE suffix is unused.

Example: "CALC:PEAK:AUTO ON" ' Switches the automatic peak search on.

Features: *RST value: OFF
SCPI: device-specific

CALCulate<1|2>:PEAKsearch[:IMMediate]

The limit mask - reduced by an overall margin - is checked against the trace. The fail positions are marked. Every value is added to a peak list, which can be opened and saved in ASCII format or read out via an IEC/IEEE command.

Example: ":CALC1:PEAK"

Features: *RST value: ---
SCPI: device-specific

Query of results: :CALC<1|2>:PEAK?

Result: <-->

CALCulate<1|2>:PEAKsearch|PSEarch:MARGin MINimum .. MAXimum

This command defines an overall margin which is subtracted from the limit line to make the peak search more stronger. If the values of the trace are above the limit line minus margin value it will be marked in the peak list.

Example: "CALC:PEAK:MARG 5 dB"

Features: *RST value: 6 dB
SCPI: device-specific

CALCulate<1|2>:PEAKsearch|PSEarch:SUBRanges 1 to 500

The command defines how many peaks are searched for within one range.

Example: "CALC:PEAK:SUBR 10"

Features: *RST value:: 25
SCPI: device-specific

CALCulate:STATistics subsystem

The CALCulate:STATistics subsystem controls the statistical measurement functions in the unit. The measurement functions cannot be selected for these measurement functions. The numerical suffix is ignored accordingly with CALCulate.

COMMAND	PARAMETER	UNIT	COMMENT
CALCulate :STATistics :CCDF [:STATe] :NSAMples :SCALE :Y :UPPer :LOWer :RESults?	<Boolean> <numeric_value> <numeric_value> <numeric_value> MEAN PEAK CFACtor ALL		Query only

:CALCulate:STATistics:CCDF[:STATe] ON | OFF

This command enables and disables measurement of the complementary cumulated distribution function (CCDF).

Example: "CALC:STAT:CCDF ON"

Features: *RST value: OFF
SCPI: device-specific

:CALCulate:STATistics:NSAMples 100 ... 1E9

This command sets the number of measurement points for the statistical measurement functions.

Example: "CALC:STAT:NSAM 5000"

Features: *RST value: 100000
SCPI: device-specific

:CALCulate:STATistics:SCALE:Y:UPPer 1E-5 ...1.0

This command defines the upper limit for the y-axis of the diagram in statistical measurements. Since probabilities are plotted on the y-axis, the entered numerical values have no units.

Example: "CALC:STAT:SCAL:Y:UPP 0.01"

Features: *RST value: 1.0
SCPI: device-specific

:CALCulate:STATistics:SCALE:Y:LOWer 1E-6 ...0.1

This command defines the lower limit for the y-axis of the diagram in statistical measurements. Since probabilities are plotted on the y-axis, the entered numerical values have no units.

Example: "CALC:STAT:SCAL:Y:LOW 0.001"

Features: *RST value: 1E-6
SCPI: device-specific

CALCulate:STATistics:RESult? MEAN | PEAK | CFACtor | ALL

This command reads out the results of statistical measurements from a recorded trace.

Parameters: The desired result is selected by means of the following parameters:

MEAN Mean (rms) power measured in dBm measured in the period of analysis

PEAK Peak power in dBm measured in the period of analysis

CFACtor Determined CREST factor (i.e. ratio of peak power to mean power) in dB

ALL Results of all three named measurements, separated by a comma:

<mean power>,<peak power>,<crest factor>

Example: "CALC:STAT:RES? ALL" 'Reads out all three measurement results.
Example of reply string:
5.56,19.25,13.69
i.e. mean power: 5.56 dBm,
peak power 19.25 dBm,
CREST factor 13.69 dB

Features: *RST value: —
SCPI: device-specific

Operating mode: A

CONFigure:CDPower subsystem

This subsystem contains the commands for the selection and configuration of measurements in the cdma2000/1xEV-DV application firmware. The numerical suffix 1 is allowed with CONFigure. You will find more example of the code domain power analysis under the :[SENSe]:CDPower command.

Further settings for the spectrum emission mask measurement can be found under the CALCulate:LIMit:ESpectrum command.

COMMAND	PARAMETER	UNIT	COMMENT
CONFigure			
:CDPower			
[:BTS]			FS-K82 option
:MEASurement	POWer ACLR MCAClr ESpectrum OBANdwidth OBWidth CDPower CCDF		
:CTABLE			
[:STATe]	<Boolean>		
:SElect	<file_name>		
:NAME	<file_name>		
:DATA	<numeric_value>, <numeric_value>, <numeric_value>, <numeric_value>, <numeric_value>, <numeric_value>, <numeric_value>, <numeric_value> ...		
:COMMeNT	<string>		
:COpy	<file_name>		
:DElete			
:CATalog?			
:REStores			
:BCLass	<numeric_value>		
:MCARier			
[:STATe]	<Boolean>		
:FILTer			
[:STATe]	<Boolean>		
:COFFRequency	<numeric_value>	Hz	
:ROFF	<numeric_value>		
:TYPE	LPASs RRC		
:MALGo	<Boolean>		

CONFigure<1>:CDPower[:BTS]:MEASurement POWer | ACLR | ESPectrum | OBANdwith | OBWidth | CDPower | CCDF | MCAClr

This command selects the measurement of the application FS–K82, cdma2000 base station test. The predefined settings of the different measurements are described at length in Chapter 6.

Parameters:

POWER	Channel power measurement (standard cdma2000 Forward) with predefined settings
ACLR	Adjacent channel power measurements (standard cdma2000 Forward) with predefined settings
MCAClr	Multi carrier edjacent channel power measurements (standardcdma2000 Forward) with predefined settings
ESPectrum	Check of signal power (spectrum emission mask)
OBANdwith OBWidth	Measurement of the occupied bandwidth
CDPower	Code domain analyzer measurement.
CCDF	Measurement of the complementary cumulative distribution function (signal statistics)

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS
"INIT:CONT OFF"	'Select single sweep
"CONF:CDP:MEAS POW"	'Select channel power measurement
"INIT;*WAI"	'Start measurement with synchronization

Feature:

*RST value:	CDPower
SCPI:	device–specific

CONFigure<1>:CDPower[:BTS]:CTABLE[:STATe] ON | OFF

This command enables and disables the channel table. Enabling results in the measured channel table is saved as "RECENT" and enabled. After the channel table called "RECENT" has been enabled, another channel table can be selected with the CONF:CDP:CTABLE:SElect command

Note: You must always enable the "RECENT" channel table first with the CONF:CDP:CTAB:STAT command and then use the CONF:CDP:CTAB:SElect command to select the channel table you required

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are
	'CDP relative on screen A and
	'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"INIT;*WAI"	'Start measurement with
	'synchronisation, so switch on of
	'predefined tables is possible
"CONF:CDP:CTAB ON"	'Use predefined channel table
"CONF:CDP:CTAB:SEL 'CTAB_1'"	'Select channel table
"INIT;*WAI"	'Start measurement with
	'synchronization

Example:

Features:

*RST value:	OFF
SCPI:	device–specific

CONFigure<1>:CDPower[:BTS]:CTABLE:SElect <string>

This command selects a predefined channel table file. Before using this command, you must enable the "RECENT" channel table first by means of the `CONF:CDP:CTAB ON` command.

Example:

```
"INST:SEL BC2K"
"INIT:CONT OFF"
"INIT;*WAI"
"CONF:CDP:CTAB ON"
"CONF:CDP:CTAB:SEL 'CTAB_1'"
"INIT;*WAI"
```

'Activate cdma2000 BTS, implicit are
'CDP relative on screen A and
'result summary active on screen B
'Select single sweep
'Start measurement with
'synchronisation, so switch on of
'predefined tables is possible
'Use predefined channel table
'Select channel table
'Start measurement with
'synchronization

Features:

*RST value: "RECENT"
SCPI: device-specific

:CONFigure:CDPower[:BTS]:CTABLE:NAME <file_name>

This command selects a channel table for editing or creating. It is not used for the analysis. In this respect refer to the commands `CONF:CDP:CTAB:STAT` and `CONF:CDP:CTAB:SEL`.

Example:

```
"INST:SEL BC2K"
"CONF:CDP:CTAB:NAME 'NEW_TAB'"
```

'Activate cdma2000 BTS
'Select table for editing

Features:

*RST value: ""
SCPI: device-specific

:CONFigure:CDPower[:BTS]:CTABLE:DATA 0..13, 2..7, 0..127, 0..30, 0, 0, 0 | 1, <numeric_value>...

This command defines a channel table. The whole table is defined in one go. The inactive channels (INACTive) do not have to be defined. Eight values are specified for a line of table.

<Channel type >, <Code class>, <Code number>, <Radio configuration>, <Reserved1>, <Reserved2>, <Status>, <CDP relative [dB]>,

Channel type The channel type is coded with numbers as follows:

0	= PICH
1	= SYNC
2	= PCH
3	= TDPICH
4	= APICH
5	= ATDPICH
6	= BCH
7	= CPCCH
8	= CACH
9	= CCCH
10	= CHAN
11	= INACTIVE
12	= PDCCH
13	= PDCH

Code class: 2 to 7
Code number: 0 to 127
Radio configuration 0 for all special channels; for the others (CHAN), the values 1, 2, 3, 4 and 5 are allowed, for PDCH depending on the modulation the following values are used: 10 – QPSK, 20 – 8PSK, 30 – 16QAM

Reserved1: Always 0 (reserved)
 Reserved2: Always 0 (reserved)
 Status: 0: inactive, 1:active
 Can be used in a setting command to disable a channel temporarily
 CDP relative: Any with setting command, relative with CDP query

Before using this command, you must set the name of the channel table using the `CONF:CDP:CTAB:NAME` command.

Example:

```
"INST:SEL BC2K"           'Activate cdma2000 BTS
"CONF:CDP:CTAB:NAME 'NEW_TAB'" 'Select table for editing
"CONF:CDP:CTAB:DATA 0,6,0,0,0,0,1,0.0,
                        10,5,3,4,0,0,1,0.0"
                        'Selects PICH 0.64 and data channel
                        'with RC4/Walsh code 3.32.
```

Features: *RST value: –
 SCPI: device-specific

:CONF:CDP:CTAB:COMMENT <string>

This command defines a comment on the selected channel table.

Before using this command, you must set the name of the channel table using the `CONF:CDP:CTAB:NAME` command and enter a valid channel table by means of `CONF:CDP:CTAB:DATA`.

Example:

```
"INST:SEL BC2K"           'Activate cdma2000 BTS
"CONF:CDP:CTAB:NAME 'NEW_TAB'" 'Select table for editing
"CONF:CDP:CTAB:COMM 'Comment for NEW_TAB'"
```

Features: *RST value: ""
 SCPI: device-specific

:CONF:CDP:CTAB:COPY <file_name>

This command copies one channel table to another. You select the channel table you want to copy by means of the `CONF:CDP:CTAB:NAME` command.

Parameter: <file_name> ::= name of the new channel table

Example:

```
"INST:SEL BC2K"           'Activate cdma2000 BTS
"CONF:CDP:CTAB:NAME 'CTAB_1'" 'Select table for editing
"CONF:CDP:CTAB:COPY 'CTAB_2'" 'Copies CTAB_1 to C_TAB2
```

Features: *RST value: —
 SCPI: device-specific

The name of the channel table may contain up to 8 characters. This command is an "event" and therefore has neither a *RST value nor a query function.

:CONFigure:CDPower[:BTS]:CTABLE:DELeTe

This command deletes the selected channel table. You select the channel table you want to delete by means of the `CONF:C2KP:CTAB:NAME` command.

Example:

```
"INST:SEL BC2K"           'Activate cdma2000 BTS
"CONF:CDP:CTAB:NAME 'CTAB_2'" 'Select table for editing
"CONF:CDP:CTAB:DEL"       'Deletes CTAB_2
```

Features:

```
*RST value:  —
SCPI:        device-specific
```

This command is an "event" and therefore has neither a *RST value nor a query function.

:CONFigure:CDPower[:BTS]:CTABLE:CATalog?

This command queries the names of all the channel tables stored on the hard disk for cdma2000 BTS.

The syntax of this output format is as follows:

```
<Sum of file sizes of all subsequent files>,<Spare storage space on fixed disk>,
<1st file name>,<1st file size>,<2nd file name>,,<2nd file size>,,...,<nth file name>,,
<nth file size>,,
```

Example:

```
"INST:SEL BC2K"           'Activate cdma2000 BTS
"CONF:CDP:CTAB:CAT?"     'Query catalog
```

Features:

```
*RST value:  —
SCPI:        device-specific
```

:CONFigure:CDPower:CTABLE:RESTore

This command restores the "predefined channel tables" to the state they were in when the device was supplied. In this way unintended overwriting of these channel tables can be undone.

Example:

```
"INST:SEL BC2K"           'Activate cdma2000 BTS
"CONF:CDP:CTAB:REST"     'Restore table
```

Features:

```
*RST value:  —
SCPI:        Device-specific
```

This command is an "event" and therefore has neither a *RST value nor a query function.

:CONFigure:CDPower[:BTS]:BCLass 0...12

This command selects the band class.

Band class	Name
0	800 MHz Band
1	1900 MHz Band
2	TACS Band
3	JTACS Band
4	Korean PCS Band
5	450 MHz Band
6	2 GHz Band
7	700 MHz Band
8	1800 MHz Band
9	900 MHz Band
10	Secondary 800 MHz Band
11	400 MHz European PAMR Band
12	800 MHz PAMR Band
14	US PCS 1,9 GHz Band
15	AWS Band

Example: "INST:SEL BC2K" 'Activate cdma2000 BTS
 "INIT:CONT OFF" 'Select single sweep
 "CONF:CDP:BCL 1" 'Select band class 1, 1900 MHz

Features: *RST value: 0
 SCPI: device-specific

:CONFigure:CDPower[:BTS]:MCARier[:STATe] ON | OFF

This command defines whether the multi carrier mode is ON or OFF.

Example: "INST:SEL BC2K" 'Activate cdma2000 BTS
 "INIT:CONT OFF" 'Select single sweep
 "CONF:CDP:MCAR ON" 'Switch on the multi carrier mode

Features: *RST value: OFF
 SCPI: device-specific

:CONFigure:CDPower[:BTS]:MCARier:FILTer[:STATe] ON | OFF

This command defines in multi carrier mode whether the additional multi carrier filter is used (ON) or not (OFF). If the multi carrier mode is activated the additional multi carrier filter is switched on.

Example: "INST:SEL BC2K" 'Activate cdma2000 BTS
 "INIT:CONT OFF" 'Select single sweep
 "CONF:CDP:MCAR ON" 'Switch on the multi carrier mode
 "CONF:CDP:MCAR:FILT OFF" 'Switch off the MC filter

Features: *RST value: OFF
 SCPI: device-specific

:CONFigure:CDPower[:BTS]:MCARier:FILTer:COFRequency <numeric_value>

This command defines in multi carrier mode with the multi carrier filter on the value of the cut off frequency of the RRC filter.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS
"INIT:CONT OFF"	'Select single sweep
"CONF:CDP:MCAR ON"	'Switch on the multi carrier mode
"CONF:CDP:MCAR:FILT ON"	'Switch on the MC filter
"CONF:CDP:MCAR:FILT:TYPE RRC"	'Select RRC MC filter
"CONF:CDP:MCAR:FILT:COFR 1.2MHz"	'Select 1.2 MHz cut off frequency

Features:

*RST value:	1.25 MHz
SCPI:	device-specific

:CONFigure:CDPower[:BTS]:MCARier:FILTer:ROFF <numeric_value>

This command defines in multi carrier mode with the multi carrier filter on the value of the roll off factor of the RRC filter.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS
"INIT:CONT OFF"	'Select single sweep
"CONF:CDP:MCAR ON"	'Switch on the multi carrier mode
"CONF:CDP:MCAR:FILT ON"	'Switch on the MC filter
"CONF:CDP:MCAR:FILT:TYPE RRC"	'Select RRC MC filter
"CONF:CDP:MCAR:FILT:ROFF 0.03"	'Defines 0.03 as roll off

Features:

*RST value:	0.02
SCPI:	device-specific

:CONFigure:CDPower[:BTS]:MCARier:FILTer:TYPE LPASs | RRC

This command defines in multi carrier mode with the multi carrier filter on the type of the filter. By default a fix low pass filter is used. It is also possible to choose a definable RRC filter.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS
"INIT:CONT OFF"	'Select single sweep
"CONF:CDP:MCAR ON"	'Switch on the multi carrier mode
"CONF:CDP:MCAR:FILT ON"	'Switch on the MC filter
"CONF:CDP:MCAR:FILT:TYPE RRC"	'Select RRC MC filter
"CONF:CDP:MCAR:FILT:ROFF 0.03"	'Defines 0.03 as roll off

Features:

*RST value:	LPASs
SCPI:	device-specific

:CONFigure:CDPower[:BTS]:MCARier:MALGo ON | OFF

This command defines in multi carrier mode whether the enhanced multi carrier algorithm is used (ON) or not (OFF). If the multi carrier mode is activated the enhanced algorithm is switched on.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS
"INIT:CONT OFF"	'Select single sweep
"CONF:CDP:MCAR ON"	'Switch on the multi carrier mode
"CONF:CDP:MCAR:MALgo OFF"	'Switch off the enhanced multi carrier algorithm

Features:

*RST value:	OFF
SCPI:	device-specific

FORMat - Subsystem

FORMat:DEXPort:DSEParator POINT | COMMA

This command defines which decimal separator (decimal point or comma) is to be used for outputting measurement data to the file in ASCII format. Different languages of evaluation programs (e.g. Microsoft Excel) can thus be supported.

Example: "FORM:DEXP:DSEP POIN" 'setzt das Trennzeichen auf Dezimalpunkt

Features: *RST value: -- (factory setting is POINT; *RST does not affect setting)
 SCPI: device-specific

INSTrument subsystem

The INSTrument subsystem selects the operating mode of the unit either by means of text parameters or by means of permanently assigned numbers.

COMMAND	PARAMETER	UNIT	COMMENT
INSTrument :NSElect [:SElect]	<numeric_value> SANalyzer BC2K		

:INSTrument[:SElect] SANalyzer | BC2K

This command toggles switches from one operating mode to another by means of text parameters. The selection cdma2000 BTS (BC2K) sets the unit to a defined state. The preset values are described in Chapter 2, in the section entitled "Default settings in".

Example: "INST BC2K" 'Activate cdma2000 BTS

Features: *RST value: SANalyzer
SCPI: compliant

Switching to BC2K requires the option cdma2000 FWD (BTS) R&S FS-K82.

INSTrument:NSElect 1 | 10

This command toggles switches from one operating mode to another by means of numbers.

Parameters: 1: Spectral Analysis mode
10: cdma2000 FWD (BTS) mode

Example: "INST:NSEL 10" 'Activate cdma2000 BTS

Features: *RST value: 1
SCPI: compliant

Switching to 10 requires the option cdma2000 FWD (BTS) R&S FS-K82

MMEMemory – Subsystem

The MMEMemory subsystem (Mass Memory) contains all commands to direct the memory parts of the unit.

COMMAND	PARAMETER	UNIT	COMMENT
:MMEMemory :STORe1 :FINal	<file>	--	

:MMEMemory:STORe1:FINal 'A:\final.dat'

This command exports the peak list in ASCII format to a file. The complete output format is similar to the trace export. The peak values within the file are comma separated in the format:

```
<trace no 1>, <freq1>, <level1>, <delta level 1>, <trace no 2>,
<freq2>, <level2>, <delta level 2>, ...
```

Example: ":MME:STOR:FIN 'A:\final.dat'"

Characteristics: *RST value: ---
 SCPI: device-specific

Query of results: ---

Result File:

<trace no 1>	[]	- trace number is always 1
<freq>	[Hz]	- frequency of the peak
<level>	[dBm]	- absolute level of the peak
<delta level>	[dB]	- distance to the limit line

SENSe:CDPower subsystem

This subsystem sets the parameters for the code domain measurements mode. The numerical suffix for SENSe<1|2> is meaningless for this subsystem.

COMMAND	PARAMETER	UNIT	COMMENT
[SENSe<1 2>] :CDPower			
:ANTenna	OFF <numeric_value>	--	
:CODE	<numeric_value>	--	
:FDV	<Boolean>	--	
:ICTReshold	<numeric_value>	DB	
:IQLength	<numeric_value>	--	
:LEVel			
:ADJust		--	
:NORMalize	<Boolean>	--	
:ORDER	HADamard BITReverse	--	
:PNOffset	<numeric_value>	--	
:PPReference	ABS REL	--	
:PREference	TOTal PICH	--	
:QINVert	<Boolean>	--	
:SBANd	NORMal INVerse	--	
:SET		--	
:COUNT	<numeric_value>		
[:VALue]	<numeric_value>	--	
:SFACtor	64 128	--	
:SLOT	<numeric_value>	--	
:TPMeas	<Boolean>	--	

:[SENSe:]CDPower:ANTenna OFF | 1 | 2

This command selects Antenna mode for which the evaluation has to be made. With OFF, no signals with transmit diversity are expected. When the value is 1 or 2, the results of the antenna concerned are evaluated.

Example:

```

"INST:SEL BC2K"
"INIT:CONT OFF"
"CDP:ANT 2"
"CDP:SFAC 128"
"INIT;*WAI"

"CALC:MARK:FUNC:PICH"
"CALC:MARK:Y?"
    
```

'Activate cdma2000 BTS, implicit are
'CDP relative on screen A and
'result summary active on screen B
'Select single sweep
'Select antenna 2
'Select base spreading factor 128
'Start measurement with
'synchronization
'Activate marker and position
'at TDPICH 16.128
'Query value of the CDP rel. of the
'TDPICH

Features:

```

*RST value: OFF
SCPI: device-specific
    
```

:[SENSe:]CDPower:CODE 0 ... 127

This command selects the code number. The maximum value depends on the base spreading factor.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are
	'CDP relative on screen A and
	'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CDP:CODE 11"	'Select code number 11
"INIT;*WAI"	'Start measurement with
	'synchronization

Features:

*RST value:	0
SCPI:	device-specific

:[SENSe:]CDPower:FDV ON | OFF

This command is necessary in the automatic search mode to support the channel detection. If there is a QPSK modulated channel with spreading-factor 32 it is not possible to distinguish whether it is a data channel (CHAN with radio configuration 3–5) or a PACKET DATA CHANNEL (PDCH with radio configuration 10). This decision is made for the PDCH of the 1xEV-DV system if the value is ON. If the value is OFF (default) the CHAN is detected.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are
	'CDP relative on screen A and
	'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CALC1:FEED 'XTIM:CDP:ERR:CTAB'"	'Channel table evaluation
"INIT;*WAI"	'Start measurement with
	'synchronization
"TRAC? TRACE1"	'Read out channel table

Features:

*RST value:	OFF
SCPI:	device-specific

:[SENSe:]CDPower:ICTReshold -100 dB ...0 dB

This command sets the threshold value from which a channel is regarded as active. The level refers to the signal total power.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are
	'CDP relative on screen A and
	'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CDP:ICTR -10DB"	'Threshold value to -10 dB
"INIT;*WAI"	'Start measurement with
	'synchronization

Features:

*RST value:	-60 dB
SCPI:	device-specific

:[SENSe:]CDPower:IQLength FSU/FSQ: 2..64, FSP: 2..12

This command sets the capture length in multiples of the power control group. The range is from 2 to 64 for Analyzer R&S FSU, R&S FSQ and from 2 to 12 for Analyzer R&S FSP.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are CDP relative on screen A and 'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CDP:IQL 8"	'8 PCGs Capture length
"INIT;*WAI"	'Start measurement with synchronization

Features:

*RST value:	3
SCPI:	device-specific

:[SENSe:]CDPower:LEVel:ADJust

This command initiates automatic setting of the RF attenuation and IF gain to the level of the applied signal. The unit is placed in the *ATTEN MANUAL* mode to set RF attenuation and IF gain independently of each other to optimum values. This mode is retained even after the change from cdma2000 BTS mode to SPECTRUM mode.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are CDP relative on screen A and 'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CDP:LEV:ADJ"	'Start automatic level setting
"INIT;*WAI"	'Start measurement with synchronization

Features:

*RST value:	–
SCPI:	device-specific

This command is an "event" and therefore has neither a *RST value nor a query function.

:[SENSe:]CDPower:NORMAlize ON | OFF

This command enables and disables elimination of the IQ offset.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are CDP relative on screen A and 'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CDP:NORM OFF"	'Elimination of IQ offset disabled
"INIT;*WAI"	'Start measurement with synchronization

Features:

*RST value:	OFF
SCPI:	device-specific

:[SENSe:]CDPower:ORDer HADamard | BITReverse

This command sets the order of the code domain evaluation. The codes are sorted either in Hadamard order or in BitReverse order.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are CDP relative on screen A and 'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"INIT;*WAI"	'Start measurement with synchronization
"CDP:ORD HAD"	'Hadamard order
"TRAC? TRACE2"	'Read out CDP in Hadamard order
"CDP:ORD BITR"	'BitReverse order
"TRAC? TRACE2"	'Read out CDP in BitReverse order

Features:

*RST value:	HADamard
SCPI:	device-specific

:[SENSe:]CDPower:PNOffset 0..511

This command sets the PN offset of the base station in multiples of 64 chips.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are
	'CDP relative on screen A and
	'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CDP:PNOF 45"	'Set PN offset
"INIT;*WAI"	'Start measurement with 'synchronization

Features:

*RST value:	0
SCPI:	device-specific

:[SENSe:]CDPower:PPReference ABS | REL

This command sets the pilot channel power is displayed in absolute or relative terms in the result summary. In relative mode, the reference power is the total power.

Beispiel:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are
	'CDP relative on screen A and
	'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CDP:PPR REL"	'Select pilot channel power
"CALC1:MARK1:FUNC:CDP:RES? PTOT"	'Start query

Features:

*RST value::	ABS
SCPI:	device-specific

:[SENSe:]CDPower:PREference TOTAL | PICH

This command sets the reference for the relative CDP measured values to the total power or the PICH power (with antenna 2 the TDPICH power is used).

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are
	'CDP relative on screen A and
	'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CDP:PREF PICH"	'Reference is PICH power
"INIT;*WAI"	'Start measurement with 'synchronization

Features:

*RST value:	TOTAL
SCPI:	device-specific

:[SENSe:]CDPower:QINVert ON | OFF

This command inserts the sign of the signal Q-component.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are
	'CDP relative on screen A and
	'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CDP:QINV ON"	'Enable Invert Q-component
"INIT;*WAI"	'Start measurement with 'synchronization

Features:

*RST value:	OFF
SCPI:	device-specific

:[SENSe:]CDPower:SBANd NORMal | INVers

This command is used to switch the left and right sideband.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are
	'CDP relative on screen A and
	'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CDP:SBAN INV"	'Swap sidebands
"INIT;*WAI"	'Start measurement with
synchronization	

Features: *RST value: NORM
SCPI: device-specific

:[SENSe:]CDPower:SET:COUNT 1 ... 38

If the SET COUNT is set to 1 (default value), the device behaves as normal and with the command `CDPower:IQLength` (IQ-Capture-Length) the number of PCG can be set.

For R&S FSQ the *SET COUNT* can be adjusted in the range of 1...38. Is the *SET COUNT* greater than 1 the IQ-Capture-Length will be implicitly set to 64 PCGs and become unavailable. The *SET COUNT* defines then how many SETS of 64 PCGs shall be captured consecutively into the IQ RAM of the R&S FSQ.

This command is only available on R&S FSQ.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are
	'CDP relative on screen A and
	'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CDP:SET:COUN 12"	'Select 12 Sets of 64 PCGs on
	'R&S FSQ
"INIT;*WAI"	'Start measurement with
	'synchronization
"CDP:SET 2"	'Select results from SET 2
"TRAC? TRACE1"	'Read out CDP

Features: *RST value: 1
SCPI: device-specific

:[SENSe:]CDPower:SET[:VALue] 0 ... (SET COUNT-1)

With this command the SET is selected for which the results are evaluated. Beforehand with `CDP:SET:COUN` a *SET COUNT* value greater than 1 must be set.

This command is only available on R&S FSQ.

Example:

"INST:SEL BC2K"	'Activate cdma2000 BTS, implicit are
	'CDP relative on screen A and
	'result summary active on screen B
"INIT:CONT OFF"	'Select single sweep
"CDP:SET:COUN 12"	'Select 12 Sets of 64 PCGs on
	'R&S FSQ
"INIT;*WAI"	'Start measurement with
	'synchronization
"CDP:SET 2"	'Select results from SET 2
"TRAC? TRACE1"	'Read out CDP

Features: *RST value: 0
SCPI: device-specific

:[SENSe:]CDPower:SFACtor 64 | 128

This command defined the base spreading factor. The base spreading factor should be set to 128 when there are channels of code class 7 (spreading factor 128), since alias power values will otherwise be measured for the code domain power analysis.

Example: "INST:SEL BC2K" 'Activate cdma2000 BTS, implicit are
 'CDP relative on screen A and
 'result summary active on screen B
 "INIT:CONT OFF" 'Select single sweep
 "CDP:SFAC 128" 'Select base spreading factor 128
 "INIT;*WAI" 'Start measurement with synchronization

Features: *RST value: 64
 SCPI: device-specific

:[SENSe:]CDPower:SLOT 0 ...IQLength-1

This command selects the power control group (PCG).

Example: "INST:SEL BC2K" 'Activate cdma2000 BTS, implicit are
 'CDP relative on screen A and
 'result summary active on screen B
 "INIT:CONT OFF" 'Select single sweep
 "CDP:SLOT 2" 'Select power control group 2
 "INIT;*WAI" 'Start measurement with synchronization

Features: *RST value: 0
 SCPI: device-specific

:[SENSe:]CDPower:TPMeas ON | OFF

This command allows specific activation and deactivation of the timing and phase offset evaluation of the channels for the pilot channel. If the value is OFF or more than 50 channels are active, the value '9' is returned as the result for the timing and phase offset for the commands TRACe? TRACe1 and CALC:MARK:FUNC:CDP:RES? . If the value is ON, the timing and phase offsets are calculated and returned.

Example: "INST:SEL BC2K" 'Activate cdma2000 BTS, implicit are
 'CDP relative on screen A and
 'result summary active on screen B
 "INIT:CONT OFF" 'Select single sweep
 "CDP:TPM ON" 'Activate timing and phase offset
 "INIT;*WAI" 'Start measurement with synchronization
 "CDP:SLOT 2" 'Selects power control group 2
 "CDP:CODE 11" 'Select code number 11
 "CALC:MARK:FUNC:CDP:RES? TOFF" 'Read out timing offset of the code
 'with number 11 in PCG 3
 "CALC:MARK:FUNC:CDP:RES? POFF" 'Read out the phase offset of the code
 'with number 11 in PCG 3

Features: *RST value: OFF
 SCPI: device-specific

TRACe subsystem

:TRACe[:DATA?] TRACE1 | TRACE2 | CTABLE | LIST

The command transfers trace data from the controller to the unit, the query command reads trace data from the unit

TRACE1, TRACE2 can be read out, depending on the display.

The trace data (TRACE1 | TRACE2) are formatted as follows for the different displays:

CODE DOMAIN POWER ABSOLUTE/CODE DOMAIN POWER RELATIVE (TRACE1):

The following is output for each channel:

Code class	Code class of the channel. With Hadamard order, normally the code class corresponding to the base spreading factor. With BitReverse order, values between 2 and 7
Code number	Code number of the channel, values between 0 and 127
Level	– For CODE DOMAIN POWER ABSOLUTE in dBm – For CODE DOMAIN POWER RELATIVE in dB (referred to the total or pilot power, refer to the command <code>CDPower:PREference</code>)
Power detection	In Hadamard order, power values of the different codes are normally specified, in BitReverse order the consolidated channel power is returned. 0 – inactive channel 1 – power of own antenna 2 – alias power of own antenna 3 – alias power of other antenna 4 – alias power of own and other antenna. Alias power can be avoided by analysis when the base spreading factor is selected correctly. (Refer to the command <code>CDPower:SFACTOR</code>)

Thus four values are transferred for all channels:

<Code class>, <Code number>, <Signal level>, <Power ID>, ...

For sorting the channels and consolidation, Hadamard order or BitReverse order (refer to the `CDPower:ORDER` command) is important.

With Hadamard, the different codes are output in ascending order with their code power. The number of output codes corresponds to the base spreading factor.

With BitReverse, codes belonging to a channel are next to each other and are therefore output in the class of the channel with output of the consolidated channel power. The maximum number of output codes or channels cannot be higher than the base spreading factor, but decreases with every concentrated channel.

LIST READ OUT RESULTS OF PEAK LIST EVALUATION

This command reads the peak list of the spectrum emission mask measurement list evaluation (refer to `CALC:PEAK:AUTO ON | OFF`). An array of values is returned for each range of the limit line. The arrays for each limit line range are following sequentially.

<value array of range 1>, <value array of range 2>,, <value array of range n>

The array of each range contains the following value list:

<No>, <Start>, <Stop>, <Rbw>, <Freq>, <Levelabs>, <Levelrel>, <Delta>, <Limitcheck>, <unused1>, <unused2>

where:

No	[]	: number of the limit line range
Start	[Hz]	: start frequency of the limit line range
Stop	[Hz]	: stop frequency of the limit line range
Rbw	[Hz]	: resolution band width of the limit line range

Freq [Hz] : frequency of the power peak with in the range
 Levelabs [dBm] : absolute power of the peak with in the range
 Levelrel [dB] : relative power of the peak with in the range related to channel power.
 Delta [dB] : power difference to margin power
 Limitcheck [0 | 1] : decision whether the power is below [0] or above [1] the limit line
 Unused1 [] : reserved (0.0)
 Unused2 [] : reserved (0.0)

Example:

The example shows the results of the query for five channels having the following configuration:

```
PICH 0.64 (CC 6) -7.0 dB
PCH 1.64 (CC 6) -7.3 dB
CHAN 8.32 (CC 5) -8.0 dB
CHAN 24.128 (CC 7) -9.0 dB (alias with 24.64)
SYNC 32.64 (CC 6) -13.3 dB
```

```
"INST:SEL BC2K" 'Activate cdma2000 BTS, implicit are
'CDP relative on screen A and
'result summary active on screen B

"INIT:CONT OFF" 'Select single sweep
"CDP:ORD HAD" 'Set order to Hadamard
"INIT;*WAI" 'Start measurement with
'synchronization

"TRAC? TRACE1" 'Read out CDP relative/Hadamard
'Channel 8.32 is distributed to 8.64
'and 40.64, in each case with half
'power -8 dB -3 dB=-11.0 dB

6, 0, -7.0,1, 6, 1, -7.3,1,
6, 2,-54.6,0, 6, 3,-55.3,0,
.... 6, 7,-58.2,0,
6, 8,-11.0,1, 6, 9,-53.4,0,
.... 6,24, -9.0,2,
.... 6,32,-13.3,1,
.... 6,40,-11.0,1,
.... 6,63,-54.7,0

"CDP:ORD BITR" 'Set order to BitReverse
"TRAC? TRACE1" 'Read out CDP relative/BitReverse
'Channel 8.32 can now be directly read
'out with its total power.
'The sort is changes in accordance
'with BitReverse.

6, 0, -7.0,1, 6,32,-13.3,1,
6,16,-56.3,0, 6,48,-52.8,0,
5, 8, -8.0,1, 6,24, -9.0,2,
.... 6, 1, -7.3,1,
.... 6,63,-54.7,0
```

CODE DOMAIN ERROR POWER (TRACE1):

The following is output for each channel:

Code class	Code class of the channel normally corresponding to the class for the CDEP that belongs to the base spreading factor.
Code number	Code number of the channel, values between 0 and 127
Error power	In dB No difference of power between the Hadamard and BitReverse orders
Power ID	0 – inactive channel 1 – power of own antenna 2 – alias power of own antenna 3 – alias power of other antenna 4 – alias power of own and other antenna. Alias power can be avoided by analysis when the base spreading factor is selected correctly. (Refer to the command <code>CDPower:SFACtor</code>)

Thus four values are transferred for all channels:

<Code class>, <code number>, <signal level>, <power ID>, ...

For sorting the channels, the Hadamard order or BitReverse order (refer to the `CDPower:ORDer` command) is important.

In Hadamard order, the different codes are sorted in ascending order before being output.

With BitReverse order, codes belonging to any one channel are next to each other.

Because an error power is output with the code domain error power, a consolidation of the power values is not sensible.

The number of output codes therefore generally corresponds to the base spreading factor.

Example:

The example shows the results of the query for five channels having the following configuration:

PICH	0.64	(CC 6)	-7.0 dB
PCH	1.64	(CC 6)	-7.3 dB
CHAN	8.32	(CC 5)	-8.0 dB
CHAN	24.128	(CC 7)	-9.0 dB (<i>alias with 24.64</i>)
SYNC	32.64	(CC 6)	-13.3 dB

```
"INST:SEL BC2K"
```

'Activate cdma2000 BTS, implicit are
'CDP relative on screen A and
'result summary active on

```
'screen B
```

```
"INIT:CONT OFF"
```

'Select single sweep

```
"CALC2:FEED 'XPOW:CDEP"
```

'Code domain error power evaluation

```
"INIT;*WAI"
```

'Start measurement with

'synchronization

```
"TRAC? TRACE1"
```

'Read out CDEP Hadamard

```
6, 0, -52.6, 1, 6, 1, -60.1, 1,
6, 2, -54.6, 0, 6, 3, -55.3, 0,
.... 6, 7, -58.2, 0,
6, 8, -51.9, 1, 6, 9, -53.4, 0,
.... 6, 24, -55.7, 2,
.... 6, 32, -58.6, 1,
.... 6, 40, -60.5, 1,
.... 6, 63, -54.7, 0
```

CHANNEL TABLE (TRACE1):

The following is output for each channel:

Channel type	The channel type is coded with numbers as follows:
	0 = PICH
	1 = SYNC
	2 = PCH
	3 = TDPICH
	4 = APICH
	5 = ATDPICH
	6 = BCH
	7 = CPCCH
	8 = CACH
	9 = CCCH
	10 = CHAN
	11 = INACTIVE
	12 = PDCCH
	13 = PDCH
Code class	Code class of the channel, values between 2 and 7
Code number	Code number of the channel, values between 0 and 127
Radio configuration	0 for special channels, 1–5 for CHAN and 10 for RC10 (with CODE CHAN AUTOSEARCH '1' is returned for RCs 1&2, '3' for RCs 3 to 5 and 10 for RC10)
Absolute level	In dBm
Relative level	In dB, referred to the total or pilot power (refer to the <code>CDPower:PREference</code> command)
Timing offset	Referred to the pilot in seconds
Phase offset	Referred to the pilot in rad If the evaluation of the timing and phase offset is not active (refer to <code>CDPower:TPMeas</code>) or more than 50 active channels are in the signal, the value 9 is returned For inactive channels, the value 9 is returned.

The class specifies the spreading factor:

Class 7 corresponds to the highest spreading factor (128, symbol rate 9.6 ksps), and class 2 to the lowest allowed spreading factor (4, symbol rate 307.2 ksps).

Thus eight values are transferred for all channels:

<Channel type>, <Code class>, <Code number>, <Radio configuration>, <Absolute level>, <Relative level>, <Timing offset>, <Phase offset>, ...

All detected special channels are sorted first, followed by the data channels, in ascending order by code class and within the code class in ascending order by code number. The unassigned codes appear at the bottom of the list with the code class of the base spreading factor.

Example: The example shows the results of the query for five channels having the following configuration:

PICH	0.64	(CC 6)	-7.0 dB
PCH	1.64	(CC 6)	-7.3 dB
CHAN	8.32	(CC 5)	-8.0 dB
CHAN	24.128	(CC 7)	-9.0 dB (alias with 24.64)
SYNC	32.64	(CC 6)	-13.3 dB
"INST:SEL BC2K"		'Activate cdma2000 BTS, implicit are	
		'CDP relative on screen A and	
		'result summary active on screen B	
"INIT:CONT OFF"		'Select single sweep	
"CALC1:FEED 'XTIM:CDP:ERR:CTAB'"			
		'Channel table evaluation	
"INIT;*WAI"		'Start measurement with synchronization	
"TRAC? TRACE1"		'Read out channel table	

```

0 , 6, 0, 0, 0.0, -7.0, 9, 9,
1 , 6, 32, 0, -6.3, -13.3, 9, 9,
2 , 6, 1, 0, -0.3, -7.3, 9, 9,
10, 5, 8, 3, -1.0, -8.0, 9, 9,
10, 7, 24, 3, -2.0, -9.0, 9, 9,
11, 6, 2, 3, -47.6, -54.6, 9, 9,
...
11, 6, 63, 3, -47.7, -54.7, 9, 9

```

CHANNEL TABLE (CTABLE):

In addition to the results of the channel table which are output using the TRACE1 command, active timing and phase offset measurement (refer to `CDPower:TPMeas`) also has the CTABLE query command which displays the maximum values of the TIMING and PHASE OFFSET together with the associated channel.

The following values are output: <Max. time offset in s>, <Code number for max. time>, <Code class for max. time>, <Max. phase offset in rad>, <Code number for max. phase>, <Code class for max. phase>, <Reserved 1>, ..., <Reserved 6>

```

Example: "INST:SEL BC2K"           'Activate cdma2000 BTS, implicit are
                                           'CDP relative on Screen A and
                                           'Result Summary active on Screen B
"INIT:CONT OFF"                       'Select single sweep
"CALC1:FEED 'XTIM:CDP:ERR:CTAB'"      'Analyze channel tables
"CDP:TPM ON"                           'Activate timing and phase offset measurement
"INIT;*WAI"                             'Start measurement with synchronization
"TRAC? CTAB"                            'Read out maximum timing and phase offsets
1.20E-009,2,2,                          'Max. time offset with code number and
                                           'code class of associated channel
-3.01E-003,15,4,                        'Max. phase offset with code number
                                           'and code class of associated channel
0,0,0,0,0,0                             '6 reserved values

```

RESULT SUMMARY (TRACE2):

The results of the RESULT SUMMARY are output in the following order:

<SLOT>, <PTOTAL>, <PPICH>, <RHO>, <MACCuracy>, <PCDerror>, <ACTive>, <FERRor>, <FERPpm>, <TFRame>, <CERRor>, <IQOffset>, <IQIMbalance>, <SRATe>, <CHANnel>, <SFACtor>, <TOFFset>, <POFFset>, <CDPRelative>, <CDPabsolute>, <EVMRms>, <EVMPeak>

The results have the following meanings and units:

Global results of the selected PCG:		Global results of all PCGs:	
SLOT	PCG number	FERRor	Frequency error in Hz
PTOTAL	Total power in dBm	FERPpm	Frequency error in ppm
PPICH	Pilot power in dBm	CERRor	Chip rate error in ppm
RHO	RHO	TFRame	Trigger to frame
MACCuracy	Composite EVM in %	ACTive	Number of active channels
PCDerror	Peak code domain error in dB		
IQOffset	IQ offset in %		
IQIMbalance	IQ imbalance in %		
Channel results:			
SRATe	Symbol rate in ksp/s	TOFFset	Timing Offset in s
CHANnel	Channel number	POFFset	Phase Offset in rad
SFACtor	Spreading factor of the channel		
CDPRelative	Channel power relative in dB	CDPabsolute	Channel power abs. in dBm (relative to total or PICH power, refer to <code>CDP:PREF</code> command)

EVMRms Error vector magnitude rms in % EVMPeak Error vector mag. peak in %

Hint: The value trigger to frame (TFRame) delivers a '9' if the trigger is set to FREE RUN. The values timing/phase offset (TOFFset/POFFset) deliver a '9' if the timing and phase offset measurement is switched off (refer to CDP:TPM) or the number of active channel exceeds 50.

Hint: The result of the modulation type can be read out with the command "CALC:MARK:FUNC:CDP:RES? DMTY"

POWER VS PCG, PEAK CODE DOMAIN ERR and COMPOSITE EVM (TRACE2):

The number of returned value pairs corresponds to the Capture length.
(Refer to the CDPower:IQLength command).

POWER VS PCG: <Slot number>, <Level value in dB>, <Slot number>, <Level value in dB>,.....;

PEAK CODE DOMAIN ERROR: <Slot number>, <Level value in dB>,

COMPOSITE EVM: <Slot number>, <Value in %>,

SYMBOL EVM (TRACE2):

The number of values depends on the spreading factor:

Spreading factor 128 : 12 values; spreading factor 64 : 24 values

Spreading factor 32 : 48 values; spreading factor 16 : 96 values

Spreading factor 8 : 192 values; spreading factor 4 : 384 values

(With transmit diversity on the number of symbols are reduced to the half.)

<Value in % symbol 0>, <value in % symbol 1>,.....;

POWER VS SYMBOL (TRACE2):

The number of values depends on the spreading factor:

Spreading factor 128 : 12 values; spreading factor 64 : 24 values

Spreading factor 32 : 48 values; spreading factor 16 : 96 values

Spreading factor 8 : 192 values; spreading factor 4 : 384 values

(With transmit diversity on the number of values are reduced to the half.)

<Value in dBm symbol 0>, <value in dBm symbol 1>,.....;

SYMBOL CONST (TRACE2):

The number of value pairs depends on the spreading factor:

Spreading factor 128 : 12 pairs; spreading factor 64 : 24 pairs

Spreading factor 32 : 48 pairs; spreading factor 16 : 96 pairs

Spreading factor 8 : 192 pairs; spreading factor 4 : 384 pairs

(With transmit diversity on the number of pairs are reduced to the half.)

Real and imaginary parts are transferred as value pairs.

<re 0>, <im 0>, <re 1>, <im 1>,.....<re n>, <im n>

COMPOSITE CONST (TRACe2):

The number of value pairs corresponds to the chip number of 1536 chips in a power control group. Real and imaginary parts are transferred as value pairs:

<re chip 0>, <im chip 0>, <re chip 1>, <im chip 1>,.....;

BITSTREAM (TRACE2):

The bitstream of a slot is output. A value is output for each bit (range 0,1), each symbol consists of one bit for BPSK of 2 bits for QPSK of 3 bits for 8PSK and of 4 bits for 16QAM modulated channels.

The number of values depends on the spreading factor:

For BPSK:

Spreading factor 128	: 12 values;	spreading factor 64	: 24 values
Spreading factor 32	: 48 values;	spreading factor 16	: 96 values
Spreading factor 8	: 192 values;	spreading factor 4	: 384 values

For QPSK:

Spreading factor 128	: 24 values;	spreading factor 64	: 48 values
Spreading factor 32	: 96 values;	spreading factor 16	: 192 values
Spreading factor 8	: 384 values;	spreading factor 4	: 768 values

For 8PSK:

Spreading factor 32	: 144 values
---------------------	--------------

For 16QAM:

Spreading factor 32	: 192 values
---------------------	--------------

(With transmit diversity on the number of values are reduced to the half.)

Example of bitstream trace: 0, 0, 1, 0, 1, 1, 0

STATUS-QUESTIONABLE:SYNC Register

This register contains information on the error situation in the code domain power analysis of the FS-K82 option.

It can be queried with the commands "STATUS:QUESTIONABLE:SYNC:CONDITION?" and "STATUS:QUESTIONABLE:SYNC[:EVENT]?" .

Table 7-1 Meaning of bits in STATUS:QUESTIONABLE:SYNC Register

Bit No.	Meaning
0	Not used in the FS-K82 application
1	<p>K82 Frame Sync failed</p> <p>This bit is set when synchronization is not possible within the application. The reasons for this might be:</p> <ul style="list-style-type: none"> Wrongly set frequency Wrongly set level Wrongly set PN OFFSET Wrongly set values for Q-INVERT or SIDE BAND INVERT Invalid signal at input
2 to 14	Not used in the FS-K82 application.
15	This bit is always 0.

Table of softkeys with assignment of IEC/IEEE bus commands

Key MEAS or Hotkey MEAS

POWER	:CONF1:CDP:MEAS:POW Result query: CALC1:MARK1:FUNC:POW:RES? CPOW
ACLR	:CONFigure<1>:CDPower:MEASurement ACLR Result query: :CALCulate<1>:MARKer<1>:FUNction:POWer:RESult? ACPower
NO. OF ADJ CHAN	:SENS:POW:ACH:ACP 2
ADJUST SETTINGS	:SENS:POW:ACH:PRES ACP CPOW OBW
SWEEP TIME	:SWE:TIM 1 s
NOISE CORR ON OFF	:SENS:POW:NCORR ON
FAST ACLR ON OFF	:SENS:POW:HSP ON
DIAGRAM FULL SIZE	-
ADJUST REV LVL	:SENS:POW:ACH:PRES:RLEV
ACLR LIMIT CHECK	:CALC:LIM:ACP ON :CALC:LIM:ACP:ACH:RES? :CALC:LIM:ACP:ALT:RES?
EDIT ACLR LIMIT	:CALC:LIM:ACP ON :CALC:LIM:ACP:ACH 0dB,0dB :CALC:LIM:ACP:ACH:STAT ON :CALC:LIM:ACP:ACH:ABS -10dBm,-10dBm :CALC:LIM:ACP:ACH:ABS:STAT ON :CALC:LIM:ACP:ALT1 0dB,0dB :CALC:LIM:ACP:ALT1:STAT ON :CALC:LIM:ACP:ALT1:ABS -10dBm,-10dBm :CALC:LIM:ACP:ALT1:ABS:STAT ON :CALC:LIM:ACP:ALT2..11 0dB,0dB :CALC:LIM:ACP:ALT2..11:STAT ON :CALC:LIM:ACP:ALT2..11:ABS -10dBm,-10dBm :CALC:LIM:ACP:ALT2..11:ABS:STAT ON
CHANNEL BANDWIDTH	:SENS:POW:ACH:BWID 1.2288MHz
ADJ CHAN BANDWIDTH	:SENS:POW:ACH:BWID:ACH 30kHz :SENS:POW:ACH:BWID:ALT1 30kHz :SENS:POW:ACH:BWID:ALT2..11 30kHz
ADJ CHAN SPACING	:SENS:POW:ACH:SPAC:ACH 750kHz :SENS:POW:ACH:SPAC:ALT1 1.98MHz :SENS:POW:ACH:SPAC:ALT2..11 4MHz
ACLR ABS REL	:SENS:POW:ACH:MODE ABS
CHAN PWR / HZ	:CALC:MARK:FUNC:POW:RES:PHZ ON OFF
POWER MODE	
CLEAR/ WRITE	:CALC:MARK:FUNC:POW:MODE WRIT MAXH
MAX HOLD	

MULT CARR ACLR	:CONF1:CDP:MEAS MCAC Result query: :CALC1:MARK1:FUNC:POWer:RES? MCAC
CP/ACP CONFIG	
NO. OF ADJ CHAN	:SENS:POW:ACH:ACP 2
NO. OF TX CHAN	:SENS:POW:ACH:TXCH:COUN 4
CHANNEL BANDWIDTH	:SENS:POW:ACH:BWID 1.2288MHz
CHANNEL SPACING	:SENS:POW:ACH:SPAC:ACH 750kHz :SENS:POW:ACH:SPAC:ALT1 1.98MHz :SENS:POW:ACH:SPAC:ALT2..11 4MHz
ACP REF SETTING	:POW:ACH:REF:TXCH:MAN 1 :POW:ACH:REF:TXCH:AUTO MIN :POW:ACH:REF:TXCH:AUTO MAX :POW:ACH:REF:TXCH:AUTO LHIG
CP/ACP ABS REL	:POW:ACH:MODE ABS
CHAN PWR / HZ	:CALC:MARK:FUNC:POW:RES:PHZ ON OFF
POWER MODE	
CLEAR/ WRITE	
MAX HOLD	:CALC:MARK:FUNC:POW:MODE WRIT MAXH
ADJUST SETTINGS	:SENS:POW:ACH:PRES MCAC
ACP LIMIT CHECK	:CALC:LIM:ACP ON :CALC:LIM:ACP:ACH:RES? :CALC:LIM:ACP:ALT:RES?
EDIT ACP LIMIT	:CALC:LIM:ACP ON :CALC:LIM:ACP:ACH 0dB,0dB :CALC:LIM:ACP:ACH:STAT ON :CALC:LIM:ACP:ACH:ABS -10dBm,-10dBm :CALC:LIM:ACP:ACH:ABS:STAT ON :CALC:LIM:ACP:ALT1 0dB,0dB :CALC:LIM:ACP:ALT1:STAT ON :CALC:LIM:ACP:ALT1:ABS -10dBm,-10dBm :CALC:LIM:ACP:ALT1:ABS:STAT ON :CALC:LIM:ACP:ALT2..11 0dB,0dB :CALC:LIM:ACP:ALT2..11:STAT ON :CALC:LIM:ACP:ALT2..11:ABS -10dBm,-10dBm :CALC:LIM:ACP:ALT2..11:ABS:STAT ON
SWEEP TIME	:SWE:TIM 1 s
NOISE CORR ON OFF	:SENS:POW:NCORR ON
FAST ACP ON OFF	:SENS:POW:HSP ON
DIAGRAM FULL SIZE	-

ADJUST REV LVL	:SENS:POW:ACH:PRES:RLEV
SPECTRUM EM MASK	:CONFigure:CDPower:MEASurement ESpectrum Result query: :CALCulate<1>:LIMit<1>:FAIL? :CALC:LIM:ESP:CHEC:X?;Y?
LIMIT LINE AUTO	:CALC:LIM:ESP:MODE AUTO
LIMIT LINE MANUAL	:CALC:LIM:ESP:MODE MANual :CALCul:LIM:ESP:VAL <numeric_value>
LIMIT LINE USER	:CALC:LIMit<1>:NAME <string> :CALC:LIMit<1>:UNIT DBM :CALC:LIMit<1>:CONT[:DATA] <num_value>, <num_value>, ... :CALC:LIMit<1>:CONT:DOMain FREquency :CALC:LIMit<1>:CONT:TRACe 1 :CALC:LIMit<1>:CONT:OFFset <num_value> :CALC:LIMit<1>:CONT:MODE RELative :CALC:LIM<1>:UPPer[:DATA] <num_value>, <num_value>.. :CALC:LIM<1>:UPPer:STATe ON OFF :CALC:LIM<1>:UPPer:OFFset <num_value> :CALC:LIM<1>:UPPer:MARGin <num_value> :CALC:LIM<1>:UPPer:MODE ABSolute :CALC:LIM<1>:UPPer:SPACing LINear
	<p><i>Hint:</i></p> <ul style="list-style-type: none"> - If the y values are entered with the command :CALCulate:LIMit<1>:LOWer[:DATA] the limit check is "failed", if the values are below the limit line - If a user defined limit line is switched on this one has priority over the limit lines selected via AUTO or MANUAL
RESTORE STD LINES	:CALC:LIM:ESP:RESTore
ADJUST REF LVL	:SENS:POW:ACH:PRES:RLEV
30kHz/1MHz TRANSITION	:CALC:LIM:ESP:TRAN <numeric value>
PEAK SEARCH	:CALC:PEAK:IMM
PEAK RANGE	:CALC:PEAK:SUBR 1...50
MARGIN	:CALC:PEAK:MARG -200dB...200dB
VIEW PEAK LIST	:TRAC? FINall
SORT BY FREQUENCY	---
SORT BY DELTA LIM	---
ASCII FILE EXPORT	:MMEM:STOR:FIN 'A:\final.dat'
DECIM SEP .	:FORM:DEXP:DSEP POIN COMM

OCCUPIED BANDWIDTH	:CONFigure<1>:CDPower:MEASurement OBANdwidth Result query: :CALCulate<1>:MARKer<1>:FUNction:POWer:RESult? OBANdwidth
% POWER BANDWIDTH	:SENS:POW:BWID 99PCT
ADJUST SETTINGS	:SENS:POW:PRES OBW
ADJUST REF LVL	:SENS:POW:ACH:PRES:RLEV
STATISTICS	CONF:CDP:MEAS CCDF or :CALC:STAT:BTS:CCDF:STAT ON Result query: CALC:MARK:X?
APD	:CALC:STAT:APD ON
CCDF	:CALC:STAT:CCDF ON
PERCENT MARKER	:CALC:MARKr:Y:PERC 0...100%
NO OF SAMPLES	CALC:STAT:NSAM <value>
SCALING	
X-AXIS REF LVL	:CALC:STAT:SCAL:X:RLEV <value>
X-AXIS RANGE	:CALC:STAT:SCAL:X:RANG <value>
X-AXIS MAX VALUE	:CALC:STAT:SCAL:Y:UPP <value>
X-AXIS MIN VALUE	:CALC:STAT:SCAL:Y:LOW <value>
ADJUST SETTINGS	:CALC:STAT:SCAL:AUTO ONCE
DEFAULT SETTINGSL	:CALC:STAT:PRES
ADJUST SETTINGS	:CALC:STAT:SCAL:AUTO ONCE
CONT MEAS	:INIT:CONT ON; :INIT:IMM
SINGLE MEAS	:INIT:CONT OFF; :INIT:IMM

Hot key RESULTS or Softkey CODE DOM ANALYZER

CODE DOM POWER	:CALC1:FEED "XPOW:CDP:RAT" (relative) :CALC1:FEED "XPOW:CDP" (absolute)
CODE DOM ERROR	:CALC1:FEED "XPOW:CDEP"
COMPOSITE EVM	:CALC2:FEED "XTIM:CDP:MACCuracy"
PEAK CODE DOMAIN ERR	:CALC2:FEED "XTIM:CDP:ERR:PCDomain"
POWER VS PCG	:CALC2:FEED "XTIM:CDP:PVSlot"
RESULT SUMMARY	:CALC2:FEED "XTIM:CDP:ERR:SUMM" Result query: :CALC2:MARK1:FUNC:CDP:BTS:RES? PTOT FERR RHO PPIC FERP CERR TFR IQOF IQIM MACC PCD SLOT ACT SRAT TOFF CHAN POFF SFAC CDP CDPR EVMR EVMP
CHANEL TABLE	:CALC1:FEED "XTIM:CDP:ERR:CTable"
SYMBOL CONST	:CALC2:FEED "XTIM:CDP:SYMB:CONS"
SYMBOL EVM	:CALC2:FEED "XTIM:CDP:SYMB:EVM"
BITSTEAM	:CALC2:FEED "XTIM:CDP:BSTReam"
COMPOSITE CONST	:CALC2:FEED "XTIM:CDP:COMP:CONS"
POWER VS SYMBOL	:CALC2:FEED "XTIM:CDP:PVSY"
SELECT CHANNEL	:SENS:CDP:CODE 0...(BASE SF-1)
SELECT	
CAPTURE LENGTH	:SENS:CDP:IQLength 2..64
SET COUNT	:SENS:CDP:SET:COUNT 1..38 (only R&S FSQ)
SET TO ANALYZE	:SENS:CDP:SET:[VALue] 0...(SET COUNT-1) (only R&S FSQ)
SELECT CHANNEL	:SENS:CDP:CODE 0...(BASE SF-1))
SELECT PCG	:SENS:CDP:SLOT 0 ... (IQ_CAPTURE_LENGTH-1)
ADJUST REF LVL	:SENS:POW:ACH:PRES:RLEV

Hotkey CHAN CONF

CODE CHAN AUTOSEARCH	:CONFigure:CDPower[:BTS]:CTABLE[:STATE] OFF
CODE CHAN PREDEFINED	:CONFigure:CDPower[:BTS]:CTABLE[:STATE] ON :CONFigure:CDPower[:BTS]:CTABLE:SElect <channel table name>
EDIT CHAN CONF TABLE	---
NEW CHAN CONF TABLE	---
HEADER VALUES	:CONFigure:CDPower[:BTS]:CTABLE:NAME "NEW_TAB"
ADD SPECIAL	---
INSERT LINE	---
DELETE LINE	---
MEAS CHAN CONF TABLE	---
SAVE TABLE	--
SORT TABLE	---
PAGE UP	---
PAGE UP	---
DEL CHAN CONF TABLE	:CONFigure:CDPower[:BTS]:CTABLE:DElete
COPY CHAN CONF TABLE	:CONFigure:CDPower[:BTS]:CTABLE:COPY "CTAB2"
RESTORE STD TABLES	:CONFigure:CDPower[:BTS]:CTABLE:REStore

Hotkey SETTINGS

BAND CLASS	:CONFigure:CDPower:BClass 1 '1900 MHz
PN OFFSET	:[SENSe:]CDPower:PNOffset 0...511
BASE SF 64 128	: [SENSe:]CDPower:SFACTOR 64 128
CAPTURE SETTINGS	
CAPTURE LENGTH	: [SENSe:]CDPower:IQLength 2..64
SET COUNT	: [SENSe:]CDPower:SET:COUNT 1..38 (only R&S FSQ)
SET TO ANALYZE	: [SENSe:]CDPower:SET:[VALUE] 0..(SET COUNT-1) (only R&S FSQ)
SELECT CHANNEL	: [SENSe:]CDPower:CODE 0...(BASE SF-1)
SELECT PCG	: [SENSe:]CDPower:SLOT 0 ... (IQ_CAPTURE_LENGTH-1)
FORCE 1xEV-DV	: [SENSe:]CDPower:FDV ON OFF
CODE PWR ABS REL	:CALCulate<1>:FEED "XPOW:CDP:RAT" (relative) :CALCulate<1>:FEED "XPOW:CDP" (absolute)
POWER REF TOT PICH	: [SENSe:]CDPower:PREference TOTAL PICH
ORDER HADAMBITRE	: [SENSe:]CDPower:ORDER HADamard BITReverse
TIME PHASE ON OFF	: [SENSe:]CDPower:TPMeas ON OFF
ANT DIV ON OFF	
	: [SENSe:]CDPower:ANTenna OFF 1 2
ANT NO. 64 128	
INACT CHAN THRESHOLD	: [SENSe:]CDPower:ICTReshold -100 dB ... 0 dB
INVERT Q ON OFF	: [SENSe:]CDP:QINvert ON OFF
SIDE BAND NORN INV	: [SENSe:]CDPower:SBAND NORMal INVers
NORMALIZE ON OFF	: [SENSe:]CDPower:NORMalize ON OFF

8 Performance Test

- Switch off the analyzer before removing or inserting modules.
- Check the setting of the system voltage selector (230 V) before switching on the unit.
- Measure the parameters after a warm-up time of at least 30 min. and the completion of system error correction of the analyzer and the SMIQ. Only then is it ensured that the specifications are complied with.
- Unless specified to the contrary, all settings are performed on the basis of the PRESET.
- The following conventions apply to settings on the analyzer during the measurement:

- [<KEY>] Press a key on the front panel, for example [SPAN]
- [<SOFTKEY>] Press a softkey, for example [MARKER → PEAK]
- [<nn unit>] Enter a value and terminate your input with the unit, for example [12 kHz]
- {<nn>} Enter values specified in one of the following tables.

Successive entries are separated by [:], for example [**SPAN**: 15 kHz]

- The values stated in the sections that follow are not guaranteed; only the data sheet specifications are binding.

Measuring equipment and accessories

Item	Instrument type	Recommended characteristics	Recommended equipment	R&S Order No.	Use
1	Signal generator	Vector signal generator for generating cdmaOne (IS95) signals	SMIQ with options: SMIQB42 SMIQB20 SMIQB11 SMIQ-Z5 PARADATA	1125.5555.xx 1104.7936.02 1125.5190.02 1085.4502.04 1104.8555.02	

Test procedure

The performance test refers exclusively to results of the code domain analyzer. There is no need to check the results of POWER, ACLR and SPECTRUM measurements, since they are already covered by the performance test of the basic unit.

Default settings on [**PRESET**]
 SMIQ: [**LEVEL :** 0 dBm]
 [**FREQ:** 878.49 MHz]
 DIGITAL STD
 IS95
 STATE: ON

The SMIQ channel list should contain the following entries:

CHAN NO	WALSH CODE	POWER[dB]	DATA	STATE
0 (PILOT)	0	-7.0	0000	ON
1	32	-13.3	PRBS	ON
2	1	-7.3	PRBS	ON
3	9	-10.3	PRBS	ON
4	10	-10.3	PRBS	ON
5	11	-10.3	PRBS	ON
6	15	-10.3	PRBS	ON
7	17	-10.3	PRBS	ON
8	25	-10.3	PRBS	ON
9	33	-10.3	PRBS	OFF
10	34	-10.3	PRBS	OFF
11	35	-10.3	PRBS	OFF
12	36	-10.3	PRBS	OFF
13	37	-10.3	PRBS	OFF
14	38	-10.3	PRBS	OFF
15	39	-10.3	PRBS	OFF
16	40	-10.3	PRBS	OFF
17	41	-10.3	PRBS	OFF

Default settings on **[PRESET]**
 analyzer: **[CENTER: 878.49 MHz]**
[AMPT: 10 dBm]
[CDMA2k BS]
[TRIG EXTERN]
[SETTINGS TIME/PHASE: 0N]

[RESULTS CHANNEL TABLE]

- Test setup and other settings ➤ Connect the RF output of the SMIQ to the RF input of the analyzer
- Connect the external trigger input of the analyzer to the TRIG1 port of the Z5 PARADATA BNC ADAPTER
- Connect the external reference output of the analyzer to the SMIQ

SMIQ UTILITIES

REF OSC

SOURCE: EXT

DIGITAL STANDARD

IS95

MODULATION

FILTER MODE: LOW_EVM

Analyzer [SETUP:

REFERENCE INT]

The measurement result displayed on the screen of the analyzer should now be as follows:



BS,1X,C0 :CHANNEL TAB

CF 878.49 MHz Chan 0.64 Max T 0.94 ns @ 32.64
PCG 0 Max Ph -1.78 mrad @ 15.64

Type	Chan.SF	Symb Rate	RC	Status	Pwr Abs	Pwr Rel	T Offs	Ph Offs		
		ksps			dBm	dB	ns	mrad		
Ref	PICH	0.64	19.2	---	active	-6.76	reference	0.00	0.00	A
10.0	SYNC	32.64	19.2	---	active	-13.04	-6.29	0.94	-0.67	
dBm	PCH	1.64	19.2	---	active	-7.05	-0.30	0.10	-1.21	
Att	CHAN	9.64	19.2	1+2	active	-10.06	-3.30	0.48	-0.72	
40 dB	CHAN	10.64	19.2	1+2	active	-10.05	-3.30	0.35	0.11	
	CHAN	11.64	19.2	1+2	active	-10.06	-3.30	0.20	-1.05	
	CHAN	15.64	19.2	1+2	active	-10.05	-3.29	0.12	-1.78	
	CHAN	17.64	19.2	1+2	active	-10.05	-3.30	0.30	-1.45	
1	CHAN	25.64	19.2	1+2	active	-10.06	-3.30	0.43	-0.56	
CLRWR	----	2.64	19.2	3-5	inact	-58.86	-52.11	----	----	
	----	3.64	19.2	3-5	inact	-59.70	-52.95	----	----	
	----	4.64	19.2	3-5	inact	-56.59	-49.84	----	----	

RESULT SUMMARY TABLE

SR 19.2 ksps

Chan 0.64

CF 878.49 MHz PCG 0

RESULTS FOR PCG 0:		GLOBAL RESULTS:			
Ref	Total PWR	0.21 dBm	Carr Freq Error	-64.28 MHz	B
10.0	Pilot PWR	-6.76 dBm	Carr Freq Error	-0.00 ppm	
dBm	RHO	0.99990	Chip Rate Error	0.18 ppm	
Att	Composite EVM	1.01 %	Trg to Frame	-.----- s	
40 dB	Pk CDE (SF 64)	-54.55 dB	Active Channels	9	
	IQ Imbal/Offset	0.16/0.18 %			
CHANNEL RESULTS:		Modulation		BPSK	
1	Symbol Rate	19.2 ksps	Timing Offset	0.00 ns	
CLRWR	Channel.SF	0.64	Phase Offset	0.00 mrad	
	Channel Power Rel	0.00 dB	Channel Power Abs	-6.76 dBm	
	Symbol EVM	0.28 % rms	Symbol EVM	0.48 % Pk	

9 Hadamard and BitReverse Code Tables

The following tables show the code sequences with Hadamard and BitReverse orders for the code domain power and code domain error power evaluations. The example for channel 8.32 (channel number 8 for spreading factor 32) shows in bold type where the different codes of this channel are located.

Table 9–1 Code table for base spreading factor 64

HADAMARD		BITREVERSE	
0	000000	0 0 0 0 0 0 0	000000
1	000001	0 0 0 0 0 0 1	100000
2	000010	0 0 0 0 1 0 0	010000
3	000011	0 0 0 0 1 1 0	110000
4	000100	0 0 0 1 0 0 0	001000
5	000101	0 0 0 1 0 0 1	101000
6	000110	0 0 0 1 1 0 0	011000
7	000111	0 0 0 1 1 1 0	111000
8	001000	0 0 1 0 0 0 0	000100
9	001001	0 0 1 0 0 0 1	100100
10	001010	0 0 1 0 1 0 0	010100
11	001011	0 0 1 0 1 1 0	110100
12	001100	0 0 1 1 0 0 0	001100
13	001101	0 0 1 1 0 0 1	101100
14	001110	0 0 1 1 1 0 0	011100
15	001111	0 0 1 1 1 1 0	111100
16	010000	0 1 0 0 0 0 0	000010
17	010001	0 1 0 0 0 0 1	100010
18	010010	0 1 0 0 1 0 0	010010
19	010011	0 1 0 0 1 1 0	110010
20	010100	0 1 0 1 0 0 0	001010
21	010101	0 1 0 1 0 0 1	101010
22	010110	0 1 0 1 1 0 0	011010
23	010111	0 1 0 1 1 1 0	111010
24	011000	0 1 1 0 0 0 0	000110
25	011001	0 1 1 0 0 0 1	100110
26	011010	0 1 1 0 1 0 0	010110
27	011011	0 1 1 0 1 1 0	110110
28	011100	0 1 1 1 0 0 0	001110
29	011101	0 1 1 1 0 0 1	101110
30	011110	0 1 1 1 1 0 0	011110
31	011111	0 1 1 1 1 1 0	111110
32	100000	1 0 0 0 0 0 0	000001
33	100001	1 0 0 0 0 0 1	100001
34	100010	1 0 0 0 1 0 0	010001
35	100011	1 0 0 0 1 1 0	110001
36	100100	1 0 0 1 0 0 0	001001
37	100101	1 0 0 1 0 0 1	101001
38	100110	1 0 0 1 1 0 0	011001
39	100111	1 0 0 1 1 1 0	111001
40	101000	1 0 1 0 0 0 0	000101
41	101001	1 0 1 0 0 0 1	100101
42	101010	1 0 1 0 1 0 0	010101
43	101011	1 0 1 0 1 1 0	110101
44	101100	1 0 1 1 0 0 0	001101
45	101101	1 0 1 1 0 0 1	101101
46	101110	1 0 1 1 1 0 0	011101
47	101111	1 0 1 1 1 1 0	111101
48	110000	1 1 0 0 0 0 0	000011
49	110001	1 1 0 0 0 0 1	100011
50	110010	1 1 0 0 1 0 0	010011
51	110011	1 1 0 0 1 1 0	110011
52	110100	1 1 0 1 0 0 0	001011
53	110101	1 1 0 1 0 0 1	101011
54	110110	1 1 0 1 1 0 0	011011
55	110111	1 1 0 1 1 1 0	111011
56	111000	1 1 1 0 0 0 0	000111
57	111001	1 1 1 0 0 0 1	100111
58	111010	1 1 1 0 1 0 0	010111
59	111011	1 1 1 0 1 1 0	110111
60	111100	1 1 1 1 0 0 0	001111
61	111101	1 1 1 1 0 0 1	101111
62	111110	1 1 1 1 1 0 0	011111
63	111111	1 1 1 1 1 1 0	111111

Table 9–2 Code table for base spreading factor 128 (part 1)

HADAMARD				BITREVERSE			
0	000000	0 0 0 0 0 0 0 0	0	0 0 0 0 0 0 0 0	000000	0	
1	000001	0 0 0 0 0 0 0 1	1	0 0 0 0 0 0 0 0	100000	64	
2	000010	0 0 0 0 0 0 1 0	0	1 0 0 0 0 0 0 0	010000	32	
3	000011	0 0 0 0 0 0 1 1	1	1 0 0 0 0 0 0 0	110000	96	
4	000100	0 0 0 0 0 1 0 0	0	0 0 1 0 0 0 0 0	001000	16	
5	000101	0 0 0 0 0 1 0 1	1	0 0 1 0 0 0 0 0	101000	80	
6	000110	0 0 0 0 0 1 1 0	0	1 0 1 0 0 0 0 0	011000	48	
7	000111	0 0 0 0 0 1 1 1	1	1 0 1 0 0 0 0 0	111000	112	
8	0001000	0 0 0 1 0 0 0 0	0	0 0 0 1 0 0 0 0	0001000	8	
9	0001001	0 0 0 1 0 0 0 1	1	0 0 0 1 0 0 0 0	1001000	72	
10	0001010	0 0 0 1 0 0 1 0	0	1 0 0 1 0 0 0 0	0101000	40	
11	0001011	0 0 0 1 0 0 1 1	1	1 0 0 1 0 0 0 0	1101000	104	
12	0001100	0 0 0 1 1 0 0 0	0	0 0 1 1 0 0 0 0	0011000	24	
13	0001101	0 0 0 1 1 0 0 1	1	0 0 1 1 0 0 0 0	1011000	88	
14	0001110	0 0 0 1 1 0 1 0	0	1 0 1 1 0 0 0 0	0111000	56	
15	0001111	0 0 0 1 1 0 1 1	1	1 0 1 1 0 0 0 0	1111000	120	
16	0010000	0 0 1 0 0 0 0 0	0	0 0 0 0 1 0 0 0	0000100	4	
17	0010001	0 0 1 0 0 0 0 1	1	0 0 0 0 1 0 0 0	1000100	68	
18	0010010	0 0 1 0 0 0 1 0	0	1 0 0 0 1 0 0 0	0100100	36	
19	0010011	0 0 1 0 0 0 1 1	1	1 0 0 0 1 0 0 0	1100100	100	
20	0010100	0 0 1 0 1 0 0 0	0	0 0 1 0 1 0 0 0	0010100	20	
21	0010101	0 0 1 0 1 0 0 1	1	0 0 1 0 1 0 0 0	1010100	84	
22	0010110	0 0 1 0 1 0 1 0	0	1 0 1 0 1 0 0 0	0110100	52	
23	0010111	0 0 1 0 1 0 1 1	1	1 0 1 0 1 0 0 0	1110100	116	
24	0011000	0 0 1 1 0 0 0 0	0	0 0 0 1 1 0 0 0	0001100	12	
25	0011001	0 0 1 1 0 0 0 1	1	0 0 0 1 1 0 0 0	1001100	76	
26	0011010	0 0 1 1 0 0 1 0	0	1 0 0 1 1 0 0 0	0101100	44	
27	0011011	0 0 1 1 0 0 1 1	1	1 0 0 1 1 0 0 0	1101100	108	
28	0011100	0 0 1 1 1 0 0 0	0	0 0 1 1 1 0 0 0	0011100	28	
29	0011101	0 0 1 1 1 0 0 1	1	0 0 1 1 1 0 0 0	1011100	92	
30	0011110	0 0 1 1 1 0 1 0	0	1 0 1 1 1 0 0 0	0111100	60	
31	0011111	0 0 1 1 1 0 1 1	1	1 0 1 1 1 0 0 0	1111100	124	
32	0100000	0 1 0 0 0 0 0 0	0	0 0 0 0 0 1 0 0	0000010	2	
33	0100001	0 1 0 0 0 0 0 1	1	0 0 0 0 0 1 0 0	1000010	66	
34	0100010	0 1 0 0 0 0 1 0	0	1 0 0 0 0 1 0 0	0100010	34	
35	0100011	0 1 0 0 0 0 1 1	1	1 0 0 0 0 1 0 0	1100010	98	
36	0100100	0 1 0 0 1 0 0 0	0	0 0 1 0 0 1 0 0	0010010	18	
37	0100101	0 1 0 0 1 0 0 1	1	0 0 1 0 0 1 0 0	1010010	82	
38	0100110	0 1 0 0 1 0 1 0	0	1 0 1 0 0 1 0 0	0110010	50	
39	0100111	0 1 0 0 1 0 1 1	1	1 0 1 0 0 1 0 0	1110010	114	
40	0101000	0 1 0 1 0 0 0 0	0	0 0 0 1 0 1 0 0	0001010	10	
41	0101001	0 1 0 1 0 0 0 1	1	0 0 0 1 0 1 0 0	1001010	74	
42	0101010	0 1 0 1 0 0 1 0	0	1 0 0 1 0 1 0 0	0101010	42	
43	0101011	0 1 0 1 0 0 1 1	1	1 0 0 1 0 1 0 0	1101010	106	
44	0101100	0 1 0 1 1 0 0 0	0	0 0 1 1 0 1 0 0	0011010	26	
45	0101101	0 1 0 1 1 0 0 1	1	0 0 1 1 0 1 0 0	1011010	90	
46	0101110	0 1 0 1 1 0 1 0	0	1 0 1 1 0 1 0 0	0111010	58	
47	0101111	0 1 0 1 1 0 1 1	1	1 0 1 1 0 1 0 0	1111010	122	
48	0110000	0 1 1 0 0 0 0 0	0	0 0 0 0 1 1 0 0	0000110	6	
49	0110001	0 1 1 0 0 0 0 1	1	0 0 0 0 1 1 0 0	1000110	70	
50	0110010	0 1 1 0 0 0 1 0	0	1 0 0 0 1 1 0 0	0100110	38	
51	0110011	0 1 1 0 0 0 1 1	1	1 0 0 0 1 1 0 0	1100110	102	
52	0110100	0 1 1 0 1 0 0 0	0	0 0 1 0 1 1 0 0	0010110	22	
53	0110101	0 1 1 0 1 0 0 1	1	0 0 1 0 1 1 0 0	1010110	86	
54	0110110	0 1 1 0 1 0 1 0	0	1 0 1 0 1 1 0 0	0110110	54	
55	0110111	0 1 1 0 1 0 1 1	1	1 0 1 0 1 1 0 0	1110110	118	
56	0111000	0 1 1 1 0 0 0 0	0	0 0 0 1 1 1 0 0	0001110	14	
57	0111001	0 1 1 1 0 0 0 1	1	0 0 0 1 1 1 0 0	1001110	78	
58	0111010	0 1 1 1 0 0 1 0	0	1 0 0 1 1 1 0 0	0101110	46	
59	0111011	0 1 1 1 0 0 1 1	1	1 0 0 1 1 1 0 0	1101110	110	
60	0111100	0 1 1 1 1 0 0 0	0	0 0 1 1 1 1 0 0	0011110	30	
61	0111101	0 1 1 1 1 0 0 1	1	0 0 1 1 1 1 0 0	1011110	94	
62	0111110	0 1 1 1 1 0 1 0	0	1 0 1 1 1 1 0 0	0111110	62	
63	0111111	0 1 1 1 1 0 1 1	1	1 0 1 1 1 1 0 0	1111110	126	

10 Glossary

1xEV-DV	First evolution data and voice, enhancement of cdma2000 towards packet data transmission
APICH	Auxiliary pilot channel.
ATDPCH	Auxiliary transmit diversity channel.
BCH	Broadcast channel.
CACH	Common assignment channel.
CCCH	Common control channel.
CDEP	Code domain error power.
CDP	Code domain power.
Composite EVM	In accordance with the 3GPP2 specifications, the square root of the squared error between the real and the imaginary parts of the test signal and an ideally generated reference signal is determined (EVM referred to the total signal) in a composite EVM measurement.
CPCCH	Common power control channel.
Crest factor	Ratio of peak to average value of the signal.
Inactive Channel Threshold	Minimum power that a single channel must have compared with the total signal to be recognized as an active channel .
MC1	Multi-carrier1 (one carrier system 1X).
MC2	Multi-carrier3 (three carrier system 3X).
OTD	Orthogonal transmit diversity. Two antennas used.
PCG	Power control group: name in cdma2000 system for 1536 chips or 1.25 ms interval. Transmitter power is constant during a power control group.
PCH	Paging channel.
PDCH	Packet Data Channel
PDCCH	Packet Data Control Channel

PICH	Pilot channel 0.64.
RC	Radio configuration. Definition of sampling rate, permissible data rates, modulation types and use of special channels, and transmit diversity.
SF	Spreading factor.
SYNC	Synchronisation channel 32.64.
TD	Transmit diversity. Use of two antennas.
TDPICH	Transmit diversity pilot channel 16.128.
x.y	Walsh code x.y, where: x is the code number and y is the spreading factor of the channel.

11 Index

A

ACLR	6.3
Adjacent channel power	6.3
number of channels	6.5
Alias power	6.37, 6.39
Amplitude power distribution	6.29, 6.30
Amplitude probability distribution function	6.29, 6.30
Attenuation	
mechanical	6.68
Average	6.72

B

Base spreading factor	7.26
BITSTREAM	6.48

C

Carr Freq Err	6.44
CCDF	
complementary cumulative distribution function	6.29, 6.30
Center frequency	6.67
Chan #	6.46
Channel	6.45
power	6.14
active	6.64
bandwidth	6.9, 6.10
number	6.5
status	6.56
Channel assignment table	6.46
Channel number	6.56
Channel power	6.2
absolute/relative	6.10
relative	6.56
Channel type	6.56
Channel, active	10.1
Checking desired characteristics	8.1
Chip Rate Err	6.44
Code domain error power	6.39
Code domain power	6.37
Commands	
assignment to soft key	7.35
description	7.1
Common pilot channel	10.2
Complementary distribution function	6.30
Composite constellation	6.50
Composite EVM	6.44
CPICH	10.2

D

Default setting	2.2
scaling on X-axis and Y-axis	6.32

Desired characteristics	8.1
Distribution function	6.30
Distribution function of signal amplitudes	6.29, 6.30

E

Error Vector Mag Pk / rms	6.45
---------------------------	------

F

Fast power measurement	6.7
Frequency	
offset	6.67
Function fields	6.36

H

Hot key	
CDMA2k BS	5.1
CHAN CONF	4.3, 5.1, 6.53
EXIT CDMA	5.2
MEAS	5.1, 6.1
RESULTS	5.1, 6.35
SETTINGS	5.1

I

IQ imbalance	6.44
IQ offset	6.44

K

Key	
AMPT	6.68
BW	6.71
CAL	6.74
DISP	6.73
FILE	6.73
FREQ	6.67
HCOPY	6.74
LINES	6.73
MARKER	6.69
MEAS	6.1, 6.71
MKR FCTN	6.71
MKR->	6.70
PRESET	6.74
SETUP	6.74
SPAN	6.67
SWEEP	6.71
TRACE	6.72
TRIG	6.72

DEL CHAN CONF TABLE.....	6.58, 7.15	REF VALUE POSITION	6.68
DELETE LINE	6.57	RESTORE STD LINES.....	6.23
DIAGRAM FULL SIZE.....	6.7	RESTORE STD TABLES	6.58, 7.15
EDIT ACLR LIMITS.....	6.8	RESULT SUMMARY ..	6.35, 6.44, 7.1, 7.27
EDIT CHAN CONF TABLE	6.55, 7.13	RF ATTEN AUTO	6.68
ENHANCED ALGORITHM.....	6.64	RF ATTEN MANUAL	6.68
FAST ACLR ON/OFF.....	6.7	ROLL OFF.....	6.64
FILT TYPE LOWPA/RRRC.....	6.64	SAVE TABLE.....	6.58
FORCE 1xEV-DV.....	6.63, 7.22	SCALING.....	6.31
FREQUENCY OFFSET.....	6.67	SELECT.....	6.50
HEADER/VALUES	6.56, 7.13, 7.14	SELECT CHANNEL	6.51, 6.62, 7.22
INACT CHAN THRESHOLD	6.64, 7.22	SELECT MARKER	6.70
INSERT LINE	6.57	SELECT PCG.....	6.52, 6.63, 7.26
INSTALL OPTION.....	1.1	SET COUNT.....	6.51, 6.62, 7.25
INVERT Q	6.66, 7.24	SET TO ANALYZE	6.51, 6.62, 7.25
LIMIT LINE AUTO	6.17, 7.3	SETTINGS.....	6.60
LIMIT LINE MANUAL	6.17, 7.3	SIDEBAND NORM / INV	6.66, 7.25
LIMIT LINE USER	6.23, 7.3	SINGLE MEAS	6.32
LIST EVALUATION.....	6.23, 7.8	SORT BY DELTA LIM	6.26
MARGIN	6.25, 7.8	SORT BY FREQUENCY	6.25
MARKER -> PICH	6.70, 7.6	SORT TABLE	6.58
MARKER -> TDPICH	6.70, 7.6	SPECTRUM EM MASK.....	6.16, 7.12
MARKER 1...4	6.69	STATISTICS.....	6.29
MARKER NORM/DELTA	6.69	SWEEP COUNT.....	6.73
MAX HOLD.....	6.72	SWEEP TIME	6.6
MC FILTER ON/OFF.....	6.64	SYMBOL CONST	6.35, 6.47, 7.1, 7.27
MEAS CHAN CONF TABLE	6.58	SYMBOL EVM.....	6.35, 6.47, 7.1, 7.27
MIN HOLD.....	6.72	TIME/PHASE ON / OFF	6.66, 7.26
MULT CARR ACLR.....	6.12	VIEW PEAK LIST	6.25
MULTI CARRIER	6.64	X-AXIS RANGE.....	6.31
NEW CHAN CONF TABLE	6.59, 7.13	X-AXIS REF LEVEL	6.31
NEXT PEAK	6.70	Y PER DIV.....	6.68
NO OF SAMPLES	6.30, 7.9	Y-AXIS MAX VALUE	6.31, 7.9
NO. OF ADJ CHAN	6.5	Y-AXIS MIN VALUE	6.31, 7.9
NO. OF TX CHAN	6.13	Special channels.....	6.56
NOISE CORR ON/OFF.....	6.7	Spreading code.....	6.45
NORMALIZE ON/OFF.....	6.66, 7.23	Spreading factor.....	6.56
OCCUPIED BANDWIDTH.....	6.27, 7.12	Status.....	6.46
ORDER.....	6.65, 7.23	STATus-QUEStionable-SYNC-Register.....	7.34
PEAK.....	6.70	Symbol constellation.....	6.47
PEAK CODE DOMAIN ERR	6.35, 6.42,	Symbol error vector magnitude.....	6.47
.....	7.1, 7.27	SYMBOL EVM (TRACE2)	7.32
PEAK MODE MIN/MAX.....	6.70	Symbol rate.....	6.45, 6.46, 6.56
PEAK SEARCH.....	6.24, 7.8	T	
PEAKS PER RANGE	6.24, 7.8	Test setup	3.1
PERCENT MARKER.....	6.30	Timing offset	6.45, 6.46
PILOT PWR ABS/REL	6.65, 7.24	Total power	6.10, 6.44
PN OFFSET	6.61, 7.24	Trace	
POWER.....	6.1, 6.2, 7.12	overwrite mode	6.72
POWER REF TOT/PICH.....	6.65, 7.24	peak value detection.....	6.72
POWER VS PCG	6.35, 6.43, 7.1, 7.27	Transducer.....	6.74
POWER VS SYMBOL.....	6.35, 6.50, 7.1	Transmit diversity pilot channel	6.70
REF LEVEL	6.68	Trg to Frame	6.45
REF LEVEL OFFSET.....	6.68		