

R&S®FSH4/8

Remote Control via LAN or USB

Software Manual



1173.0089.12 – 14

The Software Manual describes the following R&S®FSH options

- R&S FSH-K40 (1304.5606.02)

The contents are for R&S FSH models:

- R&S FSH4 (1309.6000.04)
- R&S FSH4 (1309.6000.14)
- R&S FSH4 (1309.6000.24)
- R&S FSH8 (1309.6000.08)
- R&S FSH8 (1309.6000.18)
- R&S FSH8 (1309.6000.28)

The manual also covers the following options:

- R&S FSH-K14 (1304.5770.02)
- R&S FSH-K41 (1304.5612.02)
- R&S FSH-K42 (1309.5629.02)
- R&S FSH-K43 (1304.5635.02)
- R&S FSH-K44 (1309.5658.02)
- R&S FSH-K44E (1304.5758.02)
- R&S FSH-K45 (1309.5641.02)
- R&S FSH-K46 (1304.5729.02)
- R&S FSH-K46E (1304.5764.02)
- R&S FSH-K47 (1304.5787.02)
- R&S FSH-K47E (1304.5806.02)
- R&S FSH-K48 (1304.5887.02)
- R&S FSH-K50 (1304.5735.02)
- R&S FSH-K50E (1304.5793.02)
- R&S FSH-K51 (1304.5812.02)
- R&S FSH-K51E (1304.5829.02)

The contents of this manual correspond to firmware version 2.10 or higher.

© 2012 Rohde & Schwarz GmbH & Co. KG

Muehldorfstr. 15, 81671 Munich, Germany

Phone: +49 89 4129-0

Fax: +49 89 4129-12 164

E-mail: info@rohde-schwarz.com

Internet: <http://www.rohde-schwarz.com>

81671 Munich, Germany

Printed in Germany – Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual:

R&S®FSH is abbreviated as R&S FSH.

Basic Safety Instructions








Always read through and comply with the following safety instructions!

All plants and locations of the Rohde & Schwarz group of companies make every effort to keep the safety standards of our products up to date and to offer our customers the highest possible degree of safety. Our products and the auxiliary equipment they require are designed, built and tested in accordance with the safety standards that apply in each case. Compliance with these standards is continuously monitored by our quality assurance system. The product described here has been designed, built and tested in accordance with the attached EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards. To maintain this condition and to ensure safe operation, you must observe all instructions and warnings provided in this manual. If you have any questions regarding these safety instructions, the Rohde & Schwarz group of companies will be happy to answer them.

Furthermore, it is your responsibility to use the product in an appropriate manner. This product is designed for use solely in industrial and laboratory environments or, if expressly permitted, also in the field and must not be used in any way that may cause personal injury or property damage. You are responsible if the product is used for any intention other than its designated purpose or in disregard of the manufacturer's instructions. The manufacturer shall assume no responsibility for such use of the product.

The product is used for its designated purpose if it is used in accordance with its product documentation and within its performance limits (see data sheet, documentation, the following safety instructions). Using the product requires technical skills and a basic knowledge of English. It is therefore essential that only skilled and specialized staff or thoroughly trained personnel with the required skills be allowed to use the product. If personal safety gear is required for using Rohde & Schwarz products, this will be indicated at the appropriate place in the product documentation. Keep the basic safety instructions and the product documentation in a safe place and pass them on to the subsequent users.





Symbols and safety labels

						
Observe product documen-tation	Danger of electric shock	Warning! Hot surface	PE terminal	Ground	Ground terminal	Attention! Electrostatic sensitive devices

Observing the safety instructions will help prevent personal injury or damage of any kind caused by dangerous situations. Therefore, carefully read through and adhere to the following safety instructions before and when using the product. It is also absolutely essential to observe the additional safety instructions on personal safety, for example, that appear in relevant parts of the product documentation. In these safety instructions, the word "product" refers to all merchandise sold and distributed by the Rohde & Schwarz group of companies, including instruments, systems and all accessories.

Tags and their meaning

The following signal words are used in the product documentation in order to warn the reader about risks and dangers.

 DANGER	indicates a hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
 NOTICE	indicates the possibility of incorrect operation which can result in damage to the product.

In the product documentation, the word ATTENTION is used synonymously.

These tags are in accordance with the standard definition for civil applications in the European Economic Area. Definitions that deviate from the standard definition may also exist in other economic areas or military applications. It is therefore essential to make sure that the tags described here are always used only in connection with the related product documentation and the related product. The use of tags in connection with unrelated products or documentation can result in misinterpretation and in personal injury or material damage.

Operating states and operating positions

The product may be operated only under the operating conditions and in the positions specified by the manufacturer. If the manufacturer's specifications are not observed, this can result in electric shock, fire and/or serious personal injury or death. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.

1. The R&S FSH is protected against dripping water and dust (IP degree 51). Unless otherwise specified, the following requirements apply to Rohde & Schwarz products: predefined operating position is always with the housing floor facing down, IP protection 2X, pollution severity 2, overvoltage category 2, use only in enclosed spaces, max. operation altitude 4600 m above sea level, max. transport altitude 12000 m above sea level. A tolerance of $\pm 10\%$ shall apply to the nominal voltage and of $\pm 5\%$ to the nominal frequency.

2. Do not place the product on heat-generating devices such as radiators or fan heaters. The ambient temperature must not exceed the maximum temperature specified in the product documentation or in the data sheet. Product overheating can cause electric shock, fire and/or serious personal injury or death.

Electrical Safety

If the information on electrical safety is not observed either at all to the extent necessary, electric shock, fire and/or serious personal injury or death may occur.

1. Prior to switching on the product, always ensure that the nominal voltage setting on the power supply matches the nominal voltage of the AC supply network.
2. If the product does not have a power switch for disconnection from the AC supply network, the plug of the connecting cable is regarded as the disconnecting device. In such cases, always ensure that the power plug is easily reachable and accessible at all times (corresponding to the length of connecting cable, approx. 2 m). Functional or electronic switches are not suitable for providing disconnection from the AC supply network. If products without power switches are integrated into racks or systems, a disconnecting device must be provided at the system level.
3. Never use the product if the power cable is damaged. Check the power cable on a regular basis to ensure that it is in proper operating condition. By taking appropriate safety measures and carefully laying the power cable, you can ensure that the cable will not be damaged and that no one can be hurt by, for example, tripping over the cable or suffering an electric shock.
4. The product may be operated only from TN/TT supply networks fused with max. 16 A (higher fuse only after consulting with the Rohde & Schwarz group of companies).
5. Do not insert the plug into sockets that are dusty or dirty. Insert the plug firmly and all the way into the socket. Otherwise, sparks that result in fire and/or injuries may occur.
6. Do not overload any sockets, extension cords or connector strips; doing so can cause fire or electric shocks.
7. For measurements in circuits with voltages $V_{\text{rms}} > 30 \text{ V}$, suitable measures (e.g. appropriate measuring equipment, fusing, current limiting, electrical separation, insulation) should be taken to avoid any hazards.
8. Ensure that the connections with information technology equipment, e.g. PCs or other industrial computers, comply with the IEC60950-1/EN60950-1 or IEC61010-1/EN 61010-1 standards that apply in each case.
9. Unless expressly permitted, never remove the cover or any part of the housing while the product is in operation. Doing so will expose circuits and components and can lead to injuries, fire or damage to the product.
10. For permanently installed equipment without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fused in such a way that anyone who has access to the product, as well as the product itself, is adequately protected from injury or damage.

11. Use suitable overvoltage protection to ensure that no overvoltage (such as that caused by a bolt of lightning) can reach the product. Otherwise, the person operating the product will be exposed to the danger of an electric shock.
12. Any object that is not designed to be placed in the openings of the housing must not be used for this purpose. Doing so can cause short circuits inside the product and/or electric shocks, fire or injuries.
13. Unless specified otherwise, products are not liquid-proof (see also section "Operating states and operating positions", item 1. Therefore, the equipment must be protected against penetration by liquids. If the necessary precautions are not taken, the user may suffer electric shock or the product itself may be damaged, which can also lead to personal injury.
14. Prior to cleaning the product, disconnect it completely from the power supply (e.g. AC supply network or battery). Use a soft, non-linting cloth to clean the product. Never use chemical cleaning agents such as alcohol, acetone or diluents for cellulose lacquers.

Operation

1. Operating the products requires special training and intense concentration. Make sure that persons who use the products are physically, mentally and emotionally fit enough to do so; otherwise, injuries or material damage may occur. It is the responsibility of the employer/operator to select suitable personnel for operating the products.
2. Before you move or transport the product, read and observe the section titled "Transport".
3. As with all industrially manufactured goods, the use of substances that induce an allergic reaction (allergens) such as nickel cannot be generally excluded. If you develop an allergic reaction (such as a skin rash, frequent sneezing, red eyes or respiratory difficulties) when using a Rohde & Schwarz product, consult a physician immediately to determine the cause and to prevent health problems or stress.
4. Before you start processing the product mechanically and/or thermally, or before you take it apart, be sure to read and pay special attention to the section titled "Waste disposal", item 1.
5. Depending on the function, certain products such as RF radio equipment can produce an elevated level of electromagnetic radiation. Considering that unborn babies require increased protection, pregnant women must be protected by appropriate measures. Persons with pacemakers may also be exposed to risks from electromagnetic radiation. The employer/operator must evaluate workplaces where there is a special risk of exposure to radiation and, if necessary, take measures to avert the potential danger.
6. Should a fire occur, the product may release hazardous substances (gases, fluids, etc.) that can cause health problems. Therefore, suitable measures must be taken, e.g. protective masks and protective clothing must be worn.

Repair and service

1. The product may be opened only by authorized, specially trained personnel. Before any work is performed on the product or before the product is opened, it must be disconnected from the AC supply network. Otherwise, personnel will be exposed to the risk of an electric shock.
2. Adjustments, replacement of parts, maintenance and repair may be performed only by electrical experts authorized by Rohde & Schwarz. Only original parts may be used for replacing parts relevant to safety (e.g. power switches, power transformers, fuses). A safety test must always be performed after parts relevant to safety have been replaced (visual inspection, PE conductor test, insulation resistance measurement, leakage current measurement, functional test). This helps ensure the continued safety of the product.

Batteries and rechargeable batteries/cells

If the information regarding batteries and rechargeable batteries/cells is not observed either at all or to the extent necessary, product users may be exposed to the risk of explosions, fire and/or serious personal injury, and, in some cases, death. Batteries and rechargeable batteries with alkaline electrolytes (e.g. lithium cells) must be handled in accordance with the EN 62133 standard.

1. Cells must not be taken apart or crushed.
2. Cells or batteries must not be exposed to heat or fire. Storage in direct sunlight must be avoided. Keep cells and batteries clean and dry. Clean soiled connectors using a dry, clean cloth.
3. Cells or batteries must not be short-circuited. Cells or batteries must not be stored in a box or in a drawer where they can short-circuit each other, or where they can be short-circuited by other conductive materials. Cells and batteries must not be removed from their original packaging until they are ready to be used.
4. Keep cells and batteries out of the hands of children. If a cell or a battery has been swallowed, seek medical aid immediately.
5. Cells and batteries must not be exposed to any mechanical shocks that are stronger than permitted.
6. If a cell develops a leak, the fluid must not be allowed to come into contact with the skin or eyes. If contact occurs, wash the affected area with plenty of water and seek medical aid.
7. Improperly replacing or charging cells or batteries that contain alkaline electrolytes (e.g. lithium cells) can cause explosions. Replace cells or batteries only with the matching Rohde & Schwarz type (see parts list) in order to ensure the safety of the product.
8. Cells and batteries must be recycled and kept separate from residual waste. Rechargeable batteries and normal batteries that contain lead, mercury or cadmium are hazardous waste. Observe the national regulations regarding waste disposal and recycling.

Transport

1. Handles on the products are designed exclusively to enable personnel to transport the product. It is therefore not permissible to use handles to fasten the product to or on transport equipment such as cranes, fork lifts, wagons, etc. The user is responsible for securely fastening the products to or on the means of transport or lifting. Observe the safety regulations of the manufacturer of the means of transport or lifting. Noncompliance can result in personal injury or material damage.
2. If you use the product in a vehicle, it is the sole responsibility of the driver to drive the vehicle safely and properly. The manufacturer assumes no responsibility for accidents or collisions. Never use the product in a moving vehicle if doing so could distract the driver of the vehicle. Adequately secure the product in the vehicle to prevent injuries or other damage in the event of an accident.

Waste disposal

1. If products or their components are mechanically and/or thermally processed in a manner that goes beyond their intended use, hazardous substances (heavy-metal dust such as lead, beryllium, nickel) may be released. For this reason, the product may only be disassembled by specially trained personnel. Improper disassembly may be hazardous to your health. National waste disposal regulations must be observed.

Informaciones Elementales de Seguridad








Es imprescindible leer y observar las siguientes instrucciones e informaciones de seguridad!

El principio del grupo de empresas Rohde & Schwarz consiste en tener nuestros productos siempre al día con los estándares de seguridad y de ofrecer a nuestros clientes el máximo grado de seguridad. Nuestros productos y todos los equipos adicionales son siempre fabricados y examinados según las normas de seguridad vigentes. Nuestro sistema de garantía de calidad controla constantemente que sean cumplidas estas normas. El presente producto ha sido fabricado y examinado según el certificado de conformidad adjunto de la UE y ha salido de nuestra planta en estado impecable según los estándares técnicos de seguridad. Para poder preservar este estado y garantizar un funcionamiento libre de peligros, el usuario deberá atenerse a todas las indicaciones, informaciones de seguridad y notas de alerta. El grupo de empresas Rohde & Schwarz está siempre a su disposición en caso de que tengan preguntas referentes a estas informaciones de seguridad.

Además queda en la responsabilidad del usuario utilizar el producto en la forma debida. Este producto está destinado exclusivamente al uso en la industria y el laboratorio o, si ha sido expresamente autorizado, para aplicaciones de campo y de ninguna manera deberá ser utilizado de modo que alguna persona/cosa pueda sufrir daño. El uso del producto fuera de sus fines definidos o sin tener en cuenta las instrucciones del fabricante queda en la responsabilidad del usuario. El fabricante no se hace en ninguna forma responsable de consecuencias a causa del mal uso del producto.





Se parte del uso correcto del producto para los fines definidos si el producto es utilizado conforme a las indicaciones de la correspondiente documentación del producto y dentro del margen de rendimiento definido (ver hoja de datos, documentación, informaciones de seguridad que siguen). El uso del producto hace necesarios conocimientos técnicos y ciertos conocimientos del idioma inglés. Por eso se debe tener en cuenta que el producto solo pueda ser operado por personal especializado o personas instruidas en profundidad con las capacidades correspondientes. Si fuera necesaria indumentaria de seguridad para el uso de productos de Rohde & Schwarz, encontraría la información debida en la documentación del producto en el capítulo correspondiente. Guarde bien las informaciones de seguridad elementales, así como la documentación del producto, y entréguelas a usuarios posteriores.

Símbolos y definiciones de seguridad

						
Ver documentación de producto	Peligro de golpe de corriente	¡Advertencia! Superficie caliente	Conexión a conductor protector	Conexión a tierra	Conexión a masa conductora	¡Cuidado! Elementos de construcción con peligro de carga electrostática

Tener en cuenta las informaciones de seguridad sirve para evitar en lo posible lesiones o daños por peligros de toda clase. Por eso es imprescindible leer detalladamente y comprender por completo las siguientes informaciones de seguridad antes de usar el producto, y respetarlas durante el uso del producto. Deberán tenerse en cuenta todas las demás informaciones de seguridad, como p. ej. Las referentes a la protección de personas, que encontrarán en el capítulo correspondiente de la documentación del producto y que también son de obligado cumplimiento. En las presentes informaciones de seguridad se recogen todos los objetos que distribuye el grupo de empresas Rohde & Schwarz bajo la denominación de "producto", entre ellos también aparatos, instalaciones así como toda clase de accesorios.

Palabras de señal y su significado

 PELIGRO	PELIGRO identifica un peligro inminente con riesgo elevado que provocará muerte o lesiones graves si no se evita.
 ADVERTENCIA	ADVERTENCIA identifica un posible peligro con riesgo medio de provocar muerte o lesiones (graves) si no se evita.
 ATENCIÓN	ATENCIÓN identifica un peligro con riesgo reducido de provocar lesiones leves o moderadas si no se evita.
 AVISO	AVISO indica la posibilidad de utilizar mal el producto y, como consecuencia, dañarlo. En la documentación del producto se emplea de forma sinónima el término CUIDADO.

Las palabras de señal corresponden a la definición habitual para aplicaciones civiles en el área económica europea. Pueden existir definiciones diferentes a esta definición en otras áreas económicas o en aplicaciones militares. Por eso se deberá tener en cuenta que las palabras de señal aquí descritas sean utilizadas siempre solamente en combinación con la correspondiente documentación del producto y solamente en combinación con el producto correspondiente. La utilización de las palabras de señal en combinación con productos o documentaciones que no les correspondan puede llevar a interpretaciones equivocadas y tener por consecuencia daños en personas u objetos.

Estados operativos y posiciones de funcionamiento

El producto solamente debe ser utilizado según lo indicado por el fabricante respecto a los estados operativos y posiciones de funcionamiento sin que se obstruya la ventilación. Si no se siguen las indicaciones del fabricante, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte. En todos los trabajos deberán ser tenidas en cuenta las normas nacionales y locales de seguridad del trabajo y de prevención de accidentes.

1. El producto solamente debe ser utilizado según lo indicado por el fabricante referente a la situación y posición de funcionamiento. R&S FSH está protegido contra roción y polvo (modo de protección IP 51). Si no se convino de otra manera, es para los productos Rohde & Schwarz válido lo que sigue: como posición de funcionamiento se define por principio la posición con el suelo de la caja para abajo, modo de protección IP 2X, grado de suciedad 2, categoría de sobrecarga eléctrica 2, uso solamente en estancias interiores, utilización hasta 4600 m sobre el nivel del mar, transporte hasta 12000 m sobre el nivel del mar. Se aplicará una tolerancia de $\pm 10\%$ sobre el voltaje nominal y de $\pm 5\%$ sobre la frecuencia nominal.
2. No ponga el producto sobre aparatos que generen calor (p. ej. radiadores o calefactores). La temperatura ambiente no debe superar la temperatura máxima especificada en la documentación del producto o en la hoja de datos. En caso de sobrecalentamiento del producto, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

Seguridad eléctrica

Si no se siguen (o se siguen de modo insuficiente) las indicaciones del fabricante en cuanto a seguridad eléctrica, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

1. Antes de la puesta en marcha del producto se deberá comprobar siempre que la tensión preseleccionada en el producto coincida con la de la red de alimentación eléctrica.
2. Si el producto no está equipado con un interruptor para desconectarlo de la red, se deberá considerar el enchufe del cable de conexión como interruptor. En estos casos se deberá asegurar que el enchufe siempre sea de fácil acceso (de acuerdo con la longitud del cable de conexión, aproximadamente 2 m). Los interruptores de función o electrónicos no son aptos para el corte de la red eléctrica. Si los productos sin interruptor están integrados en bastidores o instalaciones, se deberá colocar el interruptor en el nivel de la instalación.
3. No utilice nunca el producto si está dañado el cable de conexión a red. Compruebe regularmente el correcto estado de los cables de conexión a red. Asegúrese, mediante las medidas de protección y de instalación adecuadas, de que el cable de conexión a red no pueda ser dañado o de que nadie pueda ser dañado por él, p. ej. al tropezar o por un choque eléctrico.
4. Solamente está permitido el funcionamiento en redes de alimentación TN/TT aseguradas con fusibles de 16 A como máximo (utilización de fusibles de mayor amperaje solo previa consulta con el grupo de empresas Rohde & Schwarz).
5. Nunca conecte el enchufe en tomas de corriente sucias o llenas de polvo. Introduzca el enchufe por completo y fuertemente en la toma de corriente. La no observación de estas medidas puede provocar chispas, fuego y/o lesiones.
6. No sobrecargue las tomas de corriente, los cables alargadores o las regletas de enchufe ya que esto podría causar fuego o choques eléctricos.
7. En las mediciones en circuitos de corriente con una tensión $U_{\text{eff}} > 30 \text{ V}$ se deberán tomar las medidas apropiadas para impedir cualquier peligro (p. ej. medios de medición adecuados, seguros, limitación de tensión, corte protector, aislamiento etc.).
8. Para la conexión con dispositivos informáticos como un PC o un ordenador industrial, debe comprobarse que éstos cumplan los estándares IEC60950-1/EN60950-1 o IEC61010-1/EN 61010-1 válidos en cada caso.
9. A menos que esté permitido expresamente, no retire nunca la tapa ni componentes de la carcasa mientras el producto esté en servicio. Esto pone a descubierto los cables y componentes eléctricos y puede causar lesiones, fuego o daños en el producto.
10. En el caso de dispositivos fijos que no estén provistos de fusibles, interruptor automático ni otros mecanismos de seguridad similares, el circuito de alimentación debe estar protegido de modo que todas las personas que puedan acceder al producto, así como el producto mismo, estén a salvo de posibles daños.

11. Todo producto debe estar protegido contra sobretensión (debida p. ej. a una caída del rayo) mediante los correspondientes sistemas de protección. Si no, el personal que lo utilice quedará expuesto al peligro de choque eléctrico.
12. No debe introducirse en los orificios de la caja del aparato ningún objeto que no esté destinado a ello. Esto puede producir cortocircuitos en el producto y/o puede causar choques eléctricos, fuego o lesiones.
13. Salvo indicación contraria, los productos no están impermeabilizados (ver también el capítulo "Estados operativos y posiciones de funcionamiento", punto 1). Por eso es necesario tomar las medidas necesarias para evitar la entrada de líquidos. En caso contrario, existe peligro de choque eléctrico para el usuario o de daños en el producto, que también pueden redundar en peligro para las personas.
14. Antes de la limpieza, desconecte por completo el producto de la alimentación de tensión (p. ej. red de alimentación o batería). Realice la limpieza de los aparatos con un paño suave, que no se deshilache. No utilice bajo ningún concepto productos de limpieza químicos como alcohol, acetona o diluyentes para lacas nitrocelulósicas.

Funcionamiento

1. El uso del producto requiere instrucciones especiales y una alta concentración durante el manejo. Debe asegurarse que las personas que manejen el producto estén a la altura de los requerimientos necesarios en cuanto a aptitudes físicas, psíquicas y emocionales, ya que de otra manera no se pueden excluir lesiones o daños de objetos. El empresario u operador es responsable de seleccionar el personal usuario apto para el manejo del producto.
2. Antes de desplazar o transportar el producto, lea y tenga en cuenta el capítulo "Transporte".
3. Como con todo producto de fabricación industrial no puede quedar excluida en general la posibilidad de que se produzcan alergias provocadas por algunos materiales empleados, los llamados alérgenos (p. ej. el níquel). Si durante el manejo de productos Rohde & Schwarz se producen reacciones alérgicas, como p. ej. irritaciones cutáneas, estornudos continuos, enrojecimiento de la conjuntiva o dificultades respiratorias, debe avisarse inmediatamente a un médico para investigar las causas y evitar cualquier molestia o daño a la salud.
4. Antes de la manipulación mecánica y/o térmica o el desmontaje del producto, debe tenerse en cuenta imprescindiblemente el capítulo "Eliminación", punto 1.
5. Ciertos productos, como p. ej. las instalaciones de radiocomunicación RF, pueden a causa de su función natural, emitir una radiación electromagnética aumentada. Deben tomarse todas las medidas necesarias para la protección de las mujeres embarazadas. También las personas con marcapasos pueden correr peligro a causa de la radiación electromagnética. El empresario/operador tiene la obligación de evaluar y señalizar las áreas de trabajo en las que exista un riesgo elevado de exposición a radiaciones.
6. Tenga en cuenta que en caso de incendio pueden desprenderse del producto sustancias tóxicas (gases, líquidos etc.) que pueden generar daños a la salud. Por eso, en caso de incendio

Reparación y mantenimiento

1. El producto solamente debe ser abierto por personal especializado con autorización para ello. Antes de manipular el producto o abrirlo, es obligatorio desconectarlo de la tensión de alimentación, para evitar toda posibilidad de choque eléctrico.
2. El ajuste, el cambio de partes, el mantenimiento y la reparación deberán ser efectuadas solamente por electricistas autorizados por Rohde & Schwarz. Si se reponen partes con importancia para los aspectos de seguridad (p. ej. el enchufe, los transformadores o los fusibles), solamente podrán ser sustituidos por partes originales. Después de cada cambio de partes relevantes para la seguridad deberá realizarse un control de seguridad (control a primera vista, control del conductor de protección, medición de resistencia de aislamiento, medición de la corriente de fuga, control de funcionamiento). Con esto queda garantizada la seguridad del producto.

Baterías y acumuladores o celdas

Si no se siguen (o se siguen de modo insuficiente) las indicaciones en cuanto a las baterías y acumuladores o celdas, pueden producirse explosiones, incendios y/o lesiones graves con posible consecuencia de muerte. El manejo de baterías y acumuladores con electrolitos alcalinos (p. ej. celdas de litio) debe seguir el estándar EN 62133.

1. No deben desmontarse, abrirse ni triturarse las celdas.
2. Las celdas o baterías no deben someterse a calor ni fuego. Debe evitarse el almacenamiento a la luz directa del sol. Las celdas y baterías deben mantenerse limpias y secas. Limpiar las conexiones sucias con un paño seco y limpio.
3. Las celdas o baterías no deben cortocircuitarse. Es peligroso almacenar las celdas o baterías en estuches o cajones en cuyo interior puedan cortocircuitarse por contacto recíproco o por contacto con otros materiales conductores. No deben extraerse las celdas o baterías de sus embalajes originales hasta el momento en que vayan a utilizarse.
4. Mantener baterías y celdas fuera del alcance de los niños. En caso de ingestión de una celda o batería, avisar inmediatamente a un médico.
5. Las celdas o baterías no deben someterse a impactos mecánicos fuertes indebidos.
6. En caso de falta de estanqueidad de una celda, el líquido vertido no debe entrar en contacto con la piel ni los ojos. Si se produce contacto, lavar con agua abundante la zona afectada y avisar a un médico.
7. En caso de cambio o recarga inadecuados, las celdas o baterías que contienen electrolitos alcalinos (p. ej. las celdas de litio) pueden explotar. Para garantizar la seguridad del producto, las celdas o baterías solo deben ser sustituidas por el tipo Rohde & Schwarz correspondiente (ver lista de recambios).

8. Las baterías y celdas deben reciclarse y no deben tirarse a la basura doméstica. Las baterías o acumuladores que contienen plomo, mercurio o cadmio deben tratarse como residuos especiales. Respete en esta relación las normas nacionales de eliminación y reciclaje.

Transporte

1. Las asas instaladas en los productos sirven solamente de ayuda para el transporte del producto por personas. Por eso no está permitido utilizar las asas para la sujeción en o sobre medios de transporte como p. ej. grúas, carretillas elevadoras de horquilla, carros etc. Es responsabilidad suya fijar los productos de manera segura a los medios de transporte o elevación. Para evitar daños personales o daños en el producto, siga las instrucciones de seguridad del fabricante del medio de transporte o elevación utilizado.
2. Si se utiliza el producto dentro de un vehículo, recae de manera exclusiva en el conductor la responsabilidad de conducir el vehículo de manera segura y adecuada. El fabricante no asumirá ninguna responsabilidad por accidentes o colisiones. No utilice nunca el producto dentro de un vehículo en movimiento si esto pudiera distraer al conductor. Asegure el producto dentro del vehículo debidamente para evitar, en caso de un accidente, lesiones u otra clase de daños.

Eliminación

1. Si se trabaja de manera mecánica y/o térmica cualquier producto o componente más allá del funcionamiento previsto, pueden liberarse sustancias peligrosas (povos con contenido de metales pesados como p. ej. plomo, berilio o níquel). Por eso el producto solo debe ser desmontado por personal especializado con formación adecuada. Un desmontaje inadecuado puede ocasionar daños para la salud. Se deben tener en cuenta las directivas nacionales referentes a la eliminación de residuos.

Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish. We will take care that you will get the right information.

Europe, Africa, Middle East

Phone +49 89 4129 12345
customersupport@rohde-schwarz.com

North America

Phone 1-888-TEST-RSA (1-888-837-8772)
customer.support@rsa.rohde-schwarz.com

Latin America

Phone +1-410-910-7988
customersupport.la@rohde-schwarz.com

Asia/Pacific

Phone +65 65 13 04 88
customersupport.asia@rohde-schwarz.com

China

Phone +86-800-810-8228 /
+86-400-650-5896
customersupport.china@rohde-schwarz.com



Table of Contents

1	Introduction	10
2	Interfaces and Protocols	11
2.1	LAN Interface.....	12
2.2	USB Interface	12
2.3	Protocols	12
3	Setting Up the Remote Control Connection	15
3.1	Preparing for Remote Control	15
4	Instrument Model and Command Processing	16
4.1	Input Unit	16
4.2	Command Recognition	17
4.3	Data Base and Instrument Hardware.....	17
4.4	Status Reporting System	18
4.5	Output Unit	18
5	SCPI Command Structure and Syntax	19
5.1	Structure of a Command	19
5.1.1	Common Commands.....	19
5.1.2	Device-Specific Commands.....	20
5.1.2.1	Hierarchy.....	20
5.1.2.2	Multiple Keywords.....	20
5.1.2.3	Optional Keywords.....	21
5.1.2.4	Long and Short Form.....	21
5.1.2.5	Parameter	22
5.1.2.6	Special Characters.....	22
5.1.2.7	Numeric Suffix.....	23
5.1.3	Overview of Syntax Elements.....	24
5.2	Parameters	24
5.2.1	Numeric Values.....	25
5.2.2	Special Numeric Values.....	25
5.2.3	Boolean Parameters	26
5.2.4	Text.....	26

5.2.5	Strings	26
5.2.6	Block Data	26
5.3	Structure of a Program Message	27
5.4	Responses to Queries	28
6	Command Sequence and Command Synchronization	29
7	Remote Control – Commands	30
7.1	Common Commands	31
7.2	Remote Commands of the Spectrum Analyzer	34
7.2.1	Configuring the Horizontal Axis	34
7.2.2	Configuring the Vertical Axis	39
7.2.3	Setting the Bandwidths	45
7.2.4	Performing and Triggering Measurements	47
7.2.4.1	Performing the Measurement	47
7.2.4.2	Triggering Measurements	50
7.2.5	Working with Traces	53
7.2.6	Using Markers	58
7.2.6.1	Markers and Delta Markers	58
7.2.6.2	Marker Functions	67
7.2.7	Using Display Lines and Limit Lines	73
7.2.7.1	Display Lines	73
7.2.7.2	Limit Lines	74
7.2.8	Configuring and Using Measurement Functions	78
7.2.8.1	Working with Channel Tables	79
7.2.8.2	Power Measurements	81
7.2.8.3	Measuring the Channel Power	85
7.2.8.4	Measuring the Occupied Bandwidth	86
7.2.8.5	TDMA Measurements	87
7.2.8.6	Measuring the Adjacent Channel Leakage Ratio	88
7.2.8.7	Measuring the Harmonic Distortion	99
7.2.8.8	Measuring the AM Modulation Depth	101
7.2.8.9	Measuring the Spectrum Emission Mask	102
7.2.8.10	Using an Isotropic Antenna	104

7.3 Remote Commands of the Network Analyzer Mode	106
7.3.1 Configuring the Horizontal Axis	106
7.3.2 Configuring the Vertical Axis.....	107
7.3.3 Setting the Bandwidths	115
7.3.4 Performing and Triggering the Measurement.....	115
7.3.5 Working with Traces	116
7.3.6 Using Markers and Deltamarkers	117
7.3.6.1 Markers and Deltamarkers	117
7.3.6.2 Marker Functions	119
7.3.7 Configuring the Measurement	121
7.3.7.1 Selecting the Measurement Port	121
7.3.7.2 Selecting the Measurement Mode.....	122
7.3.7.3 Calibrating the Measurement.....	122
7.3.7.4 Selecting the Result Display	124
7.3.7.5 Selecting the Measurement Format.....	125
7.3.7.6 Configuring the Vector Voltmeter (option R&S FSH-K45).....	128
7.4 Remote Commands of the Power Meter.....	131
7.4.1 Setting the Frequency.....	131
7.4.2 Configuring Power Level Readout.....	131
7.4.3 Defining the Measurement Time.....	133
7.4.4 Performing Measurements with the Power Sensor	134
7.4.4.1 Zeroing of the Power Sensor	134
7.4.4.2 Forward Power Display.....	135
7.4.4.3 Reading Out Measurement Results.....	135
7.4.4.4 Selecting a Standard	136
7.5 Remote Commands of the Distance-to-Fault Mode	137
7.5.1 Configuring the Horizontal Axis	137
7.5.2 Configuring the Vertical Axis.....	138
7.5.3 Setting the Bandwidth	139
7.5.4 Performing and Triggering the Measurement.....	139
7.5.5 Working with Traces	139
7.5.6 Using Markers.....	141
7.5.6.1 Markers and Deltamarkers	141

7.5.7	Configuring the Measurement	141
7.5.7.1	Calibrating Measurements.....	141
7.5.7.2	Controlling the Measurement.....	142
7.6	Remote Commands of the Receiver Mode.....	145
7.6.1	Configuring the Horizontal Axis	145
7.6.2	Configuring the Vertical Axis.....	147
7.6.3	Setting the Bandwidth	148
7.6.4	Performing and Triggering the Measurement.....	149
7.6.4.1	Performing the Measurement	149
7.6.4.2	Triggering Measurements.....	149
7.6.5	Working with Traces	150
7.6.6	Using Markers.....	151
7.6.6.1	Markers and Delta Markers	151
7.6.6.2	Marker Functions	152
7.7	Remote Commands of the Digital Modulation Analyzer.....	153
7.7.1	Performing Measurements on 3GPP WCDMA signals	153
7.7.1.1	Setting the Frequency.....	153
7.7.1.2	Setting Amplitude Parameters	154
7.7.1.3	Setting the Bandwidths	154
7.7.1.4	Working with Traces	154
7.7.1.5	Performing and Triggering the Measurement.....	155
7.7.1.6	Using Markers.....	155
7.7.1.7	Working with Channel Tables	155
7.7.1.8	Selecting the Result Display	156
7.7.1.9	Configuring the Measurement	156
7.7.1.10	Determining Scrambling Codes	158
7.7.1.11	Performing a Channel Search	160
7.7.1.12	Using An Isotropic Antenna	161
7.7.1.13	Getting Measurement Results	161
7.7.1.14	Analyzing Measurement Results	164
7.7.1.15	Return Value Codes	165
7.7.2	Performing Measurements on CDMA2000 Signals.....	166
7.7.2.1	Setting the Frequency.....	166

7.7.2.2	Setting Amplitude Parameters	166
7.7.2.3	Setting the Bandwidths	167
7.7.2.4	Working with Traces	167
7.7.2.5	Performing and Triggering the Measurement.....	167
7.7.2.6	Using Markers.....	168
7.7.2.7	Working with Channel Tables	168
7.7.2.8	Selecting the Result Display	169
7.7.2.9	Configuring the Measurement	169
7.7.2.10	Getting Measurement Results	172
7.7.2.11	Return Value Codes	174
7.7.3	Performing Measurements on 1xEV-DO Signals	175
7.7.3.1	Setting the Frequency.....	175
7.7.3.2	Setting Amplitude Parameters	175
7.7.3.3	Setting the Bandwidths	176
7.7.3.4	Working with Traces	176
7.7.3.5	Performing and Triggering the Measurement.....	176
7.7.3.6	Using Markers.....	177
7.7.3.7	Working with Channel Tables	177
7.7.3.8	Selecting the Result Display	178
7.7.3.9	Configuring the Measurement	178
7.7.3.10	Getting Measurement Results	179
7.7.4	Performing Measurements on TD-SCDMA Signals	182
7.7.4.1	Setting the Frequency.....	182
7.7.4.2	Setting Amplitude Parameters	182
7.7.4.3	Setting the Bandwidths	183
7.7.4.4	Working with Traces	183
7.7.4.5	Performing and Triggering the Measurement.....	183
7.7.4.6	Using Markers.....	183
7.7.4.7	Working with Channel Tables	184
7.7.4.8	Selecting the Result Display	184
7.7.4.9	Configuring the Measurement	185
7.7.4.10	Getting Measurement Results	186
7.7.5	Performing Measurements on LTE Signals.....	188

7.7.5.1	Setting the Frequency.....	188
7.7.5.2	Setting Amplitude Parameters	188
7.7.5.3	Performing and Triggering the Measurement.....	189
7.7.5.4	Selecting the Result Display	189
7.7.5.5	Configuring the Measurement	190
7.7.5.6	Getting Measurement Results	195
7.7.5.7	Using the TRACe[:DATA] Command.....	200
7.8	File Management.....	203
7.9	Making and Storing Screenshots.....	210
7.10	Configuring the Instrument	211
7.10.1	Mode Selection	211
7.10.2	Controlling the GPS Receiver.....	213
7.10.3	Display Configuration.....	216
7.10.4	Audio Settings.....	218
7.10.5	Setting up a Network Connection	219
7.10.6	System Settings.....	221
7.11	Status Reporting System	231
7.11.1	Structure of an SCPI Status Register	231
7.11.1.1	CONDition part.....	231
7.11.1.2	PTRansition part	232
7.11.1.3	NTRansition part.....	232
7.11.1.4	EVENT part	232
7.11.1.5	ENABLE part	232
7.11.1.6	Sum bit.....	233
7.11.2	Overview of the Status Register	233
7.11.3	Status Byte (STB) & Service Request Enable Register (SRE)	234
7.11.4	Event Status Register (ESR) and Event Status Enable Register (ESE)	235
7.11.4.1	STATus:OPERation Register	236
7.11.4.2	STATus:QUESTionable Register.....	236
7.11.4.3	STATus:QUESTionable:FREQuency Register.....	237
7.11.4.4	STATus:QUESTionable:LIMit Register.....	237
7.11.4.5	STATus:QUESTionable:POWer Register.....	237
7.11.5	Application of the Status Reporting Systems	238

7.11.5.1 Service Request.....238

7.11.5.2 Serial Poll.....238

7.11.5.3 Query by Means of Commands239

7.11.5.4 Error Queue Query239

7.11.6 Reset Values of the Status Reporting System240

7.11.7 Remote Commands of the Status Reporting System.....241

Documentation Overview

The user documentation for the R&S R&S FSH is divided as follows:

Quick Start Guide

The Quick Start Guide provides basic information on the instrument's functions.

It covers the following topics:

- overview of all elements of the front and rear panels
- basic information on how to set up the R&S FSH
- information on how to operate the R&S FSH in a network
- instructions on how to perform measurements

Operating Manual

The Operating Manual provides a detailed description on the instrument's functions

It covers the following topics:

- instructions on how to set up and operate the R&S FSH in its various operating modes
- instructions on how to perform measurements with the R&S FSH
- instructions on how to work with the available software options and applications

Service Manual

The Service Manual provides information on maintenance.

It covers the following topics:

- instructions on how to perform a performance test
- instructions on how to repair the R&S FSH including a spare parts list
- mechanical drawings

Release Notes

The release notes describe the installation of the firmware, new and modified functions, eliminated problems, and last minute changes to the documentation. The corresponding firmware version is indicated on the title page of the release notes. The current release notes are provided on the internet.

Internet Site

The internet site at: [R&S FSH Spectrum Analyzer](#) provides the most up to date information on the R&S FSH. The most recent manuals are available as printable PDF files in the download area.

Also provided for download are firmware updates including the corresponding release notes, instrument drivers, current data sheets, application notes and image versions.

Conventions Used in the Documentation

The following conventions are used throughout the R&S R&S FSH Software Manual:

Typographical conventions

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements both on the screen and on the front and rear panels, such as dialog boxes, softkeys, menus, options, buttons etc., are enclosed by quotation marks.
"KEYS"	Key names are written in capital letters and enclosed by quotation marks.
<i>Input</i>	Input to be entered by the user is displayed in italics.
File names, commands, program code	File names, commands, coding samples and screen output are distinguished by their font.
"Links"	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

Other conventions

- **Remote commands:** Remote commands may include abbreviations to simplify input. In the description of such commands, all parts that have to be entered are written in capital letters. Additional text in lower-case characters is for information only.

1 Introduction

With the software application R&S FSH-K40 installed on the instrument, it is possible to operate your R&S FSH via remote control. In this manual you will find all information necessary to remotely control the R&S FSH.

Enabling the Option

The Remote Control Option R&S FSH-K40 is enabled by entering a key code. The key code is based on the unique serial number of the instrument. To retrofit an option, enable it with a key code.

- ▶ Press the SETUP key.
- ▶ Press the "Installed Options" softkey
- ▶ Select "Install Option..." under the "Option Administration" header.
- ▶ Confirm with ENTER.

An entry box in the lower right corner of the screen is displayed.

- ▶ Type in the the appropriate option key.
- ▶ Confirm with ENTER.

If the correct key code is entered, the R&S FSH displays

Installation successful !

If an invalid key code is entered, the R&S FSH displays

Invalid key code!

2 Interfaces and Protocols

The R&S FSH supports two different interfaces for remote control.

- **LAN Interface:** The protocol is based on TCP/IP and supports the VXI-11 standard.
- **USB Interface**

The connectors are located at the side of the instrument and permit a connection to a controller for remote control via a local area network (LAN) or directly via USB.

SCPI


SCPI (Standard Commands for Programmable Instruments) commands - messages - are used for remote control. Commands that are not taken from the SCPI standard follow the SCPI syntax rules. The instrument supports the SCPI version 1999. The SCPI standard is based on standard IEEE 488.2 and aims at the standardization of device-specific commands, error handling and the status registers. The tutorial "Automatic Measurement Control - A tutorial on SCPI and IEEE 488.2" from John M. Pieper (R&S order number 0002.3536.00) offers detailed information on concepts and definitions of SCPI.

The requirements that the SCPI standard places on command syntax, error handling and configuration of the status registers are explained in detail in the following sections. Tables provide a fast overview of the bit assignment in the status registers. The tables are supplemented by a comprehensive description of the status registers.

VISA

VISA is a standardized software interface library providing input and output functions to communicate with instruments. The I/O channel (LAN or USB) is selected at initialization time by means of a channel-specific resource string. For more information about VISA refer to its user documentation.

The programming examples for remote control are all written in Microsoft® VISUAL BASIC®. Access to the VISA functions require the declaration of the functions and constants prior to their use in the project. This can be accomplished either by adding the modules VISA32.BAS and VPPTYPE.BAS or a reference to the VISA32.DLL to the project.

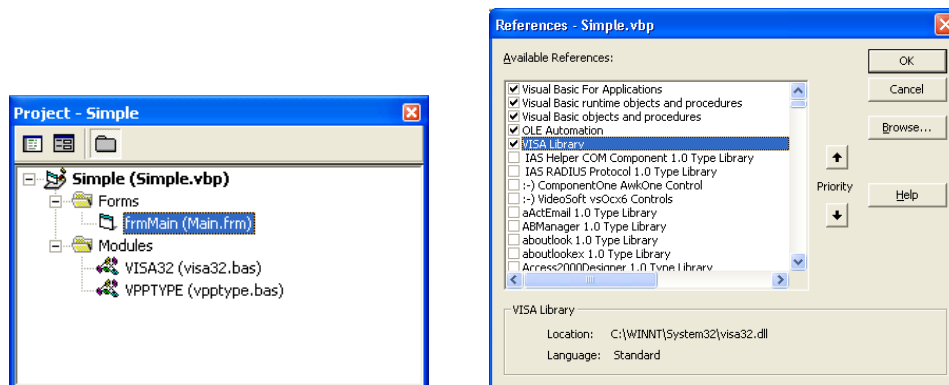

The modules visa32.bas and vpptype.bas can be found in the <VXI\pnpPath>WinNT\include (typically C:\VXI\pnp\WinNT\include).



Resetting the R&S FSH

Manual operation is designed for maximum possible operating convenience. In contrast, the priority of remote control is the "predictability" of the device status. Therefore, control programs should always define an initial device status (e.g. with the command *RST) and then implement the required settings.

2.1 LAN Interface

To be integrated in a LAN, the instrument is equipped with a standard LAN interface, consisting of a connector, a network interface and protocols (VXI-11).

Instrument access via VXI-11 is usually achieved from high level programming platforms by using VISA as an intermediate abstraction layer. VISA encapsulates the low level VXI-11 (LAN) or USB function calls and thus makes the transport interface transparent for the user. The necessary VISA library is available as a separate product. For details contact your local R&S sales representative.

2.2 USB Interface

For remote control via the USB connection, the PC and the instrument must be connected via the USB interface. The required driver comes with the R&S FSH4View software package and is automatically installed on the PC with the software package.

The driver addresses the instrument via the USB interface with the fix IP address 172.16.10.10.

In addition, a remote control connection via the SCPI interface requires the VISA library to be installed on the PC.

2.3 Protocols

VXI-11 Basics

The VXI-11 standard is based on the ONC-RPC protocol which in turn relies on TCP/IP as the network/transport layer. The TCP/IP network protocol and the associated network services are preconfigured. TCP/IP ensures connection-oriented communication, where the order of the exchanged messages is adhered to and interrupted links are identified. With this protocol, messages cannot be lost.

Remote control of an instrument via a network is based on standardized protocols which follow the OSI reference model (see Fig. below).

Application	SCPI
Presentation	XDR (VXI-11)
Session	ONC-RPC
Transport	TCP / UDP
Network	IP
Data Link	Ethernet/802.3
Physical	802.3/10BASE-T

Figure 2-1: Example for LAN remote control based on the OSI reference model

Based on TCP/UDP, messages between the controller and the instrument are exchanged via open network computing (ONC) - remote procedure calls (RPC). With XDR (VXI-11), legal RPC messages are known as VXI-11 standard. Based on this standard, messages are exchanged between the controller and the instrument. The messages are identical with SCPI commands. They can be organized in four groups:

- program messages (control command to the instrument)
- response messages (values returned by the instrument)
- service request (spontaneous queries of the instrument)
- low-level control messages (interface messages).

A VXI-11 link between a controller and an instrument uses three channels: core, abort and interrupt channel. Instrument control is mainly performed on the core channel (program, response and low-level control messages). The abort channel is used for immediate abort of the core channel; the interrupt channel transmits spontaneous service requests of the instrument. Link setup itself is very complex. For more details refer to the VXI-11 specification.

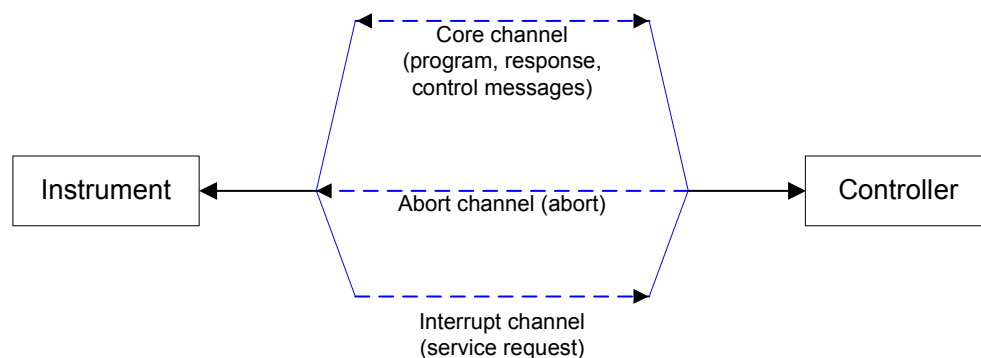


Figure 2-2: VXI-11 channels between instrument and controller

The number of controllers that can address an instrument is practically unlimited in the network. In the instrument, the individual controllers are clearly distinguished. This distinction continues up to the application level in the controller, i.e. two applications on a computer are identified by the instrument as two different controllers.

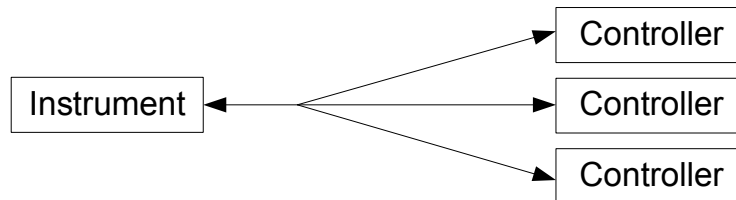


Figure 2-3: Remote control via LAN from several controllers

The controllers can lock and unlock the instrument for exclusive access. This regulates access to the instrument of several controllers.

3 Setting Up the Remote Control Connection

3.1 Preparing for Remote Control

The short and simple operating sequence below shows how to put the instrument into operation and quickly set its basic functions. The current IP address for LAN operation is shown in the SETUP – Instrument Setup Menu. In case of USB connection the IP address is fixed to 172.16.10.10.

Refer to the Quick Start Guide for instructions on how to change the IP address.

- ▶ Connect the instrument to the LAN or directly to the controller via USB.
- ▶ Switch on the instruments.
- ▶ Write and start the following program on the controller:

```

status = viOpenDefaultRM(defaultRM)
    'open default resource manager
status = viOpen(DefaultRM, "TCPIP::172.16.10.10", 0, 0, vi)
    'in case of USB connection
status = viOpen(DefaultRM, "TCPIP::xxx.xxx.xxx.xxx", 0, 0, vi)
    'in case of a LAN connection, with xxx.xxx.xxx.xxx = IP address
cmd = "*RST;*CLS"
status = viWrite(vi, Cmd, Len(Cmd), retCount)
    'reset instrument and clear status registers
cmd = "FREQ:CEN 100MHz"
status = viWrite(vi, Cmd, Len(Cmd), retCount)
    'set center frequency to 100 MHz
cmd = "FREQ:SPAN 10MHz"
status = viWrite(vi, Cmd, Len(Cmd), retCount)
    'set span to 10 MHz
cmd = "DISP:TRAC:Y:RLEV -10dBm"
status = viWrite(vi, Cmd, Len(Cmd), retCount)
    'set reference level to -10 dBm
viclose vi
viclose default RM

```

The instrument now performs a sweep in the frequency range of 95 MHz to 105 MHz.

Changing the IP Address

In order to operate the instrument via remote control, it must be accessed via LAN (IP address) or USB (fixed IP address). If the factory-set remote control address does not fit in the network environment, it can be changed. Refer to the Quick Start Guide, chapter "Setting up a LAN or USB Connection to a PC", for instructions on how to change the IP address.

4 Instrument Model and Command Processing

The block diagram in Fig. 1-2 shows how SCPI commands are serviced in the instrument. The individual components work independently and simultaneously. They communicate with each other by means of so-called "messages".

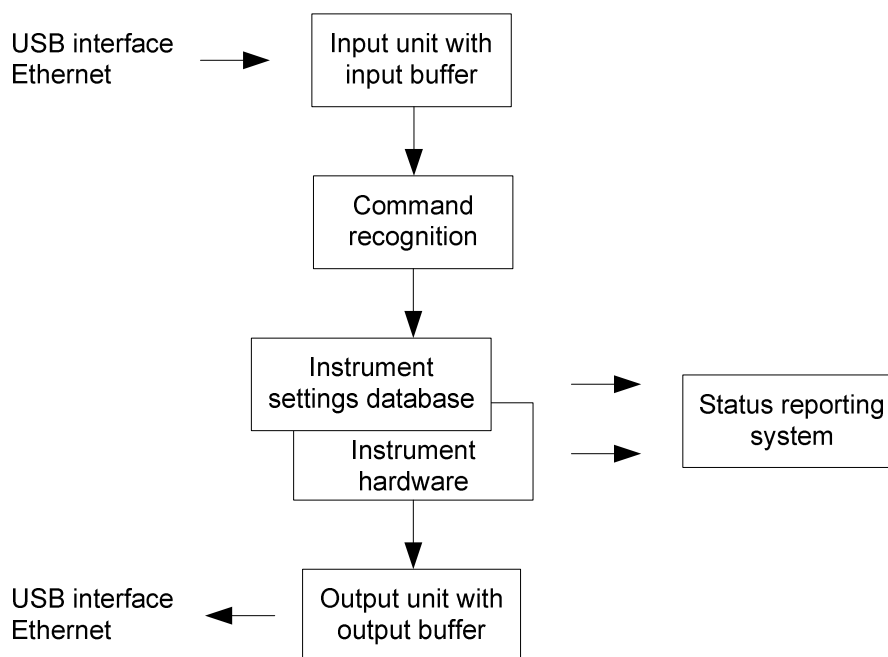


Figure 4-1: Instrument model in the case of remote control

4.1 Input Unit

The input unit receives commands character by character from the controller and collects them in the input buffer. The input unit sends a message to the command recognition as soon as the input buffer is full or as soon as it receives a delimiter, <PROGRAM MESSAGE TERMINATOR>, as defined in IEEE 488.2, or the interface message DCL.

If the input buffer is full, the traffic is stopped and the data received up to then are processed. Subsequently the traffic is continued. If, however, the buffer is not yet full when receiving the delimiter, the input unit can already receive the next command during command recognition and execution. The receipt of DCL clears the input buffer and immediately resets the command recognition.

4.2 Command Recognition

The command recognition analyses the data received from the input unit. It proceeds in the order in which it receives the data. Only DCL is serviced with priority, for example GET (Group Execute Trigger) is only executed after the commands received before. Each recognized command is immediately transferred to the internal instrument settings data base but not executed immediately.

The command recognition detects syntax errors in the commands and transfers them to the status reporting system. The rest of a program message after a syntax error is analyzed further if possible and serviced. After the syntax test, the value range of the parameter is checked, if required.

If the command recognition detects a delimiter, it passes the command to an execution unit that performs the instrument settings. In the meantime, the command recognition is ready to process new commands (overlapping execution). A DCL command is processed in the same way.

4.3 Data Base and Instrument Hardware

Here the expression "instrument hardware" denotes the part of the instrument fulfilling the actual instrument function - signal generation, measurement etc. The controller is not included. The term "data base" denotes a database that manages all the parameters and associated settings required for setting the instrument hardware.

Setting commands lead to an alteration in the data set. The data set management enters the new values (e.g. frequency) into the data set, however, only passes them on to the hardware when requested by the command recognition. This only takes place at the end of a program message.

The data are checked for compatibility with the current instrument settings before they are transmitted to the instrument hardware. If the execution is not possible, an "execution error" is signaled to the status reporting system. The corresponding settings are discarded.

Before passing on the data to the hardware, the settling bit in the STATus:OPERation register is set (refer to section "STATus:OPERation Register"). The hardware executes the settings and resets the bit again as soon as the new state has settled. This fact can be used to synchronize command servicing.

Queries induce the data set management to send the desired data to the output unit.

4.4 Status Reporting System

For detailed information refer to section "[Status Reporting System](#)".

4.5 Output Unit

The output unit collects the information requested by the controller, which it receives from the data base management. It processes it according to the SCPI rules and makes it available in the output buffer.

If the instrument is addressed as a talker without the output buffer containing data or awaiting data from the data base management, the output unit sends error message "Query UNTERMINATED" to the status reporting system. No data are sent to the controller, the controller waits until it has reached its time limit. This behavior is defined by IEEE 488.2 and SCPI.

5 SCPI Command Structure and Syntax

SCPI (Standard Commands for Programmable Instruments) describes a standard command set for programming instruments, irrespective of the type of instrument or manufacturer. The goal of the SCPI consortium is to standardize the device-specific commands to a large extent. For this purpose, a model was developed which defines the same functions inside a device or for different devices. Command systems were generated which are assigned to these functions. Thus it is possible to address the same functions with identical commands. The command systems are of a hierarchical structure.

SCPI is based on standard IEEE 488.2, i.e. it uses the same syntactic basic elements as well as the common commands defined in this standard. Part of the syntax of the device responses is defined with greater restrictions than in standard IEEE 488.2 (see section "Responses to Queries").



Remote command examples

Not all commands used in the following examples are implemented in the instrument.

5.1 Structure of a Command

The commands consist of a so-called header and, in most cases, one or more parameters. Header and parameter are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). The headers may consist of several key words. Queries are formed by directly appending a question mark to the header.

5.1.1 Common Commands

Common commands consist of a header preceded by an asterisk "*" and one or several parameters, if any.

Examples

*RST	RESET, resets the device
*ESE 253	EVENT STATUS ENABLE, sets the bits of the event status enable register
*ESR?	EVENT STATUS QUERY, queries the contents of the event status register.

5.1.2 Device-Specific Commands

5.1.2.1 Hierarchy

Device-specific commands are of hierarchical structure. The different levels are represented by combined headers. Headers of the highest level (root level) have only one key word. This key word denotes a complete command system.

Example

```
SENSe
```

This key word denotes the SENSE command system.

For commands of lower levels, the complete path has to be specified, starting on the left with the highest level, the individual key words being separated by a colon ":".

Example

```
SENSe:FREQuency:SPAN 10MHZ
```

This command lies in the third level of the SENSE system. It sets the frequency span.

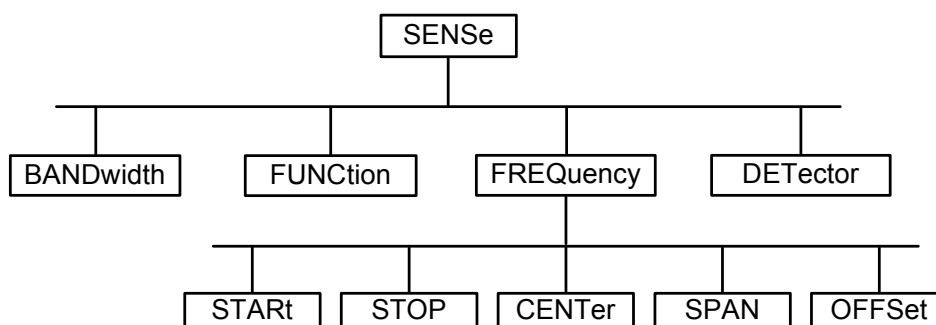


Figure 5-1: Tree structure the SCPI command systems using the SENSE system as example

5.1.2.2 Multiple Keywords

Some key words occur in several levels within one command system. Their effect depends on the structure of the command, i.e. at which position in the header of a command they are inserted.

Examples

```
SOURce:FM:POLarity NORMal
```

This command contains key word POLarity in the third command level. It defines the polarity between modulator and modulation signal.

```
SOURce:FM:EXTernal:POLarity NORMal
```

This command contains key word POLarity in the fourth command level. It defines the polarity between modulation voltage and the resulting direction of the modulation only for the external signal source indicated.

5.1.2.3 Optional Keywords

Some command systems permit certain key words to be inserted into the header or omitted. These key words are marked by square brackets in the description. The full command length must be recognized by the instrument for reasons of compatibility with the SCPI standard. Some commands are considerably shortened by these optional key words.

Example

```
[SENSe]:BANDwidth[:RESolution]:AUTO
```

This command couples the resolution bandwidth of the instrument to other parameters. The following command has the same effect:

```
BANDwidth:AUTO
```



Optional keywords with numeric suffixes

Do not omit an optional keyword if it includes a numeric suffix that is relevant for the effect of the command.

Example

```
DISPlay[:WINDow<1...4>]:MAXimize <Boolean>
```

Command `DISP:MAX ON` refers to window 1.

In order to refer to a window other than 1, you must include the optional `WINDow` parameter with the suffix for the required window.

```
DISP:WIND2:MAX ON
```

5.1.2.4 Long and Short Form

The key words feature a long form and a short form. Either the short form or the long form can be entered, other abbreviations are not permitted.

Example

```
STATus:QUEStionable:ENABle 1
```

is equivalent to

```
STAT:QUES:ENAB 1
```



Upper and lower case notation of commands

Upper-case and lower-case notation only serves to distinguish the two forms in the manual, the instrument itself does not distinguish upper-case and lower-case letters.

5.1.2.5 Parameter

The parameter must be separated from the header by a "white space". If several parameters are specified in a command, they are separated by a comma ",". A few queries permit the parameters MINimum, MAXimum and DEFault to be entered. Refer to "[Parameters](#)" for a detailed description of the various parameters.

Example

```
SENSe:FREQuency:STOP? MAXimum
```

```
Response: 3.5E9
```

This query requests the maximal value for the stop frequency.

5.1.2.6 Special Characters

- | A vertical stroke in parameter definitions indicates alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.

Example

```
DISPlay:FORMat SINGLE | SPLit
```

If parameter `SINGLE` is selected, full screen is displayed, in the case of `SPLIT`, split screen is displayed.

A selection of key words with an identical effect exists for several commands. These keywords are indicated in the same line; they are separated by a vertical stroke. Only one of these keywords needs to be included in the header of the command. The effect of the command is independent of which of the keywords is used.

Example

```
SENSe:BANDwidth|BWIDth[:RESolution]
```

The two following commands with identical meaning can be created. They set the frequency of the fixed frequency signal to 1 kHz:

```
SENSe:BAND 1
```

```
SENSe:BWID 1
```

- [] Key words in square brackets can be omitted when composing the header. The full command length must be accepted by the instrument for reasons of compatibility with the SCPI standards.

Example

```
[SENSe:]BANDwidth|BWIDth[:RESolution]
```

```
SENS:BAND:RES
```

is equivalent to

```
BAND
```

Parameters in square brackets can be incorporated optionally in the command or omitted as well.

Example

```
MMEMoRY:NETWoRK:MAP
<string>, <string>[, <string>, <string>, <boolean>]
```

Entries in square brackets are optional or can be omitted.

{ } Parameters in curly brackets are optional and can be inserted once or several times, or omitted.

Example

```
SENSe:LIST:FREQuency <numeric_value>{, <numeric_value>}
```

The following are valid commands:

```
SENS:LIST:FREQ 10
SENS:LIST:FREQ 10, 20
SENS:LIST:FREQ 10, 20, 30, 40
```

5.1.2.7 Numeric Suffix

If a device features several functions or features of the same kind, e.g. inputs, the desired function can be selected by a suffix added to the command. Entries without suffix are interpreted like entries with the suffix 1. Optional keywords must be specified if they select a function with the suffix.

Example

```
SYSTem:COMMunicate:SERial2:BAUD 9600
```

This command sets the baud rate of a second serial interface.

**Suffix counting**

In case of remote control, suffix counting may differ from the numbers of the corresponding selection used in manual operation. SCPI prescribes that suffix counting starts with 1. Suffix 1 is the default state and used when no specific suffix is specified.

Some standards define a fixed numbering, starting with 0. With GSM, for instance, slots are counted from 0 to 7. In the case of remote control, the slots are selected with the suffixes 1 to 8. If the numbering differs in manual operation and remote control, it is indicated with the respective command.

5.1.3 Overview of Syntax Elements

The following table offers an overview of the syntax elements.

- : The colon separates the key words of a command. In a program message the separating semicolon marks the uppermost command level.
- ; The semicolon separates two commands within a program message. It does not alter the path.
- , The comma separates several parameters of a command.
- ? The question mark forms a query.
- * The asterisk marks a common command.
- " Quotation marks introduce a string and terminate it.
- # The hash symbol # introduces binary, octal, hexadecimal and block data.
 - Binary: #B10110
 - Octal: #O7612
 - Hexa: #HF3A7
 - Block: #21312

A "white space" (ASCII-Code 0 to 9, 11 to 32 decimal, e.g. blank) separates header and parameter.

5.2 Parameters

For most commands a parameter needs to be supplemented. The parameter has to be separated from the header by a "white space". Possible parameters are:

- Numeric values
- Special numeric values
- Boolean parameters
- Text
- Character strings
- Block data.

The type of parameter required for each command and the allowed range of values are specified in the command description.

5.2.1 Numeric Values

Numeric values can be entered in any form, i.e. with sign, decimal point and exponent. Values exceeding the resolution of the instrument are rounded up or down. The mantissa may comprise up to 255 characters, the exponent must lie inside the value range -32000 to 32000. The exponent is introduced by an "E" or "e". Entry of the exponent alone is not permissible. In the case of physical quantities, the unit can be entered. Permissible unit prefixes are G (giga), MA (mega), MOHM and MHZ are also possible), K (kilo), M (milli), U (micro) and N (nano). If the unit is missing, the basic unit is used.

Example

```
SENSe:FREQuency:STOP 1.5GHz = SENSe:FREQuency:STOP 1.5E9
```

5.2.2 Special Numeric Values

The texts MINimum, MAXimum, DEFault, UP and DOWN are interpreted as special numeric values. In case of a query, the numeric value is returned.

- MIN/MAX
MINimum and MAXimum denote the minimum and maximum value.
- DEF
DEFault denotes a preset value which has been stored in the EPROM. This value conforms to the default setting, as it is called by the *RST command
- UP/DOWN
UP, DOWN increases or reduces the numerical value by one step. The step width can be specified via an allocated step command for each parameter which can be set via UP, DOWN.
- INF/NINF
INFINITY, Negative INFINITY (NINF) Negative INFINITY (NINF) represent the numerical values -9.9E37 or 9.9E37, respectively. INF and NINF are only sent as device responses.
- NAN
Not A Number (NAN) represents the value 9.91E37. NAN is only sent as device response. This value is not defined. Possible causes are the division of zero by zero, the subtraction of infinite from infinite and the representation of missing values.

Example:

Setting command: `SENSe:FREQuency:STOP MAXimum`

Query: `SENSe:FREQuency:STOP?`, Response: `3.5E9`

5.2.3 Boolean Parameters

Boolean parameters represent two states. The ON state (logically true) is represented by ON or a numerical value unequal to 0. The OFF state (logically untrue) is represented by OFF or the numerical value 0. The numerical values are provided as response for query.

Example

Setting command: `CALCulate:MARKer:STATe ON`

Query: `CALCulate:MARKer:STATe?`, Response: 1

5.2.4 Text

Text parameters observe the syntactic rules for key words, i.e. they can be entered using a short or long form. Like any parameter, they have to be separated from the header by a white space. In the case of a query, the short form of the text is provided.

Example

Setting command: `INPut:COUPling GROund`

Query: `INPut:COUPling?`, Response: GRO

5.2.5 Strings

Strings must always be entered in quotation marks (' or ").

Example

`SYSTem:LANGUage "SCPI" OR SYSTem:LANGUage 'SCPI'`

5.2.6 Block Data

Block data are a transmission format which is suitable for the transmission of large amounts of data. A command using a block data parameter has the following structure:

Example

`HEADer:HEADer #45168xxxxxxxx`

ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. In the example the 4 following digits indicate the length to be 5168 bytes. The data bytes follow. During the transmission of these data bytes all end or other control signs are ignored until all bytes are transmitted.

5.3 Structure of a Program Message

A program message may consist of one or several commands. It is terminated by the program message terminator which is the NL (New Line) character for LAN and USB connections.

Several commands in a program message must be separated by a semicolon ";". If the next command belongs to a different command system, the semicolon is followed by a colon. A colon ":" at the beginning of a command marks the root node of the command tree.

Example:

```
CALL InstrWrite(analyzer, "SENSe:FREQuency:CENTer  
100MHz;:INPut:ATTenuation 10")
```

This program message contains two commands. The first one is part of the SENSe command system and is used to determine the center frequency of the instrument. The second one is part of the INPut command system and sets the input signal attenuation.

If the successive commands belong to the same system, having one or several levels in common, the program message can be abbreviated. For that purpose, the second command after the semicolon starts with the level that lies below the common levels (see also Fig. 1-1). The colon following the semicolon must be omitted in this case.

Example:

```
CALL InstrWrite(analyzer, "SENSe:FREQuency:START  
1E6;:SENSe:FREQuency:STOP 1E9")
```

This program message is represented in its full length and contains two commands separated from each other by the semicolon. Both commands are part of the SENSe command system, subsystem FREQuency, i.e. they have two common levels.

When abbreviating the program message, the second command begins with the level below SENSe:FREQuency. The colon after the semicolon is omitted. The abbreviated form of the program message reads as follows:

```
CALL InstrWrite(analyzer, "SENSe:FREQuency:START 1E6;STOP 1E9")
```

However, a new program message always begins with the complete path.

Example:

```
CALL InstrWrite(analyzer, "SENSe:FREQuency:START 1E6")  
CALL InstrWrite(analyzer, "SENSe:FREQuency:STOP 1E9")
```

5.4 Responses to Queries

A query is defined for each setting command unless explicitly specified otherwise. It is formed by adding a question mark to the associated setting command. According to SCPI, the responses to queries are partly subject to stricter rules than in standard IEEE 488.2.

- The requested parameter is transmitted without header.

Example

```
INPut:COUPling?
```

```
Response: DC
```

- Maximum values, minimum values and all further quantities, which are requested via a special text parameter are returned as numerical values.

Example

```
SENSe:FREQuency:STOP? MAX
```

```
Response: 3.5E9
```

- Numerical values are output without a unit. Physical quantities are referred to the basic units or to the units set using the Unit command.

Example

```
SENSe:FREQuency:CENTer?
```

```
Response: 1E6 (for 1 MHz)
```

- Truth values <Boolean values> are returned as 0 (for OFF) and 1 (for ON).

Example

```
SENSe:BANDwidth:AUTO?
```

```
Response: 1 (for ON)
```

- Text (character data) is returned in a short form.

Example

```
SYSTem:COMMunicate:SERial:CONTrol:RTS?
```

```
Response STAN (for standard)
```

6 Command Sequence and Command Synchronization

What has been said above makes clear that all commands can potentially be carried out overlapping. In order to prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` must be used. All three commands cause a certain action only to be carried out after the hardware has been set. By suitable programming, the controller can be forced to wait for the respective action to occur. For more information see Table 6-1.

Table 6-1: Synchronization using `*OPC`, `*OPC?` and `*WAI`

Command	Action	Programming the controller
<code>*OPC</code>	Sets the Operation Complete bit in the ESR after all previous commands have been executed.	<ul style="list-style-type: none"> – Setting bit 0 in the ESE – Setting bit 5 in the SRE – Waiting for service request (SRQ)
<code>*OPC?</code>	Stops command processing until 1 is returned. This is only the case after the Operation Complete bit has been set in the ESR. This bit indicates that the previous setting has been completed.	Sending <code>*OPC?</code> directly after the command whose processing should be terminated before other commands can be executed.
<code>*WAI</code>	Stops further command processing until all commands sent before <code>*WAI</code> have been executed.	Sending <code>*WAI</code> directly after the command whose processing should be terminated before other commands are executed.

For a couple of commands the synchronization to the end of command execution is mandatory in order to obtain the desired result. The affected commands require either more than one measurement in order to accomplish the desired instrument setting (e.g. auto range functions), or they require a longer period of time for execution. If a new command is received during execution of the corresponding function this may either lead to either to an aborted measurement or to incorrect measurement data.

The following list includes the commands, for which a synchronization via `*OPC`, `*OPC?` or `*WAI` is mandatory:

Table 6-2: Commands with mandatory synchronization (overlapping commands)

Command	Purpose
<code>INIT</code>	start measurement (sweep)
<code>INIT:CONT OFF</code>	Set to single sweep
<code>CALC:MARK:FUNC:xx?</code>	All Marker function queries

7 Remote Control – Commands

The following chapters provide a detailed description of all remote control commands currently available for the R&S FSH and its firmware options.

Each section describes the commands for one of the operating modes available in the R&S FSH, beginning with the description of common commands required to operate the instrument. The structure is based on that of the operating manual.

- [Common Commands](#) on page 31
- [Remote Commands of the Spectrum Analyzer](#) on page 34
- [Remote Commands of the Network Analyzer Mode](#) on page 106
- [Remote Commands of the Distance-to-Fault Mode](#) on page 137
- [Remote Commands of the Receiver Mode](#) on page 145
- [Remote Commands of the Power Meter](#) on page 131
- [Remote Commands of the Digital Modulation Analyzer](#) on page 153

Each section is subdivided into various tasks required to perform measurements with the R&S FSH, also based on the structure of the operating manual. Some commands like those for controlling markers or configuring the frequency axis are available for all operating modes. In that case you will find a list of these commands in the corresponding section. However, a detailed description is provided only in the CAT commands section.



Availability of commands

The spectrum and network analyzer modes are implemented in the basic unit. For the other modes, the corresponding options are required.

Following the remote control commands required to perform specific measurements, you will find a description of general commands used to set up and control basic instrument functions. These commands are independent of the operating mode. Therefore they are listed separately.

- [File Management](#) on page 203
- [Making and Storing Screenshots](#) on page 210
- [Configuring the Instrument](#) on page 211
- [Remote Commands of the Status Reporting System](#) on page 241

All chapters begin with a list of commands available in the context of that chapter. Following that list you will find a detailed description of all commands.

All individual descriptions contain:

- the complete notation and syntax of the command
- the description of the effects of the command
- a list of all parameters available for that command or the type of data the command returns in case of query commands
- an example of how a program message would look like
- the *RST value
- information on SCPI conformity

An alphabetical list of all available commands is provided at the end of this manual.

7.1 Common Commands

The common commands are taken from the IEEE 488.2 (IEC 625-2) standard. A particular command has the same effect on different devices. The headers of these commands consist of an asterisk "*" followed by three letters. Some of the common commands refer to the "[Status Reporting System](#)".

List of Common Commands

- [*CLS](#) (p. 31)
- [*ESE](#) (p. 31)
- [*ESR?](#) (p. 31)
- [*IDN?](#) (p. 32)
- [*IST?](#) (p. 32)
- [*OPC](#) (p. 32)
- [*OPT?](#) (p. 32)
- [*RST](#) (p. 32)
- [*SRE](#) (p. 33)
- [*STB?](#) (p. 33)
- [*TRG](#) (p. 33)
- [*TST?](#) (p. 33)
- [*WAI](#) (p. 33)

*CLS

`CLEAR STATUS` sets the status byte (STB), the standard event register (ESR) and the EVENT part of the QUESTIONABLE and the OPERATION register to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

*ESE

`EVENT STATUS ENABLE` sets the event status enable register to the value indicated. The query form `*ESE?` returns the contents of the event status enable register in decimal form.

Parameter

0 to 255

*ESR?

`STANDARD EVENT STATUS QUERY` returns the contents of the event status register in decimal form (0 to 255) and subsequently sets the register to zero.

Parameter

0 to 255

***IDN?**

IDENTIFICATION QUERY queries the instrument identification.

You can change the format of the return values with the "SYSTEM:FORMAt:IDENT<IDNFormat>" command. **Return values**

<InstrumentName>,<SerialNumber/Model>,<FirmwareVersion>

Example for R&S FSH:

Rohde&Schwarz,FSH4,100005/024,1.50

***IST?**

INDIVIDUAL STATUS QUERY returns the contents of the IST flag in decimal form. The IST flag is the status bit which is sent during a parallel poll.

Parameter

0 | 1

***OPC**

OPERATION COMPLETE sets bit 0 in the event status register after all preceding commands have been executed. This bit can be used to initiate a service request.

***OPT?**

OPTION IDENTIFICATION QUERY queries the options included in the instrument and returns a list of the options installed. The options are separated from each other by means of commas.

Parameter

K<number> software options

For a list of all available options and their description refer to the CD-ROM.

Example

K40, K41, K42, K45

***RST**

RESET sets the instrument to a defined default status. The command essentially corresponds to pressing the PRESET key.

***SRE**

SERVICE REQUEST ENABLE sets the service request enable register to the indicated value. Bit 6 (MSS mask bit) remains 0. This command determines under which conditions a service request is generated. The query form *SRE? reads the contents of the service request enable register in decimal form. Bit 6 is always 0.

Parameter

0 to 255

***STB?**

READ STATUS BYTE QUERY reads out the contents of the status byte in decimal form.

***TRG**

TRIGGER initiates all actions in the currently active test screen expecting a trigger event. This command corresponds to `INITiate[:IMmediate]`.

***TST?**

SELF TEST QUERY initiates the self test of the instrument and outputs an error code in decimal form.

Parameter

0 = no error

***WAI**

WAIT TO CONTINUE permits servicing of subsequent commands only after all preceding commands have been executed and all signals have settled.

7.2 Remote Commands of the Spectrum Analyzer

This section provides a detailed description of all remote control commands required to configure and perform measurements with the spectrum analyzer. These commands are available in spectrum analyzer mode only.

Contents

- [Configuring the Horizontal Axis](#) on page 34
- [Configuring the Vertical Axis](#) on page 39
- [Setting the Bandwidths](#) on page 45
- [Performing and Triggering Measurements](#) on page 47
- [Working with Traces](#) on page 53
- [Using Markers](#) on page 58
- [Using Display Lines and Limit Lines](#) on page 73
- [Configuring and Using Measurement Functions](#) on page 78

7.2.1 Configuring the Horizontal Axis

The following commands configure the horizontal (frequency) axis of the active display.

List of commands

- [\[SENSe:\]FREQUENCY:CENTer <Frequency>](#) (p. 34)
- [\[SENSe:\]FREQUENCY:CENTer:STEP <StepSize>](#) (p. 35)
- [\[SENSe:\]FREQUENCY:CENTer:STEP:LINK <StepSizeCoupling>](#) (p. 35)
- [\[SENSe:\]FREQUENCY:INPut:MODE <InputMode>](#) (p. 36)
- [\[SENSe:\]FREQUENCY:MODE <OperationMode>](#) (p. 36)
- [\[SENSe:\]FREQUENCY:OFFSet <FrequencyOffset>](#) (p. 37)
- [\[SENSe:\]FREQUENCY:SPAN](#) (p. 37)
- [\[SENSe:\]FREQUENCY:SPAN:AUTO <State>](#) (p. 37)
- [\[SENSe:\]FREQUENCY:SPAN:FULL](#) (p. 38)
- [\[SENSe:\]FREQUENCY:STARt <StartFrequency>](#) (p. 38)
- [\[SENSe:\]FREQUENCY:STOP <StopFrequency>](#) (p. 38)

[SENSe:]FREQUENCY:CENTer <Frequency>

This command defines the center frequency of the R&S FSH.

In spectrum analyzer mode, the command also defines the measuring frequency for time domain measurements (span = 0).

Parameter

<Frequency>
Numeric value in Hz.

The range depends on the operating mode and is specified in the data sheet.

Example

```
FREQ:CENT 100MHz
```

Defines a center frequency of 100 MHz.

Characteristics

*RST value: $f_{\max}/2$ with f_{\max} = maximum frequency

SCPI: conform

[SENSe:]FREQuency:CENTer:STEP <StepSize>

This command defines the center frequency step size.

Parameter

<StepSize>

Numeric value in Hz.

The range is from 1 Hz to f_{\max} .

Example

```
FREQ:CENT:STEP 120MHz
```

Defines a CF step size of 120 MHz.

Characteristics

*RST value: – (AUTO 0.1*SPAN is switched on)

SCPI: conform

[SENSe:]FREQuency:CENTer:STEP:LINK <StepSizeCoupling>

This command couples and decouples the center frequency step size to the span.

For time domain measurements, the command couples the step size to the resolution bandwidth.

Parameter

<StepSizeCoupling>

DIVTen Couples the step size to 10% of the span

OFF deactivates coupling (manual input)

Example

```
FREQ:CENT:STEP:LINK DIVT
```

Couples the step size to 10% of the span.

Characteristics

*RST value: DIVTen

SCPI: device-specific

[SENSe:]FREQUency:INPut:MODE <InputMode>

This command selects the frequency mode. Select the Channel frequency mode only if you want to work with channel tables. In this case, the input of the center frequency is not a frequency value, but a channel number.

Parameter

<InputMode>

FREQUency sets the frequency input mode to frequency input (Hz)

CHANnel sets the frequency input mode to selection of a channel

Example

```
FREQ:INP:MODE CHAN
```

Sets the frequency mode to work with channel tables.

Characteristics

*RST value: FREQ

SCPI: device-specific

[SENSe:]FREQUency:MODE <OperationMode>

This command sets up the R&S FSH for frequency domain or time domain measurements.

In the time domain (CW and FIXed), set the frequency with:

- [\[SENSe:\]FREQUency:CENTer <Frequency>](#)

In the frequency domain (SWEep), set it with

- [\[SENSe:\]FREQUency:CENTer <Frequency>](#)

- [\[SENSe:\]FREQUency:SPAN](#)

- [\[SENSe:\]FREQUency:STARt <StartFrequency>](#)

- [\[SENSe:\]FREQUency:STOP <StopFrequency>](#)

Parameter

<OperationMode>

CW time domain (span = 0)

FIXed time domain (span = 0)

SWEep frequency domain (span > 0)

Example

```
FREQ:MODE SWE
```

Activates frequency domain measurements.

Characteristics

*RST value: SWEep

SCPI: conform

[SENSe:]FREQuency:OFFSet <FrequencyOffset>

This command defines a frequency offset.

Parameter

<FrequencyOffset>

Numeric value in the range from -100 GHz to 100 GHz.

Example

```
FREQ:OFFS 1GHZ
```

Defines a frequency offset of 1 GHz.

Characteristics

*RST value: 0 Hz

SCPI: conform

**[SENSe:]FREQuency:SPAN **

This command defines the frequency span.

If you set a span of 0 Hz in spectrum mode, the R&S FSH starts a measurement in the time domain.

Parameter

Numeric value in Hz.

The value range is specified in the data sheet.

Example

```
FREQ:SPAN 10MHz
```

Defines a span of 10 MHz.

Characteristics

*RST value: f_{\max} with f_{\max} = maximum frequency

SCPI: conform

[SENSe:]FREQuency:SPAN:AUTO <State>

This command turns the automatic calculation of the ideal span on and off.

Parameter

<State>

ON | OFF

Example

```
FREQ:SPAN:AUTO ON
```

Turns automatic span determination on and off.

Characteristics

*RST value: OFF
SCPI: device-specific

[SENSe:]FREQuency:SPAN:FULL

This command sets the full span.

This command is an event and therefore has no query and no *RST value.

Example

```
FREQ:SPAN:FULL
```

Restores full span.

Characteristics

*RST value: –
SCPI: conform

[SENSe:]FREQuency:STARt <StartFrequency>

This command sets the start frequency for measurements in the frequency domain (span > 0).

Parameter

<StartFrequency>
Numeric value in Hz.

The range depends on the operating mode and is specified in the datasheet.

Example

```
FREQ:STAR 20MHz
```

Defines a start frequency of 20 MHz.

Characteristics

*RST value: 0
SCPI: conform

[SENSe:]FREQuency:STOP <StopFrequency>

This command sets the stop frequency for measurements in the frequency domain (span > 0).

Parameter

<StopFrequency>
Numeric value in Hz.

The range depends on the operating mode and is specified in the datasheet.

Example

```
FREQ:STOP 2000MHz
```

Defines a stop frequency of 2 GHz

Characteristics

*RST value: f_{\max}
 SCPI: conform

7.2.2 Configuring the Vertical Axis

The following commands configure the vertical (level) axis and level parameters of the active display.

The suffix <t> at TRACe is irrelevant for these commands.

The suffix <c> at TRANsducer selects the primary or secondary transducer. The range is <1...2>.

List of commands

- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:ADJust](#) (p. 39)
- [DISPlay\[:WINDow\]:TRACe<t>:Y:SPACing <Scaling>](#) (p. 40)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\] <DisplayRange>](#) (p. 40)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel <ReferenceLevel>](#) (p. 40)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel:OFFSet <Offset>](#) (p. 41)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RPOStion <ReferencePosition>](#) (p. 41)
- [INPut:ATTenuation <Attenuation>](#) (p. 42)
- [INPut:ATTenuation:MODE <AttenuationMode>](#) (p. 42)
- [INPut:ATTenuation:AUTO <State>](#) (p. 42)
- [INPut:GAIN:STATe <State>](#) (p. 43)
- [INPut:IMPedance <Impedance>](#) (p. 43)
- [\[SENSe:\]CORRection:TRANsducer<c>\[:STATe\] <State>](#) (p. 44)
- [\[SENSe:\]CORRection:TRANsducer<c>:SELEct <TransducerFactor>](#) (p. 44)
- [\[SENSe:\]CORRection:TRANsducer<c>:UNIT?](#) (p. 44)
- [UNIT:POWer <Unit>](#) (p. 45)

DISPlay[:WINDow]:TRACe<t>:Y[:SCALe]:ADJust

This command automatically scales the vertical axis for optimum display results.

This command is an event and therefore has no query and no *RST value.

Example

```
DISP:TRAC:Y:ADJ
```

Adjusts the y-axis.

Characteristics

*RST value: -
 SCPI: device-specific

DISPlay[:WINDow]:TRACe<t>:Y:SPACing <Scaling>

This command selects the scaling of the vertical axis.

Parameter

<Scaling>

LOGarithmic logarithmic scaling

LINear linear scaling (%)

Example

```
DISP:TRAC:Y:SPAC LIN
```

Selects linear scaling of the level axis.

Characteristics

*RST value: LOGarithmic

SCPI: conform

DISPlay[:WINDow]:TRACe<t>:Y[:SCALe] <DisplayRange>

This command defines the display range of the vertical axis.

Note that you have to set a logarithmic scaling before you can use this command with `DISPlay[:WINDow]:TRACe<t>:Y:SPACing`. For a linear scale, you can not modify the display range as it is fixed.

Parameter

<DisplayRange>

numeric value in the range from 10 dB to 200 dB

Example

```
DISP:TRAC:Y 110dB
```

Sets the display range to 110 dB.

Characteristics

*RST value: 100dB

SCPI: device-specific

DISPlay[:WINDow]:TRACe<t>:Y[:SCALe]:RLEVel <ReferenceLevel>

This command sets the reference level.

With a reference level offset $\neq 0$, the value range of the reference level is modified by the offset.

Parameter

<ReferenceLevel>

numeric value that sets the reference level; the unit depends on `UNIT:POWer`.

The available value range is specified in the data sheet.

Example

```
DISP:TRAC:Y:RLEV -60dBm
```

Sets the reference level to -60 dBm.

Characteristics

*RST value: -20dBm
SCPI: conform

DISPlay[:WINDow]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet <Offset>

This command sets the reference level offset.

Parameter

<Offset>
numeric value (dB) that sets the reference level offset
The available value range is from -200dB to 200dB.

Example

```
DISP:TRAC:Y:RLEV:OFFS -10dB
```

Characteristics

*RST value: 0dB
SCPI: conform

DISPlay[:WINDow]:TRACe<t>:Y[:SCALe]:RPOSition <ReferencePosition>

This command sets the position of the reference level on the display grid.

First, you have to set a logarithmic scale for the vertical axis with `DISPlay[:WINDow]:TRACe<t>:Y:SPACing`. For a linear scale, you can not modify the reference position.

Parameter

<ReferencePosition>
numeric value (%) that defines the reference position
The available value range is from 1 to 10.

Example

```
DISP:TRAC:Y:RPOS 5
```

Sets the reference position to the 5th grid line.

Characteristics

*RST value:10
SCPI: conform

INPut:ATTenuation <Attenuation>

This command defines the input attenuation.

In spectrum mode, the attenuation is coupled to the reference level. If you set the attenuation independently, the R&S FSH turns off this coupling.

The R&S FSH adjusts the reference level if it can not be set for the current RF attenuation.

Parameter

<Attenuation>

Numeric value in the range from 0 dB to 40 dB in 5 dB steps.

Example

```
INP:ATT 30dB
```

Defines an attenuation of 30 dB and deactivates coupling to the reference level.

Characteristics

*RST value: 0 dB (AUTO is ON)

SCPI: conform

INPut:ATTenuation:MODE <AttenuationMode>

This command sets the attenuation mode.

Parameter

<AttenuationMode>

LDIStortion Auto low distortion

LNOise Auto low noise

Example

```
INP:ATT:MODE LNO
```

Sets the attenuation mode to Auto Low Noise.

Characteristics

*RST value: LNOise

SCPI: device-specific

INPut:ATTenuation:AUTO <State>

This command couples and decouples input attenuation to the reference level.

Parameter

<State>

ON | OFF

Example

```
INP:ATT:AUTO ON
```

Couples the attenuation set on the attenuator to the reference level.

Characteristics

*RST value: ON
SCPI: conform

INPut:GAIN:STATe <State>

This command turns the preamplifier on and off.

Parameter

<State>
ON | OFF

Example

```
INP:GAIN:STAT ON  
Activates the preamplifier
```

Characteristics

*RST value: OFF
SCPI: conform

INPut:IMPedance <Impedance>

This command sets the nominal input impedance. The set impedance is taken into account in all level indications of results.

The setting 75 Ω should be selected, if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = $10 \log (75\Omega / 50\Omega)$.

Parameter

<Impedance>
50 | 75

Example

```
INP:IMP 75  
Sets the input impedance to 75 Ohm.
```

Characteristics

*RST value: 50 Ω
SCPI: conform

[SENSe:]CORRection:TRANsducer<c>[:STATe] <State>

This command turns a transducer factor on and off.

Before turning it on, you have to select a transducer factor with

`[SENSe:]CORRection:TRANsducer<c>:SElect`.

Parameter

<State>

ON | OFF

Example

```
CORR:TRAN1 ON
```

Activates the primary transducer

Characteristics

*RST value: OFF

SCPI: device-specific

[SENSe:]CORRection:TRANsducer<c>:SElect <TransducerFactor>

This command selects a transducer factor.

If <name> does not exist yet, a new transducer factor is created.

The suffix<1...2> specifies the primary or secondary transducer.

Parameter

<Transducerfactor>

string containing the file name of the transducer factor.

If the file does not exist, the R&S FSH creates a new transducer factor.

Example

```
CORR:TRAN2:SEL 'FSH-Z38.sectrd'
```

Selects the FSH-Z38 secondary transducer factor.

Characteristics

*RST value: -

SCPI: device-specific

[SENSe:]CORRection:TRANsducer<c>:UNIT?

This command queries the unit of the current transducer factor.

Example

```
CORR:TRAN2:UNIT?
```

Queries the unit of the primary transducer.

Characteristics

*RST value: -

SCPI: device-specific

UNIT:POWer <Unit>

This command selects the unit of the vertical axis.

The availability of units depends on the operating mode and type of measurement.

Parameter

<Unit>

DBM | DBUV | DBMV | V | W | DUVM | DUAM | V_M | W_M2

Note that the availability of units depends on the operating mode.

Example

```
UNIT:POW DBUV
```

Sets the power unit to dB μ V.

Characteristics

*RST value: DBM

SCPI: conform

7.2.3 Setting the Bandwidths

The following commands configure the filter bandwidths of the R&S FSH. Note that both groups of commands (BANDwidth and BWIDth) are the same.

List of commands

- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\] <ResBW>](#) (p. 45)
- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:AUTO <State>](#) (p. 46)
- [\[SENSe:\]BANDwidth|BWIDth:VIDeo <VideoBW>](#) (p. 46)
- [\[SENSe:\]BANDwidth|BWIDth:VIDeo:AUTO <State>](#) (p. 46)

[SENSe:]BANDwidth|BWIDth[:RESolution] <ResBW>

This command defines the resolution bandwidth.

Parameter

<ResBW>

Numeric value in Hz.

The available value range is from 1 Hz to 3 MHz in 1 - 3 - 5 steps. In addition, you can select a 200 kHz bandwidth.

Example

```
BAND 100 kHz
```

Sets the resolution bandwidth to 100 kHz

Characteristics

*RST value: - (AUTO is set to ON)

SCPI: conform

[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO <State>

This command couples and decouples the resolution bandwidth to the span.

Parameter

<State>
ON | OFF

Example

```
BAND:AUTO OFF
```

Decouples the resolution bandwidth from the span.

Characteristics

*RST value: ON
SCPI: conform

[SENSe:]BANDwidth|BWIDth:VIDeo <VideoBW>

This command sets the video bandwidth.

Parameter

<VideoBW>
Numeric value in Hz.

The available value range is from 1 Hz to 3 MHz in 1 - 3 steps.

Example

```
BAND:VID 10kHz
```

Sets the video bandwidth to 10 kHz.

Characteristics

*RST value: - (AUTO is set to ON)
SCPI: conform

[SENSe:]BANDwidth|BWIDth:VIDeo:AUTO <State>

This command couples and decouples the video bandwidth to the resolution bandwidth.

Parameter

<State>
ON | OFF

Example

```
BAND:VID:AUTO OFF
```

Turns off video bandwidth coupling.

Characteristics

*RST value: ON
SCPI: conform

7.2.4 Performing and Triggering Measurements

The following commands control the actual measurement process, including trigger functionality.

7.2.4.1 Performing the Measurement

The following commands initialize a measurement and set up the sweep.

List of commands

- [*WAI](#) (p. 33)
- [ABORt](#) (p. 47)
- [INITiate\[:IMMediate\]](#) (p. 47)
- [INITiate:CONTinuous <SweepMode>](#) (p. 48)
- [\[SENSe:\]SWEEp:COUNT <SweepCount>](#) (p. 48)
- [\[SENSe:\]SWEEp:POINts?](#) (p. 49)
- [\[SENSe:\]SWEEp:TIME <SweepTime>](#) (p. 49)
- [\[SENSe:\]SWEEp:TIME:AUTO <State>](#) (p. 50)

ABORt

This command aborts the current measurement and resets the trigger system.

This command is an event and therefore has no query and no *RST value.

Example

```
ABOR;
```

```
INIT:IMM
```

Aborts a measurement and starts a new one.

Characteristics

RST value: –

SCPI: conform

INITiate[:IMMediate]

The command initiates a new measurement sequence.

With sweep count > 0 or average count > 0, this means a restart of the indicated number of measurements. With trace functions MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

In single sweep mode, synchronization to the end of the indicated number of measurements can be achieved with the command *OPC, *OPC? or *WAI. In continuous-sweep mode, synchronization to the sweep end is not possible since the overall measurement never ends.

This command is an event and therefore has no query and no *RST value.

Example

```
INIT:CONT OFF
DISP:WIND:TRAC:MODE AVER
```

Turns single sweep mode and trace averaging on.

```
INIT;*WAI
```

Starts the measurement and waits for the end of the sweep.

Characteristics

*RST value: –
SCPI: conform

INITiate:CONTinuous <SweepMode>

This command controls the sweep mode.

Parameter

<SweepMode>

ON	Continuous sweep
OFF	Single sweep

Example

```
INIT:CONT OFF
```

Turns on single sweep mode.

Characteristics

*RST value: ON
SCPI: conform

[SENSe:]SWEep:COUNt <SweepCount>

This command sets the number of sweeps included in a single sweep. It also defines the number of sweeps the R&S FSH uses to average traces or calculate maximum values.

The R&S FSH performs one sweep for sweep count 0 or 1.

Parameter

<SweepCount>
0 to 999

Example

```
SWE:COUN 64
```

Defines a sweep count of 64 sweeps.

```
INIT:CONT OFF
INIT;*WAI
```

Turns on single sweep mode, starts the sweep and waits for its end.

Characteristics

*RST value: 1
SCPI: conform

[SENSe:]SWEep:POINts?

This command reads out the number of measurement points in a single sweep.
This command is a query and therefore has no *RST value.

Return value

Number of sweep points.

Example

```
SWE:POIN?
```

Returns the number of sweep points.

Characteristics

*RST value: –
SCPI: conform

[SENSe:]SWEep:TIME <SweepTime>

This command defines the sweep time.
If you set a sweep time in spectrum mode with this command, the R&S FSH decouples the sweep time from the span and the resolution and video bandwidths.

Parameter

<SweepTime>
Numeric value in seconds.

The available value range is specified in the datasheet.

Example

```
SWE:TIME 10s
```

Sets the sweep time to 10 s

Characteristics

*RST value: - (AUTO is set to ON)
SCPI: conform

[SENSe:]SWEep:TIME:AUTO <State>

This command couples and decouples the sweep time to the span and the resolution and video bandwidths.

Parameter

<State>
ON | OFF

Example

SWE:TIME:AUTO ON
Switches on the coupling to frequency span and bandwidths.

Characteristics

*RST value: ON
SCPI: conform

7.2.4.2 Triggering Measurements

The following commands set up trigger conditions if you are using a trigger for the measurement.

List of commands

- [\[SENSe:\]SWEep:EGATe <State>](#) (p. 50)
- [\[SENSe:\]SWEep:EGATe:HOLDoff <GateDelay>](#) (p. 51)
- [\[SENSe:\]SWEep:EGATe:LENGth <GateLength>](#) (p. 51)
- [\[SENSe:\]SWEep:EGATe:TIME <SweepTime>](#) (p. 51)
- [TRIGger\[:SEquence\]:HOLDoff\[:TIME\] <TriggerDelay>](#) (p. 52)
- [TRIGger\[:SEquence\]:LEVel:VIDeo <TriggerLevel>](#) (p. 52)
- [TRIGger\[:SEquence\]:SLOPe <TriggerSlope>](#) (p. 52)
- [TRIGger\[:SEquence\]:SOURce <TriggerSource>](#) (p. 53)

[SENSe:]SWEep:EGATe <State>

This command turns a gated trigger on and off.

Parameter

<State>
ON | OFF

Example

SWE:EGAT ON
Activates the gated trigger.

Characteristics

*RST value: off
SCPI: device-specific

[SENSe:]SWEep:EGATe:HOLDoff <GateDelay>

This command sets the length of the gate delay.

Parameter

<GateDelay>

Numeric value in the range from 0 s to 100 s.

Example

```
SWE:EGAT:HOLD 2.5
```

Sets a gate delay of 2.5 seconds.

Characteristics

*RST value: 0 s

SCPI: device-specific

[SENSe:]SWEep:EGATe:LENGth <GateLength>

This command sets the gate length.

Parameter

<GateLength>

Numeric value in the range from 10 μ s to 100 s.

Example

```
SWE:EGAT:LENG 2.5
```

Sets a gate length of 2.5 seconds.

Characteristics

*RST value: 400 μ s

SCPI: device-specific

[SENSe:]SWEep:EGATe:TIME <SweepTime>

This command sets the sweep time for the gated trigger.

Parameter

<SweepTime>

Numeric value in seconds.

Example

```
SWE:GATE:TIME 4ms
```

Sets a sweep time of 4 ms for the gated trigger.

Characteristics

*RST value: 400 μ s

SCPI: device-specific

TRIGger[:SEquence]:HOLDoff[:TIME] <TriggerDelay>

This command defines the length of the trigger delay.

Parameter

<TriggerDelay>

Numeric value in the range from 0 s to 100 s.

Example

```
TRIG:HOLD 500us
```

Sets the trigger delay to 500 µs.

Characteristics

*RST value: 0 s

SCPI: conform

TRIGger[:SEquence]:LEVel:VIDeo <TriggerLevel>

This command sets the level of the video trigger.

Video trigger is available for time domain measurements (span = 0).

Parameter

<TriggerLevel>

Numeric value in the range from 0 % to 100 %.

Example

```
TRIG:LEV:VID 50PCT
```

Sets the trigger level to 50%.

Characteristics

*RST value: 50 PCT

SCPI: device-specific

TRIGger[:SEquence]:SLOPe <TriggerSlope>

This command sets the slope of the trigger signal.

The trigger slope applies to all trigger sources.

Parameter

<TriggerSlope>

POSitive | NEGative

Example

```
TRIG:SLOP NEG
```

Characteristics

*RST value: POSitive

SCPI: conform

TRIGger[:SEquence]:SOURce <TriggerSource>

This command selects the trigger source.

Parameter

<TriggerSource>

IMMediate	Free Run
EXTernal	External trigger
VIDeo	Video trigger

For more information see R&S FSH operating manual chapter "Setting the Sweep"

Example

```
TRIG:SOUR EXT
```

Selects the external trigger input as source of the trigger signal

Characteristics

*RST value: IMMediate

SCPI: conform

7.2.5 Working with Traces

The following commands set up the trace and the various functions associated with it, e.g. trace mathematics or the selection of the detector.

List of commands

- [CALCulate:MATH<t>\[:EXPRession\]\[:DEFine\] <Expression>](#) (p. 53)
- [CALCulate:MATH<t>:COPY:MEMory](#) (p. 54)
- [CALCulate:MATH<t>:STATe <State>](#) (p. 54)
- [DISPlay\[:WINDow\]:TRACe<t>\[:STATe\] <State>](#) (p. 55)
- [DISPlay\[:WINDow\]:TRACe<t>:MEMory\[:STATe\] <State>](#) (p. 55)
- [DISPlay\[:WINDow\]:TRACe<t>:MODE <TraceMode>](#) (p. 55)
- [FORMat:BORDER <ByteOrder>](#) (p. 56)
- [\[SENSe:\]DETEctor<t>\[:FUNCTion\] <Detector>](#) (p. 56)
- [\[SENSe:\]DETEctor<t>\[:FUNCTion\]:AUTO <State>](#) (p. 57)
- [TRACe<t>\[:DATA\]? <Destination>](#) (p. 57)
- [FORMat\[:DATA\] <DataFormat>](#) (p. 58)

CALCulate:MATH[:EXPRession][:DEFine] <Expression>

This command defines the mathematical expression for relating traces to trace 1.

You have to activate trace mathematics with `CALCulate:MATH<t>:STATe <State>` first.

Parameter

<Expression>

(IMPLied - memory) Subtracts the trace in memory from the current trace.

(memory - IMPLied) Subtracts the current trace from the trace in memory.

Example

```
CALC:MATH (MTRACE-TRACE)
```

Selects the subtraction of the current trace from trace in the memory.

Characteristics

*RST value: –

SCPI: conform

CALCulate:MATH<t>:COPY:MEMory

This command stores the current trace into the memory trace of the R&S FSH.

This command is an event and therefore has no query and no *RST value.

Example

```
CALC:MATH:COPY:MEM
```

Copies the trace into the memory.

Characteristics

*RST value: -

SCPI: device-specific

CALCulate:MATH:STATe <State>

This command turns trace mathematics on and off.

Parameter

<State>

ON | OFF

Example

```
CALC:MATH:STAT ON
```

Switches on the trace mathematics.

Characteristics

*RST value: OFF

SCPI: conform

DISPlay[:WINDow]:TRACe[:STATe] <State>

This command turns the displayed trace on and off.

Parameter

<State>
ON | OFF

Example

```
DISP:TRAC ON  
Turns the trace on.
```

Characteristics

*RST value: ON for TRACe1, OFF for TRACe2
SCPI: conform

DISPlay[:WINDow]:TRACe<t>:MEMory[:STATe] <State>

This command turns the trace in the memory of the R&S FSH on and off.

Parameter

<State>
ON | OFF

Example

```
DISP:TRAC:MEM ON  
Activates the memory trace.
```

Characteristics

*RST value: OFF
SCPI: device-specific

DISPlay[:WINDow]:TRACe:MODE <TraceMode>

This command sets the trace mode.

If you are using the average, max hold or min hold trace mode, you can set the number of measurements with [SENSe:]SWEep:COUNT <SweepCount>. Note that synchronization to the end of the average count is possible only in single sweep mode.

Parameter

<TraceMode>
AVERage | MAXHold | MINHold | VIEW | WRITe

You can turn off the trace with `DISPlay[:WINDow]:TRACe<t>[:STATe] <State>`.

For more information see the operating manual, chapter "Trace Mode".

Example

```
SWE:CONT OFF
```

```
SWE:COUN 16
```

Turn on single sweep mode and sets the number of measurements to 16.

```
DISP:TRAC:MODE MAXH
```

Activates MAXHold mode for the trace.

```
INIT;*WAI
```

Starts the measurement and waits for the end of the 16 sweeps.

Characteristics

*RST value: WRITe

SCPI: device-specific

FORMat:BORDER <ByteOrder>

This command controls whether binary data is transferred in normal or swapped byte order.

Parameters

<ByteOrder>

SWAPped The least significant byte is transferred first (little endian)

NORMal The most significant byte is transferred first (big endian)

Example

```
FORM:BORD NORM
```

Changes the byte order to normal mode

Characteristics

*RST value SWAPped

SCPI: conform

[SENSe:]DETEctor<t>[:FUNction] <Detector>

This command selects the detector.

Parameter

<Detector>

APEak | NEGative | POSitive | SAMPlE | RMS

For more information see the operating manual, chapter "Detectors".

Example

```
DET POS
```

Sets the detector to "positive peak".

Characteristics

*RST value: POS

SCPI: conform

[SENSe:]DETEctor<t>[:FUNCTion]:AUTO <State>

This command couples and decouples the detector to the trace mode.

Parameter

<State>
ON | OFF

Example

```
DET:AUTO OFF
```

Turns off automatic detector selection.

Characteristics

*RST value: ON
SCPI: conform

TRACe[:DATA]? <Destination>

This command reads out the trace data of the current measurement.

It also transfers data from a file to a particular trace.

With the `FORMat[:DATA] <DataFormat>` command, you can set the data format.

Parameter

<Destination>

TRACe1	writes to or reads out trace 1
TRACe2	writes to or reads out trace 2
LIST	reads out peak list of SEM measurements

Return value

The R&S FSH returns 631 values. Each value corresponds to one pixel of a trace.

The unit depends on the measurement and the unit you have set with `UNIT:POWer <Unit>`.

Note:

If you use the auto peak detector, the command reads out positive peak values only.

Example

```
TRAC:DATA? TRACE1
```

Reads out the data for trace 1

Characteristics

*RST value: -
SCPI: conform

FORMat[:DATA] <DataFormat>

This command sets the data format that is used for transmission of trace data from the R&S FSH to the controlling computer.

Note that the command has no effect for data that you send to the R&S FSH. The R&S FSH automatically recognizes the data it receives, regardless of the format.

Parameter

<DataFormat>

ASCIi	ASCIi format, separated by commas
REAL,32	32-bit IEEE 754 floating-point numbers in the "definite length block format"

In REAL,32 format, a string of return values would look like:

```
#42524<value 1><value 2>...<value n>
with
```

#4	Number of digits of the following number of data bytes (= 4 in this example)
2524	Number of following data bytes (2524, corresponds to the 631 sweep points of the R&S FSH).
<value>	4-byte floating point value

Example

```
FORM ASC
Selects the ASCII data format.
```

Characteristics

*RST value: ASCII
SCPI: conform

7.2.6 Using Markers

- [Markers and Delta Markers](#) on page 58
- [Marker Functions](#) on page 67

7.2.6.1 Markers and Delta Markers

The following commands are for setting and controlling markers and deltamarkers.

In spectrum mode mode, the suffix <n> at CALCulate selects the trace.

The suffix <m> at MARKer is in the range {1..6} and selects the marker or deltamarker.

List of commands

- [CALCulate<n>:DELTamarker<m>\[:STATe\] <State>](#) (p. 59)
- [CALCulate<n>:DELTamarker<m>:AOFF](#) (p. 59)
- [CALCulate<n>:DELTamarker<m>:MAXimum\[:PEAK\]](#) (p. 60)
- [CALCulate<n>:DELTamarker<m>:MAXimum:NEXT](#) (p. 60)

- [CALCulate<n>:DELTaMarker<m>:MINimum\[:PEAK\]](#) (p. 60)
- [CALCulate<n>:DELTaMarker<m>:X <Coordinate>](#) (p. 61)
- [CALCulate<n>:DELTaMarker<m>:X:RELative <Distance>](#) (p. 61)
- [CALCulate<n>:DELTaMarker<m>:Y?](#) (p. 62)
- [CALCulate<n>:MARKer<m>\[:STATe\] <State>](#) (p. 62)
- [CALCulate<n>:MARKer<m>:AOFF](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) (p. 64)
- [CALCulate<n>:MARKer<m>:X <Coordinate>](#) (p. 64)
- [CALCulate<n>:MARKer<m>:X:SLIMits\[:STATe\] <State>](#) (p. 65)
- [CALCulate<n>:MARKer<m>:X:SLIMits:LEFT <SearchLimit>](#) (p. 65)
- [CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT <SearchLimit>](#) (p. 66)
- [CALCulate<n>:MARKer<m>:Y?](#) (p. 66)

CALCulate<n>:DELTaMarker<m>[:STATe] <State>

This command turns delta markers on and off.

If you set the suffix at DELTmarker to 1, or use no suffix, the R&S FSH interprets this as delta marker 2 because the first marker has to be a normal marker. If more than one normal marker (2 to 6) are already active, the command turns these marker into delta markers. If no delta marker is active yet, the command activates the delta marker and positions it on the trace maximum.

Parameter

<State>
ON | OFF

Example

```
CALC:DELT3 ON
```

Turns delta marker 3 on or turn marker 3 into a delta marker.

Characteristics

RST value: OFF
SCPI: device-specific

CALCulate<n>:DELTaMarker<m>:AOFF

This command turns off all active delta markers.

This command is an event and therefore has no query and no *RST value.

Example

```
CALC:DELT:AOFF
```

Turns off all delta markers.

Characteristics

RST value: –
SCPI: device-specific

CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]

This command moves a delta marker to the current trace maximum.

If necessary, the corresponding delta marker is activated first.

This command is an event and therefore has no *RST value and no query.

Example

```
CALC:DELT3:MAX
```

Moves delta marker 3 to the maximum peak.

Characteristics

RST value: –

SCPI: device-specific

CALCulate<n>:DELTamarker<m>:MAXimum:NEXT

This command moves a delta marker to the next smaller trace maximum.

If necessary, the corresponding delta marker is activated first.

This command is an event and therefore has no *RST value and no query.

Example

```
CALC:DELT2:MAX:NEXT
```

Moves delta marker 2 to the next smaller maximum peak.

Characteristics

RST value: –

SCPI: device-specific

CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]

This command moves a delta marker to the current trace minimum.

If necessary, the corresponding delta marker is activated first.

This command is an event and therefore has no *RST value and no query.

Example

```
CALC:DELT3:MIN
```

Moves delta marker 3 to the trace minimum.

Characteristics

RST value: –

SCPI: device-specific

CALCulate<n>:DELTamarker<m>:X <Coordinate>

This command moves a delta marker to a particular coordinate on the horizontal axis.

Note that it is possible to place the marker outside the visible trace. In that case, this value is invalid.

If necessary, the corresponding delta marker is activated first.

Parameter

<Coordinate>

Numeric value that indicates the coordinate on the horizontal axis.

The range corresponds to the maximum span.

The unit depends on the measurement, e.g. Hz for measurements in the frequency domain and seconds for measurements in the time domain.

Example

```
CALC:DELT:MOD REL
```

Delta marker positions are relative to marker 1.

```
CALC:DELT2:X 10.7MHz
```

Positions delta marker 2 10.7 MHz to the right of marker 1.

```
CALC:DELT2:X?
```

```
CALC:DELT2:X:REL?
```

Queries the absolute and relative position of delta marker 2.

Characteristics

RST value: –

SCPI: device-specific

CALCulate<n>:DELTamarker<m>:X:RELative <Distance>

This command moves a delta marker to a position relative to the reference marker.

If necessary, the corresponding delta marker is activated first.

Parameter

<Distance>

Numeric value that defines the distance of the marker to the reference marker

The range depends on the current scaling of the horizontal axis.

The unit depends on the measurement, e.g. Hz for measurements in the frequency domain and seconds for measurements in the time domain.

Example

```
CALC:DELT3:X:REL 5 kHz
```

Sets the delta marker at a distance of 5 kHz to the reference position.

Characteristics

RST value: –
 SCPI: device-specific

CALCulate<n>:DELTaMarker<m>:Y?

This command queries the vertical position of a delta marker. The result is always a relative value in relation to marker 1.

If necessary, the corresponding delta marker is activated first.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end between activating the delta marker and reading out the result. This is only possible in single sweep mode.

Return value

<MarkerPosition>

In spectrum analyzer mode, the unit depends on the unit you have set and the scaling of the vertical axis.

Parameter or measuring functions	Output unit
DBM DBPW DBUV DBMV DBUA	dB (lin/log)
WATT VOLT AMPere	dB (lin), % (log)

Example

```
INIT:CONT OFF
CALC:DELT2 ON
Turns on single sweep mode and delta marker 2.
```

```
INIT;*WAI
Starts a sweep and waits for its end.
```

```
CALC:DELT2:Y?
Queries the position of delta marker 2.
```

Characteristics

RST value: –
 SCPI: device-specific

CALCulate<n>:MARKer<m>[:STATe] <State>

This command turns markers on and off.

If you do not use a suffix at MARKer, marker 1 is selected. If one or more delta markers (2 to 6) are already active, the command turns these delta markers into normal markers.

Parameter

<State>
 ON | OFF

Example

```
CALC:MARK3 ON
```

Turns on marker 3.

Characteristics

*RST value: OFF
SCPI: device-specific

CALCulate<n>:MARKer<m>:AOFF

This command turns off all active markers, delta markers and active marker measurement functions.

This command is an event and therefore has no query and no *RST value.

Example

```
CALC:MARK:AOFF
```

Switches off all markers.

Characteristics

*RST value: –
SCPI: device-specific

CALCulate<n>:MARKer<m>:MAXimum[:PEAK]

This command moves a marker to the current trace maximum.

If necessary, the corresponding marker is activated first.

This command is an event and therefore has no *RST value and no query.

Example

```
CALC:MARK2:MAX
```

Moves marker 2 to the maximum peak.

Characteristics

*RST value: –
SCPI: device-specific

CALCulate<n>:MARKer<m>:MAXimum:NEXT

This command moves a marker to the next smaller trace maximum.

If necessary, the corresponding marker is activated first.

This command is an event and therefore has no *RST value and no query.

Example

```
CALC:MARK2:MAX:NEXT
```

Moves marker 2 to the next smaller maximum peak.

Characteristics

*RST value: –
SCPI: device-specific

CALCulate<n>:MARKer<m>:MINimum[:PEAK]

This command moves a marker to the current trace minimum.

If necessary, the corresponding marker is activated first.

This command is an event and therefore has no *RST value and no query.

Example

```
CALC:MARK2:MIN
```

Moves marker 2 to the trace minimum.

Characteristics

*RST value: –
SCPI: device-specific

CALCulate<n>:MARKer<m>:X <Coordinate>

This command moves a marker to a particular coordinate on the horizontal axis.

If one or more delta markers (2 to 6) are already active, the command turns these delta markers into normal markers.

Note that it is possible to place the marker outside the visible trace. In that case, this value is invalid.

If necessary, the corresponding delta marker is activated first.

Parameter

<Coordinate>

Numeric value indicating the coordinate on the horizontal axis.

The range corresponds to the maximum span.

The unit in spectrum analyzer mode depends on the measurement, e.g. Hz for measurements in the frequency domain and seconds for measurements in the time domain.

Example

```
CALC:MARK2:X 10.7MHz
```

Positions marker 2 to frequency 10.7 MHz.

Characteristics

*RST value: –
SCPI: device-specific

CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State>

This command turns marker search limits on and off.

If you perform a measurement in zero span, this command, this command limits the evaluation range on the trace.

The numeric suffix at MARKer is irrelevant.

Parameter

<State>
ON | OFF

Example

```
CALC:MARK:X:SLIM ON
Turns on search limits.
```

Characteristics

*RST value: OFF
SCPI: device-specific

CALCulate<n>:MARKer<m>:X:SLIMits:LEFT <SearchLimit>

This command defines the left limit of the marker search range.

To use the command, you first have to turn on search limits with `CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State>`.

If you perform a measurement in zero span, this command, this command limits the evaluation range on the trace.

The numeric suffix at MARKer is irrelevant.

Parameter

<SearchLimit>
Numeric value that sets the left marker search limit.

The value range corresponds to the maximum span.

The unit in spectrum analyzer mode depends on the measurement, e.g. Hz for measurements in the frequency domain and seconds for measurements in the time domain.

Example

```
CALC:MARK:X:SLIM ON
CALC:MARK:X:SLIM:LEFT 10MHz
CALC:MARK:X:SLIM:RIGH 100MHz
Turns search limits on and defines a search range from 10 MHz to 100 MHz.
```

Characteristics

*RST value: – (is set to the left diagram border when switching on search limits)
SCPI: device-specific

CALCulate<n>:MARKer<m>:X:SLIMits:RIGHt <Searchlimit>

This command defines the right limit of the marker search range.

To use the command, you first have to turn on search limits with
`CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State>`.

If you perform a measurement in zero span, this command, this command limits the evaluation range on the trace.

The numeric suffix at MARKer is irrelevant.

Parameter

<SearchLimit>

Numeric value that sets the right marker search limit.

The value range corresponds to the maximum span.

The unit depends on the measurement, e.g. Hz for measurements in the frequency domain and seconds for measurements in the time domain.

Example

```
CALC:MARK:X:SLIM ON
CALC:MARK:X:SLIM:LEFT 10MHz
CALC:MARK:X:SLIM:RIGH 100MHz
```

Turns search limits on and defines a search range from 10 MHz to 100 MHz.

Characteristics

*RST value: – (is set to the right diagram border when switching on search limits)

SCPI: device-specific

CALCulate<n>:MARKer<m>:Y?

This command queries the absolute vertical position of a marker.

If necessary, the corresponding marker is activated first.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end between activating the delta marker and reading out the result. This is only possible in single sweep mode.

Return values

<MarkerPosition>

numeric value of the marker position

In spectrum mode, the unit depends on `UNIT:POWer`.

Example

```
INIT:CONT OFF
CALC:MARK2 ON
```

Turns on single sweep mode and marker 2.

```
INIT;*WAI
```

Starts a sweep and waits for the end.

CALC:MARK2:Y?

Queries the position of marker 2.

Characteristics

*RST value: –

SCPI: device-specific

7.2.6.2 Marker Functions

The following commands perform various kinds of analysis at the marker position.

The suffix <m> at MARKer is irrelevant, except where noted.

List of commands

- [CALCulate:MARKer<m>:COUNT\[:STATe\] <State>](#) (p. 67)
- [CALCulate:MARKer<m>:COUNT:FREQuency?](#) (p. 68)
- [CALCulate:MARKer<m>:FREQuency:MODE <InputMode>](#) (p. 68)
- [CALCulate:MARKer<m>:FUNCTion:CENTer](#) (p. 69)
- [CALCulate:MARKer<m>:FUNCTion:DEModulation\[:STATe\] <State>](#) (p. 69)
- [CALCulate:MARKer<m>:FUNCTion:DEModulation:HOLDoff <Time>](#) (p. 69)
- [CALCulate:MARKer<m>:FUNCTion:DEModulation:SElect <Demodulation>](#) (p.70)
- [CALCulate:MARKer<m>:FUNCTion:NDBDown:STATe <State>](#) (p. 70)
- [CALCulate:MARKer<m>:FUNCTion:NDBDown <Distance>](#) (p. 70)
- [CALCulate:MARKer<m>:FUNCTion:NDBDown:FREQuency?](#) (p. 71)
- [CALCulate:MARKer<m>:FUNCTion:NDBDown:RESult?](#) (p. 71)
- [CALCulate:MARKer<m>:FUNCTion:NOISe\[:STATe\] <State>](#) (p. 71)
- [CALCulate:MARKer<m>:FUNCTion:NOISe:RESult?](#) (p. 72)
- [CALCulate:MARKer<m>:FUNCTion:REFerence](#) (p. 72)

CALCulate:MARKer<m>:COUNT[:STATe] <State>

This command turns the frequency counter at the marker position on and off.

You can read out the result with [CALCulate:MARKer<m>:COUNT:FREQuency?](#).

Frequency counting is possible only for one marker at a time. If it is activated for another marker, it is automatically deactivated for the previous marker.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end to make sure that the R&S FSH actually reaches the frequency you want to measure. This is only possible in single sweep mode.

The suffix <m> selects the marker.

Parameter

<State>

ON | OFF

Example

```
INIT:CONT OFF
```

```
CALC:MARK ON
```

Turns on single sweep mode and marker 1.

```
CALC:MARK:COUN ON
```

Turns on the frequency counter for marker 1.

```
INIT;*WAI
```

```
CALC:MARK:COUN:FREQ?
```

Performs a measurement and queries the results of the frequency counter.

Characteristics

*RST value: OFF

SCPI: device-specific

CALCulate:MARKer<m>:COUNt:FREQuency?

This command performs a frequency measurement at the marker position and returns the result.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end to make sure that the R&S FSH actually reaches the frequency you want to measure. This is only possible in single sweep mode.

Before you can use the command, you have to turn on the frequency counter with `CALCulate:MARKer<m>:COUNt[:STATe] <State>`.

This command is only a query and therefore has no *RST value.

Example

See `CALCulate:MARKer<m>:COUNt[:STATe] <State>`.

Characteristics

*RST value: –

SCPI: device-specific

CALCulate:MARKer<m>:FREQuency:MODE <InputMode>

This command sets the marker frequency display mode.

Parameter

<InputMode>

FREQuency sets the marker frequency mode to frequency input (Hz)

CHANnel sets the marker frequency mode to channel input (channel number)

Example

```
CALC:MARK:FREQ:MODE FREQ
```

Selects the frequency display mode.

Characteristics

*RST value: FREQ
 SCPI: device-specific

CALCulate:MARKer<m>:FUNCtion:CENTer

This command matches the center frequency to the frequency of a marker
 If you use a delta marker, the R&S FSH turns it into a normal marker.
 The suffix <m> selects the marker.
 This command is an event and therefore has no *RST value and no query.

Example

```
CALC:MARK1:FUNC:CENT
```

Matches the center frequency to the frequency of marker 1.

Characteristics

*RST value: -
 SCPI: device-specific

CALCulate:MARKer<m>:FUNCtion:DEModulation[:STATe] <State>

This command turns the audio demodulator on and off when the measurement hits a marker position.
 With a span greater than 0, you can define a hold time at the marker position with `CALCulate:MARKer<m>:FUNCtion:DEModulation:HOLDoff <Time>`.
 In zero span the demodulation is on permanently.

Parameter

<State>
 ON | OFF

Example

```
CALC:MARK3:FUNC:DEM ON
```

Switches on the demodulation for marker 3.

Characteristics

*RST value: OFF
 SCPI: device-specific

CALCulate:MARKer<m>:FUNCtion:DEModulation:HOLDoff <Time>

This command defines the hold time at the marker position for the demodulation with span > 0.

Parameter

<Time>
 Numeric value in the range from 10 ms to 500 s.

Example:

```
CALC:MARK:FUNC:DEM:HOLD 3s
```

Sets a hold time of 3 seconds.

Characteristics:

*RST value: – (DEModulation is set to OFF)

SCPI: device-specific

CALCulate:MARKer<m>:FUNCtion:DEModulation:SElect <Demodulation>

This command selects the type of demodulation type for the audio demodulator.

Parameter

<Demodulation>

AM | FM

Example

```
CALC:MARK:FUNC:DEM:SEL FM
```

Selects FM demodulation.

Characteristics

*RST value: AM

SCPI: device-specific

CALCulate:MARKer<m>:FUNCtion:NDBDown:STATe <State>

This command turns the n dB Down marker function on and off.

Parameter

<State>

ON | OFF

Example

```
CALC:MARK:FUNC:NDBD:STAT ON
```

Activates the n dB down marker function.

Characteristics

*RST value: OFF

SCPI: device-specific

CALCulate:MARKer<m>:FUNCtion:NDBDown <Distance>

This command defines the distance of the n dB down markers to the reference marker.

Parameter

<Distance>

Distance of the temporary markers to the reference marker in dB.

Example

```
CALC:MARK:FUNC:NDBDown 9
```

Sets the two temporary markers 9 dB below the reference marker.

Characteristics

*RST value: 3 dB

SCPI: device-specific

CALCulate:MARKer<m>:FUNction:NDBDown:FREQuency?

This command queries the horizontal position of the n dB down markers.

Return value

<frequency1> absolute frequency of the n dB marker to the left of the reference marker in Hz

<frequency1> absolute frequency of the n dB marker to the right of the reference marker in Hz.

Example

```
CALC:MARK:FUNC:NDBD:FREQ?
```

This command would return, for example, 100000000, 200000000, meaning that the first marker position is at 100 MHz, the second marker position is at 200 MHz

Characteristics

*RST value: -

SCPI: device-specific

CALCulate:MARKer<m>:FUNction:NDBDown:RESult?

This command queries the frequency spacing or bandwidth of the n dB down markers.

Return value

<Bandwidth>
Bandwidth in Hz.

Characteristics

*RST value: -

SCPI: device-specific

CALCulate:MARKer<m>:FUNction:NOISe[:STATe] <State>

This command turns the noise measurement for all markers on and off.

You can query the results of the noise power density at the marker position with [CALCulate:MARKer<m>:FUNction:NOISe:RESult?](#).

Parameter

<State>
ON | OFF

Example

See `CALCulate:MARKer<m>:FUNction:NOISe:RESult?`.

Characteristics

*RST value: OFF

SCPI: device-specific

CALCulate:MARKer<m>:FUNction:NOISe:RESult?

This command queries the result of the noise measurement.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

This command is an event and therefore has no *RST value and no query.

Return value

<NoiseLevel>

The unit depends on `UNIT:POWer`.

Example

```
INIT:CONT OFF
```

Turns on single sweep mode.

```
CALC:MARK2 ON
```

```
CALC:MARK2:FUNC:NOIS ON
```

Turns on marker 2 and assigns the noise measurement to that marker.

```
INIT;*WAI
```

```
CALC:MARK2:NOIS:RES?
```

Performs the measurement and queries the noise marker results.

Characteristics

*RST value: –

SCPI: device-specific

CALCulate:MARKer<m>:FUNction:REFerence

This command matches the reference level to the power level of a marker

If you use a delta marker, the R&S FSH turns it into a normal marker.

This command is an event and therefore has no *RST value and no query.

Example

```
CALC:MARK1:FUNC:REF
```

Matches the reference level to the power level of marker 1.

Characteristics

*RST value: -

SCPI: device-specific

7.2.7 Using Display Lines and Limit Lines

7.2.7.1 Display Lines

The following commands define the position of the display line.

The suffix <n> at CALCulate is irrelevant.

List of commands

- [CALCulate<n>:DLINe <Amplitude>](#) (p. 73)
- [CALCulate<n>:DLINe:STATe <State>](#) (p. 73)

CALCulate<n>:DLINe <Amplitude>

This command defines the position of a display line.

Parameter

<Amplitude>

Numeric value with a variable range and unit.

You can use any unit you want, the R&S FSH then converts the unit to the currently selected unit. If you omit a unit, the R&S FSH uses the currently selected unit.

Example

```
CALC:DLIN -20dBm
```

Sets the display line threshold to -20 dBm.

Characteristics

*RST value: – (STATe to OFF)

SCPI: device-specific

CALCulate<n>:DLINe:STATe <State>

This command turns display lines on and off.

Parameter

<State>

ON | OFF

Example

```
CALC:DLIN:STAT OFF
```

Turns on the display line.

Characteristics

*RST value: OFF

SCPI: device-specific

7.2.7.2 Limit Lines

The following commands define limit lines and perform the corresponding limit checks.

The suffix <n> at CALCulate is irrelevant.

The suffix <k> at LIMit selects the limit line and is in the range <1...2>.

List of commands

- [CALCulate<n>:LIMit<k>:BEEP\[:STATe\] <State>](#) (p. 74)
- [CALCulate<n>:LIMit<k>:COMMeNt?](#) (p. 74)
- [CALCulate<n>:LIMit<k>:DEFine](#) (p. 75)
- [CALCulate<n>:LIMit<k>:DELete](#) (p. 76)
- [CALCulate<n>:LIMit<k>:FAIL?](#) (p. 76)
- [CALCulate<n>:LIMit<k>:LOWer:SELect <LimitLine>](#) (p. 76)
- [CALCulate<n>:LIMit<k>:STATe <State>](#) (p. 77)
- [CALCulate<n>:LIMit<k>:UNIT:X?](#) (p. 77)
- [CALCulate<n>:LIMit<k>:UNIT\[:Y\]?](#) (p. 77)
- [CALCulate<n>:LIMit<k>:UPPer:SELect <LimitLine>](#) (p. 78)

CALCulate<n>:LIMit<k>:BEEP[:STATe] <State>

This command turns the beeper that beeps if a limit line is violated on and off.

Parameter

<State>
ON | OFF

Example

```
CALC:LIM:BEEP ON
Activates the audio beep.
```

Characteristics

*RST value: OFF
SCPI: device-specific

CALCulate<n>:LIMit<k>:COMMeNt?

This command queries the description of a limit line.

This command is a query and therefore has no RST value.

Return value

<Comment>
String containing the description of the limit line.

Example

```
CALC:LIM:COMM?
Queries the description of limit line 1.
```

Characteristics

*RST value: -
 SCPI: device-specific

CALCulate<n>:LIMit<k>:DEFine

<Name>,<Comment>,<Unit>,<Scale>,<Unit>,<x1>,<y1>[,<xn>,<yn>]

This command defines the shape of a limit line.

After you have defined the shape of the limit line you still have to activate it with [CALCulate<n>:LIMit<k>:UPPer:SElect <LimitLine>](#) before it takes effect.

Parameters

<Name>

String containing the name of the limit line.

Note: if a limit line with the same name already exists, it will be overwritten.

<Comment>

String containing a comment for the limit line.

<X-unit>

Unit of the x-axis. HZ | S | M

<Scale>

Scale of the x-axis: ABS | REL

<Y-unit>

Unit of the y-axis: DB | DBM | DBUV | DBMV | DBUVM | DBUAM | VSWR | V | W

<x1>,<xn>

Data points on the x-axis.

Note: a limit line may consist of up to 100 horizontal data points.

<y1>,<yn>

Data points on the y-axis.

Example

```
CALC:LIM:DEF 'Line', 'Example', HZ, ABS, DBM, 10000000, -10,
10000000, 0, 20000000, 0
```

Defines a limit line with three data points.

Characteristics

*RST value: -
 SCPI: device-specific

CALCulate<n>:LIMit<k>:DELete

This command deletes a limit line.

This command is an event and therefore has no *RST value and no query.

Example

```
CALC:LIM2:DEL  
Deletes the second limit line
```

Characteristics

*RST value: -
SCPI: device-specific

CALCulate<n>:LIMit<k>:FAIL?

This command queries the result of a limit check.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

Return value

0 for PASS and 1 for FAIL

Example

```
INIT;*WAI  
CALC:LIM1:FAIL?  
Performs a measurement and queries the result of the check for limit line 1.
```

Characteristics

*RST value: -
SCPI: conform

CALCulate<n>:LIMit<k>:LOWer:SELect <LimitLine>

This command selects the lower limit line.

This command is an event and therefore has no *RST value and no query.

Parameter

<LimitLine>
String containing the file name of the lower limit line.

Example

```
CALC:LIM:LOW:SEL 'GSM_Lower.rellim'  
Selects the lower limit line.
```

Characteristics

*RST value:
SCPI: conform

CALCulate<n>:LIMit<k>:STATe <State>

This command turns a limit check on and off.

You can query the result of the limit check with

`CALCulate<n>:LIMit<k>:FAIL?`.

Parameter

<State>

ON | OFF

Example

```
CALC:LIM:STAT ON
```

Switches on the limit check for limit line 1.

Characteristics

*RST value: OFF

SCPI: conform

CALCulate<n>:LIMit<k>:UNIT:X?

This command queries the horizontal unit of a limit line.

This command is a query and therefore has no *RST value.

Example

```
CALC:LIM:UNIT:X?
```

Queries the x-unit of the first limit line.

Characteristics

*RST value: -

SCPI: device-specific

CALCulate<n>:LIMit<k>:UNIT[:Y]?

This command queries the vertical unit of a limit line.

This command is a query and therefore has no *RST value.

Example

```
CALC:LIM1:UNIT?
```

Queries the y-unit of the first limit line.

Characteristics

*RST value: -

SCPI: device-specific

CALCulate<n>:LIMit<k>:UPPer:SElect <LimitLine>

This command selects the upper limit line.

This command is an event and therefore has no *RST value and no query.

Parameter

<LimitLine>

string containing the file name of the upper limit line

Example

```
CALC:LIM:UPP:SEL 'GSM_Upper.rellim'
```

Selects the upper limit line.

Characteristics

*RST value: -

SCPI: conform

7.2.8 Configuring and Using Measurement Functions

The R&S FSH provides measurement functions that allow you to perform advanced measurements and can also be controlled remotely.

General measurement functions:

- [Working with Channel Tables](#) on page 79

Power measurements:

- [Power Measurements](#) on page 81
- [Measuring the Channel Power](#) on page 85
- [Measuring the Occupied Bandwidth](#) on page 86
- [TDMA Measurements](#) on page 87
- [Measuring the Adjacent Channel](#) on page 88
- [Measuring the Spectrum Emission Mask](#) on page 102

Other measurements

- [Measuring the Harmonic Distortion](#) on page 99
- [Measuring the AM Modulation Depth](#) on page 101

Isotropic Antenna

- [Using an Isotropic Antenna](#) on page 104

7.2.8.1 Working with Channel Tables

Use the following commands to work with channel tables.

List of commands

- [\[SENSe:\]CHANnel <ChannelNumber>](#) (p. 79)
- [\[SENSe:\]CHANnel:TABLE:SElect <ChannelTable>](#) (p. 79)
- [\[SENSe:\]CHANnel:TABLE:SElect:DOWNlink <ChannelTable>](#) (p. 80)
- [\[SENSe:\]CHANnel:TABLE:SElect:UPLink <ChannelTable>](#) (p. 80)
- [\[SENSe:\]CHANnel:TABLE:SET <Direction>](#) (p. 81)

[SENSe:]CHANnel <ChannelNumber>

This command selects the channel to be analyzed.

You have to set the frequency mode with [\[SENSe:\]FREQuency:INPut:MODE](#) to channel first.

Parameter

<ChannelNumber>

numeric value that selects the number of the channel to be analyzed

Example

See [\[SENSe:\]CHANnel:TABLE:SElect <ChannelTable>](#).

Characteristics

*RST value: depends on the channel table

SCPI: conform

[SENSe:]CHANnel:TABLE:SElect <ChannelTable>

This command selects a channel configured for the link direction you have selected with [\[SENSe:\]CHANnel:TABLE:SET <Direction>](#).

Note that if you have previously selected a channel table with [\[SENSe:\]CHANnel:TABLE:SElect:DOWNlink <ChannelTable>](#) or [\[SENSe:\]CHANnel:TABLE:SElect:UPLink <ChannelTable>](#), this command replaces that file.

Parameter

<ChannelTable>

String containing the file name of the channel table.

Example

```
CHAN:TABL:SET UP
```

Selects channel table selection for uplink signals.

```
CHAN:TABL:SEL 'TV China.CHNTAB'
```

Loads the channel table with the name 'TV China' for the uplink.

```
CHAN:TABL:SEL 'TV Italy.chntab'
```

or

```
CHAN:TABL:SEL:UPL 'TV Italy.chntab'
```

Both commands replace the uplink channel table 'TV China' with 'TV Italy'.

Downlink channel tables are not affected by the commands sent so far.

```
FREQ:INP:MODE CHAN
```

```
CHAN 10
```

Select a particular uplink channel (e.g. #10) instead of a (center) frequency.

To select an additional downlink channel table, use either:

```
CHAN:TABL:SET DOWN
```

```
CHAN:TABL:SEL 'TV Italy.chntab'
```

or

```
CHAN:TABL:SEL:DOWN 'TV Italy.chntab'
```

Characteristics

*RST value: ''

SCPI: device-specific

[SENSe]:CHANnel:TABLE:SElect:DOWNlink <ChannelTable>

This command selects a channel table configured for downlink signals.

Parameter

<ChannelTable>

string containing the name of the channel table.

Example

See [SENSe:]CHANnel:TABLE:SElect <ChannelTable>.

Characteristics

*RST value: ''

SCPI: device-specific

[SENSe]:CHANnel:TABLE:SElect:UPLink <ChannelTable>

This command selects a channel table configured for uplink signals.

Parameter

<ChannelTable>

string containing the name of the channel table.

Example

See [SENSe:]CHANnel:TABLE:SElect <ChannelTable>.

Characteristics

*RST value: ''

SCPI: device-specific

[SENSe]:CHANnel:TABLE:SET <Direction>

This command selects the link direction for measurements with channel tables.

Parameter

<Direction>

DOWN

UP

Example

See `[SENSe:]CHANnel:TABLE:SElect <ChannelTable>`.

Characteristics

*RST value: UP

SCPI: device-specific

7.2.8.2 Power Measurements

The following commands configure power measurements. To perform the actual measurement, use the commands described in section "[Performing and Triggering Measurements](#)".

List of commands

- `CALCulate:MARKer:FUNCtion:POWer:SElect <Measurement>` (p. 81)
- `CALCulate:MARKer:FUNCtion:POWer[:STATE] <State>` (p. 82)
- `CALCulate:MARKer:FUNCtion:POWer:PRESet <Standard>` (p. 82)
- `CALCulate:MARKer:FUNCtion:POWer:PRESet:CHECK?` (p. 83)
- `CALCulate:MARKer:FUNCtion:LEVel:ONCE` (p. 83)
- `CALCulate:MARKer:FUNCtion:POWer:RESult? <Measurement>` (p. 83)

CALCulate:MARKer:FUNCtion:POWer:SElect <Measurement>

This command selects a power measurement and turns the measurement on.

Parameter

ACPower	Adjacent channel leakage ratio (ACLR)
MCACpower	aka adjacent channel power or multi carrier adjacent channel
CPOwer	Channel power measurement
OBANdwidth	Occupied bandwidth
OBWidth	
TDMA	TDMA power

Example

`CALC:MARK:FUNC:POW:SEL CPOW`

Selects the channel power measurement

Characteristics

*RST value: –
 SCPI: device-specific

CALCulate:MARKer:FUNCTION:POWer[:STATe] <State>

This command turns a power measurement on and off.

You can select a power measurement with
`CALCulate:MARKer:FUNCTION:POWer:SElect <Measurement>`.

Parameter

ON	Particular power measurement active
OFF	Basic spectrum measurement

Example

```
CALC:MARK:FUNC:POW OFF
```

Switches off the power measurement.

Characteristics

*RST value: OFF
 SCPI: device-specific

CALCulate:MARKer:FUNCTION:POWer:PRESet <Standard>

This command loads one of the predefined configurations for a telecommunications standard. This command only works if you have turned on power measurements with `CALCulate:MARKer:FUNCTION:POWer[:STATe] <State>`.

The configuration for a standard is in line with the specifications and includes parameters like weighting filter, channel bandwidth and spacing, resolution and video bandwidth, as well as detector and sweep time.

Parameter

<Standard>
 string containing the file name of the standard

Example

```
CALC:MARK:FUNC:POW:PRES '3GPP WCDMA.chpstd'
```

Selects the 3GPP WCDMA standard for channel power measurements.

Characteristics

*RST value: -
 SCPI: device-specific

CALCulate:MARKer:FUNCTION:POWer:PRESet:CHECK?

This command checks if the current settings are in line with the settings defined by the standard selected with `CALCulate:MARKer:FUNCTION:POWer:PRESet <Standard>`.

Note that the command only checks those parameters that are defined by the standard.

This command is a query and therefore has no *RST value.

Return value

0	R&S FSH settings violate a standard configuration
1	R&S FSH setting comply with the standard

Example

```
CALC:MARK:FUNC:POW:PRESet:CHECK?
```

Queries compliance to the standard currently in use.

Characteristics

*RST value: -
SCPI: device-specific

CALCulate:MARKer:FUNCTION:LEVel:ONCE

This command adjusts the reference level to the measured signal power.

This automatic routine makes sure that the that the signal power level does not overload the R&S FSH or limit the dynamic range by too small a S/N ratio.

To determine the best reference level, the R&S FSH aborts current measurements and performs a series of test sweeps. After it has finished the test, it continues with the actual measurement.

This command is an event and therefore has no *RST value and no query.

Example

```
CALC:MARK:FUNC:LEV:ONCE
```

Initiates an automatic level adjust routine.

Characteristics

*RST value: -
SCPI: device-specific

CALCulate:MARKer:FUNCTION:POWer:RESult? <Measurement>

This command queries the results of power measurements.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

Before you can use this command, you have to select the power measurement with `CALCulate:MARKer:FUNction:POWer:SElect <Measurement>` and activate it with `CALCulate:MARKer:FUNction:POWer[:STATe] <State>`.

This command is a query and therefore has no *RST value.

Parameter and return value

ACPower | MCACpower Returns the results for ACLR measurements aka adjacent channel power or multi carrier adjacent channel

The number of return values depends on the number of TX and adjacent channel. The order of return values is:

- power of the transmission channel
- power of the lower adjacent channel
- power of the upper adjacent channel
- power of the lower alternate channel 1
- power of the upper alternate channel 2
- etc.

The unit of the return values depends on the scaling of the vertical axis:

- logarithmic scaling returns the power in the currently selected unit (see `UNIT:POWer`).
- linear scaling returns the power in W.

CPOWer Returns the results for channel power measurements

The return value is the power of the channel. The unit depends on the scaling of the vertical axis:

- logarithmic scaling returns the power in the currently selected unit (see `UNIT:POWer`).
- linear scaling returns the power in W.

OBANdwidth | OBWidth Returns the results for measurements of the occupied bandwidth

The command returns the occupied bandwidth in Hz.

TDMA Returns the results for TDMA power measurements

The return value is the power of the signal. The unit depends on the scaling of the vertical axis:

- logarithmic scaling returns the power in the currently selected unit (see `UNIT:POWer`).
- linear scaling returns the power in W.

Example of occupied bandwidth measurement

```
POW:BAND 90PCT
```

Defines the occupied bandwidth (90%).

```
INIT:CONT OFF
```

```
INIT;*WAI
```

```
CALC:MARK:FUNC:POW:RES? OBW
```

Turns on single sweep mode, performs a measurement and queries the results.

Characteristics

*RST value: -
 SCPI: device-specific

7.2.8.3 Measuring the Channel Power

The following commands configure channel power measurements. To perform the actual measurement, use the commands described in section "[Performing and Triggering Measurements](#)".

The suffix <m> at MARKer is irrelevant.

List of commands

- [CALCulate:MARKer<m>:FUNCTION:CPOWer:BANDwidth <Bandwidth>](#) (p. 85)
- [CALCulate:MARKer<m>:FUNCTION:CPOWer:MODE <DisplayMode>](#) (p. 85)
- [CALCulate:MARKer<m>:FUNCTION:CPOWer:UNIT <Unit>](#) (p. 86)

CALCulate:MARKer<m>:FUNCTION:CPOWer:BANDwidth <Bandwidth>

This command sets the channel bandwidth for channel power measurements.

Parameter

<Bandwidth>
 Numeric value in Hz.

Example

```
CALC:MARK:FUNC:CPOW:BAND 4 MHZ
Sets the channel bandwidth to 4 MHz.
```

Characteristics

*RST value: 3.84 MHz
 SCPI: device-specific

CALCulate:MARKer<m>:FUNCTION:CPOWer:MODE <DisplayMode>

This command sets the power display mode to Clear / Write or Max Hold for channel power measurements.

Parameter

<DisplayMode>
 CLR | MAX

Example

```
CALC:MARK:FUNC:CPOW:MODE CLR
Selects clear/write trace mode
```

Characteristics

*RST value: CLR
 SCPI: device-specific

CALCulate:MARKer<m>:FUNCtion:CPOWer:UNIT <Unit>

This command sets the unit of the vertical axis for channel power measurements.

Parameter

<Unit>

DBM | DBMV | DBUV | VOLT | WATT | V | W

Example

CALC:MARK:FUNC:CPOW:UNIT DBM

Sets the unit to dBm.

Characteristics

*RST value: dBm

SCPI: device-specific

7.2.8.4 Measuring the Occupied Bandwidth

The following commands configure the measurement of the Occupied Bandwidth. To perform the actual measurement, use the commands described in section "[Performing and Triggering Measurements](#)".

The suffix <m> at MARKer is irrelevant.

List of commands

- [CALCulate:MARKer<m>:FUNCtion:OBANdwidth:BANDwidth <Bandwidth>](#) (p. 86)
- [CALCulate:MARKer<m>:FUNCtion:OBANdwidth:BANDwidth:PCT <OBW>](#) (p. 87)

CALCulate:MARKer<m>:FUNCtion:OBANdwidth:BANDwidth <Bandwidth>

This command sets the channel bandwidth for occupied bandwidth measurements.

Instead of OBANdwidth, you can also use the alias OBWidth

Parameter

<Bandwidth

Numeric value in Hz.

Example

CALC:MARK:FUNC:OBW:BAND 1 MHZ

Sets the channel bandwidth to 1 MHz

Characteristics

*RST value: 3.84 MHz

SCPI: device-specific

CALCulate:MARKer<m>:FUNction:OBANdwidth:BANDwidth:PCT <OBW>

This command sets the percentage of the total power that defines the occupied bandwidth.

Instead of OBANdwidth, you can also use the alias OBWidth

Parameter

<Percentage>

Numeric value in the range from 10% to 99.9%.

Example

```
CALC:MARK:FUNC:OBW:BAND:PCT 95
```

Sets the power percentage to 95%

Characteristics

*RST value: 99%

SCPI: device-specific

7.2.8.5 TDMA Measurements

The following commands configure TDMA measurements. To perform the actual measurement, use the commands described in section "[Performing and Triggering Measurements](#)".

The suffix <m> at MARKer is irrelevant.

List of commands

- [CALCulate:MARKer<m>:FUNction:TDMA:BURSt <BurstLength>](#) (p. 87)

CALCulate:MARKer<m>:FUNction:TDMA:BURSt <BurstLength>

This command sets the burst length of the TDMA signal.

Parameter

<BurstLength>

Numeric value in seconds.

The value range depends on the current sweep time.

Example

```
CALC:MARK:FUNC:TDMA:BURS 80 US
```

Sets the burst length to 80 us.

Characteristics

*RST value: 470 us

SCPI: device-specific

7.2.8.6 Measuring the Adjacent Channel Leakage Ratio

The following commands configure Adjacent Channel Leakage Ratio (ACLR) measurements. To perform the actual measurement, use the commands described in section "Performing and Triggering Measurements".

The suffix <y> selects one of the 11 alternate channels. The range is <1...11>.

The suffix <k> at LIMit is irrelevant.

- [Configuring and Performing the ACLR Measurement](#) on page 88
- [ACLR Limit Check](#) on page 93

Configuring and Performing the ACLR Measurement

The following commands configure and perform the ACLR measurements.

List of commands

- [\[SENSe:\]POWer:ACHannel:ACPairs <ChannelPairs>](#) (p. 88)
- [\[SENSe:\]POWer:ACHannel:BANDwidth\[:CHANnel\] <Bandwidth>](#) (p. 89)
- [\[SENSe:\]POWer:ACHannel:BANDwidth:ACHannel <Bandwidth>](#) (p. 89)
- [\[SENSe:\]POWer:ACHannel:BANDwidth:ALternate<y> <Bandwidth>](#) (p. 89)
- [\[SENSe:\]POWer:ACHannel:MODE <PowerMode>](#) (p. 90)
- [\[SENSe:\]POWer:ACHannel:PRESet:RLEVel](#) (p. 90)
- [\[SENSe:\]POWer:ACHannel:REFerence:TXCHannel:AUTO <RefChannel>](#) (p. 91)
- [\[SENSe:\]POWer:ACHannel:REFerence:TXCHannel:MANual <RefChannel>](#) (p. 91)
- [\[SENSe:\]POWer:ACHannel:SPACing\[:ACHannel\]](#) (p. 92)
- [\[SENSe:\]POWer:ACHannel:SPACing:ALternate<y> <Spacing>](#) (p. 92)
- [\[SENSe:\]POWer:ACHannel:SPACing:CHANnel<Tx> <Spacing>](#) (p. 92)
- [\[SENSe:\]POWer:ACHannel:TXCHannel:COUNT <TxChannels>](#) (p. 93)

[SENSe:]POWer:ACHannel:ACPairs <ChannelPairs>

This command sets the number of pairs of adjacent channels.

Parameter

<ChannelPairs>

Numeric value in the range from 1 to 12.

The number corresponds to a pair of adjacent channels, one channel on the left and one on the right of the transmission channel.

Example

```
POW:ACH:ACP 3
```

Sets 3 adjacent or alternate channels to the left and to the right of the transmission channel.

Characteristics

*RST value: 1

SCPI: device-specific

[SENSe:]POWer:ACHannel:BANDwidth[:CHANnel] <Bandwidth>

This command sets the channel bandwidth of the transmission channels.

Instead of BANDwidth, you can also use the alias BWIDth

Parameter

<Bandwidth>

Numeric value in Hz.

Example

```
POW:ACH:BAND 120 KHZ
```

Sets the bandwidth to 120 kHz

Characteristics

*RST value: 14 kHz

SCPI: device-specific

[SENSe:]POWer:ACHannel:BANDwidth:ACHannel <Bandwidth>

This command sets the channel bandwidth of the adjacent channel.

The adjacent channel is the first pair of channels next to the transmission channels. If you set the channel bandwidth for these channels, the R&S FSH sets the bandwidth of the alternate channels to the same value.

Instead of BANDwidth, you can also use the alias BWIDth

Parameter

<Bandwidth>

Numeric value in Hz.

Example

```
POW:ACH:BAND:ACH 120 KHZ
```

Sets the bandwidth of the adjacent channel to 120 kHz

Characteristics

*RST value: 14 kHz

SCPI: device-specific

[SENSe:]POWer:ACHannel:BANDwidth:ALTErnate<y> <Bandwidth>

This command sets the bandwidth of the alternate channels.

If you set the channel bandwidth for the first alternate channel, the R&S FSH sets the bandwidth of the other alternate channels to the same value. The command works hierarchically: to set a bandwidth of the 10th and 8th channel, you have to set the bandwidth of the 8th channel first.

Instead of BANDwidth, you can also use the alias BWIDth

Parameter

<Bandwidth>
Numeric value in Hz.

Example

POW:ACH:BAND:ALT2 120 KHZ
Sets the bandwidth of the second alternate channel to 120 kHz

Characteristics

*RST value: 14 kHz
SCPI: device-specific

[SENSe:]POWer:ACHannel:MODE <PowerMode>

This command sets the way the R&S FSH displays the power of adjacent channels.

The number of adjacent and alternate channels has to be greater than 0 for the command to work.

Parameter

<PowerMode>

ABSolute	shows the absolute power of all channels
RELative	shows the power of adjacent and alternate channels in relation to the transmission channel

Example

POW:ACH:MODE ABS
Shows absolute powers for all channels.

Characteristics

*RST value
SCPI: device-specific

[SENSe:]POWer:ACHannel:PRESet:RLEVel

This command adjusts the reference level to the measured signal power.

This automatic routine makes sure that the that the signal power level does not overload the R&S FSH or limit the dynamic range by too small a S/N ratio.

To determine the best reference level, the R&S FSH aborts current measurements and performs a series of test sweeps. After it has finished the test, it continues with the actual measurement.

This command is an event and therefore has no *RST value and no query.

Example

POW:ACH:PRESet:RLEV
Initiates an ACP measurement and adjusts the reference level.

Characteristics

*RST value: -
 SCPI: device-specific

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO <RefChannel>

This command automatically selects a reference channel for relative ACLR measurements.

The number of transmission channels and adjacent / alternate channels has to be greater than 0 for the command to work.

Parameter

<RefChannel>

MINimum	transmission power with the lowest power
MAXimum	transmission channel with the highest power
LHIGest	lowest transmission channel for lower adjacent channels and highest transmission channel for upper adjacent channels

Example

```
POW:ACH:REF:TXCH:AUTO MIN
```

Sets the TX channel with the lowest power as reference channel

Characteristics

*RST value
 SCPI: device-specific

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual <RefChannel>

This command sets a reference channel for relative ACLR measurements.

The number of transmission channels and adjacent / alternate channels has to be greater than 0 for the command to work.

Parameter

<RefChannel>

Numeric value from 1 to 12.

The actual value range depends on the number of active transmission channels.

Example

```
POW:ACH:REF:TXCH:MAN 2
```

Sets the second Tx channel as reference channel.

Characteristics

*RST value: 1
 SCPI: device-specific

[SENSe:]POWer:ACHannel:SPACing[:ACHannel]] <Spacing>

This command sets the spacing between the transmission channel and its adjacent channel.

A change of the adjacent channel spacing causes a change in the spacing of all alternate channels above the adjacent channel.

Parameter

<Spacing>

Numeric value in Hz.

Example

```
POW:ACH:SPAC 10 KHZ
```

Defines a channel spacing of the adjacent channel of 10 kHz

Characteristics

*RST value: 14 kHz

SCPI: device-specific

[SENSe:]POWer:ACHannel:SPACing:ALTErnate<y> <Spacing>

This command sets the spacing between alternate channels.

If you set the channel spacing for the first alternate channel, the R&S FSH sets the bandwidth of the other alternate channels to the same value. The command works hierarchically: to set a spacing of the 10th and 8th channel, you have to set the spacing of the 8th channel first.

Parameter

<Spacing>

Numeric value in Hz.

Example

```
POW:ACH:SPAC:ALT2 20 KHZ
```

Defines a channel spacing of the second to the first alternate of 20 kHz.

Characteristics

*RST value: ALT1: 40 kHz; ALT2: 60 kHz; ALT3: 80 kHz etc.

SCPI: device-specific

[SENSe:]POWer:ACHannel:SPACing:CHANnel<Tx> <Spacing>

This command sets the spacing between transmission channels.

If you set the channel spacing for the first transmission channel, the R&S FSH sets the bandwidth of the other transmission channels to the same value. The command works hierarchically: to set a spacing between the 9th and 10th and 8th and 9th channel, you have to set the spacing between the 8th and 9th channel first.

The suffix at CHANnel selects the transmission channel.

Parameter

<Spacing>
 Numeric value in Hz.

Example

POW:ACH:SPAC:CHAN2 20 kHz
 Defines a channel spacing of the second Tx channel of 14 kHz

Characteristics

*RST value: 20 kHz
 SCPI: device-specific

[SENSe:]POWer:ACHannel:TXChannel:COUNT <TxChannels>

This command sets the number of transmission channels.
 The command is available for measurements with span > 0.

Parameter

<TxChannels>
 Numeric value from 1 to 12.

Example

POW:ACH:TXCH:COUN 2
 Sets 2 Tx channels.

Characteristics

*RST value: 1
 SCPI: device-specific

ACLR Limit Check

The following commands configure and perform limit checks when measuring the adjacent channel power.

The suffix <k> at LIMit is irrelevant.

List of commands

- [CALCulate:LIMit<k>:ACPower\[:STATe\] <State>](#) (p. 94)
- [CALCulate:LIMit<k>:ACPower:ACHannel\[:RELative\] <Limit>](#) (p. 94)
- [CALCulate:LIMit<k>:ACPower:ACHannel\[:RELative\]:STATe <State>](#) (p. 95)
- [CALCulate:LIMit<k>:ACPower:ACHannel:ABSolute <Limit>](#) (p. 95)
- [CALCulate:LIMit<k>:ACPower:ACHannel:ABSolute:STATe <State>](#) (p. 95)
- [CALCulate:LIMit<k>:ACPower:ACHannel:RESult?](#) (p. 96)
- [CALCulate:LIMit<k>:ACPower:ALternate<y>\[:RELative\] <Limit>](#) (p. 96)
- [CALCulate:LIMit<k>:ACPower:ALternate<y>\[:RELative\]:STATe <State>](#) (p. 97)
- [CALCulate:LIMit<k>:ACPower:ALternate<y>:ABSolute <Limit>](#) (p. 97)
- [CALCulate:LIMit<k>:ACPower:ALternate<y>:ABSolute:STATe <State>](#) (p. 98)
- [CALCulate:LIMit<k>:ACPower:ALternate<y>:RESult?](#) (p. 98)

CALCulate:LIMit<k>:ACPoweR[:STATe] <State>

This command turns the limit check for ACLR measurements on and off.

You have to use

`CALCulate:LIMit<k>:ACPoweR:ACHannel[:RELative]:STATe <State>`
or `CALCulate:LIMit<k>:ACPoweR:ALternate<y>[:RELative]:STATe <State>` in combination with this command to select the channels the limit check should be performed on.

Parameter

<State>
ON | OFF

Example

```
CALC:LIM:ACP ON  
Activates the limit check
```

Characteristics

*RST value: OFF
SCPI: device-specific

CALCulate:LIMit<k>:ACPoweR:ACHannel[:RELative] <Limit>

This command sets the relative limit of the adjacent channels. The reference value for the relative limit value is the measured channel power.

Note that the relative limit has no effect on the limit check if it is below the absolute limit value (see `CALCulate:LIMit<k>:ACPoweR:ACHannel:ABSolute <Limit>`). This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Parameter

<Limit>
Numeric value in the range from 0 dB to 100 dB.

Example

```
CALC:LIM:ACP:ACH 30  
Defines a limit of 30 dB.
```

Characteristics

*RST value: -
SCPI: device-specific

CALCulate:LIMit<k>:ACPower:ACHannel[:RELative]:STATe <State>

This command activates the relative limit check for the adjacent channels.

You have to activate the general ACLR limit check before using this command with `CALCulate:LIMit<k>:ACPower[:STATe] <State>` first.

Parameter

<State>
ON | OFF

Example

```
CALC:LIM:ACP:ACH:STAT ON
```

Activates the relative limit check.

Characteristics

*RST value: OFF
SCPI: device-specific

CALCulate:LIMit<k>:ACPower:ACHannel:ABSolute <Limit>

This command defines the absolute limit for the adjacent channels.

Note that the absolute limit has no effect on the limit check if it is below the relative limit (see `CALCulate:LIMit<k>:ACPower:ACHannel[:RELative] <Limit>`). This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Parameter

<Limit>
Numeric value in the range from -200 dBm to 200 dBm.

Example

```
CALC:LIM:ACP:ACH:ABS -30
```

Sets the absolute limit to -30 dBm

Characteristics

*RST value: -
SCPI: device-specific

CALCulate:LIMit<k>:ACPower:ACHannel:ABSolute:STATe <State>

This command activates the absolute limit check for the adjacent channel.

You have to activate the general ACLR limit check before using this command with `CALCulate:LIMit<k>:ACPower[:STATe] <State>` first.

Parameter

<State>
ON | OFF

Example

```
CALC:LIM:ACP:ACH:ABS:STAT ON
```

Activates the absolute limit check.

Characteristics

*RST value: OFF
 SCPI: device-specific

CALCulate:LIMit<k>:ACPower:ACHannel:RESult?

This command queries the result of the limit check of the adjacent channels.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

This command is a query and therefore has no *RST value.

Return value

The return value consists of two values, one for the lower and one for the upper adjacent channel.

FAILed	limit check failed
PASSed	limit check passed

Example

```
CALC:LIM:ACP:ACH:RES?
```

Queries the limit check results. The command would return, e.g.

```
FAILED, FAILED
```

Upper and lower adjacent channels violate a limit.

Characteristics

*RST value: -
 SCPI: device-specific

CALCulate:LIMit<k>:ACPower:ALternate<y>[:RELative] <Limit>

This command sets the relative limit of the alternate channels. The reference value for the relative limit value is the measured channel power.

Note that the relative limit has no effect on the limit check if it is below the absolute limit value (see [CALCulate:LIMit<k>:ACPower:ALternate<y>:ABSolute<Limit>](#)). This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Parameter

<Limit>
 Numeric value in the range from 0 dB to 100 dB.

Example

```
CALC:LIM:ACP:ALT3 30
```

Defines a limit of 30 dB for the third alternate channel.

Characteristics

*RST value: -

SCPI: device-specific

CALCulate:LIMit<k>:ACPower:ALTernate<y>[:RELative]:STATe <State>

This command activates the relative limit check for an alternate channels.

You have to activate the general ACLR limit check before using this command with `CALCulate:LIMit<k>:ACPower[:STATe] <State>` first.

Parameter

<State>

ON | OFF

Example

```
CALC:LIM:ACP:ALT3:STAT ON
```

Activates the relative limit check for the third alternate channel.

Characteristics

*RST value: OFF

SCPI: device-specific

CALCulate:LIMit<k>:ACPower:ALTernate<y>:ABSolute <Limit>

This command defines the absolute limit for the alternate channels.

Note that the absolute limit has no effect on the limit check if it is below the relative limit (see `CALCulate:LIMit<k>:ACPower:ALTernate<y>[:RELative] <Limit>`). This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Parameters

<Limit>

Numeric value in the range from -200 dBm to 200 dBm.

Example

```
CALC:LIM:ACP:ALT3:ABS -30
```

Sets the absolute limit to -30 dBm for the third alternate channel.

Characteristics

*RST value: -

SCPI: device-specific

CALCulate:LIMit<k>:ACPoweR:ALTeRnate<y>:ABSolute:STATe <State>

This command activates the absolute limit check for an alternate channel.

You have to activate the general ACLR limit check before using this command with `CALCulate:LIMit<k>:ACPoweR[:STATe] <State>` first.

Parameter

<State>
ON | OFF

Example

```
CALC:LIM:ACP:ALT3:ABS:STAT ON
```

Activates the absolute limit check for the third alternate channel.

Characteristics

*RST value: OFF
SCPI: device-specific

CALCulate:LIMit<k>:ACPoweR:ALTeRnate<y>:RESult?

This command queries the result of the limit check of the alternate channels.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

This command is a query and therefore has no *RST value.

Return value

The return value consists of two values, one for the lower and one for the upper alternate channel.

FAILed	limit check failed
PASSed	limit check passed

Example

```
CALC:LIM:ACP:ALT2:RES?
```

Queries the limit check results for the second alternate channels. The command would return, e.g.

```
FAILED, FAILED
```

Upper and lower alternate channels violate a limit.

Example

```
CALC:LIM:ACP:ALT3:RES?
```

Queries the limit check results for the third alternate channel.

Characteristics

*RST value: -
SCPI: device-specific

7.2.8.7 Measuring the Harmonic Distortion

The following commands configure Harmonic Distortion measurements. To perform the actual measurement, use the commands described in section "[Performing and Triggering Measurements](#)".

The numeric suffixes <n> and <m> at CALCulate and MARKer are irrelevant.

List of commands

- [CALCulate<n>:MARKer<m>:FUNCTion:HARMonics\[:STATe\] <State>](#) (p. 99)
- [CALCulate<n>:MARKer<m>:FUNCTion:HARMonics:DISTortion?](#) (p. 99)
- [CALCulate<n>:MARKer<m>:FUNCTion:HARMonics:LIST?](#) (p. 100)
- [CALCulate<n>:MARKer<m>:FUNCTion:HARMonics:NHARmonics <Harmonics>](#) (p. 101)
- [CALCulate<n>:MARKer<m>:FUNCTion:HARMonics:PRESet](#) (p. 101)

CALCulate<n>:MARKer<m>:FUNCTion:HARMonics[:STATe] <State>

This command turns the harmonic distortion measurement on and off.

Parameter

<State>
ON | OFF

Example

```
CALC:MARK:FUNC:HARM ON
```

Activates the harmonic distortion measurement.

Characteristics

*RST value: OFF
SCPI: device-specific

CALCulate<n>:MARKer<m>:FUNCTion:HARMonics:DISTortion? TOTal

This command queries the total harmonic distortion of the signal.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

This command is a query and therefore has no *RST value.

Parameter

TOTal

Return value

<Distortion%>,<DistortiondB>

Pair of values, one showing the THD in %, one in dB.

Example

```
CALC:MARK:FUNC:HARM ON
```

Activates the harmonic distortion measurement.

```
CALC:MARK:FUNC:HARM:DIST? TOT
```

Queries the total harmonic distortion.

Characteristics

*RST value: -

SCPI: device-specific

CALCulate<n>:MARKer<m>:FUNCTion:HARMonics:LIST?

This command queries the position of the harmonics.

To get a valid result, you should perform a complete sweep in single sweep mode before querying the results.

This command is a query and therefore has no *RST value.

Return value

Returns one value for every harmonic.

The first value is the absolute power of the first harmonic. The level unit depends on the unit you have set with the `UNIT:POWer` command. The other values are power levels relative to the first harmonic. The unit for these is dB.

The total number of return values depends on the number of harmonics you have set with `CALCulate<n>:MARKer<m>:FUNCTion:HARMonics:NHARmonics<Harmonics>`.

Example

```
CALC:MARK:FUNC:HARM ON
```

Activates the harmonic distortion measurement.

```
CALC:MARK:FUNC:HARM:LIST?
```

Queries the position of the harmonics.

Characteristics

*RST value: -

SCPI: device-specific

CALCulate<n>:MARKer<m>:FUNCTion:HARMonics:NHARmonics <Harmonics>

This command sets the number of harmonics. The valid range is from 1 to 6 harmonics.

Parameter

<Harmonics>

Numeric value in the range from 1 to 6.

Example

```
CALC:MARK:FUNC:HARM ON
```

Activates the harmonic distortion measurement.

```
CALC:MARK:FUNC:HARM:NHAR 4
```

Sets the number of harmonics to 4.

Characteristics

*RST value: 2

SCPI: device-specific

CALCulate<n>:MARKer<m>:FUNCTion:HARMonics:PRESet

This command optimizes the settings for the harmonic distortion measurement.

This command is an event and therefore has no query and no *RST value.

Example

```
CALC:MARK:FUNC:HARM ON
```

Activates the harmonic distortion measurement.

```
CALC:MARK:FUNC:HARM:PRES?
```

Adjusts the settings of the measurement.

Characteristics

*RST value: -

SCPI: device-specific

7.2.8.8 Measuring the AM Modulation Depth

The following commands configure AM Modulation Depth measurements. To perform the actual measurement, use the commands described in section "[Performing and Triggering Measurements](#)".

The numeric suffixes <n> and <m> at CALCulate and MARKer are irrelevant.

List of commands

- [CALCulate<n>:MARKer<m>:FUNCTion:MDEPTH\[:STATe\] <State>](#) (p. 102)
- [CALCulate<n>:MARKer<m>:FUNCTion:MDEPTH:RESult?](#) (p. 102)

CALCulate<n>:MARKer<m>:FUNction:MDEPth[:STATe] <State>

This command turns the AM Modulation Depth measurement on and off.

The numeric suffixes at CALCulate and MARKer are irrelevant.

Parameter

<State>
ON | OFF

Example

CALC:MARK:FUNC:MDEP ON
Activates the harmonic distortion measurement.

Characteristics

*RST value: OFF
SCPI: device-specific

CALCulate<n>:MARKer<m>:FUNction:MDEPth:RESult?

This command queries the results of the AM modulation depth measurement.

This command is a query and therefore has no *RST value.

Return value

<ModulationDepth>
Modulation depth in %.

Example

CALC:MARK:FUNC:MDEP:RES?
Queries the AM modulation depth.

Characteristics

*RST value: -
SCPI: device-specific

7.2.8.9 Measuring the Spectrum Emission Mask

The following commands configure Spectrum Emission Mask (SEM) measurements. To perform the actual measurement, use the commands described in section "[Performing and Triggering Measurements](#)".

List of commands

- [\[SENSe:\]ESpectrum:PRESet\[:STANdard\] <Standard>](#) (p. 103)
- [\[SENSe:\]ESpectrum:PRESet:SETTings](#) (p. 103)
- [\[SENSe:\]SWEep:MODE <State>](#) (p. 103)

[SENSe:]ESpectrum:PRESet[:STANdard] <Standard>

This command loads one of the predefined spectrum emission masks for a telecommunications standard.

Parameter

<Standard>

String containing the file name of the spectrum emission mask.

Example

```
ESP:PRES 'W-CDMA 3GPP.semstd'
```

Loads the SEM for 3GPP WCDMA.

Characteristics

*RST value: -

SCPI: device-specific

[SENSe:]ESpectrum:PRESet:SETTings ONCE

This command optimizes the settings for the SEM measurement.

This command is an event and therefore has no query and no *RST value.

Parameter

ONCE

Example

```
ESP:PRES:SET ONCE
```

Initializes an adjustment of the settings.

Characteristics

*RST value: -

SCPI: device-specific

[SENSe:]SWEep:MODE <State>

This command turns the spectrum emission mask measurement on and off.

Parameter

AUTO turns spectrum mode on

ESpectrum turns the SEM on

Example

```
SWE:MODE ESP
```

Starts the SEM measurement.

Characteristics

*RST value: AUTO

SCPI: device-specific

7.2.8.10 Using an Isotropic Antenna

This chapter describes all commands available to set up measurements with an isotropic antenna.

You can use an isotropic antenna with all measurement modes that are described above.

List of commands

- [INPut:ANTenna:MEASure <Direction>](#) (p. 104)
- [INPut:ANTenna:STATe <State>](#) (p. 104)
- [\[SENSe:\]CORRection:TRANsducer<t>:ISOTropic\[:STATe\]?](#) (p. 105)

INPut:ANTenna:MEASure <Direction>

This command selects the direction that the isotropic antenna measures.

Parameter

<Direction>

AUTO automatically selects the direction

X | Y | Z measures the corresponding direction only

Example

```
INP:ANT:MEAS X
Measures in x-direction.
```

Characteristics

*RST value: AUTO
SCPI: device-specific

INPut:ANTenna:STATe <State>

This command turns the use of an isotropic antenna on and off.

Parameter

<State>

ON | OFF

Example

```
INP:ANT:STAT ON
Activates the isotropic antenna
```

Characteristics

*RST value: OFF
SCPI: device-specific

[SENSe:]CORRection:TRANsducer<t>:ISOTropic[:STATe]?

This command queries if the currently selected transducer is an isotropic antenna.

When you use the command for 3GPP WCDMA measurements in the Digital Modulation operating mode, the command also turns the use of an isotropic antenna on and off.

The numeric suffix <t> at TRANsducer selects the primary or secondary transducer and is in the range <1...2>.

Return values

0	transducer is not an isotropic antenna
1	transducer is an isotropic antenna

Example

```
CORR:TRAN:ISOT?
```

Characteristics

*RST value: -

SCPI: device-specific

7.3 Remote Commands of the Network Analyzer Mode

The chapter provides information on remote commands that configure and perform two-port measurements with the tracking generator. These commands are available in network analyzer mode only.



Availability of remote commands for the Network Analyzer

Note that some of the listed remote commands take effect only if options R&S FSH-K42 Vector Reflection and Transmission Measurements and / or R&S FSH-K45 Vector Voltmeter are installed.

Contents

- [Configuring the Horizontal Axis](#) on page 106
- [Configuring the Vertical Axis](#) on page 107
- [Setting the Bandwidths](#) on page 115
- [Performing and Triggering the Measurement](#) on page 115
- [Working with Traces](#) on page 116
- [Using Markers and Deltamarkers](#) on page 117
- [Configuring the Measurement](#) on page 121

7.3.1 Configuring the Horizontal Axis

The following commands configure the horizontal axis of the active display.

List of commands

- [\[SENSe:\]FREQUency:CENTer <Frequency>](#) (p. 34)
- [\[SENSe:\]FREQUency:CENTer:STEP <StepSize>](#) (p. 35)
- [\[SENSe:\]FREQUency:CENTer:STEP:LINK <StepSizeCoupling>](#) (p. 35)
- [\[SENSe:\]FREQUency:SPAN](#) (p. 37)
- [\[SENSe:\]FREQUency:SPAN:FULL](#) (p. 38)
- [\[SENSe:\]FREQUency:STARt <StartFrequency>](#) (p. 38)
- [\[SENSe:\]FREQUency:STOP <StopFrequency>](#) (p. 38)

For a detailed description of the commands refer to "[Configuring the Horizontal Axis](#)" in spectrum mode.

7.3.2 Configuring the Vertical Axis

The following commands configure the level axis (y-axis) and level parameters of the active display.

The suffix <n> at DISPLAY selects the measurement screen in dual trace mode. The range is <1...2>.

List of commands

- [DISPlay<n>:GDElay:REFerence <RefValue>](#) (p. 107)
- [DISPlay<n>:GDElay:REFerence:POSition <RefPosition>](#) (p. 108)
- [DISPlay<n>:GDElay:Y:SCALe <DisplayRange>](#) (p. 108)
- [DISPlay<n>:IMPedance:REFerence:POSition <Impedance>](#) (p. 119)
- [DISPlay<n>:LOSS:REFerence <RefValue>](#) (p. 108)
- [DISPlay<n>:LOSS:REFerence:POSition <RefPosition>](#) (p. 109)
- [DISPlay<n>:LOSS:Y:SCALe <DisplayRange>](#) (p. 109)
- [DISPlay<n>:MAGNitude:REFerence <RefValue>](#) (p. 110)
- [DISPlay<n>:MAGNitude:REFerence:POSition <RefPosition>](#) (p. 110)
- [DISPlay<n>:MAGNitude:Y:SCALe <DisplayRange>](#) (p. 110)
- [DISPlay<n>:MAGNitude:Y:SPACing <Scaling>](#) (p. 111)
- [DISPlay<n>:PHASe:REFerence <RefValue>](#) (p. 111)
- [DISPlay<n>:PHASe:REFerence:POSition <RefPosition>](#) (p. 111)
- [DISPlay<n>:PHASe:Y:SCALe <DisplayRange>](#) (p. 112)
- [DISPlay<n>:PHASe:UNWRap <State>](#) (p. 112)
- [DISPlay<n>:REFLection:Y:SCALe <DisplayRange>](#) (p. 113)
- [DISPlay<n>:REFLection:UNIT <Unit>](#) (p. 113)
- [DISPlay<n>:VSWR:Y:SCALe:MINimum <BottomValue>](#) (p. 113)
- [DISPlay<n>:VSWR:Y:SCALe:MAXimum <TopValue>](#) (p. 114)
- [DISPlay<n>:VSWR:Y:SCALe <DisplayRange>](#) (p. 114)
- [INPut:ATTenuation <Attenuation>](#) (p. 42)
- [INPut:ATTenuation:AUTO <State>](#) (p. 42)
- [INPut:ATTenuation:MODE <AttenuationMode>](#) (p. 42)
- [INPut:IMPedance <Impedance>](#) (p. 43)
- [SOURce:TG:ATTenuation <TGAttenuation>](#) (p. 114)
- [UNIT:POWER <Unit>](#) (p. 45)

For a detailed description of commands not described below refer to "[Configuring the Vertical Axis](#)" in spectrum analyzer mode.

DISPlay<n>:GDElay:REFerence <RefValue>

This command sets the reference value for the group delay measurement format.

Parameter

<RefValue>

Numeric value in the range from 1 ns to 1000 ns.

Example

```
DISP:GDEL:REF 20
```

Sets the reference level to 20 nanoseconds

Characteristics

*RST value: 0 ns
SCPI: device-specific

DISPlay<n>:GDElay:REFerence:POSition <RefPosition>

This command defines the position of the reference value on the display for the group delay measurement format.

Each step shifts the reference position one grid line up or down.

Parameter

<RefPosition>
Numeric value in the range from 0 to 10.

Example

```
DISP:GDEL:REF:POS 1
```

Sets the reference to the first grid line from the bottom.

Characteristics

*RST value: 5
SCPI: device-specific

DISPlay<n>:GDElay:Y:SCALe <DisplayRange>

This command defines the display range of the vertical axis for the group delay measurement format.

Parameter

<DisplayRange>
Numeric value in the range from 10 ns to 100000 ns.

The number you enter is rounded up to the next possible display range. For example, if you enter 9, the R&S FSH automatically sets the display range to 10.

Example

```
DISP:GDEL:Y:SCAL 20E-9
```

Sets the display range to 20 nanoseconds

Characteristics

*RST value: 100 ns
SCPI: device-specific

DISPlay<n>:LOSS:REFerence <RefValue>

This command sets the reference value for the cable loss measurement format.

Parameter

<RefValue>
Numeric value in the range from -100 dB to 100 dB.

Example

```
DISP:LOSS:REF 10
```

Sets the reference level to 10 dB

Characteristics

*RST value: 0 dB
SCPI: device-specific

DISPlay<n>:LOSS:REFerence:POSition <RefPosition>

This command defines the position of the reference value on the display for the cable loss measurement format.

Each step shifts the reference position one grid line up or down.

Parameter

<RefPosition>
Numeric value in the range from 0 to 10.

Example

```
DISP:LOSS:REF:POS 5
```

Sets the reference to the center of the display (i.e. the fifth grid line from the bottom).

Characteristics

*RST value: 10
SCPI: device-specific

DISPlay<n>:LOSS:Y:SCALe <DisplayRange>

This command defines the display range of the vertical axis for the cable loss measurement format.

Parameter

<DisplayRange>
Numeric value in the range from 1 dB to 100 dB.

The number you enter is rounded up to the next possible display range. For example, if you enter 9, the R&S FSH automatically sets the display range to 10.

Example

```
DISP:LOSS:Y:SCAL 20
```

Sets the display range to 20 dB

Characteristics

*RST value: 100 dB
SCPI: device-specific

DISPlay<n>:MAGNitude:REFerence <RefValue>

This command sets the reference value for the magnitude measurement format.

Parameter

<RefValue>

Numeric value in the range from -80 dB to 30 dB.

Example

```
DISP:MAGN:REF -10
```

Sets the reference level to -10 dB

Characteristics

*RST value: 0 dB

SCPI: device-specific

DISPlay<n>:MAGNitude:REFerence:POSition <RefPosition>

This command defines the position of the reference value on the display for the magnitude measurement format.

Each step shifts the reference position one grid line up or down.

Parameter

<RefPosition>

Numeric value in the range from 0 to 10.

Example

```
DISP:MAGN:REF:POS 5
```

Sets the reference to the center of the display (i.e. the fifth grid line from the bottom).

Characteristics

*RST value: 10

SCPI: device-specific

DISPlay<n>:MAGNitude:Y:SCALe <DisplayRange>

This command defines the display range of the vertical axis for the magnitude measurement format.

Note that you have to set a logarithmic scaling before you can use this command with `DISPlay<n>:MAGNitude:Y:SPACing <Scaling>`.

Parameter

<DisplayRange>

Numeric value in the range from 1 dB to 150 dB.

The number you enter is rounded up to the next possible display range. For example, if you enter 9, the R&S FSH automatically sets the display range to 10.

Example

```
DISP:MAGN:Y:SCAL 50 DB
Sets the display range of the y-axis to 50 dB
```

Characteristics

*RST value: 100 dB
 SCPI: device-specific

DISPlay<n>:MAGNitude:Y:SPACing <Scaling>

This command selects the scaling of the vertical axis for the magnitude measurement format.

Parameter

<Scaling>

LOGarithmic logarithmic scaling (dB)

LINear linear scaling (%)

Example

```
DISP:MAGN:Y:SPAC LIN
Switches the y-axis to linear scaling
```

Characteristics

*RST value: LOGarithmic
 SCPI: device-specific

DISPlay<n>:PHASe:REFerence <RefValue>

This command sets the reference value for the phase measurement format.

Parameter

<RefValue>

Numeric value in the range from -100000° to 100000°.

Example

```
DISP:MAGN:REF -10
Sets the reference level to -10 dB
```

Characteristics

*RST value: 0 dB
 SCPI: device-specific

DISPlay<n>:PHASe:REFerence:POSition <RefPosition>

This command defines the position of the reference value on the display for the phase measurement format.

Each step shifts the reference position one grid line up or down.

Parameter

<RefPosition>

Numeric value in the range from 0 to 10.

Example

DISP:LOSS:REF:POS 5

Sets the reference to the center of the display (i.e. the fifth grid line from the bottom).

Characteristics

*RST value: 10

SCPI: device-specific

DISPlay<n>:PHASe:Y:SCALe <DisplayRange>

This command defines the display range of the vertical axis for the phase measurement format.

Parameter

<DisplayRange>

Numeric value in the range from 90° to 100000°.

The number you enter is rounded up to the next possible display range. For example, if you enter 80°, the R&S FSH automatically sets the display range to 90°.

Example

DISP:PHAS:Y:SCAL 180

Sets the display range of the phase measurement to 180°

Characteristics

*RST value: 360°

SCPI: device-specific

DISPlay<n>:PHASe:UNWRap <State>

This command removes the restriction limiting the value range to +/- 180°.

Parameter

<State>

ON | OFF

Example

DISP:PHAS:UNWR ON

Activates the phase unwrap

Characteristics

*RST value: OFF

SCPI: device-specific

DISPlay<n>:REFLection:Y:SCALe <DisplayRange>

This command defines the display range of the vertical axis for the reflection coefficient measurement format.

Parameter

<DisplayRange>

Numeric value in the range from 1 dB to 1000 mrho.

The number you enter is rounded up to the next possible display range. For example, if you enter 18, the R&S FSH automatically sets the display range to 20 mrho.

Example

```
DISP:REFL:Y:SCAL 100  
Sets a display range of 100 mrho.
```

Characteristics

*RST value: 1000 mp
SCPI: device-specific

DISPlay<n>:REFLection:UNIT <Unit>

This command defines the unit of the reflection coefficient.

Parameter

<Unit>

RHO | MRHO

Example

```
DISP:REFL:UNIT RHO  
Sets the unit to RHO.
```

Characteristics

*RST value: MRHO
SCPI: device-specific

DISPlay<n>:VSWR:Y:SCALe:MINimum <BottomValue>

This command defines the bottom value of the vertical axis for the VSWR measurement format.

Parameter

<BottomValue>

Numeric value in the range from 1.0 to 70.

Example

```
DISP:VSWR:Y:SCAL:MIN 3  
Defines a bottom value of 3 for the vertical axis.
```

Characteristics

*RST value: 1.0
SCPI: device-specific

DISPlay<n>:VSWR:Y:SCALe:MAXimum <TopValue>

This command defines the top value of the vertical axis for the VSWR measurement format.

Parameter

<TopValue>
Numeric value in the range from 1.1 to 71.

Example

```
DISP:VSWR:Y:SCAL:MAX 25
```

Defines a top value of 25 for the vertical axis.

Characteristics

*RST value: 21
SCPI: device-specific

DISPlay<n>:VSWR:Y:SCALe <DisplayRange>

This command defines the display range of the vertical axis for the VSWR measurement format.

Parameter

<DisplayRange>
Numeric value in the range from 1.1 to 71.

The number you enter is rounded up to the next possible display range. For example, if you enter 5, the R&S FSH automatically sets the display range to 1...6.

Example

```
DISP:VSWR:Y:SCAL 50
```

Sets the range to 1...71.

Characteristics

*RST value: 1...21
SCPI: device-specific

SOURce:TG:ATTenuation <TGAttenuation>

This command sets the output level of the tracking generator.

Parameter

<TGAttenuation>
Numeric value in the range from 0 to 50 dB.

Entering an output level of, e.g., 20 dB results in an output level of -20 dBm.

Example

```
SOUR:TG:ATT 50
```

Sets the attenuation to 50 dB and therefore an output level of –50 dBm

Characteristics

*RST value: 0 dB

SCPI: device-specific

7.3.3 Setting the Bandwidths

The following commands configure the filter bandwidths of the R&S FSH. Note that both groups of commands (BANDwidth and BWIDth) are the same.

List of commands

- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\] <ResBW>](#) (p. 45)
- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:AUTO <State>](#) (p. 46)

For a detailed description of commands refer to "[Setting the Bandwidths](#)" in spectrum analyzer mode.

7.3.4 Performing and Triggering the Measurement

The following commands configure the sweep.

List of commands

- [*WAI](#) (p. 33)
- [ABORt](#) (p. 47)
- [INITiate\[:IMMediate\]](#) (p. 47)
- [INITiate:CONTinuous <SweepMode>](#) (p. 48)
- [\[SENSe:\]SWEep:COUNT <SweepCount>](#) (p. 48)
- [\[SENSe:\]SWEep:POINts?](#) (p. 49)
- [\[SENSe:\]SWEep:TIME <SweepTime>](#) (p. 49)
- [\[SENSe:\]SWEep:TIME:AUTO <State>](#) (p. 50)
- [TRIGger\[:SEquence\]:HOLDoff\[:TIME\] <TriggerDelay>](#) (p. 52)
- [TRIGger\[:SEquence\]:SLOPe <TriggerSlope>](#) (p. 52)
- [TRIGger\[:SEquence\]:SOURce <TriggerSource>](#) (p. 53)

For a detailed description of commands refer to "[Performing and Triggering Measurements](#)" in spectrum analyzer mode.

7.3.5 Working with Traces

The following commands set up the trace and the various functions associated with it, e.g. the selection of the detector.

List of commands

- `DISPlay[:WINDow]:TRACe<t>:MEMory[:STATe] <State>` (p. 55)
- `DISPlay[:WINDow]:TRACe<t>:MODE <TraceMode>` (p. 55)
- `FORMat[:DATA] <DataFormat>` (p. 58)
- `FORMat:BORDER <ByteOrder>` (p. 56)
- `[SENSe:]DETEctor<t>[:FUNCTion] <Detector>` (p. 56)
- `[SENSe:]DETEctor<t>[:FUNCTion]:AUTO <State>` (p. 57)
- `TRACe[:DATA]?` (p. 116)

For a detailed description of commands not described here refer to "[Working with Traces](#)" in spectrum analyzer mode.

TRACe[:DATA]?

This command reads out the trace data of the current measurement.

It also transfers data from a file to a particular trace.

With the `FORMat[:DATA] <DataFormat>` command, you can set the data format.

Parameter

<Destination>

TRACE1	reads out trace 1 in split screen mode, trace 1 is in the upper screen
TRACE2	reads out trace 2 in split screen mode, trace 2 is in the lower screen

Return value

The R&S FSH returns 631 values. Each value corresponds to one pixel of a trace.

The result and unit depends on the measurement format.

Note that for the MPHase format (simultaneous measurement of magnitude and phase), you can read out the magnitude data with the parameter `TRACE1` and the phase data with the parameter `TRACE2`.

Example

```
TRAC:DATA? TRACE1
Reads out the data for trace 1.
```

Characteristics

*RST value: -
SCPI: conform

7.3.6 Using Markers and Deltamarkers

7.3.6.1 Markers and Deltamarkers

The following commands are for setting and controlling markers and deltamarkers. If not otherwise noted, the numeric suffix <1...6> at MARKer or DELTAmarker select the marker to be controlled.

The suffix <n> at CALCulate selects the measurement screen in dual trace mode and is in the range <1...2>.

The suffix <m> at MARKer selects the marker and is in the range <1...6>.

List of commands

- CALCulate<n>:DELTAmarker<m>[:STATe] <State> (p. 59)
- CALCulate<n>:DELTAmarker<m>:AOFF (p. 59)
- CALCulate<n>:DELTAmarker<m>:MAXimum[:PEAK] (p. 60)
- CALCulate<n>:DELTAmarker<m>:MAXimum:NEXT (p. 60)
- CALCulate<n>:DELTAmarker<m>:MINimum[:PEAK] (p. 60)
- CALCulate<n>:DELTAmarker<m>:X <Coordinate> (p. 61)
- CALCulate<n>:DELTAmarker<m>:X:RELative <Distance> (p. 61)
- CALCulate<n>:DELTAmarker<m>:Y? (p. 62)
- CALCulate<n>:MARKer<m>[:STATe] <State> (p. 62)
- CALCulate<n>:MARKer<m>:AOFF (p. 63)
- CALCulate<n>:MARKer<m>:MAXimum[:PEAK] (p. 63)
- CALCulate<n>:MARKer<m>:MAXimum:NEXT (p. 63)
- CALCulate<n>:MARKer<m>:MINimum[:PEAK] (p. 64)
- CALCulate<n>:MARKer<m>:MODE <MarkerMode> (p. 117)
- CALCulate<n>:MARKer<m>:X <Coordinate> (p. 64)
- CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State> (p. 65)
- CALCulate<n>:MARKer<m>:X:SLIMits:LEFT <SearchLimit> (p. 65)
- CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT <Searchlimit> (p. 66)
- CALCulate<n>:MARKer<m>:Y? (p. 118)

For a detailed description of commands not described below refer to "Using Markers" in spectrum analyzer mode.

CALCulate<n>:MARKer<m>:MODE <MarkerMode>

This command selects the type of information a marker shows.

Parameter

ADMittance	admittance in complex format (real + imaginary)
IMPedance	impedance in complex format (real + imaginary)
NADMittance	standardized admittance in complex format (real + imaginary)
NIMPedance	standardized impedance in complex format (real + imaginary)
NORMAL	normal marker
RPDB	reflection coefficient in complex format (magnitude (dB) + phase)

RPL reflection coefficient in complex format (magnitude (lin) + phase)

RSCalar reflection coefficient in complex format (real + imaginary)

Example

```
CALC:MARK:MODE ADM
```

Selects admittance in complex format with real and imaginary components

Characteristics

*RST value: NORMal

SCPI: device-specific

CALCulate<n>:MARKer<m>:Y?

This command queries the measurement results at the marker position.

If necessary, the corresponding marker is activated first.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end between activating the delta marker and reading out the result. This is only possible in single sweep mode.

Return value

The return value depends on the marker format you have selected with

[CALCulate<n>:MARKer<m>:MODE](#).

ADMittance <real part>, <imaginary part>

IMPedance <real part>, <imaginary part>

NADMittance <real part>, <imaginary part>

NIMPedance <real part>, <imaginary part>

NORMal <value> = trace value

RPDB <magnitude in dB>, <phase>

RPL <magnitude linear>, <phase>

RSCalar <real part>, <imaginary part>

Example

```
INIT:CONT OFF
```

```
CALC:MARK2 ON
```

Turns on single sweep mode and marker 2.

```
INIT;*WAI
```

```
CALC:MARK2:Y?
```

Performs a measurement and queries the marker position.

Characteristics

*RST value: –

SCPI: device-specific

7.3.6.2 Marker Functions

The following commands perform various kinds of analysis at the marker position.

The suffix <n> at DISPLAY selects the measurement screen in dual trace mode and is in the range <1...2>.

List of commands

- [DISPLAY<n>:IMPedance:REFerence:POSition <Impedance>](#) (p. 119)
- [DISPLAY<n>:ZOOM:AREA\[:STAT\] <State>](#) (p. 119)
- [DISPLAY<n>:ZOOM:FACTor <ZoomFactor>](#) (p. 120)
- [DISPLAY<n>:ZOOM:X <HorizShift>](#) (p. 120)
- [DISPLAY<n>:ZOOM:Y <VerticalShift>](#) (p. 120)

DISPLAY<n>:IMPedance:REFerence:POSition <Impedance>

This command sets the reference impedance for the smith chart measurement format. The impedance can be between 1 mΩ and 10 kΩ.

Parameter

<Impedance>

Numeric value in the range from 1 mΩ to 10 kΩ.

Example

```
DISP:IMP:REF:POS 75 OHM
```

Sets the reference impedance to 75 Ohm.

Characteristics

*RST value: 50

SCPI: device-specific

DISPLAY<n>:ZOOM:AREA[:STAT] <State>

This command turns the marker zoom function in a Smith chart on and off.

Parameter

<State>

ON | OFF

Example

```
DISP:ZOOM:AREA ON
```

Activates the marker zoom function.

Characteristics

*RST value: OFF

SCPI: device-specific

DISPlay<n>:ZOOM:FACTOR <ZoomFactor>

This command sets the zoom factor of the marker zoom function in a Smith chart.

Parameter

<ZoomFactor>

2 | 4 | 8

Example

```
DISP:ZOOM:FACT 4
```

Sets the zoom factor to 4

Characteristics

*RST value: -

SCPI: device-specific

DISPlay<n>:ZOOM:X <HorizShift>

This command shifts the zoom window horizontally in the Smith chart.

'0%' marks the center on the horizontal axis.

Parameter

<HorizShift>

Numeric value in the range from -50 % to 50 %.

Example

```
DISP:ZOOM:X 10
```

Shift the zoom window 10% to the right.

Characteristics

*RST value: 0

SCPI: device-specific

DISPlay<n>:ZOOM:Y <VerticalShift>

This command shifts the zoom window vertically in the Smith chart.

'0%' marks the center on the vertical axis.

Parameter

<VerticalShift>

Numeric value in the range from -50 % to 50 %.

Example

```
DISP:ZOOM:Y -25
```

Shifts the zoom window 25% down.

Characteristics

*RST value: 0

SCPI: device-specific

7.3.7 Configuring the Measurement

This chapter provides information on how to configure two-port measurements with the tracking generator. The structure follows the order of the actual operation sequence used when performing a measurement:

The suffix <n> at MEASurement selects the measurement screen in dual trace mode and is in the range from <1...2>.

- [Selecting the Measurement Port](#) on page 121
- [Selecting the Measurement Mode](#) on page 122
- [Calibrating the Measurement](#) on page 122
- [Selecting the Result Display](#) on page 124
- [Selecting the Measurement Format](#) on page 125

It also deals with configuring the Vector Voltmeter (Option R&S FSH-K45).

- [Configuring the Vector Voltmeter \(option R&S FSH-K45\)](#) on page 128

To perform the actual measurement, use the commands described in section "[Performing and Triggering the Measurement](#)".



Commands independent of the operating mode

Note that some of the commands for configuring two-port measurements are also valid for other operating modes. If a command is available in another mode, it is indicated by the list in the respective section.

7.3.7.1 Selecting the Measurement Port

The following commands select the measurement port.

List of commands

- [MEASurement:PORT <Port>](#) (p. 121)

MEASurement:PORT <Port>

This command selects the measurement port.

Parameter

<Port>

Numeric value in the range from 1 to 2.

Example

```
MEAS:PORT 1
Selects port 1.
```

Characteristics

*RST value: 1
SCPI: device-specific

7.3.7.2 Selecting the Measurement Mode

The following commands select the measurement mode for two-port measurements.

List of commands

- [MEASurement<n>:MODE <MeasMode>](#) (p. 122)

MEASurement<n>:MODE <MeasMode>

This command sets the measurement mode for network analysis measurements.

Parameter

<MeasMode>

SCALar	scalar measurements
VECTor	vector measurements
VVMeter	vector voltmeter

Example

```
MEAS:MODE SCAL
Starts a scalar measurement.
```

Characteristics

*RST value: VECTor
SCPI: device-specific

7.3.7.3 Calibrating the Measurement

The following commands query and control calibration for two-port measurements.

List of commands

- [CALCulate:CALKit:USER\[:STATe\]](#) (p. 122)
- [CALCulate:CALKit:USER:LENGth <ElecLength>](#) (p. 123)
- [CALCulate:CALKit:USER:OFFSet<p>:LENGth <ElecLengthOffs>](#) (p. 123)
- [CALibration:MODE?](#) (p. 124)
- [CALibration:STATus?](#) (p. 124)

The suffix <p> selects the measurement port. It is in the range <1...2>.

CALCulate:CALKit:USER[:STATe]

This command turns user calibration on and off.

Parameter

<State>
ON | OFF

Example

```
CALK:USER ON
```

Activates the calibration standard.

Characteristics

*RST value: OFF
SCPI: device-specific

CALCulate:CALKit:USER:LENGth <ElecLength>

This command sets the electrical length of the user calibration.

The electrical length is taken into account for phase measurements and the Smith chart.

Parameter

<ElecLength>
Numeric value in the range from 0 mm to 1 m.

Example

```
CALK:USER:LENG 5 MM
```

Sets the electrical length to 5 millimeter

Characteristics

*RST value: 5.27 mm
SCPI: device-specific

CALCulate:CALKit:USER:OFFSet<p>:LENGth <ElecLengthOffs>

This command sets the offset of the electrical length. It is taken into account for phase measurements and in the Smith Chart when phase correction for additional cables and adapters has to be performed.

The offset is taken into account for phase measurements and the Smith chart if you perform phase correction for additional cables and adapters.

Parameter

<ElecLengthOffset>
Numeric value in the range from 0 mm to 100 m.

Example

```
CALK:USER:OFFS2:LENG 500 MM
```

Sets the offset length of port 2 to 500 millimeter.

Characteristics

*RST value: 0 mm
SCPI: device-specific

CALibration:MODE?

This command queries if the current measurement is calibrated.

This command is a query and therefore has no *RST value.

Return value

0	not calibrated
1	calibrated

Example

CAL:MODE?

Queries the calibration state.

Characteristics

*RST value: -
SCPI: device-specific

CALibration:STATus?

This command queries if the R&S FSH is fully calibrated for the current measurement.

This command is a query and therefore has no *RST value.

Return value

NORMALized	full factory or user calibration
APPRoximate	approximate calibration: measurement uncertainty must be anticipated

Example

CAL:STAT?

Queries the calibration status of the R&S FSH.

Characteristics

*RST value: -
SCPI: device-specific

7.3.7.4 Selecting the Result Display

The following commands select the result display for two-port measurements.

List of commands

- [MEASurement<n>:FUNCtion:SElect <ResultDisplay>](#) (p. 125)

MEASurement<n>:FUNction:SElect <ResultDisplay>

This command selects the result display.

Parameter

<ResultDisplay>
S11 | S12 | S21 | S22

Example

```
MEAS:FUNC:SEL S11
```

Characteristics

*RST value: S11
SCPI: device-specific

7.3.7.5 Selecting the Measurement Format

The following commands are for selecting and configuring the measurement formats available for two-port measurements.

List of commands

- [CALCulate:TRACe:CABLe:LENGth\[:STATe\] <State>](#) (p. 125)
- [CALCulate:TRACe:CABLe:LENGth:RESult?](#) (p. 126)
- [CALCulate:TRACe:CABLe:TIME\[:STATe\] <State>](#) (p. 126)
- [CALCulate:TRACe:CABLe:TIME:RESult?](#) (p. 126)
- [CALCulate:TRACe:LIMit:VSWR:FAIL?](#) (p. 127)
- [DISPlay:GDELay:APERture:STEP <Aperture>](#) (p. 127)
- [MEASurement<n>:FORMat <MeasFormat>](#) (p. 127)

CALCulate:TRACe:CABLe:LENGth[:STATe] <State>

This command turns the electrical length format on and off.

Parameter

<State>
ON | OFF

Example

```
CALC:TRAC:CABL:LENG ON
Activates the electrical cable length.
```

Characteristics

*RST value: OFF
SCPI: device-specific

CALCulate:TRACe:CABLE:LENGth:RESult?

This command queries the results of the electrical cable length.

This command is a query and therefore has no *RST value.

Return value

<EILength>

Numerical value in mm

Example

```
CALC:TRAC:CABL:LENG:RES?
```

Queries the measurement result of the electrical cable length.

Characteristics

*RST value: -

SCPI: device-specific

CALCulate:TRACe:CABLE:TIME[:STATe] <State>

This command turns the delay time format on and off.

Parameter

<State>

ON | OFF

Example

```
CALC:TRAC:CABL:TIME ON
```

Activates the cable delay time.

Characteristics

*RST value: OFF

SCPI: device-specific

CALCulate:TRACe:CABLE:TIME:RESult?

This command queries the results of the cable delay time.

This command is a query and therefore has no *RST value.

Return value

<DelayTime>

Numerical value in s.

Example

```
CALC:TRAC:CABL:TIME:RES?
```

Queries the measurement result of the delay time.

Characteristics

*RST value: -

SCPI: device-specific

CALCulate:TRACe:LIMit:VSWR:FAIL?

This command queries the results of the limit check for the VSWR measurement format.

This command is a query and therefore has no *RST value.

Return value

0	fail
1	pass

Example

```
CALC:TRAC:LIM:VSWR:FAIL?
Queries the results of the limit check.
```

Characteristics

*RST value: -
SCPI: device-specific

DISPlay:GDElay:APERture:STEP <Aperture>

This command sets the aperture steps for the group delay measurement format.

Parameter

<Aperture>
Numeric value in the range from 1 to 630.

Example

```
DISP:GDEL:APER:STEP 100
Defines an aperture size of 100w.
```

Characteristics

*RST value: 10
SCPI: device-specific

MEASurement<n>:FORMat <MeasFormat>

This command selects the measurement format.

Note:

For transmission measurements only the Magnitude, Phase, Magnitude+Phase and GDelay formats are available.

Parameter

GDElay	group delay format
LOSS	cable loss format
MAGNitude	magnitude format
MPHASE	simultaneous display of magnitude and phase formats

PHASe	phase format
REFlection	reflection coefficient format
SMITh	Smith chart format
VSWR	VSWR format
VVMeter	vector voltmeter format (vector voltmeter measurements only)

Example

```
MEAS:MODE VECT
```

Switches to vector measurement mode.

```
MEAS:FUNC:REFL ON
```

Activates reflection measurement.

```
MEAS:FORM SMITh
```

Displays the reflection in a Smith Chart.

Characteristics

*RST value: MAGNitude

SCPI: device-specific

7.3.7.6 Configuring the Vector Voltmeter (option R&S FSH-K45)

The following commands configure the vector voltmeter.

**Availability of remote commands for the Vector Voltmeter**

Note that the listed remote commands take effect only if option R&S FSH-K45 Vector Voltmeter is installed.

List of commands

- [CALCulate:VVMeter:MAGNitude:REFerence?](#) (p. 128)
- [CALCulate:VVMeter:MAGNitude:RESult?](#) (p. 129)
- [CALCulate:VVMeter:PHASe:REFerence?](#) (p. 129)
- [CALCulate:VVMeter:PHASe:RESult?](#) (p. 130)
- [CALCulate:VVMeter:REFerence\[:STATe\] <State>](#) (p. 130)

CALCulate:VVMeter:MAGNitude:REFerence?

This command queries the reference value for the magnitude.

To get a result, you first have to turn on the reference value with [CALCulate:VVMeter:REFerence\[:STATe\] <State>](#).

This command is a query and therefore has no *RST value.

Return value

<ReferenceValue>

Reference value for the magnitude in dB.

Example

```
CALC:VVM:PHAS:REF?
```

Queries the reference values for the phase.

Characteristics

*RST value: -

SCPI: device-specific

CALCulate:VVMeter:MAGNitude:RESult?

This command queries the magnitude of the measurement results.

This command is a query and therefore has no *RST value.

Return values:

<Magnitude>

Magnitude of the return loss in dB.

Example

```
CALC:VVM:MAGN:RES?
```

Queries the current return loss of the DUT

Characteristics

*RST value: -

SCPI: device-specific

CALCulate:VVMeter:PHASe:REFerence?

This command queries the reference value for the phase of the DUT.

To get a result, you first have to turn on the reference value with [CALCulate:VVMeter:REFerence\[:STATe\] <State>](#).

This command is a query and therefore has no *RST value.

Return values

<ReferenceValue>

Reference value for the phase in degrees.

Example

```
CALC:VVM:PHAS:REF?
```

Characteristics

*RST value: -

SCPI: device-specific

CALCulate:VVMeter:PHASe:RESult?

This command queries the phase of the measurement results.

This command is a query and therefore has no *RST value.

Return values

<Phase>

Phase of the return loss in degrees.

Example

```
CALC:VVM:PHAS:RES?
```

Queries the current phase of the DUT

Characteristics

*RST value: -

SCPI: device-specific

CALCulate:VVMeter:REFerence[:STATe] <State>

This command saves the current measurement values as reference values. The reference values can be used for comparison measurements.

Parameter

<State>

ON | OFF

Example

```
CALC:VVM:REF ON
```

Activates the reference values.

Characteristics

*RST value: OFF

SCPI: device-specific

7.4 Remote Commands of the Power Meter

The chapter provides information on remote commands that configure and perform power measurements with the power sensor. These commands are available in power meter mode only.



Availability of remote commands for Power Sensor measurements

Note that the listed remote commands take effect only if a power sensor is connected.

7.4.1 Setting the Frequency

The following chapter describes commands necessary to define frequency settings.

List of commands

- [\[SENSe:\]PMETer:FREQuency <Frequency>](#) (p. 131)

[SENSe:]PMETer:FREQuency <Frequency>

This command sets the frequency of the power sensor.

Parameter

<Frequency>

Numeric value in Hz.

The available value range is specified in the data sheet.

Example

```
PMET:FREQ 500 MHZ
```

Sets the power sensor's frequency to 500 MHz

Characteristics

*RST value: -

SCPI: device-specific

7.4.2 Configuring Power Level Readout

The following chapter describes commands that configure the power level readout.

List of commands

- [CALCulate:PMETer:RELative\[MAGNitude\] <RefValue>](#) (p. 132)
- [CALCulate:PMETer:RELative\[MAGNitude\]:AUTO](#) (p. 132)
- [CALCulate:PMETer:RELative\[MAGNitude\]:OFFSet <Offset>](#) (p. 132)
- [UNIT<z>:PMETer:POWer <Unit>](#) (p. 133)

CALCulate:PMETer:RELative[:MAGNitude] <RefValue>

This command sets the reference value for relative measurements.

Parameter

<RefValue>
Numeric value in dBm.

Example

```
CALC:PMET:REL 30
```

The the reference value to 30 dBm.

Characteristics

*RST value: -
SCPI: device-specific

CALCulate:PMETer:RELative[:MAGNitude]:AUTO ONCE

This command sets the current measurement result as the reference level for relative measurements.

This command is an event and therefore has no *RST value and no query.

Parameter

ONCE

Example

```
CALC:PMET:REL ONCE
```

Characteristics

*RST value: -
SCPI: device-specific

CALCulate:PMETer:RELative[:MAGNitude]:OFFSet <Offset>

This command sets an offset for the reference value.

Parameter

<Offset>
Numeric value in dB.

Example

```
CALC:PMET:REL -10
```

Characteristics

*RST value: -
SCPI: device-specific

UNIT<z>:PMETer:POWer <Unit>

This command selects the unit of the power sensor.

The suffix <z>at UNIT has the following effects:

Power Measurement with R&S FSH-Z1 and R&S FSH-Z18:

- Unit 1 Power unit
- Unit 2 not available.

Power Measurement with R&S FSH-Z14 and R&S FSH-Z44:

- Unit 1 Forward Power
- Unit 2 Reflected Power

Parameter

<Unit>

DBM | WATT | W | DB | VSWR

Note on the parameter DB: when applied to UNIT1, the power is relative to the reference level, when applied to UNIT2, the return loss is displayed.

Note on the parameter VSWR: the parameter is only available if applied to UNIT2.

Example

```
UNIT1:PMET:POW DBM
```

When measuring with the R&S FSH-Z1 or R&S FSH-Z18: sets unit to dBm.

When measuring with the R&S FSH-Z14 or R&S FSH-Z44: sets unit of forward power to dBm.

Characteristics

*RST value: -
SCPI: device-specific

7.4.3 Defining the Measurement Time

The following chapter describes commands to define the measurement time of the power sensor.

- [\[SENSe:\]PMETer:MTIME <MeasTime>](#) (p. 133)

[SENSe:]PMETer:MTIME <MeasTime>

This command sets the duration of measurements.

Parameter

<MeasTime>

SHORT | NORMal | LONG

Example

```
PMET:MTIME SHOR
```

Sets a short measurement time for power measurements.

Characteristics

*RST value: -

SCPI: device-specific

7.4.4 Performing Measurements with the Power Sensor

The following chapter describes all commands that are available for performing power measurements with the power sensor.

- [CALibration:PMETer:ZERO:AUTO](#) (p. 134)
- [\[SENSe:\]PMETer:DETEctor\[:FUNCTion\] <PowerDisplay>](#) (p. 135)
- [FETCh<z>:PMETer?](#) (p. 135)
- [CALCulate:PMETer:PRESet\[:STATe\] <State>](#) (p. 136)
- [CALCulate:PMETer:PRESet:SElect <Standard>](#) (p. 136)

7.4.4.1 Zeroing of the Power Sensor

CALibration:PMETer:ZERO:AUTO ONCE

This commands starts to zero the power sensor.

This command is an event and therefore has no *RST value and no query.

Parameter

ONCE

Example

```
CAL:PMET:ZERO:AUTO ONCE
```

Starts to zero the power meter.

Characteristics

*RST value: -

SCPI: device-specific

7.4.4.2 Forward Power Display

Note that the forward power is only available in conjunction with the R&S FSH-Z14 or R&S FSH-Z44.

[SENSe:]PMETer:DETEctor[:FUNction] <PowerDisplay>

This command selects the forward power display of the power sensor.

Parameter

<PowerDisplay>

AVERage average power

PENVelope peak envelope power

Example

```
PMET:DET AVER
```

Selects the Average weighting mode.

Characteristics

*RST value: -

SCPI: device-specific

7.4.4.3 Reading Out Measurement Results

FETCh<z>:PMETer?

This command queries the results of measurements with the power sensor.

Return value

The return values depend on the power sensor in use and the selected suffix at FETCh.

Measurements with R&S FSH-Z1 or R&S FSH-Z18:

```
FETC1:PMET?    power in dBm
```

```
FETC2:PMET?    n/a
```

Measurements with R&S FSH-Z14 or R&S FSH-Z44

```
FETC1:PMET?    forward power in dBm
```

```
FETC2:PMET?    reflected power in dBm
```

Example

```
FETC2:PMET?
```

Returns nothing for R&S FSH-Z1 / R&S FSH-Z18 and the reflected power for R&S FSH-Z14 / Z44.

Characteristics

*RST value: -

SCPI: device-specific

7.4.4.4 Selecting a Standard

These commands apply radio communication standards to measurements with the power sensor.

Note that the selection of a standard is available only for the power sensors R&S FSH-Z1, -Z14, -Z18 and -Z44.

CALCulate:PMETer:PRESet[:STATe] <State>

This command turns the use of a standard on and off.

Parameters

<State>
ON | OFF

Example

```
CALC:PMET:PRES ON  
Activates usage of a standard
```

Characteristics

*RST value: -
SCPI: device-specific

CALCulate:PMETer:PRESet:SElect <Standard>

This command selects the standard for power sensor measurements.

Parameter

<Standard>
GSM | EDGE | WCDMA | CDMAOne | CDMA2000 | DVBT | DAB | TETRA | USER

Example

```
CALC:PMET:PRES:SEL GSM  
Selects the GSM standard for power sensor measurements
```

Characteristics

*RST value: -
SCPI: device-specific

7.5 Remote Commands of the Distance-to-Fault Mode

The chapter provides information on remote commands that configure and perform two-port measurements with the tracking generator. These commands are available in distance to fault mode only.



Availability of remote commands for DTF measurements

Note that the listed remote commands take effect only if option R&S FSH-K41 Distance-to-Fault Measurements is installed.

7.5.1 Configuring the Horizontal Axis

The following commands configure the frequency axis (horizontal axis) of the active display.

List of commands

- [CALCulate:DTF:DISTance:STARt <StartDistance>](#) (p. 137)
- [CALCulate:DTF:DISTance:STOP <Stop Distance>](#) (p. 138)
- [\[SENSe:\]FREQUency:CENTer <Frequency>](#) (p. 34)
- [\[SENSe:\]FREQUency:CENTer:STEP <StepSize>](#) (p. 35)
- [\[SENSe:\]FREQUency:CENTer:STEP:LINK <StepSizeCoupling>](#) (p. 35)
- [\[SENSe:\]FREQUency:SPAN](#) (p. 37)
- [\[SENSe:\]FREQUency:SPAN:AUTO <State>](#) (p. 37)
- [\[SENSe:\]FREQUency:STARt <StartFrequency>](#) (p. 38)
- [\[SENSe:\]FREQUency:STOP <StopFrequency>](#) (p. 38)

For a detailed description of the commands refer to "[Configuring the Horizontal Axis](#)" in spectrum analyzer mode.

CALCulate:DTF:DISTance:STARt <StartDistance>

This command defines the start distance of the cable measurement in meter or feet.

Parameter

<StartDistance>
numeric value in the range from 3 m (10 ft) to 1500 m (4921 ft)

Example

```
CALC:DTF:DIST:STAR 50m
```

Sets the starting point of the measurement to 50 m.

Characteristics

*RST value: 3 m (10 ft)
SCPI: device-specific

CALCulate:DTF:DISTance:STOP <Stop Distance>

This command defines the end point of the cable measurement in meter or feet.

Parameter

<StopDistance>
numeric value in the range from 3 m (10 ft) to 1500 m (4921 ft)

Example

```
CALC:DTF:DIST:STAR 500m
```

Sets the end point of the measurement to 500 m.

Characteristics

*RST value: 1500 m (4921 ft)
SCPI: device-specific

7.5.2 Configuring the Vertical Axis

The following commands configure the vertical axis for cable measurements.

The suffix <n> at DISPLAY is irrelevant.

List of commands

- [DISPlay<n>:MAGNitude:REFerence <RefValue>](#) (p. 110)
- [DISPlay<n>:MAGNitude:REFerence:POSition <RefPosition>](#) (p. 110)
- [DISPlay<n>:MAGNitude:Y:SCALe <DisplayRange>](#) (p. 110)
- [DISPlay<n>:MAGNitude:Y:SPACing <Scaling>](#) (p. 111)
- [DISPlay<n>:REFLection:Y:SCALe <DisplayRange>](#) (p. 113)
- [DISPlay<n>:REFLection:UNIT <Unit>](#) (p. 113)
- [DISPlay<n>:VSWR:Y:SCALe <DisplayRange>](#) (p. 114)
- [SOURce:TG:ATTenuation <TGAttenuation>](#) (p. 114)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:ADJust](#) (p. 39)
- [INPut:ATTenuation <Attenuation>](#) (p. 42)
- [INPut:ATTenuation:MODE <AttenuationMode>](#) (p. 42)
- [INPut:ATTenuation:AUTO <State>](#) (p. 42)
- [INPut:GAIN:STATe <State>](#) (p. 43)

For a detailed description of commands refer to "[Configuring the Vertical Axis](#)" in spectrum analyzer mode and "[Configuring the Vertical Axis](#)" in network analyzer mode.

7.5.3 Setting the Bandwidth

The following commands configure the filter bandwidths of the R&S FSH. Note that both groups of commands (BANDwidth and BWIDth) are the same.

List of commands

- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\] <ResBW>](#) (p. 45)
- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:AUTO <State>](#) (p. 46)

For a detailed description of commands refer to "[Setting the Bandwidths](#)" in spectrum analyzer mode.

7.5.4 Performing and Triggering the Measurement

The following commands configure the sweep.

List of commands

- [*WAI](#) (p. 33)
- [ABORt](#) (p. 47)
- [INITiate\[:IMMediate\]](#) (p. 47)
- [INITiate:CONTinuous <SweepMode>](#) (p. 48)
- [\[SENSe:\]SWEEp:COUNT <SweepCount>](#) (p. 48)
- [\[SENSe:\]SWEEp:POINTs?](#) (p. 49)
- [\[SENSe:\]SWEEp:TIME <SweepTime>](#) (p. 49)
- [\[SENSe:\]SWEEp:TIME:AUTO <State>](#) (p. 50)

For a detailed description of commands refer to "[Performing and Triggering Measurements](#)" in spectrum analyzer mode.

7.5.5 Working with Traces

The following commands set up the trace and the various functions associated with it, e.g. the selection of the detector.

The suffix <t> at TRACe is irrelevant.

List of commands

- [DISPlay\[:WINDow\]:TRACe<t>\[:STATe\] <State>](#) (p. 55)
- [DISPlay\[:WINDow\]:TRACe<t>:MEMOrY\[:STATe\] <State>](#) (p. 55)
- [DISPlay\[:WINDow\]:TRACe<t>:MODE <TraceMode>](#) (p. 55)
- [FORMat\[:DATA\] <DataFormat>](#) (p. 58)
- [\[SENSe:\]DETEctor<t>\[:FUNCTion\] <Detector>](#) (p. 56)
- [\[SENSe:\]DETEctor<t>\[:FUNCTion\]:AUTO <State>](#) (p. 57)
- [FORMat\[:DATA\] <DataFormat>](#) (p. 58)
- [TRACe:DATA?](#) (p. 140)
- [UNIT:LENGth](#) (p. 140)

For a detailed description of commands refer to "[Working with Traces](#)" in spectrum analyzer mode.

TRACe:DATA?

This command reads out the trace data of the current measurement.

With the `FORMat [:DATA] <DataFormat>` command, you can set the data format.

Parameter

<Destination>

TRACe1 writes to or reads out trace 1

TRACe2 writes to or reads out trace 2

Return value

The R&S FSH returns 631 values. Each value corresponds to one pixel of a trace.

The result and unit depends on the measurement format.

Example

```
TRAC:DATA? TRACE1
```

Reads out the data for trace 1.

Characteristics

*RST value: -

SCPI: conform

UNIT:LENGth <Unit>

This command sets the default unit of length.

Parameter

<Unit>

METer | FEET

Example

```
UNIT:LENGth FEET
```

Sets the unit of length to feet.

Characteristics

*RST value: METer

SCPI: conform

7.5.6 Using Markers

7.5.6.1 Markers and Deltamarkers

The following commands are for setting and controlling markers and deltamarkers. If not otherwise noted, the numeric suffix <1...6> at MARKer or DELTamarkeR select the marker to be controlled.

List of commands

- CALCulate<n>:DELTamarkeR<m>[:STATe] <State> (p. 59)
- CALCulate<n>:DELTamarkeR<m>:AOFF (p. 59)
- CALCulate<n>:DELTamarkeR<m>:MAXimum[:PEAK] (p. 60)
- CALCulate<n>:DELTamarkeR<m>:MAXimum:NEXT (p. 60)
- CALCulate<n>:DELTamarkeR<m>:MINimum[:PEAK] (p. 60)
- CALCulate<n>:DELTamarkeR<m>:X <Coordinate> (p. 61)
- CALCulate<n>:DELTamarkeR<m>:X:RELative <Distance> (p. 61)
- CALCulate<n>:DELTamarkeR<m>:Y? (p. 62)
- CALCulate<n>:MARKer<m>[:STATe] <State> (p. 62)
- CALCulate<n>:MARKer<m>:AOFF (p. 63)
- CALCulate<n>:MARKer<m>:MAXimum[:PEAK] (p. 63)
- CALCulate<n>:MARKer<m>:MAXimum:NEXT (p. 63)
- CALCulate<n>:MARKer<m>:MINimum[:PEAK] (p. 64)
- CALCulate<n>:MARKer<m>:X <Coordinate> (p. 64)
- CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State> (p. 65)
- CALCulate<n>:MARKer<m>:X:SLIMits:LEFT <SearchLimit> (p. 65)
- CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT <SearchLimit> (p. 66)
- CALCulate<n>:MARKer<m>:Y? (p. 66)

The suffix <n> at CALCulate is irrelevant.

The suffix <m> at MARKer selects the marker or delta marker.

For a detailed description of commands refer to "Using Markers" in spectrum analyzer mode.

7.5.7 Configuring the Measurement

7.5.7.1 Calibrating Measurements

The following commands calibrate DTF measurements.

List of commands

- CALibration:MODE? (p. 124)
- CALibration:STATus? (p. 124)

For a detailed description of commands refer to "Calibrating the Measurement" in network analyzer mode.

7.5.7.2 Controlling the Measurement

The following commands configure distance-to-fault measurements. To perform the actual measurement, use the commands described in chapter "Performing and Triggering the Measurement".

List of commands

- [CALCulate:DTF:CABLE:LENGth <CableLength>](#) (p. 142)
- [CALCulate:DTF:CABLE:PRESet <CableModel>](#) (p. 142)
- [CALCulate:MARKer<m>:FUNCTion:DTF:PEAK:RESult?](#) (p. 143)
- [CALCulate:MARKer<m>:FUNCTion:DTF:PEAK:THReshold <Threshold>](#) (p. 143)
- [MEASurement:MODE <MeasMode>](#) (p. 144)

CALCulate:DTF:CABLE:LENGth <CableLength>

This command sets the cable length.

Parameter

<CableLength>
3 to 1500 m

Example

```
CALCulate:DTF:CAB:LENG 2 M  
Sets the cable length to 2 meter.
```

Characteristics

*RST value: 20 m
SCPI: device-specific

CALCulate:DTF:CABLE:PRESet <CableModel>

This command selects the cable model.

Parameter

<CableModel>
string containing the file name of the cable model

Example

```
CALC:DTF:CAB:PRES '5088-HLFR.CBLMOD'  
Selects the cable model from the file HLFR.CBLMOD
```

Characteristics

*RST value: -
SCPI: device-specific

CALCulate:MARKer<m>:FUNction:DTF:PEAK:RESult?

This command queries the DTF list.

The suffix <m> is irrelevant.

This command is a query and therefore has no *RST value.

Return value

<distance>,<return loss>

The number of values depends on the number of peaks that exceed the threshold you can set with `CALCulate:MARKer<m>:FUNction:DTF:PEAK:THReshold <Threshold>`.

Example

```
CALC:MARK:FUNC:DTF:PEAK:RES?
Reads out the DTF peak list.
```

Characteristics

*RST value: -
SCPI: device-specific

CALCulate:MARKer<m>:FUNction:DTF:PEAK:THReshold <Threshold>

This commands defines the threshold for the DTF list.

All values that exceed the threshold are in the DTF list. You can query the list with `CALCulate:MARKer<m>:FUNction:DTF:PEAK:RESult?`.

The suffix <m> is irrelevant.

Parameter

<Threshold>
numeric value that sets the threshold level.

The unit depends on the measurement format.

Example

```
CALC MARK:FUNC:DTF:PEAK:THR -20
Sets the threshold to -20 dB
```

Characteristics

*RST value: -
SCPI: device-specific

MEASurement:MODE <MeasMode>

This command selects the measurement mode.

Parameter

<MeasMode>

DTFault	distance-to-fault
REFlection	reflection display
SPECtrum	spectrum display

Example

```
MEAS:MODE SCAL
```

Switches to scalar measurement mode.

Characteristics

*RST value: VECTor

SCPI: device-specific

7.6 Remote Commands of the Receiver Mode

The chapter provides information on remote commands that configure and perform two-port measurements with the tracking generator. These commands are available in distance to fault mode only.



Availability of remote commands for EMI measurements

Note that the listed remote commands take effect only if option R&S FSH-K43 EMI Measurements is installed.

Contents

- [Configuring the Horizontal Axis](#) on page 145
- [Configuring the Vertical Axis](#) on page 147
- [Setting the Bandwidth](#) on page 148
- [Performing and Triggering the Measurement](#) on page 149
- [Working with Traces](#) on page 150
- [Using Markers](#) on page 151

7.6.1 Configuring the Horizontal Axis

The following commands configure the horizontal (frequency) axis of the active display.

List of commands

- [\[SENSe:\]CHANnel <ChannelNumber>](#) (p. 79)
- [\[SENSe:\]FREQUency:CENTer <Frequency>](#) (p. 34)
- [\[SENSe:\]FREQUency:CENTer:STEP <StepSize>](#) (p. 35)
- [\[SENSe:\]FREQUency:INPut:MODE <InputMode>](#) (p. 36)
- [\[SENSe:\]FREQUency:MODE <OperationMode>](#) (p. 145)
- [\[SENSe:\]SCAN:START <StartFrequency>](#) (p. 146)
- [\[SENSe:\]SCAN:STEP <StepSize>](#) (p. 146)
- [\[SENSe:\]SCAN:STOP <StopFrequency>](#) (p. 147)

For a detailed description of all commands not included here refer to "[Configuring the Horizontal Axis](#)" in spectrum analyzer mode.

[SENSe:]FREQUency:MODE <OperationMode>

This command sets up the R&S FSH for frequency domain or time domain measurements.

In scan mode, set the frequency with:

- `[SENSe:]SCAN:START <StartFrequency>`
- `[SENSe:]SCAN:STOP <StopFrequency>`

For more information see [\[SENSe:\]FREQUency:MODE <OperationMode>](#).

Parameter

<OperationMode>

CW time domain (span = 0)

FIXed time domain (span = 0)

SCAN frequency domain

Example

FREQ:MODE SCAN

Activates frequency domain measurements.

Characteristics

*RST value: FIXed

SCPI: conform

[SENSe:]SCAN:STARt <StartFrequency>

This command defines the start frequency of the receiver scan range.

Parameter

<StartFrequency>

Numeric value in Hz.

The range is specified in the datasheet.

Example

SCAN:STAR 30kHz

Defines a start frequency of 30 kHz.

Characteristics*RST value: f_{\min}

SCPI: device-specific

[SENSe:]SCAN:STEP <StepSize>

This command defines the step size in the receiver scan range.

Parameter

<StepSize>

Numeric value in Hz.

The range is from 1 Hz to f_{\max} .**Example**

SCAN:STEP 1kHz

Defines a step frequency of 1 kHz.

Characteristics

*RST value: 0

SCPI: device-specific

[SENSe:]SCAN:STOP <StopFrequency>

This command defines the stop frequency of the receiver scan range.

Parameter

<StopFrequency>
Numeric value in Hz.

The range is specified in the datasheet.

Example

```
SCAN:STOP 1GHz
```

Defines a start frequency of 1 GHz.

Characteristics

*RST value: f_{\max}
SCPI: device-specific

7.6.2 Configuring the Vertical Axis

The following commands configure the vertical (level) axis and level parameters of the active display.

The suffix <t> at TRACe is irrelevant for these commands.

The suffix <c> at TRANsducer selects the primary or secondary transducer. The range is <1...2>.

List of commands

- [DISPlay\[:WINDow\]:TRACe<t>:Y:SPACing <Scaling>](#) (p. 40)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\] <DisplayRange>](#) (p. 40)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel <ReferenceLevel>](#) (p. 40)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel:OFFSet <Offset>](#) (p. 41)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RPOSition <ReferencePosition>](#) (p. 41)
- [INPut:ATTenuation <Attenuation>](#) (p. 42)
- [INPut:ATTenuation:MODE <AttenuationMode>](#) (p. 42)
- [INPut:ATTenuation:AUTO <State>](#) (p. 42)
- [INPut:GAIN:STATe <State>](#) (p. 43)
- [INPut:IMPedance <Impedance>](#) (p. 43)
- [\[SENSe:\]CORRection:TRANsducer<c>\[:STATe\] <State>](#) (p. 44)
- [\[SENSe:\]CORRection:TRANsducer<c>:SELEct <TransducerFactor>](#) (p. 44)
- [\[SENSe:\]CORRection:TRANsducer<c>:UNIT?](#) (p. 44)
- [UNIT:POWer <Unit>](#) (p. 45)

For a detailed description of all commands not included here refer to "[Configuring the Vertical Axis](#)" in spectrum analyzer mode.

7.6.3 Setting the Bandwidth

The following commands configure the filter bandwidths of the R&S FSH. Note that both groups of commands (BANDwidth and BWIDth) are the same.

List of commands

- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\] <ResBW>](#) (p. 45)
- [\[SENSe:\]BANDwidth\[:RESolution\]:CISPr <CISPRBandwidth>](#) (p. 148)
- [\[SENSe:\]BANDwidth\[:RESolution\]:CISPr:AUTO <State>](#) (p. 148)

For a detailed description of commands refer to "[Setting the Bandwidths](#)" in spectrum analyzer mode.

[SENSe:]BANDwidth[:RESolution]:CISPr <CISPRBandwidth>

This command defines the CISPR (6 dB) bandwidth for CISPR conform measurements.

Parameter

<CISPRBandwidth>
200 Hz | 9 kHz | 120 kHz | 1 MHz

Example

```
BAND:CISP 120KHZ
```

Defines a bandwidth of 120 kHz.

Characteristics

*RST value: - (AUTO is on)
SCPI: device-specific

[SENSe:]BANDwidth[:RESolution]:CISPr:AUTO <State>

This command turns automatic selection of the CISPR measurement bandwidth on and off.

Parameter

<State>
ON | OFF

Example

```
BAND:CISP:AUTO ON
```

Turns automatic selection of the CISPR bandwidth on.

Characteristics

*RST value: ON
SCPI: device-specific

7.6.4 Performing and Triggering the Measurement

The following commands configure the sweep.

7.6.4.1 Performing the Measurement

List of commands

- [*WAI](#) (p. 33)
- [ABORt](#) (p. 47)
- [INITiate\[:IMMediate\]](#) (p. 47)
- [INITiate:CONTInuous <SweepMode>](#) (p. 48)
- [\[SENSe:\]SWEep:COUNT <SweepCount>](#) (p. 48)
- [\[SENSe:\]SWEep:TIME <MeasurementTime>](#) (p. 149)

For a detailed description of commands refer to "[Performing and Triggering Measurements](#)" in spectrum analyzer mode.

[SENSe:]SWEep:TIME <MeasurementTime>

This command defines the measurement time.

Parameter

<MeasurementTime>
Numeric value in seconds.

The available value range is specified in the datasheet.

Example

```
SWE:TIME 10s
Sets the measurement time to 10 s
```

Characteristics

*RST value: 100 ms
SCPI: conform

7.6.4.2 Triggering Measurements

The following commands set up trigger conditions if you are using a trigger for the measurement.

List of commands

- [TRIGger\[:SEquence\]:HOLDoff\[:TIME\] <TriggerDelay>](#) (p. 52)
- [TRIGger\[:SEquence\]:SLOPe <TriggerSlope>](#) (p. 52)
- [TRIGger\[:SEquence\]:SOURce <TriggerSource>](#) (p. 150)

For a detailed description of all commands not included here, refer to "[Performing and Triggering Measurements](#)" in spectrum analyzer mode.

TRIGger[:SEquence]:SOURce <TriggerSource>

This command selects the trigger source.

Parameter

<TriggerSource>

IMMediate Free Run

EXTernal External trigger

For more information see R&S FSH operating manual chapter "Setting the Sweep"

Example

```
TRIG:SOUR EXT
```

Selects the external trigger input as source of the trigger signal

Characteristics

*RST value: IMMediate

SCPI: conform

7.6.5 Working with Traces

The following commands set up the trace and the various functions associated with it, e.g. trace mathematics or the selection of the detector.

List of commands

- [CALCulate:MATH<t>:COPY:MEMory](#) (p. 54)
- [DISPlay\[:WINDow\]:TRACe<t>\[:STATe\] <State>](#) (p. 55)
- [DISPlay\[:WINDow\]:TRACe<t>:MEMory\[:STATe\] <State>](#) (p. 55)
- [DISPlay\[:WINDow\]:TRACe<t>:MODE <TraceMode>](#) (p. 55)
- [FORMat:BORDER <ByteOrder>](#) (p. 56)
- [\[SENSe:\]DETEctor<t>\[:FUNCTion\] <Detector>](#) (p. 150)
- [TRACe:DATA?](#) (p. 151)
- [FORMat\[:DATA\] <DataFormat>](#) (p. 58)

For a detailed deescription of all commands not included here, refer to "[Working with Traces](#)" in spectrum analyzer mode.

[SENSe:]DETEctor<t>[:FUNCTion] <Detector>

This command selects the detector.

Parameter

<Detector>

AVERage | POSitive | QUASipeak | RMS

For more information see the operating manual, chapter "Detectors".

Example

DET POS
Sets the detector to "positive peak".

Characteristics

*RST value: POS
SCPI: conform

TRACe:DATA? <Measurement>

This command reads out the trace data of the current measurement.

Parameters

<Measurement>

SCAN	Returns the results of a scan measurement. The number of values depends on the scan settings.
SINGle	Returns the measurement results of receiver measurements. The parameter returns the results of all active detectors in a comma-separated list. The order of the detectors is: POSitive, QPEak, AVERage, RMS. If a detector is inactive, no value is returned.

Example

TRAC:DATA? SCAN
Returns the results of the scan measurement.

Characteristics

*RST value: -
SCPI: conform

7.6.6 Using Markers

- [Markers and Delta Markers](#) on page 151.
- [Marker Functions](#) on page 152.

7.6.6.1 Markers and Delta Markers

The following commands are for setting and controlling markers and deltamarkers.

In receiver mode mode, the suffix <n> at CALCulate selects the trace.

The suffix <m> at MARKer is in the range {1..6} and selects the marker or deltamarker.

List of commands

- [CALCulate<n>:DELTamarker<m>\[:STATE\] <State>](#) (p. 59)
- [CALCulate<n>:DELTamarker<m>:AOFF](#) (p. 59)
- [CALCulate<n>:DELTamarker<m>:MAXimum\[:PEAK\]](#) (p. 60)

- [CALCulate<n>:DELTaMarker<m>:MAXimum:NEXT](#) (p. 60)
- [CALCulate<n>:DELTaMarker<m>:MINimum\[:PEAK\]](#) (p. 60)
- [CALCulate<n>:DELTaMarker<m>:X <Coordinate>](#) (p. 61)
- [CALCulate<n>:DELTaMarker<m>:X:RELative <Distance>](#) (p. 61)
- [CALCulate<n>:DELTaMarker<m>:Y?](#) (p. 62)
- [CALCulate<n>:MARKer<m>\[:STATe\] <State>](#) (p. 62)
- [CALCulate<n>:MARKer<m>:AOFF](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) (p. 64)
- [CALCulate<n>:MARKer<m>:X <Coordinate>](#) (p. 64)
- [CALCulate<n>:MARKer<m>:X:SLIMits\[:STATe\] <State>](#) (p. 65)
- [CALCulate<n>:MARKer<m>:X:SLIMits:LEFT <SearchLimit>](#) (p. 65)
- [CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT <SearchLimit>](#) (p. 66)
- [CALCulate<n>:MARKer<m>:Y?](#) (p. 66)

For a detailed description of commands refer to "Using Markers" in spectrum analyzer mode.

7.6.6.2 Marker Functions

The following commands perform various kinds of analysis at the marker position.

The suffix <m> at MARKer is irrelevant, except where noted.

List of commands

- [CALCulate:MARKer<m>:FREQUENCY:MODE <InputMode>](#) (p. 68)
- [CALCulate:MARKer<m>:FUNCTION:DEModulation\[:STATe\] <State>](#) (p. 69)
- [CALCulate:MARKer<m>:FUNCTION:DEModulation:HOLDoff <Time>](#) (p. 69)
- [CALCulate:MARKer<m>:FUNCTION:DEModulation:SElect <Demodulation>](#) (p.70)

For a detailed description of commands refer to "Using Markers" in spectrum analyzer mode.

7.7 Remote Commands of the Digital Modulation Analyzer

The chapter provides information on remote commands that configure and perform measurements with the digital modulation analyzer. These commands are available in digital modulation mode only.



Availability of remote commands for the digital modulation analyzer

Note that the listed remote commands take effect only if the corresponding application is installed on the R&S FSH.

7.7.1 Performing Measurements on 3GPP WCDMA signals

When you perform measurements on 3GPP WCDMA signals, you can use the remote commands described in this chapter.



Availability of remote commands

Note that the listed remote commands take effect only if option R&S FSH-K44 is installed.

7.7.1.1 Setting the Frequency

The following commands configure the frequency axis (x-axis) of the active display.

List of commands

- [\[SENSe:\]CHANnel](#) (p. 79)
- [\[SENSe:\]FREQuency:CENTer <Frequency>](#) (p. 34)
- [\[SENSe:\]FREQuency:CENTer:STEP](#) (p. 35)
- [\[SENSe:\]FREQuency:CENTer:STEP:LINK](#) (p. 35)
- [\[SENSe:\]FREQuency:INPut:MODE](#) (p. 36)

For a detailed description of the commands refer to "[Configuring the Horizontal Axis](#)" in spectrum analyzer mode.

7.7.1.2 Setting Amplitude Parameters

The following commands configure the level axis (y-axis) and level parameters of the active display.

List of commands

- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel](#) (p. 40)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel:OFFSet](#) (p. 41)
- [INPut:ATTenuation <Attenuation>](#) (p. 42)
- [INPut:ATTenuation:MODE](#) (p. 42)
- [INPut:ATTenuation:AUTO](#) (p. 42)
- [INPut:GAIN:STATE](#) (p. 43)

For a detailed description of commands not described below refer to "[Configuring the Vertical Axis](#)" in spectrum analyzer mode.

7.7.1.3 Setting the Bandwidths

The following commands configure the filter bandwidths of the R&S FSH. Note that both groups of commands (BANDwidth and BWIDth) are the same.

List of commands:

- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\] <ResBW>](#) (p. 45)
- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:AUTO <State>](#) (p. 46)

For a detailed description of commands refer to "[Setting the Bandwidths](#)" in spectrum analyzer mode.

7.7.1.4 Working with Traces

The following commands set up the trace and the various functions associated with it, e.g. the selection of the detector.

The suffix <t> at TRACe is irrelevant.

List of commands

- [DISPlay\[:WINDow\]:TRACe<t>:MEMory\[:STATE\] <State>](#) (p. 55)
- [DISPlay\[:WINDow\]:TRACe<t>:MODE <TraceMode>](#) (p. 55)
- [DISPlay\[:WINDow\]:TRACe<t>\[:STATE\] <State>](#) (p. 55)

For a detailed description of commands refer to "[Working with Traces](#)" in spectrum analyzer mode.

7.7.1.5 Performing and Triggering the Measurement

The following commands initialize a measurement and set up the sweep.

List of commands

- [*WAI](#) (p. 33)
- [ABORt](#) (p. 47)
- [INITiate\[:IMMediate\]](#) (p. 47)
- [INITiate:CONTinuous](#) <SweepMode> (p. 48)

For a detailed description of commands refer to "[Performing and Triggering Measurements](#)" in spectrum analyzer mode.

7.7.1.6 Using Markers

The following commands control markers. In the 3GPP application, markers are available in the spectrum overview and isotropic antenna result displays only.

List of commands

- [CALCulate<n>:DELTaMarker<m>\[:STATe\] <State>](#) (p. 59)
- [CALCulate<n>:DELTaMarker<m>:AOFF](#) (p. 59)
- [CALCulate<n>:DELTaMarker<m>:MAXimum\[:PEAK\]](#) (p. 60)
- [CALCulate<n>:DELTaMarker<m>:MAXimum:NEXT](#) (p. 60)
- [CALCulate<n>:DELTaMarker<m>:MINimum\[:PEAK\]](#) (p. 60)
- [CALCulate<n>:DELTaMarker<m>:X <Coordinate>](#) (p. 61)
- [CALCulate<n>:DELTaMarker<m>:X:RELative <Distance>](#) (p. 61)
- [CALCulate<n>:MARKer<m>\[:STATe\] <State>](#) (p. 62)
- [CALCulate<n>:MARKer<m>:AOFF](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) (p. 64)
- [CALCulate<n>:MARKer<m>:X <Coordinate>](#) (p. 64)

For a detailed description of commands refer to "[Using Markers](#)" in spectrum analyzer mode.

7.7.1.7 Working with Channel Tables

Use the following commands to work with channel tables.

List of commands

- [\[SENSe:\]CHANnel:TABLE:SElect <ChannelTable>](#) (p. 79)

For a detailed description of commands refer to "[Working with Channel Tables](#)" in spectrum analyzer mode.

7.7.1.8 Selecting the Result Display

The following commands select the result display.

List of commands

- [CALCulate:FEED <ResultDisplay>](#) (p. 156)

CALCulate:FEED <ResultDisplay>

This command selects the result display.

Parameter

<ResultDisplay>

'STAT:LIMits'	Limits
'XPOWer:CPOWer'	Spectrum Overview
'XPOWer:CDPower'	Code Domain Power
'XPOWer:IANTenna'	Isotropic Antenna
'XTIME:CDPower:ERRor:SUMMary'	Result Summary
'XTIME:CDPower:ERRor:CTABle'	Code Domain Channel Table
'XTIME:CDPower:SCODEs'	Scrambling Codes

Example

```
CALC:FEED 'XPOW:CPOW'
```

Selects the spectrum overview result display.

Characteristics

*RST value: 'XTIM:CDP:ERR:SUMM'

SCPI: device-specific

7.7.1.9 Configuring the Measurement

The following commands configure distance-to-fault measurements. To perform the actual measurement, use the commands described in section "[Performing and Triggering the Measurement](#)".

List of commands

- [\[SENSe:\]CDPower:ANTenna](#) (p. 157)
- [\[SENSe:\]CDPower:CODE <Code>](#) (p. 157)
- [\[SENSe:\]CDPower:PREFerence](#) (p. 157)
- [\[SENSe:\]CDPower:SLOT <Slot>](#) (p. 158)

[SENSe:]CDPower:ANTenna <Antenna>

This command selects the antenna diversity for base station measurements with two antennas.

Parameters

<Antenna>

1	synchronizes to antenna 1
2	synchronizes to antenna 2
OFF	turns antenna diversity off for base stations with one antenna

Example

```
CDP:ANT 2
Synchronizes to antenna 2.
```

Characteristics

*RST value: OFF
SCPI: device-specific

[SENSe:]CDPower:CODE <Code>

This command selects the code number.

Parameters

<Code>

Code number in the range from 0 to 511 (based on code class 9).

Example

```
CDP:CODE 3
Selects code 3.
```

Characteristics

*RST value: -
SCPI: device-specific

[SENSe:]CDPower:PREFerence <PowerMode>

This command defines whether the code power is an absolute value or a value related to the power of CPICH.

Parameters

<PowerMode>

ABSolute	absolute code power
CPICH	code power in relation to the CPICH

Example

```
CDP:REF ABS
Displays the code power as absolute values.
```

Characteristics

*RST value: -
 SCPI: device-specific

[SENSe:]CDPower:SLOT <Slot>

This command selects the slot of the P-CPICHs.

Parameters

<Slot>
 Number of the slot in the range from 0 to 14.

Example

```
CDP:SLOT 3
```

Selects slot 3 for the P-CPICH.

Characteristics

*RST value: -
 SCPI: device-specific

7.7.1.10 Determining Scrambling Codes

The following commands determine the scrambling codes for WCDMA measurements.

List of commands

- [\[SENSe:\]CDPower:LCODE:PRIMary](#) (p. 158)
- [\[SENSe:\]CDPower:LCODE:SEARch:AUTO <State>](#) (p. 159)
- [\[SENSe:\]CDPower:LCODE:SEARch\[:IMMediate\]](#) (p. 159)
- [\[SENSe:\]CDPower:LCODE:SEARch:LIST?](#) (p. 159)
- [\[SENSe:\]CDPower:LCODE:SECOndary](#) (p. 160)

[SENSe:]CDPower:LCODE:PRIMary <PrimScrambling>

This command sets the primary scrambling code of the base station used to demodulate the signal.

Parameters

<PrimScrambling>
 numeric value in the range from 0 to 511

Example

```
CDP:LCOD:PRIM 211
```

Sets the primary scrambling code to 211.

Characteristics

*RST value: -
 SCPI: device-specific

[SENSe:]CDPower:LCODE:SEARch:AUTO <State>

This command turns the automatic search for the scrambling code before each sweep on and off.

If successful, the R&S FSH returns the strongest scrambling code it has found and performs the code domain analysis on that code.

Parameters

<State>
ON | OFF

Example

```
CDP:LCOD:SEAR:AUTO ON
```

Turns on the automatic search for scrambling codes.

Characteristics

*RST value: ON
SCPI: device-specific

[SENSe:]CDPower:LCODE:SEARch[:IMMEDIATE]

This command initiates a search for the scrambling code of the current signal. It is possible to detect multiple scrambling codes.

The search routine is able to find primary scrambling codes. Secondary scrambling codes are assumed to be 0. The command does not detect alternative scrambling codes.

The detection range is 0x0000 – 0x1FF0h with the last digit always being 0.

This command is an event and therefore has no *RST value and no query.

Example

```
CDP:LCOD:SEAR
```

Initiates a search for the scrambling code(s).

Characteristics

*RST value: -
SCPI: device-specific

[SENSe:]CDPower:LCODE:SEARch:LIST?

This command returns a list of scrambling codes that have been found during the automatic search.

Note that in order to get a valid list of codes, you have to force a search for scrambling codes with `[SENSe:]CDPower:LCODE:SEARch[:IMMEDIATE]`.

This command is a query and therefore has no default value.

Return values

The command returns three values for each scrambling code that has been found: <decimal scrambling code value>, <hexadecimal scrambling code value>, <power in dBm>, (...)

Note:

The return values are a combination of primary and secondary scrambling codes. The return value for primary code 1, scrambling code 0 would be, for example: 16x<primary code> + <secondary code> = 16 (dec) or 0x10 (hex).

Example

```
CDP:LCOD:SEAR:LIST?
16,0x10,-18.04,32,0x20,-22.87,48,0x30,-27.62,64,0x40,-29.46
```

Queries the found scrambling codes.

Characteristics

*RST value: -
SCPI: device-specific

[SENSe:]CDPower:LCODE:SECOndary <SecSrambling>

This command sets the secondary scrambling code of the base station used to demodulate the signal.

Parameters

<SecScrambling>
numeric value in the range from 0 to 15

Example

```
CDP:LCOD:SEC 8
```

Sets the secondary scrambling code to 8.

Characteristics

*RST value: -
SCPI: device-specific

7.7.1.11 Performing a Channel Search

The following commands control a channel search.

List of commands

- [\[SENSe:\]CDPower:CSEarch\[:STATe\] <State>](#) (p. 161)

[SENSe:]CDPower:CSEarch[:STATe] <State>

This command turns a channel search on and off.

The command takes effect only if you have selected the Result Summary result display. All other result displays automatically select the channel search state as required.

Parameters

<State>
ON | OFF

Example

```
CDP:CSE ON
```

Turns on the automatic channel search.

Characteristics

*RST value: ON
SCPI: device-specific

7.7.1.12 Using An Isotropic Antenna

This chapter describes all commands available to set up measurements with an isotropic antenna.

List of commands

- [\[SENSe:\]CORRection:TRANsducer<t>:ISOTropic\[:STATe\]? \(p. 105\)](#)
- [\[SENSe:\]CORRection:TRANsducer<c>\[:STATe\] <State> \(p. 44\)](#)
- [\[SENSe:\]CORRection:TRANsducer<c>:SELEct <TransducerFactor> \(p. 44\)](#)

7.7.1.13 Getting Measurement Results

The following commands retrieve the results of the current measurement.

The suffix <m> at MARKer is irrelevant.

List of commands

- [CALCulate:MARKer<m>:FUNction:WCDPower\[:BTS\]:RESult? \(p. 161\)](#)
- [TRACe\[:DATA\] <Trace> \(p. 163\)](#)

CALCulate:MARKer<m>:FUNction:WCDPower[:BTS]:RESult? <Result>

This command queries the measurement results.

This command is a query and therefore has no *RST value.

Parameter

<Result>

ACHannels	queries the number of active channels ¹⁾
ARCDerror	queries the average RCDE ¹⁾
CPECi0	queries the Ec/Io value of the P-CPICH
CPEVm	queries the EVM of the P-CPICH
CPPower	queries the power of the P-CPICH
FERRor	queries the carrier frequency error
IQImbalance	queries the gain imbalance ¹⁾
IQOffset	queries the I/Q offset ¹⁾
ICPPower	queries the power of the P-CPICH (x-, y- and z-direction and RMS value of the three) ³⁾
IPTotal	queries the total power of the signal (x-, y- and z-direction and RMS value of the three) ³⁾
ISCFound	queries the scrambling codes found (x-, y- and z-direction) ³⁾
MACCuracy	queries the composite EVM ¹⁾
PCDerror	queries the peak code domain error ¹⁾
PCECi0	queries the Ec/Io value of the P-CCPCH
PCEVm	queries the EVM of the P-CCPCH
PCPower	queries the power of the P-CCPCH
PSPower	queries the power of the P-SCH
PTOTAL	queries the total power of the signal (RF channel power)
SCFound	queries the scrambling code found ²⁾
SSPower	queries the power of the S-SCH

¹⁾ only if channel search is on

²⁾ only if automatic scrambling code search is on

³⁾ only for measurements with an isotropic antenna

Return value

One value for every parameter.

The unit depends on the result you have queried.

Example

```
CALC:MARK:FUNC:WCDP:RES PTOT
```

Queries the total power of the signal.

Characteristics

*RST value: -

SCPI: device-specific

TRACe[:DATA] <Trace>

This command queries the measurement results.

Parameter

CWCDp | TRACE1

Return value (for CWCDp)

The R&S FSH returns a set of values for each active code channel in ascending order.

<SpreadingFactor>, <CodeNumber>, <PowerAbs>, <PowerRel>, <TOffset>, <CodeChannelPilotLength>, <ChannelState>, <ChannelType>, <Modulation>, <Reserved>, ...

CWCDp is available for the Channel Table and Code Domain Power result display.

Return value (for TRACE1)

The return values depend on the selected result display:

- Spectrum Overview and Isotropic Antenna

The R&S FSH returns 631 values. Each value corresponds to one pixel of the trace.

Scrambling Codes

The R&S FSH returns 3 values for every code found.

<decimal scrambling code value>, <hexadecimal scrambling code value>, <power in dBm>, ...

For more information see [\[SENSe:\]CDPower:LCODE:SEARCH:LIST?](#).

- Result Summary

The R&S FSH returns the contents of the Result Summary. The order of the values is as follows.

<TotalPower>, <CarrFreqError>, <CompositeEVM>, <PeakCDE>, <IQOffset>, <IQImbalance>, <ActiveChannels>, <AverageRCDE>, <PowerCPICH>, <EVMCPICH>, <PowerPCCPCH>, <EVMPCCPCH>, <PowerPSCH>, <PowerSSCH>, <SCFound>

The command returns '1.#QNAN' if a result could not be calculated (e.g. if the channel search is off).

- Code Domain Power

The R&S FSH returns a set of values for each active code channel in ascending order.

<SpreadingFactor>, <CodeNumber>, <PowerAbs>, <PowerRel>, <TOffset>

- Code Domain Channel Table

The R&S FSH returns a set of values for each active code channel. The channels are sorted by their spreading factor and code number in ascending order. The first two results are always the P-SCH and the S-SCH.

<SpreadingFactor>,<CodeNumber>,<PowerAbs>,<PowerRel>,<TOffset>

A '-1' indicates that no result could be found (e.g. for SCH channels that are not spread and therefore don't have a spreading factor or code number).

For more information see "[Return Value Codes](#)" on page 165.

Characteristics

*RST value: -
SCPI: conform

7.7.1.14 Analyzing Measurement Results

These commands control various functions to analyze measurement results.

List of commands

- [UNIT:EVM <Unit>](#) (p. 164)
- [UNIT:FERRor <Unit>](#) (p. 164)

UNIT:EVM <Unit>

This command selects the unit for EVM values.

Parameter

<Unit>
DB | PCT

Example

```
UNIT:EVM DB
```

All EVM results are in dB.

Characteristics

*RST value: -
SCPI: device-specific

UNIT:FERRor <Unit>

This command selects the unit for the frequency error.

Parameter

<Unit>
HZ | PPM

Example

```
UNIT:EVM HZ
```

Frequency error is in Hz.

Characteristics

*RST value: -
 SCPI: device-specific

7.7.1.15 Return Value Codes

This chapter contains a list for encoded return values.

<ChannelType>

0	DPCH
1	PICH
2	C-PICH
3	P-SCH
4	S-SCH
5	P-CCPCH
6	S-CCPCH
7	HS-SCCH
8	HS-PDSCH
9	CHAN (unrecognized channel type)
10	CPRSD
11	CPR-TPC
12	CPR-SF/2
13	CPR-SF/2-TPC
14	EHICH-ERGCH
15	EAGCH
16	S-CPICH

<Channel State>

0	Inactive
1	Active

<Modulation>

2	QPSK
4	16QAM
5	64QAM
15	NONE

7.7.2 Performing Measurements on CDMA2000 Signals

When you perform measurements on CDMA2000 signals, you can use the remote commands described in this chapter.



Availability of remote commands

Note that the listed remote commands take effect only if option R&S FSH-K46(E) is installed.

7.7.2.1 Setting the Frequency

The following commands configure the frequency axis (x-axis) of the active display.

List of commands

- [\[SENSe:\]CHANnel](#) (p. 79)
- [\[SENSe:\]FREQUency:CENTer <Frequency>](#) (p. 34)
- [\[SENSe:\]FREQUency:CENTer:STEP](#) (p. 35)
- [\[SENSe:\]FREQUency:CENTer:STEP:LINK](#) (p. 35)
- [\[SENSe:\]FREQUency:MODE](#) (p. 36)
- [\[SENSe:\]FREQUency:SPAN](#) (p. 37)
- [\[SENSe:\]FREQUency:SPAN:AUTO <State>](#) (p. 37)
- [\[SENSe:\]FREQUency:STARt <StartFrequency>](#) (p. 38) (available as query only)
- [\[SENSe:\]FREQUency:STOP <StopFrequency>](#) (p. 38) (available as query only)

For a detailed description of the commands refer to "[Configuring the Horizontal Axis](#)" in spectrum analyzer mode.

7.7.2.2 Setting Amplitude Parameters

The following commands configure the vertical axis and level parameters of the active display.

List of commands

- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel](#) (p. 40)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel:OFFSet](#) (p. 41)
- [INPut:ATTenuation <Attenuation>](#) (p. 42)
- [INPut:ATTenuation:MODE](#) (p. 42)
- [INPut:ATTenuation:AUTO](#) (p. 42)
- [INPut:GAIN:STATe](#) (p. 43)
- [INPut:IMPedance](#) (p. 43) (available as query only)

For a detailed description of commands not described below refer to "[Configuring the Vertical Axis](#)" in spectrum analyzer mode.

7.7.2.3 Setting the Bandwidths

The following commands configure the filter bandwidths of the R&S FSH. Note that both groups of commands (BANDwidth and BWIDth) are the same.

List of commands:

- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\] <ResBW>](#) (p. 45)
- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:AUTO <State>](#) (p. 46)

For a detailed description of commands refer to "[Setting the Bandwidths](#)" in spectrum analyzer mode.

7.7.2.4 Working with Traces

The following commands set up the trace and the various functions associated with it, e.g. the selection of the detector.

The suffix <t> at TRACe is irrelevant.

List of commands

- [DISPlay\[:WINDow\]:TRACe<t>:MEMory\[:STATe\] <State>](#) (p. 55)
- [DISPlay\[:WINDow\]:TRACe<t>:MODE <TraceMode>](#) (p. 55) (available as query only)
- [DISPlay\[:WINDow\]:TRACe<t>\[:STATe\] <State>](#) (p. 55)

For a detailed description of commands refer to "[Working with Traces](#)" in spectrum analyzer mode.

7.7.2.5 Performing and Triggering the Measurement

The following commands initialize a measurement and set up the sweep.

List of commands

- [*WAI](#) (p. 33)
- [ABORt](#) (p. 47)
- [INITiate\[:IMMediate\]](#) (p. 47)
- [INITiate:CONTinuous <SweepMode>](#) (p. 48)
- [TRIGger\[:SEQuence\]:SLOPe <TriggerSlope>](#) (p. 52)
- [TRIGger\[:SEQuence\]:SOURce](#) (p. 168)

For a detailed description of commands refer to "[Performing and Triggering Measurements](#)" in spectrum analyzer mode.

TRIGger[:SEquence]:SOURce <TriggerSource>

This command sets the type of trigger the R&S FSH uses.

Parameter

<TriggerSource>

IMMediate	free run
EXTernal	external trigger
GPSsync	GPS trigger

For more information see [TRIGger\[:SEquence\]:SOURce <TriggerSource>](#) and the operating manual.

7.7.2.6 Using Markers

The following commands control markers. In the CDMA2000 application, markers are available in the spectrum overview and isotropic antenna only.

List of commands

- [CALCulate<n>:DELTaMarker<m>\[:STATe\] <State>](#) (p. 59)
- [CALCulate<n>:DELTaMarker<m>:AOFF](#) (p. 59)
- [CALCulate<n>:DELTaMarker<m>:MAXimum\[:PEAK\]](#) (p. 60)
- [CALCulate<n>:DELTaMarker<m>:MAXimum:NEXT](#) (p. 60)
- [CALCulate<n>:DELTaMarker<m>:MINimum\[:PEAK\]](#) (p. 60)
- [CALCulate<n>:DELTaMarker<m>:X <Coordinate>](#) (p. 61)
- [CALCulate<n>:DELTaMarker<m>:X:RELative <Distance>](#) (p. 61)
- [CALCulate<n>:MARKer<m>\[:STATe\] <State>](#) (p. 62)
- [CALCulate<n>:MARKer<m>:AOFF](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) (p. 64)
- [CALCulate<n>:MARKer<m>:X <Coordinate>](#) (p. 64)

For a detailed description of commands refer to "Using Markers" in spectrum analyzer mode.

7.7.2.7 Working with Channel Tables

Use the following commands to work with channel tables.

List of commands

- [\[SENSe:\]CHANnel:TABLE:SElect <ChannelTable>](#) (p. 79)

For a detailed description of commands refer to "Working with Channel Tables" in spectrum analyzer mode.

7.7.2.8 Selecting the Result Display

The following commands select the result display.

List of commands

- [CALCulate:FEED <ResultDisplay>](#) (p. 169)

CALCulate:FEED <ResultDisplay>

This command selects the result display.

Parameter

<ResultDisplay>

'XPOWer:CPOWer'	Spectrum Overview
'XPOWer:CDPOWer'	Code Domain Power
'XPOWer:PNSCan'	PN Scanner
'XTIMe:CDPOWer:ERRor:SUMMery'	Result Summary
'XTIMe:CDPOWer:ERRor:CTABle'	Code Domain Channel Table

Example

```
CALC:FEED 'XPOW:CPOW'
```

Selects the spectrum overview result display.

Characteristics

*RST value: 'XTIM:CDP:ERR:SUMM'

SCPI: device-specific

7.7.2.9 Configuring the Measurement

The following commands configure measurements on CDMA2000 signals.

List of commands

- [\[SENSe:\]CDPower:CODE <Code>](#) (p. 170)
- [\[SENSe:\]CDPower:ORDeR <CodeOrder>](#) (p. 170)
- [\[SENSe:\]CDPower:PNOffseT <PNOffset>](#) (p. 170)
- [\[SENSe:\]CDPower:PNOffseT:AUTO](#) (p. 171)
- [\[SENSe:\]CDPower:PREFeRence <Reference>](#) (p. 171)
- [\[SENSe:\]CDPower:SFAcToR <SpreadingFactor>](#) (p. 171)
- [CALCulate:MARKer<m>:FUNcTion:CPOWer:BANDwidth <Bandwidth>](#) (p. 85)
(available as query only)

[SENSe:]CDPower:CODE <Code>

This command selects a particular code.

Parameter

<Code>

Code number in the range from 0 to 63 or 127, depending on the spreading factor.

Example

```
CDP:CODE 10
```

Selects code number 10.

Characteristics

*RST value: 0

SCPI: device-specific

[SENSe:]CDPower:ORDER <CodeOrder>

This command selects the code order.

Parameter

<CodeOrder>

HADamard | BITReverse

Example

```
CDP:ORD BITR
```

Selects BitReverse code order.

Characteristics

*RST value: HADamard

SCPI: device-specific

[SENSe:]CDPower:PNOFset <PNOffset>

This command sets the PN offset of the base station.

Parameter

<PNOffset>

numeric value in the range from 0 to 511

Example

```
CDP:PNOF 100
```

Sets a PN offset of 100

Characteristics

*RST value: 0

SCPI: device-specific

[SENSe:]CDPower:PNOffset:AUTO

This command automatically determines the PN offset of the base station.

This command is an event and therefore has no *RST value and no query.

Example

```
CDP:PNOF:AUTO
Initializes a search for the PN offset.
```

Characteristics

*RST value: -
SCPI: device-specific

[SENSe:]CDPower:PREference <Reference>

This command selects the reference power for relative results.

Parameter

<Reference>

PICH	results are relative to the power of the pilot channel
TOTAL	results are relative to the total power of the signal

Example

```
CDP:PREF:TOT
Relative results are related to the total signal power.
```

Characteristics

*RST value: TOTAL
SCPI: device-specific

[SENSe:]CDPower:SFActor <SpreadingFactor>

This command selects the spreading factor.

Parameter

<SpreadingFactor>

64 | 128

Example

```
CDP:SFAC:128
Selects a spreading factor of 128
```

Characteristics

*RST value: 64
SCPI: device-specific

7.7.2.10 Getting Measurement Results

The following commands read out measurement results of CDMA2000 measurements.

- [CALCulate:MARKer:FUNCTION:CDPower\[:BTS\]:RESult? <Result>](#) (p. 172)
- [CALCulate:MARKer:FUNCTION:PNScan:LIST?](#) (p. 172)
- [TRACe<t>\[:DATAJ?\]](#) (p. 173)

CALCulate:MARKer:FUNCTION:CDPower[:BTS]:RESult? <Result>

This command reads out results of the result summary.

Parameter

<Result>

ACTive	queries the number of active channels
FERPm	queries the carrier frequency error in ppm
FERRor	queries the carrier frequency error in Hz
MACCuracy	queries the composite EVM
PNFound	queries the PN that was found
PAverage	queries the peak to average level
PTOTAL	queries the total power of the signal
RHO	queries Rho
TAU	queries Tau

Return values

The return values are the results as displayed in result summary.

Example

```
CALC:MARK:FUNC:CDP:RES? RHO
```

Returns the result for Rho.

Characteristics

*RST value: -
SCPI: device-specific

CALCulate:MARKer:FUNCTION:PNScan:LIST?

This command returns the results of the PN scanner.

This command is a query and therefore has no default value.

Return value

Returns two values for every PN that was found:

```
<PNOffser>,<PNOffsetPower>
```

```
<PNOffset>          PN offset
```

```
<PNOffsetPower>    power of the PN offset
```

Example

CALC:MARK:FUNC:PNSC:LIST?
 Queries the results of the PN scanner.

Characteristics

*RST value: -
 SCPI: device-specific

TRACe<t>[:DATA]?

This command queries the measurement results.

Parameter

TRACE1 | CDCTable

Return value (for CDCTable)

The R&S FSH returns a set of values for each active code channel in ascending order.

<ChannelType>,<CodeClass>,<CodeNumber>,<RadioConfiguration>,
 <PowerAbs>,<PowerRel>,<SymbolRate>,<Reserved>,<Reserved>,...

<SpreadingFactor>,<CodeNumber>,<PowerAbs>,<PowerRel>,<TOffset>,
 <CodeChannelPilotLength>,<ChannelState>,<ChannelType>,<Modulation>,
 <Reserved>,...

For the two <Reserved> values, the command always returns '9'.

CDCTable is available for the Channel Table result display.

Return value (for TRACE1)

The return values depend on the selected result display:

- Spectrum overview

The R&S FSH returns 631 values. Each value corresponds to one pixel of the trace.

- Result Summary

The R&S FSH returns the contents of the Result Summary in the following order.

<TotalPower>,<Rho>,<ActiveChannels>,<CompositeEVM>,<PeakToAverage>,
 <Tau>,<CarrFreqError>,<PilotPower>,<PilotPowerRelToTotal>,<SyncPower>,
 <SyncPowerRelToTotal>,<SyncPowerRelToPilot>,<PilotPowerRelToPilot>,
 <PNFound>

- Code Domain Power

The R&S FSH returns three values for all active codes.

<CodeClass>,<CodeNumber>,<CodePower>,...

- Code Domain Channel Table

The R&S FSH returns five values for all active channels.

<ChannelType>,<CodeClass>,<CodeNumber>,<RadioConfiguration>,
<AbsolutePower>,<RelativePower>,<Reserved>,<Reserved>,...

For the two <Reserved> values, the command always returns '9'.

For more information see "[Return Value Codes](#)" on page 174.

Characteristics

*RST value: -

SCPI: conform

7.7.2.11 Return Value Codes

This chapter contains a list for encoded return values.

<RadioConfiguration>

0	no radio configuration detected
1	radio configuration 1 - 2
2	radio configuration 3 - 5

7.7.3 Performing Measurements on 1xEV-DO Signals

When you perform measurements on 1xEV-DO signals, you can use the remote commands described in this chapter.



Availability of remote commands

Note that the listed remote commands take effect only if option R&S FSH-K47 is installed.

7.7.3.1 Setting the Frequency

The following commands configure the frequency axis (x-axis) of the active display.

List of commands

- [\[SENSe:\]CHANnel](#) (p. 79)
- [\[SENSe:\]FREQuency:CENTer <Frequency>](#) (p. 34)
- [\[SENSe:\]FREQuency:CENTer:STEP](#) (p. 35)
- [\[SENSe:\]FREQuency:INPut:MODE](#) (p. 36)
- [\[SENSe:\]FREQuency:SPAN](#) (p. 37)
- [\[SENSe:\]FREQuency:SPAN:AUTO <State>](#) (p. 37)
- [\[SENSe:\]FREQuency:STARt <StartFrequency>](#) (p. 38) (available as query only)
- [\[SENSe:\]FREQuency:STOP <StopFrequency>](#) (p. 38) (available as query only)

For a detailed description of the commands refer to "[Configuring the Horizontal Axis](#)" in spectrum analyzer mode.

7.7.3.2 Setting Amplitude Parameters

The following commands configure the vertical axis and level parameters of the active display.

List of commands

- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel](#) (p. 40)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel:OFFSet](#) (p. 41)
- [INPut:ATTenuation <Attenuation>](#) (p. 42)
- [INPut:ATTenuation:MODE](#) (p. 42)
- [INPut:ATTenuation:AUTO](#) (p. 42)
- [INPut:GAIN:STATe](#) (p. 43)
- [INPut:IMPedance](#) (p. 43) (available as query only)

For a detailed description of commands not described below refer to "[Configuring the Vertical Axis](#)" in spectrum analyzer mode.

7.7.3.3 Setting the Bandwidths

The following commands configure the filter bandwidths of the R&S FSH. Note that both groups of commands (BANDwidth and BWIDth) are the same.

List of commands:

- [SENSe:]BANDwidth|BWIDth[:RESolution] <ResBW> (p. 45) (available as query only)
- [SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO <State> (p. 46)

For a detailed description of commands refer to "Setting the Bandwidths" in spectrum analyzer mode.

7.7.3.4 Working with Traces

The following commands set up the trace and the various functions associated with it, e.g. the selection of the detector.

List of commands

- DISPlay[:WINDow]:TRACe<t>:MEMory[:STATe] <State> (p. 55)
- DISPlay[:WINDow]:TRACe<t>:MODE <TraceMode> (p. 55) (available as query only)
- DISPlay[:WINDow]:TRACe<t>[:STATe] <State> (p. 55)

For a detailed description of commands refer to "Working with Traces" in spectrum analyzer mode.

7.7.3.5 Performing and Triggering the Measurement

The following commands initialize a measurement and set up the sweep.

List of commands

- *WAI (p. 33)
- ABORt (p. 47)
- INITiate[:IMMediate] (p. 47)
- INITiate:CONTinuous <SweepMode> (p. 48)
- TRIGger[:SEQuence]:SLOPe <TriggerSlope> (p. 52)
- TRIGger[:SEQuence]:SOURce (p. 168)

For a detailed description of commands refer to "Performing and Triggering Measurements" in spectrum analyzer mode.

TRIGger[:SEquence]:SOURce <TriggerSource>

This command sets the type of trigger the R&S FSH uses.

Parameter

<TriggerSource>

IMMediate	free run
EXTernal	external trigger
GPSsync	GPS trigger

For more information see [TRIGger\[:SEquence\]:SOURce <TriggerSource>](#) and the operating manual.

7.7.3.6 Using Markers

The following commands control markers. In the 1xEV-DO application, markers are available in the spectrum overview only.

For a detailed description of commands refer to "[Using Markers](#)" in spectrum analyzer mode.

List of commands

- [CALCulate<n>:DELTamarker<m>\[:STATe\] <State>](#) (p. 59)
- [CALCulate<n>:DELTamarker<m>:AOFF](#) (p. 59)
- [CALCulate<n>:DELTamarker<m>:MAXimum\[:PEAK\]](#) (p. 60)
- [CALCulate<n>:DELTamarker<m>:MAXimum:NEXT](#) (p. 60)
- [CALCulate<n>:DELTamarker<m>:MINimum\[:PEAK\]](#) (p. 60)
- [CALCulate<n>:DELTamarker<m>:X <Coordinate>](#) (p. 61)
- [CALCulate<n>:DELTamarker<m>:X:RELative <Distance>](#) (p. 61)
- [CALCulate<n>:MARKer<m>\[:STATe\] <State>](#) (p. 62)
- [CALCulate<n>:MARKer<m>:AOFF](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) (p. 64)
- [CALCulate<n>:MARKer<m>:X <Coordinate>](#) (p. 64)

For a detailed description of commands refer to "[Using Markers](#)" in spectrum analyzer mode.

7.7.3.7 Working with Channel Tables

Use the following commands to work with channel tables.

List of commands

- [\[SENSe:\]CHANnel:TABLE:SElect <ChannelTable>](#) (p. 79)

For a detailed description of commands refer to "[Working with Channel Tables](#)" in spectrum analyzer mode.

7.7.3.8 Selecting the Result Display

Use the following commands to select the result display.

List of commands

- [CALCulate:FEED <ResultDisplay>](#) (p. 178)

CALCulate:FEED <ResultDisplay>

This command selects the result display.

Parameter

<ResultDisplay>

'XPOWer:CPOWer'	Spectrum Overview
'XPOWer:BURSt'	Burst Power
'XPOWer:PNsCan'	PN Scanner
'XTIME:CDPower:ERRor:SUMMery'	Result Summary

Example

```
CALC:FEED 'XPOW:CPOW'
```

Selects the spectrum overview result display.

Characteristics

*RST value: 'XTIM:CDP:ERR:SUMM'

SCPI: device-specific

7.7.3.9 Configuring the Measurement

The following commands configure measurements on 1xEV-DO signals.

List of commands

- [\[SENSe:\]CDPower:PNOffset <PNOFset>](#) (p. 178)
- [\[SENSe:\]CDPower:PNOffset:AUTO <PNOFset>](#) (p. 179)
- [\[SENSe:\]CDPower:PREference <Reference>](#) (p. 179)

[SENSe:]CDPower:PNOffset <PNOFset>

This command sets the PN offset of the base station.

Parameter

<PNOFset>

numeric value in the range from 0 to 511

Example

```
CDP:PNOF 100
```

Sets a PN offset of 100

Characteristics

*RST value: 0
 SCPI: device-specific

[SENSe:]CDPower:PNOFfset:AUTO <PNOFset>

This command automatically determines the PN offset of the base station.

This command is an event and therefore has no *RST value and no query.

Example

```
CDP:PNOF:AUTO
```

Initializes a search for the PN offset.

Characteristics

*RST value: -
 SCPI: device-specific

[SENSe:]CDPower:PREFference <Reference>

This command selects the reference power for relative results.

Parameter

<Reference>

PICH	results are relative to the power of the pilot channel
TOTAL	results are relative to the total power of the signal

Example

```
CDP:PREF:TOT
```

Relative results are related to the total signal power.

Characteristics

*RST value: TOTAL
 SCPI: device-specific

7.7.3.10 Getting Measurement Results

The following commands read out measurement results of 1xEV-DO measurements.

- [CALCulate:MARKer:FUNCTion:CDPower\[:BTS\]:RESult? <Result>](#) (p. 179)
- [CALCulate:MARKer:FUNCTion:PNScan:LIST?](#) (p. 180)
- [TRACe:DATA?](#) (p. 181)

CALCulate:MARKer:FUNCTion:CDPower[:BTS]:RESult? <Result>

This command reads out results of the result summary.

Parameter

<Result>

EVMPilot	queries the EVM of the pilot channel in %
FERRor	queries the carrier frequency error in Hz
FERPpm	queries the carrier frequency error in ppm
PNFound	queries the PN that was found
PAverage	queries the peak to average level
PDATA	queries the power of the pilot channel
PMAC	queries the power of the MAC channel
PPILot	queries the power of the data channel
PTOTAL	queries the total power of the signal
RHOPilot	queries Rho
TACTivity	queries the traffic activity in %
TAU	queries Tau

Return values

The return values are the results as displayed in result summary.

Example

```
CALC:MARK:FUNC:CDP:RES? RHOP
```

Returns the result for Rho.

Characteristics

*RST value: -
SCPI: device-specific

CALCulate:MARKer:FUNCtion:PNSCan:LIST?

This command queries the results of the PN scanner.

This command is a query and therefore has no default value.

Return value

Returns two values for every PN that was found:

<PNOffset>,<PNOffsetPower>

<PNOffset> PN offset

<PNOffsetPower> power of the PN offset

Example

```
CALC:MARK.FUNC:PNSC:LIST?
```

Queries the results of the PN scanner.

Characteristics

*RST value: -
SCPI: device-specific

TRACe:DATA?

This command queries the measurement results.

Return value

The return values depend on the selected result display:

- Spectrum Overview

The R&S FSH returns 631 values. Each value corresponds to one pixel of the trace.

- Result Summary

The R&S FSH returns the contents of the Result Summary in the following order.

<TotalPower>,<PeakToAverage>,<CarrFreqError>,<PNFound>,<Tau>,
<Traffic>,<PilotPower>,<PilotPowerRelToTotal>,<PilotPowerRelToPilot>,
<EVM>,<Rho>,<MACPower>,<MACPowerRelToTotal>,
<MACPowerRelToPilot>,<DataPower>,<DataPowerRelToTotal>,
<DataPowerRelToPilot>

Characteristics

*RST value: -
SCPI: conform

7.7.4 Performing Measurements on TD-SCDMA Signals

When you perform measurements on LTE signals, you can use the remote commands described in this chapter.



Availability of remote commands

Note that the listed remote commands take effect only if option R&S FSH-K48 is installed.

7.7.4.1 Setting the Frequency

The following commands configure the frequency axis (x-axis) of the active display.

List of commands

- [\[SENSe:\]CHANnel](#) (p. 79)
- [\[SENSe:\]FREQUency:CENTer <Frequency>](#) (p. 34)
- [\[SENSe:\]FREQUency:CENTer:STEP](#) (p. 35)
- [\[SENSe:\]FREQUency:INPut:MODE](#) (p. 36)
- [\[SENSe:\]FREQUency:SPAN](#) (p. 37)
- [\[SENSe:\]FREQUency:SPAN:AUTO <State>](#) (p. 37)
- [\[SENSe:\]FREQUency:STARt <StartFrequency>](#) (p. 38) (available as query only)
- [\[SENSe:\]FREQUency:STOP <StopFrequency>](#) (p. 38) (available as query only)

For a detailed description of the commands refer to "[Configuring the Horizontal Axis](#)" in spectrum analyzer mode.

7.7.4.2 Setting Amplitude Parameters

The following commands configure the vertical axis and level parameters of the active display.

List of commands

- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel](#) (p. 40)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel:OFFSet](#) (p. 41)
- [INPut:ATTenuation <Attenuation>](#) (p. 42)
- [INPut:ATTenuation:MODE](#) (p. 42)
- [INPut:ATTenuation:AUTO](#) (p. 42)
- [INPut:GAIN:STATe](#) (p. 43)
- [INPut:IMPedance](#) (p. 43) (available as query only)

For a detailed description of commands not described below refer to "[Configuring the Vertical Axis](#)" in spectrum analyzer mode.

7.7.4.3 Setting the Bandwidths

The following commands configure the filter bandwidths of the R&S FSH. Note that both groups of commands (BANDwidth and BWIDth) are the same.

List of commands:

- [SENSe:]BANDwidth|BWIDth[:RESolution] <ResBW> (p. 45) (available as query only)
- [SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO <State> (p. 46)

For a detailed description of commands refer to "Setting the Bandwidths" in spectrum analyzer mode.

7.7.4.4 Working with Traces

The following commands set up the trace and the various functions associated with it, e.g. the selection of the detector.

List of commands

- DISPlay[:WINDow]:TRACe<t>:MEMory[:STATe] <State> (p. 55)
- DISPlay[:WINDow]:TRACe<t>:MODE <TraceMode> (p. 55) (available as query only)
- DISPlay[:WINDow]:TRACe<t>[:STATe] <State> (p. 55)

For a detailed description of commands refer to "Working with Traces" in spectrum analyzer mode.

7.7.4.5 Performing and Triggering the Measurement

The following commands initialize a measurement and set up the sweep.

List of commands

- *WAI (p. 33)
- ABORt (p. 47)
- INITiate[:IMMediate] (p. 47)
- INITiate:CONTInuous <SweepMode> (p. 48)

For a detailed description of commands refer to "Performing and Triggering Measurements" in spectrum analyzer mode.

7.7.4.6 Using Markers

The following commands control markers. In the TD-SCDMA application, markers are available in the spectrum overview only.

List of commands

- CALCulate<n>:DELTaMarker<m>[:STATe] <State> (p. 59)
- CALCulate<n>:DELTaMarker<m>:AOFF (p. 59)

- [CALCulate<n>:DELTaMarker<m>:MAXimum\[:PEAK\]](#) (p. 60)
- [CALCulate<n>:DELTaMarker<m>:MAXimum:NEXT](#) (p. 60)
- [CALCulate<n>:DELTaMarker<m>:MINimum\[:PEAK\]](#) (p. 60)
- [CALCulate<n>:DELTaMarker<m>:X <Coordinate>](#) (p. 61)
- [CALCulate<n>:DELTaMarker<m>:X:RELative <Distance>](#) (p. 61)
- [CALCulate<n>:MARKer<m>\[:STATe\] <State>](#) (p. 62)
- [CALCulate<n>:MARKer<m>:AOFF](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) (p. 63)
- [CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) (p. 64)
- [CALCulate<n>:MARKer<m>:X <Coordinate>](#) (p. 64)

For a detailed description of commands refer to "Using Markers" in spectrum analyzer mode.

7.7.4.7 Working with Channel Tables

Use the following commands to work with channel tables.

List of commands

- [\[SENSe:\]CHANnel:TABLE:SElect <ChannelTable>](#) (p. 79)

For a detailed description of commands refer to "Working with Channel Tables" in spectrum analyzer mode.

7.7.4.8 Selecting the Result Display

The following commands select the result display.

List of commands

- [CALCulate:FEED <ResultDisplay>](#) (p. 184)

CALCulate:FEED <ResultDisplay>

This command selects the result display.

Parameter

<ResultDisplay>

'XPOWer:CPOWer' Spectrum Overview

'XTIME:CDPower:ERRor:SUMMary' Result Summary

Example

```
CALC:FEED 'XPOW:CPOW'
```

Selects the spectrum overview result display.

Characteristics

*RST value: 'XTIM:CDP:ERR:SUMM'

SCPI: device-specific

7.7.4.9 Configuring the Measurement

The following commands configure measurements on CDMA2000 signals.

List of commands

- [\[SENSe:\]CDPower:MSHift <Shifts>](#) (p. 185)
- [\[SENSe:\]CDPower:PSWitch <SwitchPoint>](#) (p. 185)
- [\[SENSe:\]CDPower:SCODE <ScramblingCode>](#) (p. 185)
- [\[SENSe:\]CDPower:SLOT <Slot>](#) (p. 186)

[SENSe:]CDPower:MSHift <Shifts>

This command defines the number of midamble shifts.

Parameter

<Shifts>

2 | 4 | 6 | 8 | 10 | 12 | 14 | 16

Example

```
CDP:MSH 8
Defines 8 midamble shifts.
```

Characteristics

*RST value: 16
SCPI: device-specific

[SENSe:]CDPower:PSWitch <SwitchPoint>

This command defines the switching point between uplink and downlink.

Parameter

<SwitchPoint>

Number of the slot in the TD-SCDMA subframe that serves as the switching point. The range is from 0 to 7.

Example

```
CDP:PSW 3
Defines slot 3 as the switching point.
```

Characteristics

*RST value: 6
SCPI: device-specific

[SENSe:]CDPower:SCODE <ScramblingCode>

This command defines the scrambling code of the base station.

Parameter

<ScramblingCode>

Numeric value in the range from 0 to 127.

Example

CDP:PSW 10
 Defines the scrambling code 10.

Characteristics

*RST value: 0
 SCPI: device-specific

[SENSe:]CDPower:SLOT <Slot>

This command selects the slot to be analyzed.

Parameter

<Slot>
 Numeric value in the range from 0 to 6.

Note that you can only select slots used for the downlink. The availability depends on the location of the switching point.

Example

CDP:SLOT 2
 Selects slot number 2.

Characteristics

*RST value: 0
 SCPI: device-specific

7.7.4.10 Getting Measurement Results

The following commands read out measurement results of TD-SCDMA measurements.

List of commands

- [CALCulate:MARKer<m>:FUNction:CDPower\[:BTS\]:RESult? <Result>](#) (p. 186)
- [TRACe:DATA <Trace>](#) (p. 187)

CALCulate:MARKer<m>:FUNction:CDPower[:BTS]:RESult? <Result>

This command queries the measurement results.

This command is a query and therefore has no *RST value.

Parameter

<Result>

FERRor	queries the carrier frequency error
PCEV/m	queries the EVM of the P-CCPCH (slot 0)
PD1	queries the power of the data 1 part in a slot

PD2	queries the power of the data 2 part in a slot
PDATA	queries the power of both data parts in a slot
PMIDamble	queries the power of the midamble part in a slot
PTOTAL	queries the total power of the signal (RF channel power)

Return value

One value for every parameter.

The unit depends on the result you have queried.

Example

```
CALC:MARK:FUNC:CDP:RES PTOT
```

Queries the total power of the signal.

Characteristics

*RST value: -
 SCPI: device-specific

TRACe:DATA <Trace>

This command queries the measurement results.

Parameter

TRACE1

Return value (for TRACE1)

The return values depend on the selected result display:

- Spectrum Overview

The R&S FSH returns 631 values. Each value corresponds to one pixel of the trace.

- Result Summary

The R&S FSH returns the contents of the Result Summary. The order of the values is as follows.

```
<TotalPower>,<CarrFreqError>,<PCCPCH_EVM>,<DataPower>,  

<Data1Power>,<Data2Power>,<MidamblePower>
```

The command returns '-200' if a result could not be calculated (e.g. if the channel search is off).

7.7.5 Performing Measurements on LTE Signals

When you perform measurements on LTE signals, you can use the remote commands described in this chapter.



Availability of remote commands

Note that the listed remote commands take effect only if options R&S FSH-K50 or -K51 are installed.

7.7.5.1 Setting the Frequency

The following commands configure the frequency axis (x-axis) of the active display.

List of commands

- [\[SENSe:\]CHANnel](#) (p. 79)
- [\[SENSe:\]FREQuency:CENTer <Frequency>](#) (p. 34)
- [\[SENSe:\]FREQuency:INPut:MODE](#) (p. 36)

For a detailed description of the commands refer to "[Configuring the Horizontal Axis](#)" in spectrum analyzer mode.

7.7.5.2 Setting Amplitude Parameters

The following commands configure the vertical axis and level parameters of the active display.

List of commands

- [CONFigure:POWer:EXPEcted:RF <RefLevel>](#) (p. 188)
- [DISPlay\[:WINDow\]:TRACe<t>:Y\[:SCALe\]:RLEVel:OFFSet <Offset>](#) (p. 41)
- [INPut:ATTenuation <Attenuation>](#) (p. 42)
- [INPut:ATTenuation:AUTO](#) (p. 42)
- [INPut:ATTenuation:MODE](#) (p. 42)
- [INPut:GAIN:STATe](#) (p. 43)

CONFigure:POWer:EXPEcted:RF <RefLevel>

This command sets the reference level.

Parameter

<ReferenceLevel>

numeric value that sets the reference level; the unit is dBm.

The available value range is specified in the data sheet.

Characteristics

*RST value: -20 dBm

SCPI: device-specific

7.7.5.3 Performing and Triggering the Measurement

The following commands initialize a measurement and set up the sweep.

List of commands

- [*WAI](#) (p. 33)
- [ABORt](#) (p. 47)
- [INITiate\[:IMMediate\]](#) (p. 47)
- [INITiate:CONTinuous](#) <SweepMode> (p. 48)

For a detailed description of commands refer to "[Performing and Triggering Measurements](#)" in spectrum analyzer mode.

7.7.5.4 Selecting the Result Display

Use the following commands to select the result display.

List of commands

- [CALCulate:FEED](#) <Result Display> (p. 189)

CALCulate:FEED <Result Display>

This command selects the result display.

Parameter

<ResultDisplay>

'CONS:CONS'	Constellation Diagram
'SPEC:IANTenna'	Isotropic Antenna
'SPEC:PSPE'	Spectrum Overview
'SPEC:PVSR'	Resource Allocations
'STAT:SCAN'	BTS Scanner
'STAT:LIMits'	Limits
'STAT:RSUM'	Result Summary

Characteristics

*RST value: 'STAT:RSUM'
 SCPI: device-specific

7.7.5.5 Configuring the Measurement

The following commands configure measurements on LTE signals.

List of commands

- [CONFigure\[:LTE\]:DL:BW <Bandwidth>](#) (p. 190)
- [CONFigure\[:LTE\]:DL:CSUBframes <Subframes>](#) (p. 191)
- [CONFigure\[:LTE\]:DL:CYCPrefix <Prefix>](#) (p. 191)
- [CONFigure\[:LTE\]:DL:MIMO:ASElection <Antenna>](#) (p. 191)
- [CONFigure\[:LTE\]:DL:MIMO:CONFig <Configuration>](#) (p. 192)
- [CONFigure\[:LTE\]:DL:NORB <ResourceBlocks>](#) (p. 192)
- [CONFigure\[:LTE\]:DL:PLCI:CIDNtity <CellID>](#) (p. 192)
- [CONFigure\[:LTE\]:DL:PLCI:CIDGroup <GroupID>](#) (p. 193)
- [CONFigure\[:LTE\]:DL:PLCI:PLID <Identity>](#) (p. 193)
- [CONFigure\[:LTE\]:DL:TDD:UDConfig <Configuration>](#) (p. 193)
- [\[SENSe\]\[:LTE\]:DL:DEMod:EVM:ASTD <State>](#) (p. 194)
- [\[SENSe\]\[:LTE\]:DL:DEMod:SYNCh <SyncSignal>](#) (p. 194)
- [UNIT:CFE <Unit>](#) (p. 194)
- [UNIT:EVM](#) (p. 195)

CONFigure[:LTE]:DL:BW <Bandwidth>

This command selects the channel bandwidth of the signal.

Note that changing the channel bandwidth will also change the number of resource blocks.

Parameter

<Bandwidth>

BW1_40	1.40 MHz
BW3_00	3 MHz
BW5_00	5 MHz
BW10_00	10 MHz
BW15_00	15 MHz
BW20_00	20 MHz

Characteristics

*RST value: BW10_00

SCPI: device-specific

CONFigure[:LTE]:DL:CSUBframes <Subframes>

This command defines the number of subframes included in the LTE signal.

Parameter

<Subframes>

numeric value in the range from 1 to 10.

Characteristics

*RST value: 10

SCPI: device-specific

CONFigure[:LTE]:DL:CYCPrefix <Prefix>

This command selects the cyclic prefix mode.

Parameter

<Prefix>

NORM normal cyclic prefix

EXT extended cyclic prefix

AUTO automatic detection of the cyclic prefix

Characteristics

*RST value: AUTO

SCPI: device-specific

CONFigure[:LTE]:DL:MIMO:ASElection <Antenna>

This command selects the antenna under test in a MIMO setup.

Parameter

<Antenna>

ANT1 measurement on antenna 1

ANT2 measurement on antenna 2

ALL measurement on all antennas

Characteristics

*RST value: ALL

SCPI: device-specific

CONFigure[:LTE]:DL:MIMO:CONFig <Configuration>

This command selects the MIMO configuration.

Parameter

<Configuration>

TX1 one antenna setup

TX2 two antenna setup

TX4 four antenna setup

Characteristics

*RST value: TX1

SCPI: device-specific

CONFigure[:LTE]:DL:NORB <ResourceBlocks>

This command selects the number of resource blocks.

Note that changing the number of resource blocks will also change the channel bandwidth.

Parameter

<ResourceBlocks>

6, 15, 25, 50, 75, 100

Characteristics

*RST value: 50

SCPI: device-specific

CONFigure[:LTE]:DL:PLCI:CIDNtity <CellID>

This command defines the identity of the cell under test.

Note that the R&S FSH automatically calculates the cell ID if you define a cell identity group and a physical layer cell identity.

Parameter

<AUTO>

The R&S FSH automatically determines the cell ID.

<CellID>

Manual selection of the cell ID. Numeric value in the range from 0 to 503.

Characteristics

*RST value: AUTO

SCPI: device-specific

CONFigure[:LTE]:DL:PLCI:CIDGroup <GroupID>

This command defines the cell identity group.

Parameter

<AUTO>

The R&S FSH automatically determines the cell identity group.

<GroupID>

Manual selection of the cell ID group. Numeric value in the range from 0 to 167.

Characteristics

*RST value: AUTO

SCPI: device-specific

CONFigure[:LTE]:DL:PLCI:PLID <Identity>

This command defines the physical layer identity.

Parameter

<AUTO>

The R&S FSH automatically determines the identity.

<Identity>

Manual selection of the identity. Numeric value in the range from 0 to 2.

Characteristics

*RST value: AUTO

SCPI: device-specific

CONFigure[:LTE]:DL:TDD:UDConfig <Configuration>

This command selects the UL and DL configuration that defines the order of allocations used inside a subframe.

Parameter

<Configuration>

numeric value from 0 to 6

The number corresponds to the number the configuration (e.g. '2' selects subframe configuration 2).

Characteristics

*RST value: 0

SCPI: device-specific

[SENSe][:LTE]:DL:DEMod:EVM:ASTD <State>

This command turns the calculation of the EVM according to the standard on and off.

Parameter

<State>
ON | OFF

Characteristics

*RST value: OFF
SCPI: device-specific

[SENSe][:LTE]:DL:DEMod:SYNCh <SyncSignal>

This command selects the synchronization signal.

Parameter

<SyncSignal>

AUTO	automatically selects the synchronization signal
PSYN	synchronization signal is the PSYNC and SYNC
REFS	synchronization signal is the synchronization signal if the cell ID is known.

Characteristics

*RST value: ALL
SCPI: device-specific

UNIT:CFE <Unit>

This command sets the unit for the carrier frequency error result.

Parameter

<Unit>
HZ | PPM

Characteristics

*RST value: OFF
SCPI: device-specific

UNIT:EVM

This command sets the unit for the EVM results.

Parameter

<Unit>

DB | PCT

Characteristics

*RST value: OFF

SCPI: device-specific

7.7.5.6 Getting Measurement Results

The following commands read out measurement results of LTE measurements.

- [FETCh:CYCPrefix?](#) (p. 195)
 - [FETCh:PLCI:CIDNtity?](#) (p. 196)
 - [FETCh:PLCI:CIDGroup?](#) (p. 196)
 - [FETCh:PLCI:PLID?](#) (p. 196)
 - [FETCh:SUMMARY:POWER?](#) (p. 196)
 - [FETCh:SUMMARY:FERRor?](#) (p. 197)
 - [FETCh:SUMMARY:IQOFset?](#) (p. 197)
 - [FETCh:SUMMARY:EVM?](#) (p. 197)
 - [FETCh:SUMMARY:EVM:<modulation>?](#) (p. 197)
 - [FETCh:SUMMARY:EVM:<channel>?](#) (p. 198)
 - [FETCh:SUMMARY:EVM:RSIGNAL? <Antenna>](#) (p. 198)
 - [FETCh:SUMMARY:OSTP?](#) (p. 199)
 - [FETCh:SUMMARY:POWER:<modulation>?](#) (p. 199)
 - [FETCh:SUMMARY:POWER:<channel>?](#) (p. 199)
 - [FETCh:SUMMARY:POWER:RSIGNAL? <Antenna>](#) (p. 200)
 - [FETCh:SUMMARY:POWER:SYNCsignal](#) (p. 200)
 - [FETCh:SUMMARY:TRAFfic](#) (p. 200)
- [Using the TRACe\[:DATA\] Command](#) (p. 200)

FETCh:CYCPrefix?

This command queries the cyclic prefix mode if automatic cyclic prefix detection has been turned on with `CONFigure[:LTE]:DL:CYCPrefix AUTO`.

Return value

EXT extended cyclic prefix

NORM normal cyclic prefix

Characteristics

*RST value: -

SCPI: device-specific

FETCh:PLCI:CIDNtity?

This command queries the cell identity.

Return value

<CellIdentity>
Number between 0 and 503.

Characteristics

*RST value: -
SCPI: device-specific

FETCh:PLCI:CIDGroup?

This command queries the cell identity group.

Return value

<CellIdentityGroup>
Number between 0 and 167.

Characteristics

*RST value: -
SCPI: device-specific

FETCh:PLCI:PLID?

This command queries the physical layer ID.

Return value

<ID>
Number between 0 and 2.

Characteristics

*RST value: -
SCPI: device-specific

FETCh:SUMMArY:POWer?

This command queries the total power of the signal.

Return value

<Power>
Total power in dBm.

Characteristics

*RST value: -
SCPI: device-specific

FETCh:SUMMary:FERRor?

This command queries the carrier frequency error.

Return value

<FrequencyError>

Frequency error. The unit is either kHz or ppm, depending on [UNIT:CFE](#).

Characteristics

*RST value: -

SCPI: device-specific

FETCh:SUMMary:IQOffset?

This command queries the I/Q offset.

Return value

<Offset>

I/Q offset in dB.

Characteristics

*RST value: -

SCPI: device-specific

FETCh:SUMMary:EVM?

This command queries the overall EVM.

Return value

<EVM>

EVM in dB or %. The unit depends on [UNIT:EVM](#).

Characteristics

*RST value: -

SCPI: device-specific

FETCh:SUMMary:EVM:<modulation>?

This command queries the EVM for resource elements with a particular modulation scheme in the signal.

Replace <modulation> syntax part with

DSQP for the EVM of QPSK modulated signal parts

DSST for the EVM of 16QAM modulated signal parts

DSSF for the EVM of 64QAM modulated signal parts

Return value

<EVM>

EVM in dB or %. The unit depends on [UNIT:EVM](#).

Characteristics

*RST value: -
SCPI: device-specific

FETCh:SUMMary:EVM:<channel>?

This command queries the EVM for resource elements of a particular channel.

Replace the <channel> syntax with

PSYNc	for the EVM of the PSYNC channel
SSYNc	for the EVM of the SSYNC channel
PBCH	for the EVM of the PBCH
PCFich	for the EVM of the PCFICH

Return value

<EVM>
EVM in dB or %. The unit depends on [UNIT:EVM](#).

Characteristics

*RST value: -
SCPI: device-specific

FETCh:SUMMary:EVM:RSIGnal? <Antenna>

This command queries the EVM of the reference signal.

Parameter

ANT1 | ANT2 | ANT3 | ANT4
Selects a particular antenna (1 to 4) to query the EVM for.

If you do not add a parameter, the command returns

- the currently displayed reference signal EVM (single antenna measurements)
- the reference signal EVM of TX1 (over-the-air measurements)

Return value

<EVM>
EVM in dB or %. The unit depends on [UNIT:EVM](#).

Characteristics

*RST value: -
SCPI: device-specific

FETCh:SUMMary:OSTP?

This command queries the OSTP.

Return value

<OSTP>
OSTP in dBm.

Characteristics

*RST value: -
SCPI: device-specific

FETCh:SUMMary:POWer:<modulation>?

This command queries the power of resource elements with a particular modulation scheme.

Replace <modulation> syntax part with

DSQP	for the EVM of QPSK modulated signal parts
DSST	for the EVM of 16QAM modulated signal parts
DSSF	for the EVM of 64QAM modulated signal parts

Return value

<Power>
Power in dBm.

Characteristics

*RST value: -
SCPI: device-specific

FETCh:SUMMary:POWer:<channel>?

This command queries the power for resource elements of a particular channel.

Replace the <channel> syntax with

PSYNc	for the EVM of the PSYNC channel
SSYNc	for the EVM of the SSYNC channel
PBCH	for the EVM of the PBCH
PCFIch	for the EVM of the PCFICH

Return value

<Power>
Power in dBm.

Characteristics

*RST value: -
SCPI: device-specific

FETCh:SUMMary:POWer:RSIGnal? <Antenna>

This command queries the power of the reference signal.

Parameter

ANT1 | ANT2 | ANT3 | ANT4

Selects a particular antenna (1 to 4) to query the EVM for.

If you do not add a parameter, the command returns

- the currently displayed reference signal power (single antenna measurements)
- the reference signal power of TX1 (over-the-air measurements)

Return value

<Power>

Power in dBm.

Characteristics

*RST value: -

SCPI: device-specific

FETCh:SUMMary:POWer:SYNCsignal

This command queries the power of the synchronization signal.

Return value

<Power>

Power in dBm.

Characteristics

*RST value: -

SCPI: device-specific

FETCh:SUMMary:TRAFfic

This command queries the traffic activity.

Return value

<Activity>

Traffic activity in %.

Characteristics

*RST value: -

SCPI: device-specific

7.7.5.7 Using the TRACe[:DATA] Command

The TRACe[:DATA] command queries the trace data or results of the currently active measurement or result display. The type, number and structure of the return values are specific for each result display.

The format of the return values is either in ASCII or binary characters and depends on the format you have set with `FORMat [:DATA] <DataFormat>`.

Result Summary

The command returns the contents of the result summary. The number and type of return values depend on the antenna settings.

MIMO 2x2 Connected to TX1 and SISO Measurement

```
<ChannelPower>,<CellIdentity>,<CellGroup>,<CellID>,<CompositeEVM>,<CyclicPrefix>,<CarrierFreqError>,<Traffic>,<SyncSignalPower>,<IQOffset>,<RefSignalPowerAnt1>,<RefSignalEVMAnt1>,<PSYNCPower>,<PSYNC_EVM>,<QPSKPower>,<QPSK_EVM>,<SSYNCPower>,<SSYNC_EVM>,<16QAMPower>,<16QAM_EVM>,<PBCHPower>,<PBCH_EVM>,<64QAMPower>,<64QAM_EVM>,<PCFICHPower>,<PCFICH_EVM>
```

MIMO 2x2 Connected to TX2

```
<ChannelPower>,<CellIdentity>,<CellGroup>,<CellID>,<CompositeEVM>,<CyclicPrefix>,<CarrierFreqError>,<Traffic>,<SyncSignalPower>,<IQOffset>,<RefSignalPowerAnt2>,<RefSignalEVMAnt2>,<PSYNCPower>,<PSYNC_EVM>,<QPSKPower>,<QPSK_EVM>,<SSYNCPower>,<SSYNC_EVM>,<16QAMPower>,<16QAM_EVM>,<PBCHPower>,<PBCH_EVM>,<64QAMPower>,<64QAM_EVM>,<PCFICHPower>,<PCFICH_EVM>
```

MIMO 2x2 Over-the-Air

```
<ChannelPower>,<CellIdentity>,<CellGroup>,<CellID>,<CompositeEVM>,<CyclicPrefix>,<CarrierFreqError>,<Traffic>,<SyncSignalPower>,<RefSignalPowerAnt1>,<RefSignalEVMAnt1>,<RefSignalPowerAnt2>,<RefSignalEVMAnt2>
```

MIMO 4x4 Over-the-Air

```
<ChannelPower>,<CellIdentity>,<CellGroup>,<CellID>,<CompositeEVM>,<CyclicPrefix>,<CarrierFreqError>,<Traffic>,<SyncSignalPower>,<RefSignalPowerAnt1>,<RefSignalEVMAnt1>,<RefSignalPowerAnt2>,<RefSignalEVMAnt2>,<RefSignalPowerAnt3>,<RefSignalEVMAnt3>,<RefSignalPowerAnt4>,<RefSignalEVMAnt4>
```

The unit of the EVM results depends on `UNIT:EVM`.

Spectrum Overview and Isotropic Antenna

The command returns 631 values. Each value corresponds to one pixel of the trace.

Resource Allocations

The command returns the power in dBm of all data resource blocks, beginning with the lowest carrier in the first subframe.

BTS Scanner

For each cell, the command returns seven values.

<CellIdentity1>,<CellGroup1>,<CellID1>,<PSYNCPower1>,<SSYNCPower1>,
<Reserved>,<Reserved>,...

Characteristics

*RST value: -

SCPI: conform

7.8 File Management

The following commands perform various tasks in the context of file management.

These commands are independent from the operating mode.

List of commands

- [MMEMory:CATalog?](#) (p. 203)
- [MMEMory:CATalog:DIRectories?](#) (p. 204)
- [MMEMory:CDIRectory <Directory>](#) (p. 204)
- [MMEMory:COpy <SourceFile>, <DestinationFile>](#) (p. 204)
- [MMEMory:DATA <FileName>\[, <BlockData>\]](#) (p. 205)
- [MMEMory:DELeTe <File>](#) (p. 206)
- [MMEMory:FILE <File>](#) (p. 206)
- [MMEMory:FILE:DATE <FileName>, <Date>](#) (p. 206)
- [MMEMory:FILE:TIME <FileName>, <Time>](#) (p. 207)
- [MMEMory:INIT](#) (p. 207)
- [MMEMory:LOAD:STATe 1, <FileName>](#) (p. 208)
- [MMEMory:MDIRectory <Directory>](#) (p. 208)
- [MMEMory:MOVE <SourceFile>, <NewFileName>](#) (p. 208)
- [MMEMory:RDIRectory <Directory>](#) (p. 209)
- [MMEMory:STORe:STATe 1, <FileName>](#) (p. 209)

MMEMory:CATalog?

This command queries the files of the current directory.

You can select directories with [MMEMory:CDIRectory <Directory>](#).

This command is a query and therefore has no *RST value.

Return value

<UsedDiskSpace>, <FreeDiskSpace>, <FileName_1>, <SizeFile_1> <ModificationDateFile_1>, <ModificationTimeFile_1>, ..., <FileName_n>, <SizeFile_n> <ModificationDateFile_n>, <ModificationTimeFile_n>

Example

```
MMEM:CDIR '\Public\Limit Lines'
```

Opens directory 'Limit Lines'

```
MMEM:CAT?
```

Returns all files in \Public\Limit Lines

Characteristics

*RST value: -

SCPI: conform

MMEMory:CATalog:DIRectories?

This command queries the directories of the current directory.

This command is a query and therefore has no *RST value.

Return value

<UsedMemory>,<FreeMemory>,<DirName_1>,<ModificationDateDir_1>,
<ModificationTimeDir_1>,...,<DirName_n>,<ModificationDateDir_n>,
<ModificationTimeDir_n>

Example

```
MMEM:CDIR '\Public'
```

Opens directory \Public.

```
MMEM:CAT:DIR?
```

Returns all directories in the \Public directory

Characteristics

*RST value: -

SCPI: device-specific

MMEMory:CDIRectory <Directory>

This command changes the current directory.

Parameter

<Directory>

String containing the path to another directory.

Example

```
MMEM:CDIR '\Public'
```

Opens directory \Public.

Characteristics

*RST value: -

SCPI: conform

MMEMory:COPY <SourceFile>,<DestinationFile>

This command copies one or more files to another directory.

This command is an event and therefore has no *RST value and no query.

Parameter

<SourceFile>

String containing the path and file name of the source file.

<DestinationFile>

String containing the path and name of the destination file.

Example

```
MMEM: COPY
'\Public\Standards\cdmaOne.obwstd', '\USB\cdmaOne.std'
```

Copies the cdmaOne standard file file to a memory stick.

Characteristics

*RST value: -
SCPI: conform

MMEMory:DATA <FileName>[,<BlockData>]

This command writes block data into a file. The delimiter must be set to EOI to obtain error-free data transfer.

When you query the contents of a file, you can save them in a file on the remote control computer.

The command is useful for reading stored settings files or trace data from the instrument or for transferring them to the instrument.

Parameter

<FileName>

String containing the path and file name.

<BlockData>

Data block with the structure

hash sign

<number> length of the length information

<number> length information of the binary data (number of bytes)

<data> binary data with the indicated number of bytes

Example

```
MMEM: NAME '\Public\User\Testfile.txt'
```

Creates a new file called 'Testfile.txt'.

```
MMEM: DATA '\Public\User\Testfile.txt', #220
```

Contents of the file

The parameter mean:

- '\Public\...' selects the target file
- #2: hash sign and length of the length information (20 bytes = 2 digits)
- 20: indicates the number of subsequent binary data bytes
- Contents of the file: store 20 binary bytes (characters) to the file

```
MMEM: DATA? '\Public\User\Testfile.txt'
```

Transfers the contents of the file 'Testfile.txt' to the control computer.

Characteristics

*RST value: -
SCPI: conform

MMEMory:DELeTe <File>

This command deletes a file.

Parameter

<File>

String containing the path and file name of the file to delete.

Example

```
MMEM:DEL '\Public\Screen Shots\Screen0001.png'
```

Deletes the file Screen0001.png.

Characteristics

*RST value: -
SCPI: conform

MMEMory:FILE <File>

This command creates a file.

Parameter

<File>

String containing the file name.

Example

```
MMEM:FILE 'TEST.TXT'
```

Creates the file TEST.TXT

Characteristics

*RST value: -
SCPI: conform

MMEMory:FILE:DATE <FileName>,<Date>

This command sets the date of a file.

Parameter

<FileName>

String containing the path and file name.

<Date>

Numeric values indicating the date

You have to enter the date as comma separated values after the string with the file name. The sequence is year,month,day.

The available value range is 1980...2099, 1...12, 1...31

Example

```
MMEM:FILE:DATE '\Public\Screen  
Shots\Screen0001.png', 2006, 04, 01
```

Sets the date to April, 1st, 2006.


```
MMEM:FILE:DATE? '\Public\Screen Shots\Screen0001.png'
```

Returns the modification date of the file Screen0001.png.

Characteristics

*RST value: -
SCPI: conform

MMEMory:FILE:TIME <FileName>,<Time>

This command sets the time of a file. The sequence of entry is hour, minute, second.

Parameter

<FileName>
String containing the path and file name.

<Time>
Numeric values indicating the time.

You have to enter the time as comma separated values after the string with the file name. The sequence is hour,minute,second.

The available value range is 0...23, 0...59, 0...59.

Example

```
MMEM:FILE:TIME '\Public\Screen Shots\Screen0006.png',11,04,00
```

Sets the time to 11:04:00

Characteristics

*RST value: -
SCPI: conform

MMEMory:INIT

This command formats the indicated drive.

Note

Formatting deletes all data stored on the memory drive.

This command is an event and therefore has no *RST value and no query.

Example:

```
MMEM:INIT
```

Formats and deletes all data from the drive.

Characteristics:

*RST value: -
SCPI: conform

MMEMory:LOAD:STATe 1,<FileName>

This command loads the settings from a *.set file.

Parameter

<FileName>

String containing the path and file name.

Example

```
MMEM:LOAD:STAT 1, '\Public\Datasets\Dataset001.set'
```

Loads the settings from the file Dataset001.

Example

```
MMEM:LOAD:STAT 1, 'D:\USER\TEST01.SET'
```

Loads the settings from the file TEST01.

Characteristics

*RST value: -
SCPI: conform

MMEMory:MDIRectory <Directory>

This command creates a new directory.

This command is an event and therefore has no *RST value and no query.

Parameter

<Directory>

String containing the path and new directory name.

Example

```
MMEM:MDIR '\Public\USER'
```

Creates the a directory called 'User'

Characteristics

*RST value: -
SCPI: device-specific

MMEMory:MOVE <SourceFile>,<NewFileName>

This command renames files, if <file_destination> contains no path. Otherwise the file is moved to the indicated path and stored under the file name specified there.

This command is an event and therefore has no *RST value and no query.

Parameter

<SourceFile>

String containing the path and file name of the source file.

<DestinationFile>

String containing the path and name of the destination file.

Example

```
MMEM:MOVE '\Public\Screen
Shots\Screen0002.png', '\Public\Screen Shots\Screen0001.png'
Renames Screen0002.png to Screen0001.png
```

```
MMEM:MOVE '\Public\Screen
Shots\Screen0001.png', '\Public\Test\Pic1.png'
Moves file Screen0006.png to the 'Test' folder and renames the file Pic1.png
```

Characteristics

*RST value: -
SCPI: conform

MMEMory:RDIRECTory <Directory>

This command deletes the indicated directory. The directory name includes the path and may also include the drive name. The path name complies with DOS conventions.

This command is an event and therefore has no *RST value and no query.

Parameter

<Directory>
String containing the path of the directory to delete.

Example

```
MMEM:RDIR '\Public\Screen Shots\
Deletes the directory 'Screen Shots'.
```

Characteristics

*RST value: -
SCPI: device-specific

MMEMory:STORe:STATe 1,<FileName>

This command stores the current device settings in a *set file.

This command is an event and therefore has no *RST value and no query.

Parameter

1,<FileName>
String containing the path and name of the destination file.

Example

```
MMEM:STOR:STAT 1, 'DATASET001.SET'
Saves the current device settings in the file DATASET001.SET.
```

Characteristics

*RST value: -
SCPI: conform

7.9 Making and Storing Screenshots

The following commands manage screenshots.

These commands are independent from the operating mode.

List of commands

- [HCOPY\[:IMMEDIATE\]](#) (p. 210)
- [MMEMory:NAME <FileName>](#) (p. 210)

HCOPY[:IMMEDIATE]

This command makes a screenshot of the current trace and stores it on the R&S FSH internal memory.

This command is an event and therefore has no *RST value and no query.

Example

```
MMEM:NAME '\Public\Screenshots\Test.png'
```

Defines the file name of the screenshot.

```
HCOP
```

Makes and stores a screenshot of the current screen.

Characteristics

*RST value: -

SCPI: device-specific

MMEMory:NAME <FileName>

This command defines the path and file name that the R&S FSH uses for storing screenshots (see [HCOPY\[:IMMEDIATE\]](#)). The path and file name comply with DOS conventions.

This command is an event and therefore has no *RST value and no query.

Parameter

<FileName>

String containing the file name.

Example

```
MMEM:NAME 'Public\Screenshots\Test.png'
```

Stores the screenshot under D:\Test

Characteristics

*RST value: -

SCPI: device-specific

7.10 Configuring the Instrument

The following commands configure general instrument settings.

These commands are independent from the operating mode.

Contents

[Mode Selection](#) on page 211

[Controlling the GPS Receiver](#) on page 213

[Display Configuration](#) on page 216

[Audio Settings](#) on page 218

[Setting up a Network Connection](#) on page 219

[System Settings](#) on page 221

7.10.1 Mode Selection

This chapter describes all commands that select the operating mode of the R&S FSH.

List of commands

- [INSTrument\[:SElect\] <OperatingMode>](#) (p. 211)
- [INSTrument:NSElect <OperatingMode>](#) (p. 212)

INSTrument[:SElect] <OperatingMode>

This command selects the operating mode.

Parameter

<OperatingMode>

DTF	distance-to-fault
NAN	network analyzer
PM	power meter
RECeiver	receiver
SANalyzer	spectrum analyzer
BTDScdma	digital modulation: TD-SCDMA
BWCDpower	digital modulation: WCDMA
C2K	digital modulation: CDMA2000
BDO	digital modulation: 1xEV-DO
LTEFdd	digital modulation: LTE FDD
LTETdd	digital modulation: LTE TDD

Example

```
INST SAN
Selects spectrum analyzer mode.
```

Characteristics

*RST value: ACT
SCPI: conform

INSTrument:NSElect <OperatingMode>

This command selects the operating mode.

Parameter

1	spectrum analyzer
2	network analyzer
4	distance-to-fault
5	power meter
7	digital modulation: WCDMA
8	digital modulation: CDMA2000
9	digital modulation: 1xEV-DO
10	digital modulation: LTE FDD
11	digital modulation: LTE TDD
12	digital modulation: TD-SCDMA

Example

```
INST:NSEL 1
Selects spectrum analyzer mode.
```

Characteristics

*RST value: 4
SCPI: conform

7.10.2 Controlling the GPS Receiver

This chapter describes all commands that control the GPS receiver.

List of commands

- [SYSTem:POSition:ALTitude?](#) (p. 213)
- [SYSTem:POSition:GPS\[:STATe\] <State>](#) (p. 213)
- [SYSTem:POSition:GPS:CONNected?](#) (p. 214)
- [SYSTem:POSition:GPS:CORRection:FREQUency?](#) (p. 214)
- [SYSTem:POSition:GPS:QUALity](#) (p. 214)
- [SYSTem:POSition:GPS:SATellites?](#) (p. 215)
- [SYSTem:POSition:LATitude?](#) (p. 215)
- [SYSTem:POSition:LONGitude?](#) (p. 215)
- [SYSTem:POSition:VALid?](#) (p. 216)

SYSTem:POSition:ALTitude?

This command queries the altitude of the current position of the R&S FSH.

<altitude>

Altitude in meters above sea level.

If the GPS receiver is inactive, this query returns 0.

Example

```
SYST:POS:ALT?
```

Return value would be, for example, 554.1

Characteristics:

*RST value: -

SCPI: device-specific

SYSTem:POSition:GPS[:STATe] <State>

This command turns the GPS receiver (R&S HA-Z240) on and off.

Note that the GPS receiver only works if a connection between the R&S FSH and a GPS signal transmitter is established.

Parameter

<State>

ON | OFF

Example

```
SYST:POS:GPS ON
```

Activates the GPS receiver.

Characteristics:

*RST value: OFF

SCPI: device-specific

SYSTem:POSition:GPS:CONNected?

This command queries if the R&S FSH is currently connected to the GPS receiver.

Return values

0	no connection to a satellite
1	connection to a satellite established

Example

```
SYST:POS:GPS:CONN?
```

Characteristics:

*RST value: -
SCPI: device-specific

SYSTem:POSition:GPS:CORRection:FREQuency?

This command queries the frequency correction factor.

The R&S FSH calculates this factor from a reference signal provided by the GPS receiver R&S HA-Z240. The reference signal is used to determine the deviation of the internal clock of the instrument. The deviation can be turned into a correction factor for the measured frequency.

Return values

<floating point value>

If the GPS receiver is inactive, this query returns 0.

Example

```
SYST:POS:GPS:CORR:FREQ?
```

Queries the frequency correction factor.

Characteristics:

*RST value: -
SCPI: device-specific

SYSTem:POSition:GPS:QUALity?

This command queries the quality of the GPS signal.

Return values

INSufficient | LOW | MEDium | HIGH | EXCellent

Example

```
SYST:POS:GPS:QUAL?
```

Characteristics:

*RST value: -
SCPI: device-specific

SYSTem:POSition:GPS:SATellites?

This command queries the number of tracked satellites.

Return values

<number of satellites>

Example

```
SYST:POS:GPS:SAT?
```

Characteristics:

*RST value: -

SCPI: device-specific

SYSTem:POSition:LATitude?

This command queries the latitude of the current position of the R&S FSH.

Return values

<sign><degrees>,<minutes>,<seconds>

<sign> no sign = northern hemisphere
negative sign (-) = southern hemisphere

<degrees> degrees of latitude (integer value)

<minutes> minutes of latitude (integer value)

<seconds> seconds of latitude (floating point value)

Example

```
SYST:POS:LAT?
```

Return value would be, for example, 48,7,40.0 for 48°, 7', 40.0" in the northern hemisphere.

Characteristics:

*RST value: -

SCPI: device-specific

SYSTem:POSition:LONGitude?

This command queries the longitude of the current position of the R&S FSH.

Return values

<sign><degrees>,<minutes>,<seconds>

<sign> no sign = east
negative sign (-) = west

<degrees> degrees of longitude (integer value)

<minutes> minutes of longitude (integer value)

<seconds> seconds of longitude (floating point value)

Example

```
SYST:POS:LONG?
```

Return value would be, for example, 11,36,46.2 for 11°, 36', 46.2" East

Characteristics:

*RST value: -

SCPI: device-specific

SYSTem:POSition:VALid?

This command queries if the current position is valid.

Return values

0	GPS position is not valid
1	GPS position is valid

Example

```
SYST:POS:VAL?
```

Characteristics:

*RST value: -

SCPI: device-specific

7.10.3 Display Configuration

This chapter describes commands to set up the display of the R&S FSH via remote control.

List of Commands

- [DISPlay:BRIGhtness <Brightness>](#) (p. 216)
- [DISPlay:CMAP <ColorScheme>](#) (p. 217)
- [DISPlay:CMAP:DEFault](#) (p. 217)
- [DISPlay:DATE:FORMat <DateFormat>](#) (p. 217)

DISPlay:BRIGhtness <Brightness>

This command sets the brightness of the display backlight.

Parameter

<Brightness>

Numeric value in the range from 0 to 1

Example

```
DISP:BRIG 0.80
```

Sets the brightness of the display to 80%

Characteristics

*RST value: 0.5 (50%)

SCPI: device-specific

DISPlay:CMAP <ColorScheme>

This command sets the color scheme of the display.

Parameter

<ColorScheme>

COLor	color
BW	black & white
PF	printer friendly

Example

```
DISP:CMAP BW
```

Sets the screen colors to black and white

Characteristics

*RST value: COLor
SCPI: conform

DISPlay:CMAP:DEFault

This command sets the display to the default state.

This command is an event and therefore has no query and no *RST value.

Example

```
DISP:CMAP:DEF
```

Restores the original color scheme

Characteristics

*RST value: -
SCPI: conform

DISPlay:DATE:FORMat <DateFormat>

This command sets the display date format.

Parameter

<DateFormat>
DDMMyyyy | MMDDyyyy

Example

```
DISP:DATE:FORM DDMMyyyy
```

Characteristics

*RST value: DDMMyyyy
SCPI: device-specific

7.10.4 Audio Settings

This chapter describes all commands to control the audio functions of the R&S FSH.

List of commands

- [SYSTem:AUDio:VOLume <Volume>](#) (p. 218)
- [SYSTem:BEEPer:VOLume <Volume>](#) (p. 218)
- [SYSTem:BEEPer:KEY:VOLume <Volume>](#) (p. 218)

SYSTem:AUDio:VOLume <Volume>

This command sets the volume of the internal speaker.

Parameter

<Volume>
Numeric value in the range from 0 to 1

Example

```
SYST:AUD:VOL 0.40  
Sets the volume to 40%
```

Characteristics

*RST value: 0.3 (30%)
SCPI: device-specific

SYSTem:BEEPer:VOLume <Volume>

This command sets the volume of the system beeper.

Parameter

<Volume>
Numeric value in the range from 0 to 1

Example

```
SYST:BEEP:VOL 0.50  
Sets the volume of the beeper to 50%
```

Characteristics

*RST value: 0.6 (60%)
SCPI: conform

SYSTem:BEEPer:KEY:VOLume <Volume>

This command sets the volume of the keyboard click noise.

Parameter

<Volume>
Numeric value in the range from 0 to 1

Example

```
SYST:BEEP:KEY:VOL 0.10
```

Sets of keyboard clicking volume to 10%

Characteristics

*RST value: 0.3 (30%)
SCPI: conform

7.10.5 Setting up a Network Connection

This chapter describes all commands that are used if the R&S FSH is part of a network.

List of commands

- [SYSTem:COMMunicate:LAN:ETHernet?](#) (p. 219)
- [SYSTem:COMMunicate:LAN:GATeway <Gateway>](#) (p. 219)
- [SYSTem:COMMunicate:LAN:SUBMask <SubnetMask>](#) (p. 220)
- [SYSTem:COMMunicate:SOCKet:ADDRess <IPAddress>](#) (p. 220)
- [SYSTem:COMMunicate:SOCKet:DHCP\[:STATe\] <State>](#) (p. 220)
- [SYSTem:COMMunicate:SOCKet:PORT <Port>](#) (p. 221)

SYSTem:COMMunicate:LAN:ETHernet?

This command queries the MAC address of the R&S FSH.

This command is a query and therefore has no *RST value.

Example

```
SYST:COMM:LAN:ETH?
```

Returns the MAC address

Characteristics

*RST value: -
SCPI: device-specific

SYSTem:COMMunicate:LAN:GATeway <Gateway>

This command sets the gateway in the LAN.

Parameter

<Gateway>
String containing the identifier of the gateway.

Characteristics

*RST value: -
SCPI: device-specific

SYSTem:COMMunicate:LAN:SUBMask <SubnetMask>

This command sets the subnet mask of the R&S FSH.

Parameter

<SubnetMask>

String containing the subnet mask ('x.x.x.x').

Example

```
SYST:COMM:LAN:SUBM '255.255.255.0'
```

Sets the subnet mask address to 255.255.255.0

Characteristics

*RST value: 255.255.255.0
SCPI: device-specific

SYSTem:COMMunicate:SOCKet:ADDRess <IPAddress>

This command sets the IP address of the R&S FSH.

Parameter

<IPAddress>

String containing the IP address ('x.x.x.x').

Example

```
SYST:COMM:SOCK:ADDR '172.76.68.30'
```

Sets the IP address of the R&S FSH to 172.76.68.30

Characteristics

*RST value: 172.76.68.24
SCPI: device-specific

SYSTem:COMMunicate:SOCKet:DHCP[:STATe] <State>

This command turns the Dynamic Host Configuration Protocol (DHCP) on and off.

Parameter

<State>

ON | OFF

Example

```
SYST:COMM:SOCK:DHCP ON
```

Activates DHCP.

Characteristics

*RST value: ON
SCPI: device-specific

SYSTem:COMMunicate:SOCKet:PORT <Port>

This command sets the port number for the connection.

Parameter

<Port>
Port number

Example

```
SYST:COMM:SOCK:PORT 1000
```

Sets the port number to 1000

Characteristics

*RST value: 5555
SCPI: device-specific

7.10.6 System Settings

This chapter describes all commands that define or query general system settings.

List of commands

- [INPut:IMPedance:PAD <MatchingPad>](#) (p. 222)
- [\[SENSe:\]ROSCilator:SOURce <RefSource>](#) (p. 222)
- [SYSTem:BNC<1...2>:MODE <BNCFunction>](#) (p. 222)
- [SYSTem:DATE <Date>](#) (p. 223)
- [SYSTem:ERRor\[:NEXT\]?](#) (p. 223)
- [SYSTem:ERRor:ALL?](#) (p. 224)
- [SYSTem:ERRor:COUNT?](#) (p. 225)
- [SYSTem:ERRor:CODE\[:NEXT\]?](#) (p. 224)
- [SYSTem:ERRor:CODE:ALL?](#) (p. 225)
- [SYSTem:FORMat:IDENt <IDNFormat>](#) (p. 225)
- [SYSTem:HELP:HEADers?](#) (p. 226)
- [SYSTem:HELP:SYNTax?](#) (p. 226)
- [SYSTem:LANGuage:CATalog?](#) (p. 227)
- [SYSTem:POWER:SOURce?](#) (p. 227)
- [SYSTem:POWER:STATus?](#) (p. 228)
- [SYSTem:PRESet](#) (p. 228)
- [SYSTem:PRESet:FACTory](#) (p. 228)
- [SYSTem:PRESet:MODE <Mode>](#) (p. 229)
- [SYSTem:PRESet:USER <Preset>](#) (p. 229)
- [SYSTem:TIME <Time>](#) (p. 229)
- [SYSTem:TZONee <TimeShift>](#) (p. 230)
- [SYSTem:VERSion?](#) (p. 230)

INPut:IMPedance:PAD <MatchingPad>

This command selects the matching pad connected to the R&S FSH.

Parameter

<MatchingPad>
RAM | RAZ | HZTE

Example

```
INPut:IMP 75;PAD RAZ
```

Selects 75 Ω input impedance and the R&S RAZ as the matching pad.

Characteristics

*RST value: -
SCPI: device-specific

[SENSe:]ROSCillator:SOURce <RefSource>

This command selects the source of the frequency reference oscillator.

If you use an external reference signal, make sure to connect the signal to the Ext Ref BNC connector of the R&S FSH.

Parameter

<RefSource>

INTernal	internal reference
EXTernal	external reference

Example

```
ROSC:SOUR EXT
```

Activates external source as reference signal.

Characteristics

*RST value: -
SCPI: device-specific

SYSTem:BNC<1...2>:MODE <BNCFunction>

This command configures the BNC sockets.

The numeric suffix at BNC selects the BNC socket you want to configure.

Parameter

<BNCFunction>

REFerence	input for external reference signal (BNC1)
TRIGger	input for external trigger (BNC1)
BIAS	BIAS port (BNC1 and BNC2)
IF3	IF output (BNC2)

Example

```
SYST:BNC2:MODE TRIG
```

Sets the seconds BNC socket to trigger input.

Characteristics

*RST value: BNC 1: TRIGger, BNC 2: IF3

SCPI: device-specific

SYSTem:DATE <Date>

This command sets the date for the internal calendar.

Parameter

<Date>

Numeric value indicating the date

You have to enter the date as comma separated values after the string with the file name. The sequence is year,month,day.

The available value range is 1980...2099, 1...12, 1...31

Example

```
SYST:DATE 2000,6,1
```

Sets the date to 1/6/2000

Characteristics

*RST value: -

SCPI: conform

SYSTem:ERRor[:NEXT]?

This command queries the oldest entry in the error queue and deletes it.

This command is a query and therefore has no *RST value.

Return value

<error number>,<error description>

<error number> number that contains information about the error
 negative number: error as defined in the SCPI standard
 positive number: error that is specific to the R&S FSH

<error description> string containing a short error description

If the error queue is empty, the command returns 0,'no error'.

Example

```
STAT:ERR?
```

Characteristics

*RST value: -

SCPI: conform

SYSTem:ERRor:ALL?

This command queries the complete error queue.

This command is a query and therefore no *RST value.

Return value

<error number>,<error description>

<error number> number that contains information about the error
 negative number: error as defined in the SCPI standard
 positive number: error that is specific to the R&S FSH

<error description> string containing a short error description

The number of values depends on the length of the queue.

If the error queue is empty, the command returns 0,'no error'.

Example

```
SYST:ERR:ALL?
```

Characteristics

*RST value: -
SCPI: device-specific

SYSTem:ERRor:CODE[:NEXT]?

This command queries the code of the next error in the error queue.

This command is a query and therefore has no *RST value.

Return value

<error number>
number that contains information about the error

Negative number: error as defined in the SCPI standard
Positive number: error that is specific to the R&S FSH

If the error queue is empty, the command returns 0.

Example

```
STAT:ERR:CODE?
```

Characteristics

*RST value: -
SCPI: conform

SYSTem:ERRor:CODE:ALL?

This command queries the complete error queue.

This command is a query and therefore no *RST value.

Return value

<error number>

number that contains information about the error

Negative number: error as defined in the SCPI standard

Positive number: error that is specific to the R&S FSH

The number of values depends on the length of the queue.

If the error queue is empty, the command returns 0,'no error'.

Example

```
SYST:ERR:CODE:ALL?
```

Characteristics

*RST value: -

SCPI: device-specific

SYSTem:ERRor:COUNT?

This command queries the number of errors currently in the error queue.

This command is a query and therefore no *RST value.

Return value

<numeric_value>

number of the errors in the queue

Example

```
SYST:ERR:COUN?
```

Characteristics

*RST value: -

SCPI: device-specific

SYSTem:FORMat:IDENT <IDNFormat>

This command sets the response format to the *IDN? query. This function is intended for re-use of existing control programs together with the R&S FSH.

Parameter

<IDNFormat>

LEGacy format that is compatible to R&S FSH3/6/18

NEW format for R&S FSH4/8

Example

```
SYST:FORM:IDEN LEG
*IDN?
```

IDN would return, e.g. "Rohde&Schwarz,FSH8,101805/028,1.40"

```
SYST:FORM:IDEN NEW
*IDN?
```

IDN would return, e.g. "Rohde&Schwarz,FSH8,1309.6000K28/101805,1.40"

Characteristics

*RST value: -
SCPI: device-specific

SYSTem:HELP:HEADers?

This command returns a list of all available remote control commands.

This command is a query and therefore no *RST value.

Example

```
SYST:HELP:HEAD?
```

Returns the syntax of all available commands.

Characteristics

*RST value: -
SCPI: conform

SYSTem:HELP:SYNTax?

This command returns the full syntax of the specified command.

This command is a query and therefore no *RST value.

Parameter

<Command>

String containing the command you want to query

Example

```
SYST:HELP:SYNT? 'SYST:ERR?'
```

Returns the full syntax. In this case: 'SYSTem:ERRor[:NEXT]'

Characteristics

*RST value: -
SCPI: device-specific

SYSTem:LANGUage <Language>

This command sets the language of the R&S FSH user interface. You can query a list of available languages with `SYSTem:LANGUage:CATalog?`.

Parameter

<Language>
string containing the language

Example

```
SYST:LANG 'english'
```

Sets the system language to English

Characteristics

*RST value: -
SCPI: conform

SYSTem:LANGUage:CATalog?

This command lists all languages available for the user interface.

This command is a query and therefore no *RST value.

Example

```
SYST:LANG:CAT?
```

Characteristics

*RST value: -
SCPI: device-specific

SYSTem:POWer:SOURce?

This command queries the current R&S FSH power source.

This command is a query and therefore has no *RST value.

Return values

ADAP	R&S FSH is powered by the AC power supply
BATT	R&S FSH is powered by the battery

Example

```
SYST:POW:SOUR?
```

Characteristics

*RST value: -
SCPI: conform

SYSTem:POWer:STATus?

This command queries the remaining power of the battery.

This command is a query and therefore has no *RST value.

Return values

Numeric value in the range from 0 to 100 %.

Example

```
SYST:POW:STAT?
```

Example

```
SYST:POW:STAT?
```

Characteristics

*RST value: -
SCPI: conform

SYSTem:PRESet

Resets the R&S FSH to its default state or a state defined by the user, depending on SYSTem:PRESet:MODE.

This command is an event and therefore has no *RST value and no query.

Example

```
SYST:PRESet
```

Characteristics

*RST value: -
SCPI: conform

SYSTem:PRESet:FACTory

This command initiates an instrument reset back to factory settings.

This command is an event and therefore has no query and no *RST value.

Example

```
SYST:PRESet:FACT
```

Resets the R&S FSH to its factory settings.

Characteristics

*RST value: -
SCPI: device-specific

SYSTem:PRESet:MODE <Mode>

This command selects the preset mode.

Parameter

<Mode>

DEFault default preset state

USER user defined preset state

Example

```
SYST:PRESet:MODE USER
```

Selects a user defined preset.

Characteristics

*RST value: -

SCPI: conform

SYSTem:PRESet:USER <Preset>

This command selects a file containing a user defined preset state.

Parameter

<Preset>

filename of the user defined preset state

Characteristics

*RST value: -

SCPI: conform

SYSTem:TIME <Time>

This command sets the internal clock.

Parameter

<Time>

Numeric value indicating the time

You have to enter the time as comma separated values after the string with the file name. The sequence is hour,minute,second.

The available value range is 0...23, 0...59, 0...59.

Example

```
SYST:TIME 12,30,30
```

Characteristics

*RST value: -

SCPI: conform

SYSTem:TZONee <TimeShift>

This command defines a shift of the system time to select another time zone.

Parameter

<TimeShift>

Numeric value indicating the time shift.

You have to enter the time shift as comma separated value. The sequence is hour,minute.

The available value range is 0...23, 0...59.

Example

```
SYST:TZON 01,00
```

Shifts the time an hour ahead

Characteristics

*RST value: 0,0

SCPI: device-specific

SYSTem:VERSion?

This command queries the SCPI version the remote control is based on.

This command is a query and therefore has no *RST value.

Return value

1999.0

Example

```
SYST:VERS?
```

Characteristics

*RST value: -

SCPI: conform

7.11 Status Reporting System

The status reporting system stores all information on the present operating state of the instrument, and on errors which have occurred. This information is stored in the status registers and in the error queue. The status registers and the error queue can be queried via Ethernet.

The information is of a hierarchical structure. The register status byte (STB) defined in IEEE 488.2 and its associated mask register service request enable (SRE) form the uppermost level. The STB receives its information from the standard event status register (ESR) which is also defined in IEEE 488.2 with the associated mask register standard event status enable (ESE) and registers STATus:OPERation and STATus:QUESTionable which are defined by SCPI and contain detailed information on the instrument.

The output buffer contains the messages the instrument returns to the controller. It is not part of the status reporting system but determines the value of the MAV bit in the STB.

7.11.1 Structure of an SCPI Status Register

Each standard SCPI register consists of 5 parts which each have a width of 16 bits and have different functions. The individual bits are independent of each other, i.e. each hardware status is assigned a bit number that applies to all five parts. For example, bit 0 of the STATus:OPERation register is assigned to the calibration status of the R&S FSH. Bit 15 (the most significant bit) is set to zero for all parts. Thus the contents of the register parts can be processed by the controller as positive integer.

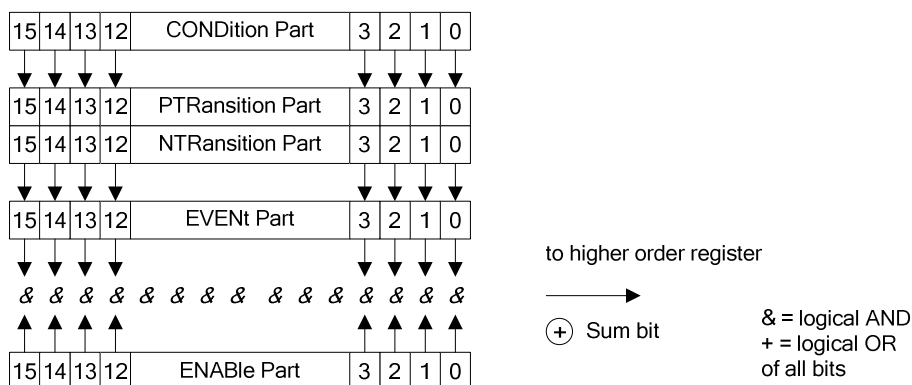


Figure 7-1: The status-register model

7.11.1.1 CONDition part

The CONDition part is directly written into by the hardware or the sum bit of the next lower register. Its contents reflects the current instrument status. This register part can only be read, but not written into or cleared. Its contents is not affected by reading.

7.11.1.2 PTRansition part

The Positive-TRansition part acts as an edge detector. When a bit of the CONDition part is changed from 0 to 1, the associated PTR bit decides whether the EVENT bit is set to 1.

PTR bit =1: the EVENT bit is set.

PTR bit =0: the EVENT bit is not set.

This part can be written into and read at will. Its contents is not affected by reading.

7.11.1.3 NTRansition part

The Negative-TRansition part also acts as an edge detector. When a bit of the CONDition part is changed from 1 to 0, the associated NTR bit decides whether the EVENT bit is set to 1.

NTR-Bit = 1: the EVENT bit is set.

NTR-Bit = 0: the EVENT bit is not set.

This part can be written into and read at will. Its contents is not affected by reading.

With these two edge register parts the user can define which state transition of the condition part (none, 0 to 1, 1 to 0 or both) is stored in the EVENT part.

7.11.1.4 EVENT part

The EVENT part indicates whether an event has occurred since the last reading, it is the "memory" of the condition part. It only indicates events passed on by the edge filters. It is permanently updated by the instrument. This part can only be read by the user. Reading the register clears it. This part is often equated with the entire register.

7.11.1.5 ENABLE part

The ENABLE part determines whether the associated EVENT bit contributes to the sum bit (see below). Each bit of the EVENT part is ANDed with the associated ENABLE bit (symbol '&'). The results of all logical operations of this part are passed on to the sum bit via an OR function (symbol '+').

ENABLE-Bit = 0: the associated EVENT bit does not contribute to the sum bit

ENABLE-Bit = 1: if the associated EVENT bit is "1", the sum bit is set to "1" as well.

This part can be written into and read by the user at will. Its contents is not affected by reading.

7.11.1.6 Sum bit

As indicated above, the sum bit is obtained from the EVENT and ENABLE part for each register. The result is then entered into a bit of the CONDition part of the higher-order register.

The instrument automatically generates the sum bit for each register. Thus an event, e.g. a PLL that has not locked, can lead to a service request throughout all levels of the hierarchy.



The service request enable register SRE defined in IEEE 488.2 can be taken as ENABLE part of the STB if the STB is structured according to SCPI. By analogy, the ESE can be taken as the ENABLE part of the ESR.

7.11.2 Overview of the Status Register

The following figure shows the status registers used by the R&S FSH.

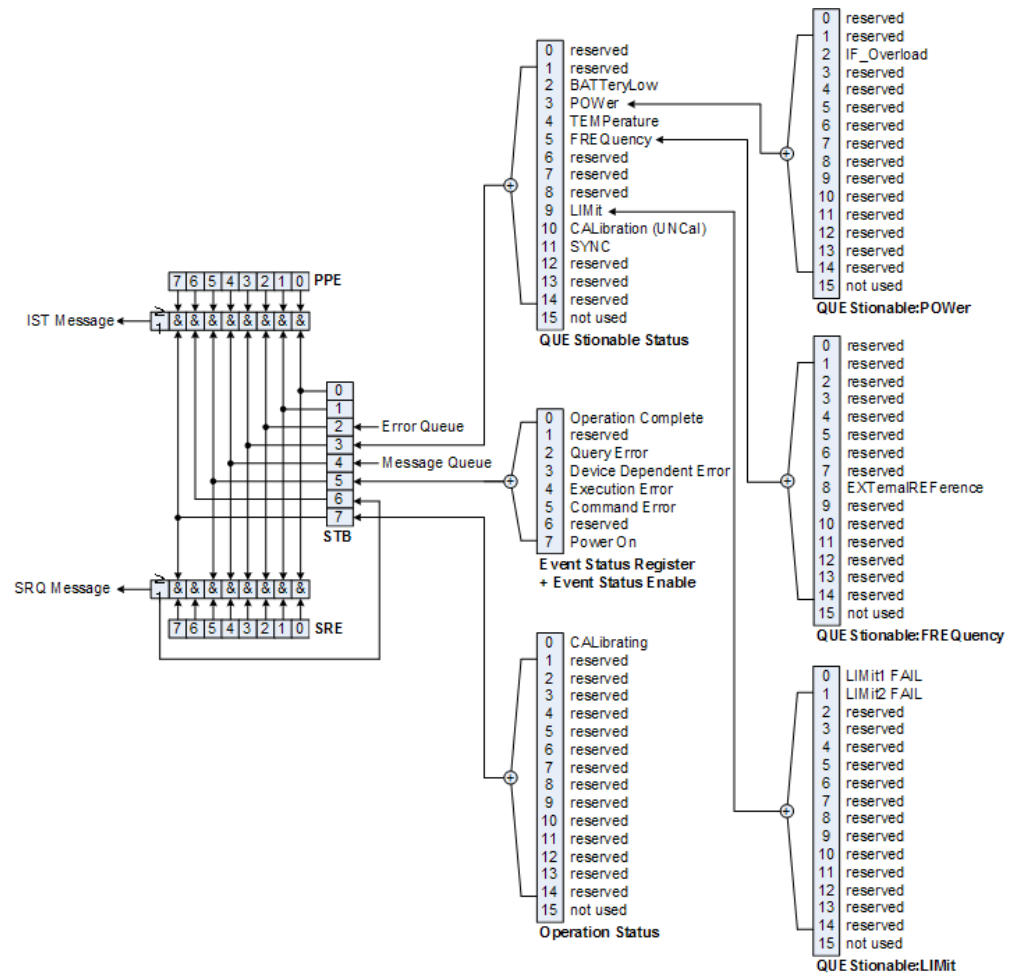


Figure 7-2: Overview of the status registers

7.11.3 Status Byte (STB) & Service Request Enable Register (SRE)

The STB is already defined in IEEE 488.2. It provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. It can thus be compared with the CONDITION part of an SCPI register and assumes the highest level within the SCPI hierarchy. A special feature is that bit 6 acts as the sum bit of the remaining bits of the status byte.

The STATUS BYTE is read using the command "*STB?" or a serial poll.

The STB is linked to the SRE. The latter corresponds to the ENABLE part of the SCPI registers in its function. Each bit of the STB is assigned a bit in the SRE. Bit 6 of the SRE is ignored. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a service request (SRQ) is generated, which triggers an interrupt in the controller if this is appropriately configured and can be further processed there. The SRE can be set using the command "*SRE" and read using the command "*SRE?"

Table 7-1: Meaning of the bits used in the Status Byte

Bit No.	Meaning
0 to 1	Not used
2	<p>Error Queue not empty</p> <p>The bit is set when an entry is made in the error queue. If this bit is enabled by the SRE, each entry of the error queue generates a service request. Thus an error can be recognized and specified in greater detail by polling the error queue. The poll provides an informative error message. This procedure is to be recommended since it considerably reduces the problems involved with remote control.</p>
3	<p>QUESTIONable status sum bit</p> <p>The bit is set if an EVENT bit is set in the QUESTIONable: status register and the associated ENABLE bit is set to 1. A set bit indicates a questionable instrument status, which can be specified in greater detail by polling the QUESTIONable status register.</p>
4	<p>MAV bit (message available)</p> <p>The bit is set if a message is available in the output buffer which can be read. This bit can be used to enable data to be automatically read from the instrument to the controller.</p>
5	<p>ESB bit</p> <p>Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit indicates a serious error which can be specified in greater detail by polling the event status register.</p>
6	<p>MSS bit (master status summary bit)</p> <p>The bit is set if the instrument triggers a service request. This is the case if one of the other bits of this registers is set together with its mask bit in the service request enable register SRE.</p>
7	<p>OPERation status register sum bit</p> <p>The bit is set if an EVENT bit is set in the OPERation status register and the associated ENABLE bit is set to 1. A set bit indicates that the instrument is just performing an action. The type of action can be determined by polling the OPERation status register.</p>

7.11.4 Event Status Register (ESR) and Event Status Enable Register (ESE)

The ESR is defined in IEEE 488.2. It can be compared with the EVENT part of a SCPI register. The event status register can be read out using command *ESR?.

The ESE is the associated ENABLE part. It can be set using the command *ESE and read using the command *ESE?.

Table 7-2: Meaning of the bits in the event status register

Bit No.	Meaning
0	Operation Complete This bit is set on receipt of the command *OPC exactly when all previous commands have been executed.
1	Not used
2	Query Error This bit is set if either the controller wants to read data from the instrument without having sent a query, or if it does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query which is faulty and hence cannot be executed.
3	Device-dependent Error This bit is set if a device-dependent error occurs. An error message with a number between -300 and -399 or a positive error number, which denotes the error in greater detail, is entered into the error queue.
4	Execution Error This bit is set if a received command is syntactically correct but cannot be performed for other reasons. An error message with a number between -200 and -300, which denotes the error in greater detail, is entered into the error queue.
5	Command Error This bit is set if a command is received, which is undefined or syntactically incorrect. An error message with a number between -100 and -200, which denotes the error in greater detail, is entered into the error queue.
6	Not used
7	Power On (supply voltage on) This bit is set on switching on the instrument.

7.11.4.1 STATus:OPERation Register

In the CONDition part, this register contains information on which actions the instrument is being executing or, in the EVENT part, information on which actions the instrument has executed since the last reading. It can be read using the commands STATus:OPERation:CONDition? or STATus:OPERation[:EVENT]?

Table 7-3: Meaning of the bits in the STATus:OPERation register

Bit No.	Meaning
0	CALibrating This bit is set as long as the instrument is performing a calibration.
1 to 14	Not used
15	This bit is always 0

7.11.4.2 STATus:QUEStionable Register

This register contains information about indefinite states which may occur if the unit is operated without meeting the specifications. It can be read using the commands STATus:QUEStionable: CONDition? and STATus:QUEStionable[:EVENT]?

Table 7-4: Meaning of bits in STATus:QUEStionable register

Bit No.	Meaning
0 to 1	These bits are not used
2	BATTERY LOW If the instrument is running without any external power supply and the charging level of the internal battery is approximately lower than 5% this bit is set to indicate that the system will be shut down automatically in approx. 5 minutes.
3	Not used
4	TEMPerature This bit is set if a questionable temperature occurs.
5 to 8	Not used
9	LIMit (device-specific) This bit is set if a limit value is violated
10	CALibration The bit is set if a measurement is performed unaligned (label UNCAL)
11 to 14	Not used
15	This bit is always 0.

7.11.4.3 STATus:QUEStionable:FREQuency Register

This register contains information about the reference frequency. It can be read using the commands STATus:QUEStionable:LIMit:FREQuency? and STATus:QUEStionable:FREQuency[:EVENT]?

Table 7-5: Meaning of bits in STATus:QUEStionable:FREQuency register

Bit No.	Meaning
0 to 7	Not used
8	EXtErnal REFerence This bit is set if an external reference is used.
9 to 14	Not used
15	This bit is always 0.

7.11.4.4 STATus:QUEStionable:LIMit Register

This register contains information about the observance of limit lines. It can be read using the commands STATus:QUEStionable:LIMit:CONDition? and STATus:QUEStionable:LIMit[:EVENT]?

Table 7-6: Meaning of bits in STATus:QUEStionable:LIMit register

Bit No.	Meaning
0	LIMit 1 FAIL This bit is set if limit line 1 is violated.
1	LIMit 2 FAIL This bit is set if limit line 2 is violated.
2 to 14	Not used
15	This bit is always 0.

7.11.4.5 STATus:QUEStionable:POWer Register

This register contains information about possible overload states. It can be read using the commands STATus:QUEStionable:POWer:CONDition? and STATus:QUEStionable:POWer[:EVENT]?

Table 7-7: Meaning of bits in STATus:QUEStionable:POWer register

Bit No.	Meaning
0 to 1	Not used
2	IF_Overload This bit is set if the IF path is overloaded. 'IFOVL' is displayed.
3 to 14	Not used
15	This bit is always 0.

7.11.5 Application of the Status Reporting Systems

In order to be able to effectively use the status reporting system, the information contained there must be transmitted to the controller and further processed there. There are several methods which are represented in the following.

7.11.5.1 Service Request

Under certain circumstances, the instrument can send a service request (SRQ) to the controller. Usually this service request initiates an interrupt at the controller, to which the control program can react appropriately. As evident from Fig. 1-4, an SRQ is always initiated if one or several of bits 2, 3, 4, 5 or 7 of the status byte are set and enabled in the SRE. Each of these bits combines the information of a further register, the error queue or the output buffer. The ENABLE parts of the status registers can be set so that arbitrary bits in an arbitrary status register initiate an SRQ. In order to make use of the possibilities of the service request effectively, all bits should be set to "1" in enable registers SRE and ESE.

Example

Use of the command *OPC to generate an SRQ at the end of a sweep

```
CALL InstrWrite(analyzer, "*ESE 1")  
'Set bit 0 in the ESE (Operation Complete)  
  
CALL InstrWrite(analyzer, "*SRE 32")  
'Set bit 5 in the SRE (ESB)?
```

After its settings have been completed, the instrument generates an SRQ.

The SRQ is the only possibility for the instrument to become active on its own. Each controller program should set the instrument in a way that a service request is initiated in the case of malfunction. The program should react appropriately to the service request.

7.11.5.2 Serial Poll

In a serial poll, just as with command *STB, the status byte of an instrument is queried. However, the query is realized via interface messages and is thus clearly faster. The serial-poll method has already been defined in IEEE 488.1 and used to be the only standard possibility for different instruments to poll the status byte. The method also works with instruments which do not adhere to SCPI or IEEE 488.2.

The VISUAL BASIC command for executing a serial poll is IBRSP(). Serial poll is mainly used to obtain a fast overview of the state of several instruments connected to the controller.

7.11.5.3 Query by Means of Commands

Each part of any status register can be read by means of queries. The individual commands are listed in the description of the STATus Subsystem. The returned value is always a number that represents the bit pattern of the queried register. This number is evaluated by the controller program.

Queries are usually used after an SRQ in order to obtain more detailed information on the cause of the SRQ.

7.11.5.4 Error Queue Query

Each error state in the instrument leads to an entry in the error queue. The entries of the error queue are detailed plain-text error messages that can be displayed via manual operation using the setup menu or queried via remote control using the command SYSTem:ERRor?. Each call of SYSTem:ERRor? provides one entry from the error queue. If no error messages are stored there any more, the instrument responds with 0, "No error".

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

7.11.6 Reset Values of the Status Reporting System

Table 7-8 contains the different commands and events causing the status reporting system to be reset. None of the commands, except *RST and SYSTem:PRESet, influences the functional instrument settings. In particular, DCL does not change the instrument settings.

Table 7-8: Resetting the status reporting system

Event	Switching on supply voltage		DCL,SDC			
	Power-On-Status-Clear					
			(Device Clear, Selected Device Clear)	*RST or SYSTem:PRESet	STATus:PRESet	*CLS
Effect	0	1				
Clear STB,ESR	—	yes	—	—	—	yes
Clear SRE,ESE	—	yes	—	—	—	—
Clear PPE	—	yes	—	—	—	—
Clear EVENT parts of the registers	—	yes	—	—	—	yes
Clear ENABLE parts of all OPERATION and QUESTIONABLE registers; Fill ENABLE parts of all other registers with "1".	—	yes	—	—	yes	—
Fill PTRansition parts with "1"; Clear NTRansition parts	—	yes	—	—	yes	—
Clear error queue	yes	yes	—	—	—	yes
Clear output buffer	yes	yes	yes	1)	1)	1)
Clear command processing and input buffer	yes	yes	yes	—	—	—

1) Every command being the first in a program message, i.e., immediately following a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.

7.11.7 Remote Commands of the Status Reporting System

The following commands control the status-reporting system. *RST does not influence the status registers.

The OPERation status register contains information about the calibration status of the instrument.

The QUEStionable status register contains information about the status of the reference and local oscillator, possible overloads of the instrument and the status of limit checks and limit margins.

The commands are independent from the operating mode.

List of commands

- [STATus:PRESet](#) (p. 241)
- [STATus:QUEue\[:NEXT\]](#) (p. 242)
- [STATus:OPERation\[:EVENT\]?](#) (p. 242)
- [STATus:OPERation:CONDition?](#) (p. 242)
- [STATus:OPERation:ENABLE <SumBit>](#) (p. 242)
- [STATus:OPERation:NTRansition <SumBit>](#) (p. 243)
- [STATus:OPERation:PTRansition <SumBit>](#) (p. 243)
- [STATus:QUEStionable\[:EVENT\]?](#) (p. 243)
- [STATus:QUEStionable:CONDition?](#) (p. 244)
- [STATus:QUEStionable:ENABLE <SumBit>](#) (p. 244)
- [STATus:QUEStionable:NTRansition <SumBit>](#) (p. 244)
- [STATus:QUEStionable:PTRansition <SumBit>](#) (p. 245)

STATus:PRESet

This command resets the edge detectors and ENABLE parts of all registers to a defined value. All PTRansition parts are set to FFFFh, i.e. all transitions from 0 to 1 are detected. All NTRansition parts are set to 0, i.e. a transition from 1 to 0 in a CONDition bit is not detected. The ENABLE part of the STATus:OPERation and STATus:QUEStionable registers are set to 0, i.e. all events in these registers are not passed on.

Example

```
STAT:PRESet
```

Characteristics

*RST value: -
SCPI: conform

STATus:QUEue[:NEXT]

This command returns the earliest entry to the error queue and deletes it.

Positive error numbers indicate device-specific errors, negative error numbers are error messages defined by SCPI. If the error queue is empty, the error number 0, "no error", is returned. This command is identical with the command SYSTem:ERRor.

Example

```
STAT:QUE?
```

Characteristics

*RST value: –

SCPI: conform

STATus:OPERation[:EVENT]?

This command reads out the EVENT section of the OPERATION register.

The command at the same time deletes the contents of the EVENT section.

Characteristics

*RST value: -

SCPI: conform

STATus:OPERation:CONDition?

This command reads out the CONDition section of the OPERATION register.

The command does not delete the contents of the EVENT section.

Characteristics

*RST value: -

SCPI: conform

STATus:OPERation:ENABLE <SumBit>

This command controls the ENABLE part of the OPERATION register.

The ENABLE part allows true conditions in the EVENT part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit reported to the next higher level.

Parameter

<SumBit>

0 to 65535

Characteristics

*RST value: -

SCPI: conform

STATus:OPERation:NTRansition <SumBit>

This command controls the Negative TRansition part of the OPERation register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameter

<SumBit>
0 to 65535

Characteristics

*RST value: -
SCPI: conform

STATus:OPERation:PTRansition <SumBit>

This command controls the Positive TRansition part of the OPERation register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameter

<SumBit>
0 to 65535

Characteristics

*RST value: -
SCPI: conform

STATus:QUESTionable[:EVENT]?**STATus:QUESTionable:FREQUency[:EVENT]?****STATus:QUESTionable:LIMit[:EVENT]?****STATus:QUESTionable:POWEr[EVENT]?**

This command reads out the EVENT section of the QUESTionable register.

The command at the same time deletes the contents of the EVENT section.

Characteristics

*RST value: -
SCPI: conform

STATus:QUEStionable:CONDition?
STATus:QUEStionable:FREQuency:CONDition?
STATus:QUEStionable:LIMit:CONDition?
STATus:QUEStionable:POWer:CONDition?

This command reads out the CONDition section of the QUEStionable register.

The command does not delete the contents of the EVENt section.

Characteristics

*RST value: -

SCPI: conform

STATus:QUEStionable:ENABle <SumBit>
STATus:QUEStionable:FREQuency:ENABle <SumBit>
STATus:QUEStionable:LIMit:ENABle <SumBit>
STATus:QUEStionable:POWer:ENABle <SumBit>

This command controls the ENABle part of the QUEStionable register.

The ENABle part allows true conditions in the EVENt part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit reported to the next higher level.

Parameter

<SumBit>

0 to 65535

Characteristics

*RST value: -

SCPI: conform

STATus:QUEStionable:NTRansition <SumBit>
STATus:QUEStionable:FREQuency:NTRansition <SumBit>
STATus:QUEStionable:LIMit:NTRansition <SumBit>
STATus:QUEStionable:POWer:NTRansition <SumBit>

This command controls the Negative TRansition part of the QUEStionable register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENt register.

Parameter

<SumBit>

0 to 65535

Example

```
STAT:QUES:NTR 65535
```

Characteristics

*RST value: -
SCPI: conform

STATus:QUESTionable:PTRansition <SumBit>

STATus:QUESTionable:FREQuency:PTRansition <SumBit>

STATus:QUESTionable:LIMit:PTRansition <SumBit>

STATus:QUESTionable:POWer:PTRansition <SumBit>

This command control the Positive TRansition part of the QUEStionable register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameter

<SumBit>
0 to 65535

Characteristics

*RST value: -
SCPI: conform

Alphabetical List of Remote Commands

*CLS	31
*ESE	31
*ESR?	31
*IDN?	32
*IST?	32
*OPC	32
*OPT?	32
*RST	32
*SRE	33
*STB?	33
*TRG	33
*TST?	33
*WAI	33
[SENSe:]BANDwidth[:RESolution]:CISPr <CISPRBandwidth>	148
[SENSe:]BANDwidth[:RESolution]:CISPr:AUTO <State>	148
[SENSe:]BANDwidth BWIDth:VIDeo <VideoBW>	46
[SENSe:]BANDwidth BWIDth:VIDeo:AUTO <State>	46
[SENSe:]BANDwidth BWIDth[:RESolution] <ResBW>	45
[SENSe:]BANDwidth BWIDth[:RESolution]:AUTO <State>	46
[SENSe:]CDPower:ANTenna <Antenna>	157
[SENSe:]CDPower:CODE <Code>	157
[SENSe:]CDPower:CODE <Code>	170
[SENSe:]CDPower:CSEarch[:STATe] <State>	161
[SENSe:]CDPower:LCODE:PRIMary <PrimScrambling>	158
[SENSe:]CDPower:LCODE:SEARch:AUTO <State>	159
[SENSe:]CDPower:LCODE:SEARch:LIST?	159
[SENSe:]CDPower:LCODE:SEARch[:IMMediate]	159
[SENSe:]CDPower:LCODE:SECondary <SecSrambling>	160
[SENSe:]CDPower:MSHift <Shifts>	185
[SENSe:]CDPower:ORDer <CodeOrder>	170
[SENSe:]CDPower:PNOffset <PNOffset>	170
[SENSe:]CDPower:PNOffset <PNOFset>	178
[SENSe:]CDPower:PNOffset:AUTO <PNOFset>	179
[SENSe:]CDPower:PNOffset:AUTO	171
[SENSe:]CDPower:PREFerence <PowerMode>	157
[SENSe:]CDPower:PREFerence <Reference>	171
[SENSe:]CDPower:PREFerence <Reference>	179
[SENSe:]CDPower:PSWitch <SwitchPoint>	185
[SENSe:]CDPower:SCODE <ScramblingCode>	185
[SENSe:]CDPower:SFACTor <SpreadingFactor>	171
[SENSe:]CDPower:SLOT <Slot>	158
[SENSe:]CDPower:SLOT <Slot>	186
[SENSe:]CHANnel <ChannelNumber>	79
[SENSe:]CHANnel:TABLE:SElect <ChannelTable>	79
[SENSe:]CORRection:TRANSDucer<c>:SElect <TransducerFactor>	44
[SENSe:]CORRection:TRANSDucer<c>:UNIT?	44
[SENSe:]CORRection:TRANSDucer<c>[:STATe] <State>	44
[SENSe:]CORRection:TRANSDucer<t>:ISOTropic[:STATe]?	105
[SENSe:]DETEctor<t>[:FUNction] <Detector>	150

[SENSe:]DETEctor<t>[:FUNction] <Detector>	56
[SENSe:]DETEctor<t>[:FUNction]:AUTO <State>	57
[SENSe:]ESPEctrum:PRESet:SETTings ONCE	103
[SENSe:]ESPEctrum:PRESet[:STANdard] <Standard>	103
[SENSe:]FREQUency:CENTer <Frequency>	34
[SENSe:]FREQUency:CENTer:STEP <StepSize>	35
[SENSe:]FREQUency:CENTer:STEP:LINK <StepSizeCoupling>	35
[SENSe:]FREQUency:INPut:MODE <InputMode>	36
[SENSe:]FREQUency:MODE <OperationMode>	145
[SENSe:]FREQUency:MODE <OperationMode>	36
[SENSe:]FREQUency:OFFSet <FrequencyOffset>	37
[SENSe:]FREQUency:SPAN 	37
[SENSe:]FREQUency:SPAN:AUTO <State>	37
[SENSe:]FREQUency:SPAN:FULL	38
[SENSe:]FREQUency:STARt <StartFrequency>	38
[SENSe:]FREQUency:STOP <StopFrequency>	38
[SENSe:]PMETER:DETEctor[:FUNction] <PowerDisplay>	135
[SENSe:]PMETER:FREQUency <Frequency>	131
[SENSe:]PMETER:MTIME <MeasTime>	133
[SENSe:]POWER:ACHannel:ACPairs <ChannelPairs>	88
[SENSe:]POWER:ACHannel:BANDwidth:ACHannel <Bandwidth>	89
[SENSe:]POWER:ACHannel:BANDwidth:ALTErnate<y> <Bandwidth>	89
[SENSe:]POWER:ACHannel:BANDwidth[:CHANnel] <Bandwidth>	89
[SENSe:]POWER:ACHannel:MODE <PowerMode>	90
[SENSe:]POWER:ACHannel:PRESet:RLEVel	90
[SENSe:]POWER:ACHannel:REFerence:TXCHannel:AUTO <RefChannel>	91
[SENSe:]POWER:ACHannel:REFerence:TXCHannel:MANual <RefChannel>	91
[SENSe:]POWER:ACHannel:SPACing:ALTErnate<y> <Spacing>	92
[SENSe:]POWER:ACHannel:SPACing:CHANnel<Tx> <Spacing>	92
[SENSe:]POWER:ACHannel:SPACing[:ACHannel]] <Spacing>	92
[SENSe:]POWER:ACHannel:TXCHannel:COUNT <TxChannels>	93
[SENSe:]ROSCilator:SOURce <RefSource>	222
[SENSe:]SCAN:STARt <StartFrequency>	146
[SENSe:]SCAN:STEP <StepSize>	146
[SENSe:]SCAN:STOP <StopFrequency>	147
[SENSe:]SWEep:COUNT <SweepCount>	48
[SENSe:]SWEep:EGATE <State>	50
[SENSe:]SWEep:EGATE:HOLDoff <GateDelay>	51
[SENSe:]SWEep:EGATE:LENGth <GateLength>	51
[SENSe:]SWEep:EGATE:TIME <SweepTime>	51
[SENSe:]SWEep:MODE <State>	103
[SENSe:]SWEep:POINts?	49
[SENSe:]SWEep:TIME <MeasurementTime>	149
[SENSe:]SWEep:TIME <SweepTime>	49
[SENSe:]SWEep:TIME:AUTO <State>	50
[SENSe:]CHANnel:TABLE:SElect:DOWNlink <ChannelTable>	80
[SENSe:]CHANnel:TABLE:SElect:UPLink <ChannelTable>	80
[SENSe:]CHANnel:TABLE:SET <Direction>	81
[SENSe][:LTE]:DL:DEMod:EVM:ASTD <State>	194
[SENSe][:LTE]:DL:DEMod:SYNCh <SyncSignal>	194
ABORt	47

CALCulate:CALKit:USER:LENGth <ElecLength>	123
CALCulate:CALKit:USER:OFFSet<p>:LENGth <ElecLengthOffs>	123
CALCulate:CALKit:USER[:STATe]	122
CALCulate:DTF:CABLE:LENGth <CableLength>	142
CALCulate:DTF:CABLE:PRESet <CableModel>	142
CALCulate:DTF:DISTance:STARt <StartDistance>	137
CALCulate:DTF:DISTance:STOP <Stop Distance>	138
CALCulate:FEED <Result Display>	189
CALCulate:FEED <ResultDisplay>	156
CALCulate:FEED <ResultDisplay>	169
CALCulate:FEED <ResultDisplay>	178
CALCulate:FEED <ResultDisplay>	184
CALCulate:LIMit<k>:ACPower:ACHannel:ABSolute <Limit>	95
CALCulate:LIMit<k>:ACPower:ACHannel:ABSolute:STATe <State>	95
CALCulate:LIMit<k>:ACPower:ACHannel:RESult?	96
CALCulate:LIMit<k>:ACPower:ACHannel[:RELative] <Limit>	94
CALCulate:LIMit<k>:ACPower:ACHannel[:RELative]:STATe <State>	95
CALCulate:LIMit<k>:ACPower:ALternate<y>:ABSolute <Limit>	97
CALCulate:LIMit<k>:ACPower:ALternate<y>:ABSolute:STATe <State>	98
CALCulate:LIMit<k>:ACPower:ALternate<y>:RESult?	98
CALCulate:LIMit<k>:ACPower:ALternate<y>[:RELative] <Limit>	96
CALCulate:LIMit<k>:ACPower:ALternate<y>[:RELative]:STATe <State>	97
CALCulate:LIMit<k>:ACPower[:STATe] <State>	94
CALCulate:MARKer:FUNCTion:CDPower[:BTS]:RESult? <Result>	172
CALCulate:MARKer:FUNCTion:CDPower[:BTS]:RESult? <Result>	179
CALCulate:MARKer:FUNCTion:LEVel:ONCE	83
CALCulate:MARKer:FUNCTion:PNSCan:LIST?	172
CALCulate:MARKer:FUNCTion:PNSCan:LIST?	180
CALCulate:MARKer:FUNCTion:POWER:PRESet <Standard>	82
CALCulate:MARKer:FUNCTion:POWER:PRESet:CHECK?	83
CALCulate:MARKer:FUNCTion:POWER:RESult? <Measurement>	83
CALCulate:MARKer:FUNCTion:POWER:SElect <Measurement>	81
CALCulate:MARKer:FUNCTion:POWER[:STATe] <State>	82
CALCulate:MARKer<m>:COUNT:FREQUency?	68
CALCulate:MARKer<m>:COUNT[:STATe] <State>	67
CALCulate:MARKer<m>:FREQUency:MODE <InputMode>	68
CALCulate:MARKer<m>:FUNCTion:CDPower[:BTS]:RESult? <Result>	186
CALCulate:MARKer<m>:FUNCTion:CENTER	69
CALCulate:MARKer<m>:FUNCTion:CPOWER:BANDwidth <Bandwidth>	85
CALCulate:MARKer<m>:FUNCTion:CPOWER:MODE <DisplayMode>	85
CALCulate:MARKer<m>:FUNCTion:CPOWER:UNIT <Unit>	86
CALCulate:MARKer<m>:FUNCTion:DEModulation:HOLDoff <Time>	69
CALCulate:MARKer<m>:FUNCTion:DEModulation:SElect <Demodulation>	70
CALCulate:MARKer<m>:FUNCTion:DEModulation[:STATe] <State>	69
CALCulate:MARKer<m>:FUNCTion:DTF:PEAK:RESult?	143
CALCulate:MARKer<m>:FUNCTion:DTF:PEAK:THReshold <Threshold>	143
CALCulate:MARKer<m>:FUNCTion:NDBDown <Distance>	70
CALCulate:MARKer<m>:FUNCTion:NDBDown:FREQUency?	71
CALCulate:MARKer<m>:FUNCTion:NDBDown:RESult?	71
CALCulate:MARKer<m>:FUNCTion:NDBDown:STATe <State>	70
CALCulate:MARKer<m>:FUNCTion:NOISe:RESult?	72
CALCulate:MARKer<m>:FUNCTion:NOISe[:STATe] <State>	71
CALCulate:MARKer<m>:FUNCTion:OBANDwidth:BANDwidth <Bandwidth>	86
CALCulate:MARKer<m>:FUNCTion:OBANDwidth:BANDwidth:PCT <OBW>	87
CALCulate:MARKer<m>:FUNCTion:REFerence	72

CALCulate:MARKer<m>:FUNction:TDMA:BURSt <BurstLength>	87
CALCulate:MARKer<m>:FUNction:WCDPower[:BTS]:RESult? <Result>	161
CALCulate:MATH:STATe <State>	54
CALCulate:MATH[:EXPRession][:DEFine] <Expression>	53
CALCulate:MATH<t>:COPY:MEMory	54
CALCulate:PMETer:PRESet:SElect <Standard>	136
CALCulate:PMETer:PRESet[:STATe] <State>	136
CALCulate:PMETer:RELative[:MAGNitude] <RefValue>	132
CALCulate:PMETer:RELative[:MAGNitude]:AUTO ONCE	132
CALCulate:PMETer:RELative[:MAGNitude]:OFFSet <Offset>	132
CALCulate:TRACe:CABLE:LENGth:RESult?	126
CALCulate:TRACe:CABLE:LENGth[:STATe] <State>	125
CALCulate:TRACe:CABLE:TIME:RESult?	126
CALCulate:TRACe:CABLE:TIME[:STATe] <State>	126
CALCulate:TRACe:LIMit:VSWR:FAIL?	127
CALCulate:VVMeter:MAGNitude:REFerence?	128
CALCulate:VVMeter:MAGNitude:RESult?	129
CALCulate:VVMeter:PHASe:REFerence?	129
CALCulate:VVMeter:PHASe:RESult?	130
CALCulate:VVMeter:REFerence[:STATe] <State>	130
CALCulate<n>:DELTaMarker<m>:AOFF	59
CALCulate<n>:DELTaMarker<m>:MAXimum:NEXT	60
CALCulate<n>:DELTaMarker<m>:MAXimum[:PEAK]	60
CALCulate<n>:DELTaMarker<m>:MINimum[:PEAK]	60
CALCulate<n>:DELTaMarker<m>:X <Coordinate>	61
CALCulate<n>:DELTaMarker<m>:X:RELative <Distance>	61
CALCulate<n>:DELTaMarker<m>:Y?	62
CALCulate<n>:DELTaMarker<m>[:STATe] <State>	59
CALCulate<n>:DLINe <Amplitude>	73
CALCulate<n>:DLINe:STATe <State>	73
CALCulate<n>:LIMit<k>:BEEP[:STATe] <State>	74
CALCulate<n>:LIMit<k>:COMMeNt?	74
CALCulate<n>:LIMit<k>:DEFine	75
CALCulate<n>:LIMit<k>:DELeTe	76
CALCulate<n>:LIMit<k>:FAIL?	76
CALCulate<n>:LIMit<k>:LOWer:SElect <LimitLine>	76
CALCulate<n>:LIMit<k>:STATe <State>	77
CALCulate<n>:LIMit<k>:UNIT:X?	77
CALCulate<n>:LIMit<k>:UNIT[:Y]?	77
CALCulate<n>:LIMit<k>:UPPer:SElect <LimitLine>	78
CALCulate<n>:MARKer<m>:AOFF	63
CALCulate<n>:MARKer<m>:FUNction:HARMonics:DISToRtion? TOTAl	99
CALCulate<n>:MARKer<m>:FUNction:HARMonics:LIST?	100
CALCulate<n>:MARKer<m>:FUNction:HARMonics:NHARMonics <Harmonics>	101
CALCulate<n>:MARKer<m>:FUNction:HARMonics:PRESet	101
CALCulate<n>:MARKer<m>:FUNction:HARMonics[:STATe] <State>	99
CALCulate<n>:MARKer<m>:FUNction:MDEPth:RESult?	102
CALCulate<n>:MARKer<m>:FUNction:MDEPth[:STATe] <State>	102
CALCulate<n>:MARKer<m>:MAXimum:NEXT	63
CALCulate<n>:MARKer<m>:MAXimum[:PEAK]	63
CALCulate<n>:MARKer<m>:MINimum[:PEAK]	64
CALCulate<n>:MARKer<m>:MODE <MarkerMode>	117
CALCulate<n>:MARKer<m>:X <Coordinate>	64
CALCulate<n>:MARKer<m>:X:SLIMits:LEFT <SearchLimit>	65
CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT <SearchLimit>	66

CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State>	65
CALCulate<n>:MARKer<m>:Y?	118
CALCulate<n>:MARKer<m>:Y?	66
CALCulate<n>:MARKer<m>[:STATe] <State>	62
CALibration:MODE?	124
CALibration:PMETer:ZERO:AUTO ONCE	134
CALibration:STATus?	124
CONFigure:POWer:EXPEcted:RF <RefLevel>	188
CONFigure[:LTE]:DL:BW <Bandwidth>	190
CONFigure[:LTE]:DL:CSUBframes <Subframes>	191
CONFigure[:LTE]:DL:CYCPrefix <Prefix>	191
CONFigure[:LTE]:DL:MIMO:ASELectioN <Antenna>	191
CONFigure[:LTE]:DL:MIMO:CONFig <Configuration>	192
CONFigure[:LTE]:DL:NORB <ResourceBlocks>	192
CONFigure[:LTE]:DL:PLCI:CIDGroup <GroupID>	193
CONFigure[:LTE]:DL:PLCI:CIDNtity <CellID>	192
CONFigure[:LTE]:DL:PLCI:PLID <Identity>	193
CONFigure[:LTE]:DL:TDD:UDConfig <Configuration>	193
DISPlay:BRIGhtness <Brightness>	216
DISPlay:CMAP <ColorScheme>	217
DISPlay:CMAP:DEFault	217
DISPlay:DATE:FORMat <DateFormat>	217
DISPlay:GDElay:APERture:STEP <Aperture>	127
DISPlay[:WINDow]:TRACe:MODE <TraceMode>	55
DISPlay[:WINDow]:TRACe[:STATe] <State>	55
DISPlay[:WINDow]:TRACe<t>:MEMory[:STATe] <State>	55
DISPlay[:WINDow]:TRACe<t>:Y:SPACing <Scaling>	40
DISPlay[:WINDow]:TRACe<t>:Y[:SCALE] <DisplayRange>	40
DISPlay[:WINDow]:TRACe<t>:Y[:SCALE]:ADJust	39
DISPlay[:WINDow]:TRACe<t>:Y[:SCALE]:RLEVel <ReferenceLevel>	40
DISPlay[:WINDow]:TRACe<t>:Y[:SCALE]:RLEVel:OFFSet <Offset>	41
DISPlay[:WINDow]:TRACe<t>:Y[:SCALE]:RPOSitioN <ReferencePosition>	41
DISPlay<n>:GDElay:REFerence <RefValue>	107
DISPlay<n>:GDElay:REFerence:POSitioN <RefPosition>	108
DISPlay<n>:GDElay:Y:SCALE <DisplayRange>	108
DISPlay<n>:IMPedance:REFerence:POSitioN <Impedance>	119
DISPlay<n>:LOSS:REFerence <RefValue>	108
DISPlay<n>:LOSS:REFerence:POSitioN <RefPosition>	109
DISPlay<n>:LOSS:Y:SCALE <DisplayRange>	109
DISPlay<n>:MAGNitude:REFerence <RefValue>	110
DISPlay<n>:MAGNitude:REFerence:POSitioN <RefPosition>	110
DISPlay<n>:MAGNitude:Y:SCALE <DisplayRange>	110
DISPlay<n>:MAGNitude:Y:SPACing <Scaling>	111
DISPlay<n>:PHASe:REFerence <RefValue>	111
DISPlay<n>:PHASe:REFerence:POSitioN <RefPosition>	111
DISPlay<n>:PHASe:UNWRap <State>	112
DISPlay<n>:PHASe:Y:SCALE <DisplayRange>	112
DISPlay<n>:REFlectioN:UNIT <Unit>	113
DISPlay<n>:REFlectioN:Y:SCALE <DisplayRange>	113
DISPlay<n>:VSWR:Y:SCALE <DisplayRange>	114
DISPlay<n>:VSWR:Y:SCALE:MAXimum <TopValue>	114
DISPlay<n>:VSWR:Y:SCALE:MINimum <BottomValue>	113

DISPlay<n>:ZOOM:AREA[:STAT] <State>	119
DISPlay<n>:ZOOM:FACTOR <ZoomFactor>	120
DISPlay<n>:ZOOM:X <HorizShift>	120
DISPlay<n>:ZOOM:Y <VerticalShift>	120
FETCh:CYCPrefix?	195
FETCh:PLCI:CIDGroup?	196
FETCh:PLCI:CIDNtity?	196
FETCh:PLCI:PLID?	196
FETCh:SUMMARY:EVM:<channel>?	198
FETCh:SUMMARY:EVM:<modulation>?	197
FETCh:SUMMARY:EVM:RSIGNAL? <Antenna>	198
FETCh:SUMMARY:EVM?	197
FETCh:SUMMARY:FERRor?	197
FETCh:SUMMARY:IQOFfset?	197
FETCh:SUMMARY:OSTP?	199
FETCh:SUMMARY:POWER:<channel>?	199
FETCh:SUMMARY:POWER:<modulation>?	199
FETCh:SUMMARY:POWER:RSIGNAL? <Antenna>	200
FETCh:SUMMARY:POWER:SYNCsignal	200
FETCh:SUMMARY:POWER?	196
FETCh:SUMMARY:TRAFfic	200
FETCh<z>:PMETer?	135
FORMat:BORe <ByteOrder>	56
FORMat[:DATA] <DataFormat>	58
HCOPy[:IMMediate]	210
INITiate:CONTInuous <SweepMode>	48
INITiate[:IMMediate]	47
INPut:ANTenna:MEASure <Direction>	104
INPut:ANTenna:STATe <State>	104
INPut:ATTenuation <Attenuation>	42
INPut:ATTenuation:AUTO <State>	42
INPut:ATTenuation:MODE <AttenuationMode>	42
INPut:GAIN:STATe <State>	43
INPut:IMPedance <Impedance>	43
INPut:IMPedance:PAD <MatchingPad>	222
INSTRument:NSElect <OperatingMode>	212
INSTRument[:SElect] <OperatingMode>	211
MEASurement:MODE <MeasMode>	144
MEASurement:PORT <Port>	121
MEASurement<n>:FORMat <MeasFormat>	127
MEASurement<n>:FUNctIon:SElect <ResultDisplay>	125
MEASurement<n>:MODE <MeasMode>	122
MMEMory:CATalog:DIRectories?	204
MMEMory:CATalog?	203
MMEMory:CDIRectory <Directory>	204
MMEMory:COpy <SourceFile>, <DestinationFile>	204
MMEMory:DATA <FileName>[, <BlockData>]	205

MMEMory:DELeTe <File>	206
MMEMory:FILE <File>	206
MMEMory:FILE:DATE <FileName>,<Date>	206
MMEMory:FILE:TIME <FileName>,<Time>	207
MMEMory:INIT	207
MMEMory:LOAD:STATe 1,<FileName>	208
MMEMory:MDIRectory <Directory>	208
MMEMory:MOVE <SourceFile>,<NewFileName>	208
MMEMory:NAME <FileName>	210
MMEMory:RDIRectory <Directory>	209
MMEMory:STORe:STATe 1,<FileName>	209
SOURce:TG:ATTenuation <TGAttenuation>	114
STATus:OPERation:CONDition?	242
STATus:OPERation:ENABle <SumBit>	242
STATus:OPERation:NTRansition <SumBit>	243
STATus:OPERation:PTRansition <SumBit>	243
STATus:OPERation[:EVENT]?	242
STATus:PRESet	241
STATus:QUEStionable:CONDition?	244
STATus:QUEStionable:ENABle <SumBit>	244
STATus:QUEStionable:FREQuency:CONDition?	244
STATus:QUEStionable:FREQuency:ENABle <SumBit>	244
STATus:QUEStionable:FREQuency:NTRansition <SumBit>	244
STATus:QUEStionable:FREQuency:PTRansition <SumBit>	245
STATus:QUEStionable:FREQuency[:EVENT]?	243
STATus:QUEStionable:LIMit:CONDition?	244
STATus:QUEStionable:LIMit:ENABle <SumBit>	244
STATus:QUEStionable:LIMit:NTRansition <SumBit>	244
STATus:QUEStionable:LIMit:PTRansition <SumBit>	245
STATus:QUEStionable:LIMit[:EVENT]?	243
STATus:QUEStionable:NTRansition <SumBit>	244
STATus:QUEStionable:POWer:CONDition?	244
STATus:QUEStionable:POWer:ENABle <SumBit>	244
STATus:QUEStionable:POWer:NTRansition <SumBit>	244
STATus:QUEStionable:POWer:PTRansition <SumBit>	245
STATus:QUEStionable:POWer[:EVENT]?	243
STATus:QUEStionable:PTRansition <SumBit>	245
STATus:QUEStionable[:EVENT]?	243
STATus:QUEue[:NEXT]	242
SYSTem:AUDio:VOLume <Volume>	218
SYSTem:BEEPer:KEY:VOLume <Volume>	218
SYSTem:BEEPer:VOLume <Volume>	218
SYSTem:BNC<1...2>:MODE <BNCFunction>	222
SYSTem:COMMunicate:LAN:ETHernet?	219
SYSTem:COMMunicate:LAN:GATeway <Gateway>	219
SYSTem:COMMunicate:LAN:SUBMask <SubnetMask>	220
SYSTem:COMMunicate:SOCKet:ADDRess <IPAddress>	220
SYSTem:COMMunicate:SOCKet:DHCP[:STATe] <State>	220
SYSTem:COMMunicate:SOCKet:PORT <Port>	221
SYSTem:DATE <Date>	223
SYSTem:ERRor:ALL?	224
SYSTem:ERRor:CODE:ALL?	225

SYSTem:ERRor:CODE[:NEXT]?	224
SYSTem:ERRor:COUNT?	225
SYSTem:ERRor[:NEXT]?	223
SYSTem:FORMat:IDENt <IDNFormat>	225
SYSTem:HELp:HEADers?	226
SYSTem:HELp:SYNTax?	226
SYSTem:LANGUage <Language>	227
SYSTem:LANGUage:CATalog?	227
SYSTem:POSition:ALTitude?	213
SYSTem:POSition:GPS:CONNected?	214
SYSTem:POSition:GPS:CORRection:FREQuency?	214
SYSTem:POSition:GPS:QUALity?	214
SYSTem:POSition:GPS:SATellites?	215
SYSTem:POSition:GPS[:STATe] <State>	213
SYSTem:POSition:LATitude?	215
SYSTem:POSition:LONGitude?	215
SYSTem:POSition:VALid?	216
SYSTem:POWer:SOURce?	227
SYSTem:POWer:STATus?	228
SYSTem:PRESet	228
SYSTem:PRESet:FACTory	228
SYSTem:PRESet:MODE <Mode>	229
SYSTem:PRESet:USER <Preset>	229
SYSTem:TIME <Time>	229
SYSTem:TZONee <TimeShift>	230
SYSTem:VERSion?	230
TRACe:DATA <Trace>	187
TRACe:DATA? <Measurement>	151
TRACe:DATA?	140
TRACe:DATA?	181
TRACe[:DATA] <Trace>	163
TRACe[:DATA]? <Destination>	57
TRACe[:DATA]?	116
TRACe<t>[:DATA]?	173
TRIGger[:SEQuence]:HOLDoff[:TIME] <TriggerDelay>	52
TRIGger[:SEQuence]:LEVel:VIDeo <TriggerLevel>	52
TRIGger[:SEQuence]:SLOPe <TriggerSlope>	52
TRIGger[:SEQuence]:SOURce <TriggerSource>	150
TRIGger[:SEQuence]:SOURce <TriggerSource>	168
TRIGger[:SEQuence]:SOURce <TriggerSource>	177
TRIGger[:SEQuence]:SOURce <TriggerSource>	53
UNIT:CFE <Unit>	194
UNIT:EVM <Unit>	164
UNIT:EVM	195
UNIT:FERRor <Unit>	164
UNIT:LENGth <Unit>	140
UNIT:POWer <Unit>	45
UNIT<z>:PMETer:POWer <Unit>	133

Index

1xEV-DO	175	Code	
Abort measurement	47	WCDMA	157
ACLR	88	Code order	170
limit check	93	Color scheme	217
Adjacent channel spacing	92	Common commands	31
Adjacent channels	88	Continuous sweep	48
Alternate channel spacing	92	Conventions	9
Alternate channels	89	Cyclic prefix	191
AM modulation depth	101	Data format	58
Antenna		Data management	203
LTE	191	Date	223
Antenna diversity	157	Delay time	126
Aperture step	127	Delta marker	59
Attenuation	42	deactivation	59
Attenuation coupling	42	horizontal position	61
Attenuation mode	42	vertical position	62
Audio demodulation	69	Detector	56, 150
Bandwidth		Digital modulation	153
1xEV-DO	176	Display	216
ACLR	89	Display line	73
adjacent channels	89	Display range	40, 111
alternate channels	89	cable loss	109
CDMA2000	167	group delay	40, 108
channel power	85	magnitude	110
LTE	190	phase	112
occupied bandwidth	86	reflection coefficient	113
resolution	45	VSWR	114
TD-SCDMA	183	DTF list	143
video	46	DTF threshold	143
WCDMA	154	Electrical length	123, 125
Battery	228	Error queue	223
Beeper	218	EVM	
BNC	222	LTE	195
Brightness	216	File	203
Burst length	87	Frequency	
Cable length	142	1xEV-DO	175
Cable selection	142	CDMA2000	166
Calibration	122	LTE	188
user	122	power meter	131
CDMA2000	166	span auto	37
Cell identity	192	TD-SCDMA	182
Center frequency	34	WCDMA	153
Channel power		Frequency counter	67
trace mode	85	Frequency domain	36
unit	86	Frequency mode	36
Channel power measurement	85	Frequency mode (marker)	68
Channel search		Frequency offset	37
WCDMA	160	Frequency span	37
Channel selection	79	Frequency step size	35
Channel spacing	92	Frequency step size coupling	35
Channel table		Full span	38
1xWV-DO	177	Gate delay	51
CDMA2000	168	Gate length	51
TD-SCDMA	184	Gated trigger	50
WCDMA	155	Gateway	219
Channel table selection	79	GPS	213

Hardcopy	210	Port.....	121
Harmonic distortion	99	Position.....	213
Impedance.....	43, 119, 222	Power (system).....	227
Input attenuation	42	Power percentage.....	87
Isotropic antenna	104	Power reference	
WCDMA	161	1xEV-DO	179
LAN	219	CDMA2000	171
Language.....	227	WCDMA	157
Limit check		Preamplifier	43
ACLR.....	93	Preset.....	32, 228
Limit lines.....	74	Reference impedance.....	119
LTE.....	188	Reference level.....	40
Marker	62	adjustment.....	83, 90
deactivation	63	power meter	132
horizontal position.....	64	Reference level offset	41
search limits.....	65	Reference position	41
vertical position.....	66	cable loss	109
zoom	119	group delay.....	108
Marker mode	117	magnitude.....	110
Measurement		phase	111
abort.....	47	Reference power	
ACLR.....	88	WCDMA	157
AM modulation depth.....	101	Reference signal.....	200
channel power	85	Reference value	
DTF	137	cable loss	108
EMI.....	145	group delay.....	107
harmonic distortion	99	magnitude.....	110
network analysis	122	phase	111
noise.....	71	power meter	132
occupied bandwidth.....	86	Resolution bandwidth.....	45
selection	81	Resource block.....	192
spectrum emission mask	102	Restoring	203
start	47	Result display	124
TDMA	87	1xEV-DO	178
Measurement format.....	125	CDMA2000	169
Measurement results	83	LTE.....	189
Measurement time		TD-SCDMA	184
power sensor.....	133	WCDMA	156
MIMO configuration.....	192	Results	57, 83, 116, 140, 151
Mode	211	1xEV-DO	179
n dB down.....	70	CDMA2000	172
Network	219	delay time.....	126
Noise measurement.....	71	electrical length.....	126
Occupied bandwidth	86	LTE.....	195
Operating mode	211	power meter	135
Option		TD-SCDMA	186
K41.....	137	VSWR	127
K42.....	106	WCDMA	161
K43.....	145	Saving	203
K44.....	153	Scale adjust.....	39
K45.....	106	Scan	145
K46.....	166	Scrambling code.....	158
K47.....	175	Screenshot	210
K48.....	182	Single sweep	48
K50.....	188	Slot	
K51.....	188	WCDMA	158
Phase unwrap.....	112	Smith chart	
PN offset		zoom	119
1xEV-DO	178	Span.....	37
CDMA2000.....	170	Spectrum emission mask.....	102

Spreading factor		
CDMA2000	171	
Standard compliance check	83	
Standard selection	82, 103	
Start frequency	38	
Start measurement	47	
Stop frequency	38	
Subframe	191	
Sweep count	48	
Sweep mode	48	
Sweep points	49	
Sweep time	49, 51	
TDMA burst length	87	
TDMA measurement	87	
TD-SCDMA	182	
Time	229	
Time domain	36	
Trace math	53	
Trace memory	55	
Trace read out	57, 116, 140, 151	
Trace selection	55	
Tracking generator	114	
Traffic activity		
		LTE..... 200
		Transducer
		Transducer (isotropic antenna)
		Transducer factor unit
		Transducer selection
		Transmission channels
		Trigger
		gate
		Trigger delay
		Trigger slope
		Trigger source
		Unit
		LTE
		power sensor
		WCDMA
		User calibration
		vector voltmeter
		Video bandwidth
		Video trigger level
		Volume
		WCDMA
		Zeroing