



Hilomast
Telescopic Masts

OPERATING INSTRUCTIONS

TRAILERS



South Midlands Communications

S.M.House, School Close,
Chandlers Ford Ind. Est.
Eastleigh, Hampshire,
England. SO53 4BY

Tel: (+44)0 23 8024 6200

Fax: (+44)0 23 8024 6206

Email: Hilomast@smc-comms.com



South Midlands Communications

OPERATING INSTRUCTIONS

Trailers



Prepare for Operation

(On level ground if possible)

Do not stand on the trailer until operation 7 has been completed.

1. Engage the Trailer hand brake.
2. Disconnect lighting plug from towing vehicle.
3. Lower jockey wheel assembly and re-tighten screw lever.
4. Unhitch safety strop and towing assembly from vehicle.
5. Adjust trailer level with jockey wheel.
6. Release outriggers with sprung peg and extend until peg re-locates.
7. Lower outrigger legs and retighten. Adjust legs to ground level.
8. Remove masthead strop and attach masthead load.
9. Release mast fixing bracket and tilt to vertical.
10. Lock mast in position with sprung peg, double check it is fully engaged.
11. Connect power to compressor.
12. Connect compressor hose to mast inlet.
(Disconnect to rotate mast)
13. Tighten mast rotation thumbscrew at base.
(Do not climb mast before this.)
14. Now refer to mast instructions to extend and lock mast.

Pepeare for Towing

Do not stand on the trailer after operation 7.

1. Release locking handles and fully retract mast.
2. Disconnect compressor hose and power.
3. Disengage sprung peg to release mast and lower to horizontal position.
4. Re-fix horizontal mast bracket.
5. Remove head-load, tighten locking handles.
6. Fit mast head strop and waterproof cover.
7. Raise legs with handle. Retract legs with screw lever.
8. Retract outriggers and secure with sprung pegs on chassis.
Ensure pegs engage fully.
9. Wind legs lightly down onto rests to prevent rattling.
10. Position towing vehicle, check it is safe to release trailer hand brake.
11. Lower towing assembly onto ball with jockey wheel handle, check it is secure, fit safety strop.
12. Raise jockey wheel and secure with screw lever,
ensure it is dead tight.
13. Connect lighting plug, check lights and indicators.
14. Ensure trailer number plate matches towing vehicle.