- 이 문서는 삼성전자의 기술 자산으로 승인자만이 사용할 수 있습니다 -
- This Document can not be used without Samsung's authorization -

1) Q1 Ultra Disassemble and Assemble

* Attention to red sentence.

Part Picture Description 1. Before disassemble the system separate the AC Adapter and Battery *Caution Before separate the battery, raise the system latch and then unlock battery latch. 1. Separate 7 screws. *Caution When assemble the screw, be careful 2 middle screws are small one. Main System 1. Pull out the DMB Antenna 2. Separate the bottom with lifting up left below side first *Caution When assemble, pull out the DMB Antenna and then assemble left upper side first. 1. Picture of separating the bottom. 2. Separate the HDD with lifting up HDD latch.

Part Picture Description 1. Separate Audio cable and Mic cable from connector 2. Separate 4 screws of DMB Module and DMB Antenna. 1. Picture of separating DMB antenna and DMB module. 2. Separate the 5 screws of Main Board. Main 1. Separate Sub_R, Sub_L, T-Con FPC. System *Caution When separating FFC, be careful not to brake of connector pin. When assemble, assemble the T-Con FPC exactly. 1. up side down the Maini Board and then separate AUX Antenna cable.(Black cable) When assemble the AUX Cable, using tape for exacting assemble.

Part	Picture	Description
Main System		1. Picture of being separated Main Board.
		Remained LCD Part after separate Main Board.
LCD		Separate 2 screws which is fixing LCD Top and LCD bracket.
		LCD part after separate LCD bracket.

Part	Picture	Description
		Separate silver tape which connect LCD module and T-Con board.
	ILON BAD AND AND AND AND AND AND AND AND AND A	2. Separate 7 FPCs which is connected to T-Con B'd.
	Tion 8,0 PAIN MACAG BASING TO THE STATE OF T	1. Separate T-Con board with lifting up the lcd latch and sliding right side.
LCD		1. Separated T-Con board.
	Ticon B/D and the property of	
		Picture of LCD part (separated LCD module)
	The second secon	2. Separate Right/Left FFC.

Part Picture Description 1. Picture after separate FFC. 2. Lifting up LCD module. 1. Separated LCD module. 1. Picture which is separated LCD module. LCD 1. Separate Left Touch Button FFC from connector. 2. Separate 2 screws which is connecting TOP and Left board.

Part	Picture	Description
		1. Separated picture.
	Table and France	From upper side, Hall MOUSE, LEFT B'd, Finger print B'd
	MANA PR BTD P BAS-DECOS A STATE OF THE STATE	1. Separate Right Key pad FCT from Right B'd.
LCD		2. Separate 2 screws which is connected with LCD Top.
	Patron Paris	1. Separated picture.
	WE AND THE PROPERTY OF THE PRO	From upper side, Right Board and Bluetooth.
		1. Picture of Camera B'd is connected with LCD Top.
	SAC MCAC BAG - BOTTIA Compa	2. Separate the camera module with disassembling 2 screws.

Part	Picture	Description
LCD	@AFC MACAD_BAGI-00771A_Came Na	1. Separated camera module.
		 Picture which Left Key pad and bracket is fixed to TOP. By pushing inside of the 4 latchs which fixing bracket, separate the Key pad FPC.
		 Picture which Right Key pad and bracket is fixed to TOP. By pushing inside of the 4 latchs which fixing bracket, separate the Key pad FPC.
		1. Picture of separated Right/Left Key pad FPC.