

TELEKOL CORPORATION

TVM-2000 v3.82, 3.91, Cadence v1.0, 1.1, IntegraX 5.2, 5.3, 6.0 PROMPTS

(Last update: July 31, 2000)

Version 2.00

This text has been created by Telekol Corporation. All rights are reserved. Information and descriptions contained herein are subject to change without notice and are the property of Telekol Corporation. Such information and description may not be copied or reproduced by any means, or disseminated or distributed without the express written permission of Telekol Corporation, Waltham, Massachusetts, USA.

IntegraX® is a registered trademark of Telekol Corporation.

II USER RECORDED PROMPTS (XX.msg) for IntegraX

01

Welcome to Integra Voice Mail

02

Welcome to Integra Voice Mail. Our normal business hours are between 9 A.M. to 5 P.M.

03

Welcome to Integra Voice Mail.

04

If you have a touch tone telephone and know your party's extension number, please enter the extension number now. If you don't know the extension number, but you know the name of the person you're trying to reach, please press 2

06

To speak with an operator you may press 0 or stay on the line.

07

For English press 1
For Spanish press 2

07X

For Spanish press 1
For English press 2

09.wav:

"Welcome to Integra voice mail. We are closed for the holiday right now."

GT000

We are sorry we could not answer your call right now.

GTDEF.MSG

"I'm Sorry, the guest you have requested to speak to is not available."

IENT

This call is being handled by IntegraEnterprise.

II USER RECORDED PROMPTS (XX.msg) for Cadence 1.0

01
Welcome to Cadence

02
Welcome to Cadence. Our normal business hours are 9 AM to 5 PM Monday through Friday

03
Welcome to Cadence.

04
If you have a touch-tone telephone and know your party's extension number, please enter the extension number now. If you don't know the extension number, but you know the name of the person you're trying to reach, please press 2

06
To speak with an operator you may press 0 or stay on the line.

07
For English press 1
For Spanish press 2

09
Welcome to Cadence. We are closed for the holiday right now.

GT000
We are sorry we could not answer your call right now.

I. GENERAL SYSTEM'S PROMPTS (TMG_xxx.msg)

1000

One moment please...

1001

The number you've entered is...

1002

If this is the correct number, press 1

To re-enter, press 2

1003

The selection you've made is not valid. Please make another one.

1004

We're sorry you're having difficulties. Please try your call later.

1005

Please enter your mailbox number

1006

Please enter the extension number, followed by the pound key.

1007

Please enter your access code

1008

Begin recording after the tone. When finished you may hang up, or Press the pound key for further options.

1010

Your message was saved

1011

Your message can not be recorded at this time. You may press 0 for assistance...

1012

Mailbox...

III. CALLER SIDE PROMPTS (TMC_xxx.msg)

1013

Using the keys on your touch-tone key pad, please enter the 1st 3 letters of the last name of the person you wish to reach. For the letter Q or Z press 1. If you make a mistake, press the star key to restart.

1014

Using the keys on your touch-tone key pad, please enter the 1st 3 letters of the first name of the person you wish to reach. For the letter Q or Z press 1. If you make a mistake, press the star key to restart.

1015

Using the keys on your touch-tone key pad, please enter the middle initial of the person you wish to reach. For the letter Q or Z press 1. If you make a mistake, press the star key to restart.

1016

You are being transferred to extension...

1017

No match was found.

1018

The extension you dialed is busy.

1019

There is no answer at the extension you dialed.

1021

To continue, press 1
To disconnect, press 2

1022

Please enter the mailbox number.

1023

You may hang up now.

1024

Call for mailbox...

1025

Call for...

1026

You have a call. Press 1 to accept the call.

1027

If this is the correct name press 1,
Otherwise press 2.

1029

Your urgent message has been saved.

1033

We're sorry, all lines are currently busy. If you would like to hold press '1', to leave a message press '2', for an operator please press '0'.

1034

Were sorry, all lines are still busy. To continue holding press '1', to leave a message press '2', for an operator, press '0'.

1035

All lines are still busy. Please continue to hold.

1036

The current message is...

1037

...is not available.

1038

Please speak your name after the tone so I may say who is calling

1039

Call From...

1040

Begin recording after the tone, when finished simply hang up.

1041

There are...

1042

...people holding for this extension ahead of you in the queue.

1044

All fax lines are currently busy. Please try again later.

1045

At the tone, please press the START, SEND, or MANUAL RECEIVE button on your fax machine.

1046

To attach a voice message to this fax, press 1,

To send your fax now, press 2,

To transfer to an operator, press '0'.

1047

You can not select additional documents during this call.

1048

You have selected to receive fax documents.

To receive the documents you selected now, press 1

To cancel your request, press 2.

1049

The documents you've selected will be sent to you shortly.

1050

The document you requested is not available.

1051

You have entered an invalid number. Please check the number and try again.

1054

Press 1 to accept the call.

1055

Using the keys on your touch-tone key pad, please enter the first few letters of the name of the person you wish to reach. For the letter Q or Z press 1. If you make a mistake, press the star key to restart.

1056

This document has already been selected.

1057

Thank you. Goodbye.

1058

Please enter the number where you can be reached, followed by the pound key.

1059

Please enter four digits, which you will use to access your messages when retrieving messages from outside of your room.

1060

You must call from your room to retrieve your messages

1061

Before retrieving your messages, you must first call from your room and set an access code

1063

To listen to messages press '1'

1064

To listen to faxes press '4',

To retrieve faxes press '5'

1065

To listen to messages press '1',

To listen to faxes press '4',

To retrieve faxes press '5'

1066

To undelete previously deleted messages press '8'

1067

To listen to messages press '1',

To undelete previously deleted messages press '8'

1068

To listen to faxes press '4',

To retrieve faxes press '5',

To undelete previously deleted messages press '8'

1069

To listen to messages press '1',

To listen to faxes press '4',

To retrieve faxes press '5',

To undelete previously deleted messages press '8'

1070

To replay the message you just heard press 1,

To hear the next message press '2',

To delete the message press '3',

To hear time, date, and name of sender press '4',

To return to the main menu press the "pound" key.

1071

To replay the message you just heard press 1,

To hear the next fax message press '2',

To delete the message press '3',

To hear time, date, and name of sender press '4',
To mark or unmark this fax for retrieval, press '0'
To return to the main menu press the "pound" key.

1080

You have a call.

To reject the call, simply hang up.

To accept the call, press '1' and hang up. It will be transferred to your phone.

1081

To reject the call, simply hang up.

To accept the call, press '1' and hang up. It will be transferred to your phone.

1082

The call is being transferred to your phone.

1083

"This is your wakeup call. The current time is..."

1090

To use automatic greeting selection, press 1

To select a specific greeting to use, press 2

To return to the previous menu, press the pound key.

1091

Please enter the greeting number

1092

Your new greeting has been set.

1093

Any time during the following message you can dial another extension.

1094

You are being transferred to...

1095

Were sorry, all lines are still busy. To leave a message press '1', for an operator press '0', or to continue holding stay on the line.

1100

To listen to the message you recorded, press 1

To save your message, press 2

To record your message again, press 3

To exit without saving your message, press 4

1101

To listen to the message you recorded, press 1
To save your message, press 2
To record your message again, press 3
To exit without saving your message, press 4
If this is an urgent message, press 5.

1102

Press '2' to send your message or choose one of the following options:

To listen to the message you recorded, press '1'

To record your message again, press '3'

To exit without saving your message, press '4'

1105

To listen to the message you recorded, press 1
to save your message, press 2
to record your message again, press 3
to exit without saving your message, press 4
if this is an urgent message, press 5.

1106

To listen to the message you recorded, press 1
to save your message, press 2
to record your message again, press 3
to exit without saving your message, press 4
if this is a private message, press 6.

1107 .

To listen to the message you recorded, press 1
to save your message, press 2
to record your message again, press 3
to exit without saving your message, press 4
if this is an urgent message, press 5.
if this is a private message, press 6.

1110

To leave a message, press 1
To return to the main menu, press 2
For an operator, press 0

1111

To leave a message, press 1
To return to the main menu, press 2
To page the person you are trying to reach, press 3
For an operator, press 0

1112

To leave a message, press 1
To return to the main menu, press 2
To send a fax, press '4'
For an operator, press 0

1113

To leave a message, press 1
To return to the main menu, press 2
To page the person you are trying to reach, press 3
To send a fax, press '4'
For an operator, press 0

1114
To leave a message, press 1
To return to the main menu, press 2
To leave a number where you can be reached press 5
For an operator, press 0

1115
To leave a message, press 1
To return to the main menu, press 2
To page the person you are trying to reach, press 3
To leave a number where you can be reached press 5
For an operator, press 0

1116
To leave a message, press 1
To return to the main menu, press 2
To send a fax, press '4'
To leave a number where you can be reached press 5
For an operator, press 0

1117
To leave a message, press 1
To return to the main menu, press 2
To page the person you are trying to reach, press 3
To send a fax, press '4'
To leave a number where you can be reached press 5
For an operator, press 0

1120
To send a message, press 2
To set personal mailbox options, press 3
To return to the caller side, press the pound key.

1121
To listen to messages press '1'
To send a message, press 2
To set personal mailbox options, press 3
To return to the caller side, press the pound key.

1122
To send a message, press 2
To set personal mailbox options, press 3
To listen to fax messages, press 4.
To receive marked faxes, press 5.

To return to the caller side, press the pound key.

1123

To listen to messages press '1'

To send a message, press 2

To set personal mailbox options, press 3

To listen to fax messages, press 4.

To receive marked faxes, press 5.

To return to the caller side, press the pound key.

1124

To send a message, press 2

To set personal mailbox options, press 3

To undelete all previously deleted messages, press 8

To return to the caller side, press the pound key.

1125

To listen to messages press '1'

To send a message, press 2

To set personal mailbox options, press 3

To undelete all previously deleted messages, press 8

To return to the caller side, press the pound key.

1126

To send a message, press 2

To set personal mailbox options, press 3

To listen to fax messages, press 4.

To receive marked faxes, press 5.

To undelete all previously deleted messages, press 8

To return to the caller side, press the pound key.

1127

To listen to messages press '1'

To send a message, press 2

To set personal mailbox options, press 3

To listen to fax messages, press 4.

To receive marked faxes, press 5.

To undelete all previously deleted messages, press 8

To return to the caller side, press the pound key.

1140

To listen to the messages scheduled for future delivery, press 7

1141

To replay the message you've just heard, press 1

To hear the next message, press 2

To cancel the delivery of the message, press 3

To play recipient's name and delivery time, press 4
To change the delivery time, press 5
To return to the previous menu, press pound key.

1142
Message is for...

1143
...has...

1144
There are no messages scheduled for future delivery.

1145
The delivery of this message is canceled.

1146.
...is scheduled to be delivered on...

1147
The following messages are scheduled for future delivery.

1148
To set the future delivery of the message, press 7

1200
To set or cancel wake-up calls, press 6.

1201
To schedule a wake-up call, press '1'
To cancel a wake-up call, press '2'
To list scheduled wake-up calls, press '3'
To return to the previous menu, press the pound key.

1202
I'm sorry. You've already entered the maximum number of wake-up calls allowed.

1203
Using the 24-hour format, please enter the time, that you wish to receive a wake-up call. For example, for 3 o'clock PM enter One Five Zero Zero.

1204
The entry you've made is not valid. Please try again.

1205
The time you've entered is...

1206

If this is the correct number press '1',
To re-enter, press '2',
To exit without saving, press the pound key.

1207

If this is the correct time, press '1'
To re-enter, press '2'
To return to the previous menu, press the pound key.

1208

Please enter the phone number you wish this wakeup call to be delivered to, followed by the pound key.
To deliver this call to your regular extension, press the star key.

1209

This wake-up call has been canceled.

1210

The wake-up call you have requested has been set.

1211

I'm sorry. There are no wake-up calls scheduled for your mailbox.

1212

The wake-up call is set for...

1213

To remove this wake-up call, press '1'
Otherwise, press '2'

1214

This wake-up call has been removed.

1215

No more wake-up calls.

1216

This wakeup will call...

1237

There is not enough voice storage to record this call. Please contact your system administrator.

1238

To record this call, press '1'

To accept this call without recording, press '2'
To tentatively save a recording of this call, press '3'
To reject this call, press the pound key, and then hang up.

1250

Press 2 to send your message or choose one of the following options:
To listen to the message you recorded, press 1
To record your message again, press 3
To exit without saving your message, press 4
To mark this message as private, press 6.

1251

Press 2 to send your message or choose one of the following options:
To listen to the message you recorded, press 1
To record your message again, press 3
To exit without saving your message, press 4
To mark this message as urgent, press 5.
To mark this message as private, press 6.

1252

Begin recording after the tone. When finished press the pound key for further options.

1253

You have a call. Press 1 to accept the call, or to reject this call, press the pound key.

1254

Press 1 to accept the call, or to reject this call, press the pound key.

1255

Using the 24-hour format, please enter the time that you wish to deliver this message on.
For example, for 3 o'clock PM, enter One Five Zero Zero.

1256

Please enter month and day to deliver this message. For example, for January 1st,
Enter Zero One, Zero One.

1257

The date you've entered is...

1258

If this is the correct date, press '1'
To re-enter, press '2'
To return to the previous menu, press the '#' key.

1259

This message is scheduled for delivery on....

1260

Delivery of this message has been scheduled.

1261

...waiting for future delivery.

1262

The person you are trying to reach is not available. Please try calling later.

1263

Outbound dialing is not enabled for your mailbox.

1266

You have a call on...

1272

Using the keys on your touch-tone keypad, Please enter the first 3 letters of the last name of the person you wish to reach. For the letter Q press 7, for the letter Z press 9. If you make a mistake, press the star key to restart.

1273

Using the keys on your touch-tone keypad, Please enter the first 3 letters of the first name of the person you wish to reach. For the letter Q press 7, for the letter Z press 9. If you make a mistake, press the star key to restart.

1274

Using the keys on your touch-tone keypad, Please enter the middle initial of the person you wish to reach. For the letter Q press 7, for the letter Z press 9. If you make a mistake, press the star key to restart.

1275

Using the keys on your touch-tone keypad, please enter the first 3 letters of the name of the person you wish to reach. For the letter Q press 7, for the letter Z press 9. If you make a mistake, press the star key to restart.

IV. MAILBOX OWNER'S SIDE PROMPTS (TMO_XXX.msg)

2000

No such mail box

2001

Invalid access code. Please try again

2002

You have...

2004

You have no messages

2005

To replay the message you just heard, press 1

To hear the next message, press 2

To erase the message, press 3

To hear time, date, and sender's name press 4

To forward this message to another mailbox, press 5

To send your message to another mailbox, press 6

To return to the main menu, press the pound key

2006

Please enter the number of the mailbox you want to forward this message to. Enter Star 1 to append to this message, star 2 to dial by name, star 3 to mark this message as urgent, or star 4 to request message receipt confirmation.

2007

Please enter the number of the mailbox you want to send the message to. Enter Star 1 to append to this message, star 2 to dial by name, star 3 to mark this message as urgent, or star 4 to request message receipt confirmation.

2008

No more messages.

2009

Please enter the number of the mailbox you want to send the message to. Enter star 2 to dial by name, star 3 to mark this message as urgent, or star 4 to request message receipt confirmation.

2010

Your message was forwarded.

2011

Your message was sent.

2012

To record your personal greeting message, press 1

To set your access code, press 2

For call forwarding options, press 3

To enter your name, press 4

To record your name, press 5

To record or set multiple personal greeting messages press 6

To return to the main menu, press the pound key

2013

...is Urgent.

2014

...are Urgent.

2015

This is an urgent message.

2016

Your current access code is...

2017

Your new access code is now active

2018

To activate message notification to your beeper, press 1

To activate outbound message notification, press 2

To activate outbound follow-me, press 3

To forward your calls to another extension, press 4

To cancel call forwarding, press 5

To set the notification interval, press 6

To set the number of notifications, press 7

To toggle "do not disturb", press 8

To go back to the previous menu, press the pound key

2019

Please enter the forwarding telephone number, followed by the pound key.

2020

Message notification to your beeper is now active.

2021

Outbound message notification is now active.

2022

Outbound follow-me is now active.

2023

Your calls will now be forwarded to the specified extension.

2024

Call forwarding has been canceled

2025

Please enter the number of minutes between notification attempts.
Press the pound key when you are done. For no notifications press
the pound key now.

2026

Please enter the number of notification attempts. Press the
pound key when you are done.

2027

Using the keys on your touch-tone key pad, please enter the 1st 3 letters of your last name. For
the letter Q or Z press 1. If you make a mistake, press the star key to restart.

2028

Using the keys on your touch-tone key pad, please enter the 1st 3 letters of your first name. For
the letter Q or Z press 1. If you make a mistake, press the star key to restart.

2029

Using the keys on your touch-tone key pad, please enter your middle initial. For the letter Q or Z
press 1. For no initials, press 0. If you make a mistake, press the star key to restart.

2030

Your name has been entered

2031

Please enter the number of seconds to rewind or fast forward during message playback.

2032

To listen to messages press '1'.

2033

Please enter the number of the greeting message you wish to record.

2034

Please enter the number of the greeting message you wish to use

2035

To record a new greeting message press 1
To select the greeting message you wish to use press 2

2036

Fax received on...

2037

The following are old messages.

2038

This fax message has not been retrieved.

To delete this fax press 1

To continue without deleting this fax, press 2.

2039

Message from...

2041

To undelete previously deleted messages press 1

To exit without undeleting messages press 2.

2042

This mailbox can not be accessed at this time. Please try again later.

2043

This fax has been marked.

2044

This fax has been unmarked.

2045

To replay the message you just heard, press 1

To hear the next message, press 2

To erase the message, press 3

To hear time, date and sender, press 4

To forward this message to another mailbox, press 5

To send your message to another mailbox, press 6

To mark or unmark this fax for retrieval, press 0

To return to the main menu, press the pound key

2046

To receive marked faxes, press 1

To receive all faxes, press 2

To set default phone number, press 3

To return to the previous menu, press the pound key.

2048

No faxes have been marked for retrieval.

2049

Please enter the fax number, followed
by the pound key.

2050

There are no faxes to retrieve.

2051

To return to the caller side, press the pound key.

2052

To hear the time and date after every message, press 1.

To hear sender's name before every message, press '2'.

To return to the previous menu, press the pound key.

2053

To hear the time and date after every message, press 1

To cancel the date after every message, press 2.

2054

To hear sender's name before every message, press '1'.

To cancel sender's name before every message, press '2'.

2055

To receive faxes to the default phone number, press '1'.

To receive faxes to a different phone number, press '2'.

If you are calling from a fax machine, and wish to receive the selected faxes now, press '3'.

To return to the previous menu, press the pound key.

2056

Pages

2058

This message will be marked as urgent.

2059

Message receipt confirmation has been requested for this message.

2060
Message left for...

2061
Was received on...

2062
Message Deleted.

2063
To disconnect, press the star key.

2064
Please call...

2065
Your mailbox is full. Please delete some messages.

2066
Message restored

2070
To receive marked faxes, press '1',
To receive all faxes, press '2',
To return to the previous menu, press the 'pound' key.

2071
To receive faxes to the default phone number, press '1',
If you are calling from a fax machine, and wish to receive the selected faxes now, press '3',
To return to the previous menu, press the pound key.

2072
You need to call from a fax machine to retrieve your faxes.
If you are calling from a fax machine, please press '1',
Otherwise, press '2'.

2075
To replay the message you just heard, press 1.
To hear the next message, press 2
To erase the message, press 3
To hear time, date and sender's name, press 4
To forward or reply to this message, press 5
To save your message as new and continue to the next message, press 6
To return to the main menu, press the pound key.

2076

To replay the message you just heard, press 1.

To hear the next message, press 2

To erase the message, press 3

To hear time, date and sender's name, press 4

To forward or reply to this message, press 5

To save your message as new and continue to the next message, press 6

To mark or unmark this fax for retrieval, press 0

To return to the main menu, press the pound key.

2077

Please enter the number of the mailbox you want to send the message to.

Enter star 2 to dial by name,

Star 3 to mark this message as urgent,

Star 4 to request message receipt confirmation,

Or star 5 to mark this message as private.

2078

This message will be marked as private.

2079

This is a private message.

2081

Please enter the number of the mail box you want to forward this message to.

Enter star 1 to append to this message

Star 2 to dial by name

Star 3 to mark this message as urgent

Star 4 to request message receipt confirmation

Or star 5 to mark this message as private.

2082

Please enter the number of the mailbox you want to send this message to.

Enter star 1 to append to this message

Star 2 to dial by name

Star 3 to mark this message as urgent

Star 4 to request message receipt confirmation

Or star 5 to mark this message as private.

2083

This message will be marked as urgent.

2084

This is a recorded conversation.

2085 – (Was wrong. Need to re-record)

To replay this message, press 1

To send this message, press 2

To re-record this message, press 3

To exit without saving, press 4

To mark this message as urgent, press 5

To mark this message as private, press 6

To request message receipt confirmation, press 7

To append the original message to the reply, press 8

2086

To forward this message to another mailbox, press 1

To reply to this message, press 2

To return to the previous menu, press the pound key

2087

To record your current personal greeting message, press 1

To set your access code, press 2

For call forwarding options, press 3

To enter your name, press 4

To record your name, press 5

To record a greeting by number, press 6

To set your current personal greeting message press 7

To return to the main menu, press the pound key

2088

To forward this message to another mailbox, press 1

To return to the previous menu, press the pound key

2089

To listen to the current message, press '1'

To re-record the current message, press '2'

To go back to the previous menu, press the pound key.

2090.

Please enter a new fax number followed by the pound key or enter just the pound key to delete an existing fax number. If you make a mistake or wish to go back to the previous menu, press the star key.

2091

Fax broadcast list is empty.

2092

This position is empty.

2093

The record has been deleted.

2094

The number you requested has been added.

2095

Please enter the position, at which you want to modify the number, in the fax broadcast list.

2096

The fax number on this position is:

2097

To receive faxes to the default phone number, press '1'.

To receive faxes to a different phone number, press '2'.

If you are calling from a fax machine, and wish to receive the selected faxes now, press '3'.

To modify the broadcast list, press 5

To return to the previous menu, press the pound key.

2098

To receive faxes to the default phone number, press '1'.

To receive faxes to a different phone number, press '2'.

If you are calling from a fax machine, and wish to receive the selected faxes now, press '3'.

To broadcast faxes to the existing broadcast list, press 4

To modify the broadcast list, press 5

To return to the previous menu, press the pound key.

2099

Faxes will be sent shortly to the recipients on the fax broadcast list.

2100

You have a message waiting at the front desk.

2107

To forward the message to another mailbox, press 1

To reply to this message, press 2

To send this message to another mailbox, press 3

To go back, press #.

2108

To forward the message to another mailbox, press 1

To send this message to another mailbox, press 3

To return to the previous menu, press #.

2111

To reply to this message, press 2;

To go back to the previous menu, press #.

2120.

Please enter the number of the mailbox you want to forward this message to. Enter

*1 to append to this message;

*2 to dial by name;

*3 to mark this message as urgent;

*4 to request message receipt confirmation;

*5 to mark this message as private.

Or *6 to set the future delivery of the message;

2121.

Please enter the number of the mailbox you want to send this message to. Enter

*1 to append to this message;

*2 to dial by name;

*3 to mark this message as urgent;

*4 to request message receipt confirmation;

*5 to mark this message as private.

Or *6 to set the future delivery of the message;

2123.

Please enter the number of the mailbox you want to forward this message to. Enter

*2 to dial by name;

*3 to mark this message as urgent;

*4 to request message receipt confirmation;

*5 to mark this message as private.

Or *6 to set the future delivery of the message;

2124.

Please enter the number of the mailbox you want to send this message to. Enter

*2 to dial by name;

*3 to mark this message as urgent;

*4 to request message receipt confirmation;

*5 to mark this message as private.

Or *6 to set the future delivery of the message;

2125

Please enter the number of the mailbox you want to forward this message to. Enter

*2 to dial by name;

*3 to mark this message as urgent;

*4 to request message receipt confirmation;

or *5 to mark this message as private.

2130

To replay the message you just heard, press 1

2131

To hear the next message, press 2

2132

To erase message, press 3

2133

To hear time, date and sender's name, press 4

2134

For forwarding options, press 5

2135

To return this call, press 6

2136

To go back to previous menu press the pound key.

2140

To replay the fax you've just heard, press 1

2141

To hear the next fax, press 2

2142

To erase this fax, press 3

2143

To mark this fax for retrieval, press 0

2144

To unmark this fax, press 0

2150

Using the keys on your touch-tone keypad, please enter the first 3 letters of your last name. For the letter Q press 7, for the letter Z, press 9. If you make a mistake, press the star key to restart.

2151

Using the keys on your touch-tone keypad, please enter the 1st 3 letters of your first name. For the letter Q press 7, for the letter Z, press 9. If you make a mistake, press the star key to restart.

2152

Using the keys on your touch-tone keypad, please enter your middle initial. For the letter Q press 7, for the letter Z, press 9. If you make a mistake, press the star key to restart.

2153
Invalid access code.

2154
To activate message notification to your beeper, press 1
To activate outbound message notification, press 2
To activate outbound follow-me, press 3
To cancel call forwarding, press 5
To set the notification interval, press 6
To set the number of notifications, press 7
To toggle “do not disturb”, press 8
To go back to the previous menu, press the pound key

2160
To receive marked faxes, press 1

2161
To receive all faxes, press 2.

2162
To set the default fax number, press 3.

2163
To modify the fax broadcast list, press 4.

2165
To receive faxes to the default phone number, press 1.

2166
To receive faxes to a different phone number, press 2.

2167
If you are calling from a fax machine and wish to receive your faxes now, press 3.

2168
To broadcast faxes to the existing broadcast list, press 4.

IntegraX 6.0

I_2160

Please enter the number of the mailbox you want to forward this message to. Enter *2 to dial by name.

I_2161

Please enter the number of the mailbox you want to send this message to. Enter *2 to dial by name.

I_2162

If you would like to add an attachment to this message press "1" otherwise press "2".

I_2163

Press '2' to send your message or choose one of the following options:

To listen to the message you recorded, press '1'

To record your message again, press '3'

To exit without saving your message, press '4'

To append to this message press '5'

To set delivery options for this message, press '6'

To add recipients to this message, press '7'

I_2164

Press '2' to send your message or choose one of the following options:

To listen to the message you are sending, press '1'

To exit without sending your message press '4'

To set delivery options, press '6'

To add recipients to this message, press '7'

I_2165

To mark this message as urgent press '1'

To mark this message as private press '2'

To request message receipt confirmation press '3'

To return to the previous menu, press the pound key

I_2166

To forward this message to another mailbox, press '1'

To reply to the sender of this message, press '2'

To return to the previous menu, press the pound key.

I_2167

Please enter the mailbox number you wish to add to this messages recipients. Enter *2 to dial by name.

I_2168

To forward this message to another mailbox, press '1'

2169

To reply to the sender of this message, press '2'

2170

To return to the previous menu, press the pound key

2171

To hear...

2172

...Press...

2201

To replay the message you just heard press '1',

To hear the next message, press '2'

To erase this message, press '3'

To hear more information about this message, press '4'

To forward, reply, or callback press '5'

To save this message as new and continue to the next message, press 6

To mark this message for retrieval via fax, press '0'

To return to the main menu press the pound key.

2202

No more ...

2203

No more new messages

2204

No more old messages

2205

...From...

2206

No more deleted messages

2210

To record your current personal greeting message, press 1

2211

To enable autoplay, press 2

2212

To disable autoplay, press 2

2213

For call forwarding options, press 3

For notification options, press 4

To manage your greetings, press 5

To set your personal information, press 6

To return the previous menu, press the pound key.

2214

To set your current personal greeting press 1
To record a greeting by number, press 2
To specify a greeting number to be played before transferring to your extension, press 3
To return the previous menu, press the pound key.

2215

Please enter the greeting number you wish to use, or enter star to use automatic greeting selection.

2216

You have selected to use automatic greeting selection.

2217

To enter your name, press 1
To record your name, press 2
To set your access code, press 3
To return the previous menu, press the pound key.

2220

There are no new fax or email messages to retrieve.

2221

You have selected to receive messages by fax.
To receive the messages you selected now, press [1].
To cancel your request, press [2].

2222

Message marked

2223

To receive fax to the default phone number, press [1]

2224

To enter the phone number of your fax machine, press [2]

2225

If you are calling from a fax machine and wish to receive the fax now, press [3].

2226

Please enter the phone number of the fax machine including the area code followed by the pound key.

2227

To forward your calls to another extension, press [1]
To forward your calls out of the office, press [2]

2228

To activate message notification to your beeper, press 1

To activate outbound message notification, press 2

To disable notifications, press 3

To set the notification interval, press 4

To set the number of retries, press 5

For voice and email notification options press 6

To go back to the previous menu, press the pound key

2229

To notify on Voice Mail only, press [1]

To notify on email only, press [2]

To notify on both, press [3]

To return to the previous menu, press the pound key

2231

To listen to new messages, press '1'.

2232

To listen to old messages, press '2'.

2233

To listen to messages by type, press '3'.

2234

To send a message, press '4'

2235

To set personal options, press '5'

2236

To retrieve all new e-mails and faxes via fax, press '6'

2237

To set or cancel wake up calls, press '7'

2238

To listen to previously deleted messages, press '8'

2240

To replay the message you just heard, press 1.

2241

To hear the next message, press 2.

2242

To erase this message, press 3.

2243

To hear more information about this message, press 4.

2244

To forward, reply or call back, press 5.

2245

To save this message as new and continue to the next message, press 6.

2246

To mark this message for retrieval via fax, press 0.

2247

To restore this message and continue to the next message, press 6.

2248

To return to the main menu, press the pound key.

2250

To return to the caller side, press the pound key.

2251

Welcome to the IntegraX Voice Mail System. For the next few moments I will help you to setup your mailbox. Once you successfully complete your initial registration process, you will be ready to use your mailbox.

2252

To continue with this setup press '1', to skip this setup and not hear this message again, press '2'.

2254

Thank you.

2255

Please enter a four digit password which you will need to remember to access your mailbox.

2260

In order to be included in the company directory, please enter the first three letters of your first and last name.

2263

At the tone, please record the greeting you wish callers to hear if you are not able to take the call. When finished recording, press the '#' key.

2266

Remember, for further options regarding your greeting see the user guide, or ask your system administrator.

2267

This completes the initial registration process. Your mailbox is fully functional and ready. Thank you for using IntegraVM.

2268

In order to be included in the company directory, please record your name.

2280

We are sorry we could not complete the delivery of this message. Please try again later.

2281

To disable forwarding, press [3]

2282

To turn “do not disturb” on, press [4]

2283

To turn “do not disturb” off, press [4]

2284

Forwarding is now disabled

2285

Do not disturb is now on

2286

Do not disturb is now off

2287

Notifications are now disabled

2290

Reply

2291

Forwarded

2300

New voice mail

2301

New voice mails

2302

Old voice mail

2303

Old voice mails

2304

Voice Mail

2305

Voice Mails

2310

New email

2311

New emails

2312

Old email

2313

Old emails

2314

email

2315

emails

2320

New fax

2321

New faxes

2322

Old fax

2323

Old faxes

2324

fax

2325
faxes

2330
Please enter the number of the greeting you wish to be played before transferring to your extension, or, to play the default message, press the star key.

2331
The new message to be played before transfers is...

2340
Please enter a phone number where you can be reached, followed by the pound key.

2341
To callback the sender of this message, press '3'

2342
There was no answer at the number you dialed.

2343
the number you dialed is busy.

2344
I'm sorry, the call did not go through. Please check the number and try again.

2345
The number of the party who left this message is...

2346
There is no number available for the party who left this message.

2350
Text-To-Speech licenses have been exceeded.

2351
Text-To-Speech Licenses have been exceeded. Email will not be read during this session.

V. SYSTEM ADMINISTRATOR'S SIDE PROMPTS (TMA_xxx.msg)

3000

This is the Administration Options Main Menu -
For mail box set up, press 1
To record and configure system greetings, press 2
For system configuration, press 3
For system reports, press 4
For system backup, press 5
For system restore, press 6
To go back to the mailbox owner menu, press the pound key.

3001

Please enter the number of the mailbox you want to edit

3002

This is the mail box set-up menu -
To activate this mailbox and assign an extension, press 1
To cancel this mailbox, press 2
To assign access code, press 3
To set outbound call forwarding, press 4
To set the mailbox type, press 5
To set maximum recording time, press 6
To set maximum number of messages allowed, press 7
To set messages purge time, press 8
To set number of rings at extension, press 9
To record mailbox greetings press 0
For group settings, press the star key
To exit this mailbox, press the pound key.

3003

This mailbox is now active

3004

Please enter the extension number followed by the pound key, or enter pound for no extension.

3005

No extension was assigned for this mailbox.

3006

This mailbox has been canceled.

3007

The current access code is...

3008

Please enter the new access code.

3009

The new access code is now active.

3010

To allow outbound call forwarding, press 1

To prevent outbound call forwarding, press 2

To go back to the previous menu, press the pound key.

3011

Outbound call forwarding for this mailbox will be allowed.

3012

Outbound call forwarding for this mailbox has been blocked.

3013

For a generic mailbox press 1.

For a day time transfer only mailbox, press 2

For a notification mailbox, press 3

For a "No call progress" mailbox, press 4

For a "record only" mailbox, press 5

For a group mailbox, press 6

For a speakerphone announce mailbox, press 7

For a voice mail only mailbox, press 8

For an audiotext mailbox, press 9

To hear further options, press star

To go back to the previous menu, press the pound key.

3062

To allow paging on this mailbox, press 1

To allow urgent messaging for this mailbox, press 2,

To have this mailbox always page, press 3

For an alternate message notification type mailbox, press 4

To have the message skip phone status, press 5

To activate call screening for this mailbox, press 6

To go back to the previous menu, press the pound key.

3067

This is the Administration Options Main Menu -

For mail box set up, press 1

To record and configure system greetings, press 2

For system configuration, press 3

To go back to the mailbox owner menu, press the pound key.

3014

Please enter the maximum recording time in seconds followed by the pound key

3015

Please enter the maximum number of messages followed by the pound key.

3016

Please enter the number of days before deleting a message, followed by the pound key.

3017

Please enter the number of rings at this extension

3018

To review the group members, press 1

To add a mailbox to the group, press 2

To delete a mailbox from the group, press 3

To go to the previous menu, press the pound key.

3019

Please enter the mailbox number you want to add to this group.

3020

Please enter the mailbox number you want to delete from this group.

3021

No more group members.

3022

Was added

3023

Was deleted

3024

To edit another mailbox, press 1

To quit, press 2.

3025

- To set the day and night mode, press 1
- To set the special greeting message, press 2
- To record system greetings, press 3
- To change the system's business hours, press 4
- To set the single digits menu, press 5
- To assign single digits mailboxes, press 6
- To go back to the main menu, press the pound key.

3026

- To set system for an automatic day and night mode detection, press 1
- To activate the day mode, press 2
- To activate the night mode, press 3
- To go back to the previous menu, press the pound key.

3027

- To activate the special greeting message, press 1
- To cancel the special greeting message, press 2
- To go back to the previous menu, press the pound key.

3028

- To record the day time greeting, press 1
- To record the off hours greeting, press 2
- To record a special greeting message, press 3
- To record the main menu - part 1, press 4
- To record the single digit menu, press 5
- To record the main menu - part 2, press 6
- To record the multilingual greeting, press 7
- To record a greeting by number, press 8
- To go back to the previous menu, press the pound key.

3029

- To set day message start time, press 1
- To set day message end time, press 2
- To go back to the previous menu, press the pound key.

3030

- To activate the single digit menu, press 1
- To cancel the single digit menu, press 2
- To go back to the previous menu, press the pound key.

3031

- Please enter the single digit menu number, or pound to exit.

3032

Please enter the corresponding mailbox number, or enter pound to cancel this single digit option.

3033

This option has been canceled

3034

This option has been activated

3035

This is the System Configuration Menu

For telephone settings, press 1

For 2, or 3 digit mailboxes, press 2

To set a new time, press 3

To set a new date, press 4

To go back to the main menu, press the pound key.

3036

To set number of rings before answer, press 1

To enter the message notification light on sequence, press 2

To enter the message notification light off sequence, press 3

To enter the outbound follow me sequence, press 4

To enter the outbound beeper sequence, press 5

To enter the outbound message notification sequence, press 6

To return to the previous menu, press the pound key

3037

Please enter the number of times you want the system to ring before answering a call

3038

Please enter the message notification light on sequence, followed by the pound key.

3039

Please enter the message notification light off sequence, followed by the pound key.

3040

Please enter the outbound follow me sequence, followed by the pound key.

3041

Please enter the outbound message notification sequence, followed by the pound key.

3042

Please enter the outbound beeper sequence, followed by the pound key.

3043

For a 3-digit mail box set-up, press 1

For a 2-digit mail box set-up, press 2

To return to the previous menu, press the pound key

3044

The current system time is...

3045

Please enter the new time, using the military format. Enter 2 digits for the hours, and 2 digits for the minutes.

3046

The new time is now set

3047

Invalid time. Please try again.

3048

The current system date is...

3049

Please enter new date. Enter 2 digits for the month, 2 digits for the day, and 2 digits for the year.

3050

The new date is now set

3051

Invalid date. Please try again.

3052

For a mail box configuration report, press 1

For a system activity report, press 2

For a system configuration report, press 3

To return to the main menu, press the pound key.

3053

To send your report to a printer, press 1

To save your report on a floppy disk, press 2

To return to the previous menu, press the pound key

3054

Please make sure your printer is ready.

To start printing, press 1

To cancel printing and return to the previous menu, press 2.

3055

Please insert a formatted diskette into the floppy drive.

To send a report to the floppy drive, press 1

To cancel this command and return to the previous menu, press 2.

3056

Please insert a formatted diskette into the floppy drive.

To start backup, press 1

To cancel backup and return to the previous menu, press 2.

3057

Please insert backup diskette into the floppy drive.

To start restore, press 1

To cancel restore and return to the previous menu, press 2.

3058

New set-up has been successfully installed

3059

Please enter the extension number, which is connected to board number 2 on your TVM-2000 system, terminated by the pound key.

3060

The procedure has been successfully completed

3061

The procedure has failed. Please check your system and try again.

3063

To record the mailbox greeting, press 1

To record the mailbox owner's name, press 2

To listen to messages, press 3

To go back to the previous menu, press the pound key now

3064

Please enter the number of the greeting message.

3065

Please enter the document number.

3066

This is the System Configuration Menu
For telephone settings, press 1
To set a new time, press 3
To set a new date, press 4
To go back to the main menu, press the pound key.

3200 TMA_ADM_TEL_INT
This is the Administration Options Main Menu
To set operation and configuration options press 1
To record system greetings press 2
To set advanced options press 3
To administer mailboxes press 4
To re-record default system prompts press 5
To hear existing system prompts press 6
To exit administration options press the pound key

3201 TMA_OPER_CONF_OPT
This is operation and configuration options menu
Please enter four digit option code or
To return to the previous menu press the pound key

3202 TMA_SYS_GREET_REC
This is a system greeting recording menu
To record day greetings press 1
To record night greetings press 2
To record special greetings press 3
To record holiday greetings press 4
To record multilingual greetings press 5
To record greetings by number press 6
To return to the previous menu press the pound key

3203 TMA_ADV_SWITCH_SET
This is advanced settings menu
Please enter advanced settings access code

3204 TMA_MAILBOX_ADM
This is mailbox administration menu
To edit specific mailbox press 1
To duplicate mailboxes press 2
To return to the previous menu press the pound key

3205 TMA_GREET
Please enter four digit option code or
To return to the previous menu press the pound key

3206 TMA_CURVAL

The current value is...

3208 TMA_NEWVAL

The value you've entered is...

3211 TMA_WRONG_OPT_CODE

The option code you've entered is not valid, please try again

3212 TMA_RECORD_MESS

System prompts recording. Re-recorded prompts cannot be restored
Please enter four-digit system prompt number

3213 TMA_PLAY_MESS

System prompts playback.
Please enter four-digit prompt number

3214 TMA_MINVALUE

The minimum value is...

3215 TMA_MAXVALUE

The maximum value is...

3216 TMA_PLAY_NEW_RANGE

To hear the current value press 1,
To enter new value press 2,
To hear the range of valid values press 3
To return to the previous menu press the pound key

3217 TMA_OUT_OF_RANGE

The value you've entered is out of range

3218 TMA_VALUE_SET

The new value has been set

3222 TMAT_INT2

Please enter two digits

3223 TMAT_INT3

Please enter three digits

3224 TMAT_INT4

Please enter four digits

3225 TMAT_INT

Please enter the number and then press the pound key

3226 TMAT_YESNO

For YES press 1, for NO press 2

3227 TMAT_FLAG

To switch on press 1, to switch off press 2

3228 TMAT_STRING

Please enter a sequence and then press the pound key

3229 TMAT_TABLE

Please enter the option number

3230

Mailboxes are being edited via the screen interface now. Please try again later

3231 TMAT_INT1

Please enter one digit

3233

Please enter the source mailbox number

3234

Please enter the number of the first mailbox

3235

Please enter the number of the last mailbox

3236

Mailboxes were successfully duplicated

3237

The procedure has failed

3238

Recording prompt number...

3239

No more active mailboxes are allowed

3241

Minus

3245 TMAT_BUTTON

To proceed press 1,

To exit press 2

3246

Please enter your access code. The key number is...

3247

For "Busy to Mailbox" press 1

For "No Answer to Mailbox" press 2

For "Directly to Mailbox" press 3

For "Auto logon" press 4

For "Main Greeting" press 5

For "Ignore Call" press 6

For "Call Recording" press 7

3248

Failed to set wake-up calls

3250

You can access this option in Operation and Configuration mode only

3251

You can access this option in Advanced Switch Settings mode only

3252

You can access this option only in Mailbox Administration mode

3253

Mailbox is not active

3254

Invalid port number

3255

Access denied

3256

No such group number

3257

This is not an audiotext mailbox

3258

Please select a tone type before changing tone parameters

3259

No such holiday

3260

You cannot set this option for day of the month-based holiday.

3261

You cannot set this option for the week of the month-based holiday.

3262

You must first specify the day or period of time you are setting business hours for

3263

You must first select the “Set business hours” option

3265

You must select a holiday number before changing this option

*3266

To record a welcome message, press 1

To record a main menu part 1, press 2

To record a single digit menu, press 3

To record a main menu part 2, press 4

To return to the previous menu, press the pound key

3267

Please enter two-digit holiday number

*3268

You can access this option for Interactive Voice Response mailbox

*3269

This is not an Interactive Voice Response mailbox

3270

None

3280

Valid values are Yes and No

3281

Minimum string length is...

3282

Maximum string length is...

3283

Valid values are 0 through 9

3284

Valid vales are 1/1/1980 through 12/31/2035

3285

Valid values 00:00 through 23:59

3286

Yes

3287

No

3288

This is not an Interview Mailbox

VI. NUMBERS AND FILLERS (star.msg)

4000
Zero

4009
Nine

4008
Eight

4007
Seven

4006
Six

4005
Five

4004
Four

4003
Three

4002
Two

4001
One

4900
Star

4010
Ten

4011
Eleven

4012
Twelve

4013
Thirteen

4014
Fourteen

4015
Fifteen

4016
Sixteen

4017
Seventeen

4018
Eighteen

4019
Nineteen

4020
Twenty

4024
Sixty

4025
Exit

4026
Eighty

4027
Ninety

4028
Hundred

4040
Hundred

4041
Hundreds

4050
Thousand

4051
Thousands

4060
Million

4061
Millions

4070
Billion

4071
Billions

4080
Trillion

4081
Trillions

4100
January

4101
February

4102
March

4103
April

4104
May

4105
June

4106
July

4107
August

4108
September

4109
October

4110
November

4111
December

4150
Dollar

4151
Dollars

4160
Cent

4161
Cents

4201
First

4202
Second

4203
Third

4204
Fourth

4205
Fifth

4206
Sixth

4207
Seventh

4208

Eighth

4209

Ninth

4210

Tenth

4211

Eleventh

4212

Twelfth

4213

Thirteen

4214

Fourteenth

4215

Fifteenth

4216

Sixteenth

4217

Seventeenth

4218

Eighteenth

4219

Nineteenth

4220

Twentieth

4250

“A”

4251

“B”

4252

“C”

4253

“D”

4254

“E”

4255

“F”

4256

“G”

4257

“H”

4258

“I”

4259

“J”

4260

“K”

4261

“L”

4262

“M”

4263

“N”

4264

“O”

4265

“P”

4266

“Q”

4267

“R”

4268
“S”

4269
“T”

4270
“U”

4271
“V”

4272
“W”

4273
“X”

4274
“Y”

4275
“Z”

4301
One Page

4302
Two Pages

4303
Three Pages

4304
Four Pages

4305
Five Pages

4306
Six Pages

4307
Seven Pages

4308
Eight Pages

4309
Nine Pages

4310
Ten Pages

4401
Oh-One

4402
Oh-Two

4403
Oh-Three

4404
Oh-Four

4405
Oh-Five

4406
Oh-Six

4407
Oh-Seven

4408
Oh-Eight

4409
Oh-Nine

4520
Twenty

4521
Twenty-One

4522
Twenty-Two

4523
Twenty-Three

4524
Twenty-Four

4525
Twenty-Five

4526
Twenty-Six

4527
Twenty-Seven

4528
Twenty-Eight

4529
Twenty-Nine

4530
Thirty

4531
Thirty-One

4532
Thirty-Two

4533
Thirty-Three

4534
Thirty-Four

4535
Thirty-Five

4536
Thirty-Six

4537
Thirty-Seven

4538
Thirty-Eight

4539
Thirty-Nine

4540
Forty

4541
Forty-One

4542
Forty-Two

4543
Forty-Three

4544
Forty-Four

4545
Forty-Five

4546
Forty-Six

4547
Forty-Seven

4548
Forty-Eight

4549
Forty-Nine

4550
Fifty

4551
Fifty-One

4552
Fifty-Two

4553
Fifty-Three

4554
Fifty-Four

4555
Fifty-Five

4556
Fifty-Six

4557
Fifty-Seven

4558
Fifty-Eight

4559
Fifty-Nine

4621
Twenty-First

4622
Twenty-Second

4623
Twenty-Third

4624
Twenty-Fourth

4625
Twenty-Fifth

4626
Twenty-Sixth

4627
Twenty-Seventh

4628
Twenty-Eighth

4629
Twenty-Ninth

4630
Thirtieth

4631
Thirty-First

4701
You have one new message.

4702
You have two new messages.

4703
You have three new messages.

4704
You have four new messages.

4705
You have five new messages.

4706
You have six new messages.

4707
You have seven new messages.

4708
You have eight new messages.

4709
You have nine new messages.

4710
You have ten new messages.

4721
You have one old message.

4722
You have two old messages.

4723

You have three old messages.

4724

You have four old messages.

4725

You have five old messages.

4726

You have six old messages.

4727

You have seven old messages.

4728

You have eight old messages.

4729

You have nine old messages.

4730

You have ten old messages.

4741

You have one new fax.

4742

You have two new faxes.

4743

You have three new faxes.

4744

You have four new faxes.

4745

You have five new faxes.

4746

You have six new faxes.

4747

You have seven new faxes.

4748

You have eight new faxes.

4749

You have nine new faxes.

4750

You have ten new faxes.

4761

You have one old fax.

4762

You have two old faxes.

4763

You have three old faxes.

4764

You have four old faxes.

4765

You have five old faxes.

4766

You have six old faxes.

4767

You have seven old faxes.

4768

You have eight old faxes.

4769

You have nine old faxes.

4770

You have ten old faxes.

4781

One is urgent.

4782

Two are urgent.

4783

Three are urgent.

4784

Four are urgent.

4785

Five are urgent.

4786

Six are urgent.

4787

Seven are urgent.

4788

Eight are urgent.

4789

Nine are urgent.

4790

Ten are urgent.

4810

You are next in line.

4811

There is one person holding for this extension ahead of you in the queue.

4812

There are two people holding for this extension ahead of you in the queue.

4813

There are three people holding for this extension ahead of you in the queue.

4814

There are four people holding for this extension ahead of you in the queue.

4815

There are five people holding for this extension ahead of you in the queue.

4902

A.M.

4903

P.M.

4904

Message

4905

Messages

4910

New Message

4911

New Messages

4912

Old message

4913

Old messages

4914

New Fax

4915

New Faxes

4916

Old Fax

4917

Old Faxes

4930

...and...

Other prompts in the system that do not need to be recorded

05

"Silence" **starRecord short "empty" message.**

1062

"Silence" **starRecord short "empty" message.**

5000 - 5009

Music on Hold Files

New Administrative User Interface Prompts

Do NOT record prompts marked with italic font. They are only provided as placeholders for reserved prompt numbers.

Do NOT record or translate any of 6XXX prompts in any language except American English.

Number	Text			
6000	DID to voice mail			
6001	Silence before greeting, seconds			
6002	Direct voice mail delay, milliseconds			
6003	Play "You may hang up now"			
6004	Check dial tone			
6005	Pulse or tone dialing			
6006	Check loop drop			
6007	Check reorder tone			
6008	Disconnect digits			
6009	Outbound follow-me Sequence			
6010	Outbound dialing Sequence			
6011	Message light port:			
6012	Message light on sequence			
6013	Message light off sequence			
6014	Alternative message light on sequence			
6015	Alternative message light off sequence			
6016	Message light repeat			
6017	Alternative message light repeat			
6018	Flash-hooks before transfer			
6019	Digits before transfer (before extension)			
6020	Digits before transfer (after extension)			
6021	Flash-hooks to connect			
6022	Digits to connect			
6023	Flash-hooks to recall			
6024	Digits to recall			
6025	Page sequence			
6026	Outbound port			
6027	DTMF on answer			
6028	Await ring on no call progress			
6029	Maximum number of message lights per port			
6030	Disconnect time, tens of second			
6031	Turn message light on for the first new message only			
6032	Turn alternative message light for the first new message only			
6033	DTMF call progress tones			
6034	Busy override sequence			
6035	Put on hold sequence			
6036	Pick up from hold sequence			
6037	Alternative speakerphone			
6038	Alternative paging			
6039	Drop pager sequence			

6040	Operator by ID			
6041	Greeting by ID			
6042	Operator by language			
6043	Greeting by language			
6044	No input destination for the main menu			
6045	No input destination mailbox number			
6046	Conference sequence			
6047	Drop conference sequence			
6048	Disconnect conference sequence			
6049	Maximum call recording time			
6050	Minutes before deleting tentatively recorded calls			
6051	Maximum call recording pause length			
6052	DTMF call progress tone			
6053	<i>DTMF call progress tone 2</i>			
6054	<i>DTMF call progress tone 3</i>			
6055	<i>DTMF call progress tone 4</i>			
6056	<i>DTMF call progress tone 5</i>			
6057	<i>DTMF call progress tone 6</i>			
6058	<i>DTMF call progress tone 7</i>			
6059	<i>DTMF call progress tone 8</i>			
6060	<i>DTMF call progress tone 9</i>			
6061	<i>DTMF call progress tone 10</i>			
6062	On message light success sequence			
6063	Call progress state			
6064	<i>Call progress state 2</i>			
6065	<i>Call progress state 3</i>			
6066	<i>Call progress state 4</i>			
6067	<i>Call progress state 5</i>			
6068	<i>Call progress state 6</i>			
6069	<i>Call progress state 7</i>			
6070	<i>Call progress state 8</i>			
6071	<i>Call progress state 9</i>			
6072	<i>Call progress state 10</i>			
6073	Modem type			
6074	Remote password			
6075	COM port			
6076	Baud rate			
6077	Data bits			
6078	Parity			
6079	Stop bits			
6080	First room			
6081	Last room			
6082	Rooms per floor			
6083	<i>Protocol name</i>			?
6084	Outbound recall sequence			
6085	Outbound connect sequence			
6086	Digits before extension number 2			
6087	Digits after extension number 2			
6088	Digits to connect number 2			
6089	Digits to recall number 2			
6090	Direct voice mail prefix			
6091	Direct voice mail suffix			
6092	Logon prefix			

6093	Logon suffix			
6094	Internal options number 1			
6095	Logging mask			
6096	Delay before answer			
6097	Refresh hours			
6098	Refresh turned off lights also			
6099	Refresh after transfer			
6100	Refresh on incoming calls			
6101	Refresh on the same port only			
6102	Minutes between wake-up calls			
6103	Number of wake-up attempts			
6104	Internal one-touch callback sequence			
6105	Internal one-touch callback recall sequence			
6106	Default ID			
6107	Default initial mailbox			
6108	Begin trunk number for range			
6109	End trunk number for range			
6110	ID for range			
6111	<i>Range 1 Initial mailbox</i>			
6112	<i>Range 2 begin trunk number</i>			
6113	<i>Range 2 End trunk number</i>			
6114	<i>Range 2 ID</i>			
6115	<i>Range 2 Initial mailbox</i>			
6116	<i>Range 3 begin trunk number</i>			
6117	<i>Range 3 End trunk number</i>			
6118	<i>Range 3 ID</i>			
6119	<i>Range 3 Initial mailbox</i>			
6120	<i>Range 4 begin trunk number</i>			
6121	<i>Range 4 End trunk number</i>			
6122	<i>Range 4 ID</i>			
6123	<i>Range 4 Initial mailbox</i>			
6124	<i>Range 5 begin trunk number</i>			
6125	<i>Range 5 End trunk number</i>			
6126	<i>Range 5 ID</i>			
6127	<i>Range 5 Initial mailbox</i>			
6128	<i>Range 6 begin trunk number</i>			
6129	<i>Range 6 End trunk number</i>			
6130	<i>Range 6 ID</i>			
6131	<i>Range 6 Initial mailbox</i>			
6132	<i>Range 7 begin trunk number</i>			
6133	<i>Range 7 End trunk number</i>			
6134	<i>Range 7 ID</i>			
6135	<i>Range 7 Initial mailbox</i>			
6136	<i>Range 8 begin trunk number</i>			
6137	<i>Range 8 End trunk number</i>			
6138	<i>Range 8 ID</i>			
6139	<i>Range 8 Initial mailbox</i>			
6140	<i>Range 9 begin trunk number</i>			
6141	<i>Range 9 End trunk number</i>			
6142	<i>Range 9 ID</i>			
6143	<i>Range 9 Initial mailbox</i>			
6144	<i>Range 10 begin trunk number</i>			
6145	<i>Range 10 End trunk number</i>			

6146	Range 10 ID			
6147	Range 10 Initial mailbox			
6148	Setup ring back tone			
6149	Setup alternative Ring back tone			
6150	Setup busy tone			
6151	Setup alternative Busy tone			
6152	Setup DND tone			
6153	Setup central office ring back tone			
6154	Setup central office busy tone			
6155	Setup reorder tone			
6156	Setup dial tone			
6157	Setup central office reorder tone			
6158	Setup central office dial tone			
6159	Tone used			
6160	Frequency 1			
6161	Frequency 2			
6162	First ON time			
6163	First ON time deviation			
6164	First OFF Time			
6165	First OFF Time deviation			
6166	Second ON time			
6167	Second ON time Deviation			
6168	Second OFF Time			
6169	Second OFF Deviation			
6170	Repeat times			
6171	Number of languages			
6172	Set primary language			
6173	On Internal Forward			
6174	On Internal Busy Forward			
6175	On Internal No Answer Forward			
6176	On Internal Recall			
6177	On External forward			
6178	On External Busy Forward			
6179	On External No Answer Forward			
6180	On External Recall			
6181	On Direct Internal call			
6182	On Direct external call			
6183	On call recording			
6184	On Fwd DND Internal			
6185	On Fwd DND External			
6186	On Internal Transfer			
6187	On External Transfer			
6188	On message light callback			
6189	On Invalid Recall Internal			
6190	On Invalid Recall External			
6191	On Internal Overflow			
6192	On External Overflow			
6193	On DID			
6194	External One-touch callback sequence			
6195	External One-touch callback recall sequence			
6196	Number of digits in a mailbox number			
6197	Outbound wake-up call sequence			
6198	Inbound wake-up call sequence			

6201	All ports ring			
6202	Maximum greeting length, seconds			
6203	Disconnect on silence			
6204	Directory mailbox			
6205	Notification cycle, minutes			
6206	Inbound rings			
6207	Outbound rings			
6208	Day flag mailbox			
6209	Night flag mailbox			
6210	Beeper sequence			
6211	Retries on no input			
6212	Minimum recording length, seconds			
6213	Delay for extension number, seconds			
6214	Page delay, seconds			
6215	Operator delay, seconds			
6216	Disable name search			
6217	Hide extension number			
6218	List names on directory search			
6219	Purge when disk is full, percent			
6220	Maximum system hold			
6221	Hold attempts			
6222	Hold seconds			
6223	Days between maintenance			
6224	Day of maintenance			
6225	Fax port 1			
6226	Fax port 2			
6227	Fax port 3			
6228	Fax port 4			
6229	Fax ID	?		
6230	TTI Skip, 2 mm intervals			
6231	Fax dial string			
6232	Cover document			
6233	Maximum documents allowed			
6234	Call back allowed			
6235	<i>Local Area code</i>	X		
6236	<i>Add One</i>	X		
6237	International calls allowed			
6238	To put the system in automatic mode press 0, To put the system in the day mode press 1, To put the system in the night mode press 2			
6239	Use special greeting			
6240	Day general delivery mailbox			
6241	Night general delivery mailbox			
6242	Current system time			
6243	Current system date			
6245	Holidays allowed			
6246	For general name search press 0, For search by the last name press 1, For search by the first name press 2			
6247	Mailbox to receive faxes			
6249	Day welcome message number			
6250	Night welcome message number			
6251	Special welcome message number			

6252	Day main menu part 1 message number			
6253	Night Main menu part 1 message number			
6254	Special main menu part 1 message number			
6255	Day Single digit Menu message number			
6256	Night Single digit Menu message number			
6257	Special Single digit Menu message number			
6258	Day Main menu part 2 message number			
6259	Night Main menu part 2 message number			
6260	special Main menu part 2 message number			
6261	Allow single digit menu			
6262	Allow single digit menu at night			
6263	Single Digit menu '1' corresponds to Mailbox			
6264	Single Digit menu '2' corresponds to Mailbox			
6265	Single Digit menu '3' corresponds to Mailbox			
6266	Single Digit menu '4' corresponds to Mailbox			
6267	Single Digit menu '5' corresponds to Mailbox			
6268	Single Digit menu '6' corresponds to Mailbox			
6269	Single Digit menu '7' corresponds to Mailbox			
6270	Single Digit menu '8' corresponds to Mailbox			
6271	Answer on Ring for port number			
6272	<i>Answer on Ring for port number 2</i>			
6273	<i>Answer on Ring for port number 3</i>			
6274	<i>Answer on Ring for port number 4</i>			
6275	<i>Answer on Ring for port number 5</i>			
6276	<i>Answer on Ring for port number 6</i>			
6277	<i>Answer on Ring for port number 7</i>			
6278	<i>Answer on Ring for port number 8</i>			
6279	<i>Answer on Ring for port number 9</i>			
6280	<i>Answer on Ring for port number 10</i>			
6281	<i>Answer on Ring for port number 11</i>			
6282	<i>Answer on Ring for port number 12</i>			
6283	<i>Answer on Ring for port number 13</i>			
6284	<i>Answer on Ring for port number 14</i>			
6285	<i>Answer on Ring for port number 15</i>			
6286	<i>Answer on Ring for port number 16</i>			
6287	Unique identifier for port number			
6288	<i>Unique identifier for port number 2</i>			
6289	<i>Unique identifier for port number 3</i>			
6290	<i>Unique identifier for port number 4</i>			
6291	<i>Unique identifier for port number 5</i>			
6292	<i>Unique identifier for port number 6</i>			
6293	<i>Unique identifier for port number 7</i>			
6294	<i>Unique identifier for port number 8</i>			
6295	<i>Unique identifier for port number 9</i>			
6296	<i>Unique identifier for port number 10</i>			
6297	<i>Unique identifier for port number 11</i>			
6298	<i>Unique identifier for port number 12</i>			
6299	<i>Unique identifier for port number 13</i>			
6300	<i>Unique identifier for port number 14</i>			
6301	<i>Unique identifier for port number 15</i>			
6302	<i>Unique identifier for port number 16</i>			
6303	Add Holiday			
6304	Voice Mail Port extension for port number			

6305	Voice Mail Port extension for port number 2			
6306	Voice Mail Port extension for port number 3			
6307	Voice Mail Port extension for port number 4			
6308	Voice Mail Port extension for port number 5			
6309	Voice Mail Port extension for port number 6			
6310	Voice Mail Port extension for port number 7			
6311	Voice Mail Port extension for port number 8			
6312	Voice Mail Port extension for port number 9			
6313	Voice Mail Port extension for port number 10			
6314	Voice Mail Port extension for port number 11			
6315	Voice Mail Port extension for port number 12			
6316	Voice Mail Port extension for port number 13			
6317	Voice Mail Port extension for port number 14			
6318	Voice Mail Port extension for port number 15			
6319	Voice Mail Port extension for port number 16			
6320	Delete Holiday number			
6321	Delete Holiday number 2			
6322	Delete Holiday number 3			
6323	Delete Holiday number 4			
6324	Delete Holiday number 5			
6325	Delete Holiday number 6			
6326	Delete Holiday number 7			
6327	Delete Holiday number 8			
6328	Delete Holiday number 9			
6329	Delete Holiday number 10			
6330	Delete Holiday number 11			
6331	Delete Holiday number 12			
6332	Delete Holiday number 13			
6333	Delete Holiday number 14			
6334	Delete Holiday number 15			
6335	Delete Holiday number 16			
6336	For the day of the month based schedule, press 0, For the week of the month press 1			
6337	Day of the month			
6338	Month			
6339	Holiday length, days			
6340	If the holiday falls on the weekend then If it does not shift press 0, to shift it to next Monday, press 1, to shift it to previous Friday, press 2, to shift it to closest weekday, press 3			
6341	Welcome greeting message			
6342	Main menu part 1 message			
6343	Single digit Menu message			
6344	Main Menu Part 2 message			
6345	Week of Month			
6346	Day of Week			
6347	Set basic business hours, Monday to Friday, Weekends are Nights			
6348	Set Business hours for Saturday			
6349	Set Business hours for Sunday			
6350	Set business hours for Monday			
6351	Set business hours for Tuesday			

6352	Set business hours for Wednesday			
6353	Set business hours for Thursday			
6354	Set business hours for Friday			
6355	Set business hours for Weekends			
6356	Set business hours for Weekdays			
6357	Set business hours for Every day			
6358	Set Start Time for Period 1			
6359	Set Start Time for Period 2			
6360	Set Start Time for Period 3			
6361	Set End Time for Period 1			
6362	Set End Time for Period 2			
6363	Set End Time for Period 3			
6364	Set operating mode for period 1. If it is Day mode, press 0, If it is a night mode, press 1 If it is a Special mode, press 2, Or if it is unused, press 3			
6365	Set operating mode for period 2. If it is Day mode, press 0, If it is a night mode, press 1 If it is a Special mode, press 2, Or if it is unused, press 3			
6366	Set operating mode for period 3. If it is Day mode, press 0, If it is a night mode, press 1 If it is a Special mode, press 2, Or if it is unused, press 3			
6367	Set operating mode for Other time. If it is Day mode, press 0, If it is a night mode, press 1 If it is a Special mode, press 2, Or if it is unused, press 3			
6368	Day Start Time			
6369	Day End time			
6370	Edit Holiday number			
6371	<i>Edit Holiday number 2</i>			
6372	<i>Edit Holiday number 3</i>			
6373	<i>Edit Holiday number 4</i>			
6374	<i>Edit Holiday number 5</i>			
6375	<i>Edit Holiday number 6</i>			
6376	<i>Edit Holiday number 7</i>			
6377	<i>Edit Holiday number 8</i>			
6378	<i>Edit Holiday number 9</i>			
6379	<i>Edit Holiday number 10</i>			
6380	<i>Edit Holiday number 11</i>			
6381	<i>Edit Holiday number 12</i>			
6382	<i>Edit Holiday number 13</i>			
6383	<i>Edit Holiday number 14</i>			
6384	<i>Edit Holiday number 15</i>			
6384	<i>Edit Holiday number 16</i>			
6386	Local area code			
6387	Long distance prefix			
6388	Always use area code			
6389	Number of fax retries			

6390	Delay between fax retries (in minutes)			
6400	Mailbox activation status			
6401	Mailbox Extension			
6402	Mailbox Password			
6403	Maximum number of messages			
6404	Maximum recording time			
6405	Purge time in days			
6406	Rings at Extension			
6407	Delete messages immediately			
6408	Message forward days			
6409	Messages are forwarded to mailbox			
6410	Direct to voice mail			
6411	Guest mailbox			
6412	Save old messages			
6413	Allow fax messages with voice attachments			
6414	Always play sender's name			
6415	Always play date			
6416	Play captured digits			
6417	Beeper sequence			
6418	Rewind time in seconds			
6419	Always play the number of messages scheduled for future delivery			
6420	Turn message waiting light off			
6421	For old messages: To play newer messages first, press 0, To play older messages first, press 1			
6422	For new messages: To play newer messages first, press 0, To play older messages, first press 1			
6423	Audiotext mailbox			
6424	Outbound forwarding allowed			
6425	Forward type			
6426	Forward number			
6427	Greeting for Busy in the day mode			
6428	Greeting for Not Available in the day mode			
6429	Greeting for Busy in the night mode			
6430	Greeting for Not Available in the night mode			
6431	Greeting for Busy in the special mode			
6432	Greeting for Not Available in the special mode			
6433	Default Greeting Number			
6434	Automatic Greeting selection			
6435	Rerouting calls on Busy. To route calls to the Voice Mail, press 0, To route calls to another mailbox, press 1, To route calls to the operator, press 2			
6436	Number of the mailbox to reroute calls on busy to			
6437	Rerouting calls on Not Available. To route calls to the Voice Mail, press 0, To route calls to another mailbox, press 1, To route calls to the operator, press 2			
6438	Number of the mailbox to reroute calls on not available to			
6439	Reroute calls on Rejected. To route calls to the Voice Mail, press 0,			

	To route calls to another mailbox, press 1, To route calls to the operator, press 2			
6440	Number of the mailbox to reroute calls on rejected to			
6441	Personal operator			
6442	Personal operator's mailbox			
6443	Notification delay, minutes			
6444	Number of notifications			
6445	Minutes between notifications			
6446	Allow Hold			
6447	Hold Begin			
6448	Hold End			
6449	Maximum Hold			
6450	Play Hold Position			
6451	Hold on Not Available			
6452	Page Zone			
6453	Transfer calls to the extension only in systems day mode			
6454	Inform the mailbox owner which mailbox was dialed before the call is connected			
6455	Perform blind transfers to the assigned extension			
6456	Direct access			
6457	Group mailbox			
6458	Speakerphone			
6459	Voice mail only			
6460	Allow overhead paging			
6461	Perform overhead paging instead of transfer			
6462	Allow urgent messages			
6463	Use the alternative message notification sequence			
6464	Skip extension status			
6465	Call screening			
6466	Beep only			
6467	No options			
6468	Allow fax messages			
6469	Allow only fax messages			
6470	Busy override			
6471	Capture digits			
6472	Allow wake-up calls			
6473	Allow fax broadcasting			
6474		?		
6475	Exclude from emergency purge procedure			
6476	Allow call recording			
6477	Audiotext link			
6478	<i>Audiotext link 2</i>			
6479	<i>Audiotext link 3</i>			
6480	<i>Audiotext link 4</i>			
6481	<i>Audiotext link 5</i>			
6482	<i>Audiotext link 6</i>			
6483	<i>Audiotext link 7</i>			
6484	<i>Audiotext link 8</i>			
6485	<i>Audiotext link 9</i>			
6486	Audiotext mailbox			
6487	Hang up when greeting is played			
6488	Record responses			

6489	Allow fax back			
6490	Only 1 fax back document can be selected			
6491	For broadcast group, press 0, For dispatch group, press 1, For ACD only group, press 2, For retrieval group, press 3			
6492	For No call distribution, press 0, For top down call distribution, press 1, For uniform call distribution, press 2			
6493	Number of group members			
6494	Group member			
6495	<i>Group member 2</i>			
6496	<i>Group member 3</i>			
6497	<i>Group member 4</i>			
6498	<i>Group member 5</i>			
6499	<i>Group member 6</i>			
6500	<i>Group member 7</i>			
6501	<i>Group member 8</i>			
6502	<i>Group member 9</i>			
6503	<i>Group member 10</i>			
6504	<i>Group member 11</i>			
6505	<i>Group member 12</i>			
6506	<i>Group member 13</i>			
6507	<i>Group member 14</i>			
6508	<i>Group member 15</i>			
6509	<i>Group member 16</i>			
6510	<i>Group member 17</i>			
6511	<i>Group member 18</i>			
6512	<i>Group member 19</i>			
6513	<i>Group member 20</i>			
6514	<i>Group member 21</i>			
6515	<i>Group member 22</i>			
6516	<i>Group member 23</i>			
6517	<i>Group member 24</i>			
6518	<i>Group member 25</i>			
6519	<i>Group member 26</i>			
6520	<i>Group member 27</i>			
6521	<i>Group member 28</i>			
6522	<i>Group member 39</i>			
6523	<i>Group member 30</i>			
6524	<i>Group member 31</i>			
6525	<i>Group member 32</i>			
6526	<i>Group member 33</i>			
6527	<i>Group member 34</i>			
6528	<i>Group member 35</i>			
6529	<i>Group member 36</i>			
6530	<i>Group member 37</i>			
6531	<i>Group member 38</i>			
6532	<i>Group member 39</i>			
6533	<i>Group member 40</i>			
6534	First 3 characters of your last name			
6535	First 3 characters of your first name			
6536	Middle initial			

6537	First wake up call time			
6538	Second wake up call time			
6539	Third wake up call time			
6540	First wake up call destination number			
6541	Second wake up call destination number			
6542	Third wake up call destination number			
6543	Interactive voice response mailbox			
6544	IVR ID			
6545	Next Mailbox			
6546	Mailbox to store responses			
6547	Response is required			
6548	Maximum response length			
6700	Enable Remote Maintenance			
6701	Replay internal version number			
6702	Load switch default			
6703	Generate Mailbox usage report			
6704	Generate system configuration report			
6705	Generate system activity report			
6706	Generate wake up call report			
6707	Load fax-on-demand document			
6710	Reboot			

Prompt History

Version 3.8:

Added the following prompts:

GTDEF.MSG

1059

1060

1061

1062

1063

1064

1065

1066

1067

1068

1069

1070

1071

1080

1081

1082

2070

2071

2072

Version 3.81 (Wake up calls)

1200

1201

1202

1203

1204

1205

1206

1207

1208

1209

1210

1211

1212

1213

1214

1215

1216

1252

1253
1254

Version 5.0:

1090
1091
1092
1093
1102
1160
1161
1162
1237
1238
1250
1251
2075
2076
2077
2078
2079
2080
2081
2083
2084
2085
2086
2087
2088
2089
3035
09

5.2

Cadence 1.0

New user recorded prompts

01 – re-record
02 – re-record
03 – re-record
09 – re-record
1092
1094
1105
1106

1107
1140 – 1148
1200 – 1204
1255 – 1263
1272 – 1276
2082
2085 – re-record
2090 – 2099
2107 – 2108
2111
2120
2121
2123 – 2125
2130 – 2136
2140 – 2144
2150 - 2153
3200 – 3208
3211 – 3218
3222 – 3231
3233 – 3239
3241
3245 – 3248
3250 – 3263
3265
4020 - 4023
4150
4151
4160
4161
4040 – same as 4028
4041
4050
4051
4060
4061
4070
4071
4080
4081
4930
6000 – 6705
6710

Cadence 1.1

6389, 6390
2160 – 2163
2165 – 2168

6707

TVM-2000 version 3.91

6197, 6198, 6706

The following prompts became unused:

1101 -- Replaced by 1251
2012 -- Replaced by 2087
3035 -- Replaced by 3066
3043

IntegraX 6.0

2160 - 2351
2066
4250 – 4276
3067