1. Precautions

Please read the following carefully to prevent any accidents and not to damage the unit during service.

1-1 Safety Precautions

Read each caution carefully:

- 1. Do not use this printer near water or when exposed to inclement weather.
- 2. Do not place this printer on an unstable cart, stand or table; the product may fall, causing serious damage to the product.
- 3. Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation and to protect the printer from ever heating, do not block or cover any of these openings. Do not place the printer in an enclosure unless the enclosure provides adequate ventilation.
- 4. Never push objects of any kind into the printer through the cabinet ventilation slots as they may touch dangerous high voltage points, create short circuits, cause a fire, or produce an electrical shock. Never spill liquid of any kind on the printer.
- 5. Do not place the printer in a location where someone may trip on the cords.
- 6. Select a work surface that is large enough to hold the printer.
- 7. Position the printer within six feet of the computer and within five feet of an electrical outlet.
- 8. Operate this printer using the power source (110V, 220V, etc) indicated on the marking label. If you are not sure of the type of power source available, consult vour dealer or local power company.
- 9. If you need to use an extension power cord with this printer, make sure that it uses a three-wire grounded cord and that the total ampere ratings for all of the products using the extension do not exceed the extension cord ampere rating. Also, make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes.
- 10. Do not allow anything to rest on the power cord or data communications cable.
- 11. Unplug this printer from the wall outlet before cleaning. Do not use liquid cleaners or aerosol sprays. Use a damp cloth for cleaning.
- 12. Do not touch the surface of the photo-sensitive drum as marks or scratches may impair print quality.
- 13. Do not expose the drum unit to direct light for prolonged periods.
- 14. Use only standard papers, OHP films, and approved envelopes. Feed OHP films though the manual feed slot only. See specifications for approved papers and envelopes.
- 15. Other than replacing consumables such as paper and toner, refer all questions to qualified service personnel.



Especially mind the safety on the part with this mark.

You must use regular parts described in specifications for the parts inflammable and where the current can be flown. Otherwise any hazard such as an electric shock or a fire could occur.

LASER STATEMENT (LASERTURVALLISUUS)

WARNING: NEVER OPERATE AND SERVICE THE PRINTER WITH THE PROTECTIVE COVER REMOVED FROM LASER/SCANNER ASSEMBLY. THE REFLECTIVE BEAM, ALTHOUGH INVISIBLE, CAN DAMAGE YOUR EYES.

Class 1 laser product

Luokan 1 laserlaite Klass 1 laser apparat

Allonpituus 770-795nm Teho 0.3mW±0.03mW



CAUTION

INVISIBLE LASER RADIATION WHEN THIS COVER OPEN. DO NOT OPEN THIS COVER.

VORSICHT

UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEOFFNET. NIGHT DEM STRAHL AUSSETZEN.

ATTENTION

REYONNEMENT LASER INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGERUSE AU

FAISCEAU.

ATTENZIONE RADIAZIONE LASER INVISIBLE IN CASO DI APERTURA. EVITARE L'ESPOSIZONE LA FASCIO.

PRECAUCION REDIACION LASER INVISIBLE CUANDO SE ABRE. EVITAR EXPONERSE AL RAYO.

CAUTION: Avoid exposure to invisible laser radiation when the development unit is not installed.

Samsung Electronics 1-1

1-2 Precautions on Disassembly and Reassembly

Very careful precautions should be taken when replacing parts. Before replacing, please check cables because you cannot put the cables that you removed for replacing parts into the proper place if you would not make sure of where they were connected and in which condition.

Please do the following before disassembling for a repair or replacement of parts.


- Pull out paper cassette, printer cartridge installed. Especially careful not to be scratched by the surface of developer or not to expose them to light.
- 2. Turn the power switch off.
- 3. Take out the power plug, printer cable from the printer.
- 4. Use only the same type of part as original when replacing parts.
- Do not force to open or fasten plastic material components.
- 6. Be careful that small parts such as screws should not get in the printer.

- 7. When disassembling, assembling, also observe small components are located in place.
- If you uncover and turn the machine over to replace some parts, toner or paper particles may contaminate the LSU window. Protect the LSU window with clean paper.

Releasing Plastic Latches

Many of parts are held in place with plastic latches. The latches break easily: release them carefully. To remove such parts, press the hook end of the latch away from the part to

which it is latched.

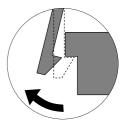


1-2 Samsung Electronics

1-3 Tools for Troubleshooting

The following tools are recommended for safe and smooth troubleshooting described in this service manual.

DCU(Diagnostic Control Unit)

Standard: Test equipment to diagnose the Laser printer supplied by Samsung Electronics.

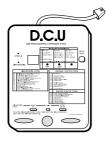

Pinset

M2 long, M2 short).


Standard: For general home use, small type.



Standard: "-" type, "+" type (M3 long, M3 short,

DVM(Digital Volt Meter)

Standard: Indicates more than 3 digits.

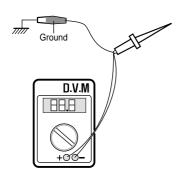

Cotton Swab

Standard: For general home use, for medical ser-




Cleaning Equipments a IPA(Isopropyl Alcohol)dry cloth or a soft stuff neutral detergent.

Electronic Scale

3 Electronic Scale
Standard: Equipment to check the weight of con-Electronics. (The gram unit can be measured.)



Software(Driver) installation CD ROM

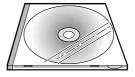



Mind your hands not to be touched when you disassemble and reassemble PBA ASS'Y, such as the main board, SMPS, HVPS.

Samsung Electronics 1-3