# 11 Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the TFT-LCD TV.

**△ WARNING**: This monitor contains electrostatically sensitive devices. Use caution when handling these components.

### 11-1 Disassembly


- **△ Cautions : 1. Disconnect the monitor from the power source before disassembly.** 
  - 2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

# **Description Picture Description** 1. Place monitor face down on cushioned table. Remove screws from the rear cover. Remove screws from the stand.

### **Description**


## **Description Picture**

2. Remove Screws from the stand and remove the stand.

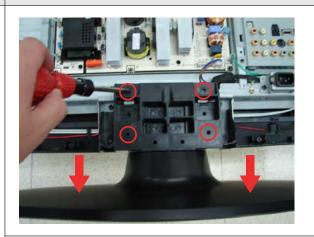



3. Remove 6 screws from the main board cover. Remove 2 screws from the cover-jack.

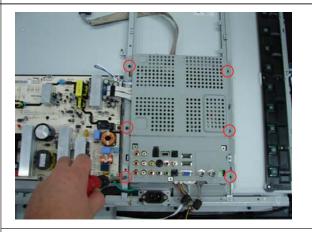




## **Description**

## **Description Picture**

4. Disconnect cables from the power board. Lift up the main board cover.



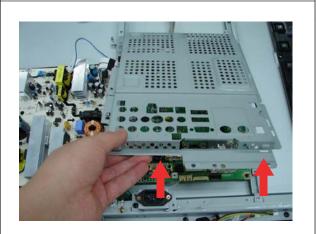

5. Disconnect cables and remove the screws from the Main board.






# **Description Description Picture** 6. Remove Screws from the stand BRKT and lift up the stand BRKT. 7. Remove screws and Lift up the Lcd panel.

## **Description**

## **Description Picture**

8. Remove 5 secews from the BRKT. Lift up the BRKT.



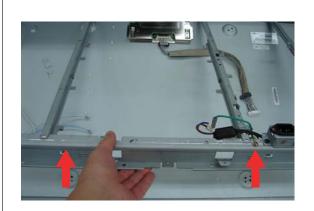



### 11-2 Reassembly

Reassembly procedures are in the reverse order of disassembly procedures.

11 Disassembly and Reassembly

### Memo