

## 11 Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the TFT-LCD TV.

**⚠ WARNING : This monitor contains electrostatically sensitive devices. Use caution when handling these components.**

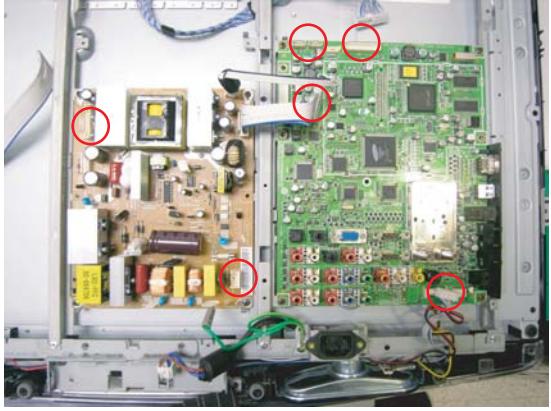
### 11-1 Disassembly

**⚠ Cautions :**

1. Disconnect the monitor from the power source before disassembly.
2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

Description	Picture Description
<p>1. Place monitor face down on cushioned table. Remove screws from the rear cover and remove screws from the stand.</p>	

Description	Picture Description
2. Lift up the rear cover and remove the stand.	
3. Remove Screws from the stand BRKT and lift up the stand BRKT.	

Description	Picture Description
4. Disconnect cable from the boards.	
5. Remove screws from the board and lift up the speakers.	
	

<b>Description</b>	<b>Picture Description</b>
6. Remove screws from the panel BRKT and lift up the BRKT.	
	
	

## 11-2 Reassembly

Reassembly procedures are in the reverse order of disassembly procedures.

Memo