





3. Disassembly and Reassemble

This section of the service manual describes the disassembly and reassembly procedures for the LS57BPP LCD monitor.









⚠ WARNING: This monitor contains electrostatically sensitive devices. Use caution when handling these components.

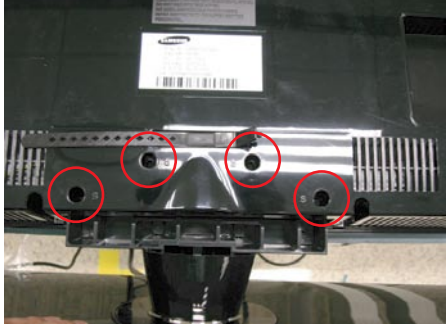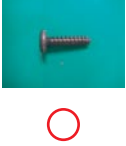




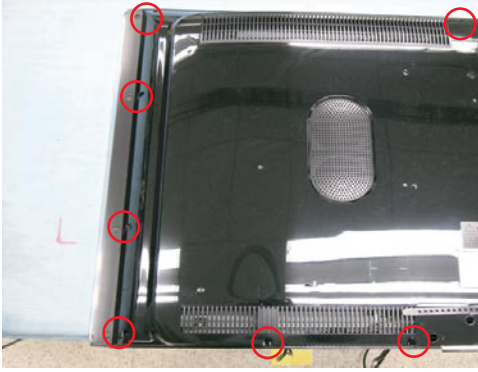


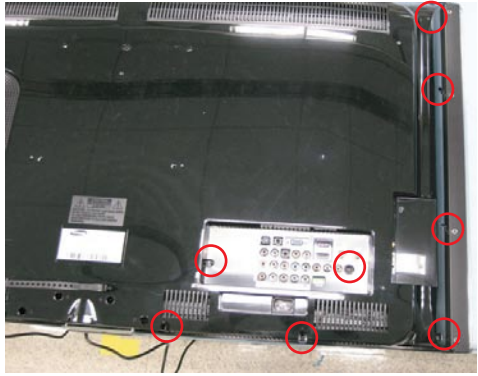3-1. Disassembly

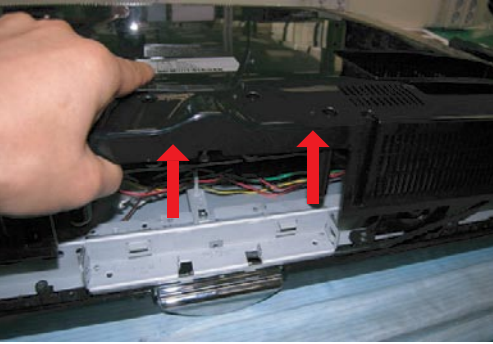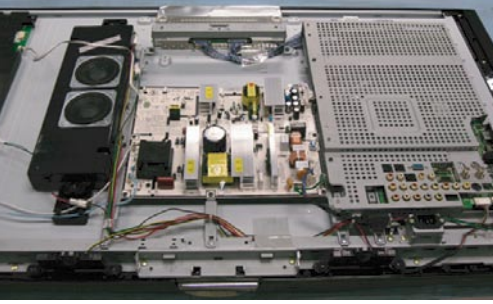- ⚠ Cautions:**
1. Disconnect the monitor from the power source before disassembly.
 2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

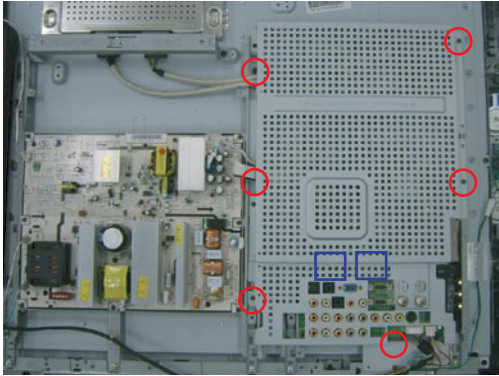



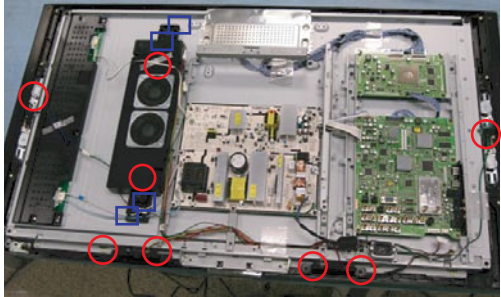


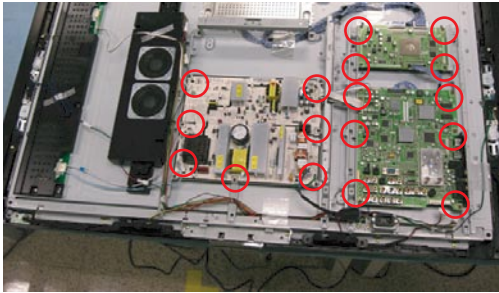
Description	Picture Description	Screws
1. Place monitor face down on cushioned table. Remove screws from the Stand. Remove stand.		
		
		




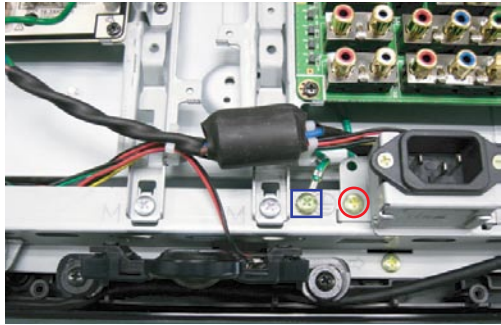


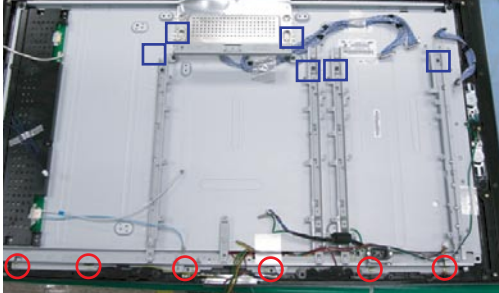





3. Disassembly and Reassemble

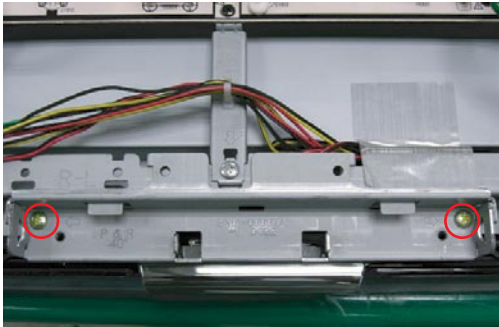Description	Picture Description	Screws
<p>2. Remove the screws of rear-cover.</p>		 
		 
<p>3. Lift up the rear-cover.</p>	 	











Description	Picture Description	Screws
<p>4. Remove the screws of Scaler board's shield case and boards.</p>		   
		 

3. Disassembly and Reassemble

Description	Picture Description	Screws
<p>5. Remove the screws of Left/Right, Bottom Left/Bottom Right and center woofer speaker.</p>		  
		  

Description	Picture Description	Screws
<p>6. Remove the screws of Stand BKLT. Lift up the Stand BKLT.</p>		 
<p>7. Remove the Side AV Ass'y (only 46",52")</p>		 
<p>8. Remove the Bracket of Boards</p>		   
<p>* Caution: Don't force yourself on wall mount bracket during disassembly. It may be deformed.</p>		

3. Disassembly and Reassemble

Description	Picture Description	Screws
<p>9. Remove the screws on Panel.</p>		   
	 	 
		

※ Reassembly procedures are in the reverse order of disassembly procedures.