

3. Disassembly and Reassembly


3-1 Removal of Main Button

Insert a flat head driver into the gap and lift the front of the button upward, turning and pulling the driver.

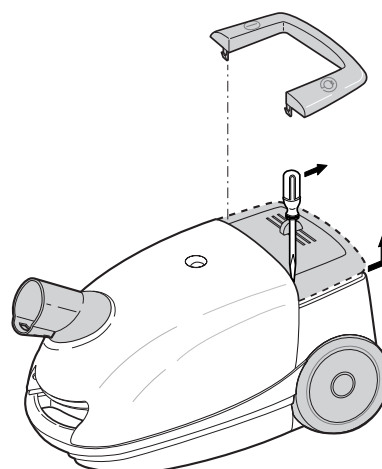


3-2 Removal of Panel

Lift the back of the panel with a flat-head driver and open the dust cover. Detach the panel.

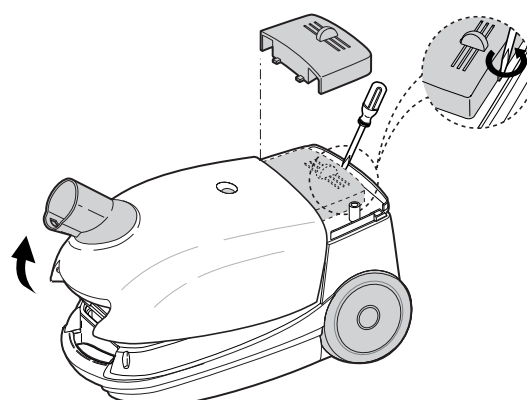


3-3 Disassembly of Dust Cover

Detach the dust cover with a flat-head screw driver.

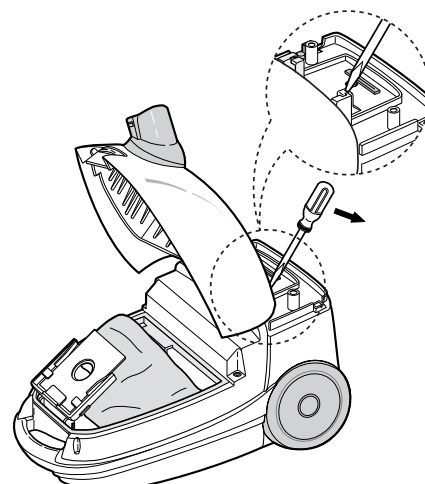


3-4 Disassembly of Main Body

Loosen the five screws and grasp both sides of the MAIN-BODY. Lift it upwards, pushing the rubber downwards with your thumbs.

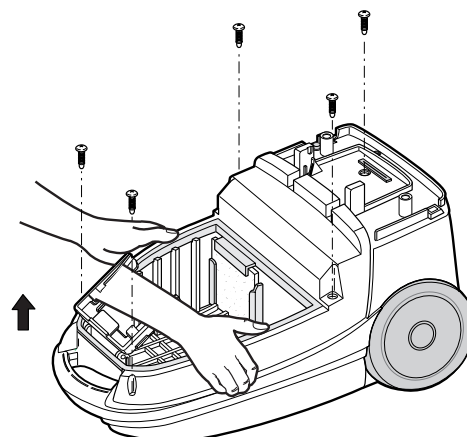


3-5 Removal of Main PCB Assembly

Separate the WIRE ASS'Y from the MAIN-PCB ASS'Y.

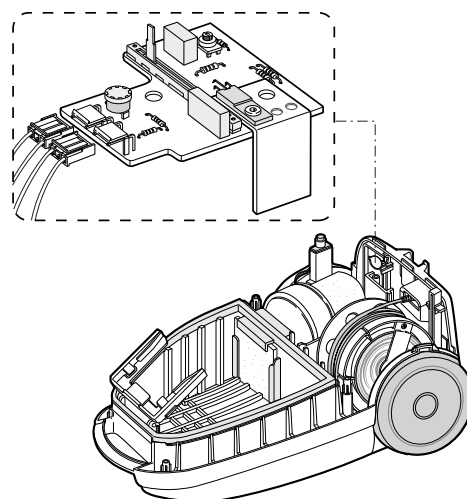


3-6 Motor Replacement

Separate the PACKING -RING F, PACKING-MOTOR B, and SPONGE-MOTOR.

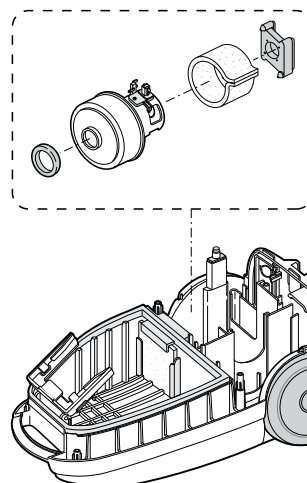


3-7 Cord-Reel Replacement


1. Separate the GRILLE-BODY from the main body.

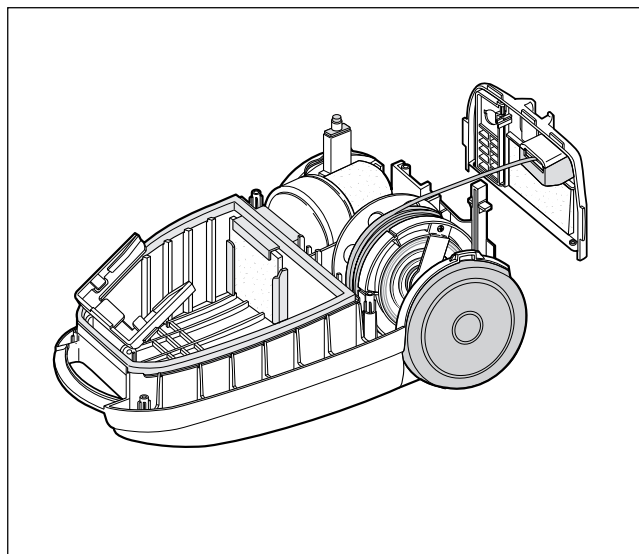

2. Disassemble the GUARD-CORD with a flat head driver. (Insert it into the gap and push the hook to the opposite side.)

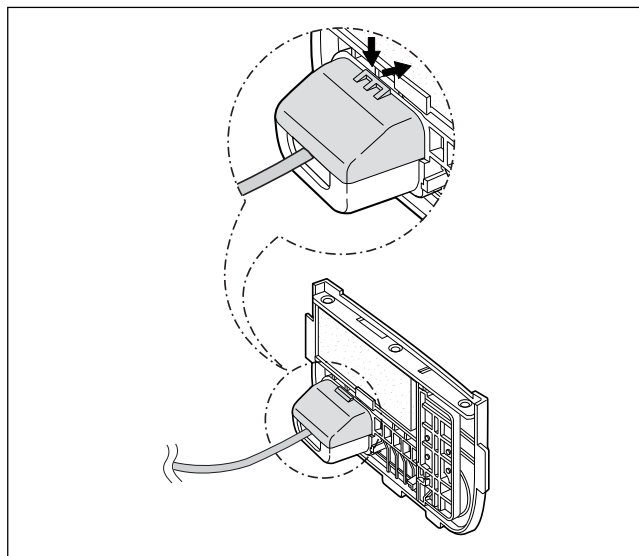


3. Separate the CORD-REEL from the main body.

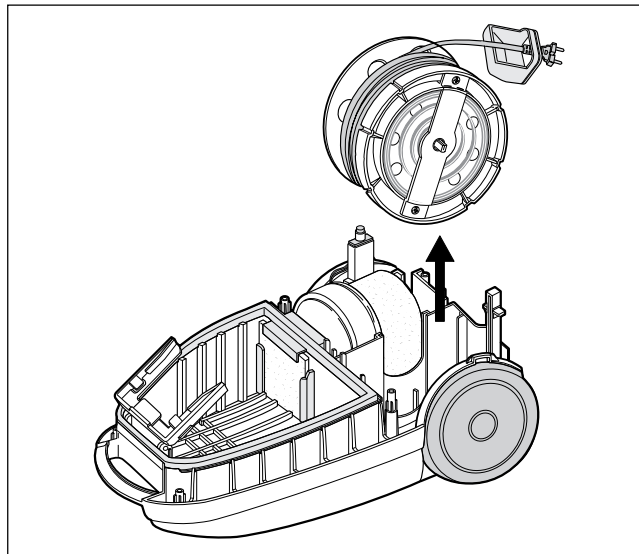


3-4 Disassembly of Main Body

Loosen the five screws and grasp both sides of the MAIN-BODY. Lift it upwards, pushing the rubber downwards with your thumbs.

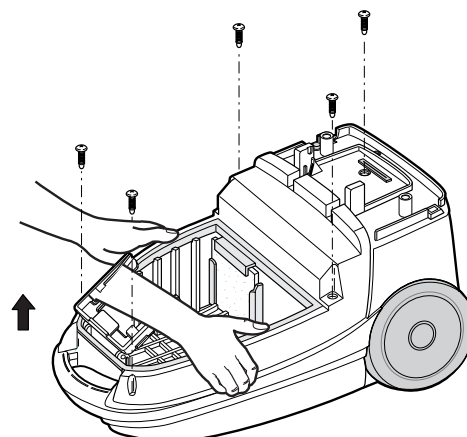


3-5 Removal of Main PCB Assembly

Separate the WIRE ASS'Y from the MAIN-PCB ASS'Y.

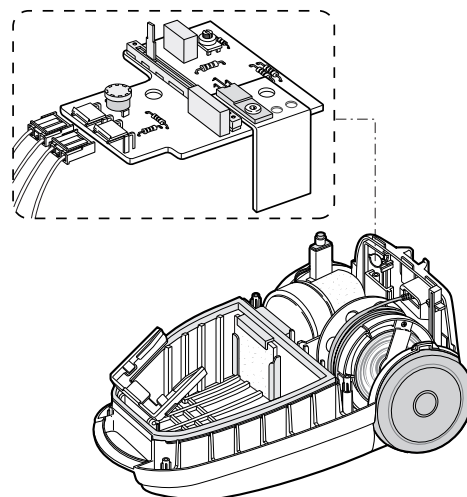


3-6 Motor Replacement

Separate the PACKING -RING F, PACKING-MOTOR B, and SPONGE-MOTOR.

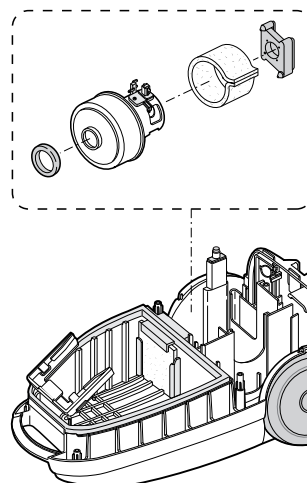


3-7 Cord-Reel Replacement


1. Separate the GRILLE-BODY from the main body.

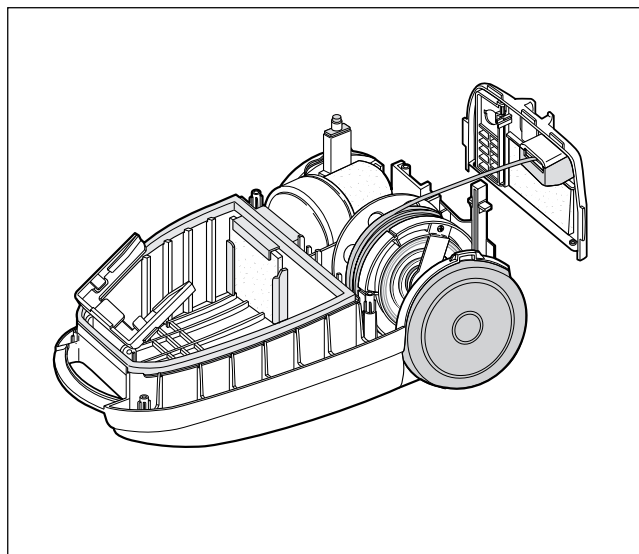


2. Disassemble the GUARD-CORD with a flat head driver. (Insert it into the gap and push the hook to the opposite side.)

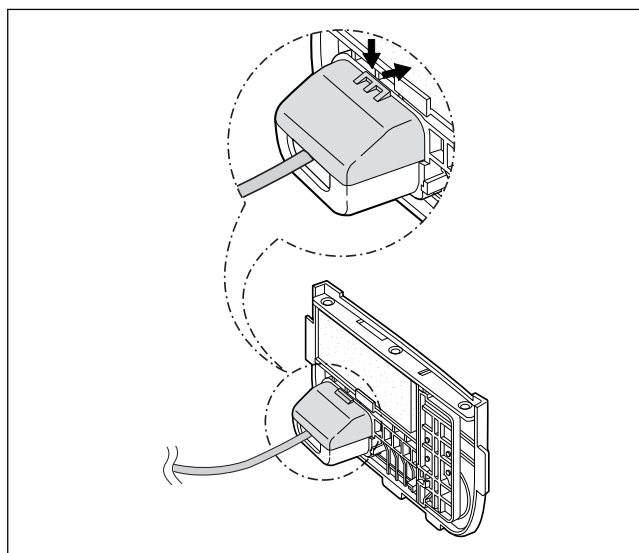

3. Separate the CORD-REEL from the main body.

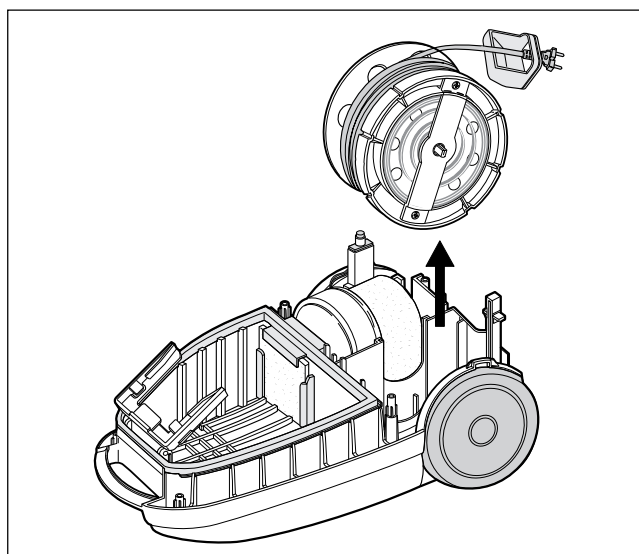

-
4. Hold the body reel, and wind the power cord to the left 4~5 times.

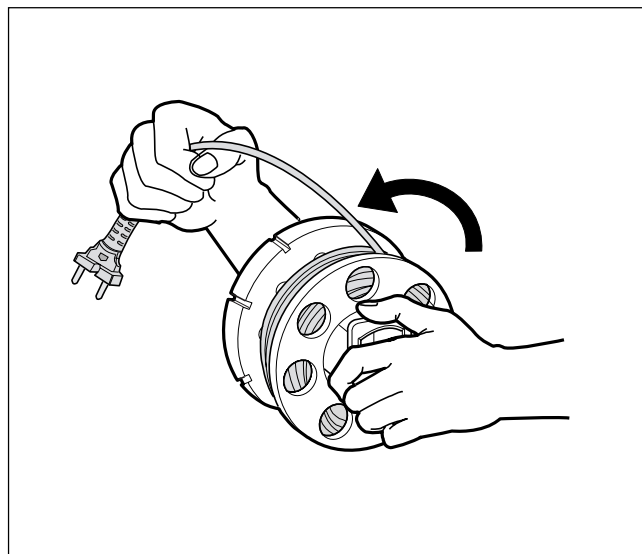

5. After winding, assemble the Cord-Reel to the body.