

---

# 1. Precautions

---

Technical service information contained here is supplied for use by qualified service personnel.

Specifications are subject to change without notice.

1. Do not use the vacuum cleaner when rug or floor is wet.
2. Close supervision is necessary when any appliance is used by or near children.  
Do not allow the vacuum cleaner to run unattended at any time.
3. Do not use the vacuum cleaner without a dust bag. Change the dust bag frequently when picking up very fine materials such as powder. Change the dust bag before it is excessively full in order to maintain optimum performance.
4. Never use the vacuum cleaner to pick up matches, live ashes or cigarette butts.  
Keep the vacuum cleaner away from stoves or heat source. Heat can deform and discolour the plastic parts of the unit.
5. Avoid picking up hard or sharp objects with the vacuum cleaner.  
Do not stand on the hose assembly, put a weight on the hose, or block the suction or exhaustion part.
6. Unplug the cleaner when not in use. Turn off the power switch before unplugging.
7. Grasp the plug firmly when removing it. To avoid damage to cord, plug, prongs or socket, always disconnect the cord from the electrical outlet before replacing the dust bag or servicing the cleaner.
8. The use of an extension cord is not recommended.
9. Repairs should be done only by an qualified service personnel.