

User Guide

Mobile Premier with MobileMate™ Micro Reader microSDHC with MobileMate™ Micro Reader Memory Stick Micro™ (M2) with MobileMate™ Micro Reader

English

USING SANDISK MEMORY CARDS

Memory Card Usage: Insert your SanDisk memory card into the memory card slot on your computer, cell phone, digital camera or PDA. You can then use the device as you normally would, creating, copying, editing and moving files. Your memory card can also be erased and reused.

Precautions: Avoid using the memory card when the device battery is low. To avoid losing data, make sure you save all data before removing your memory card from the device. For further instructions, please consult the owner's manual for the device. The memory card is designed to fit easily into the system one way only. Do not bend the card or force it into the slot.

Product Registration: You can register your memory card online at SanDisk's web site at <http://www.sandisk.com/registration>. Failure to register your product will not diminish the rights you have under the product warranty.

Disposal Instructions: Do not dispose of this device with unsorted household waste. Improper disposal may be harmful to the environment and human health. Please refer to your local waste authority for information on return and collection systems in your area.

USING MOBILEMATE MICRO READER WITH SANDISK MEMORY CARDS

SYSTEM REQUIREMENTS

- Pentium PC or Macintosh computer with USB support
- Windows Vista, XP and 2000 SP4
- Mac OS X v10.1.2+

CONNECTING

Plug the MobileMate™ Micro Reader/Writer into the computer directly.

Windows Disk Icons: When you connect the MobileMate Micro Reader/Writer on a Windows operating system, a newly assigned removable disk icon drive letter representing the MobileMate Micro Reader/Writer will be shown in My Computer.

Macintosh Disk Icons: When you connect the MobileMate Micro Reader/Writer on a Macintosh operating system, a removable disk icon labeled "untitled" representing the MobileMate Reader/Writer will show on the desktop when a card is inserted.

USING

The MobileMate Micro Reader/Writer has one card slot. microSDHC™, microSD™ cards and Memory Stick Micro™ (M2) cards fit into the same slot.

Inserting Cards

Insert the microSDHC, microSD or the Memory Stick Micro (M2) card into the reader with the label facing up. The cards will only fit in one way. The microSDHC and microSD cards will sit fully into the connector. The M2 card will sit with the end slightly sticking out of the reader. NEVER FORCE THE CARD INTO THE CARD SLOT!

Removing Card

To remove the card in Windows or on a Macintosh:

- Ensure no data is being transferred and remove the card.

Disconnecting

TO AVOID LOSING DATA OR CORRUPTING THE CARD YOU SHOULD NEVER REMOVE THE DEVICE FROM THE USB PORT WITHOUT FIRST READING THE STEPS BELOW.

Windows:

1. In the system tray click the "safely remove hardware" icon.
2. Select the device you want to unplug.
3. When Windows notifies that it is safe to do so, unplug the MobileMate Reader/Writer from the computer.

Macintosh:

1. Drag the MobileMate Reader/Writer "untitled" icon into the Trash.
2. Unplug the device.