

PRIMETEST 100 PATBAG

An all-inclusive PAT testing kit – It's got
everything you need



The PrimeTest 100 PATBag offers an all-in-one solution to those with a manual PAT testing regime where measured test values are required.

Inside this rugged and lightweight carry bag you'll find everything you need for your PAT testing, from a handheld PrimeTest 100 tester to a PAT testing training DVD with online exam, pass and fail labels and a 110V adaptor.

Each PATBag comprises:

- An easy to use PrimeTest 100 PAT tester which gives measured test values
- PATGuard Elements manual data-entry software
- Rugged and lightweight purpose-made PATBag carry case with compartments for all of your PAT accessories and labels
- A full length PAT Training DVD with online exam and personalised certificate
- A Seaward Guide to Portable Appliance Testing
- A Seaward PAT Business Builder – A CD-rom and booklet resource pack for those running or starting up a PAT service business
- A handy PAT reference look-up card – with recommended test frequencies and limits
- PAT register and test record for keeping a record of results
- 500 pass labels
- 500 fail labels
- A Quick start video guide to your PrimeTest 100 PAT tester
- 110V adaptor

PATGuard Elements

The PrimeTest 100 PATBag can optionally include PATGuard Elements, a manual data-entry software program made for ease and speed of use. PATGuard Elements enables you to maintain a full test history for each appliance you test and has the option to print professional reports and invoices if required.

Key Features

- Includes fast and simple PrimeTest 100
- Everything required for a manual PAT testing regime
- Lightweight and functional carry bag
- PATGuard Elements PAT software option
- Array of useful reference materials
- Video quick start guide
- PAT testing training DVD with online exam and personalised certificate

Ideal Users

- Hotels & Leisure
- Schools
- Care Homes



Web: www.seaward.co.uk **Email:** sales@seaward.co.uk

Seaward

Bracken Hill,
South West Industrial Estate,
Peterlee, SR8 2SW

Tel: +44 (0) 191 5863511

Fax: +44 (0) 191 5860227

PRIMETEST 100 PATBAG

PrimeTest 100 Specification

Earth Continuity

Test Current	+/- 200mA DC
Display Range	0.00ohms – 19.99ohms
Pass Value	0.2ohms

Insulation resistance

Test Voltages	500V DC
Display Range	0.20Mohms – 19.99Mohms
Pass Value	2Mohms

IEC Lead Test

Tests Performed	Earth Continuity Insulation Resistance Live, Neutral Continuity and Polarity
-----------------	--

Equivalent Leakage Class I

Test Voltage	40V, 50Hz AC Nominal
Display Range	0.10mA – 19.99 mA
Pass Value	0.75mA

Equivalent Leakage Class II

Test Voltage	40V, 50Hz AC Nominal
Display Range	0.10mA – 19.99mA
Pass Value	0.25mA

Circuit Tests

Power Socket Test Input Voltage Range Indicators	230V +10% - 15% AC Phase to Earth Voltage Phase to Neutral Voltage Neutral Earth
--	---

Additional Information

Weight & Dimensions	800g/26cm (l) x 10cm (w) x 5.5cm (d)
Power Source	6 x AA Batteries

PATGuard Elements System Requirements

- IBM Compatible PC
- Processor Speed 500Mhz or higher
- Microsoft Windows XP/VISTA/Windows 7
- 32 & 64 bit operating systems
- 512Mb RAM
- 50Mb available hard disk space
- Colour monitor with 32 bit colour or greater video card
- CD ROM drive

Optional Accessories

- PATGuard Elements (387A910)
- Rhinotags – Ultra durable PAT testing pass labels (91B309)
- Rechargeable batteries + charger (339A950)
- PAT Checkbox (227A910)
- PowerCheck 1557 (369A910)

Also Available

- PrimeTest 50 PATBag (345A929)
- PrimeTest 50 PATBag with PATGuard Elements (345A930)
- PrimeTest 250 PATBag (345A927)
- PrimeTest 250 PATBag with PATGuard Elements (345A928)

PrimeTest 100 PATBag Part No: 345A925

PrimeTest 100 PATBag with PATGuard Elements
Part No: 345A926



Web: www.seaward.co.uk **Email:** sales@seaward.co.uk

Seaward

Bracken Hill,
South West Industrial Estate,
Peterlee, SR8 2SW

Tel: +44 (0) 191 5863511

Fax: +44 (0) 191 5860227