Service Information



| Ref No.: | Date 30.10.2014 | Status: | from: SHARP SERVICE |
|-------------------|-------------------------------------|---------|---------------------|
| Model | PN60TA3 / PN70TA3 | | |
| Betreff / Subject | Software Update instruction for HDI | | |

 
■ Procedure for updating PN-L703A/L603A Whiteboard

1. Please prepare USB memory to update Whiteboard

Copy a series of files for update onto a USB flash drive.


Please unzip the zip file and locate the folder

"_Updater{23715692-CEB9-4FD8-B445-02F6C4C36B8B}" and _UpdaterModules on the root of the USB flash drive.



2. Setting change for Diplay


1) Please push power-on button located on left-bottom-side of the display, and open the whiteboard.

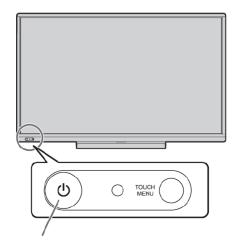


Power button

2) Please activate the setting tool screen from the launcher menu located on the bottom-side of the screen.

After activating the whiteboard, please touch the launch button located on the bottom-side screen.

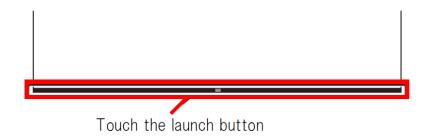


Please touch the icon "setting" of the launcher menu.

 


Touch the icon "Setting".


Please key-in the administration password on the password input screen. If the password is correct, it appears "OK" button.

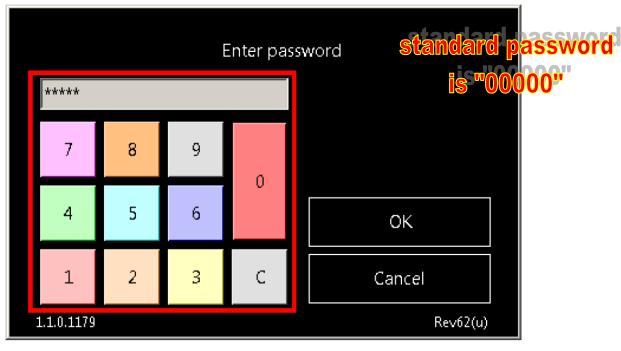


After click the button "OK", it appears the setting screen.

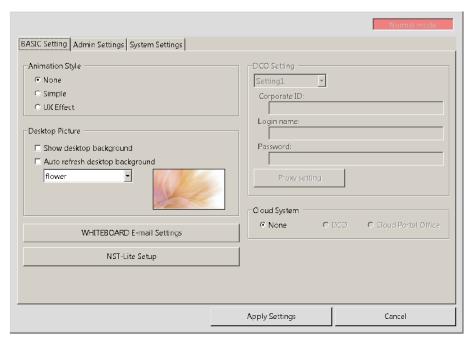


- 3) In the menu "USB memory setting", please activate the item "automatically announcement when recognizing USB memory".
 - Please touch the tab "Admin Settings" on the setting screen.

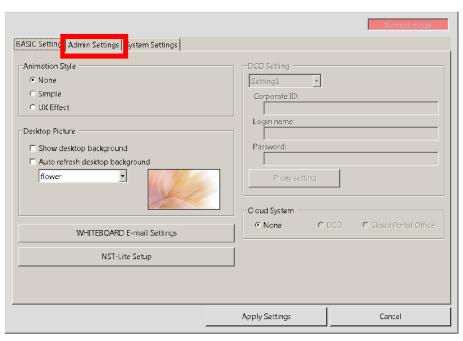

In the menu "USB flash drive Setup", if no check for the item "Notify when USB flash drive is found", please mark the check box and activate it. If already marked in the check box, no need for furthermore setting, please touch the cancel button and finish the setting screen.

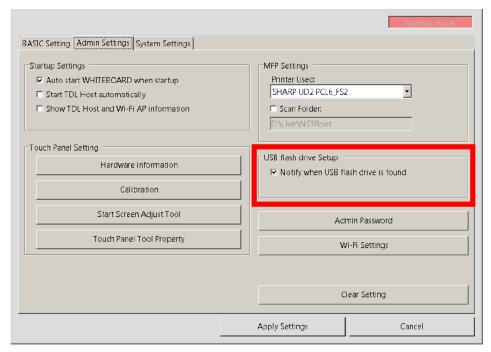


 Please touch the button "Apply Settings". The setting screen is finished, and return back to the whiteboard.

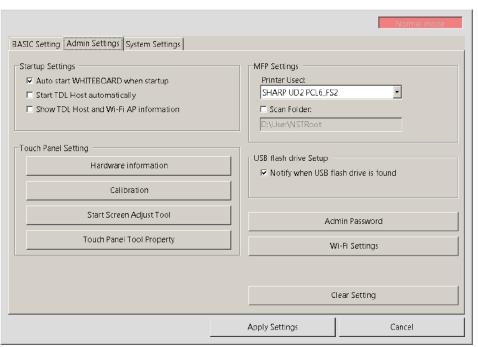


3. Update of the whiteboard


1) Please insert USB memory into the USB port located the right-top-side of the display.

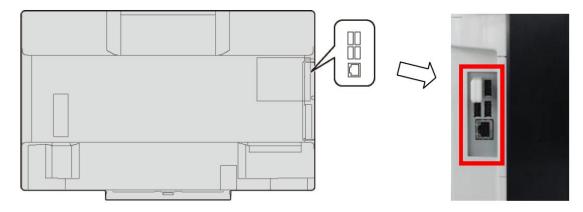


2) After recognizing the updater file in USB memory, the notice screen will appear on right-top-side of the screen.

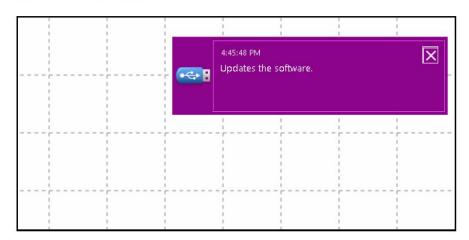


3) Please touch this notice screen on right-top-side.

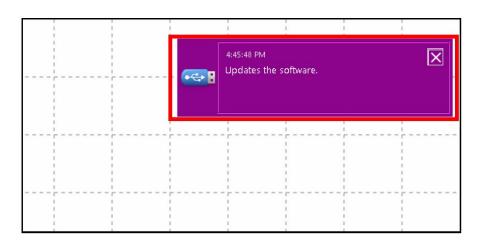


4) After touch this notice screen, the update details will be displayed.

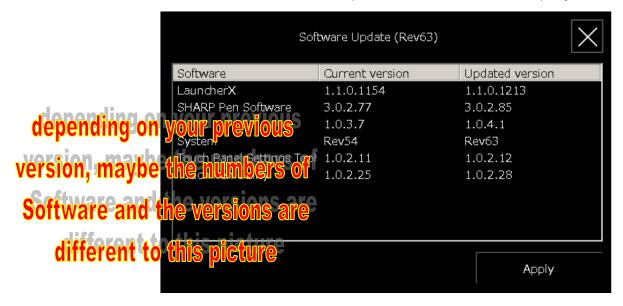


5) After touch the button "Apply" on this update details screen, it appears the update confirmation screen.

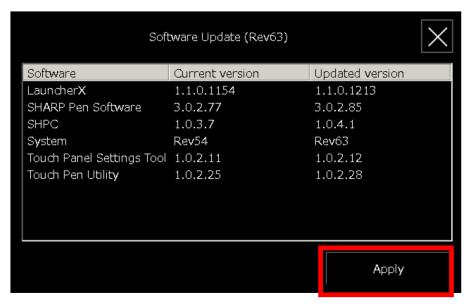

6) After displaying the update confirmation screen, please touch the button "OK".

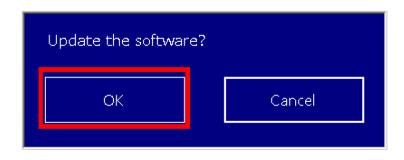


7) After displaying the following screen, please dismount USB memory connected with the display. And then, touch the button "OK".

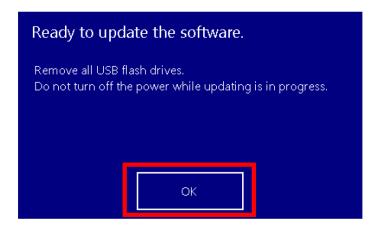

8) After touch the button "OK", the whiteboard will re-start, then the updating program starts.

 Note: Donot turn-off the power during updating the program. It might be damaged the whiteboard.




After displaying the screen below, please check the box of "Always trust software from "Sharp Corp," and click the button "Install".



The computer may re-start if necessary. Please donot operate until appearing the screen "update complete".

9) The following dialog will appear after completing the update. Please touch the button "OK". Then, the computer will re-start and complete the update.

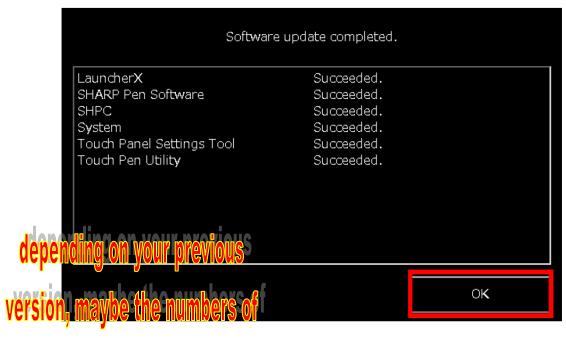

Software are different to this picture

About other screen

1) In case of the latest version of the whiteboard If already installing the latest version of the whiteboard, the following screen will appear. Please touch the button "X", then finish the update screen.



2) In case of including the un-authorized file in the update files

If the un-authorized file is included into the update files, the following screen will
appear. Please touch the button "X" and finish the update information screen.

If this screen appear, please download the updating files and start from Step 1.

